

2014 Corolla

Quick Reference Guide

2014 Corolla

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Corolla.

A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Corolla operations. Every Corolla owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	9
Fuel tank door release and cap	8
Hood release	8
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry¹	6
Smart Key system¹	7

FEATURES/OPERATIONS

Air Conditioning/Heating	16
Audio	14
Auto lock/unlock²	11
Automatic Transmission	10
Auxiliary storage	20
Clock	18
Continuously Variable Transmission	10
Cruise control	17
Cup holders-Adjust size	20
Drive monitor display/Multi-Information Display	19
iPod®/USB/AUX port	15
Light control-Instrument panel	20
Lights & turn signals	13
Manual Transmission	10
Moonroof	19
Parking brake	11
Power outlet	14
Seat adjustments-Front	11
Seat adjustments-Rear	12
Seat heaters	17
Seats-Head restraints	12
Steering wheel switches	15
Telephone controls (Bluetooth®)	18
Tilt and telescopic steering wheel	19
Windows-Power	12
Windshield wipers & washers	12

SAFETY AND EMERGENCY FEATURES


Doors-Child safety locks	21
Floor mat installation	25
Seat belts	21
Seat belts-Shoulder belt adjustment	21
Spare tire & tools	23
Star Safety System™	24-25
Tire Pressure Monitoring (warning) System	22
Trunk-Internal release	22

¹ Visit your Toyota dealer for information on customizing this feature.

² Programmable by customer. Refer to the *Owner's Manual* for instructions and more information.

OVERVIEW

Instrument panel

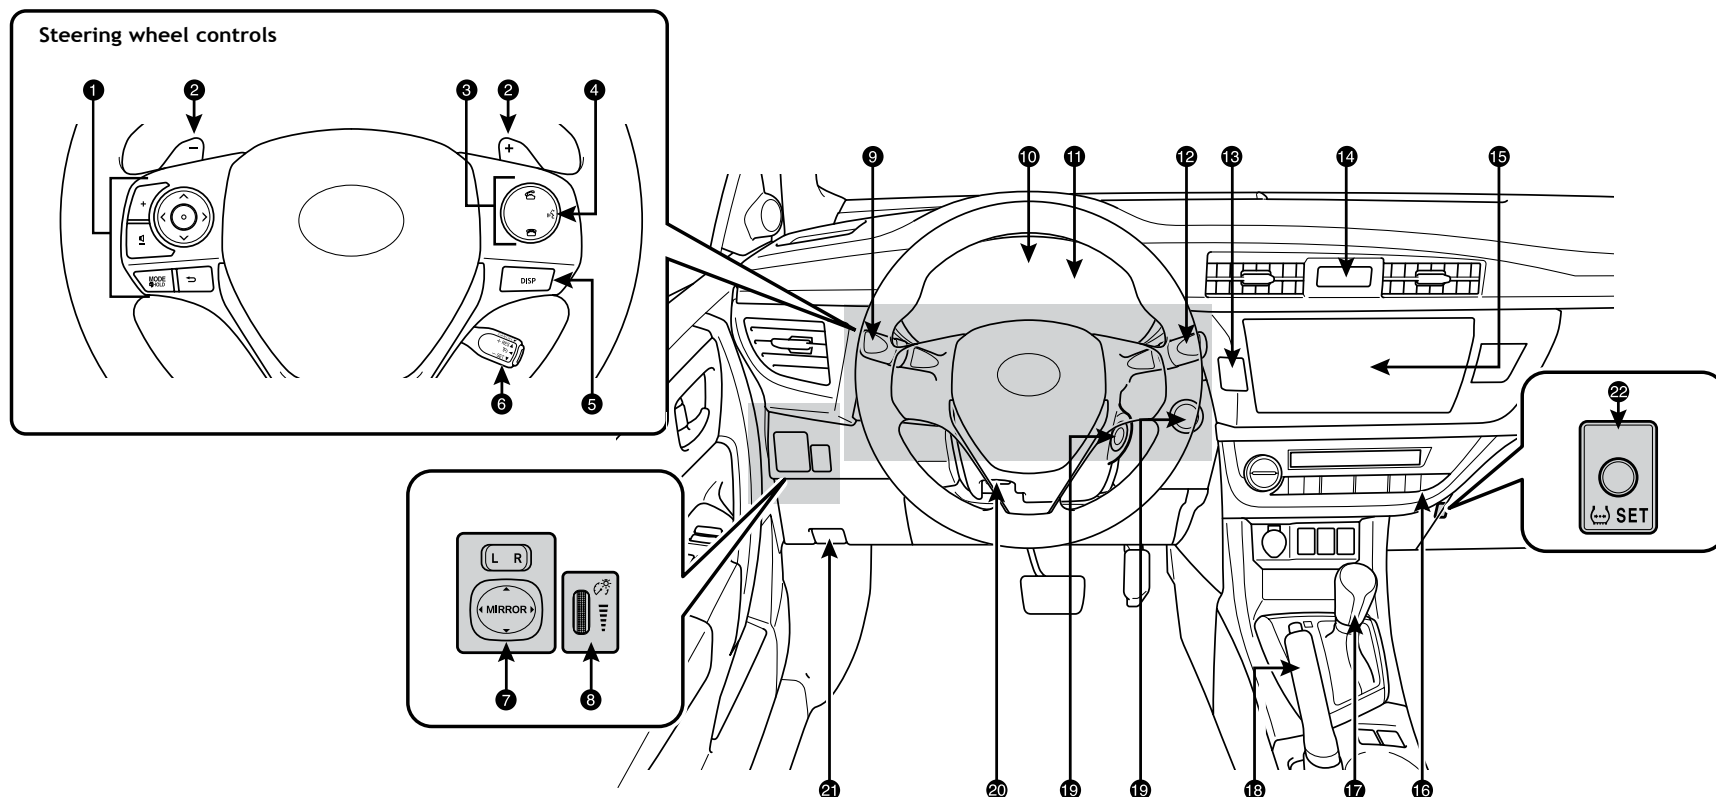

- ❶ Steering wheel audio controls
- ❷ Paddle shift switches*
- ❸ Telephone controls
- ❹ Voice command button*
- ❺ “DISP” switch
- ❻ Cruise control*
- ❼ Power outside rearview mirror controls
- ❽ Instrument panel light control dial
- ❾ Headlight, turn signal and front fog light* controls
- ❿ Meters
- ⓫ Drive monitor display* or Multi-Information Display*
- ⓬ Wiper and washer controls
- ⓭ Emergency flasher button
- ⓮ Clock


- ⓯ Audio system*, multimedia system* or navigation system*/Rearview monitor*
- ⓰ Air Conditioning controls
- ⓱ Shift lever
- ⓲ Parking brake
- ⓳ Engine switch
- ⓴ Tilt and telescopic steering control
- ⓵ Hood lock release lever
- ⓶ Tire Pressure Monitoring (warning) System reset

* If equipped


NOTE: For vehicles equipped with Entune® App Suite, please consult the “Navigation System With Entune® App Suite Quick Reference Guide” or www.toyota.com/entune.

Instrument cluster

Type A

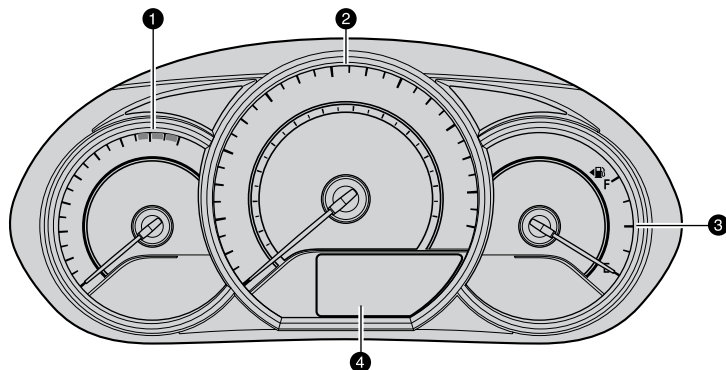

Type B

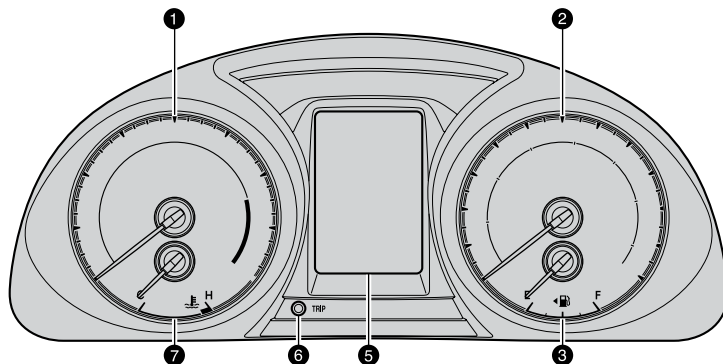

- ❶ Tachometer
- ❷ Speedometer
- ❸ Fuel gauge
- ❹ Drive monitor display
- ❺ Multi-Information Display
- ❻ Display change button
- ❼ Engine coolant temperature gauge

Indicator symbols

For details, refer to “Warning lights and indicators,” Section 2, *2014 Owner’s Manual*.



- BRAKE** Brake system warning¹
- Seat belt reminder
(alarm will sound if speed is over 12mph)
- Charging system warning¹
- “AIRBAG ON/OFF” indicator

- Electric power steering warning¹
- Malfunction/Check Engine indicator¹
- Low fuel level warning
- Open door warning
- SRS airbag warning¹
- Low Tire Pressure Warning¹
- Headlight high beam indicator
- Turn signal indicator
- Front fog light indicator
- Slip indicator¹
- SET** Cruise control/Cruise control SET indicator
- ABS** Anti-lock Brake System warning¹
- Vehicle Stability Control OFF indicator¹
- Low engine oil pressure warning¹
- MAINT REQD** Maintenance/Service required indicator¹
- TRAC OFF** Traction control OFF indicator¹
- High engine coolant temperature warning¹
- Master warning¹
- Headlight indicator
- SPORT** Sport mode indicator
- ECO** ECO driving indicator light¹
- ECO MODE** “ECO MODE” indicator
- Smart key system indicator
- Security indicator

¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.



Keyless entry (if equipped)

Locking operation

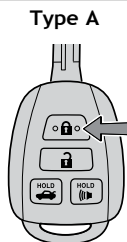

Push

Unlocking operation

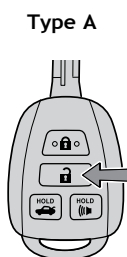


Push ONCE: Driver door
TWICE: All doors



NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

Trunk lid

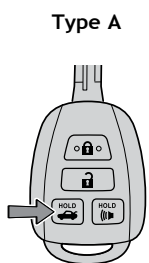

Push and hold



Panic button




Push and hold




Smart Key system (if equipped)

Start function

Vehicles without a Multi-Information Display

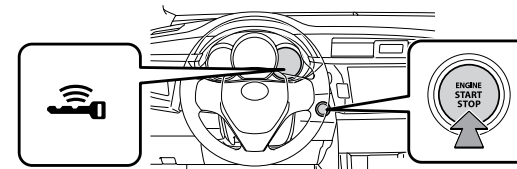

Vehicles with a Multi-Information Display

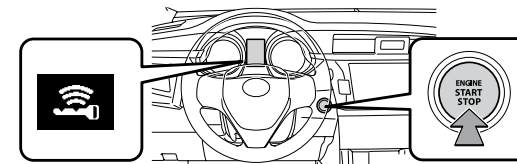

NOTE: Carry the electronic key to enable start function. Gear shift lever must be in Park and brake pedal depressed.

Power (without starting engine)

Without depressing the brake pedal, pressing the engine switch will change the operation mode in succession from:

ACC

Accessories such as the radio will operate.

ON

Power ON; the engine not running.

OFF

All systems OFF.

Locking operation

Front door lock

Touch




Carry remote to lock

Unlocking operation

Front door unlock*


Grasp



Carry remote to unlock

Trunk open

Push

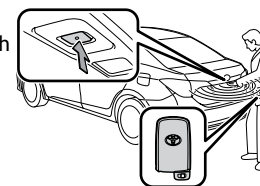


Carry remote to open


* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping front passenger door handle will unlock all doors.

NOTE: Doors may also be locked/unlocked using remote.


Fuel tank door release and cap

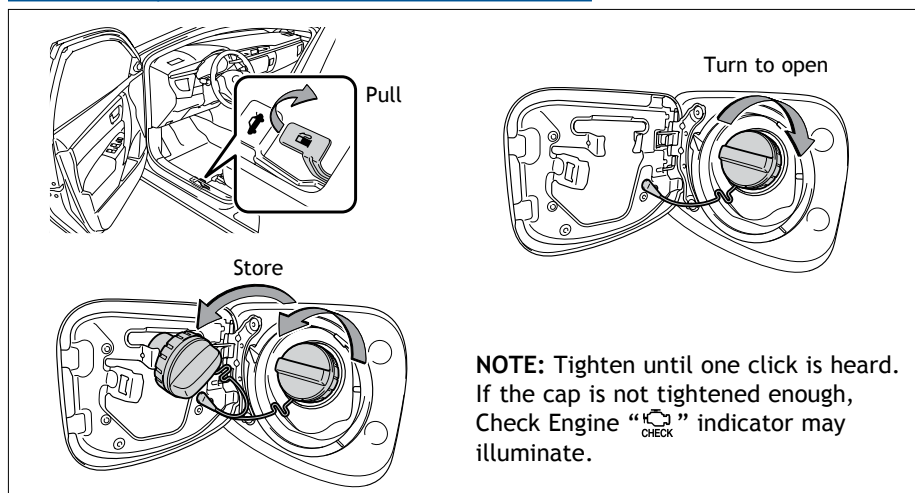

Hood release

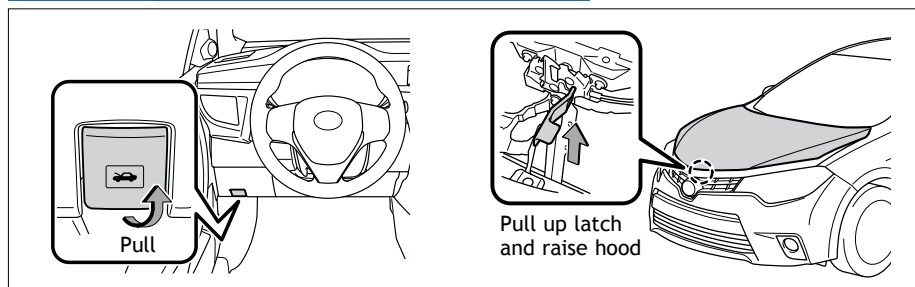

Engine maintenance

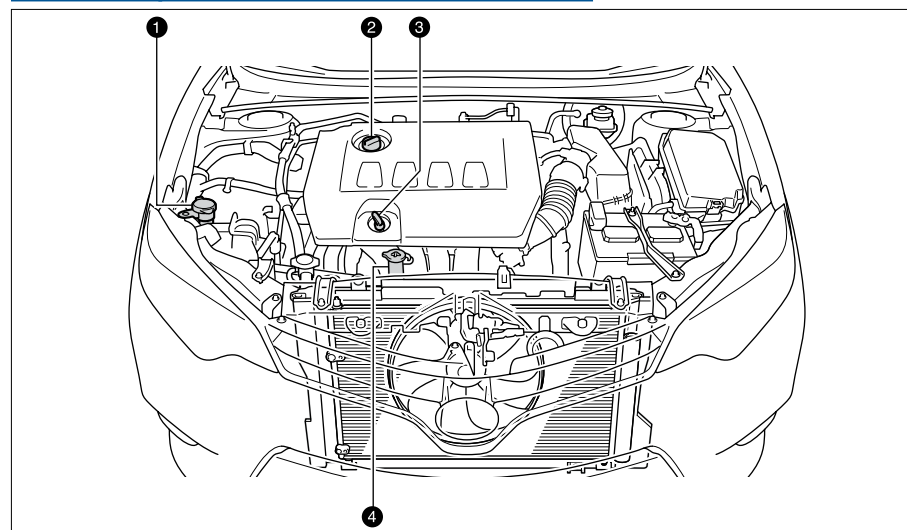


- ❶ Windshield washer fluid tank
- ❷ Engine oil filler cap
- ❸ Engine oil level dipstick
- ❹ Engine coolant reservoir

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty Maintenance Guide.”

FEATURES/OPERATIONS


Automatic Transmission (if equipped)

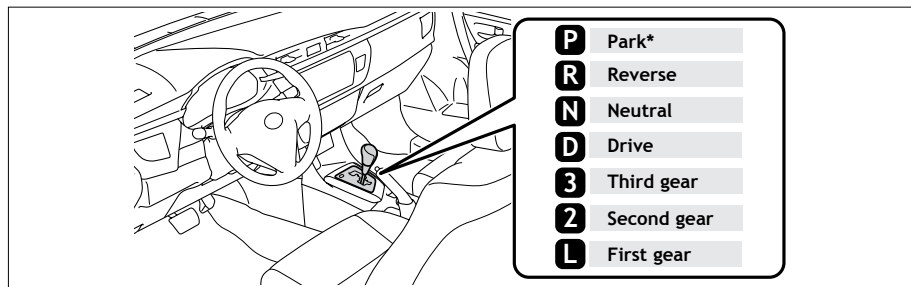


* The engine switch must be "ON" and the brake pedal depressed to shift from Park.

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

Manual Transmission (if equipped)

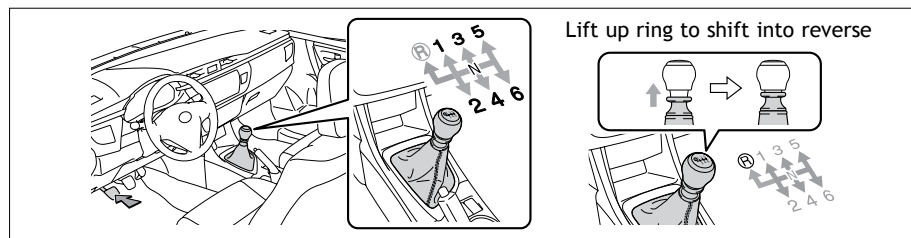

Continuously Variable Transmission (if equipped)

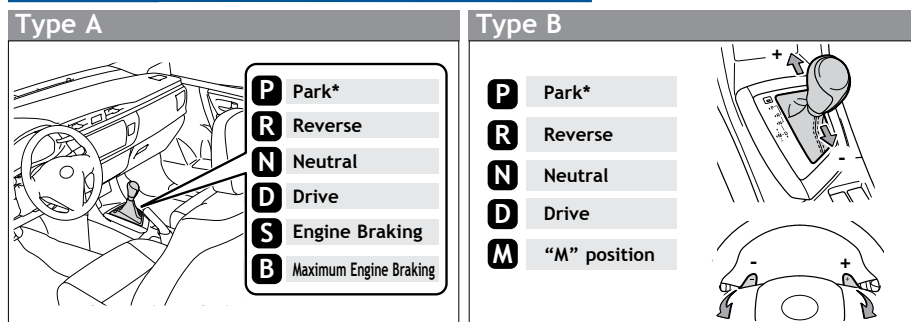

* The engine switch must be "ON" and the brake pedal depressed to shift from Park.

Changing gear steps in the M position

Shift the shift lever to "M" position from "D" position.

+: Upshifting

-: Downshifting

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

Auto lock/unlock

Automatic door locks can be programmed to operate in two different modes, or turned OFF.

- Doors lock when shifting from Park.
- Doors lock when the vehicle speed is approximately 12 mph or higher.
- Doors unlock when shifting into Park.

Vehicles without Smart Key system


-Doors unlock when the engine switch is set from "ON" to "ACC" or "LOCK" and driver's door is opened.

Vehicles with Smart Key system

-Doors unlock when the engine switch is set to OFF and driver's door is opened.


Refer to the *Owner's Manual* for more details.

Seat adjustments-Front

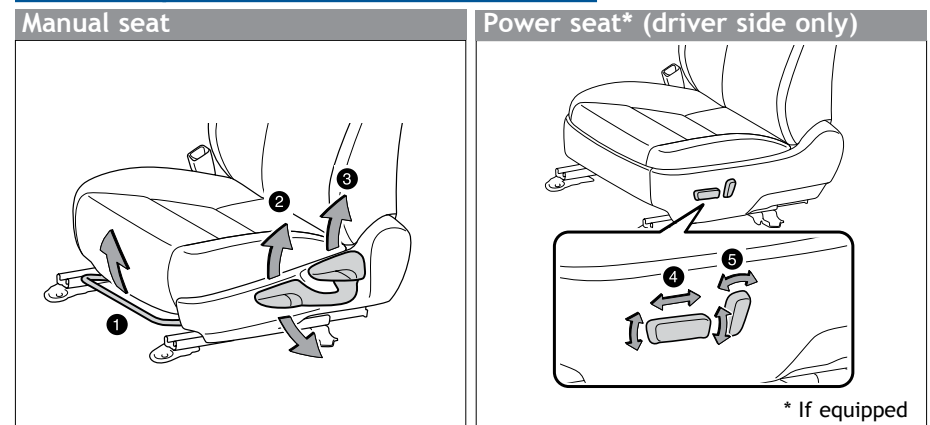


- 1 Seat position (forward/backward)
- 2 Height crank (driver side only)
- 3 Seatback angle
- 4 Seat position, cushion angle and height
- 5 Seatback angle


Parking brake

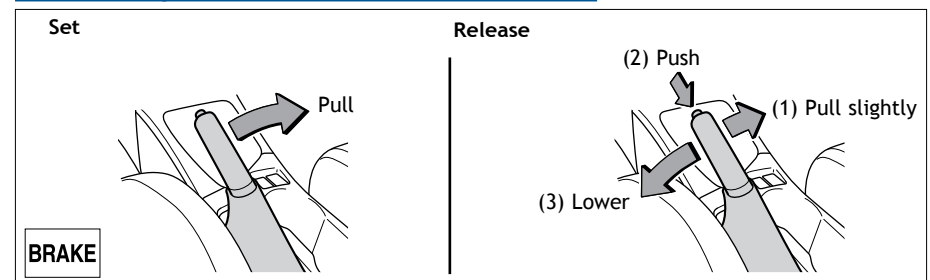


Seat adjustments-Rear

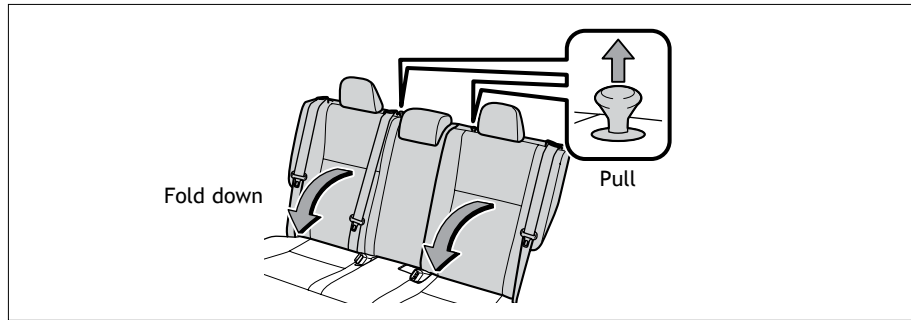

Seats-Head restraints

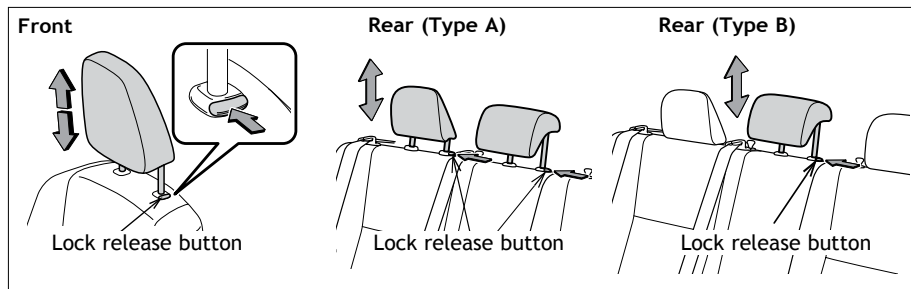


Windows-Power

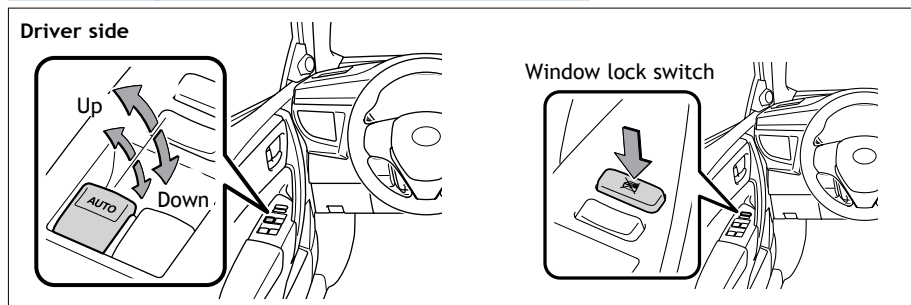


Automatic operation (driver's window only) Push the switch completely down or pull it completely up and release to fully open or close. To stop the window partway, operate the switch in the opposite direction.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Windshield wipers & washers

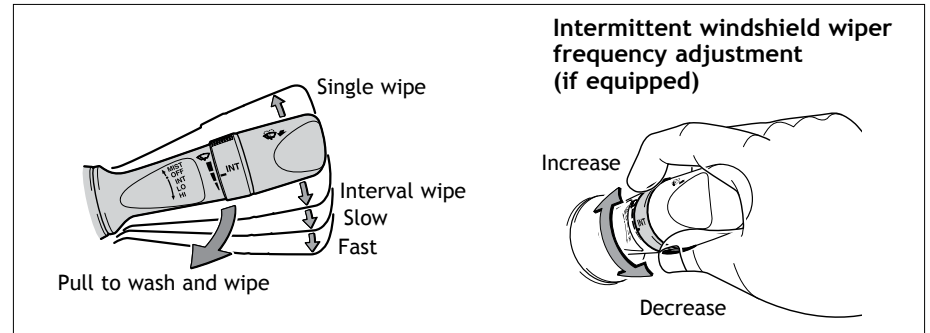

Lights & turn signals

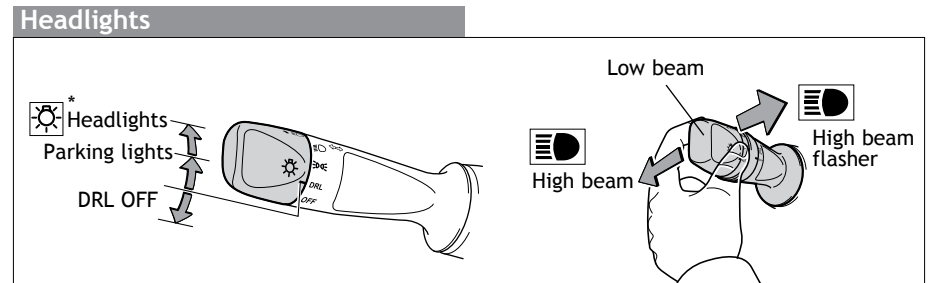


* If equipped


-Daytime Running Light system (DRL) Automatically turns on the headlights at a reduced intensity.

-Automatic light cut off system Automatically turns lights off after 30-second delay, or lock switch on remote may be pushed after locking.


Front fog lights (if equipped)

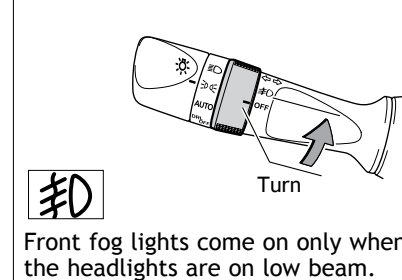

Turn signals

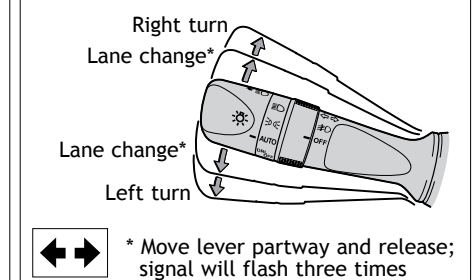


Power outlet

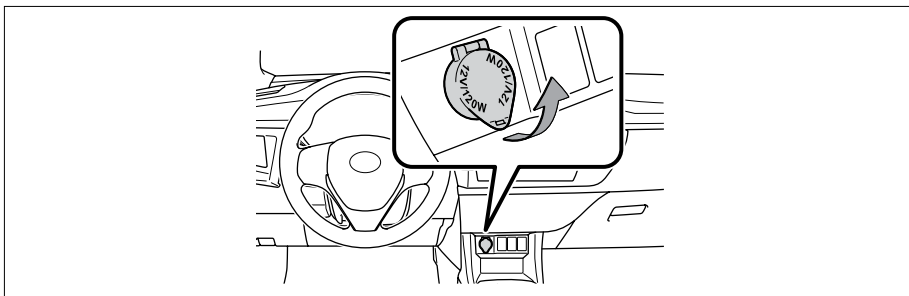


The engine switch must be in the “ACC” or “ON” position for use.

Audio (if equipped)

Type 1

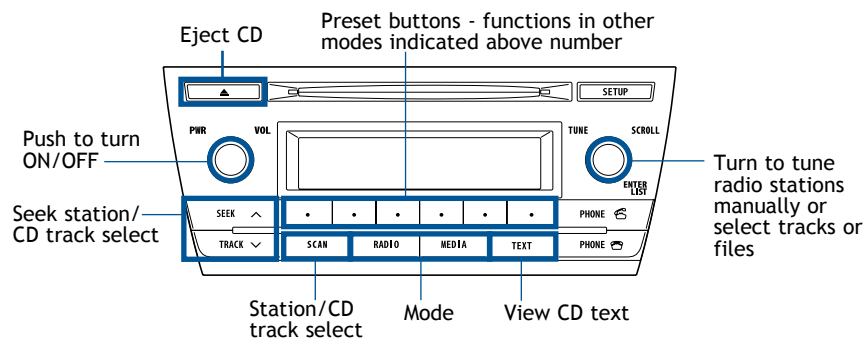

Type 2

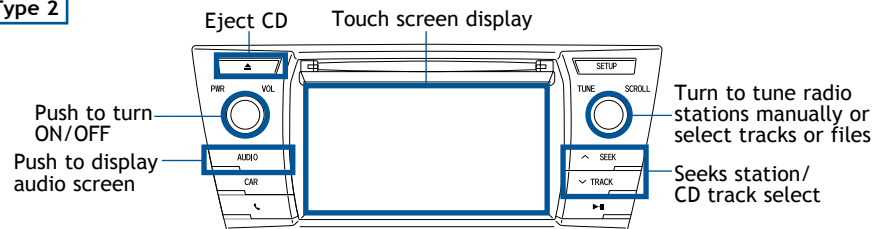

CD player

To scan tracks on a disc Push “SCAN.” Push again to hold selection.


To select a file (MP3/WMA only) Turn “TUNE-SCROLL.”

Radio

To preset stations Tune in the desired station and hold down a preset button (one of) until you hear a beep. Push desired preset button to select.

To scan stations Push and hold “SCAN” to scan preset stations. Push again to hold selection.

iPod®/USB/AUX port

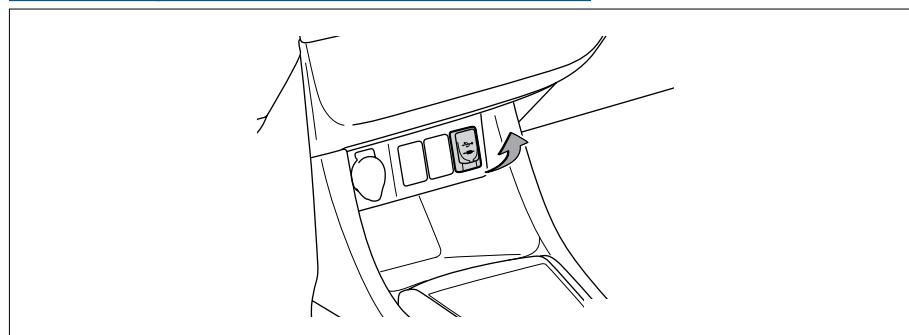

iPod®/USB port


By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle’s speaker system.

AUX port


By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle’s speaker system while in AUX mode.

Steering wheel switches

Type A

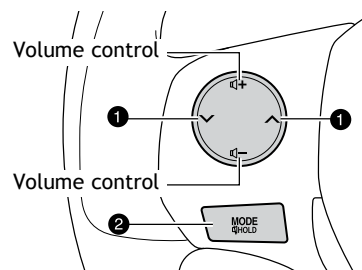

Type B

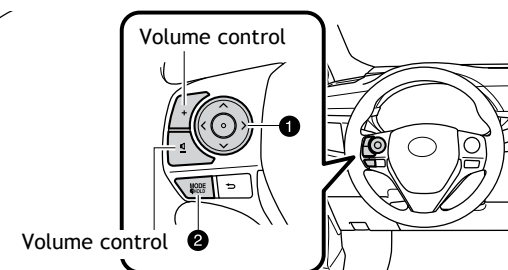

1 “V A”


Use to search within the selected audio medium (radio, CD, iPod®, etc.).

2 “MODE/HOLD”

Push to select an audio mode. Press and hold this switch to mute or pause the current operation.

Air Conditioning/Heating


Automatic Air Conditioning

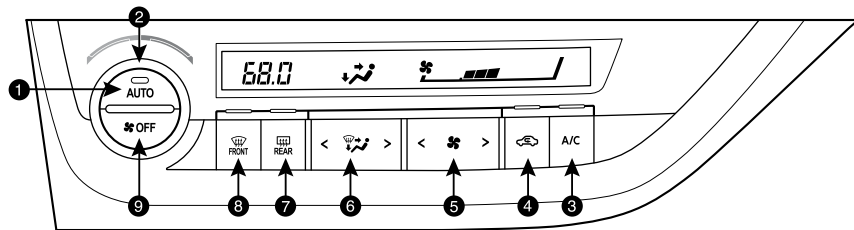

- 1 Automatic climate control ON
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.
- 2 Temperature selector
- 3 Air Conditioning ON/OFF
- 4 Recirculate cabin air (fresh air when OFF)
- 5 Fan speed
- 6 Airflow vent
In “” or “” mode, use fresh air (“” indicator OFF) to reduce window fogging.
- 7 Outside rearview mirror*/Rear defogger
- 8 Windshield airflow/defogger
- 9 Climate control OFF

* If equipped


Manual Air Conditioning

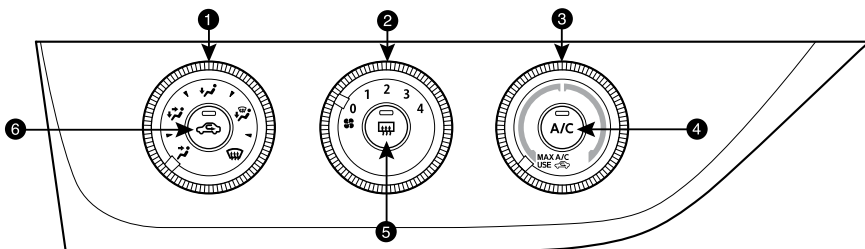

- 1 Airflow vent
In “” or “” mode, use fresh air (“” indicator OFF) to reduce window fogging.
- 2 Fan speed
- 3 Temperature selector
For quick cooling, turn to MAX A/C position and select recirculated air mode (“” indicator ON).
- 4 Air Conditioning ON/OFF
- 5 Outside rearview mirror defoggers*/Rear window defogger
- 6 Recirculate cabin air (fresh air when OFF)


* If equipped

Seat heaters (if equipped)

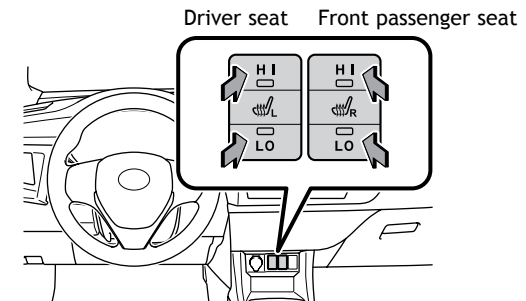


Cruise control (if equipped)

Turning system ON/OFF

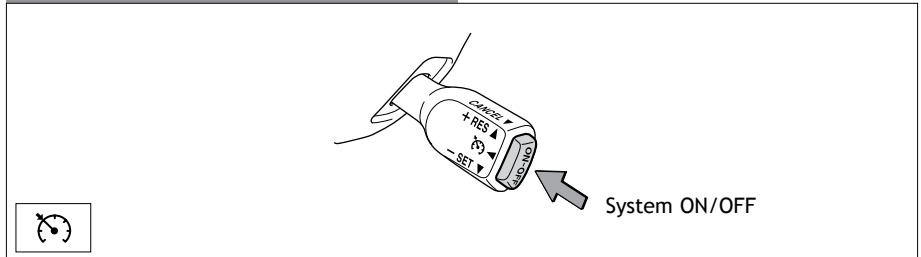


Functions

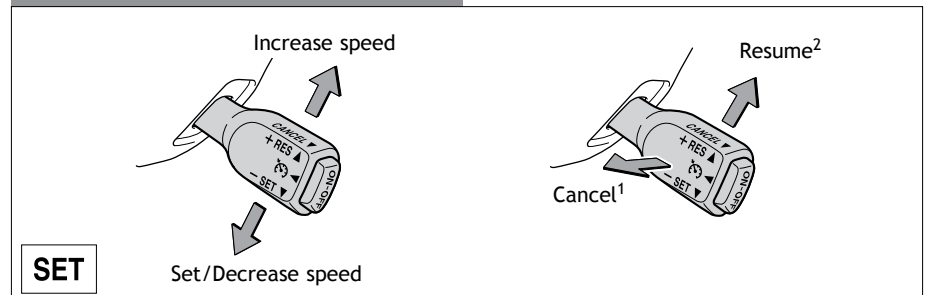

¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed exceeds 25 mph.


Telephone controls (Bluetooth®)

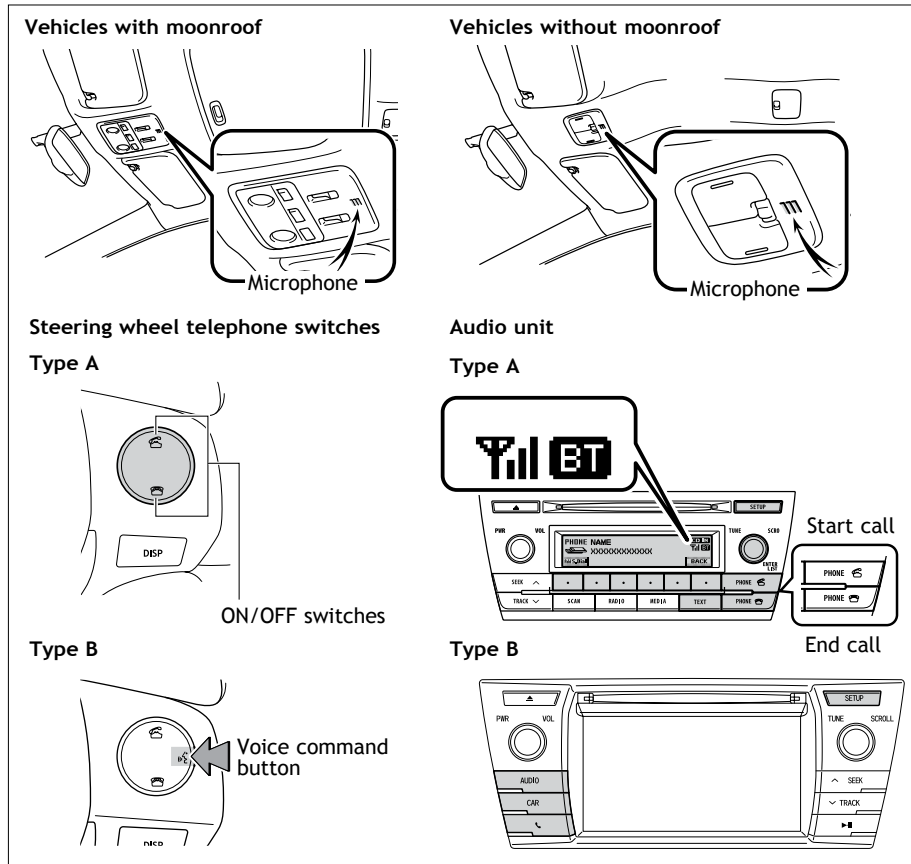

Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the compatible telephone and the system.

Refer to Section 5 in the *Owner's Manual*, for more information about phone connections and compatibility.


Clock

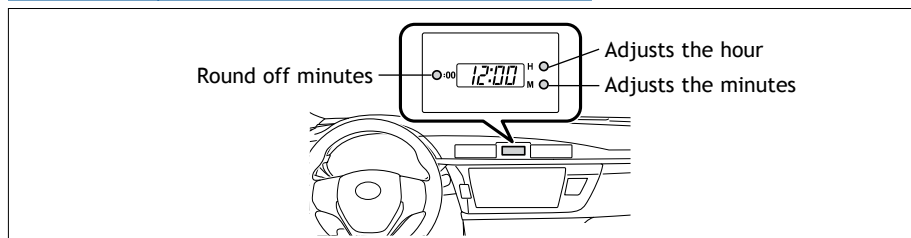

Moonroof (if equipped)


Sliding operation

Recommended open position to minimize wind noise.

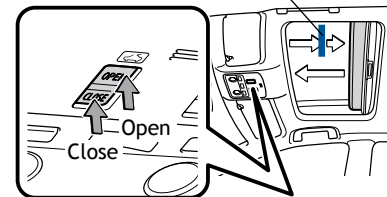


Push once to open partway; again to open completely.

Tilting operation

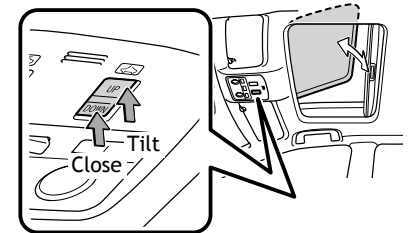


Tilt and telescopic steering wheel

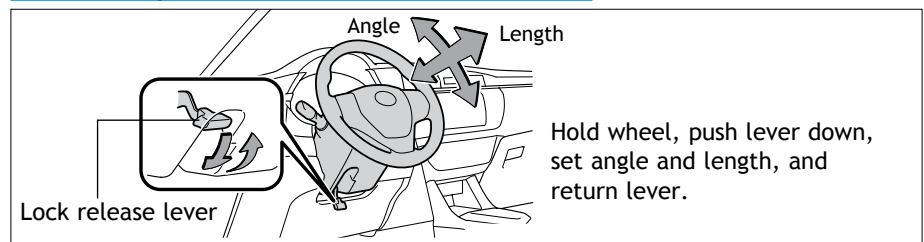


NOTE: Do not attempt to adjust while the vehicle is in motion.

Drive monitor display/ Multi-Information Display

Drive monitor display

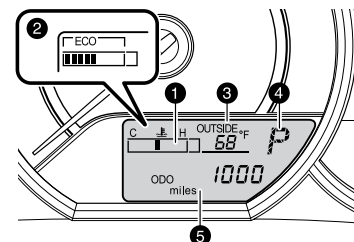


Multi-Information Display

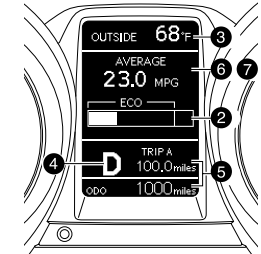


- 1 Engine coolant temperature gauge
- 2 ECO Driving Indicator Zone Display*
- 3 Outside temperature display
- 4 Shift position and gear position indicator*
- 5 Trip information
- 6 Driving monitor
- 7 Warning messages

* Except vehicles with Manual Transmission.


Light control-Instrument panel

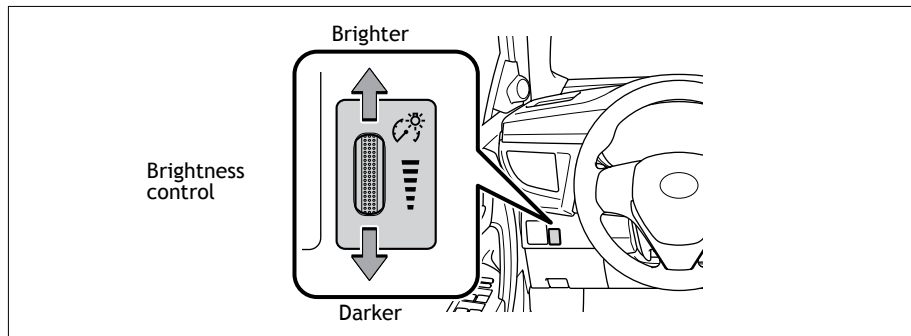

Cup holders-Adjust size

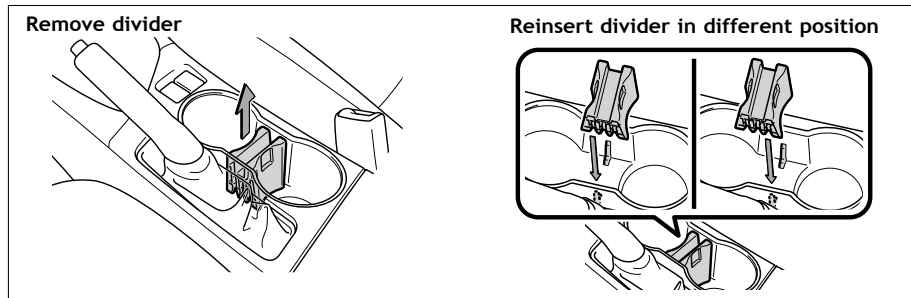


Auxiliary storage

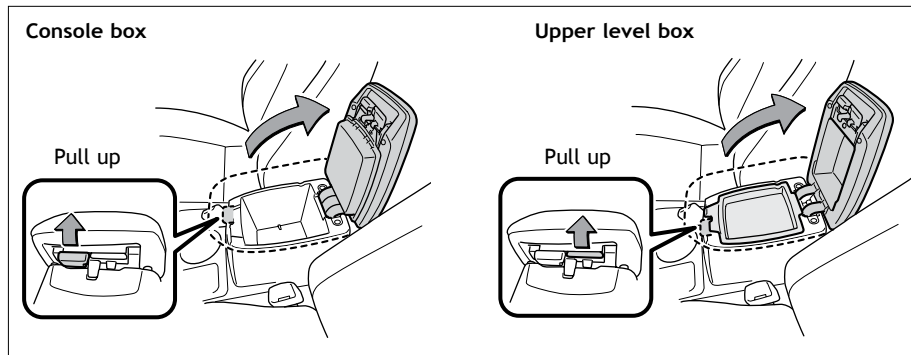

SAFETY AND EMERGENCY FEATURES


Seat belts

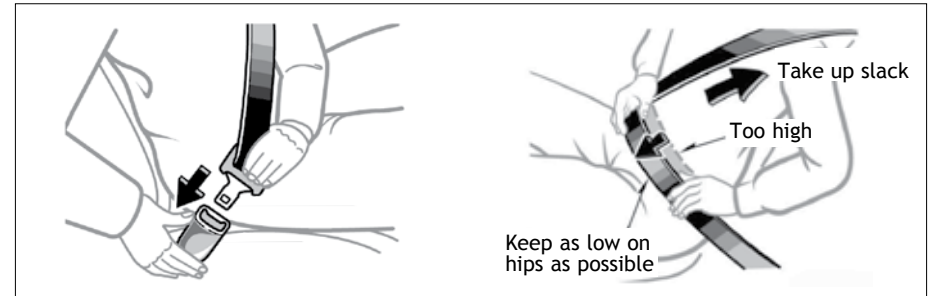


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Seat belts-Shoulder belt adjustment

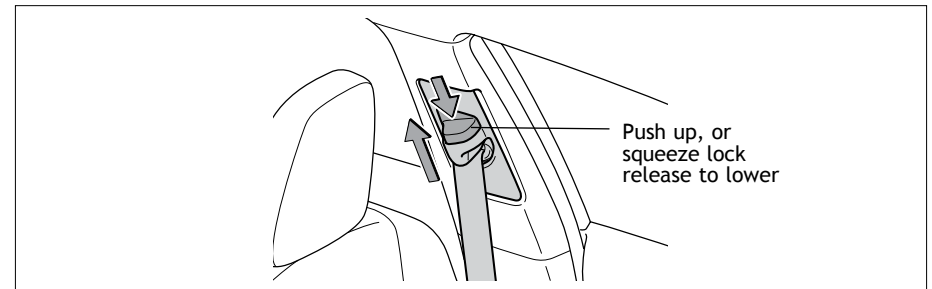


Doors-Child safety locks

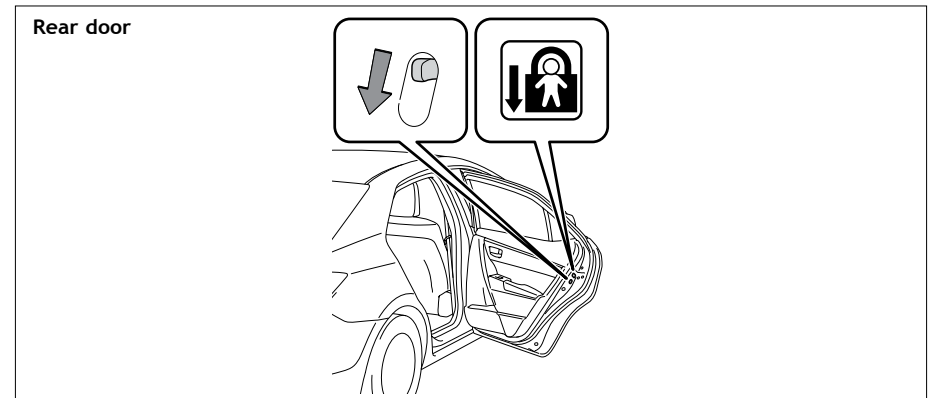

Pushing down the lever will allow the door to be opened only from the outside.

Tire Pressure Monitoring (warning) System

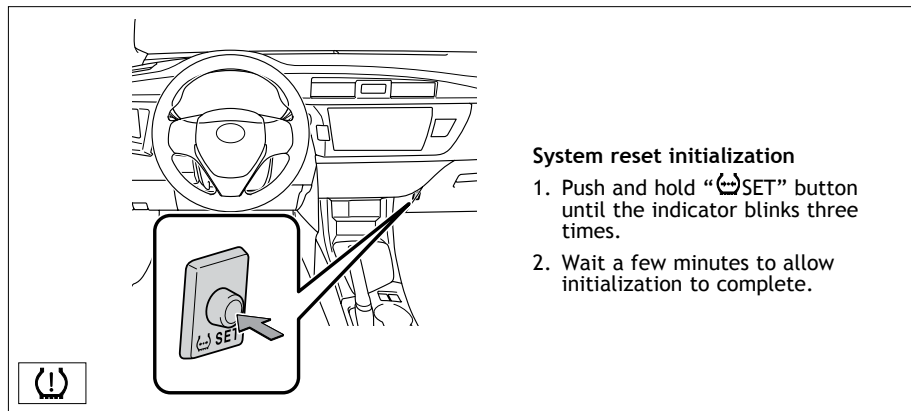


After adjusting tire pressures, or after tires have been rotated or replaced, turn the engine switch to “ON” and press and hold the “SET” button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

Refer to the load label on the door jamb or the *Owner's Manual* for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.


NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

Trunk-Internal release

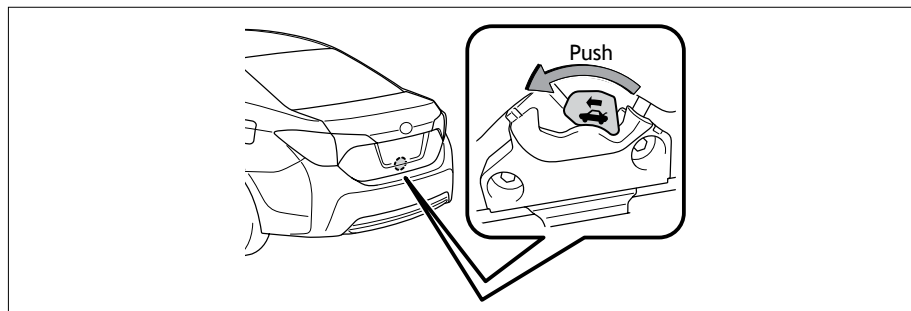


Spare tire & tools

Tool location

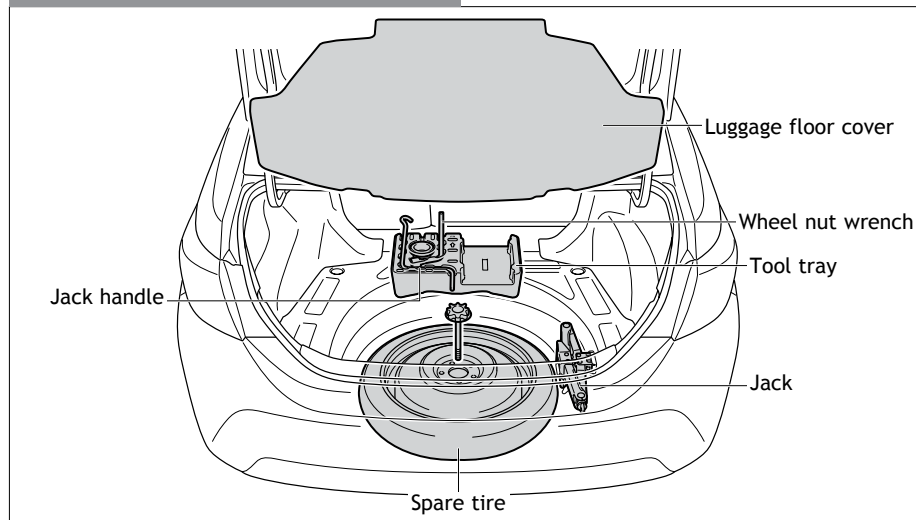

Removing the spare tire

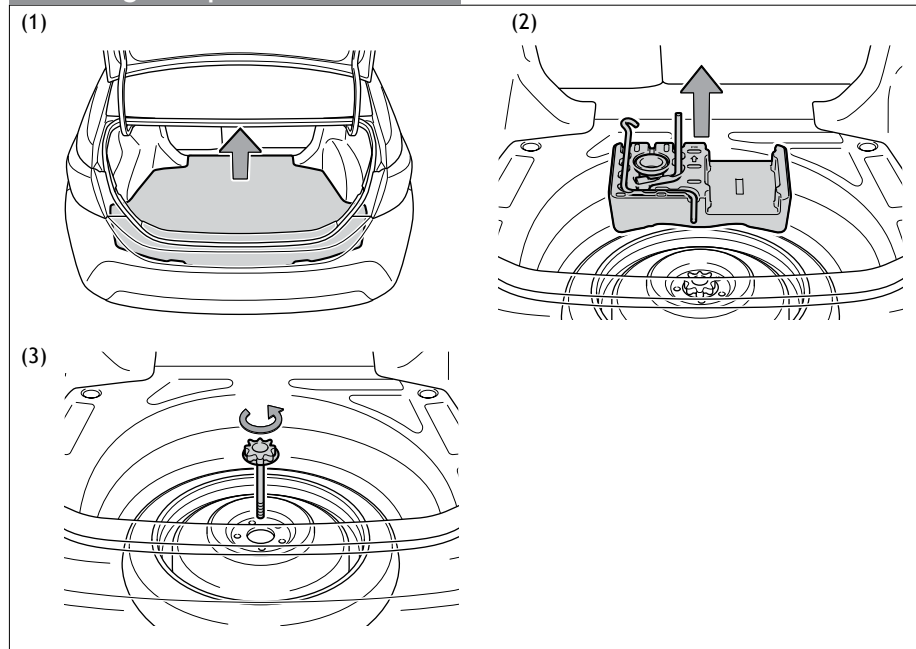

- (1) Remove the luggage floor cover.
- (2) Remove the tool tray.
- (3) Loosen the center fastener that secures the spare tire.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

Vehicle Stability Control (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by “pulsing” brake pressure to each wheel. This limits brake lockup and helps provide directional control for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by “pulsing” each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

Brake Assist (BA)

Brake Assist is designed to detect sudden or “panic” braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

Smart Stop Technology (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

