

SORENTO

CAR MULTIMEDIA SYSTEM QUICK REFERENCE GUIDE



The Power to Surprise

LOOKING FOR MORE INFORMATION?

This Quick Reference Guide does not replace your System Owner's Manual.

If you require additional information or are unsure of a specific issue, refer to the System User's Manual for additional information.

iPod®

iPod® is a registered trademark of Apple Inc.

***Bluetooth®* Wireless Technology**

The *Bluetooth®* Wireless Technology word mark and logos are registered trademarks owned by *Bluetooth®* Wireless Technology SIG, Inc. and any use of such marks by Kia is under license.

A *Bluetooth®* Wireless Technology enabled cell phone is required to use *Bluetooth®* Wireless Technology.

HD Radio™ Technology

HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents.

HD Radio™ and the HD, HD Radio, and “Arc” logos are proprietary trademarks of iBiquity Digital Corp.



All Map Database cannot be copied without permission.

Important Notice: This is protected by U.S. copyright laws. All rights not expressly granted are reserved.

You may not otherwise reproduce, modify and distribute the content without HYUNDAI MnSoft, Inc's prior written consent.

- SiriusXM service requires a subscription, sold separately, after 3-month trial included with vehicle purchase. If you decide to continue your SiriusXM service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call Sirius XM at 1-866-635-2349 to cancel. See our Customer Agreement for complete terms at www.siriusxm.com. Programming subject to change. Sirius satellite service is available only to those at least 18 and older in the 48 contiguous USA, D.C., and PR (with coverage limitations). Traffic information not available in all markets. See siriusxm.com/traffic for details. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc.

WARNING

- Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle."
-
- Infinity is a trademark of Harman International Industries, Inc.
 - UVO eServices is compatible with many popular smartphone devices. Please see MyUVO.com for phone compatibility.
 - App Store and Google Play are service marks of Apple Inc. and Google Inc. respectively. No charge for the UVO eServices App. App runs on your smartphone cellular data service. Normal data rates will apply.
 - HD Radio and the HD Radio logo are proprietary trademarks of iBiquity Digital Corporation.
 - 24-hour Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via Bluetooth within the cellular service coverage area is required.
 - Vehicle Diagnostics do not take the place of regularly scheduled maintenance. Feature checks powertrain, chassis, and airbag systems only. For factory-recommended maintenance schedule, see the Maintenance Feature of UVO eServices or the Owner's Manual.
 - 911 Connect activates after an airbag deployment. Feature requires a connected mobile phone via Bluetooth. Dependant on cellular service coverage.
 - The rear-camera display is not a substitute for proper and safe backing-up procedures. The rear-camera display may not display every object behind the vehicle. Always drive safely and use caution when backing up.

Table of Contents

Controls and Functions.....	2
Sound Settings.....	5
Display Settings.....	7
FM/AM Mode.....	8
HD Radio™ Mode.....	11
SIRIUS Mode.....	13
CD Mode.....	17
MP3 CD Mode.....	18
USB Mode.....	21
iPod Mode.....	25
AUX Mode.....	27
Bluetooth® Audio.....	28
My Music Mode.....	29
Navigation.....	32
<i>Bluetooth®</i> Wireless Technology.....	48
Voice Recognition.....	58

Controls and Functions

Control Panel

1 ● PWR ● VOL

- When power is off, press to turn power on.
- When power is on, press and hold (over 0.8 seconds) to turn power off.
- When power is on, press shortly (under 0.8 seconds) to turn Audio off.
- Turn left/right to control volume.

2 FM/AM

- Selects FM/AM mode.
- Each time the key is pressed, the mode is changed in order of FM1 → FM2 → AM → FM1.

3 PHONE

Takes user to phone screen.

4 SAT

Converts to SIRIUS mode

Each time the key is pressed, the mode is changed in order of SIRIUS1 → SIRIUS2 → SIRIUS3 → SIRIUS1.

5 MEDIA

- Displays CD, MP3, USB, iPod, AUX, Bluetooth® Audio Streaming, My Music modes.
- If the media is not connected or a disc is not inserted, corresponding modes will be disabled.

6 ▼ SEEK, TRACK ▲

Pressed shortly. (under 0.8 seconds)

- In FM/AM mode, plays previous/next frequency.
- In SIRIUS mode, plays the previous/next channel.
- In CD/MP3/USB/iPod/My Music modes, changes the track, file or chapter.

Pressed and held. (over 0.8 seconds)

- In FM/AM mode, continuously changes the frequency until the key is released and plays the current frequency.
- In SIRIUS mode, continuously changes the channel until the key is released and plays the current channel.
- In CD/MP3/USB/iPod/My Music modes, rewinds or fast-forwards the track or file.



Controls and Functions



Press to insert or eject disc.



Displays the map for the current position.



Displays Route menu screen.



Displays the Destination setup menu.



Displays the Info/Setup mode.



- In FM/AM mode, changes the frequency.
- In SIRIUS mode, changes the channel.
- In CD, MP3, USB, iPod, My Music modes, changes the track, file or chapter.



Resetting the system.



SD Card insert slot.

CAUTION

- Always give your full attention to driving. Do not operate your system in such a way that you may be distracted from driving your vehicle.
-

Controls and Functions

Steering wheel

1 VOL+ VOL-

Controls the volume.

2 MUTE

Mutes the sound.

3 ^ v

Pressed shortly. (under 0.8 seconds)

- In FM/AM mode, searches broadcast frequencies saved to Presets.
- In SIRIUS modes, searches broadcast channels saved to Presets.
- In CD/MP3/USB/iPod/My Music modes, changes the track, file or chapter.

Pressed and held. (over 0.8 seconds)

- In FM/AM mode, automatically searches broadcast frequencies and channels.
- In SIRIUS modes, automatically searches broadcast channels.
- In CD/MP3/USB/iPod/My Music modes: rewinds or fast forwards the track of file.

4 MODE

- Each time this key is pressed, the mode is changed in order of FM1 → FM2 → AM → SIRIUS1 → SIRIUS2 → SIRIUS3 → USB or iPod → AUX → Bluetooth® Audio → My Music.
- If the media is not connected or a disc is not inserted, corresponding modes will be disabled.
- Press and hold the key (over 0.8 seconds) to turn the Audio system on/off.
- When power is off, press the key to turn power back on.

5

When pressed shortly. (under 0.8 seconds)



- Activates voice recognition.

When pressed and held. (over 0.8 seconds)

- Ends voice recognition.

6

Pressed shortly. (under 1.2 seconds)

- When pressed in the phone screen, displays call history screen.
- When pressed in the dial screen, makes a call.
- When pressed in the incoming call screen, answers the call.
- When pressed during call waiting, switches to waiting call (Call Waiting)


Pressed and held. (over 1.2 seconds)

- When pressed in the Bluetooth® Handsfree phone mode, redials the last call.
- When pressed during a Bluetooth® Handsfree call, switches call back to mobile phone (Private).
- When pressed while calling on the mobile phone, switches call back to Bluetooth® Handsfree (Operates only when Bluetooth® Handsfree is connected).

7

- When pressed during a call, ends the phone call.
- When pressed in the incoming call screen, rejects the call.

Sound Settings

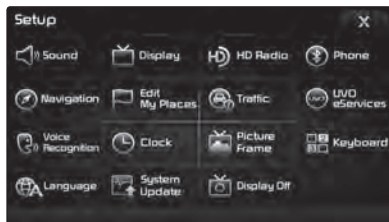

Press the **Sound** button to display the sound setting screen.

Information

- UVO eServices is an optional feature available in select vehicles on select trims.




Setting Balance/Fader

Press the **Sound** button ► Press **Fader/Balance** ► Set and press **Done**.

Use the , , , buttons to move the cursor on the control screen to the desired position.


Press **CENTER** to restore sound to the center position.

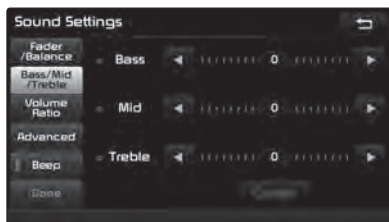

Setting Bass/Mid/Treble

Press the **Sound** button ► Press **Bass/Mid/Treble** ► Set and press **Done**.

Use the , buttons to adjust the Bass/Mid/Treble settings.

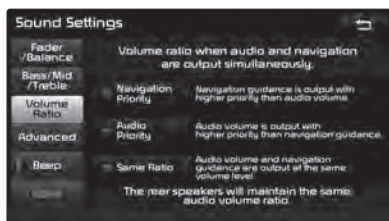

Setting Volume Ratio

Press the **Sound** button ► Press **Volume Ratio** ► Set and press **Done**.


These options are used to set the volume ratio by selecting from Navigation Priority/ Audio Priority/Same Ratio.

Sound Settings

Advanced

Press the  **Sound** button ► Press **Advanced** ► Press **Variable-EQ** ► Set and press **Done** .

This is used to set the Surround and Speed Dependent Volume Control features.

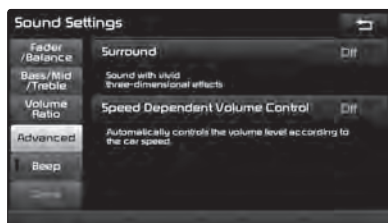

Surround

Speed Dependent Volume Control allows you to automatically control the volume according to the speed of the vehicle. This feature will gradually increase the volume as vehicle speed increases, to offset outside noise.

Speed Dependent Volume Control

Press the  **Sound** button ► Press **Advanced** ► Turn the feature **On** ► Set and press **Done** .

The volume level is controlled automatically according to the vehicle speed.

Setting Beep

Press the  **Sound** button ► Press **Beep** ► Set and press **Done** .

Each press of this button turns the BEEP tone on/off.




Display Settings



Press the **i** **⚙️** key ► Press **⚙️** **Setup** ► Press **📺** **Display** .

i Information


- UVO eServices are an optional feature equipped in select vehicles

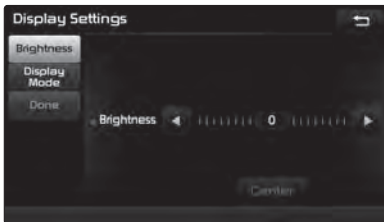

Adjusting Brightness

Press the **📺** **Display** button ► Press **Brightness** ► Set and press **Done** .

Use the **◀** or **▶** buttons to adjust the display brightness.

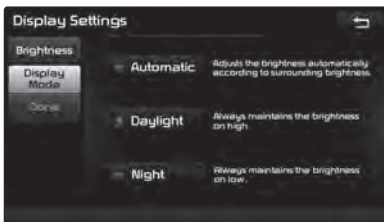

Setting Display Mode

Press the **📺** **Display** button ► Press **Display Mode** ► Set and press **Done** .

Press the button for the desired display mode from **• Automatic** , **• Daylight** , and **• Light** modes.

FM/AM Mode

Starting Mode

Press the **FM/AM** key to change the mode in order of FM1 → FM2 → AM.

When the power is OFF, pressing the **FM/AM** key will turn the power on and play a radio broadcast



Using Seek

Press the **SEEK**, **TRACK** key to automatically search for frequencies.

- Shortly press the key (under 0.8 seconds) :
Plays previous/next frequency
- Press and hold the key (over 0.8 seconds) :
Changes the frequency while pressed and receives the next frequency upon release.

Using TUNE


Turn the **TUNE** knob left/right to select the frequency.

- FM1/FM2 : Increases/decreases by 200kHz
- AM : Increases/decreases by 10kHz



Selecting Presets

From the 6 presets, select the frequency you want to listen to.

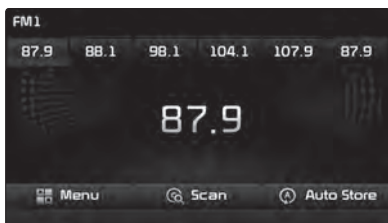

Saving Radio Frequency

Saving Manually

After selecting frequency ► Press and hold (over 0.8 seconds) the preset button.

- A 'beep' will sound and the frequency will be saved to the selected preset button.

Saving Automatically



Press the **Auto Store** to automatically save receivable frequencies to Preset buttons.

A total of 18 frequencies with six preset frequencies each for FM1/FM2/AM modes can be saved.

Scanning Radio Frequency

Press the **Scan** button to scan all radio frequencies.

Starting from the current frequency, frequencies with superior reception are scanned for 5 seconds and the previous frequency is restored.

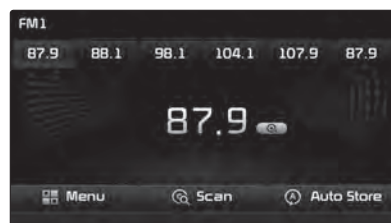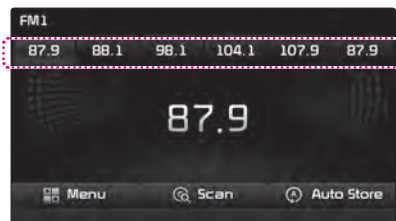

FM/AM Mode

Using the Menu Buttons

Press the **Menu** button to use the Preset Scan menu.

Preset Scan

Press the **Menu** button ► Press **Preset Scan**.

- Frequencies saved to the 6 preset buttons are each played for 5 seconds and the previous frequency is restored.



Text On/Text Off

Press the **Menu** button ► Press **Text On**.

The Text feature is turned on/off.

- If the **Text On** button is displayed (Text off state), information will not be displayed even if there is information being transmitted from the broadcast station.
- If the **Text Off** button is displayed (Text on state), then broadcast information will be displayed. Information may not be displayed if there is no information being transmitted from the broadcast station.

HD Radio™ Mode

Starting Mode



Press the **FM/AM** key to turn on Radio mode.

If an HD Radio™ broadcast is received, the radio mode will switch from analog broadcast to HD Radio™ broadcast.

Operating HD Radio™ Mode



Selecting a Frequency

As HD Radio™ reception is included within FM/AM mode, the methods of moving between channels, saving presets, searching, or methods of searching frequencies are identical. However, while the HD Radio™ related icon display will become active when within regions where an HD Radio™ signal can be received.

Using TUNE

Turn the **TUNE** knob left/right to select the frequency.

Selecting through Preset

From the 6 presets, select the HD Radio™ broadcast you want to listen to.

HD Radio Mode

Song-Tagging

The song tagging feature provides a way to capture broadcasted song information from the radio for future purchase in iTunes®.

Upon connection of an Apple audio playback device, the "tagged songs" will be transferred to your iTunes® account in your Tagged songs folder.

HD Radio™ Digital Broadcast On/Off

Press the  key ►  Setup ►  HD Radio ► Press  On /  Off .

HD Radio™ Broadcasts can be turned On and Off for HD Radio™ FM and AM mode.



Starting Mode



Press the **SAT** key to change the mode in order of SIRIUS1 → SIRIUS2 → SIRIUS3.

When the power is OFF, pressing the **SAT** key will turn the power on and play an SIRIUS Radio broadcast.

Using SEEK

Press the **SEEK**, **TRACK** key on the control panel for under 0.8 seconds.

The previous or next channel will be selected.



Using TUNE

Turn the **TUNE** knob to display the previous or next channel information.

After a brief moment, the selected channel will be played.



Selecting Presets


From the 6 presets, select the channel you want to listen to.

SIRIUS Mode

Selecting through Channel/Category List

Press the **List** button ► Select the desired category and channel.

Once selected, the previous screen will be restored and the selected channel will begin playing.

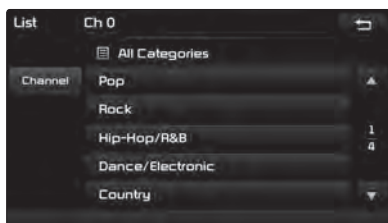

Saving SIRIUS Channels

Saving Manually

After selecting channel ► Press and hold (over 0.8 seconds) the preset button.

- A confirmation 'beep' will be heard and the channel will be saved to the selected preset button.



Using the Menu Buttons



Press the **Menu** button to use the Search, Preset Scan, and Scan menus.



Search

Press the **Menu** button ► Press the **Search** button ► Enter numbers and press **Done** .

Enter the number of the channel you want to receive.

Preset Scan

Press the **Menu** button ► Press the **Preset Scan** button .

Channels saved to the 6 preset buttons are each played for 10 seconds and then the previous channel is restored.

Scan

Press the **Scan** button to scan all channels.

Starting from the current channel, channels with superior reception are scanned for 10 seconds and the previous channel is restored once scanning is complete.


CD Mode

Starting Mode

Press the **MEDIA** key ► Press **CD**.

Playing a CD

- Press the **▶** button to play the track.
- Press the **||** button to pause the track.

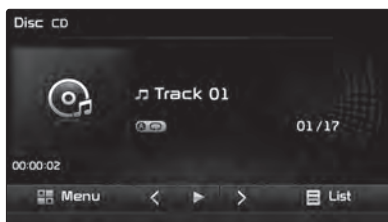

Fast-forwarding or Rewinding CD Tracks

While playing ► Press and hold the **▼SEEK**, **TRACK▲** key. (over 0.8 seconds)

This will rewind or fast-forward the track.


While the **▼SEEK**, **TRACK▲** key is being pressed, the track will rewind or fast-forward at 20x speed.

Once released, the track will begin playing at normal speed.


Searching CD Tracks

Turn the **● TUNE** knob ► Search tracks ► Once the desired track name is displayed, press the **● TUNE** knob.

When searching tracks, the track number is displayed in orange. Pressing the **● TUNE** knob will play the corresponding track.

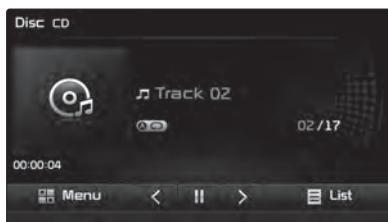

Using the Menu Buttons

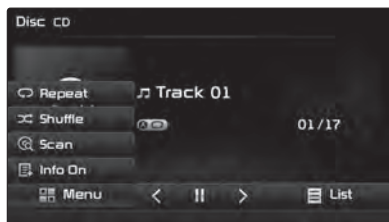

Press the **Menu** button to set the repeat, shuffle, scan and Info On/Info Off menus.

Repeat

Press the **Menu** button ► Press **Repeat** .

The current track is repeated.

Shuffle

Press the **Menu** button ► Press **Shuffle** .

Tracks within the disc are played in random order.

Scan

Press the **Menu** button ► Press **Scan** .

The beginning (approx. 10 seconds) of all tracks within the CD are scanned.

Info On/Info Off

Press the **Menu** button ► Press **Info On** .

The amount of information displayed on the screen can be selected. When the title, artist, and album info are displayed, the button will automatically change to **Info Off** .

Press **Info Off** to restore the previous information display setting.

MP3 CD Mode

Starting Mode

Press the **MEDIA** key ► Press **MP3**.



Playing MP3

- Press the **▶** button to play the file.
- Press the **⏸** button to pause the file.

Selecting MP3 files

Selecting from the Mode Screen

- Press the **▼ SEEK**, **TRACK ▲** key to select the previous or next file.
- Pressing and holding the **▼ SEEK**, **TRACK ▲** key will rewind or fast-forward the current file.

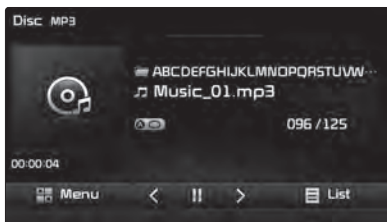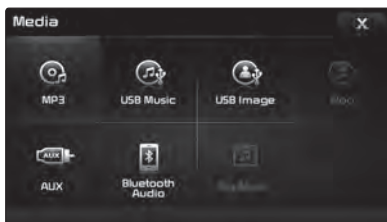

Using Menus within List Screen

Press the **List** button ► Select the file from the list.

Fast-forwarding or Rewinding MP3 Files

While playing ► Press and hold the **▼ SEEK**, **TRACK ▲** key (over 0.8 seconds).


This will rewind or fast-forward the file.

While the **▼ SEEK**, **TRACK ▲** key is being pressed, the file will rewind or fast-forward at 20x speed.


Once released, the file will begin playing at normal speed.

Searching MP3 Files

Turn the **TUNE** knob ► Search files ► Once the desired file name is displayed, press the **TUNE** knob.

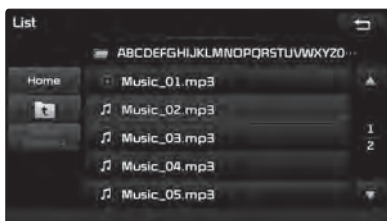

Using the Menu Buttons

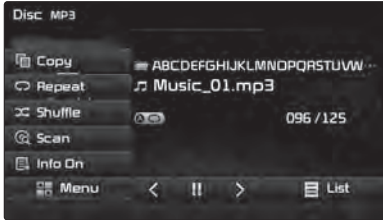

Press the **Menu** button to set the copy, repeat, shuffle, scan, and Info On/Off options.

Copy

Press the **Menu** button ► Press **Copy** .

The currently playing file is copied and saved in My Music.

Repeat

Press the **Menu** button ► Press **Repeat** .

Shuffle

Press the **Menu** button ► Press **Shuffle** .

Scan

Press the **Menu** button ► Press **Scan** .

Info On/Info Off

Press the **Menu** button ► Press **Info On** .

The amount of information displayed on the screen can be changed.

When the title, artist, and album info are displayed, the button will automatically change to **Info Off** . Press **Info Off** to restore the previous information display setting.

MP3 CD Mode


Using Menus within the List Screen

Moving between Lists

Press the **List** button ► Press the **▲**, **▼** buttons.

If five (5) or more files or folders exist in the same folder, the list will be displayed across two or more pages.

Press the **▲**, **▼** cursor buttons to quickly find the desired page.

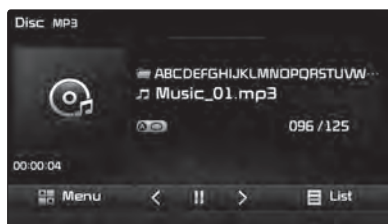


Moving between Folders

Press the **Folder** button ► Select folder from the folder list.


Pressing the **Folder** button will move to the folder one level above the current folder.

Pressing the **Home** button folder will move to the root folder.

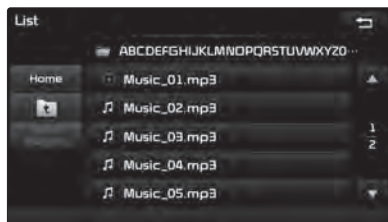


Returning to Current Location

While searching files within other folders, press the **Now Playing** button to return to the currently playing file screen.

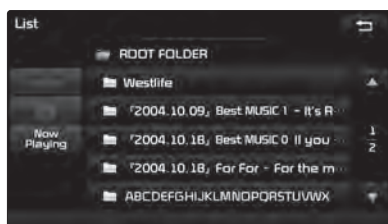

Starting USB Music Mode

Press the **MEDIA** key ► Press **USB Music** . If the USB is not connected, then the **USB Music** button will be disabled.

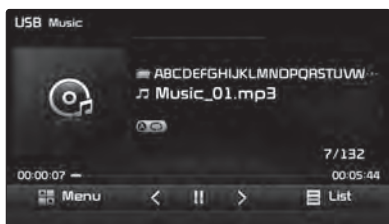

Playing USB Music

- Press the **▶** button to play the USB Music.
- Press the **||** button to pause USB Music.

Searching USB Music Files

While Playing ► Press the **<** , **>** buttons or the **▼SEEK** , **TRACK▲** key to play the previous/next file.

- Pressing and holding the **▼SEEK** , **TRACK▲** key (over 0.8 seconds) will rewind or fast-forward the current file.
- While the **▼SEEK** , **TRACK▲** key is being pressed, the track will rewind or fast-forward at high speeds. Once the key is released, the USB Music will begin playing at normal speed.

USB Mode

Using the Menu Buttons

Press the **Menu** button to set the Copy, Repeat, Shuffle, Scan, Info On (Info Off) menus.

Copy

Press the **Menu** button ► Press **Copy**.

The currently playing file is copied and saved in My Music.

Repeat

Press the **Menu** button ► Press **Repeat**.

Shuffle

Press the **Menu** button ► Press **Shuffle**.

Scan


Press the **Menu** button ► Press **Scan**.


Info On/Info Off

Press the **Menu** button ► Press **Info On**.

When the title, artist, and album info are displayed, the button is changed to **Info Off**.

Press **Info Off** to restore the previous information display setting.

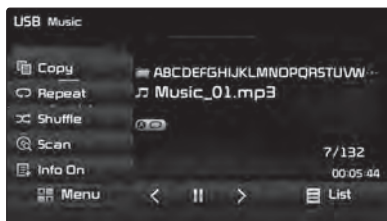

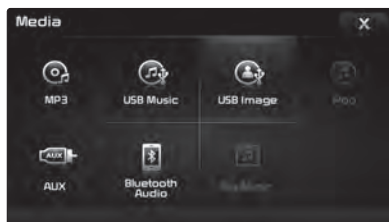

Starting USB Image Mode

Press the **MEDIA** key ► Press **USB Image**.



Searching USB Image Files

While playing ► Press the **<**, **>** buttons to view the previous/next image.



Using the Menu Buttons


Press the **Menu** button to set the Slideshow, Rotate Image, Adjust Image Size, Save Image and Info menus.

USB Mode

Slideshow Interval

Press the **Menu** button ► Press **Slideshow** .

Image Slideshow intervals can be set at **5sec** , **10sec** , **20sec** , or **30sec** intervals.

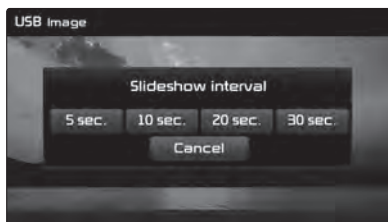

Rotating Image

Press the **Menu** button ► Press **Rotate Image** ► Press **Done** .

Each time the **Rotate** button is pressed, the image is rotated from 0° → 90° → 180° → 270° degrees.



Adjusting Image Size

Press the **Menu** button ► Press **Adjust Image Size** ► Press **Done** .

Press the **-** , **+** buttons to enlarge or reduce the image size. The scale can be changed to x1/4, x1/2, x1, x2, x4.



Saving Image

Press the **Menu** button ► Press **Save Image** .

Viewing Info

Press the **Menu** button ► Press **Info** .

This menu is used to check image information, such as the image resolution and file type.

Starting Mode



Press the **MEDIA** key ► Press **iPod**.

If an iPod is not connected, then the **iPod** button will be disabled.



Playing iPod

- Press the **▶** button to play the iPod.
- Press the **⏸** button to pause the iPod.

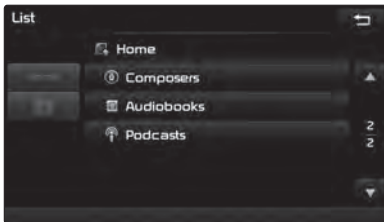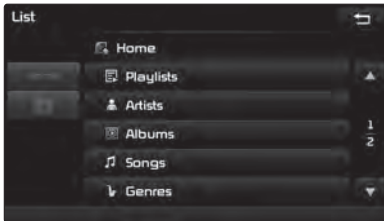

Searching iPod

Press the **List** button to display the initial iPod list screen.

When searching an iPod, it is possible to search by Playlists, Artists, Albums, Songs, Genres, Composers, Audiobooks, and Podcasts.

iPod Mode

Selecting iPod File

While playing ▶ Press the **<**, **>** buttons or the **SEEK**, **TRACK** key to play the previous/next file. Pressing and holding the **SEEK**, **TRACK** key (over 0.8 seconds) will rewind or fast-forward the current song.

Searching iPod Files

Turn the **TUNE** knob to search files. Once the desired file name is displayed, press the **TUNE** knob. When searching files, the file number is displayed in orange. Pressing the **TUNE** knob will play the corresponding file.

Using the Menu Buttons


Press the **Menu** button to set the Repeat, Shuffle, and Info On (Info Off) menus.

Repeat

Press the **Menu** button ▶ Press **Repeat**.

Shuffle

Press the **Menu** button ▶ Press **Shuffle**.

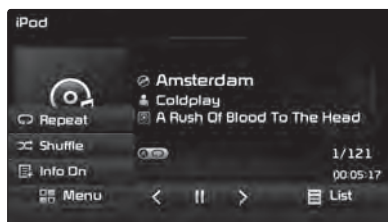


Info On/Info Off

Press the **Menu** button ▶ Press **Info On**.

The screen display can be set differently depending on user selection. When the title, artist, and album info are displayed, the button **Info Off**. Press **Info Off** to restore the previous display setting.

Starting Mode

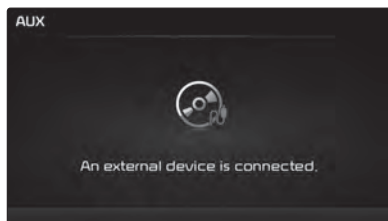

Press the **MEDIA** key ► Press **AUX**.

External Device

External AUDIO players can be played through a dedicated cable. The position of the AUX jack is at the top of the gear shifter located between the driver and passenger seats.


Bluetooth® Audio

Starting Mode

Press the **MEDIA** key ► Press **Bluetooth Audio**.

Playing Bluetooth® Audio

- Press the **▶** button to play files saved within the Bluetooth® phone.
- Press the **||** button to pause the file.

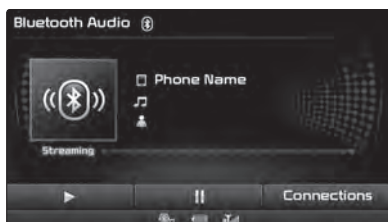


Selecting Bluetooth® Audio Files


While playing ► Press the **▼ SEEK**, **TRACK ▲** key ► Selects the previous/next file.

Setting Connection


Press the **Connections** button to add a new Bluetooth® phone, connect/disconnect, delete, delete all, or view the Help section.

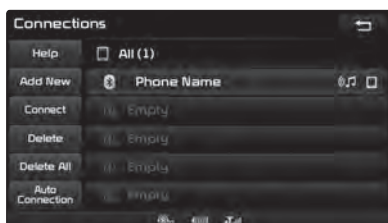

Starting Mode

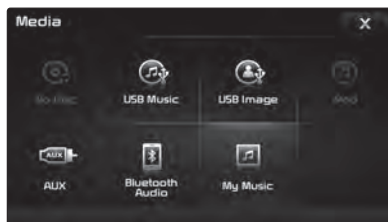

Press the **MEDIA** key ► Press **My Music**.

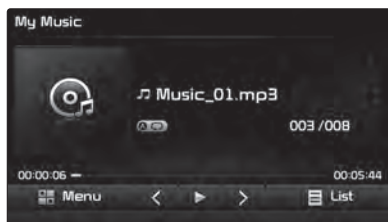

Playing My Music

- Press the **▶** button to play the file.
- Press the **||** button to pause the file.

Selecting My Music

While playing ► Press the **<**, **>** buttons or the **▼SEEK**, **TRACK▲** key to play the previous/next file.

- Pressing and holding the **▼SEEK**, **TRACK▲** key (over 0.8 seconds) will rewind or fast-forward the current file.
- While the **▼SEEK**, **TRACK▲** key is being pressed, the track will rewind or fast-forward at high speeds. Once the key is released, the Music will begin playing at normal speed.

My Music Mode

Using the Menu Buttons

Press the **Menu** button to set the Repeat, Shuffle, Scan, Info On (Info Off) menus.

Repeat

Press the **Menu** button ► Press **Repeat**.

The currently playing file is repeated.

Shuffle

Press the **Menu** button ► Press **Shuffle**.

When turned on, files are played in random order.

Scan

Press the **Menu** button ► Press **Scan**.

The beginning (approx 10 seconds) of all files are scanned.


Info On/Info Off

Press the **Menu** button ► Press **Info On**.

The screen display can be set differently depending on user selection.

When the title, artist, and album info are displayed, the button is changed to **Info Off**.

Press **Info Off** to restore the previous information display setting.

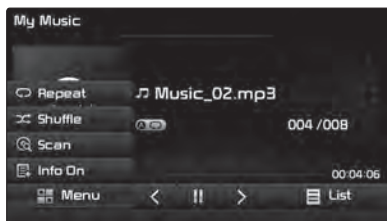






Using Menus within the List Screen

Moving between Lists

Press the **List** button ► Press **▲** , **▼** .

If six (6) or more files or folders exist in the same folder, the list will be displayed across two or more pages.

Press the **▲** , **▼** cursor buttons to quickly find the desired page.

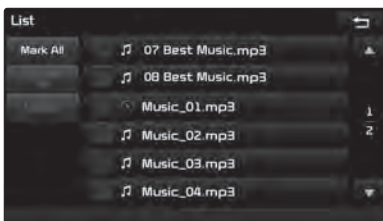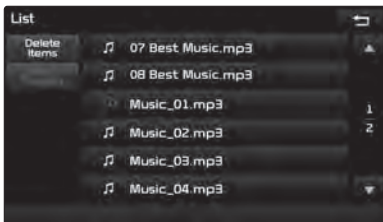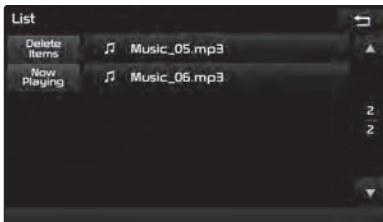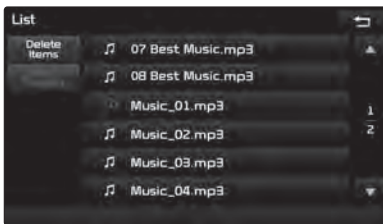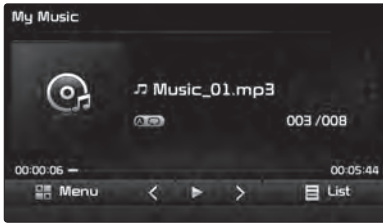

Retuning to Current Location

While searching files within other folders, press the **Now Playing** button to return to the currently playing file screen.

Deleting Files

Press the **List** button ► Select the files to delete ► Press **Delete Items** .

Navigation

Starting Navigation

Current Position

Press the **MAP VOICE** key or the **Ⓐ** button displayed at the upper right side in some map conditions to display the map of the current position and the neighboring area.



Map Display Settings

Press the **MAP VOICE** key ► Press the **Ⓐ**.

This button is used to set map screen related options, such as Split screen, Heading-Up/North Up, and Left/Right screen display.



Changing Map Scale

Press the **MAP VOICE** key ► Press **0.75mi** ► Set the desired map scale.

Press the **0.75mi** button to display the map scale menu and change the map to the desired scale.




Map Menu

Press the **>** button ► Press **Menu** button.

Features frequently used within the map screen, such as **Set as Destination**, **Add Waypoint**, **View Destination**, **Cancel Route**, **Call**, and **Details** are displayed.



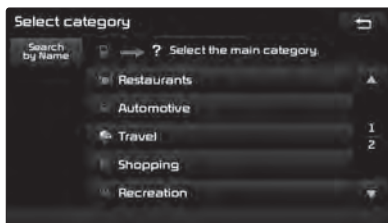

Adjusting Navigation Volume

Press the ► Adjust volume.

Press the  button. The volume menu is displayed and allows you to adjust the navigation voice guidance volume.

The volume can be adjusted from 0~45 through the  /  button.

Press the  **Mute** button to turn off the sound.

POI Display

Press the button ► Press

When POI menus are displayed, pressing one of the 6 POI icon buttons will display the corresponding POI icons.

Editing POI Icons

Press **POI** ► Press the **Edit POI Icon** button ► Press **Done**

Press the **Edit POI Icon** button to select the desired facility from the various facility types.

Up to six favorite facilities can be set.

Press the **Default** button to reset the displayed POI icons. Initially, Gas Station, Parking, Fast Food, Hospital, Auto Service, and Bank are set as default.

Navigation

Searching POIs

Press the **Search by local POI** button

► Press the search criteria.

(**Near current position** ,
Near scroll mark ,or **Near destination** ,
Near route)

Name	Description
1 Near Current Position	Within the 'Search by POI' menu, searches facilities based on the current vehicle position
2 Near Scroll Mark	Within the 'Search by POI' menu, searches facilities based on the current scrolled position
3 Near Destination	Within the 'Search by POI' menu, searches facilities based on the location of the destination
4 Near route	Searches facilities nearby the current route

The POI mark is displayed according to the selected criteria.




Adding a My Place

Press the **My Place** button ► Press the desired group.

This feature is used to save the current position or the scrolled position as a My Place or Speed Alert, Quick Menu.



Destination Search

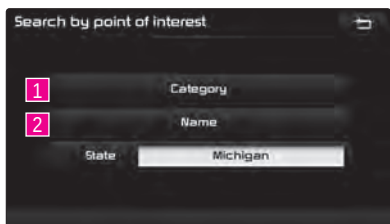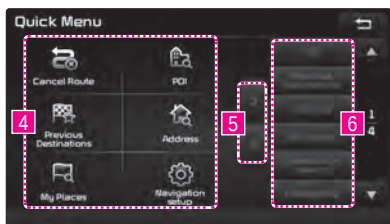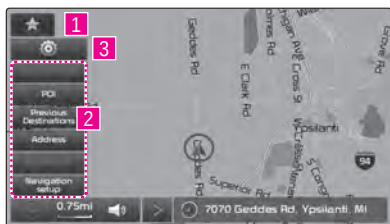

Quick Menu

Press the **★** button on the left side of the map screen to display the Quick Menu.

Name	Description
1 Quick Menu (★)	Display/hide Quick Menus
2 Quick Menu Bar	Menus added to the Quick Menu (possible to set up to 6 menus)
3 Edit	Add/Delete Quick Menus
4 Current Quick Menu	Shows list of current Quick Menus
5 Add/Remove	Add or remove Quick Menus
6 Quick Menu Categories	List of categories that can be added to Quick Menus

Point of Interest (POI) Search

Press the **DEST** key ► Press **POI**.

Name	Description
1 Category	Search for POIs by selecting through POI categories
2 Name	Search POIs by name



Navigation


Search by point of interest

Press the **DEST** key ► Press **POI**.

POI Search is a feature that allows you to search for POIs that are near your current position, near a scroll mark, near the destination, or near the city center. Categories are sub-categorized and the selected area and category are displayed at the top of the screen for user convenience.

Name	Description
1 Near Current Position	Searches POIs based on the current vehicle position
2 Near Scroll Mark	Searches POIs based on the current map scroll position
3 Near Destination	Searches POIs nearby the set destination (feature is disabled when a destination has not been set)
4 Near city center	Searches POIs nearby a selected area
5 Near route	Searches facilities nearby the current route

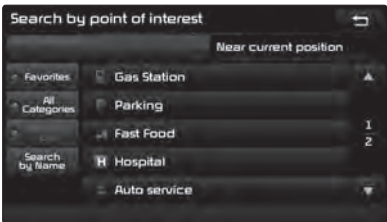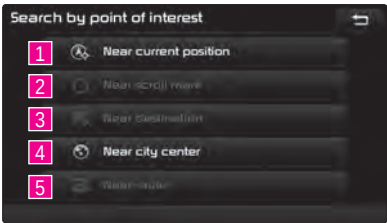

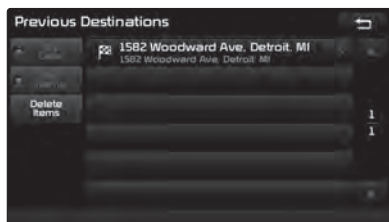

Previous Destinations

Press the **DEST** key ► Press **Previous Destination**.



Address

Press the **DEST** key ► Press **Address**.

This search feature is used to search destinations by addresses through state, city, and street.

Enter the name of the Street, City and State corresponding to the desired destination. Once search is complete, press the **Search** button to select the desired location from the list.



My Places

Press the **DEST** key ► Press **My Places** ► Press **Group**.

This search feature is used to search destinations by selecting previously saved My Places to set as destinations. My Places can be placed in groups, and group names can be edited within Setup.


Navigation

Intersection Search

Press the **DEST** key ► Press **Intersection Search** .

This search feature is used to search destinations by street intersections throughout the map.

Enter the name of the Street, City and State corresponding to the desired destination. Once search is complete, press the **Search** button to select the desired location from the list.

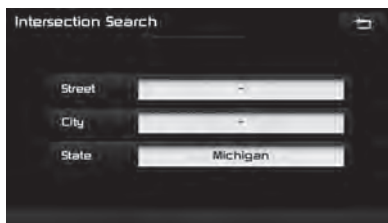

Gas Station

Press the **DEST** key ► Press **Gas station** .

This search feature is used to search destinations by street intersections throughout the map.

Enter the name of the Street, City and State corresponding to the desired destination. Once search is complete, press the **Search** button to select the desired location from the list.




Restaurants

Press the **DEST** key ► Press **Restaurants** .

This search feature is used to search destinations by street intersections throughout the map.

Enter the name of the Street, City and State corresponding to the desired destination. Once search is complete, press the **Search** button to select the desired location from the list.

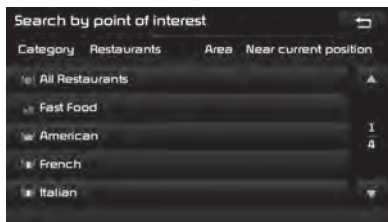



Emergency

Press the **DEST** key ► Press **Emergency** .

This search feature is used to search for police stations, hospitals, and dealerships in emergency situations.



Coordinates

Press the **DEST** key ► Press **Coordinates** .

This search feature is used to search destinations by entering coordinates. Two coordinate entry formats are supported. Select the desired format upon starting search.



Phone Number

Press the **DEST** key ► Press **Phone Number** .

This search feature is used to search the locations of POIs by entering the phone number of the desired POI destination.

- Area codes must be entered to complete the search.



Exit/Entrance

Press the **DEST** key ► Press **Exit/Entrance** .

This search feature is used to search destinations by entering the Exits and Entrances of corresponding expressways.

Enter the name of the Freeway corresponding to the desired destination. Once search is complete, press the **Search** button to select the desired location from the list.

Navigation

Setting a Destination

Press the **DEST** key ► Search for the Destination ► Press **Set as Destination**.

- To conduct a destination search through the desired search method, select the desired destination from the list. (For more information on destination search methods, refer to the 'Destination Search' section.)
- After verifying the location of the searched destination, press the **Set as Destination** button to calculate the route. The Route Overview or Alternative Route screen will be displayed.
- Within the Route Overview or Alternative Route screen, press the **MAP VOICE** key or the **Start Guidance** button to start route guidance.



(Alternative Route)




(Route Overview)

One Touch Scroll Setting

The destination can be set to the current map display.

- While in the map screen, touching a position on the map will move the map to the center of the selected position and display the scroll mark.
- Press the **Menu** button to set the selected position as a waypoint or destination.

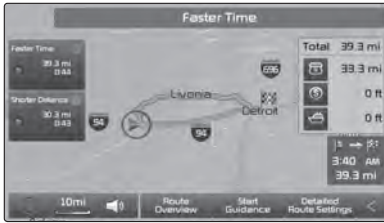

Route Calculation

- Once you have set a destination, calculate the route. The route overview and route option menus will be displayed.
- After checking the Route Overview, press the **MAP VOICE** key or the **Start Guidance** button or just drive for over 3 mph or for approximately 5 seconds to start guidance.

Demo

After a route has been calculated, press the **Demo** button to begin simulated driving of the calculated route.

- Within the Route Overview screen, press the **Demo** button.
- During Demo, press the **MAP VOICE** key to end the demo and display the current map position. If you start driving while viewing the route demo, demo will end and route guidance will start.

Add Waypoint


After searching for waypoints, press the **Add Waypoint** button to add the waypoint to the current route.

Navigation

Route Recalculation

Once a route has been set, the **Recalculate** button is displayed at the top of the menus.

Pressing the **Recalculate** button will display a pop-up that allows you to change route options. Once the settings are changed, the route is recalculated by reflecting the changes.

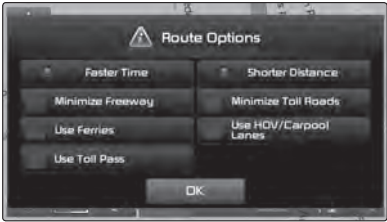

Cancel Route

In the Map menu screen, press the **Cancel Route** button.



Route Guidance



Preliminary guidance, highway mode, turn list guidance, and other guidance screens are displayed according to the current road condition.

Within the guidance map screen, if the current position is on route, then intersection guidance will be provided once you are nearby an intersection. Also, the intersection zoom screen is displayed when nearby an intersection.



Preliminary Guidance Mode

At the top right side of the screen, the next/ after next turn info, remaining distance, direction, and other information are displayed.



Intersection Zoom Mode

This mode provides detailed guidance nearby intersections before the next turn.

This mode is displayed starting from 300m before the intersection.

Navigation

Highway Mode

Upon entering a highway during route guidance, the highway mode will automatically be displayed. This mode is displayed when driving on a highway and mainly displays highway related POIs.

You can check information for various POIs by using the **View All** , **Summary** , and **Rest Area** buttons.

When scrolling through POIs by using the  ,  buttons, pressing the  button will select the POI closest to the current position.

Name	Description
1 View All	Guidance for all POIs on the highway
2 Summary	Shows list of turn points and other directional route guidance while driving within highway
3 Rest Area	Guidance for only the rest areas on the highway

Turn List Mode

Turn List Mode shows turn information on the current route.



Route Menu



Press the **ROUTE** key to use, edit, or optimize various route options.

Cancel Route

Press the **ROUTE** key ► Press **Cancel Route**.





Route Overview

Press the **ROUTE** key ► Press **Route Overview**.

Within the Route Overview screen, press the **Alternative Route** button to display other potential routes to the set destination.

From the alternative route options, select the desired route.

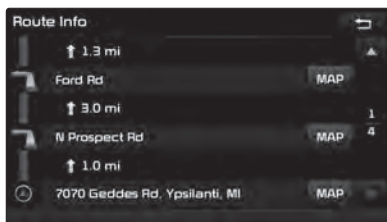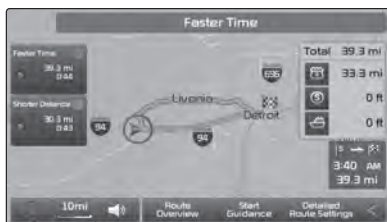

Route Info

Press the **ROUTE** key ► Press **Route Info**.


The turn points and distance information by key roads within the set route are played. Press the **MAP** button next to each road name to display the map position for the corresponding location.

Navigation

Route Option

Press the **ROUTE** key ► Press **Route Option** ► Set and press **Done**.


Route Options refer to conditions used to calculate the route to the destination. The route is automatically recalculated if the route options and detailed route settings are changed.

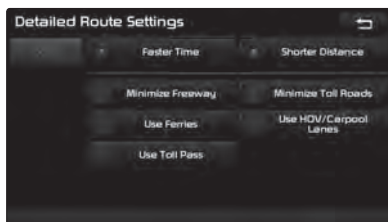

Detour

Press the **ROUTE** key ► Press **Detour**.


The Detour menu is used to redefine the route by setting a detour to a certain distance from the current position.

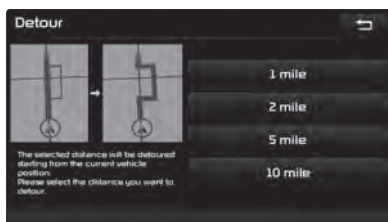

Avoid Streets

Press the **ROUTE** key ► Press **Avoid Streets** ► Select the streets you want to avoid and press **Done**.


This feature is used to select specific streets to avoid within the current route. Select **Avoid** to avoid the particular streets in the route overview that are desired to be avoided.

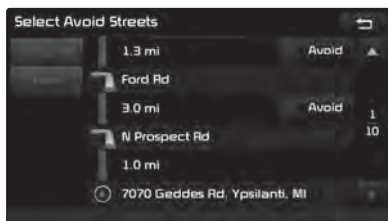


Edit Route

Press the **ROUTE** key ► Press **Edit Route** ► Set and press **Done**.

The Edit Route menu displays the start point, waypoints, and the destination in list format and is used to edit corresponding positions or the order of destinations within the route.

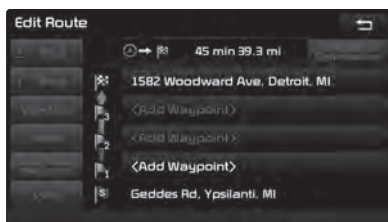

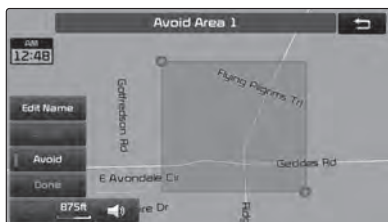

Avoid Area

Press the **ROUTE** key ► Press **Avoid Area** ► Set and press **Done** .

This feature is used by creating a rectangle over the area to avoid.

An area set as an avoid area is excluded from the calculated route. If a route had been calculated prior to creating an avoid area, the route will automatically be recalculated.

The screen will prompt to select the first corner of the square of the avoid area, followed by the second corner.

Bluetooth® Wireless Technology


Using Bluetooth® Handsfree

Pairing from the Bluetooth® Device

Press the  key on the steering wheel or press the **PHONE** ► Press **Yes** .

In the Search from Device screen ► Search for the car name and pair the device ► Enter the Passkey ► Bluetooth® becomes connected.



- When searching from the Bluetooth® device, the car name is Kia Motors and the default passkey is '0000', then press Ok.
- To learn more about searching from Bluetooth® devices and pairing, refer to the user's manual for your Bluetooth® device.
- The Bluetooth® Audio screen is displayed once audio streaming is available.

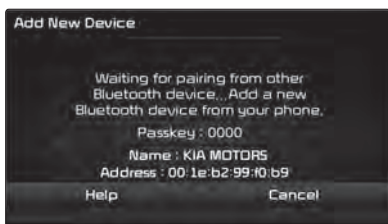

NOTICE

- This process may take a few minutes. Radio may play during the wait.
- Some phones (i.e., iPhone, Android and Blackberry phones) may offer an option to allow acceptance of all future Bluetooth® connection requests by default.
- Phonebook transfer will occur automatically at initial pairing. Wait until complete before placing a call.
- Visit <http://www.kia.com/us/bluetooth> for additional information on pairing your Bluetooth® enabled mobile phone, and to view a phone compatibility list.

Making/Answering Calls

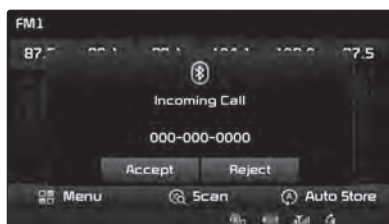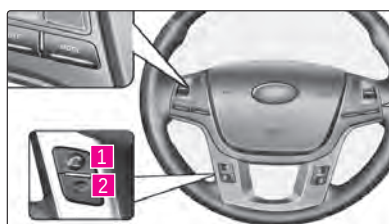

Calling by Dialing a Number

Enter number on the dial pad ► Press the **Send** or the **End** key on the steering wheel.

If you press the **Send** button without entering a number, the Call History screen is displayed. Press and hold the dial pad **0+** (over 0.8 seconds) to enter a "+".

Name	Description
1 Send	Calls the entered phone number
2 End	Deletes all entered numbers

Answering a Call



Incoming call notice ► Press the **Accept** button or the **End** key on the steering wheel.

Operating Menus during a Call

Switching Call to Bluetooth® Phone

During handsfree call ► Press the **Private** button or press and hold the **End** key (over 0.8 seconds) on the steering wheel.

The call will be switched from the handsfree to the Bluetooth® mobile phone.

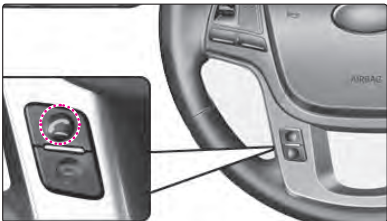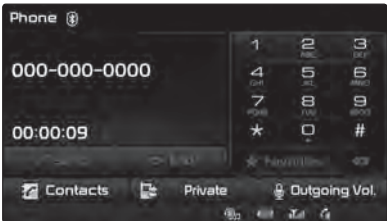

Switching Call to the Handsfree


During call on mobile phone ► Press the **Use Handsfree** button or press and hold the **End** key (over 0.8 seconds) on the steering wheel.

The call will be switched from the Bluetooth® mobile phone to the handsfree.

Ending a Call

While on a call ► Press the **End** button or the **End** key on the steering wheel.




The Bluetooth® handsfree call will end.

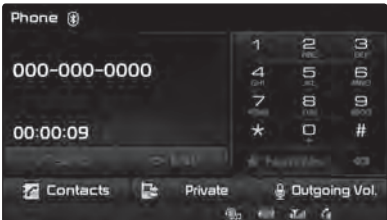

Contacts

Downloading Mobile Phone Contacts

Press the **Contacts** button ► Press the **Download** button ► Press **Yes**

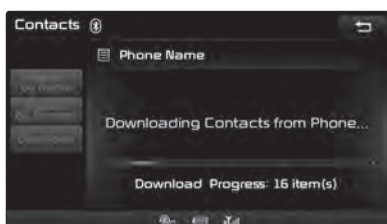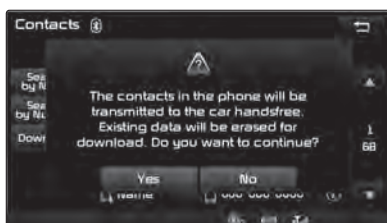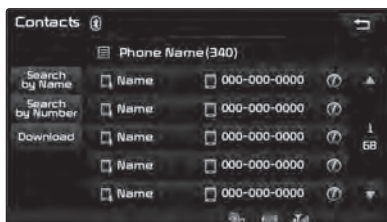


Contacts Sync (Phonebook Download)
The Contacts Sync feature allows you to choose whether your phone contact list will transfer to your vehicle contacts each time your phone is connected or only at the initial phone pairing. To enable or disable Contacts Syncing:

1. Depending on the equipped options of your multimedia system, press the **i** **gear** key ► **Setup** ► **Phone** ► **Contact Sync Settings** .
2. On the display screen, press Phone, Settings, Advanced Setup and Contacts Sync, then press On or Off to change the setting.
 - If Contact Sync is set to ON, contacts stored your phone will download each time your phone is connected. There may be a delay before the system is available to place a call.
 - If Contact Sync is set to OFF, your phone contacts will download only at the initial pairing. This allows you to make calls without waiting for your phone contact list to download.

Favorites



Calling Favorites


In Phone screen ► Press **★ Favorites**
► Select the desired Favorite ► Call is connected.

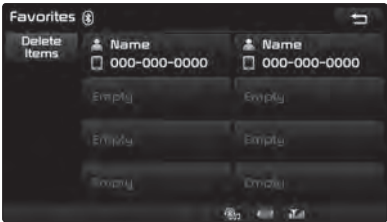

Selecting/Deleting Favorites

In Favorites screen ► Press **Delete Items** ► Select items you want to delete and press **Delete** ► Press **Yes** .

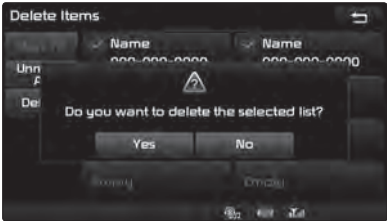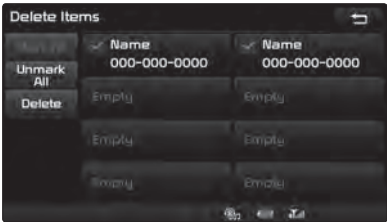

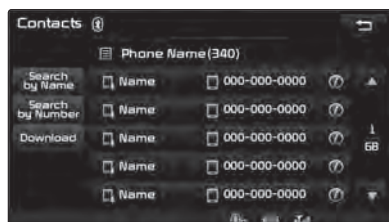

Searching Contacts

Search by Name

Press the **Search by Name** button ►

Enter name and press **Search** .



Searching by Number

Press the **Search by Number** button

► Enter number and press **Search** .

i Information

- When searching a number, it is possible to search by entering just a part of the entire number.


(ex : if you enter "1544", all numbers that include "1544" will be searched.)


Setting Bluetooth® Connection

Connecting a Device

Press the **Connect** button on the Phone screen.



The Phone screen is displayed once Bluetooth® Handsfree is connected, and the Bluetooth® Audio screen is displayed once audio streaming is available.

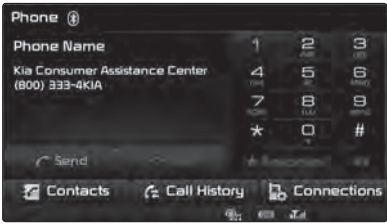

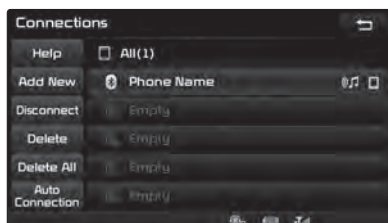

Disconnecting a Device


Select the device you wish to disconnect ► Press **Disconnect** ► Press **Yes** .


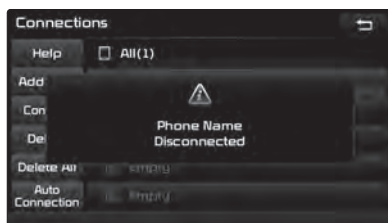
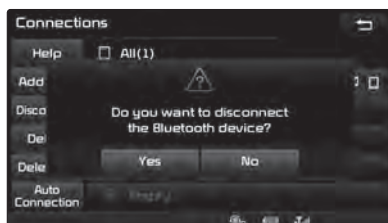


Setting Auto Connection

Press the **Auto Connection** button ►
Select the desired phone ► Set and
press **Done** .

The Bluetooth® device will automatically be connected according to the option set when the car ignition is turned on. When the user selected phone cannot be connected, the system automatically attempts to connect the most recently connected phone. When the most recently connected phone cannot be connected, the system attempts to connect all paired phones. If you do not want to connect automatically, turn off Bluetooth within your mobile phone.

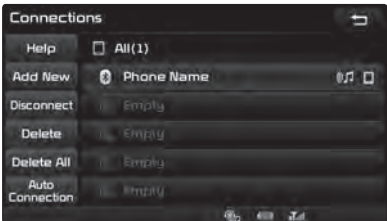

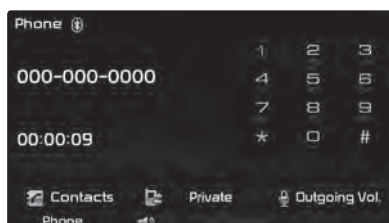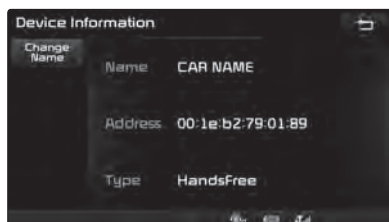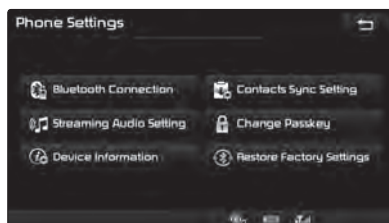

Device Information

Press the **i** key ► Press **Setup** ► Press **Phone** ►

Device Information

- This feature allows you to check device information.

Adjusting the Ring/Call Volume


While on a call ► Use the **VOL** knob on the head unit or the **VOL +** , **VOL -** keys on the steering wheel to adjust the ring/call volume.

Voice Recognition

Setting Mic Volume


While on a call ► Press the **Outgoing Vol.** ► Set Outgoing Volume ► Press **OK**.



If you press the **Mute** button, the outgoing volume is muted and blocked to the other party.

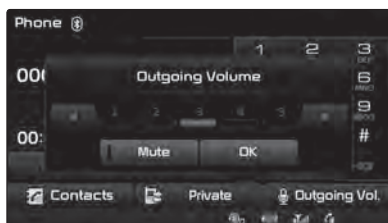

Restore Factory Settings

Press the **i** key ► Press **Setup** ► Press **Phone** ► Press **Restore Factory Settings**.

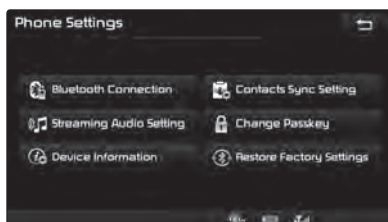

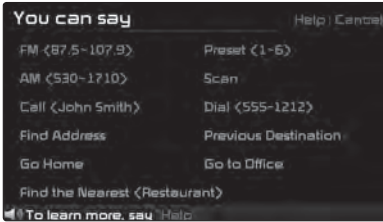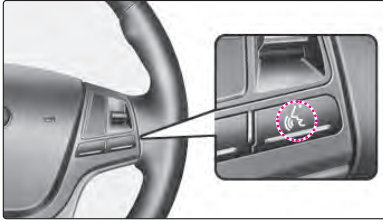

Voice Recognition and Phone Contact Tips

The Kia Voice Recognition System may have difficulty understanding some accents or uncommon names. When using Voice Recognition to place a call, speak in a moderate tone, with clear pronunciation. To maximize the use of Voice Recognition, consider these guidelines when storing contacts:

- Do not store single-name entries (e.g., “Bob”, “Mom”, etc.). Instead, always use full names (including first and last names) for these contacts
- Do not use special characters (e.g., ‘@’, ‘-’, ‘*’, ‘&’, etc.)
- Do not use abbreviations (i.e., use “Lieutenant” instead of “Lt.”) or acronyms (i.e., use “County Finance Department” instead of “C. F. D.”; Be sure to say the name exactly as it is entered in the contacts list.

Starting Voice Recognition

Starting Voice Recognition

Shortly press the  key on the steering wheel (under 0.8 seconds) ► Say a command.

Once voice recognition starts, the voice command entry window and the six representative commands are displayed.

- If voice recognition is in [Normal Mode], then the system will say “Please say a command after the beep,” followed by a beep tone.
- If voice recognition is in [Expert Mode], then you will only hear a beep a “Beep~”.

Skipping Prompt Messages

While prompt message is being stated ► Briefly press the  key on the steering wheel. (under 0.8 second)
The prompt message is immediately ended and the beep tone will sound. After the “beep”, say the voice command.

Re-starting Voice Recognition

While system waits ► Briefly press the  key on the (under 0.8 seconds)
The command wait state will end and the beep tone will sound. After the “beep”, say the voice command.

Voice Recognition

Ending Voice Recognition

While Voice Recognition is operating
► Press and hold the  key on the steering wheel. (over 0.8 seconds)

While using voice recognition, pressing a steering wheel remote control or a different key will end voice recognition.



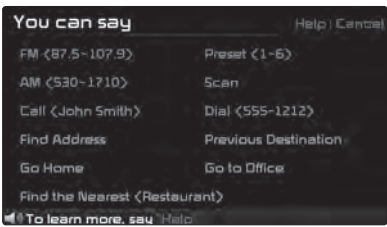


Illustration on Using Voice Recognition (Setting Home as the Destination)

Press the  key. (under 0.8 seconds) The system awaits for your command and display a list of accessible commands on the screen.

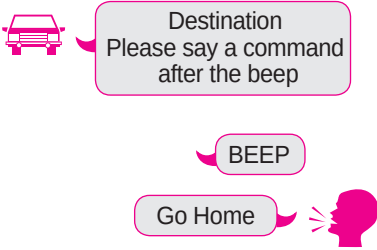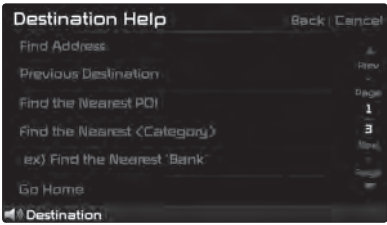

Voice Command List

Voice commands within this system are categorized into “Common Commands” and “Mode Commands.”

- Common Commands (●) : commands that can be used in all situations.
- Mode Commands (○) : commands that can be used in specific multimedia/navigation/Bluetooth® mode states.

Command		Operation
●	Help	Displays the main Help screen
●	Destination Help	Displays the Destination related command list
●	Map Help	Displays the Map related command list
●	Radio Help	Displays the FM/AM radio related command list
●	SIRIUS Help	Displays the SIRIUS radio related command list
●	Disc Help	Displays the DISC mode related command list for the disc inserted in the CD Player
●	iPod Help	Displays the iPod related command list
●	USB Help	Displays the USB related command list
●	Phone Help	Displays the Phone related comand list
●	UVO eServices Help(Optional)	Display the UVO eServices releated command list

Audio System Command List

FM/AM Radio

Command		Operation
●	Radio	Plays the most recent frequency for the most recently operated band
●	AM	Plays the most recent frequency for the corresponding band
●	FM	Plays the most recent frequency for the corresponding band. In the case of FM, The most recent frequency within the most recently played FM1 or FM2 band is played
●	FM1/FM2	Plays the most recent frequency for the corresponding band
●	AM <530~1710>	Plays the desired AM band frequency (e.g. AM "Five-Hundred Thirty")
●	FM <87.5~107.9>	Plays the desired FM band frequency (e.g. FM "Eighty-Seven point Five")
●	AM Preset <1~6>	Plays the desired AM band preset frequency
●	FM1 Preset <1~6>	Plays the desired FM1 band preset frequency
●	FM2 Preset <1~6>	Plays the desired FM2 band preset frequency
○	Preset <1~6>	Plays the desired preset frequency for the current band
○	Scan On	Scans receivable frequencies from the current broadcast and plays for 10 seconds each
○	Preset Scan	Plays through all presets for 10 seconds each, beginning with the current preset

SIRIUS Radio

Command		Operation
●	SIRIUS	Plays the last channel within the last band from SIRIUS1, SIRIUS2, and SIRIUS3
●	SIRIUS1/ SIRIUS2/ SIRIUS3	Plays the most recent channel for the corresponding band
●	SIRIUS Channel <0~255>	Plays the desired SIRIUS band channel (e.g. SIRIUS channel "Eleven")
●	SIRIUS1 Preset <1~6>	Plays the desired preset channel for SIRIUS1 band
●	SIRIUS2 Preset <1~6>	Plays the desired preset channel for SIRIUS2 band
●	SIRIUS3 Preset <1~6>	Plays the desired preset channel for SIRIUS3 band
○	Channel <0~255>	Plays the desired channel of the current band
○	Preset <1~6>	Plays the desired preset channel of the current band
○	Scan	Scans receivable channels from the current broadcast and plays for 10 seconds each
○	Preset Scan	Plays through all presets for 10 seconds each, beginning with the current preset

CD(Audio Type)

Command		Operation
●	CD	If the DISC inserted in the CD Player is either a CD or MP3 DISC, then the CD or MP3 will be played
●	CD Track <1~99>	If the DISC inserted in the CD Player is a CD, then CD Mode will start and plays the desired track
○	Play	Plays the currently paused song
○	Pause	Pauses the current song
○	Repeat	Repeats the current track
○	Repeat Off	Cancels repeat play to play tracks in sequential order
○	Shuffle	Randomly plays the tracks within the CD
○	Shuffle Off	Cancels random Play to play tracks in sequential order
○	Track <1~99>	Plays the desired track number

Voice Recognition

CD(Audio Type)

Command		Operation
●	CD	If the DISC inserted in the CD Player is either a CD or MP3 DISC, then the CD or MP3 will be played
●	CD Track <1~99>	If the DISC inserted in the CD Player is a CD, then CD Mode will start and plays the desired track
○	Play	Plays the currently paused song
○	Pause	Pauses the current song
○	Next Track	Plays the next track
○	Previous Track	Plays the previous track
○	Repeat On	Repeats the current track
○	Repeat Off	Cancels repeat play to play tracks in sequential order
○	Shuffle On	Randomly plays the tracks within the CD
○	Shuffle Off	Cancels random Play to play tracks in sequential order
○	Scan On	Plays each file for 10 seconds beginning with the current file
○	Scan Off	Ends the currently operating Scan feature
○	Track <1~99>	Plays the desired track number

CD(MP3 Type)

Command		Operation
●	CD	If the DISC inserted in the CD Player is either a CD or MP3 DISC, then the CD or MP3 will be played
○	Play	Plays the currently paused song
○	Pause	Pauses the current song
○	Next File	Plays the next track
○	Previous File	Plays the previous track
○	Next Folder	Plays the first file in the next folder
○	Previous Folder	Plays the first file in the previous folder
○	Repeat On	Repeats the current file
○	Repeat Off	Cancels repeat play to play files in sequential order
○	Repeat Folder	Repeats all files in the current folder
○	Shuffle On	Plays all files within the CD in random order
○	Shuffle Off	Cancels random play to play files in sequential order
○	Shuffle Folder	Randomly plays the files within the current folder
○	Scan On	Plays each file in the folder for 10 seconds beginning with the current file
○	Scan Off	Ends the currently operating Scan or Folder Scan feature
○	Folder Scan	Plays each file in the folder for 10 seconds beginning with the current file

Voice Recognition

CD(MP3 Type)

Command		Operation
●	CD	If the DISC inserted in the CD Player is either a CD or MP3 DISC, then the CD or MP3 will be played
○	Play	Plays the currently paused song
○	Pause	Pauses the current song
○	Next Folder	Plays the first file in the next folder
○	Previous Folder	Plays the first file in the previous folder
○	Repeat	Repeats the current file
○	Repeat Off	Cancels repeat play to play files in sequential order
○	Shuffle	Plays all files within the CD in random order
○	Shuffle Off	Cancels random play to play files in sequential order

USB Music

Command		Operation
●	USB	If the USB has been connected to the device, play the MP3 or image files on the USB
●	USB Music	If the USB has been connected to the device, plays the MP3 files within the USB
○	Play	Plays the currently paused song
○	Previous File	Plays the previous track
○	Next Folder	Plays the first file in the next folder
○	Previous Folder	Plays the first file in the previous folder
○	Repeat	Repeats the current file
○	Repeat Off	Cancels repeat play to play files in sequential order
○	Shuffle	Plays all files within the USB in random order
○	Shuffle Off	Cancels random play to play files in sequential order

iPod

Command		Operation
●	iPod	Plays the songs within the iPod if the iPod has been connected to the device
○	Play	Plays the currently paused song
○	Pause	Pauses the current song
○	Repeat	Repeats the current file
○	Repeat Off	Cancels repeat play to play files in sequential order
○	Shuffle	Plays all files within the current category in random order
○	Shuffle Off	Cancels random play to play files in sequential order

My Music

Command		Operation
●	My Music	Plays the songs within the My Music
○	Play	Plays the currently paused song
○	Pause	Pauses the current song
○	Repeat	Repeats the current file
○	Repeat Off	Cancels repeat play to play files in sequential order
○	Shuffle	Plays all files within the current category in random order
○	Shuffle Off	Cancels random play to play files in sequential order

Voice Recognition

Others

Command		Operation
●	Bluetooth Audio	Plays Bluetooth® Audio
●	Auxiliary	Plays the connected auxiliary device

Phone Command List

Name		Description
●	Call	Displays list of saved contacts. Say the name to connect the call to the corresponding contact.
●	Call <Name>	Call <Name> saved in Contacts (e.g. Call "John Smith")
●	Dial Number	Makes the call to the number
●	Dial <Number>	Call can be made by dialing the spoken numbers (e.g. Dial "111 555 1234")
●	Call History	The user can select a number from the outgoing, incoming, and missed calls
●	Redial	Connects the most recently called number

UVO eServices Command List(Optional)

Name		Description
●	UVO eServices	Display the UVO eServices related command list
●	Roadside Assist	Connect with a Roadside Assist agent.
●	eService Guide	Provides guidance on how to use UVO eServices
●	Vehicle Diagnostics	Informs you if a diagnostic issue is found in your vehicle
●	My POIs	Show Points of Interest list which downloaded from Google Maps™ and MyUVO.com

Navigation Command List

Destination

Name		Description
●	Find Address	Sets the destination through address search for route guidance
●	Previous Destinations	Sets the previous destination as the current destination
●	Find Nearest POI	Sets a POI near the current position as the destination for route guidance through the POI category search
●	Find the Nearest <POI Category>	Sets a POI near the current position as the destination by directly inputting the POI name for route guidance (e.g. Find the Nearest "Restaurants"), For more information on <POI Category>, refer to Page 3-30.
●	Find Emergency Policestation	Searches for a police station near the current position and sets it as the destination for route guidance
●	Find Emergency Hospital	Searches for a hospital near the current position and sets it as the destination for route guidance
●	Find an Emergency Dealership	Searches for a dealership near the current position and sets it as the destination for route guidance
●	Go Home	Sets the previously registered home address as the destination for route guidance
●	Go to Office	Sets the previously registered office address as the destination for route guidance

Voice Recognition

Map

Name		Description
●	Voice Guidance On	Turns the Voice Guidance On
●	Voice Guidance Off	Turns the Voice Guidance Off
●	Voice Guidance Louder	Increases the Voice Guidance volume by 1 level
●	Voice Guidance Softer	Decreases the Voice Guidance volume by 1 level
●	Repeat Voice Guidance	Repeats the route guidance
●	Cancel Route	Deletes the designated destination and terminates the route guidance
●	Distance to Destination	Reports the remaining distance until destination by voice
●	Time to Destination	Reports the remaining time until destination by voice
●	Replan Faster Time Route	Recalculates the route with faster time route
●	Replan Shorter Distance Route	Recalculates the route with shorter distance route
○	Zoom In / Zoom Out	Decreases/Increases the map zoom by one level
○	Zoom Maximum	Displays the map screen in the maximum zoom level
○	Zoom Minimum	Displays the map screen in the minimum zoom level
○	View Route	If the destination has been set, displays the entire route on the screen until the destination
○	Auto Zoom On	Turns the Auto Zoom feature on
○	Auto Zoom Off	Turns the Auto Zoom feature off
○	Auto Mode	Automatically converts the map display between daylight and night mode
○	Daylight Mode	Converts the map display into daylight mode
○	Night Mode	Converts the map display into night mode

POI Category List

Restaurants	Motorcycle Dealership	Sporting Goods Store	School
African Restaurants	Parking	Recreation	Utilities
American Restaurants	Rest Area	Amusement Park	Waste & Sanitary
Asian Restaurants	Road Assistance	Cinema	Services
Chinese Restaurants	Travel	Golf Course	Attorney
Coffee Shop	Airport	Museum	Cleaning & Laundry
Continental Restaurants	Bus Station	Recreation Area	Communication Services
Fast Food	Campground	Ski Resort	Dentist
French Restaurants	City Center	Sports Activities	Funeral Home
Italian Restaurants	Ferry Terminal	Sports Complex	Hair & Beauty
Japanese Restaurants	Hotel	Video & Game Rental	Hospital
Korean Restaurants	Local Transit	Winery	Medical Service
Latin American Restaurants	Rental Car Agency	Other Recreation	Mover Services
Mexican Restaurants	Tourist Attraction	Financial Services	Photography
Seafood Restaurants	Tourist Information	ATM	Physician
Vegetarian Restaurants	Train Station	Bank	Social Service
Other Restaurants	Travel Agent	Check Cashing Service	Tailor & Alteration
Automotive	Shopping	Money Transfer	Tax Service
Auto Parts	Bookstore	Community	
Auto Service	Clothing Shop	Business Facility	
Kia Dealership	Convenience Store	City Hall	
Car Wash	Department Store	Civic Center	
Gas Station	Electronics Store	Convention Center	
Hyundai Dealership	Gift Shop	Court House	
	Grocery Store	Fire Department	
	Home Specialty Store	Government Offices	
	Music Store	Library	
	Pharmacy	Police Station	
	Shoe Store	Post Office	
	Shopping Center		

1UEND12



1UMS7-S0056