



TUNDRA

2 0 1 7



QUICK REFERENCE GUIDE

2017

TUNDRA

This Quick Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Quick Reference Guide is not intended as a substitute for the Owner's Manual located in your vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Tundra.



A word about safe vehicle operations

This Quick Reference Guide is not a full description of Tundra operations. Every Tundra owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the Owner's Manual. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this Quick Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	7
Fuel tank door release & cap	7
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry ¹	6
Light control-Instrument cluster	6

FEATURES & OPERATIONS

Air conditioning/heating	16
Audio	18-19
Auto lock/unlock ¹	8
Automatic transmission	9
Bottle holders	26
Blind Spot Monitor (BSM) with	
Rear Cross Traffic Alert (RCTA)	24
Cruise control	21
Cup holders	27
Door locks	10
Four-wheel drive	22
Garage door opener (HomeLink [®]) ³	26
Lights ¹ & turn signals	11
Mirrors-Power outside rear view	8
Moon roof	13
Multi-Information Display (MID) ²	19
Parking assist sonar	25
Parking brake	13
Power outlets-12V DC	20

FEATURES & OPERATIONS (continued)

Rear seats-Folding	15
Rear view monitor system	17
Seat adjustments-Front	14-15
Seat heaters & ventilators	17
Seats-Head restraints	15
Telephone controls (Bluetooth [®])	21
Tilt & telescopic steering wheel	10
TOW/HAUL switch	23
Trailer brake controller	22
VSC OFF switch	24
Window-Rear	13
Windows-Power	12
Windshield wipers & washers	12

SAFETY & EMERGENCY FEATURES

Doors-Child safety locks	29
Floor mat installation	31
Seat belts	28
Seat belts-Shoulder belt anchor	28
Spare tire & tools	29
Star Safety System	30-31
Trailer Sway Control	31
Tire Pressure Monitoring (warning) System (TPMS)	28

BLUETOOTH[®] DEVICE PAIRING SECTION



32-41

¹ Visit your Toyota dealer for information on customizing this feature.

² Programmable by customer. Refer to the Owner's Manual for instructions and more information.

³ HomeLink[®] is a registered trademark of Gentex Corporation.


Instrument panel

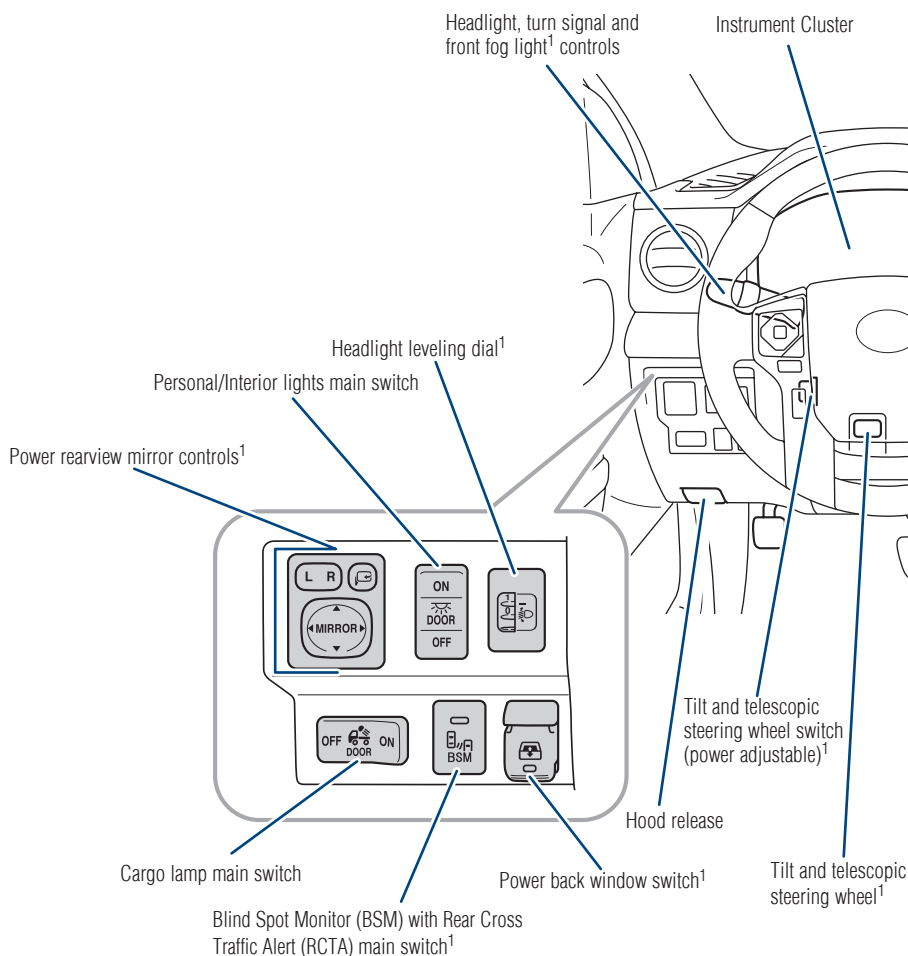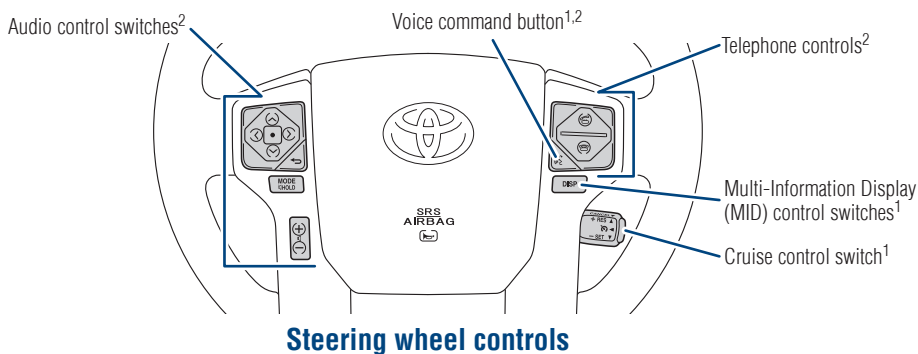


¹ If equipped.

² For vehicles with a navigation system, refer to the “Navigation System Owner’s Manual” and “2017 Entune™ Audio Quick Reference Guide.”

NOTE: Instrument panel features depend on the seat option, separated or bench.

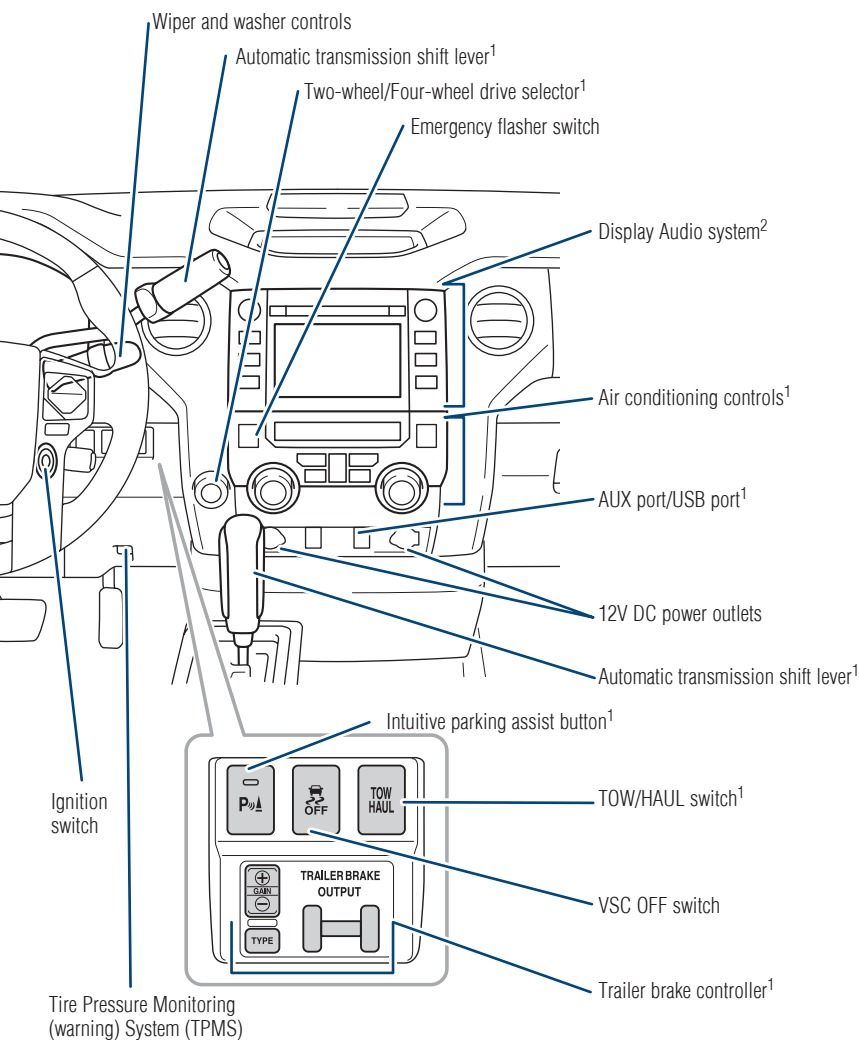

Instrument cluster

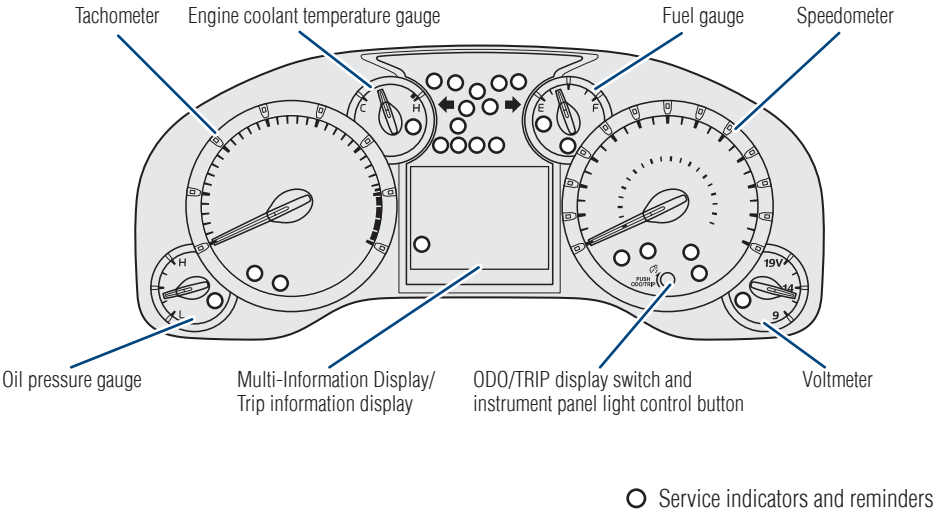

For details, refer to “Indicators and warning lights,” Section 2-2, 2017 Owner’s Manual.

-  Brake system warning¹
-  Charging system warning¹
-  Malfunction/Check Engine indicator¹
-  Airbag SRS warning¹
-  Low fuel level warning
-  Master warning¹

	Open door warning
	Driver/Front passenger seat belt reminder (alarm will sound if speed is over 12 mph)
	Low Tire Pressure Warning ¹
	Blind Spot Monitor outside rearview mirror indicators ³
	Theft deterrent/Engine immobilizer system indicator
	Front passenger occupant classification or front passenger airbag ON/OFF indicator
	Headlight low/high beam indicator
	Turn signal indicator
	High/Low speed four-wheel drive indicator ³
	Slip indicator ¹
	Vehicle Stability Control OFF indicator ¹
	TOW/HAUL mode indicator
	AUTO Limited Slip Differential indicator ¹
	SET Cruise control indicator ² /Cruise control SET indicator
	Anti-lock Brake System warning ¹
	Trailer connection indicator ³
	Arrow direction indicates fuel tank door position

¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

² If this light flashes, refer to "Cruise control," Section 4-5, 2017 Owner's Manual.

³ If equipped.

OVERVIEW

Keyless entry

UNLOCKING OPERATION



Push
ONCE: Driver door
TWICE: All doors

LOCKING OPERATION



Push

NOTE: If a door is not opened within 30 seconds of unlocking, all doors will relock for safety.

PANIC BUTTON




HOLD
Push and hold





Light control-Instrument cluster

Brightness control


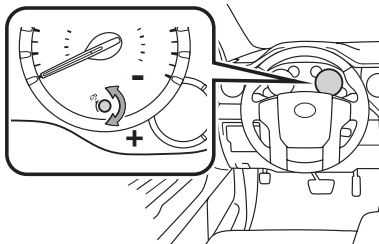


Fuel tank door release & cap

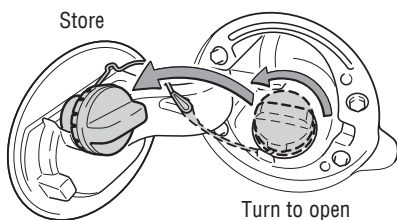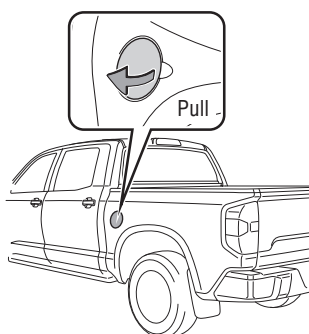

NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.


Hood release

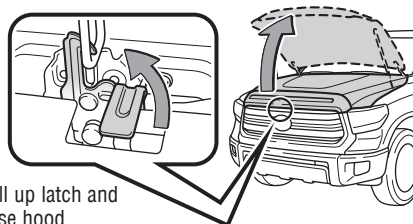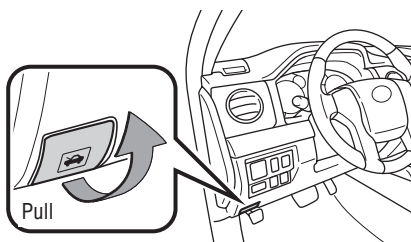

Engine maintenance

4.6L 8 CYLINDER (1UR-FE) AND
5.7L 8 CYLINDER (3UR-FE/3UR-FBE) ENGINES

Windshield washer fluid tank Engine oil level dipstick Engine coolant reservoir Engine oil filler cap

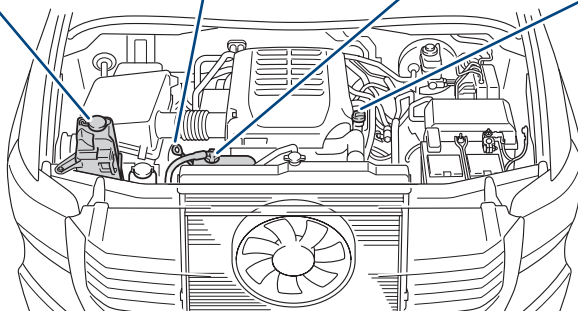

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty & Maintenance Guide.”

FEATURES & OPERATIONS

Auto lock/unlock

Automatic door locks can be programmed to operate in different modes, or turned OFF.

Shift position linked door locking/unlocking function

Doors lock when shifting from Park.
Doors unlock when shifting into Park.

Speed linked door locking/unlocking function

Doors lock when the vehicle speed goes above approximately 12 mph.

Driver's door linked door locking/unlocking function


Doors unlock within 10 seconds after the engine switch is turned to "LOCK" and driver's door is opened.

Refer to the *Owner's Manual* for more details.


Mirrors-Power outside rear view (if equipped)

ADJUST

Type A

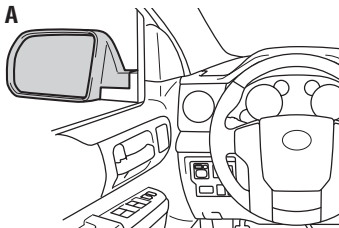


Type B

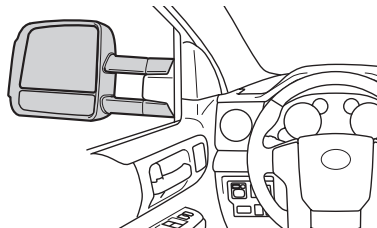

Select left
or right

Adjust

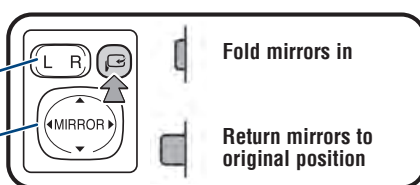

Fold mirrors in

Return mirrors to
original position

Key must be in the "ACC" or "ON" position.
Refer to the *Owner's Manual* for more details.

EXTEND


Type B




Mirrors can be manually slid outward to improve visibility while towing.

Automatic transmission

FLOOR SHIFT TYPE

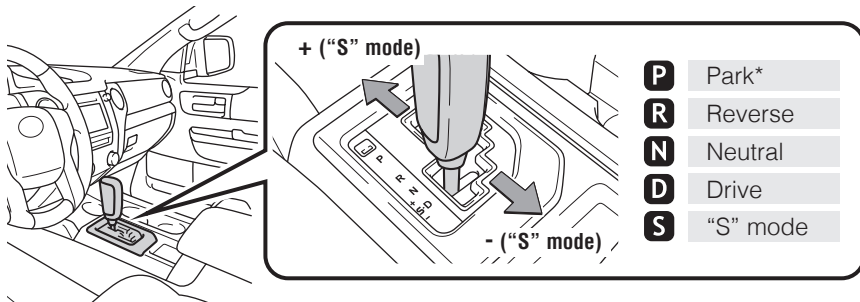

COLUMN SHIFT TYPE

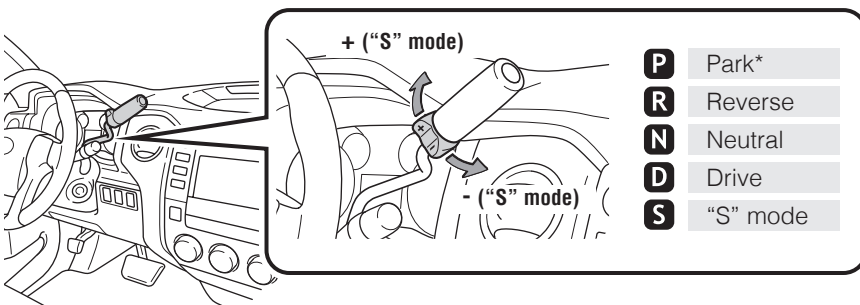

* The ignition switch must be set at "ON" and the brake pedal depressed to shift from Park.

"S" (SEQUENTIAL) MODE

Shift the shift lever to "S" position from "D" position.

Floor shift type:

- + : Upshift (push and release)
- : Downshift (pull and release)

Column shift type:


- + : Upshift (push and release)
- : Downshift (push and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.


Tilt & telescopic steering wheel (if equipped)

MANUAL

Tilt steering wheel

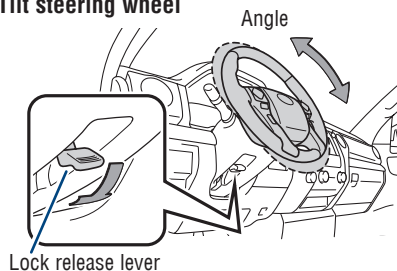


Tilt and telescopic steering wheel

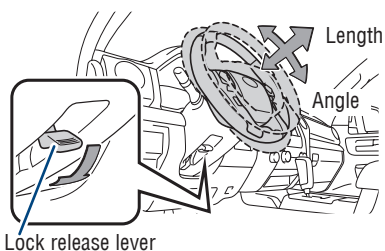

Hold wheel, push lever down, set angle and length, and return lever.


POWER

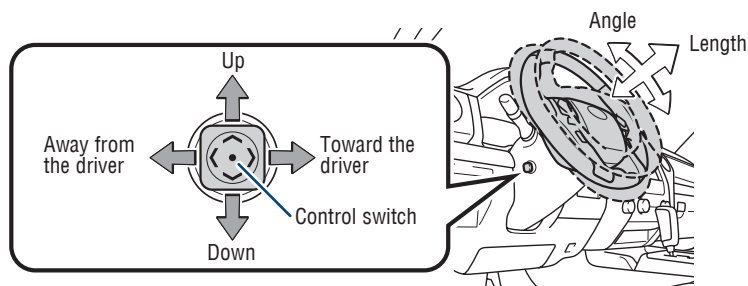

Push the control switch, set angle and length.


NOTE: Do not attempt to adjust while the vehicle is in motion.

Door locks (if equipped)

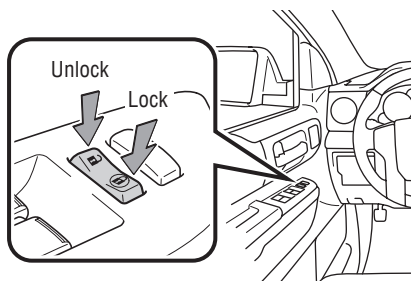

Lights & turn signals

HEADLIGHTS

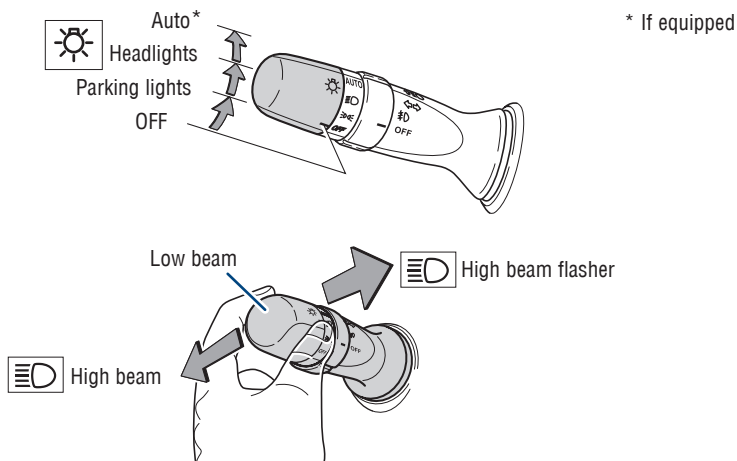

Daytime Running Light system (DRL) Automatically turns on the headlights to make vehicle more visible to other drivers. Not for use at night.


Automatic light cut off system (AUTO) Automatically turns lights off after 30-second delay, or lock switch on remote may be pushed after locking.

FRONT FOG LIGHTS (IF EQUIPPED)



Front fog lights come on only when the headlights are on low beam.



TURNING SIGNALS

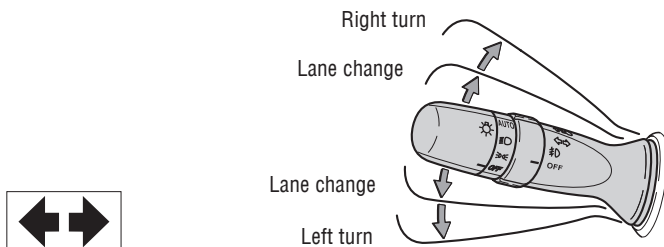

FEATURES & OPERATIONS


Windshield wipers & washers

WITH INTERMITTENT WIPER

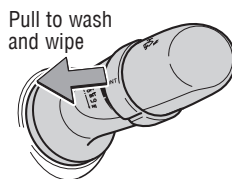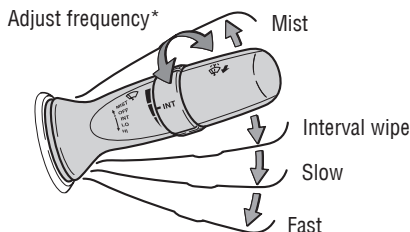


* **Intermittent windshield wiper frequency adjustment** Rotate to increase/decrease wipe frequency.

WITHOUT INTERMITTENT WIPER

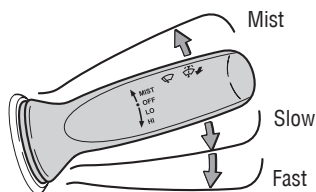


Windows-Power (if equipped)

Driver side

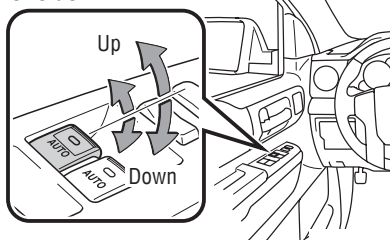

Window lock switch

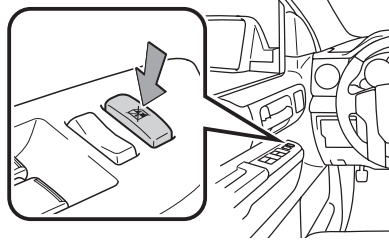


Automatic operation (passenger side for some models and driver side) Push the switch completely down or pull it completely up and release to fully open or close.* To stop window part way, lightly push the switch in the opposite direction.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.

* Not all models are equipped with one-touch close function.

Window-Rear (if equipped)

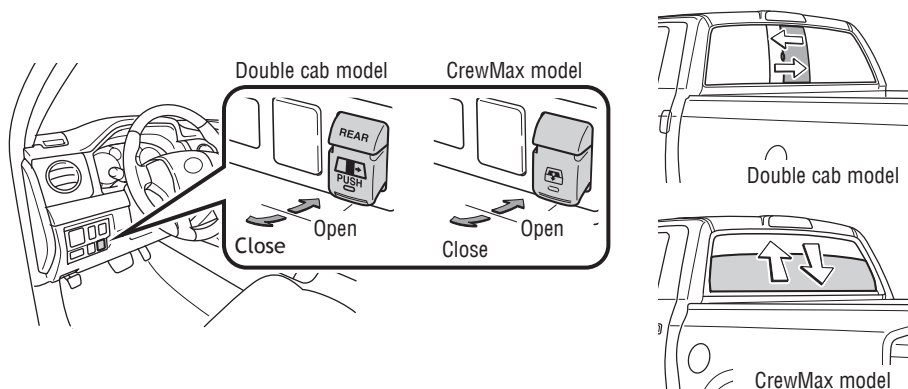


OVERVIEW

Moon roof (if equipped)

SLIDING OPERATION


TILTING OPERATION

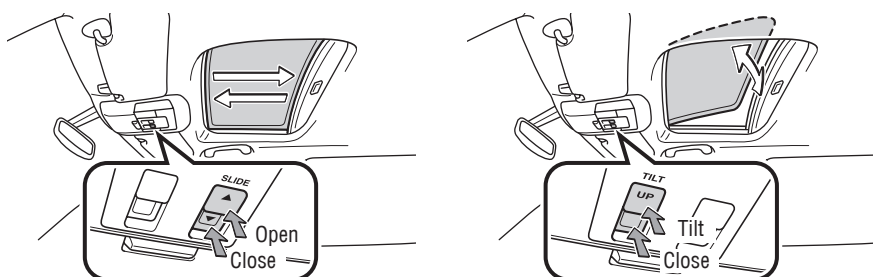

Push once to open/close completely. To stop partway, press the switch lightly.

Parking brake

BRAKE

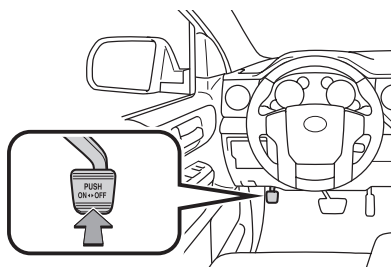

Set: Depress
Release: Depress again

FEATURES & OPERATIONS


SAFETY & EMERGENCY FEATURES

FEATURES & OPERATIONS


Seat adjustments-Front

MANUAL SEAT (IF EQUIPPED)


Separate seat

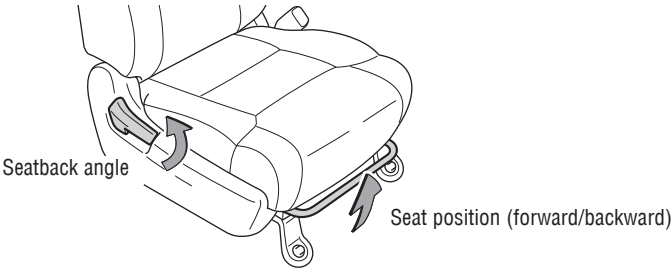


Bench seat

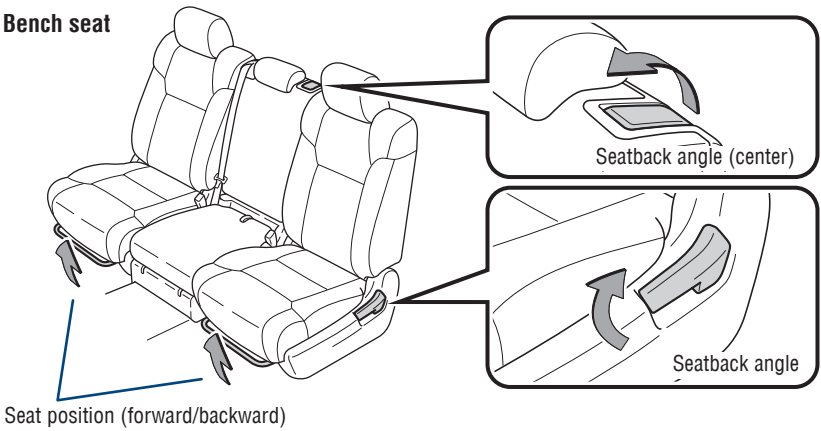


POWER DRIVER'S SEAT (IF EQUIPPED)

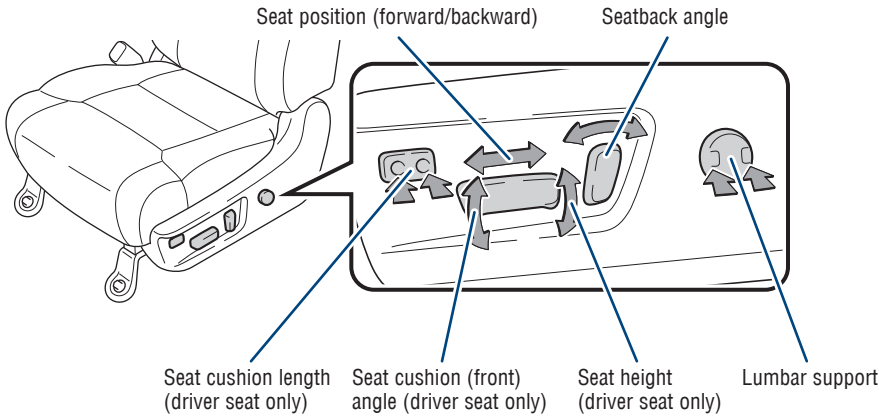

POWER PASSENGER'S SEAT (IF EQUIPPED)

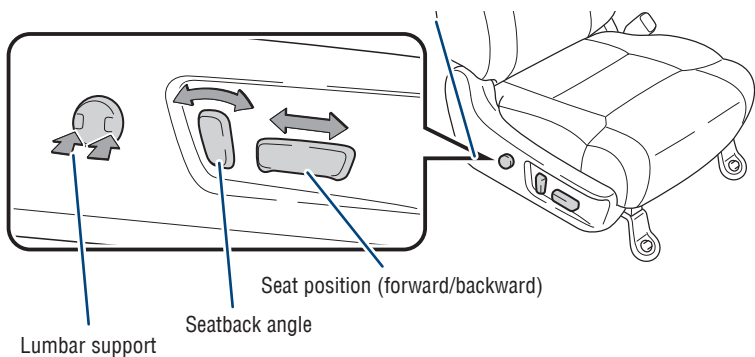


Rear seats-Folding (if equipped)

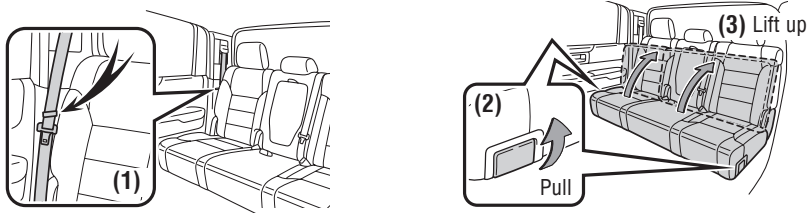


Seats-Head restraints


Front

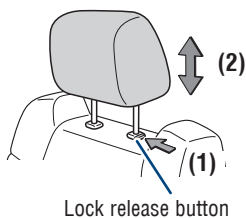


Rear-Center seat (Double Cab models)

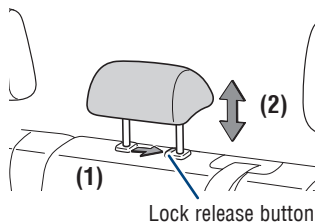

Rear-Center seat (CrewMax models)

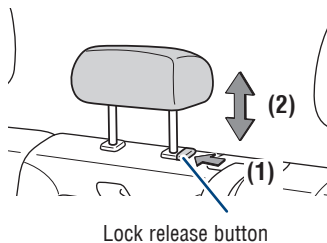

Rear-Outer seat

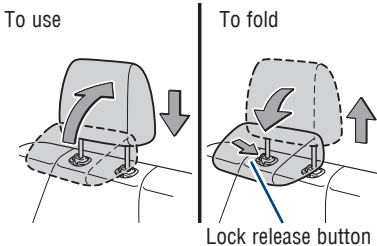

FEATURES & OPERATIONS

Air conditioning/heating

AUTOMATIC AIR CONDITIONING (IF EQUIPPED)


Automatic climate control ON

Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.

Windshield defogger (outside air only)

Rear view mirrors defogger*

Synchronize temperature settings for driver and passenger.

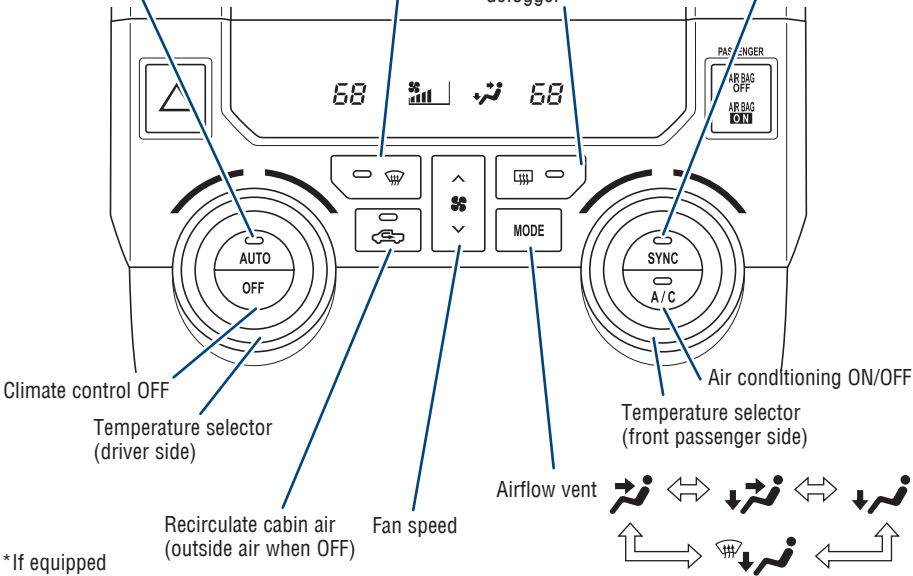


MANUAL AIR CONDITIONING (IF EQUIPPED)

Recirculate cabin air (fresh air when OFF)

Air Conditioning ON/OFF

Rear view mirrors defogger*

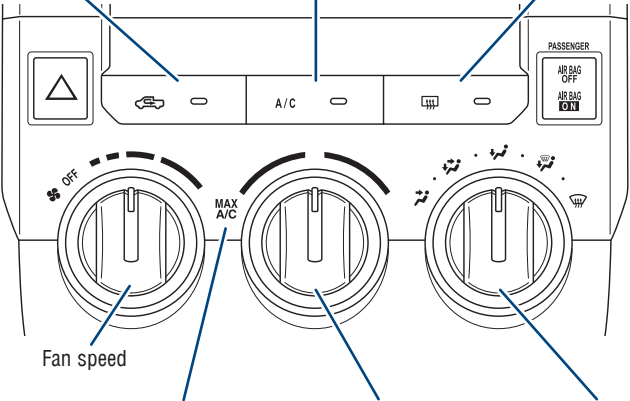


Select for maximum cooling. Air intake will automatically be set to recirculate.

*If equipped


Seat heaters & ventilators

SEAT HEATERS (IF EQUIPPED)

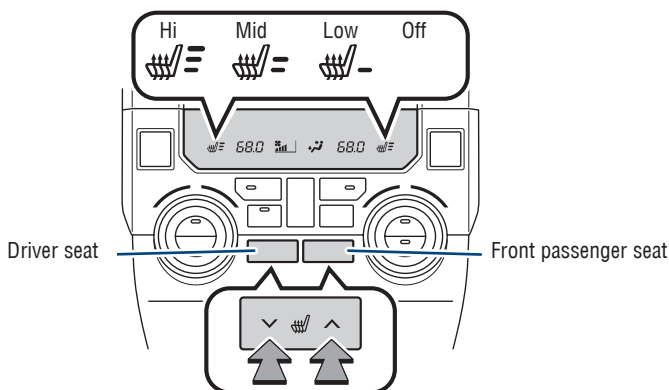


SEAT HEATERS & VENTILATORS (IF EQUIPPED)



Seat heaters

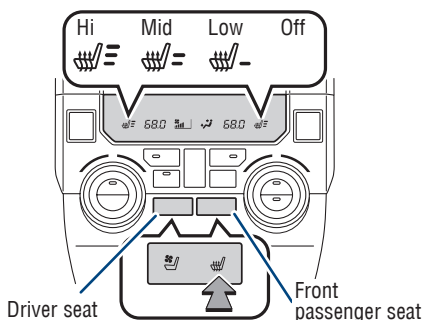

Seat ventilators

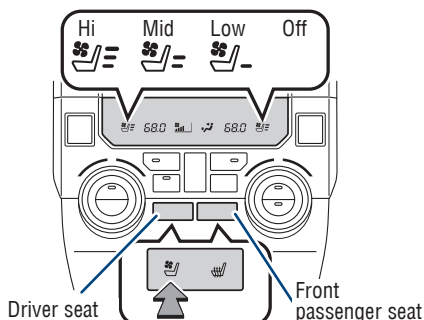

Rear view monitor system

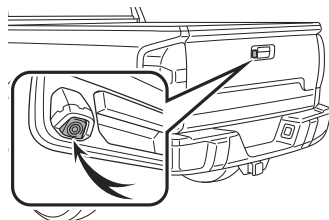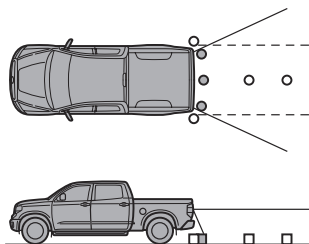

The rear view monitor system displays an image of the view from the bumper of the rear area of the vehicle. The camera for the rear view monitor system is located above the license plate.


To adjust the image on the rear view monitor screen, press the “SETUP” button and select “Display” on the “Setup” screen. Select “Camera” to adjust the screen contrast and brightness.

Refer to the Owner's Manual for limitations and more details on this system.


FEATURES & OPERATIONS

Audio

Entune™ Audio

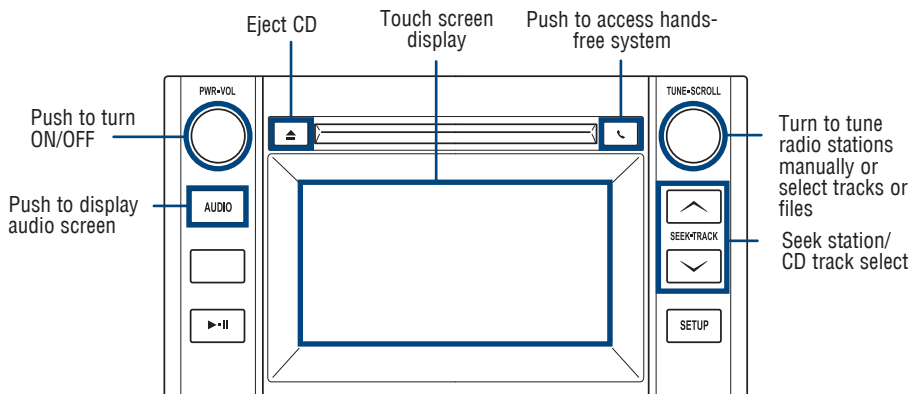

Entune™ Audio Plus with Connected Navigation App/ Entune™ Premium (JBL®*) Audio with Integrated Navigation and App Suite

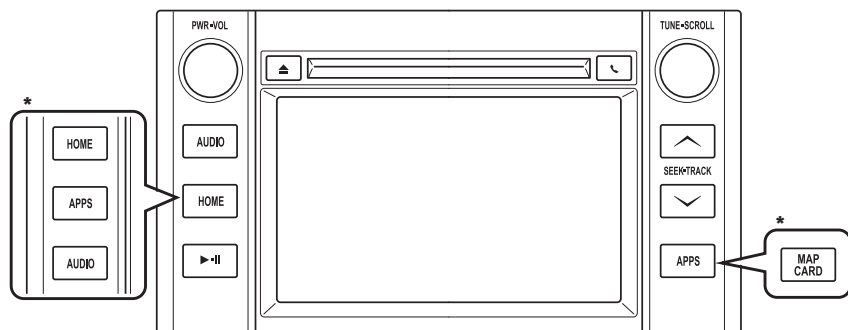

Refer to the "Navigation System Owner's Manual" and "2017 Entune™ Audio Quick Reference Guide" for instructions.

* Entune™ Premium (JBL®) Audio


STEERING WHEEL SWITCHES


"▲ ▼" "◀ ▶"

Use to search within the selected audio medium (radio, CD, etc.).

"MODE"

Push to turn audio ON and select an audio mode. Push and hold to pause the music or mute.

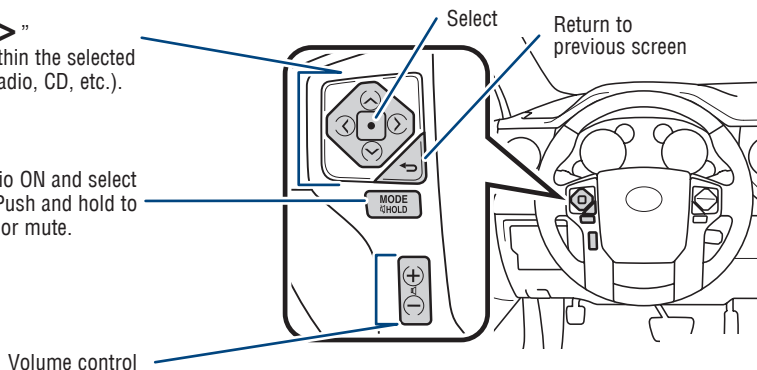

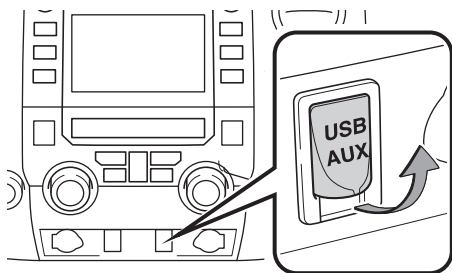


USB port

By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system.

AUX port

By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

Multi-Information Display (MID)

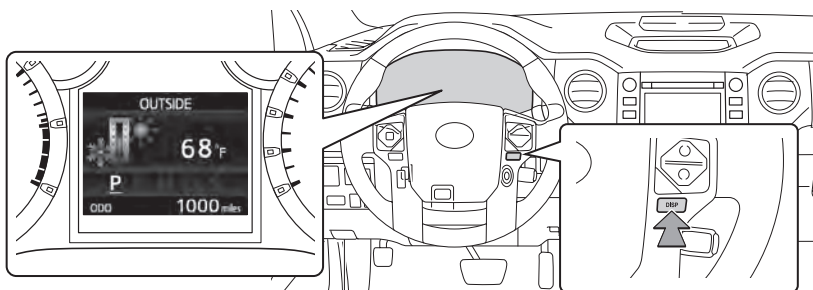

Push “DISP” to scroll through the following:

- (1) Trip information
- (2) Shift position and shift range
- (3) Odometer and trip meter display
- (4) Turn-by-turn navigation (vehicles with navigation system)
- (5) Intuitive parking assist display
- (6) Warning messages

* Push and hold display button to reset.


Refer to your Owner's Manual for complete details.

FEATURES & OPERATIONS


Power outlets-12V DC (if equipped)

SEPARATE SEATS


Instrument panel

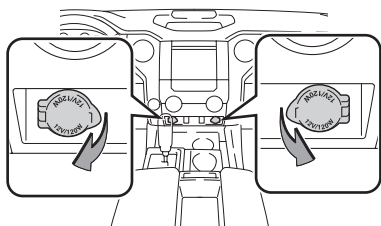


Inside of the console box

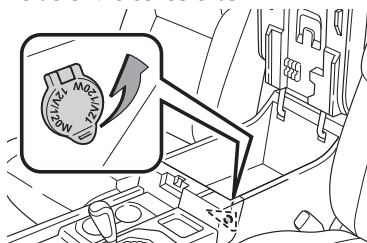

Back of the console box (Type A)

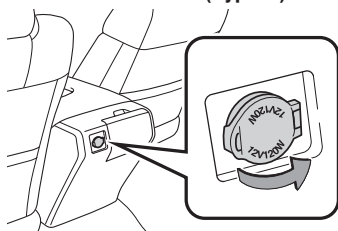


Back of the console box (Type B)

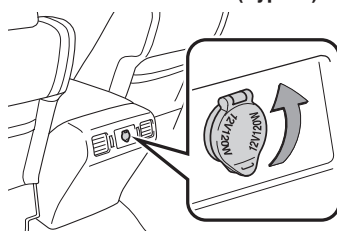


BENCH SEAT


Instrument panel

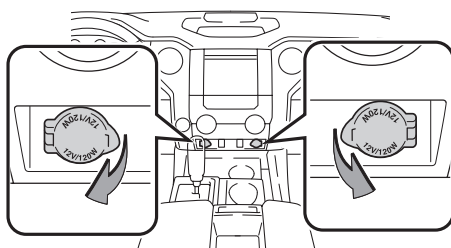

Back of the front center seat (Type A)

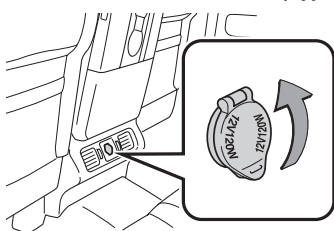


Back of the front center seat (Type B)

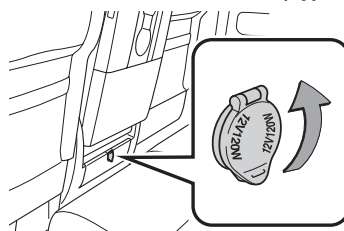


Key must be in the "ACC" or "ON" position to use.

Telephone controls (Bluetooth®)

Steering wheel telephone switches

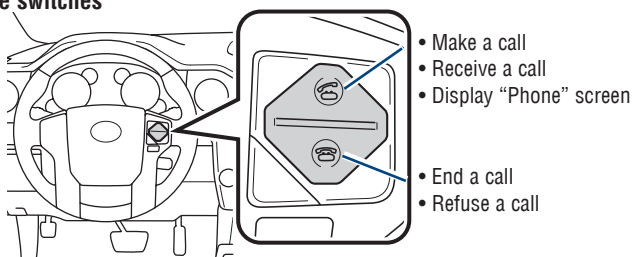

Microphone

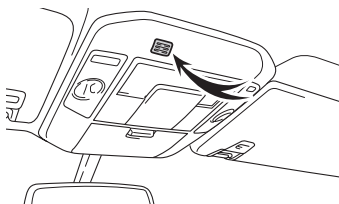


Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the telephone and the system.


Refer to "Using a Bluetooth® phone," Section 5-9 in the Owner's Manual, for more details.

Cruise control (if equipped)

TURNING SYSTEM ON/OFF

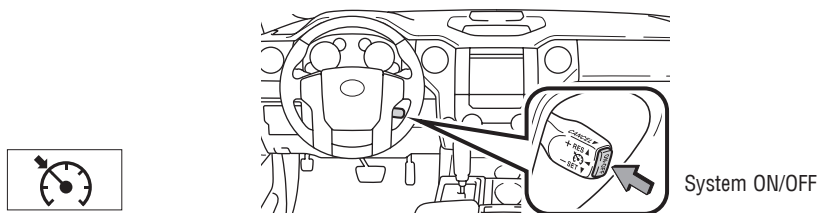

FUNCTIONS

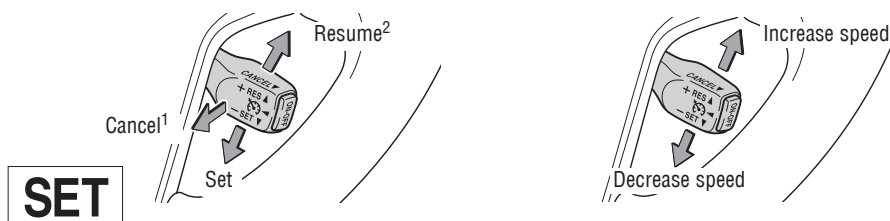


SET

¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed exceeds 25 mph.

FEATURES & OPERATIONS

Four-wheel drive (if equipped)

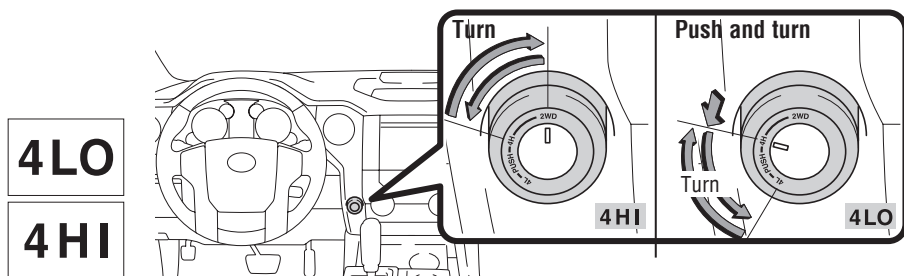

- | | |
|------------|---|
| 2WD | High speed (2WD) Normal driving on dry hard-surfaced roads. |
| 4H | High speed (4WD) For driving only on roads that permit the tires to slide, like off-road, icy or snow-covered roads. |
| 4L | Low speed (4WD)
For maximum power and traction when climbing or descending steep hills, off-road driving, and hard pulling in sand, mud or deep snow. |

Shifting between “2WD” and “4H”


Reduce speed to less than 62 mph, then turn control to “2WD” or “4H.”

Shifting between “4H” and “4L”

Shift to “N” position when stopped, then turn to “4L” from “4H.”

NOTE: For best fuel economy and performance under normal driving conditions, keep in “2WD” position.

Trailer brake controller (if equipped)

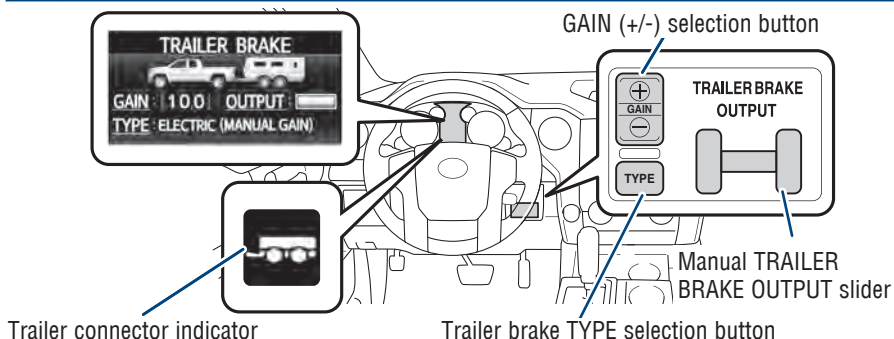


The trailer brakes can be controlled by the Trailer brake controller via the 7-pin connector. By selecting the type of brakes that are being used on the trailer (electric or electric-over-hydraulic) and setting the gain for the controller, the manual TRAILER BRAKE OUTPUT slider is used to slow just the trailer. The vehicle brake pedal will also slow down as well as stop the trailer when applied. Gain values, manual brake outputs, trailer brake types and the trailer connection status are displayed in the multi-information display.

For more information, please refer to the Owner's Manual.


TOW/HAUL switch (if equipped)

Floor shift type

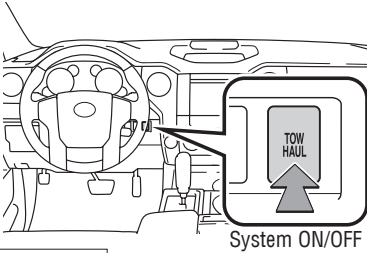

**TOW
HAUL**

Column shift type

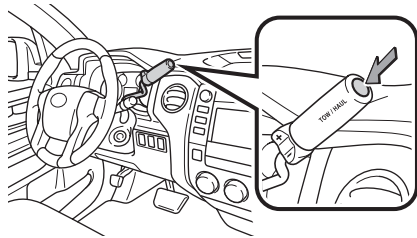

**TOW
HAUL**

"Tow/Haul" mode is ideal for use when carrying heavy loads. When the TOW/HAUL switch is pressed, throttle response and transmission control are optimized for the high performance operation. As fuel economy is reduced while in "Tow/Haul" mode, deactivating when driving without a load is recommended.

ENGINE CONTROL

When Tow/Haul is engaged, the opening angle of the electronically controlled throttle is wider for any given accelerator pedal position than normal, enhancing acceleration feeling and response.

ENHANCED SHIFT CONTROL

- Upshifts occur at higher engine speeds to expand the use of lower gear ranges, enhancing power performance during towing and preventing repeated gear changes.
- Downshifts occur at a greater accelerator pedal angle to allow the vehicle to stay in a higher gear, reducing repeated gear changes.
- Downshifts occur at a lower accelerator pedal angle to allow the vehicle to stay in a lower gear, enhancing towing ability.
- When the accelerator pedal is wide open, upshift timing is optimized to effectively use the maximum engine power range available.


UPHILL/DOWNHILL SHIFT FEATURES

- During uphill driving, the gear position is held to prevent repeated upshifting.
- During downhill driving, downshifting to lower gears will occur to effectively use engine braking.

Refer to the Owner's Manual for more details on this system before attempting to use it.

FEATURES & OPERATIONS


VSC OFF switch

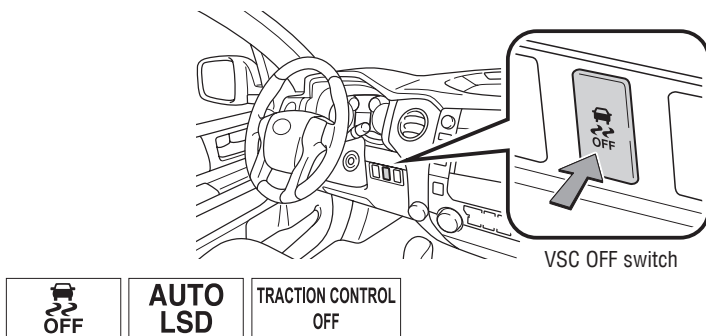

The VSC OFF switch is used to switch between modes related to the TRAC, VSC and Auto LSD functions.

Refer to Section 4-5 of the Owner's Manual for more information.

Blind Spot Monitor (BSM) with Rear Cross Traffic Alert (RCTA) (if equipped)

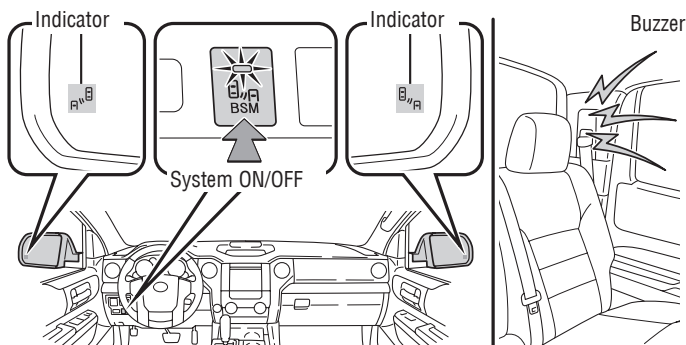



The BSM is a system that has two functions:

- **The Blind Spot Monitor function** (assists the driver in decision making when changing lanes)
- **The Rear Cross Traffic Alert function** (assists the driver when backing up)

The system uses radar sensors to detect vehicles that are traveling in the Tundra's blind spot and advises the driver of the vehicles' existence via the outside rearview mirror indicator.

Refer to the Owner's Manual for limitations and more details on this system before attempting to use it.

Parking assist sonar (if equipped)

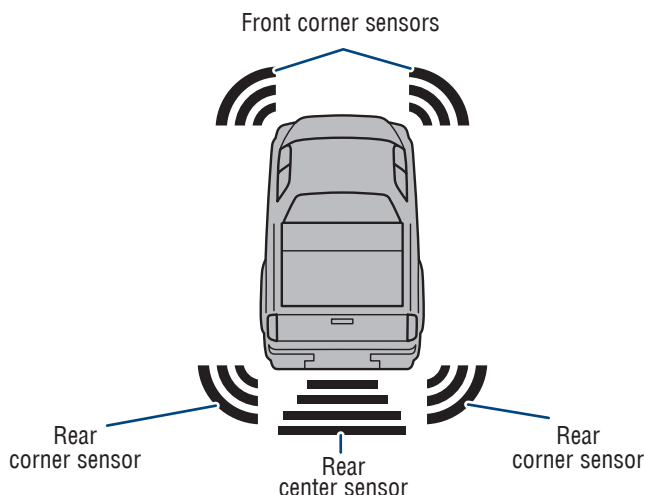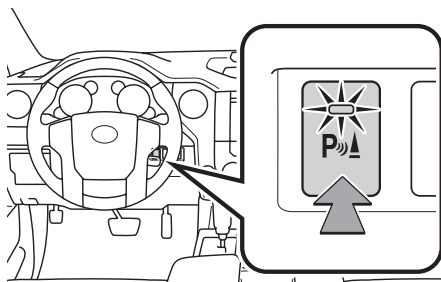

The parking assist sonar system operates when the vehicle approaches an obstacle. The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by sensors and communicated via the Multi-Information Display (MID) and audible beeps.


When the sensor detects an obstacle, the direction of and the approximate distance to the obstacle are displayed on the MID display by illuminating continuously (far) or blinking (near), and beeping sounds will switch from intermittent to continuous as you approach and get closer to a detected obstacle. When the sensors detect two or more obstacles, the audible alerts will respond to the nearest zone.

Always check the surrounding area when using this system.

Refer to section *Intuitive parking assist* in the *Owner's Manual* for more details.

FEATURES & OPERATIONS

Garage door opener (HomeLink®)* (if equipped)



Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.


Refer to "Garage door opener," Section 6-4 in the Owner's Manual for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.

* HomeLink® is a registered trademark of Johnson Controls, Inc.

Bottle holders

Front door

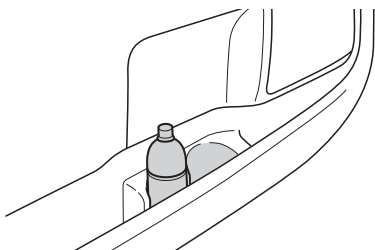

Rear door (CrewMax models)




SAFETY & EMERGENCY FEATURES

Cup holders


SEPARATE SEAT

Center console

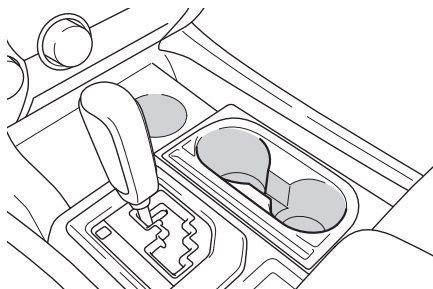


BENCH SEAT


Front center seat

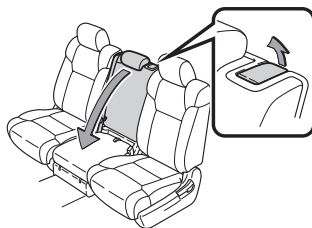

Back of the center console box (double cab model)

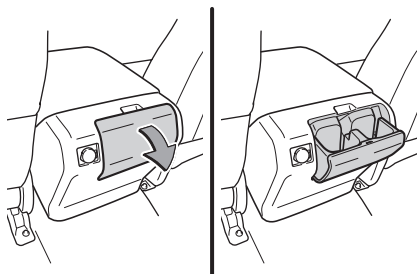


Back of the front center seatback (double cab model)

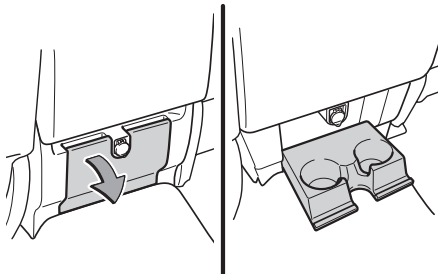

REAR SEAT

CrewMax model

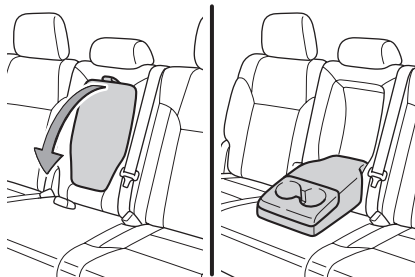

SAFETY & EMERGENCY FEATURES

Seat belts





NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic locking retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the Owner's Manual.


Seat belts-Shoulder belt anchor

(CrewMax & double cab models)

Push up, or squeeze
lock release to lower

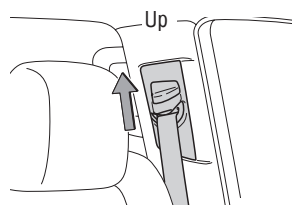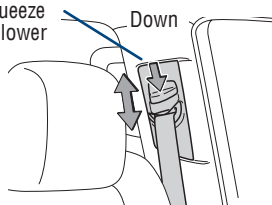

Tire Pressure Monitoring (warning) System (TPMS)

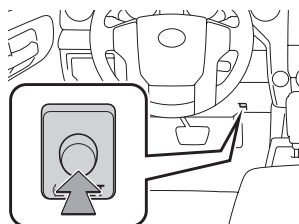

System reset initialization

1. Push and hold "SET" button until the indicator blinks three times.
2. Wait several minutes to allow initialization to complete.

After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to "ON" and press and hold the "SET" button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

Refer to the load label on the door jamb or the Owner's Manual for tire inflation specifications.


If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

Doors-Child safety locks

CrewMax & double cab models


Rear door

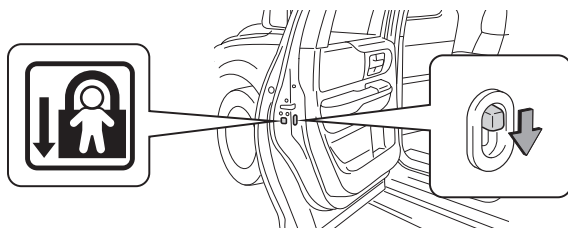


Spare tire & tools

TOOL LOCATION


Regular cab models
(behind the right seatback)

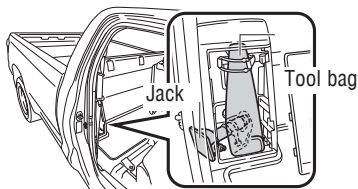


CrewMax models
(behind the right rear seatback)

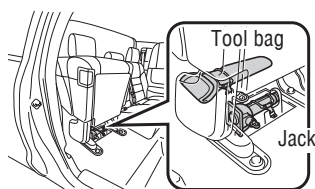

Double cab models
(under the right rear seats
without storage box)

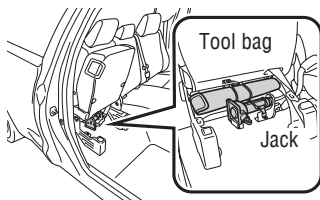


Double cab models
(under the right rear seats with storage box)

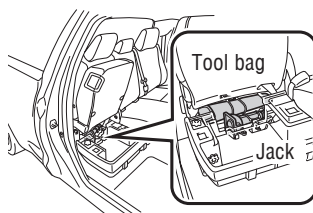


REMOVING THE SPARE TIRE


(1)

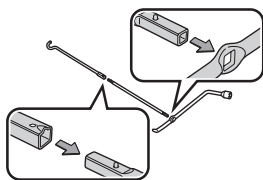

(2)

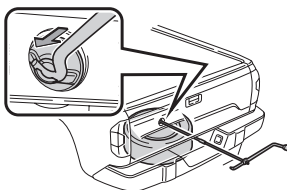

(3)

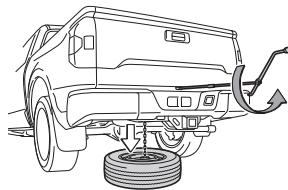

(1) Assemble the jack handle.

(2) Insert the jack handle end into the lowering screw.

(3) Turn the jack handle counterclockwise.

Refer to the Owner's Manual for tire changing and jack positioning procedures.

SAFETY & EMERGENCY FEATURES

Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

Refer to the Owner's Manual for more details and important information on limitations to these systems.

VEHICLE STABILITY CONTROL (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

TRACTION CONTROL (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

ANTI-LOCK BRAKE SYSTEM (ABS)

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

BRAKE ASSIST (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

SMART STOP TECHNOLOGY (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

Trailer Sway Control

Trailer sway may occur when towing a trailer due to strong crosswinds, uneven and/or winding road conditions or the driver's steering input.


Trailer Sway Control uses sensors to detect trailer sway and then simultaneously and automatically helps to suppress the swaying motion of the trailer by integrating brake and engine torque control to reduce speed and to help quickly control the swaying motion of the trailer.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use Toyota floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

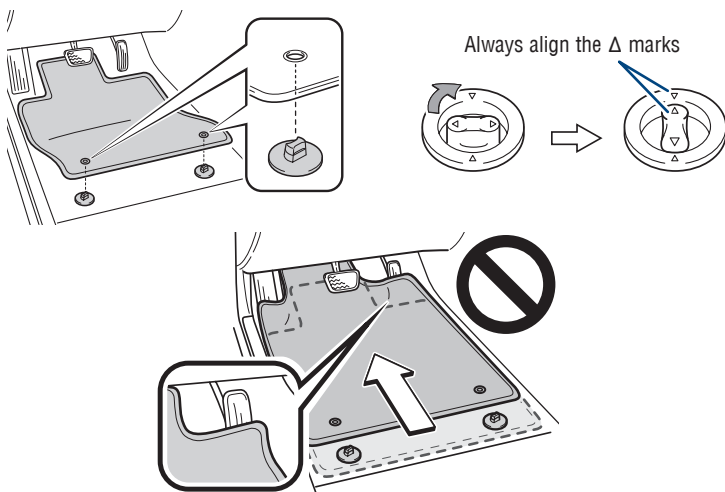

BLUETOOTH® DEVICE PAIRING SECTION


Do not attempt the Bluetooth® Pairing process while driving.

To begin the Bluetooth® Pairing process, press the HOME button on the faceplate of your Toyota Vehicle Entune™ Multimedia Head Unit.¹


Bluetooth® Pairing for Android phone and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Android mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.²

Initiate Bluetooth® on your Android®

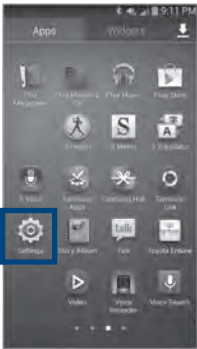


STEP 1
From your **APPS SCREEN**, select **SETTINGS**.

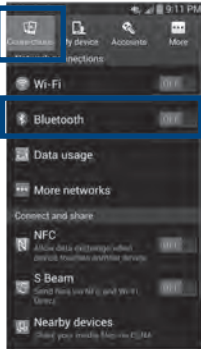

STEP 2
Select **CONNECTIONS** and select **BLUETOOTH**.



STEP 3
Ensure **BLUETOOTH** is **ON**.

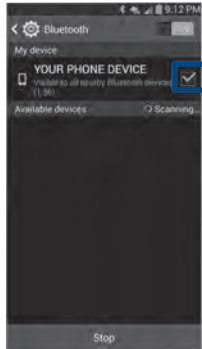

STEP 4
Select **YOUR PHONE DEVICE** to make it discoverable.

Phone will seek out Bluetooth devices while remaining discoverable.



STEP 5
While your Android device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

¹ To determine which head unit is installed in your vehicle, refer to the Audio section in this guide. Entune™ Premium Audio screens are shown in this section. Screens and features may vary by Entune™ system.

² Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

BLUETOOTH® DEVICE PAIRING

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



STEP 6


On your Toyota Vehicle Entune™ Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.



STEP 7


Select **BLUETOOTH**.

Image shown is a sample image, features may vary.

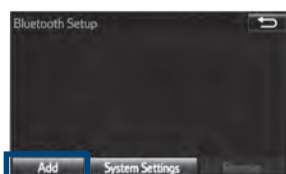

STEP 8

Select **ADD**, to add your phone device.

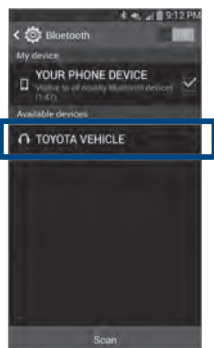

STEP 9

Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



STEP 10


Your smartphone is now paired with Entune.



STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

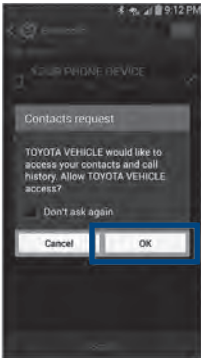

STEP 12

Using your smartphone, you will need to allow Entune access to your messaging and contacts.

It is recommended to check the “Don’t ask again” box, so as not to have to press OK every time the phone makes a Bluetooth connection with your Toyota.



STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you’re having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner’s Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

Bluetooth® Pairing for iPhone and Entune™ touch screen system

****Do not attempt the Bluetooth® Pairing process while driving.****


Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all iPhone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

Initiate Bluetooth® on your iPhone®



STEP 1

From the **HOME SCREEN**, select **SETTINGS**.

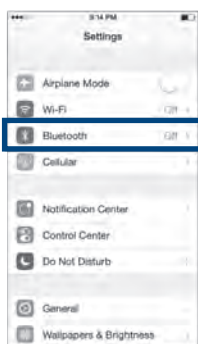


STEP 2

Select **BLUETOOTH**.



STEP 3

Ensure **BLUETOOTH** is **ON**.

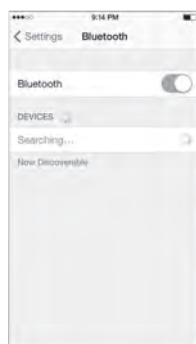

STEP 4

Your iPhone will seek out Bluetooth devices while remaining discoverable.



STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.

For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.



STEP 7

Select **BLUETOOTH**.

Image shown is a sample image, features may vary.



STEP 8

Select **ADD**, to add your phone device.



STEP 9

Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



STEP 10


Your smartphone is now paired with Entune.



STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

BLUETOOTH® DEVICE PAIRING

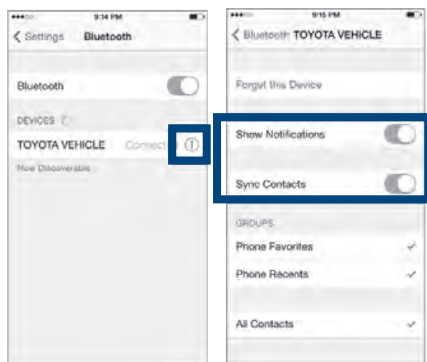

STEP 12

Using your smartphone, you may need to allow Entune access to your messaging and contacts.

Only current iPhone text messages can be viewed on the head unit. iPhone does not allow text message reply.



STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.


1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

Bluetooth® Pairing for Windows Phone and Entune™ touch screen system

****Do not attempt the Bluetooth® Pairing process while driving.****

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Windows Phone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

Initiate Bluetooth® on your Windows Phone®

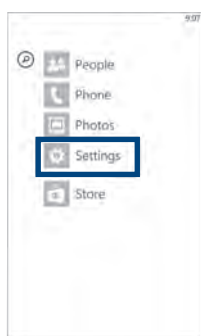

STEP 1

From your APP LIST, select **SETTINGS**.



STEP 2

Select **BLUETOOTH**.



STEP 3

Ensure **BLUETOOTH** is **ON**.



STEP 4

Phone will seek out Bluetooth devices while remaining discoverable.



STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

BLUETOOTH® DEVICE PAIRING

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth® enabled on your phone and ready to pair, you will need to initiate Bluetooth® on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.


For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.



STEP 7

Select **BLUETOOTH**.

Image shown is a sample image, features may vary.

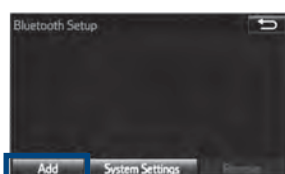

STEP 8


Select **ADD**, to add your phone device.



STEP 9

Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.

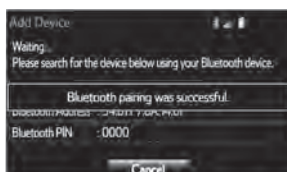

STEP 10


Your smartphone is now paired with Entune.



STEP 11


Once paired, Entune will attempt to connect audio and contacts on your phone.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

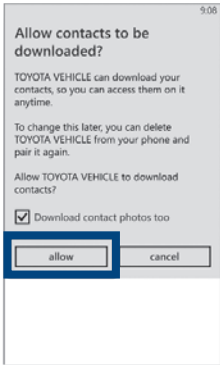

STEP 12

Using your smartphone, you may need to allow Entune access to your contacts.

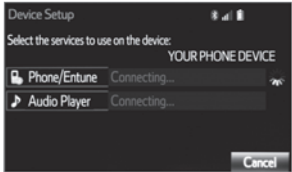

STEP 13

A confirmation will appear that your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.



CUSTOMER EXPERIENCE CENTER

1-800-331-4331



Printed in U.S.A. 9/16

16-MKG-09519



00505QRG17TUN