

SIENNA

2 0 1 8



QUICK REFERENCE GUIDE

2018

SIENNA

This Quick Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Quick Reference Guide is not intended as a substitute for the Owner's Manual located in your vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor North America, Inc. wish you many years of satisfied driving in your new Sienna.



A word about safe vehicle operations

This Quick Reference Guide is not a full description of Sienna operations. Every Sienna owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the Owner's Manual. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this Quick Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

OVERVIEW

Engine maintenance	9
Fuel tank door release and cap	8
Hood release	8
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Instrument panel light control	9
Keyless (and remote) entry ¹	6-7
Smart Key system ^{1,2}	7

FEATURES & OPERATIONS

Air conditioning/heating	25
Audio	22
AUTO ACCESS SEAT	29-30
Auto lock/unlock ²	10
Automatic transmission	10
Bird's Eye View Camera	
with Perimeter Scan Function	27
Blind Spot Monitor (BSM)	20
Bottle holders	26
Cup holders	13
Door locks	10
Doors-Power sliding	17
Driver Easy Speak	20
Enhanced VSC OFF button	28
Garage door	
opener (HomeLink®) ^{2,3}	23
Hill-start Assist Control (HAC)	27
Lights ¹ & turn signals	11-12
Moonroof	19
Parking brake	11
Power back door	18
Power outlets-12V DC	21
Power outlets-120V AC	21
Rear seat entertainment system	28
Rear view monitor system	26
Seat adjustments-Front	14
Seat adjustments-Rear	14
Seat heaters	26
Seats-Head restraints	17

FEATURES & OPERATIONS (continued)

Seats-Removing	
2nd row center seat	15
Seats-Removing	
2nd row outside seats	15
Seats-Stowing 3rd row seats	16
Steering lock release	30
Steering wheel switches	
& telephone controls (Bluetooth®)	24
Sunshade-Side	19
Tilt & telescopic steering wheel	20
USB charging ports	23
Windows-Power	18
Windows-Quarter	19
Windshield wipers & washers	12

TOYOTA SAFETY SENSE™ P (TSS-P)

Automatic High Beams (AHB)	40
Dynamic Radar	
Cruise Control (DRCC)	37-39
Lane Departure Alert with Steering	
Assist function (LDA w/SA)	34-36
Pre-Collision System with Pedestrian	
Detection function (PCS w/PD)	32-34
Quick overview-	
Toyota Safety Sense™ P (TSS-P)	31
Sensors	31

SAFETY & EMERGENCY FEATURES

Child restraint anchors	41
Floor mat installation	45
Rear door child safety locks	41
Seat belts	42
Seat belts-Shoulder belt anchor	41
Spare tire & tools	43
Star Safety System™	44-45
Tire Pressure Monitoring	
(warning) System (TPMS)	42

BLUETOOTH® DEVICE
PAIRING SECTION

46-48

¹ Visit your Toyota dealer for information on customizing this feature.
² Programmable by customer. Refer to the Owner's Manual for instructions and more information.
³ HomeLink® is a registered trademark of Gentex Corporation.

Instrument panel

Audio control switches²

Voice command switch²

Meter control switches

Dynamic Radar Cruise Control (DRCC) vehicle-to-vehicle distance button

Lane Departure Alert (LDA) switch

Dynamic Radar Cruise control switch

Telephone switches²

Steering wheel controls

Headlight, turn signal and front fog light¹ controls

Gauges and meters

Wiper and washer controls

"ENGINE START STOP" button (Smart Key)¹

Manual headlight leveling dial¹

Heated steering wheel switch¹

Bird's Eye View Camera ON/OFF switch^{1,2}

Power quarter window switch¹

Enhanced VSC OFF switch

Intuitive parking assist switch¹

Power sliding door¹ / Power back door main switch¹

Fuel tank door release lever

Hood lock release lever


Ignition switch¹

Tilt & telescopic steering lock release lever


Tire pressure warning reset switch

¹ If equipped

² For details, refer to the “Navigation System Owner’s Manual” and “2018 Entune™ 3.0 Audio Quick Reference Guide.”

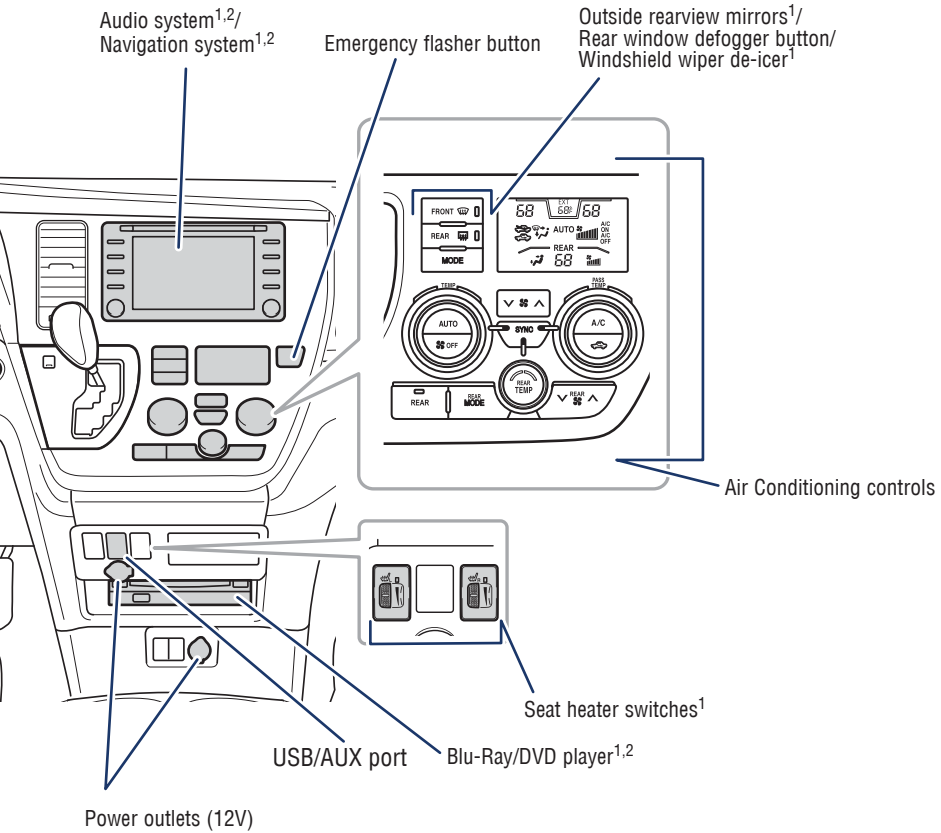

Instrument cluster

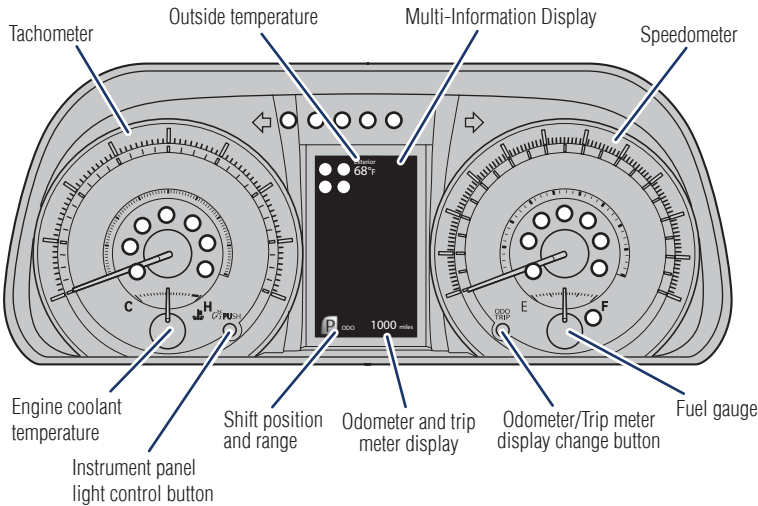

○ Service indicators and reminders

Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, 2018 Owner's Manual.



Airbag SRS warning¹



AIR BAG ON/OFF indicator



Anti-lock Brake System (ABS) warning¹



Arrow direction indicates fuel tank door position



Automatic High Beam (AHB) indicator



Blind Spot Monitor (BSM) indicator³



Blind Spot Monitor (BSM) outside rearview mirror indicators³



Brake Override System warning



Brake system warning¹



Charging system warning¹



Constant speed cruise control indicator²/Constant speed cruise control SET indicator²



Driver and/or front passenger seat belt reminder (alarm will sound if speed is over 12 mph)



Dynamic Radar Cruise Control (DRCC) indicator²/DRCC SET indicator²

 ECO Driving Indicator Light¹

 ECT PWR indicator

 Electric power steering system warning light¹

 Fog light indicator³

 Headlight low/high beam indicator

 High coolant temperature warning

 Lane Departure Alert (LDA) indicator

 Low engine oil level warning

 Low engine oil pressure warning¹

 Low fuel level warning light

 Low outside temperature indicator

 Low Tire Pressure Warning¹

 Low windshield washer fluid level warning

 Master warning light¹

 Malfunction/Check Engine indicator¹

 Pre-Collision System (PCS) warning¹

 Rear Cross Traffic Alert (RCTA) indicator³

 Security indicator

 Slip indicator/Hill-start Assist Control indicator^{1,5}

 Third seat fold incomplete warning³

 Turn signal indicator

 Vehicle Stability Control OFF indicator¹

¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

² If this light flashes, refer to "Dynamic Radar Cruise Control," Section 4-5, 2018 Owner's Manual.

³ If equipped.

OVERVIEW

Keyless (and remote) entry

UNLOCKING OPERATION

Type A



Type B



Type C



Push
ONCE: Driver door
TWICE: All doors

Carry remote Type C
Smart key feature

Front door unlock*



LOCKING OPERATION

Type A



Type B



Type C



Push

Carry remote Type C
Smart key feature


Front door lock




NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

POWER SLIDING DOOR OPERATION (IF EQUIPPED)

Type B

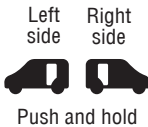


Type C

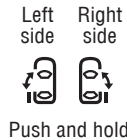


Carry remote Type C
Smart key feature

All-door lock

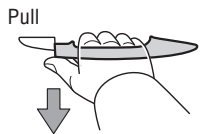

BACK DOOR LOCK/UNLOCK

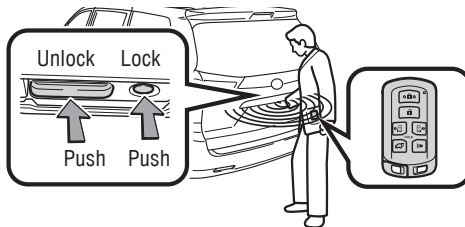

Carry remote Type C
Smart key feature

All-door unlock
and lock

* Driver door unlocking function can be programmed to unlock driver side doors only, or all doors. Grasping any passenger door handle will unlock all doors.

POWER BACK DOOR OPERATION (IF EQUIPPED)

Type B



Push and hold

Type C




Push and hold

PANIC BUTTON

**Smart Key system (if equipped)**

START FUNCTION

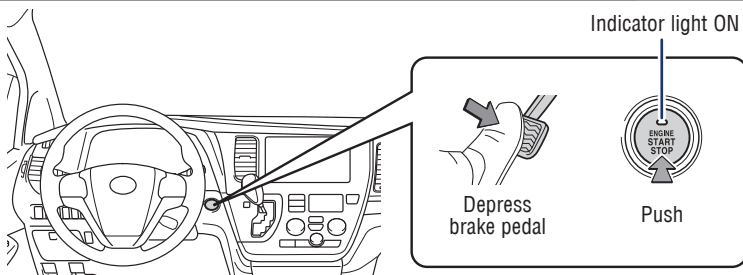**NOTE: Gear shift lever must be in Park and brake pedal depressed.**

POWER (WITHOUT STARTING ENGINE)

Without depressing the brake pedal, pressing the "ENGINE START STOP" switch will change the operation mode in succession from:

ACCESSORY

Accessories such as the radio will operate.




ON

Power ON; the engine is not running.

OFF



All systems OFF.

Fuel tank door release and cap

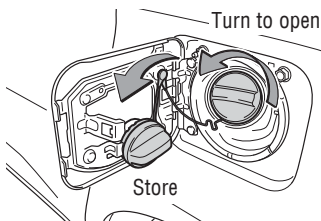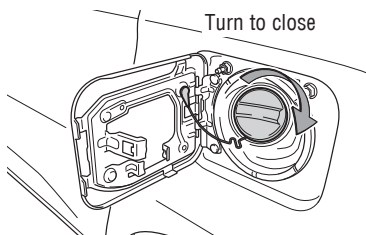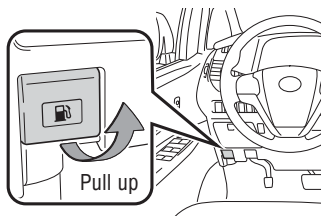


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.


Hood release

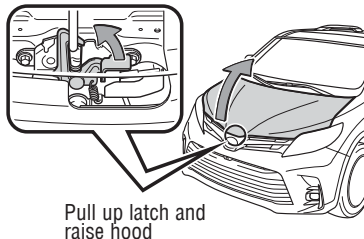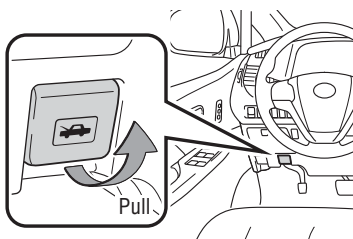

Insert rod to hold hood open

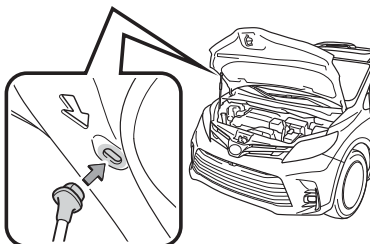


Instrument panel light control

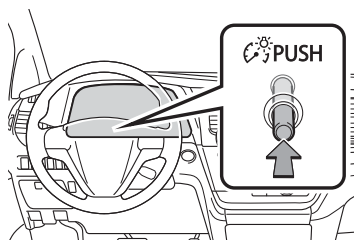

Pressing the button will adjust the brightness of the meter panel lights. The brightness level of the meters when the surroundings are bright (day mode) and dark (night mode) can be adjusted individually.

Engine maintenance

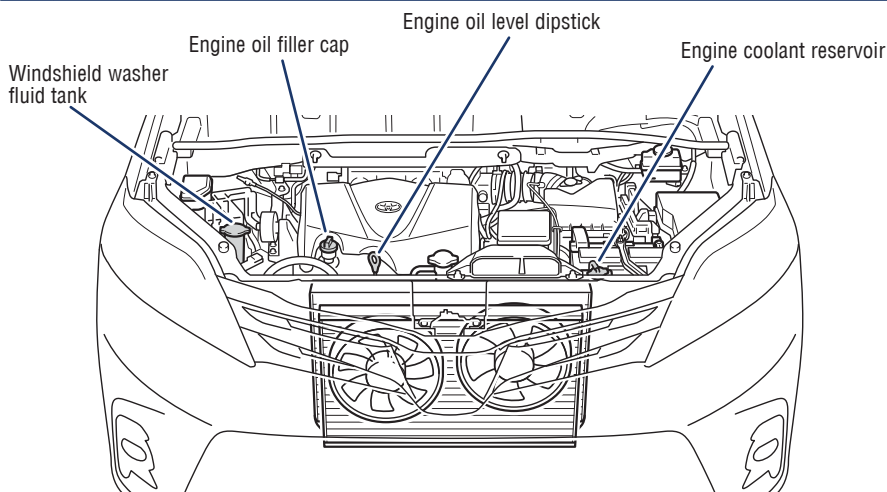

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Warranty & Maintenance Guide."

FEATURES & OPERATIONS


Auto lock/unlock

Automatic door locks can be programmed to operate in four different modes, or turned OFF.


- Doors lock when shifting from Park.
- Doors lock when the vehicle speed is approximately 12 mph or higher.
- Doors unlock when shifting into Park.
- Doors unlock when the driver's door is opened within 45 seconds after turning the "ENGINE START STOP" switch OFF. (Vehicles with a Smart Key system)
- Doors unlock when the driver's door is opened within 45 seconds after turning the ignition switch to the "ACC" or "LOCK" position. (Vehicles without a Smart Key system)

Refer to the Owner's Manual for more details.

Door locks

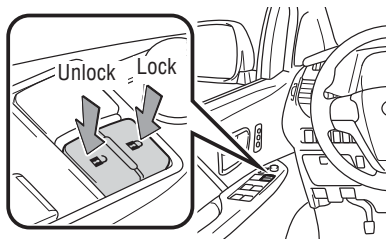

Automatic transmission

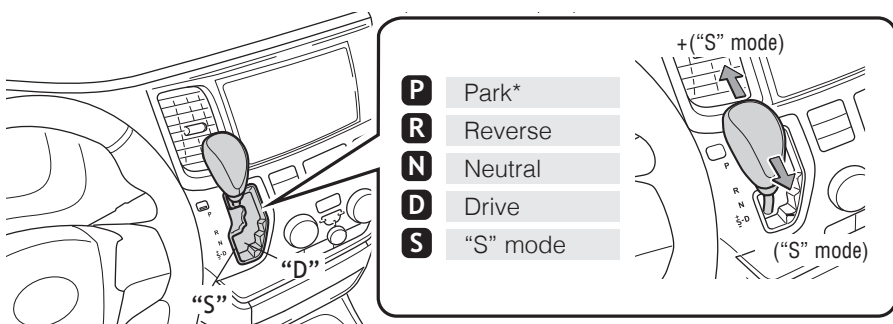

* The "ENGINE START STOP" switch/ignition switch must be "ON" and the brake pedal depressed to shift from Park.

"S" (SEQUENTIAL) MODE


Shift the shift lever to "S" position from "D" position.

- + : Upshift (push and release)
- : Downshift (pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

Parking brake


BRAKE

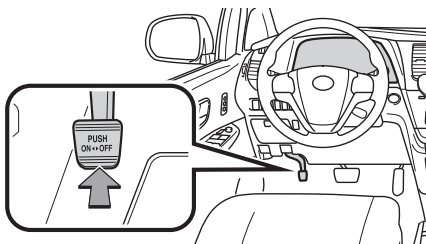

Set: Depress
Release: Depress again

Lights & turn signals

HEADLIGHTS

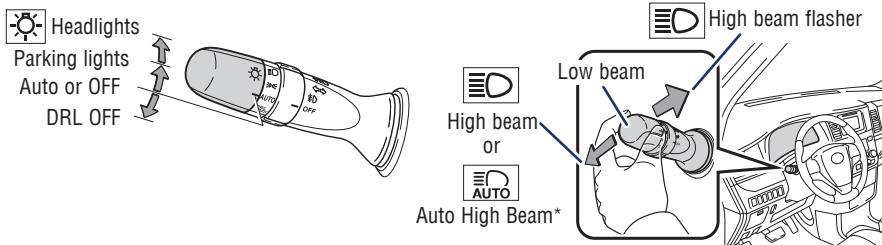


Daytime Running Light system (DRL) Automatically turns on the headlights at a reduced intensity on some models.

Automatic light cut off system Automatically turns lights off after a delay of 30 seconds, or the lock switch on remote may be pushed after locking.

Automatic High Beam (AHB) system Automatically switches between high and low beams as appropriate to provide the most light possible and enhance forward visibility. *Refer to Toyota Safety Sense™ P (TSS-P) in this guide or the Owner's Manual for more details on the Automatic High Beam feature.*

* Operating conditions must be met. Refer to Owner's Manual for details.

FRONT FOG LIGHTS (IF EQUIPPED)

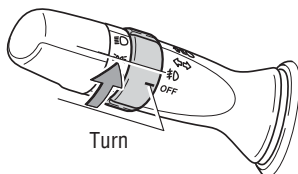


#0



Front fog lights come on only when the headlights are on low beam.

FEATURES & OPERATIONS

TURN SIGNALS

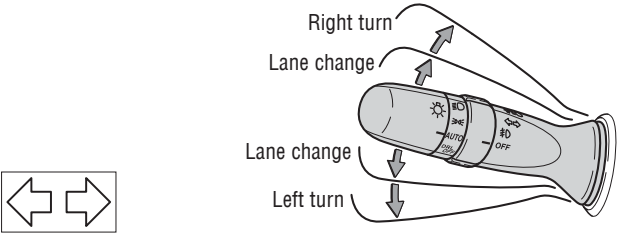

HEADLIGHT BEAM LEVEL CONTROL (IF EQUIPPED)

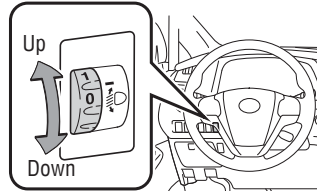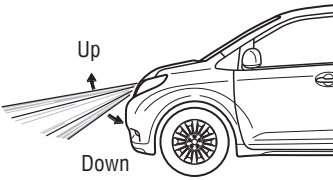


Rotating the dial downward will lower the angle of the beam.

Windshield wipers & washers


FRONT

Intermittent

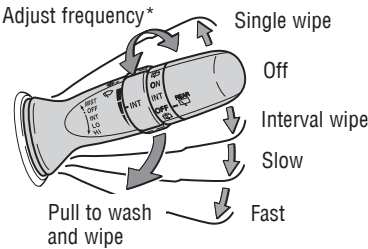


***Intermittent windshield wiper frequency adjustment** Rotate to increase/decrease wipe frequency.

Rain-sensing (if equipped)

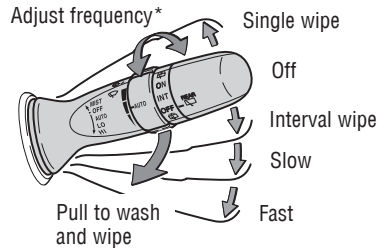


*** Rain-sensing windshield wiper** Rotate to increase/decrease sensor sensitivity.

REAR

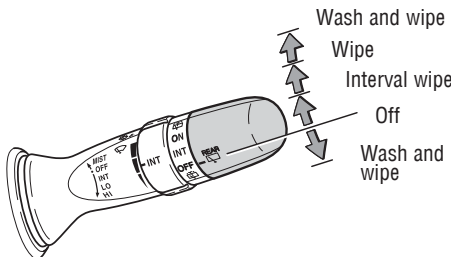


Cup holders

INSTRUMENT PANEL

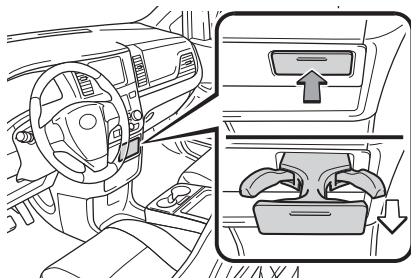


CONSOLE BOX (IF EQUIPPED)

Front

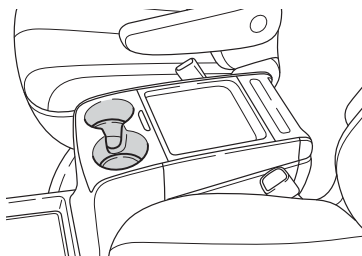


Rear


Type A

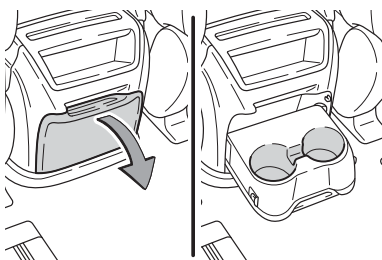


Type B

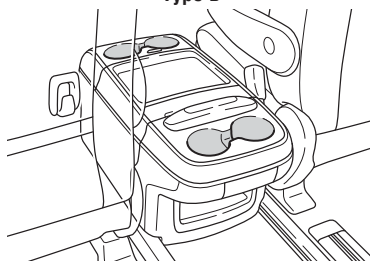

2ND CENTER SEAT (IF EQUIPPED)

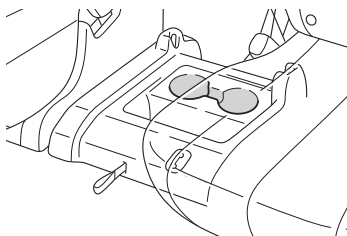


3RD ROW AREA

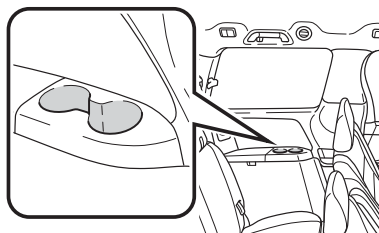


FEATURES & OPERATIONS

Seat adjustments-Front

MANUAL SEAT

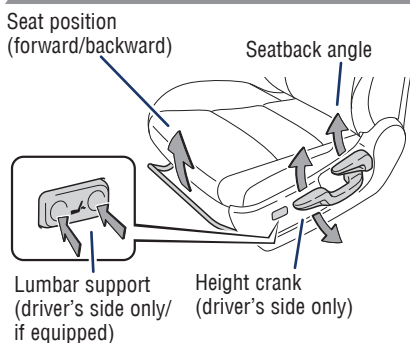


POWER SEAT

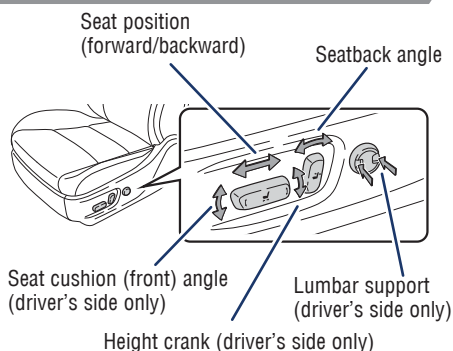


Seat adjustments-Rear

SECOND ROW SEAT


Tip-up seat (7-passenger models)

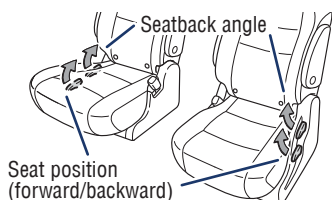

Tip-up seat (8-passenger models)

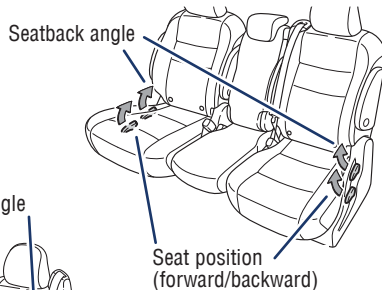


Ottoman seat

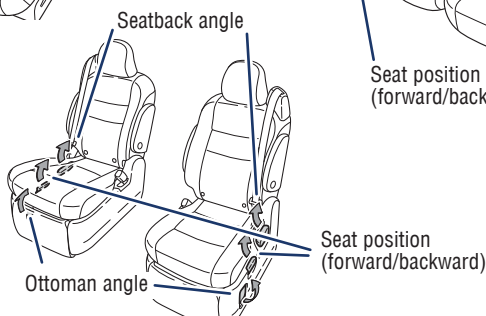


THIRD ROW SEAT

Manual

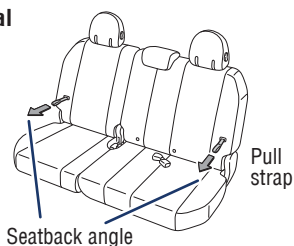


Power

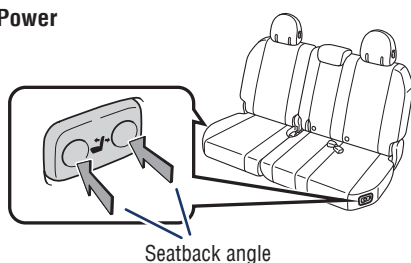


Refer to the Owner's Manual for more details.

Seats-Removing 2nd row outside seats


Tip-up seats

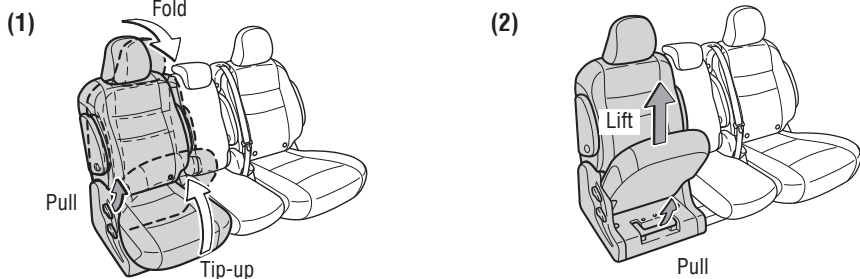

Ottoman seats

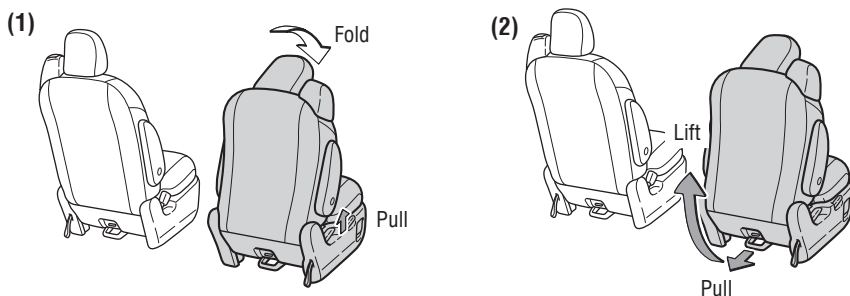


Seats-Removing 2nd row center seat (if equipped)

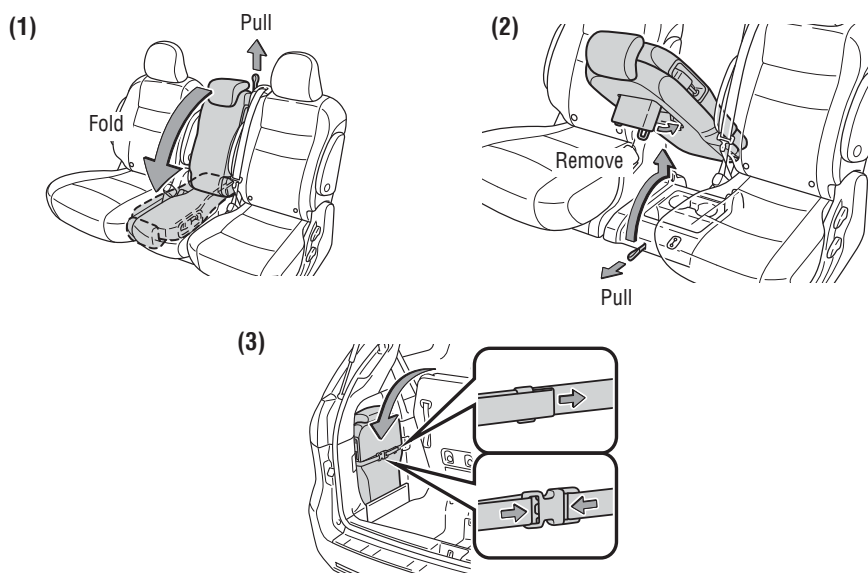


Seats-Stowing 3rd row seats

MANUAL

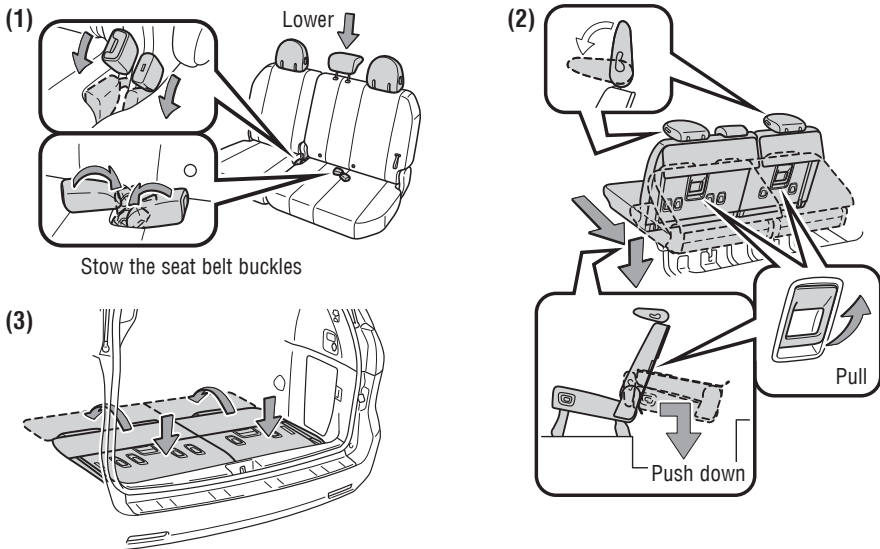

POWER

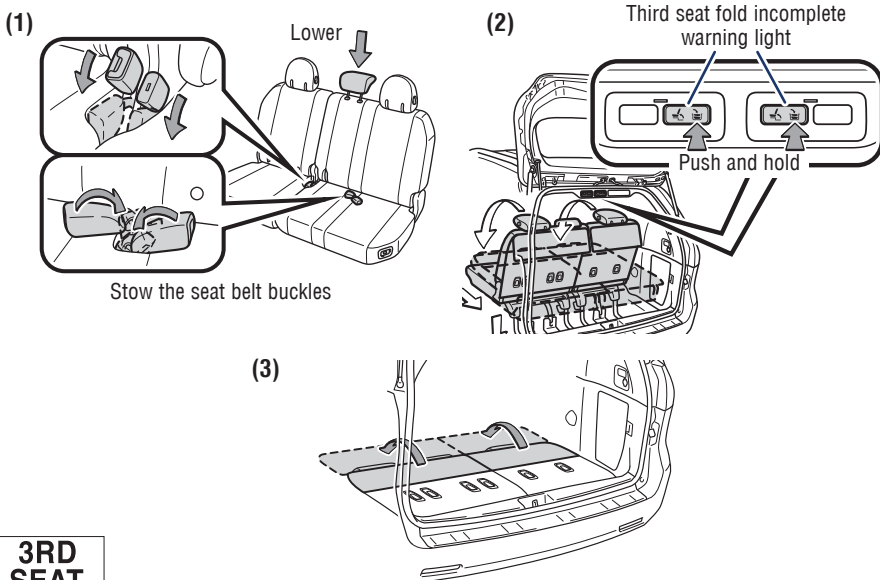


3RD SEAT

An alarm will sound for 10 seconds and the **3RD SEAT** indicator will light up on the instrument panel if the seat is not fully open or stowed when vehicle is shifted out of Park.


Refer to the Owner's Manual for more details.

Seats-Head restraints


Front and second row outside seats

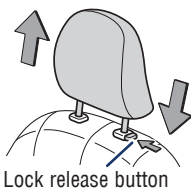

Second row center (8-passenger models) and third row center seats

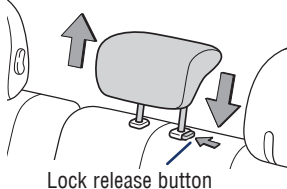


Third row outside seats

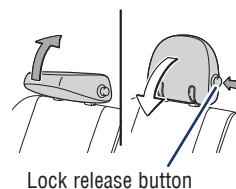

Doors-Power sliding (if equipped)


ON/OFF SWITCH

Instrument panel

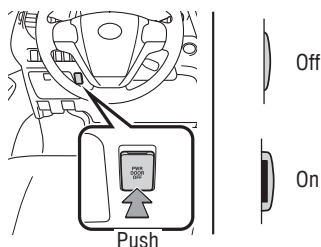


OPENING/CLOSING

Front overhead console

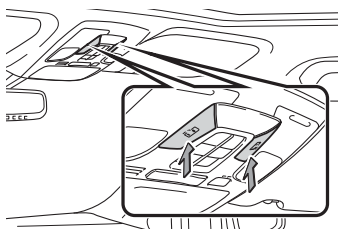

Open: Push and hold
Close: Push again

Center pillar

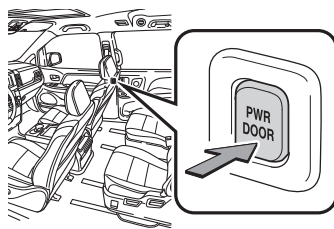

Open: Push and hold
Close: Push again

Power

- Sliding doors will not fully open if the sliding door window is open.
- Power sliding doors will open only when gear selector is in the "P" (Park) position, and doors are unlocked. *Refer to the Owner's Manual for more details.*
- An alarm will sound if a sliding door is open and the vehicle is shifted out of Park.
- Left sliding door will not open if gas door is open.
- If battery is disconnected, the power sliding doors need to be reinitialized.

Refer to the Owner's Manual for more details.

Manual


- Sliding doors will not lock into the open position if the sliding door window is open.

FEATURES & OPERATIONS

Power back door (if equipped)


ON/OFF SWITCH

Instrument panel

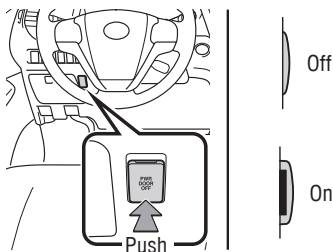


OPENING/CLOSING

Front overhead console

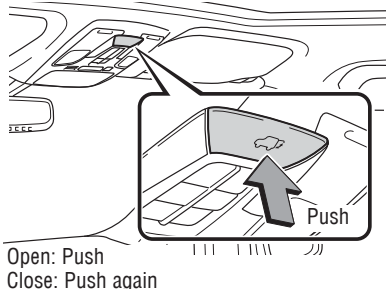


CLOSING

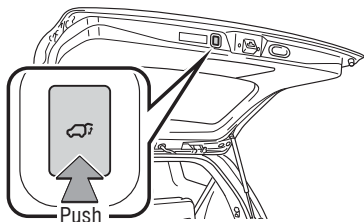


NOTE: If battery is disconnected, the power back door needs to be reinitialized. Refer to the Owner's Manual for more details.

Windows-Power

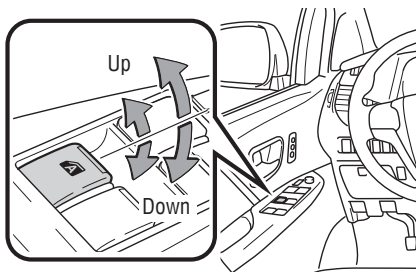

Window lock switch

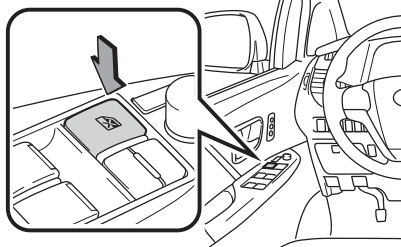


Automatic operation Push the switch completely down or pull it completely up and release to fully open or close. To stop window partway, lightly push the switch in the opposite direction.


Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Windows-Quarter

Manual

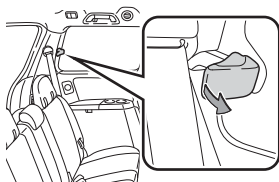


Power

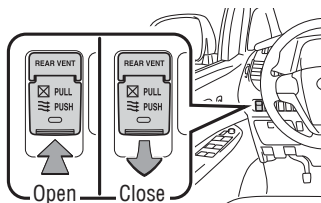

Moonroof (if equipped)


FRONT MOONROOF

Without a rear moonroof

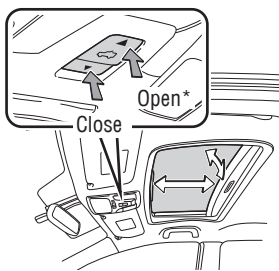


* Tilt: Push
Open: Push again

With a rear moonroof

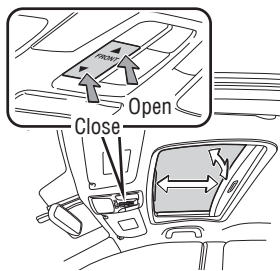


Push once to open partway;
again to open completely.

REAR MOONROOF (IF EQUIPPED)

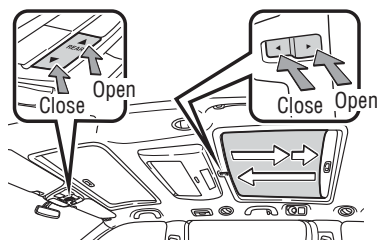


Sunshade-Side (if equipped)

Rear door window

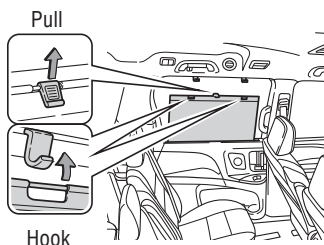

Rear quarter window

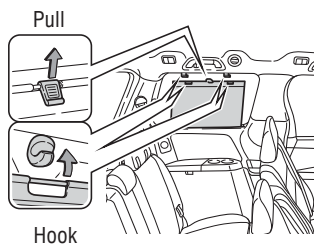


FEATURES & OPERATIONS

Driver Easy Speak (if equipped)

This feature utilizes the vehicle's built-in microphone to amplify the driver's voice through the rear speakers. To activate this feature, select "Driver Easy Speak" from the Apps screen on the audio unit. The feature must be turned on every time you enter the vehicle, and automatically turns off when any door (including the liftgate) is opened. There are 7 volume settings.

Blind Spot Monitor (BSM) (if equipped)

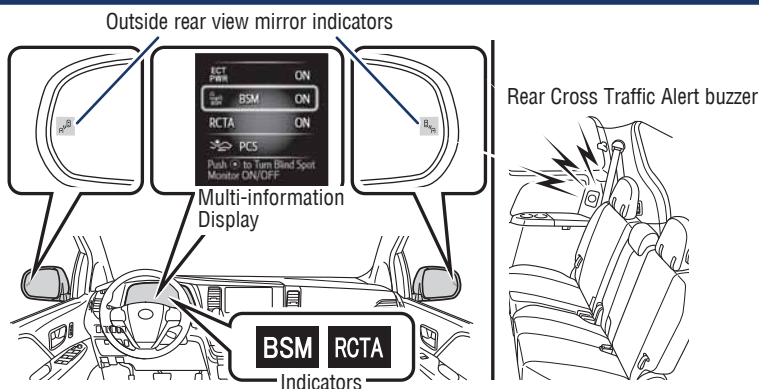

The Blind Spot Monitor is a system that has two functions:


- The Blind Spot Monitor function (assists the driver in decision-making when changing lanes)
- The Rear Cross Traffic Alert function (assists the driver when backing up)

The system is designed to use radar sensors to detect vehicles traveling in the Sienna's blind spot and advises the driver of the vehicles' presence via the outside rear view mirror indicators.

Refer to the Owner's Manual for limitations and more details on this system before attempting to use it.


Tilt and telescopic steering wheel

Lock release lever

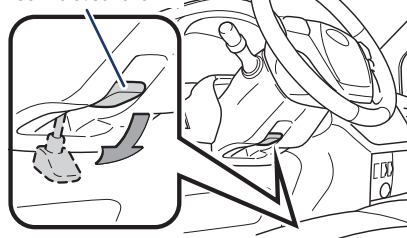

Angle

Length

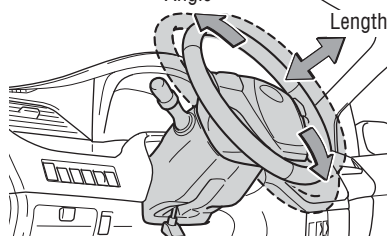


Hold wheel, push lever down, set angle and length, and return lever.

NOTE: Do not attempt to adjust while the vehicle is in motion.


Power outlets-12V DC

Instrument panel


Type A

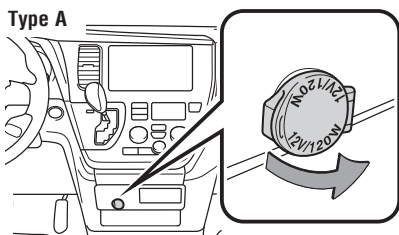

Type B

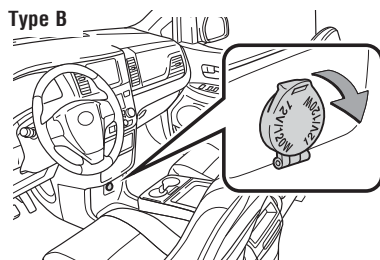

Luggage compartment

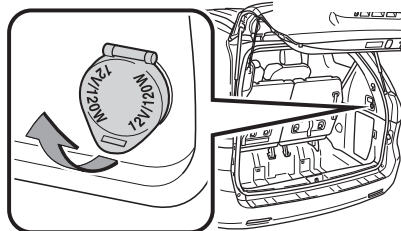


Ignition/"ENGINE START STOP" switch must be in "ACC" or "ON"/ACCESSORY or IGNITION ON position for use.


Power outlets-120V AC (if equipped)

Console box


Type A

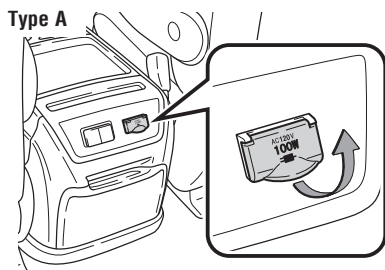

Type B

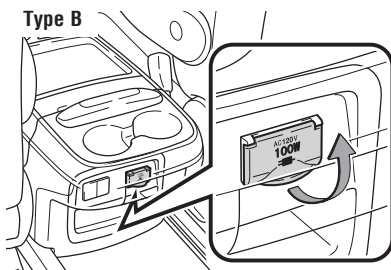

Luggage compartment

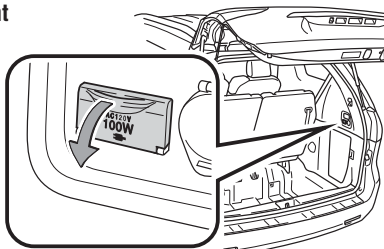


Ignition/"ENGINE START STOP" switch must be in the "ON"/ACCESSORY or IGNITION ON position for use.

FEATURES & OPERATIONS


Audio

ENTUNE™ 3.0 AUDIO WITH CONNECTED NAVIGATION & APP SUITE

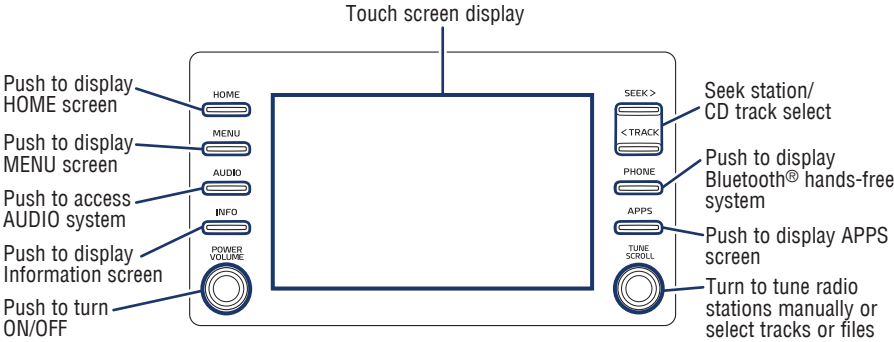

ENTUNE™ 3.0 AUDIO PLUS WITH CONNECTED NAVIGATION & APP SUITE

ENTUNE™ 3.0 PREMIUM (JBL®)¹ AUDIO WITH DYNAMIC NAVIGATION & APP SUITE

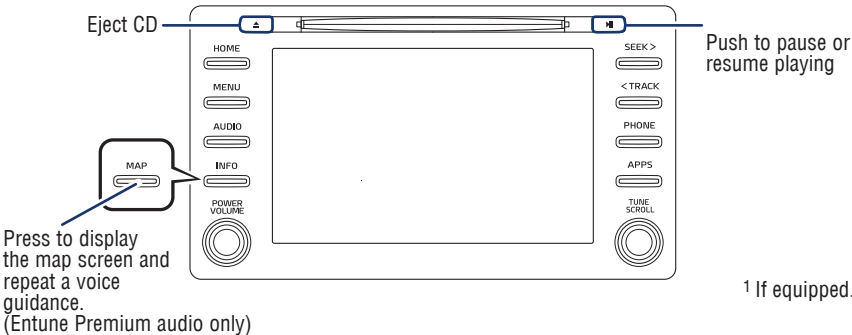


Refer to the "Navigation System Owner's Manual" or "2018 Entune™ 3.0 Audio Quick Reference Guide."

NOTE: Concentrating on the road should always be your first priority while driving. Do not use the Entune system if it will distract you.

Visually match your vehicle's Entune™ 3.0 audio system to one featured in this guide for the most accurate information.

USB/AUX PORT

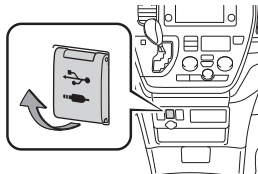


USB port By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system.


AUX port By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

USB charging ports

Center panel (if equipped)

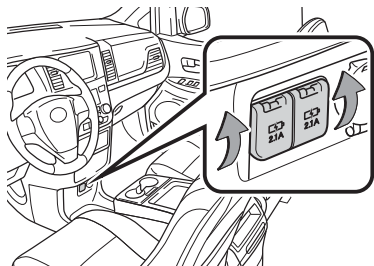


Auxiliary box (third seat lefthand side)

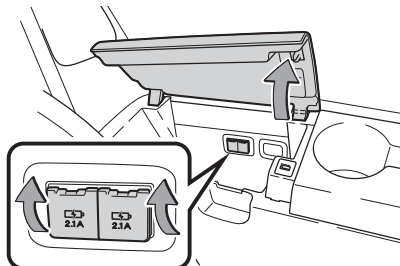


Console box (if equipped)


Type A

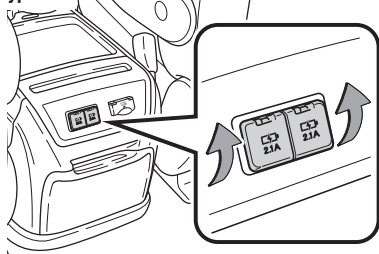

Type B

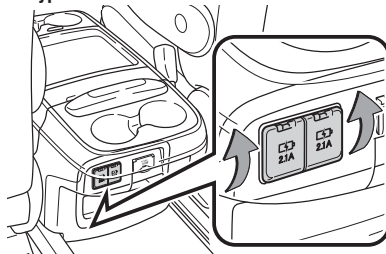

Garage door opener (HomeLink®)* (if equipped)

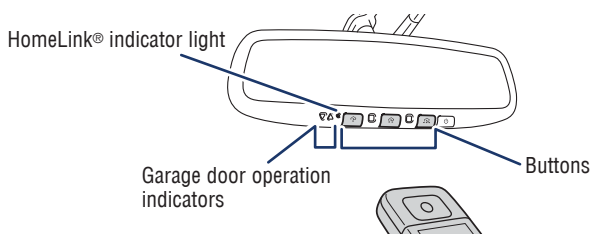

Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.


Refer to "Garage door opener," Section 5-4 in the Owner's Manual, for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.


* HomeLink® is a registered trademark of Gentex Corporation.

Steering wheel switches & telephone controls (Bluetooth®)

Steering wheel telephone switches

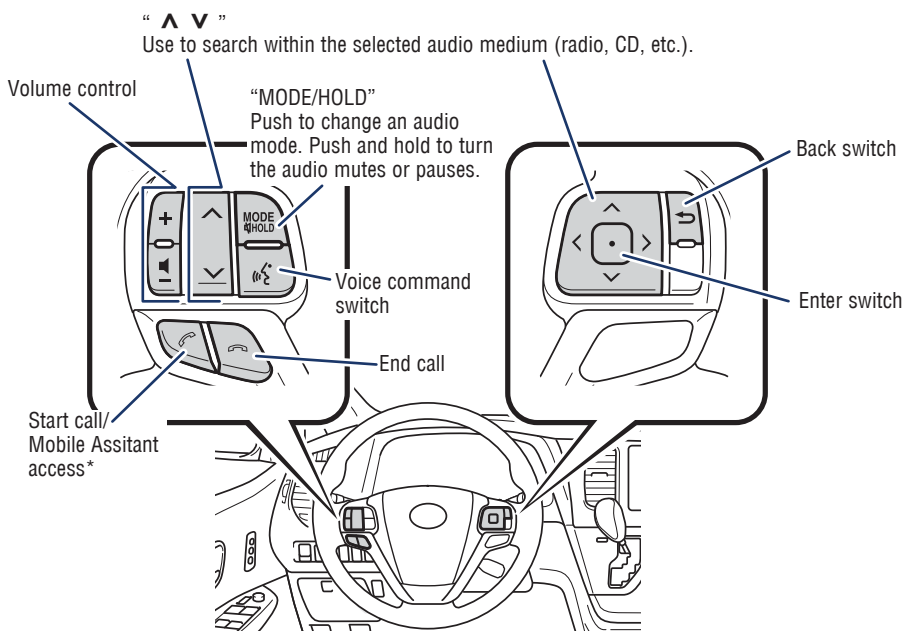

Microphone

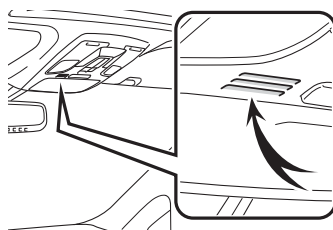

Bluetooth® technology allows dialing or receipt of calls without removing your hands from the steering wheel or using a cable to connect the compatible telephone and the system.

* Push and hold to access Mobile Assistant. Once you connect a compatible, registered mobile phone, you can access Siri® Eyes Free using Mobile Assistant access switch.

Refer to the "Bluetooth® Device Pairing Section" in this guide for more information about phone connections and compatibility.

Refer to the "Navigation System Owner's Manual" for more details.

NOTE: Concentrating on the road should always be your first priority while driving. Do not use the Entune system if it will distract you.

Air conditioning/heating

FRONT AIR CONDITIONING

Control panel

Airflow vent

In “” mode, use outside air (“” indicator “OFF”) to reduce window fogging. “” mode uses outside air only.



Temperature selector (driver side)

Automatic climate control ON









Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.

Outside rearview mirror/Rear window defogger and windshield wiper de-icer (if equipped)

Windshield defogger

Front fan speed

Display

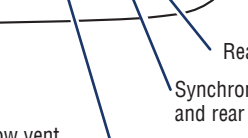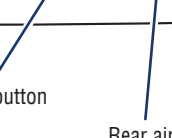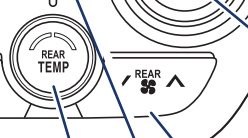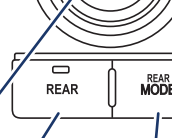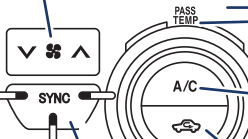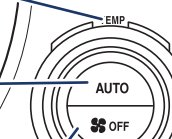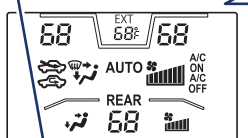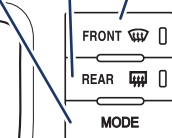

Fan ON/OFF

Rear button

Rear airflow vent

Temperature selector (rear)

Rear fan speed

Synchronizes driver, front passenger and rear temperature settings

Temperature selector (front passenger side)


Air Conditioning ON/OFF

Recirculated cabin air (outside air when OFF)

REAR AUTOMATIC AIR CONDITIONING

Fan speed

Temperature selector

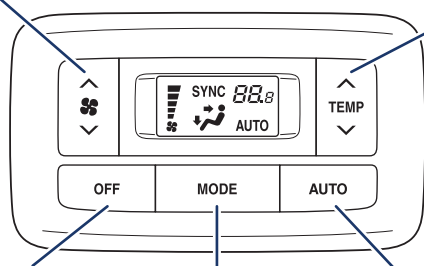

Climate control OFF

Airflow vent


Automatic climate control ON




FEATURES & OPERATIONS

Bottle holders

FRONT DOORS

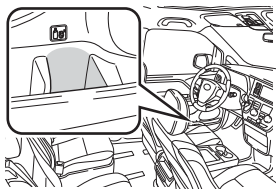


SLIDING DOORS

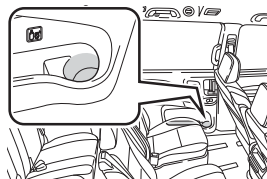


NOTE: Do not place open containers in the bottle holders.

Seat heaters (if equipped)



Driver's seat

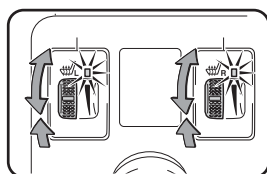

Front
passenger's seat

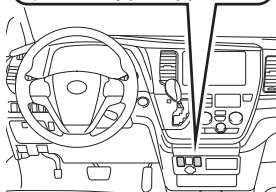

Rear view monitor system (if equipped)

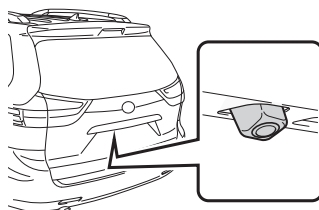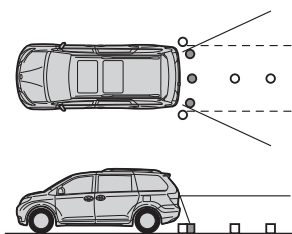


The rear view monitor system displays an image of the view from the bumper of the rear area of the vehicle. The camera for the rear view monitor system is located above the license plate.

To adjust the image on the rear view monitor screen, press the "SETUP" button and select "Display" on the "Setup" screen. Select "Camera" to adjust the screen contrast and brightness.


Refer to the Owner's Manual and Navigation System Owner's Manual for limitations and more details on this system.

Bird's Eye View Camera with Perimeter Scan Function (if equipped)

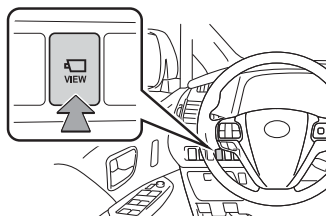

Moving view

Body color setting switch

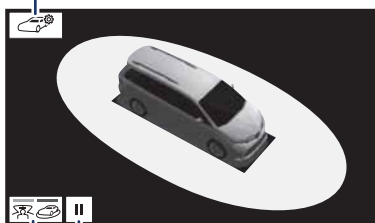


Rotation pause switch

Display mode switching button

See through view

Body color setting switch

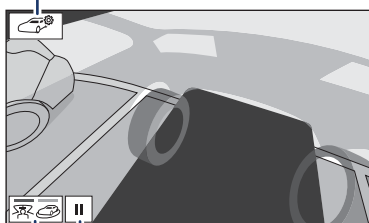

Rotation pause switch



Display mode switching button

The Bird's Eye View Camera with Perimeter Scan function assists the driver in viewing the surroundings, when operating at low speeds or parking, by combining front, side and rear cameras and displaying an overhead image on the Entune™ screen.

To view or turn OFF the screen, press the camera switch when the shift lever is in the "P" position. It will display two angles, the Moving view and the See Through view.

For limitations and more details, refer to section 6-3 in the "Navigation System Owner's Manual."

Hill-start Assist Control (HAC)(if equipped)

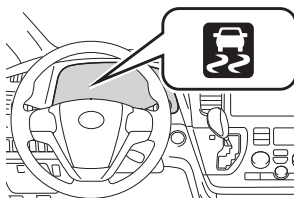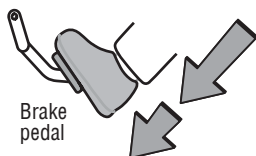


HAC helps prevent rolling backwards on an incline. To engage, push further down on brake pedal while at a complete stop until a beep sounds and slip indicator illuminates. HAC holds for approximately 2 seconds after releasing brake pedal.

Refer to the Owner's Manual for more details.

FEATURES & OPERATIONS

Enhanced VSC OFF switch

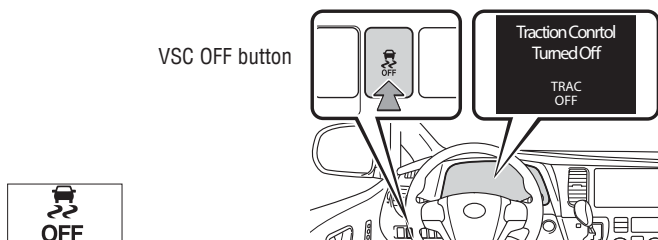


The Enhanced VSC OFF switch can be used to help free a stuck vehicle in surroundings like mud, dirt or snow. While car is stopped, press switch to disable the TRAC system.

To disable both VSC and TRAC systems, press the switch for at least 3 seconds.

Refer to Section 4-5 of the Owner's Manual for more information.

Rear seat entertainment system (if equipped)

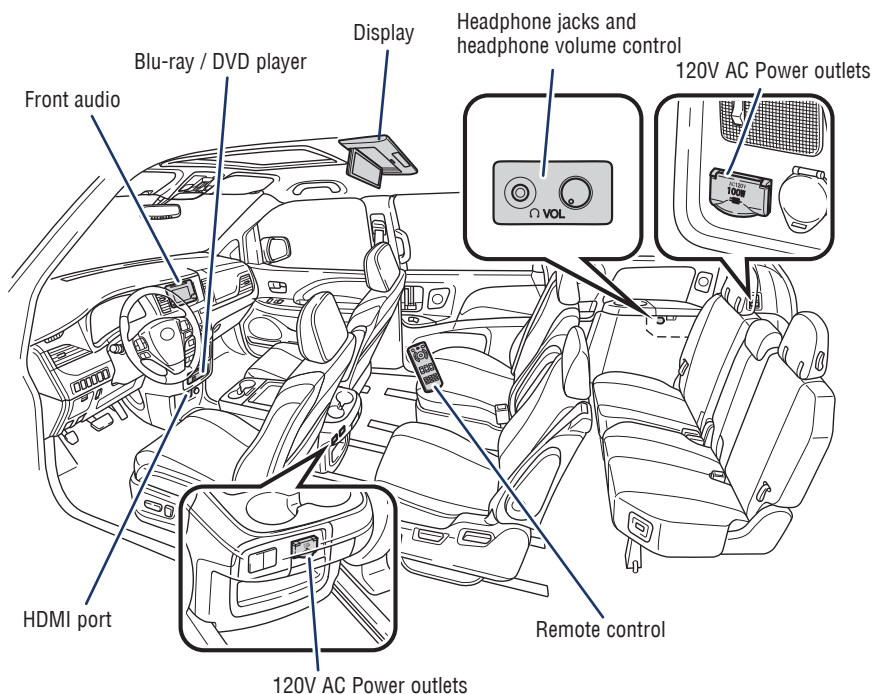


Refer to Section 7 of the Owner's Navigation Manual for more information.

AUTO ACCESS SEAT (if equipped)


The AUTO ACCESS SEAT (right-hand second seat) can be rotated, raised and lowered electrically to help the seat occupant easily enter and exit the vehicle. Have all operations carried out by an assistant.

Refer to the AUTO ACCESS SEAT Owner's Manual for more information.


AUTO ACCESS SEAT

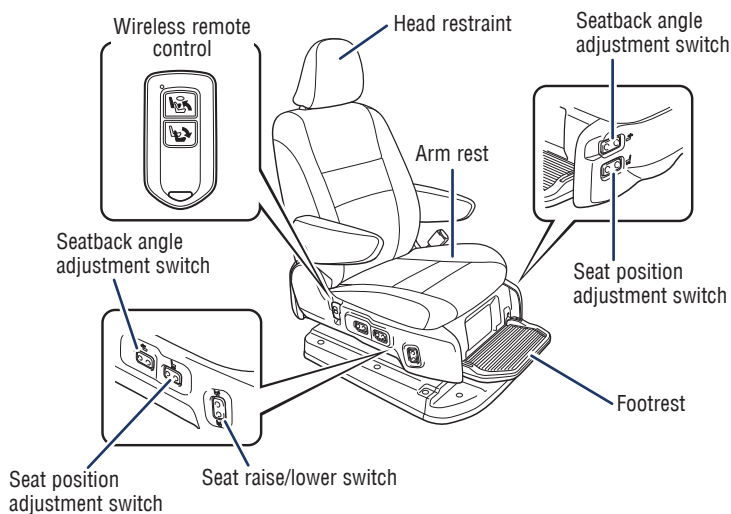


ARMRESTS

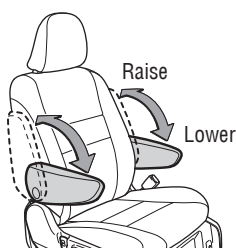


FOOTREST

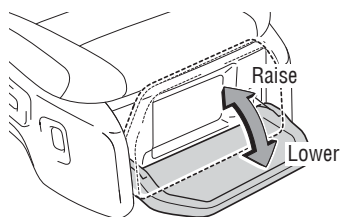

WIRELESS REMOTE CONTROL

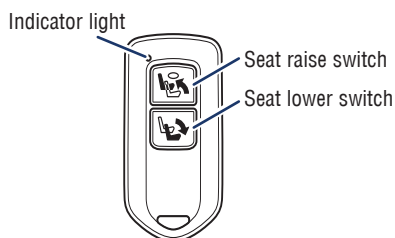


EFFECTIVE RANGE

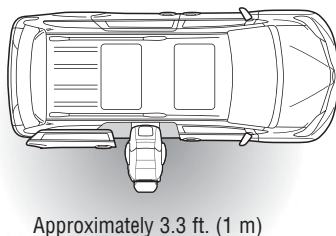

FEATURES & OPERATIONS

CORRECT RIDING POSTURE

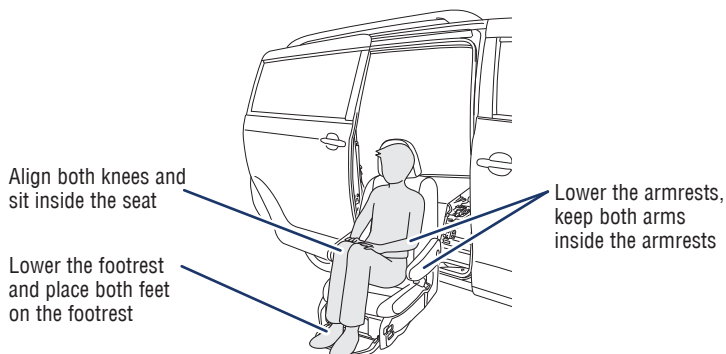

OPERATING THE AUTO ACCESS SEAT


When operating the AUTO ACCESS SEAT, confirm the following:

- Park the vehicle on a flat surface and leave the engine running.
- Shift the shift lever to P and set the parking brake.
- Check that there are no people or items of luggage around the AUTO ACCESS SEAT and the vehicle.
- The occupant is sitting correctly in the AUTO ACCESS SEAT.
- The seat belt is not caught up in the AUTO ACCESS SEAT.
- The occupant of the right-hand third seat is safe.
- Open the right-hand sliding door fully when opening the door.

For more details, refer to the AUTO ACCESS SEAT Owner's Manual.


Steering lock release

Without Smart Key system

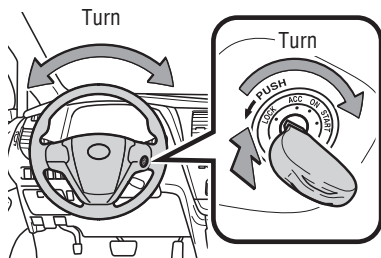

When starting the engine, the engine switch may seem stuck in the "LOCK" position. To free it, turn the key while turning the steering wheel slightly left and right.

With Smart Key system

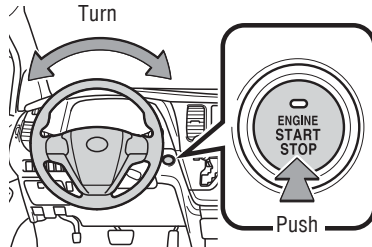

The green indicator light on the engine switch will flash and a message will be shown on the multi-information display. Press the engine switch while turning the steering wheel left and right.



Quick overview-Toyota Safety Sense™ P (TSS-P)

Toyota Safety Sense™ P (TSS-P) is a set of active safety technologies designed to help mitigate or prevent collisions across a wide range of traffic situations, in certain conditions. TSS-P is designed to help support the driver's awareness, decision making and vehicle operation contributing to a safe driving experience.

Refer to the Owner's Manual for operation, setting adjustments, limitations and more details to understand these functions and complete safety precautions. For more information, please go to <http://www.toyota.com/safety-sense>




Pre-Collision System with Pedestrian Detection function (PCS w/PD)

PCS w/PD is designed to provide alert, mitigation, and/or avoidance support in certain conditions, when the system detects a potential collision with a preceding vehicle is likely to occur.



Advanced millimeter-wave radar sensor system is designed to work with the camera sensor to help recognize a preceding pedestrian, and provide an alert, mitigation and/or avoidance support in certain conditions.



Lane Departure Alert with Steering Assist function (LDA w/SA)


LDA w/SA is designed to provide notification when the system detects an unintended lane departure.

The Steering Assist function is designed to provide small corrective steering inputs to the steering wheel for a short period of time to help keep the vehicle in its lane.



Dynamic Radar Cruise Control (DRCC)

DRCC is designed to help maintain a pre-set distance to a preceding vehicle when the preceding vehicle is traveling at a lower speed.




Automatic High Beams (AHB)


AHB is designed to detect the headlights of oncoming vehicles and the tail lights of preceding vehicles and switch between high beams and low beams as appropriate.

Sensors

TSS-P combines an in-vehicle camera mounted in front of the inside rear view mirror and a millimeter-wave radar mounted in the front grill. These sensors support the driver assist systems.

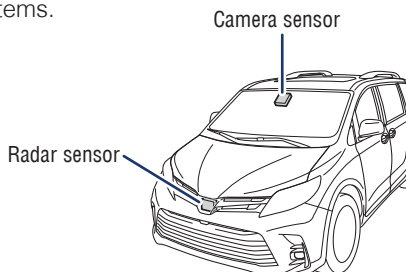

Pre-Collision System with Pedestrian Detection function (PCS w/PD)

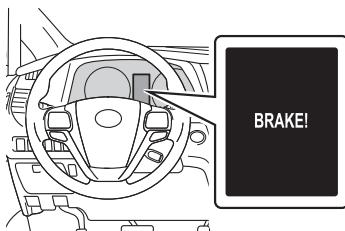

The Pre-Collision System uses a radar sensor and camera sensor to help detect a vehicle or pedestrian in front of your vehicle.

As there is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. This system will not prevent collisions or lessen collision damage or injury in every situation. Do not use PCS instead of normal braking operations under any circumstances. Do not attempt to test the operation of the pre-collision system yourself, as the system may not operate or engage, possibly leading to an accident. In some situations, such as when driving in inclement weather such as heavy rain, fog, snow or a sandstorm or while driving on a curve and for a few seconds after driving on a curve, a vehicle may not be detected by the radar and camera sensors, preventing the system from operating or engaging properly.

Refer to a Toyota Owner's Manual for a list of additional situations in which the system may not operate properly.

Pre-Collision Warning

When the system determines that the possibility of a frontal collision is high, a buzzer will sound and a warning message will be displayed on the Multi-Information Display (MID) to urge the driver to take evasive action.

Pre-Collision Brake Assist

If the driver notices the hazard and brakes, the system may provide additional braking force using Brake Assist. This system may prime the brakes and may apply greater braking force in relation to how strongly the brake pedal is depressed.


Pre-Collision Braking

If the driver does not brake in a set time and the system determines that the possibility of a frontal collision with a preceding vehicle is extremely high, the system may automatically apply the brakes, reducing speed in order to help the driver reduce the impact and in certain cases avoid the collision.

Refer to a Toyota Owner's Manual for additional information on PCS w/PD operation, settings adjustments, limitations, and precautions before attempting to use it.


PEDESTRIAN DETECTION FUNCTION

In certain conditions, the PCS system included with the TSS-P package may also help to detect a pedestrian in front of your vehicle. With Toyota Safety Sense™ P, PCS uses an in-vehicle camera and front-grill mounted millimeter-wave radar to help detect a pedestrian in front of your vehicle in certain conditions. The in-vehicle camera of PCS detects a potential pedestrian based on size, profile, and motion of the detected pedestrian. However, a pedestrian may not be detected depending on the conditions, including the surrounding brightness and the motion, posture, size, and angle of the potential detected pedestrian, preventing the system from operating or engaging. *Refer to a Toyota Owner's Manual for additional information.*

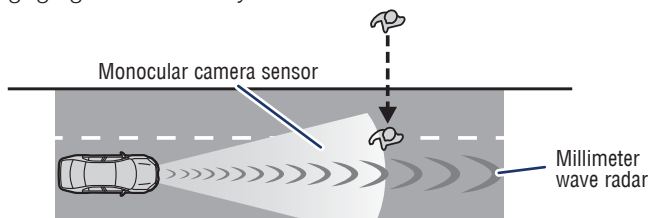


As part of the Pre-Collision System, this function is also designed to first provide an alert and then automatic braking if needed.

CHANGING THE PCS ALERT TIMING

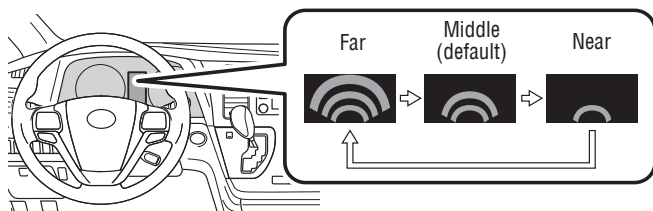

- (1) Press “<>” switches and select  from the MID.
- (2) Press “<>” or “<” switches and select the  setting function from the MID and then press “”. The setting screen is displayed.
- (3) Select “Sensitivity” and then press “.” Each time “” is pressed, the response to the PCS alert timing changes as shown above. You can press “>” to go back to the menu.

Note: PCS is enabled each time the engine switch is turned to Ignition On. The system can be disabled/enabled and the alert timing of the system can be changed. (Alert timing only, brake operation remains the same).

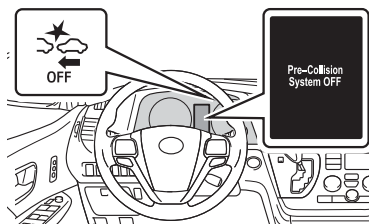


- (1) Press “<>” switches and select  from the MID.
- (2) Press “<>” or  switches and select the  setting function from the MID and then press “”. The setting screen is displayed.
- (3) Select **PCS** and then press “.” The Pre-Collision System will be disabled.

You can press “” to go back to the menu.

Note: PCS is enabled each time the engine switch is turned to Ignition On. The system can be disabled/enabled and the alert timing of the system can be changed. (Alert timing only, brake operation remains the same).

Lane Departure Alert with Steering Assist function (LDA w/SA)

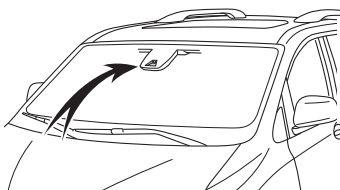


LDA in TSS-P uses an in-vehicle camera designed to detect visible white and yellow lane markers in front of the vehicle and the vehicle's position on the road. If the system determines that the vehicle is starting to unintentionally deviate from its lane, the system alerts the driver with an audio and visual alert. When the alerts occur, the driver must check the surrounding road situation and carefully operate the steering wheel to move the vehicle back to the center part of their lane.

LDA is designed to function at speeds of approximately 32 MPH or higher on relatively straight roadways.

In addition to the alert function, LDA w/SA also features a steering assist function. When enabled, if the system determines that the vehicle is on a path to unintentionally depart from its lane, the system may provide small corrective steering inputs to the steering wheel for a short period of time to help keep the vehicle in its lane.

TURNING THE LDA SYSTEM ON/OFF

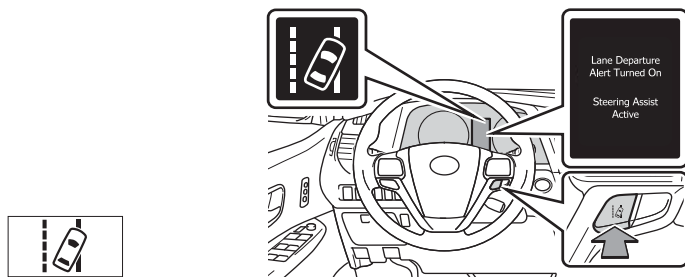


Press the LDA switch to turn the LDA system on. Depress again to turn it off.

Note: The system will continue in the last state it was in (ON or OFF) when the engine is started again.


Refer to a Toyota Owner's Manual for additional information on LDA operation, settings adjustments, limitations, and precautions before attempting to use it.

LDA FUNCTIONS

LDA function display

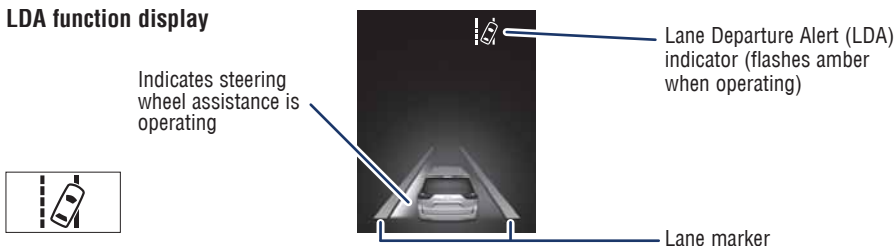

Lane Departure Alert (LDA) indicator flashes amber when operating

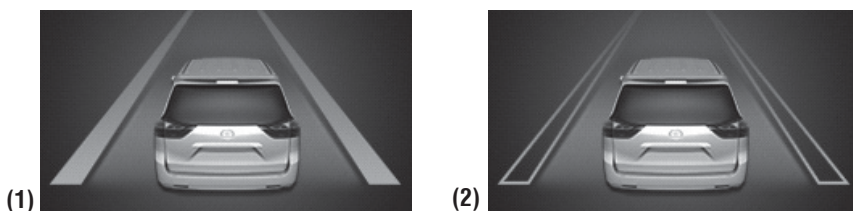

The LDA function  displays when the Multi-Information Display (MID) is switched to the driving assist system information screen.

(1) The system displays solid white lines on the LDA indicator when visible lane markers on the road are detected. A side flashes orange to alert the driver when the vehicle deviates from its lane.

(2) The system displays outlines on the LDA indicator when lane markers on the road are not detected or the function is temporarily cancelled.

Note: When operation conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function is automatically restored. For example, LDA may not function on the side(s) where white/yellow lines are not detectable.

DISABLING THE STEERING ASSIST FUNCTION

- (1) Press “<>” switches to find and select .
- (2) Press “<> or ◇” switches to find the  setting function and then press “○”. The LDA Steering Assist system will be disabled.
- (3) You can press “↶” to go back to the menu.

Note: Operation of the LDA system and setting adjustments continues in the same condition regardless of Ignition cycle until changed by the driver or the system is reset.

ADJUSTING LDA ALERT SENSITIVITY

The driver can adjust the sensitivity of the LDA (warning) function from the Multi-Information Display (MID) customization screen.

High - Is designed to warn approximately before the front tire crosses the lane marker.

Normal - Is designed to warn approximately when the front tire crosses the lane marker.

- (1) Press “<>” switches to find and select .
- (2) Press “<> or ◇” switches to find the  setting function and then press “○”. The setting screen is displayed.
- (3) Select “Sensitivity” and then press “○.” Each time “○” is pressed, the response to the LDA alert sensitivity changes. You can press “↶” to go back to the menu.

Note: Operation of the LDA system and setting adjustments continues in the same condition regardless of Ignition cycle until changed by the driver or the system is reset.

THE SWAY WARNING SYSTEM (SWS) FUNCTION



Continuous lane deviations from swaying.



Gentle swaying from driver's inattentiveness.




Acute steering wheel operation after the number of operations decrease due to driver's inattentiveness.

SWS is a function of LDA and is designed to detect swaying based on the vehicle location in the lane and the driver's steering wheel operation. To help prevent swaying, the system alerts the driver using a buzzer sound and a warning displays in the MID.

Dynamic Radar Cruise Control (DRCC)


DRCC helps maintain a pre-set distance to a preceding vehicle when the preceding vehicle is traveling at a lower speed. This mode is always selected first when the cruise control button is depressed. Constant speed cruise control mode is also available.

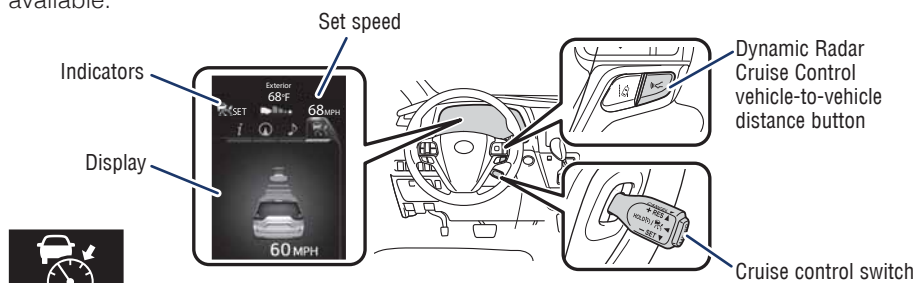

Refer to a Toyota Owner's Manual for additional information on DRCC operation, settings adjustments, limitations, and precautions before attempting to use it.

TURNING SYSTEM ON/OFF

(1)

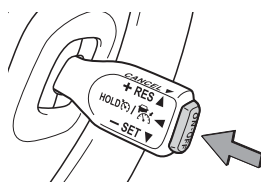


Push once: On
Push again: Off

Refer to page 39 for switching to Constant Speed (Cruise) Control Mode.

ADJUSTING DRCC SET SPEED

(2)


Resume²

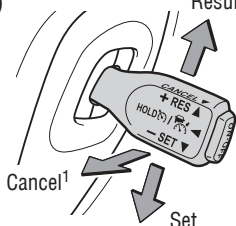

(3)

Increase speed

Decrease speed

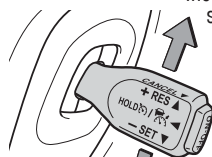

SET

Vehicle will cruise at a set speed, decelerate to maintain selected distance from a slower vehicle traveling in front and accelerate back up to the selected speed if the vehicle in front changes lanes or speeds up.

(1) Push the ON-OFF button. The "RADAR READY" or " " indicator will come on.



(2) Push the lever down to SET speed, push it up to Resume and pull it or depress brake to Cancel.

(3) Push up to increase the set speed, push down to decrease (1mph increments).

¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed exceeds 25 mph.

ADJUSTING DISTANCE

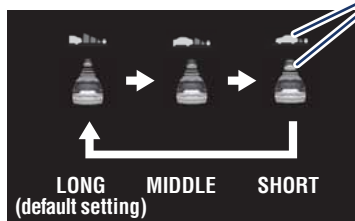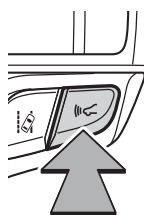


Preceding vehicle mark

To change the vehicle-to-vehicle distance

Push the “ ” button to cycle through the settings, which will change progressively.

This mode employs a radar sensor to detect the presence of vehicles up to approximately 328 ft (100 m) ahead, determines the current vehicle-to-vehicle following distance and operates to maintain a suitable following distance from the vehicle ahead.

Note: Vehicle-to-vehicle distance will close in when traveling on long downhill slopes.

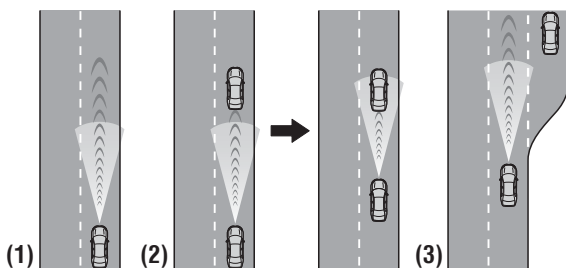

(1) Constant speed cruising when there are no vehicles ahead

The vehicle travels at the speed set by the driver. The desired vehicle-to-vehicle distance can also be set by operating the vehicle-to-vehicle distance control.

(2) Deceleration cruising and follow-up cruising when a preceding vehicle driving slower than the set speed appears


When a vehicle is detected running ahead of you, the system automatically decelerates your vehicle. When a greater reduction in vehicle speed is necessary, the system applies the brakes (the brake lights will come on at this time). The system will respond to changes in the speed of the vehicle ahead in order to maintain the vehicle-to-vehicle distance set by the driver. A warning tone warns you when the system cannot decelerate sufficiently to prevent your vehicle from closing in on the vehicle ahead.

(3) Acceleration when there are no longer any preceding vehicles driving slower than the set speed

The system accelerates until the set speed is reached. The system then returns to constant speed cruising.

Note: When your vehicle is too close to a vehicle ahead, and sufficient automatic deceleration via the cruise control is not possible, the display will flash and the buzzer will sound to alert the driver. An example of this would be if another driver cuts in front of you while you are following a vehicle. Depress the brake pedal to ensure an appropriate vehicle-to-vehicle distance.

SWITCHING TO CONSTANT SPEED (CRUISE) CONTROL MODE

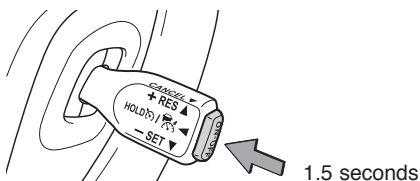


If you are already using DRCC “”, push ON-OFF button to turn the system off first, then push and hold ON-OFF button for at least 1.5 seconds to switch.

Note: When the engine is turned off, it will automatically default to DRCC.

SETTING CONSTANT SPEED (CRUISE) CONTROL

SET

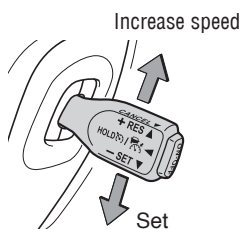


To adjust speed or cancel, see steps (2) and (3) of ADJUSTING SET SPEED on page 37.

¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed exceeds 25 mph.

Refer to a Toyota Owner's Manual for additional information on DRCC operation, settings adjustments, limitations, and precautions before attempting to use it.

Automatic High Beams (AHB)

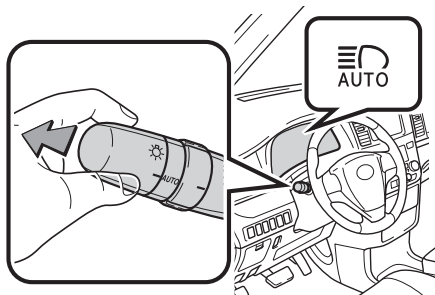

AHB is a safety system designed to help drivers see more of what's ahead at nighttime without dazzling other drivers. When enabled, AHB uses an in-vehicle camera to help detect the headlights of oncoming vehicles and tail lights of preceding vehicles, then automatically switches between high and low beams as appropriate to provide the most light possible and enhance forward visibility. By using high beams more frequently, the system may allow earlier detection of pedestrians and obstacles.

Refer to a Toyota Owner's Manual for additional information on AHB operation, settings adjustments, limitations, and precautions before attempting to use it.

ACTIVATING THE AHB SYSTEM

- (1) With the engine switch in IGNITION ON mode and headlight switch turned to "AUTO" position, push lever away from you.

The "AHB AUTO" indicator will come on when the headlights are turned on automatically to indicate that the system is active.

- (2) Pull the lever back toward you to turn the AHB system off.

The "AHB AUTO" will turn off and the "OFF" indicator turns on.

CONDITIONS WHERE AHB WILL TURN ON/OFF AUTOMATICALLY

When all of these conditions are met, high beams will be automatically turned on (after approximately 1 second):


- Vehicle speed is above approximately 20 mph (32 km/h).
- The area ahead of the vehicle is dark.
- There are no oncoming or preceding vehicles with headlights or tail lights turned on.
- There are few street lights on the road ahead.

If any of these conditions occur, the system is designed to automatically turn off high beams:

- Vehicle speed drops below approximately 20 mph (32 km/h).
- The area ahead of the vehicle is not dark.
- Oncoming or preceding vehicles have headlights or tail lights turned on.
- There are many streetlights on the road ahead.


Rear door child safety locks

Rear door

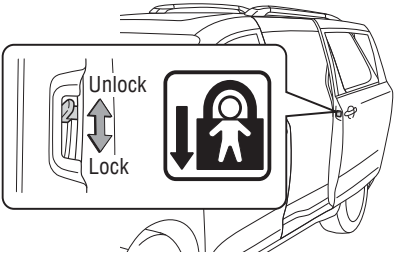


Moving the lever downward will allow the door to be opened only from the outside.

Seat belts-Shoulder belt anchor

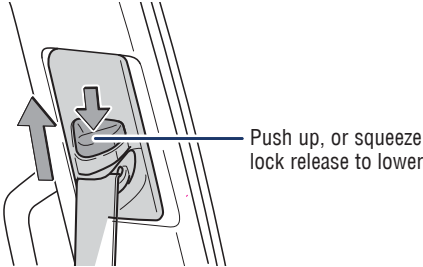


Child restraint anchors


2nd seat
8 passenger models

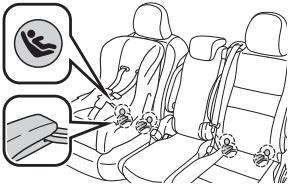

2nd seat
7 passenger models


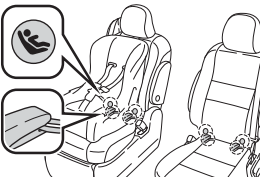


3rd seat

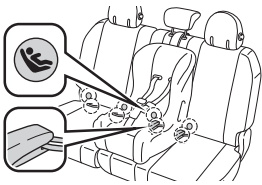

SAFETY & EMERGENCY FEATURES


Seat belts

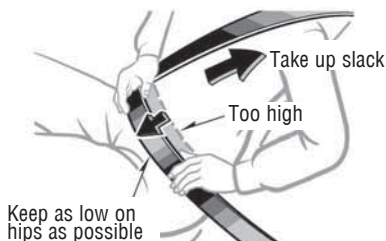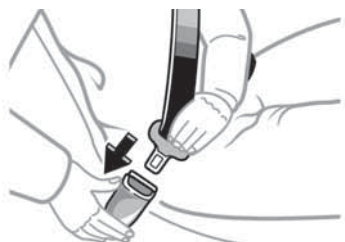

NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic locking retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the Owner's Manual.

Tire Pressure Monitoring (warning) System (TPMS)

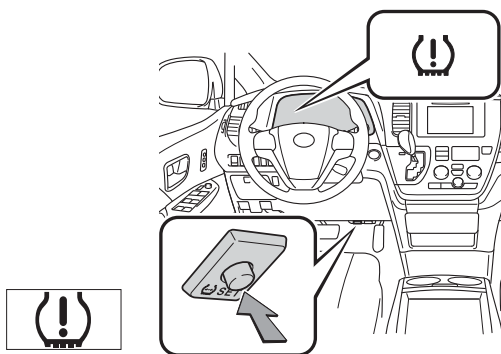

System reset initialization

1. Push and hold "SET" button until the indicator blinks three times.
2. Wait a few minutes to allow initialization to complete.

After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to "ON" and press and hold the "SET" button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

Refer to the load label on the door jamb or the Owner's Manual for tire inflation specifications.


If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

Spare tire & tools



All-Wheel Drive models are equipped with run-flat tires. *Refer to the Owner's Manual for more details.*

TOOL & SPARE TIRE LOCATION

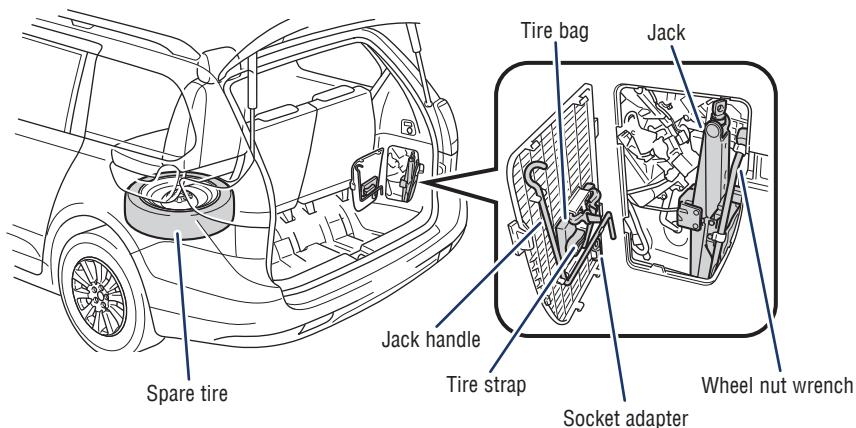

REMOVING THE SPARE TIRE

Front Wheel Drive models

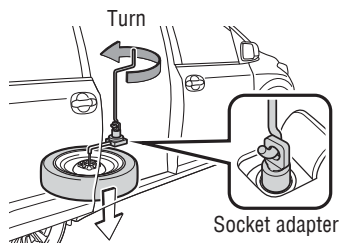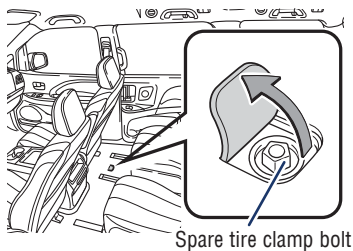

Refer to the Owner's Manual for jack positioning and tire changing procedures.

SAFETY & EMERGENCY FEATURES

Star Safety System™

Your vehicle comes standard standard with the Star Safety System™, which combines Anti-lock Braking System (ABS), Brake Assist (BA), Electronic Brake-force Distribution (EBD), Smart Stop Technology (SST), Traction Control (TRAC) and Vehicle Stability Control (VSC).

Refer to the Owner's Manual for more details and important information on limitations to these systems.

ANTI-LOCK BRAKE SYSTEM (ABS)

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

BRAKE ASSIST (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

SMART STOP TECHNOLOGY (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

VEHICLE STABILITY CONTROL (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

TRACTION CONTROL (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).


Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use Toyota floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

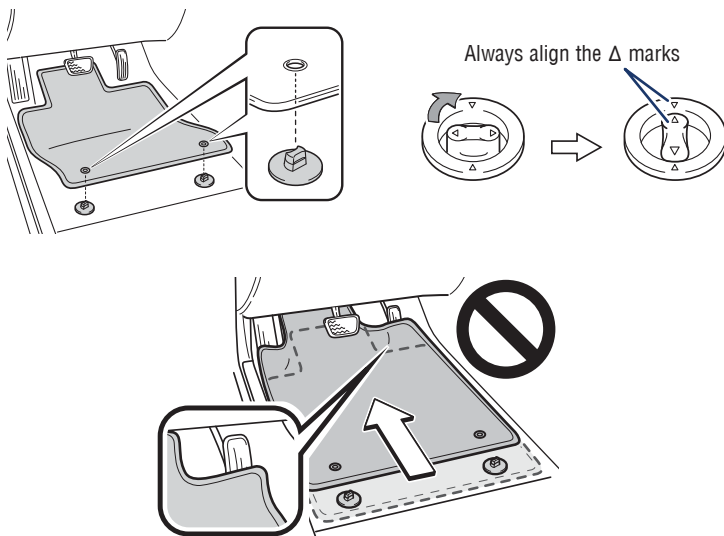

BLUETOOTH® DEVICE PAIRING SECTION

Do not attempt the Bluetooth® Pairing process while driving.


To begin the Bluetooth® Pairing process, press the HOME button on the faceplate of your multimedia system.

Bluetooth® Pairing for your phone

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy. All you have to do is setup the phone and multimedia system to form a connection.¹




Entune Audio/Entune Audio Plus

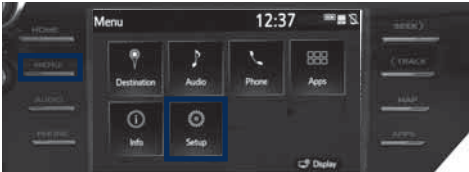


Entune Premium Audio

STEP 1 Press [MENU] on the faceplate, then select "Setup" on display screen.




iPhone bluetooth Menu

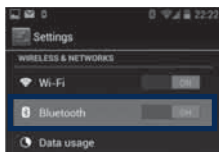


Android bluetooth Menu

STEP 2 Ensure Bluetooth is turned on for your device.

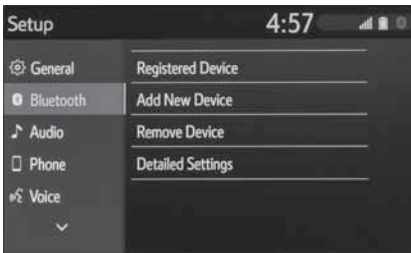

STEP 3 Select "Bluetooth", then select "Add New Device" on display screen.

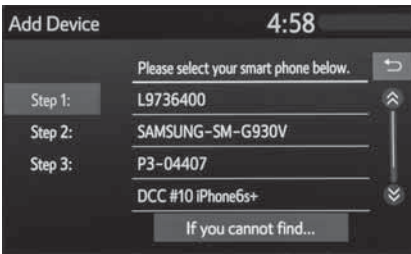

STEP 4 Select "Device Name".



STEP 5 Check the display on your smart phone. Does the PIN XXXX match the PIN displayed? If it does select "Pair".

¹ Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

BLUETOOTH® DEVICE PAIRING

Bluetooth® Pairing for your phone (cont.)




STEP 6 "Connecting" displays while device is forming the connection to your multimedia system.



STEP 7 Enable Notifications (text message). While pairing your device message will display: **"You may need to allow message access on your phone"**.

Note: You may also select "Skip" on display screen to skip enabling notifications. If skipped proceed to **Step 8**.

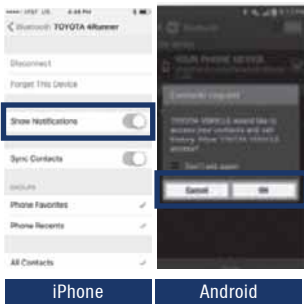

STEP 8 Turn on "Show Notifications" for iPhone or "ON" for Android.



STEP 9 A confirmation will appear once your phone has been paired and connected.



www.toyota.com/owners

CUSTOMER EXPERIENCE CENTER

1-800-331-4331



Printed in U.S.A. 10/17
17-MKG-10242



00505QRG18SIE