



4RUNNER

2 0 1 9



QUICK REFERENCE GUIDE



TOYOTA

2019

4RUNNER

This Quick Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Quick Reference Guide is not intended as a substitute for the Owner's Manual located in your vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor North America, Inc. wish you many years of satisfied driving in your new 4Runner.



A word about safe vehicle operations

This Quick Reference Guide is not a full description of 4Runner operations. Every 4Runner owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the Owner's Manual. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this Quick Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

OVERVIEW

Engine maintenance	8
Fuel tank door release & cap	7
Hood release	8
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Instrument panel light control	8
Keyless entry ¹	6
Smart Key system ¹	7

FEATURES & OPERATIONS

Active traction control system	24
Air conditioning/heating	24
Audio	19
Auto lock/unlock ^{1,2}	9
Automatic running boards	11
Automatic transmission	9
Clock	13
Crawl control	26
Cruise control	15
Door locks	10
Downhill assist control system	25
Four-wheel drive	23
Garage door opener (HomeLink®) ³	24
Lights ¹ & turn signals	12
Moonroof ¹	15
Multi-Information Display (MID)	21
Multi-terrain select	26
Parking brake	9
Power outlets-12V DC	22
Power outlets-120V AC	21
Rear differential lock system	25
Rear seats-Folding	17
Seat adjustments-Front	16
Seat adjustments-Rear	16
Seat ventilators/heaters	13
Seats-Head restraints	16
Seats-Returning 3rd row	18
Seats-Stowing 3rd row	18

FEATURES & OPERATIONS (Continued)

Steering lock release	10
Steering wheel switches & telephone controls (Bluetooth®)	20
Tilt & telescopic steering wheel	10
USB media/AUX port	19
VSC OFF button	23
Window-Back window ¹	11
Windows-Power ¹	11
Windshield wipers & washers	13



SAFETY & EMERGENCY FEATURES

Floor mat installation	31
Rear door child safety locks	27
Seat belts	28
Seat belts-Shoulder belt anchor	28
Spare tire & tools	29
Star Safety System™	30-31
Tire Pressure Monitoring (warning) System (TPMS)	27


BLUETOOTH® DEVICE PAIRING SECTION 32-41

¹ Visit your Toyota dealer for information on customizing this feature.
² Programmable by customer. Refer to the Owner's Manual for instructions and more information.
³ HomeLink® is a registered trademark of Gentex Corporation.

Instrument panel

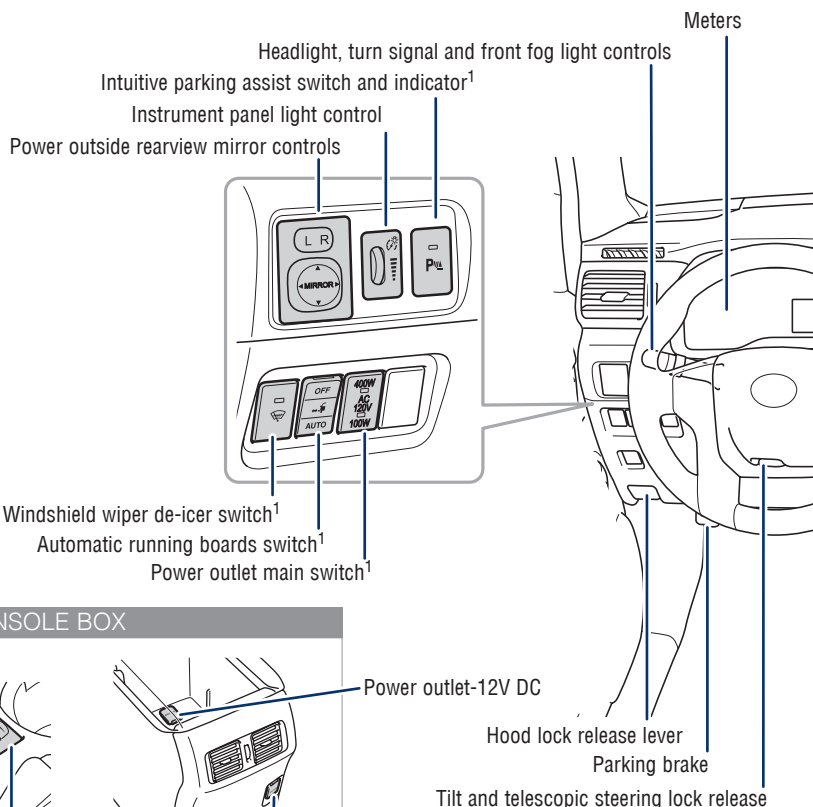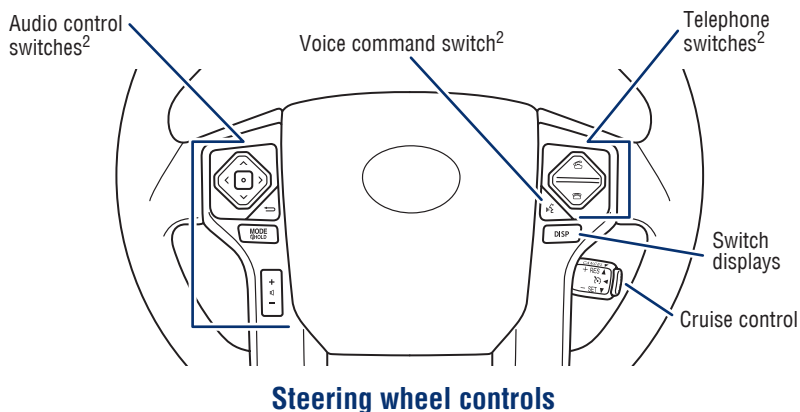

CENTER CONSOLE BOX

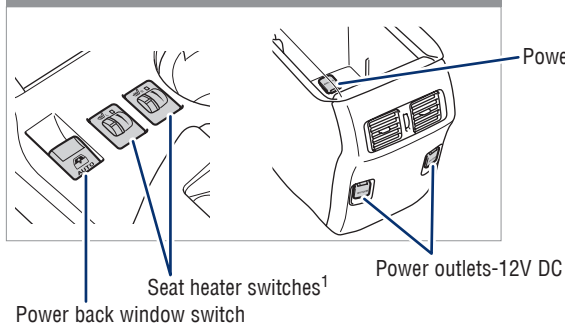


¹ If equipped

² For details, refer to the “Navigation and Multimedia System Owner’s Manual” and “2019 Entune™ Audio Quick Reference Guide.”

OVERHEAD CONSOLE INSTRUMENT PANEL

Type A

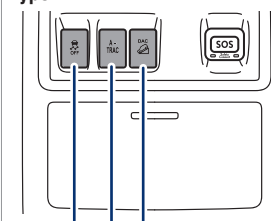


VSC off switch

Active traction control switch¹

Downhill Assist Control system (DAC) switch¹

Type B

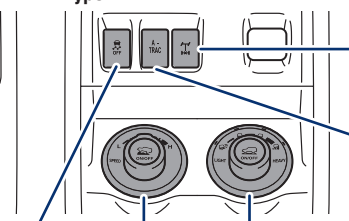


Rear differential lock switch¹

Active traction control switch¹

VSC off switch

Multi-terrain Select switch¹

Crawl Control switch¹

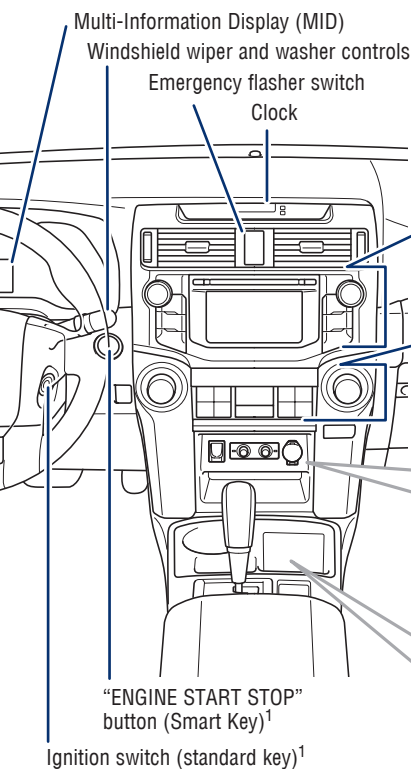

Multi-Information Display (MID)

Windshield wiper and washer controls

Emergency flasher switch

Clock

Audio system²/navigation system²

Manual or Automatic air conditioning controls¹

Seat heater¹/ventilator switches¹


USB media/AUX port²

Power outlet-12V DC

“ENGINE START STOP” button (Smart Key)¹


Ignition switch (standard key)¹

Part-time 4WD

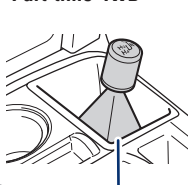


Front-wheel drive control lever¹

Part-time 4WD/ full-time 4WD

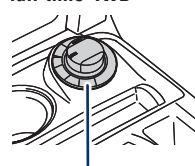

Front-wheel drive control switch¹/
Four-wheel drive control switch¹

Instrument cluster

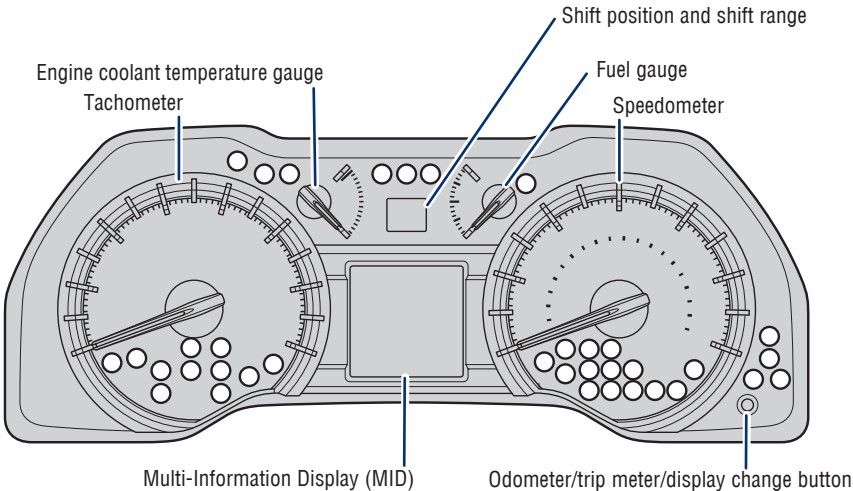

○ Service indicators and reminders

Indicator symbols

For details, refer to “Instrument cluster,” Section 2, 2019 Owner’s Manual.

	Active traction control indicator ⁵		Center differential lock indicator ^{3,5}
	AIR BAG ON/OFF indicator ¹		Charging system warning ¹
	Air bag SRS warning ¹		Crawl Control indicator ^{1,5}
	Anti-lock Brake System (ABS) warning ¹		Cruise control ² /Cruise control SET indicator
	Arrow direction indicates fuel tank door position		Downhill Assist Control indicator ^{1,5}
	AUTO Limited Slip Differential indicator ^{1,5}		Driver’s and/or front passenger’s seat belt reminder (alarm will sound if speed is over 12 mph)
	Automatic running boards indicator ^{1,2,5}		Eco Driving Indicator Light ¹
	Brake system warning ¹		

	Four-wheel drive indicator ^{3,5}		Traction Control OFF indicator ¹
	Front fog light indicator		Turn signal indicator
	Headlight low/ high beam indicator		Unengaged Park warning light ⁵
	Kinetic Dynamic Suspension System (KDSS) indicator ^{1,5}		Vehicle Stability Control (VSC) OFF indicator ¹
	Low engine oil pressure warning ¹		
	Low fuel level warning		
	Low Tire Pressure Warning ¹		
	Low speed four-wheel drive indicator ^{3,5}		
	Malfunction/Check Engine indicator ¹		
	Master warning ^{1,2}		
	Multi-terrain select indicator ^{2,5}		
	Open door warning		
	Power steering system warning ¹		
	Rear differential lock indicator ^{3,5}		
	Security indicator		
	Slip indicator ^{1,4}		
	Smart Key system warning ⁵		

¹ If the indicator does not turn off within a few seconds of starting the engine, there may be a malfunction. Have the vehicle inspected by your Toyota dealer.

² If the indicator flashes, there may be a malfunction. Refer to the Owner's Manual.

³ If the indicator flashes rapidly, there may be a malfunction. Refer to the Owner's Manual.

⁴ If the indicator flashes, it indicates that the system is operating.


⁵ If equipped.

OVERVIEW

Keyless entry

UNLOCKING OPERATION

Smart Key

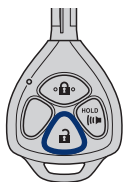


Push

Push ONCE: Driver door
TWICE: All doors

Carry remote
Smart Key

Front door unlock*


Grasp

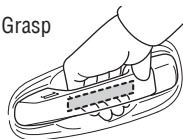

NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

LOCKING OPERATION

Smart Key

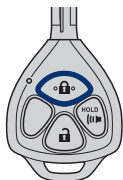

Push

Carry remote
Smart Key

All-door lock

Touch



PANIC BUTTON

Smart Key



HOLD




Push and hold

Carry remote
Smart Key




BACK DOOR LOCK/UNLOCK/OPEN (IF EQUIPPED)


Unlock

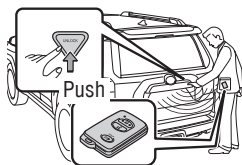

Lock

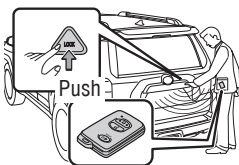

Open

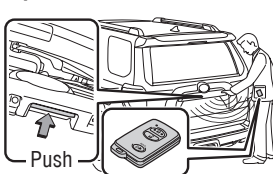


NOTE: Carry remote to unlock/lock/open. Power back door will not open if glass hatch is open.

* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping front passenger door handle will unlock all doors.
Please refer to the Owner's Manual for more details on how to program the doors.

Smart Key system (if equipped)


START FUNCTION

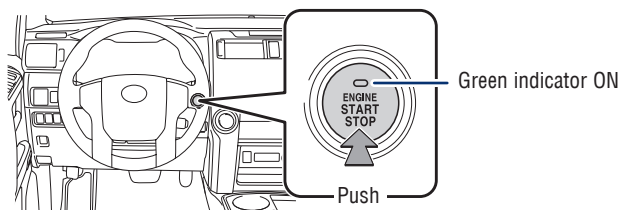

NOTE: The Smart Key must be carried to enable the start function. With gear shift lever in Park and the brake pedal depressed, push the “ENGINE START STOP” switch.

POWER (WITHOUT STARTING ENGINE)

Without depressing the brake pedal, pressing the “ENGINE START STOP” switch will change the operation mode in succession from:


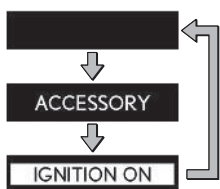


Off - All systems OFF. Emergency flashers can be used.

Accessory – Some electrical components can be used.


On - All electrical components can be used.

Fuel tank door release & cap

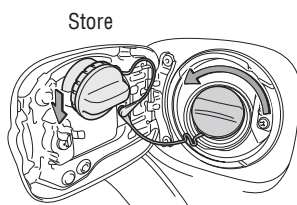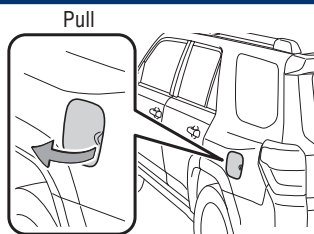


NOTE: Tighten until one click is heard. If the cap is not properly sealed, Check Engine “” indicator may illuminate.


Hood release

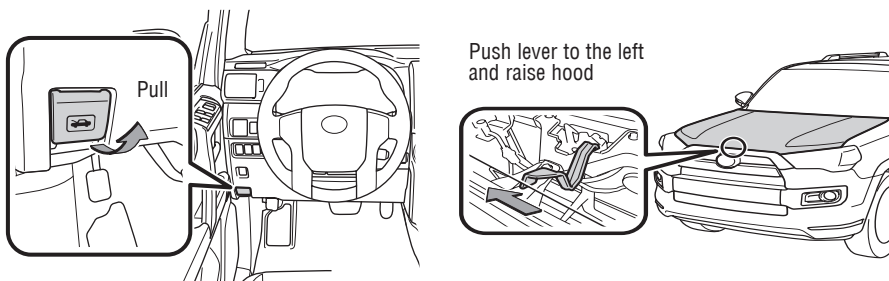

Instrument panel light control

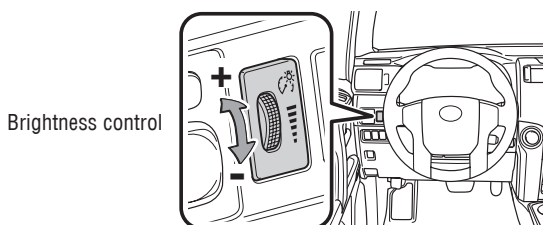

Engine maintenance

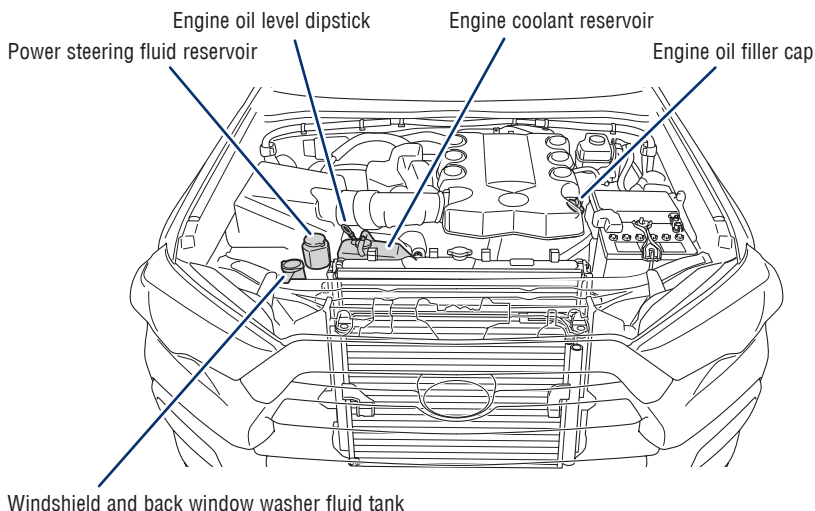

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty & Maintenance Guide.”

Auto lock/unlock

Automatic door locks can be programmed to operate in different modes, or turned OFF.

Shift position linked door locking/unlocking function

- Doors lock when shifting from Park.
- Doors unlock when shifting into Park.

Speed linked door locking function


- Doors lock when the vehicle speed goes above approximately 12 mph.

Driver's door linked door unlocking function

- (Without a Smart Key system) Doors unlock when the engine switch is set from "ON" to "ACC" or "LOCK" within 10 seconds of opening the driver's door.
- (With a Smart Key system) Doors unlock when the engine switch is set to OFF within 10 seconds of opening the driver's door.

Refer to the Owner's Manual for more details.

Automatic transmission

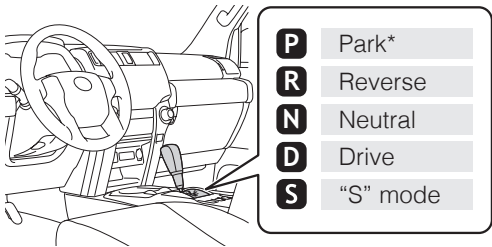

* The ignition/"ENGINE START STOP" switch must be "ON" and the brake pedal depressed to shift from Park.


"S" (SEQUENTIAL) MODE

Shift the shift lever to "S" position from "D" position.

- + : Upshift (push and release)
- : Downshift (pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.


Parking brake

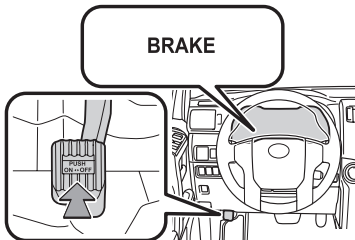

Set: Depress
Release: Depress again


Steering lock release

Without Smart Key system

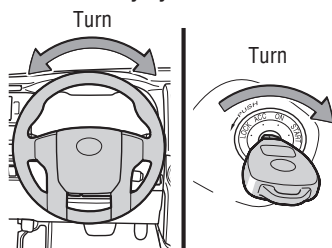

When starting the engine, the engine switch may seem stuck in the "LOCK" position. To free it, turn the key while turning the steering wheel slightly left and right.


With Smart Key system

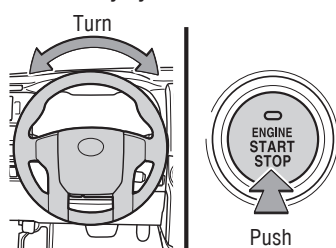

The green indicator light on the engine switch will flash. Press the engine switch again while turning the steering wheel left and right.


Tilt & telescopic steering wheel

Lock release lever

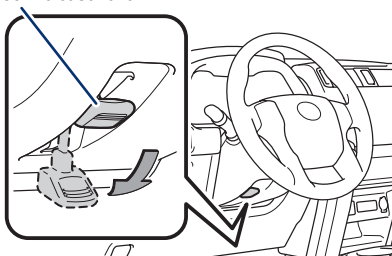

Angle


Length

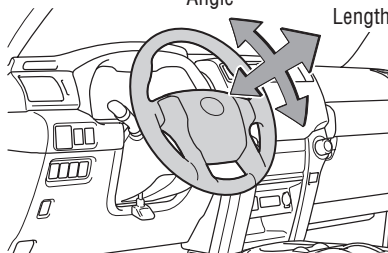



Hold wheel, push lever down, set angle and length, and return lever.

NOTE: Do not attempt to adjust while the vehicle is in motion.

Door locks

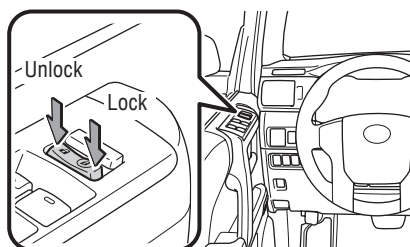

Windows-Power

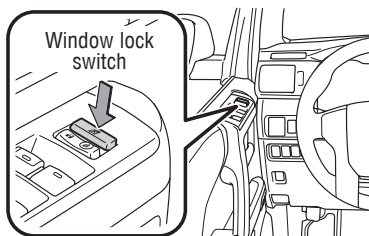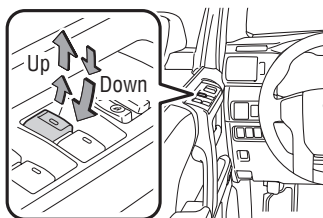


All window auto up/down Push the switch completely down or pull it completely up and release to fully open or close. To stop the window partway, operate the switch in the opposite direction.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.



Window-Back window

OPERATING FROM INSIDE


OPERATING FROM OUTSIDE

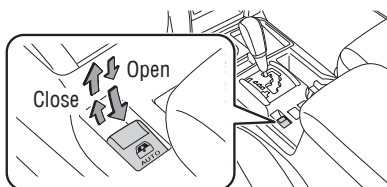


With Smart Key system

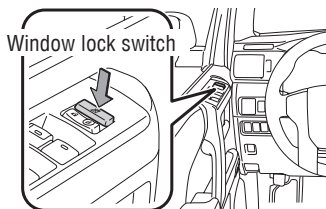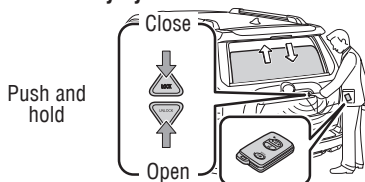


Without Smart Key system

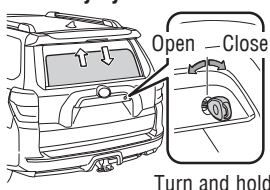

Automatic running boards (if equipped)

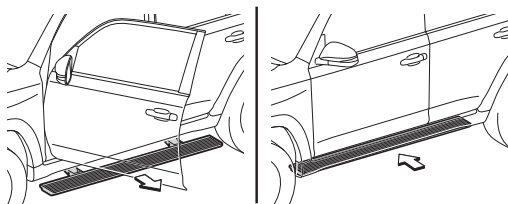

ON/OFF switch

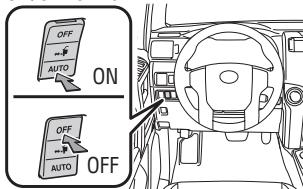

The automatic running boards are linked to side door operation. When a side door is opened or closed, the board on the same side extends or retracts.

FEATURES & OPERATIONS


Lights & turn signals

HEADLIGHTS

Type A




Headlights
Parking lights
DRL ON
OFF

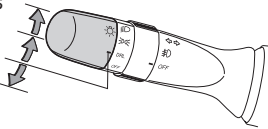

Type B




Headlights
Parking lights
Auto
OFF

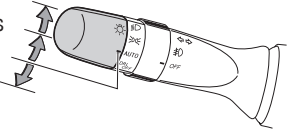

Type C





Headlights
Parking lights
DRL ON

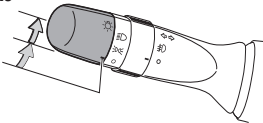

Type D



Headlights
Parking lights
AUTO
DRL ON

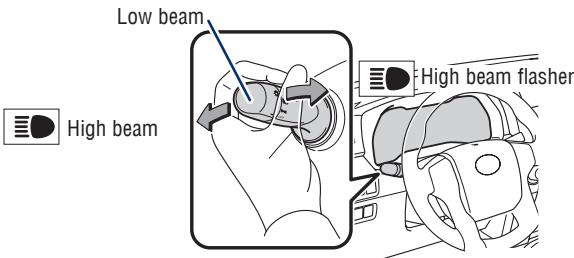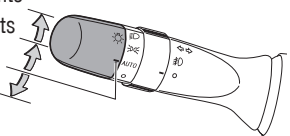


Daytime Running Light system (DRL) Automatically turns on under certain conditions to make vehicle more visible to other drivers. Not for use at night.


Automatic light cut off system Automatically turns lights off after 30 second delay, or lock switch on remote may be pushed after locking.

FRONT FOG LIGHTS

Type A


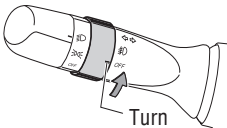


Type B

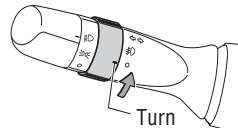

Front fog lights come on only when the headlights are on low beam.


TURN SIGNALS

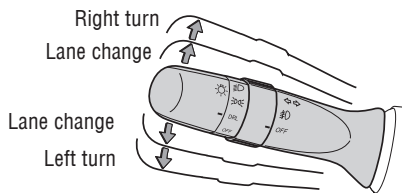


Windshield wipers & washers

FRONT

Type A

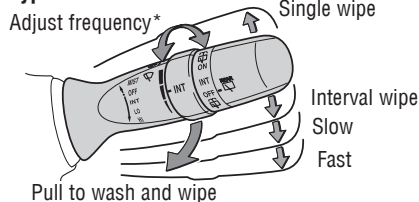


Type B

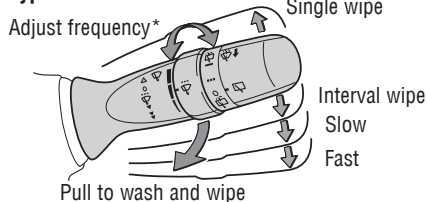


* **Intermittent windshield wiper frequency adjustment** Rotate to increase/decrease wipe frequency.

REAR

Type A

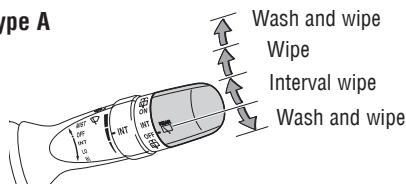

Type B

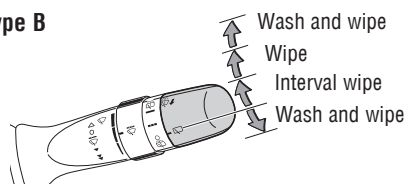


NOTE: Rear wiper and washer operate only when back window is fully closed.


Seat ventilators/heaters (if equipped)

FRONT SEATS


With ventilators

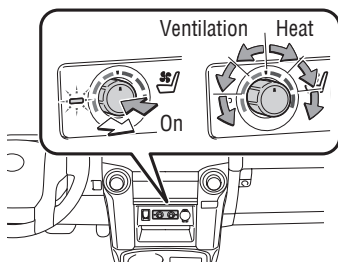

Heater only

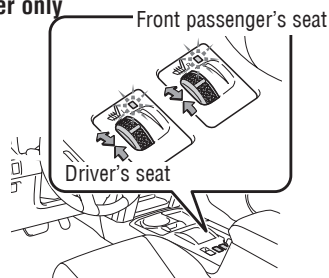

Clock

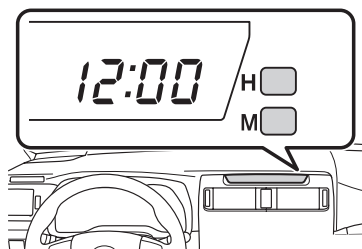


H- Hour set
M- Minute set

FEATURES & OPERATIONS

Air conditioning/heating

AUTOMATIC AIR CONDITIONING (IF EQUIPPED)

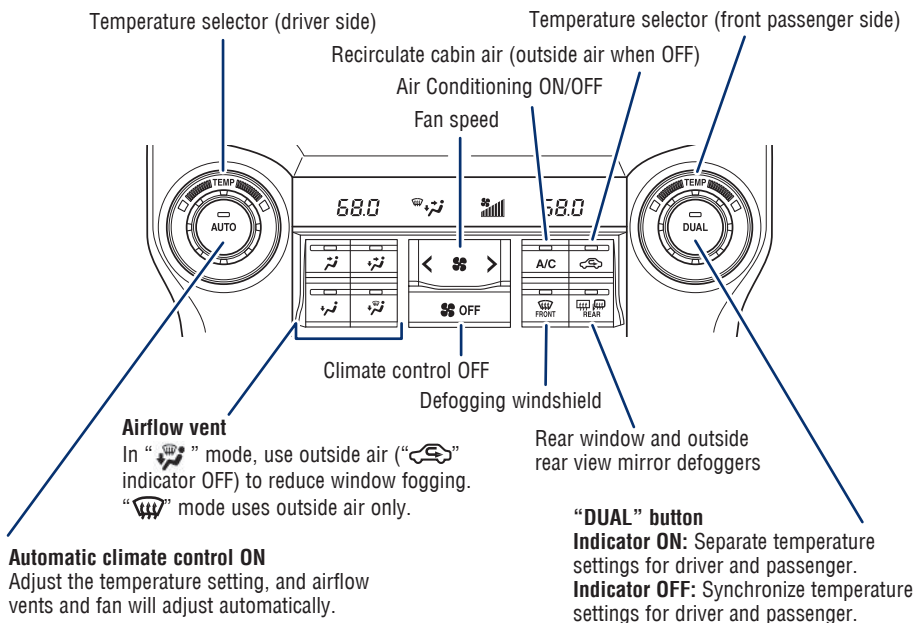


MANUAL AIR CONDITIONING (IF EQUIPPED)

Airflow vent


In “” mode, use outside air (“” indicator OFF) to reduce window fogging. “” mode uses outside air only.

For maximum cooling. Air intake will automatically be set to recirculate.

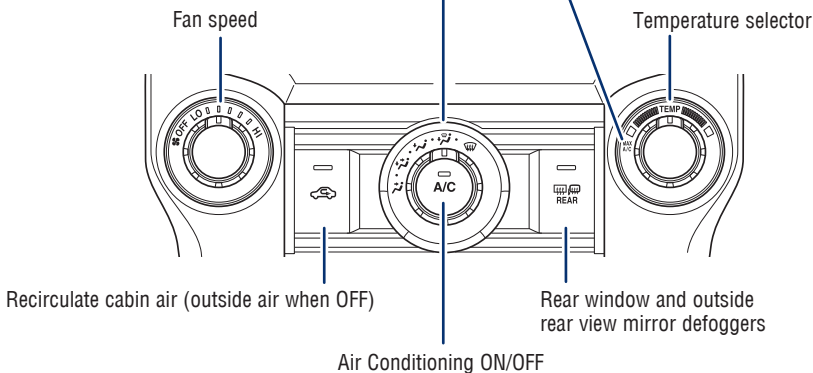



Cruise control

TURN SYSTEM ON/OFF

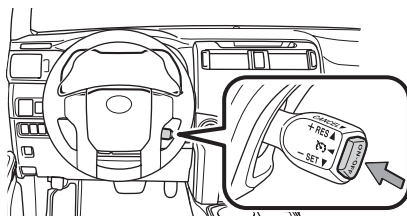

System ON/OFF

FUNCTIONS

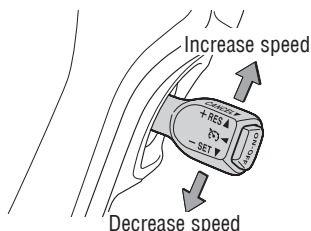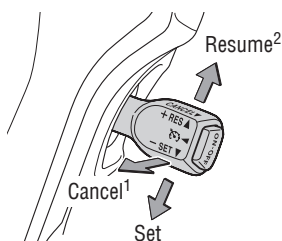

¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed exceeds 25 mph.


Refer to the Owner's Manual for more details.

Moonroof (if equipped)

SLIDING OPERATION


TILTING OPERATION

Recommended open position to minimize wind noise.

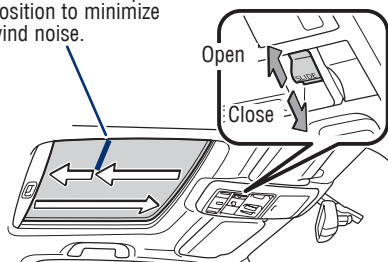

Push once to open partway; again to open completely.

Lightly press either side of the moonroof switch while opening/tilting is in progress, the moonroof stops partway.

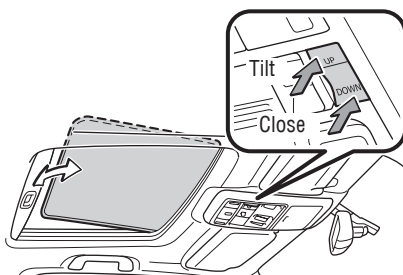


Push once to open completely.

FEATURES & OPERATIONS

Seat adjustments-Front

MANUAL SEAT


Seatback angle

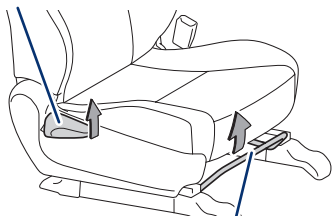

Seat position (forward/backward)

POWER SEAT

Driver seat: seat position, cushion angle and height
Passenger seat: seat position (forward/backward)

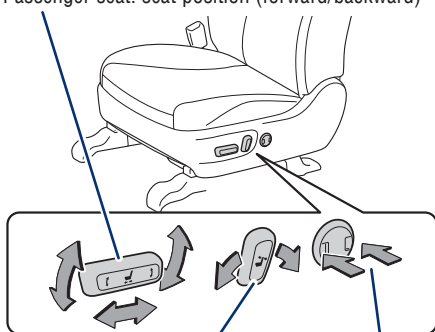


Seatback angle

Lumbar support
(driver side only)

Seat adjustments-Rear

VEHICLES WITH 2ND ROW SEATS

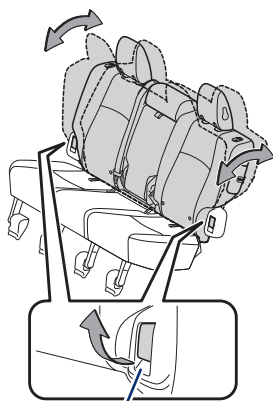


Seatback angle

VEHICLES WITH 3RD ROW SEATS*

Seat position
(forward/backward)

*if equipped

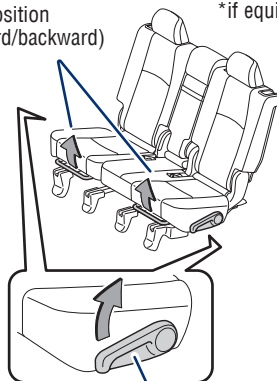

Seatback angle


Seats-Head restraints

FRONT & 2ND ROW


2ND ROW

3RD ROW (IF EQUIPPED)

Vehicles without 3rd row seats

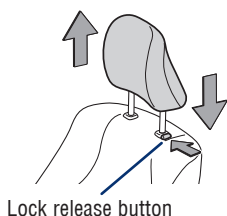


Lock release button

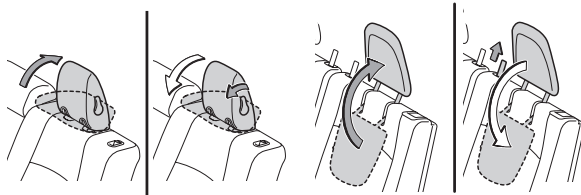


Rear seats-Folding

WITH 2ND ROW SEATS

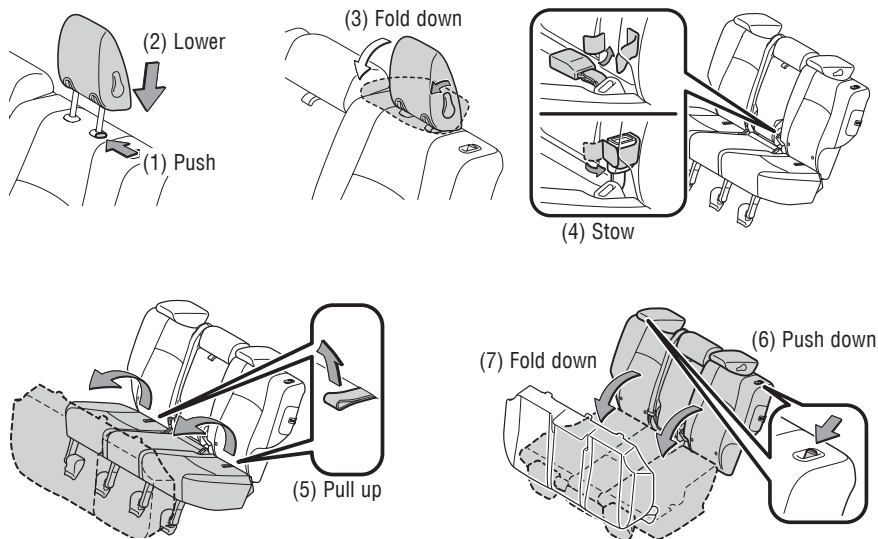


WITH 3RD ROW SEATS (IF EQUIPPED)

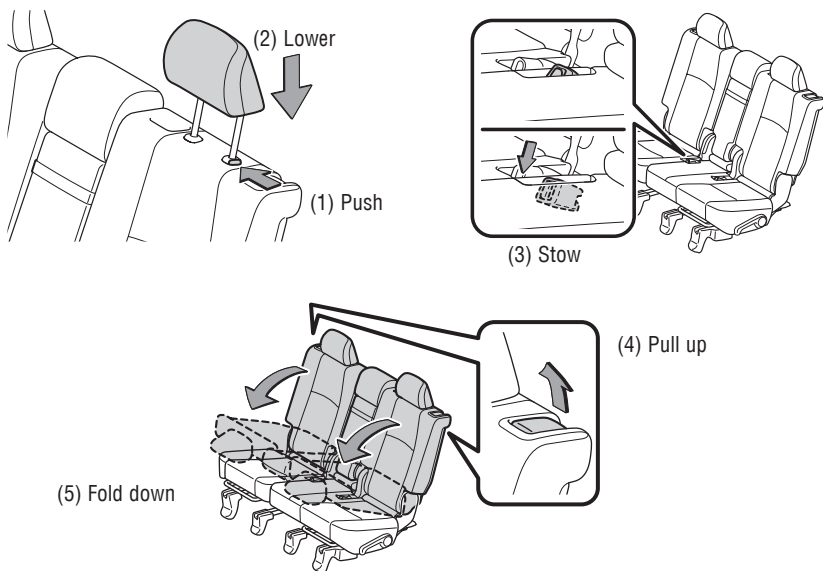


Seats-Stowing 3rd row (if equipped)


From inside

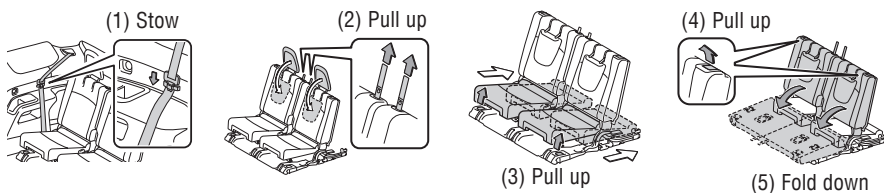

From outside

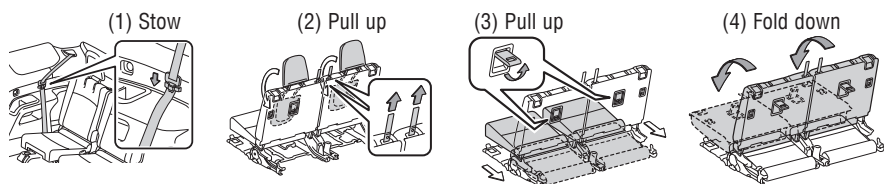


Seats-Returning 3rd row (if equipped)

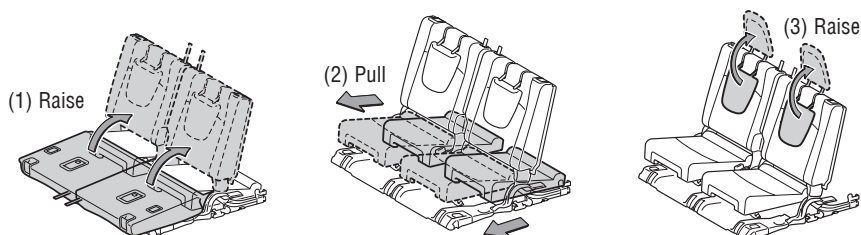


Audio

Refer to the “Navigation and Multimedia System Owner’s Manual” and “2019 Entune™ Audio Quick Reference Guide” for instructions and more information.


ENTUNE™ AUDIO PLUS

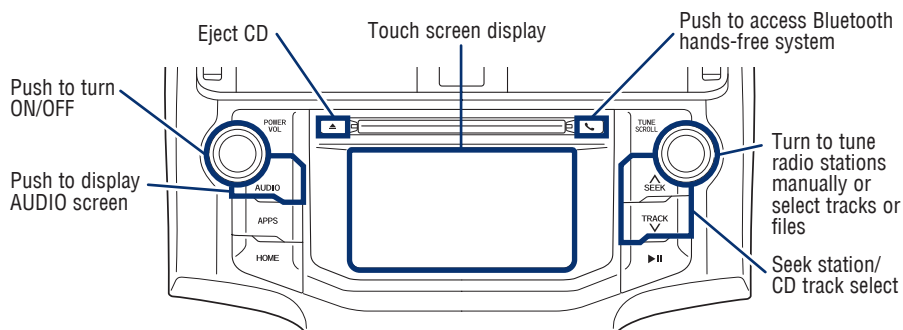

ENTUNE™ PREMIUM AUDIO WITH INTEGRATED NAVIGATION AND APP SUITE

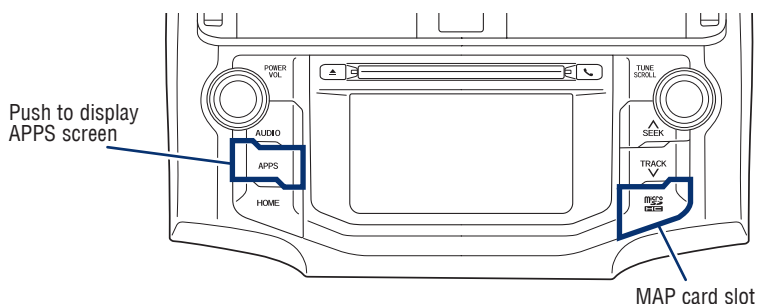

USB media/AUX port

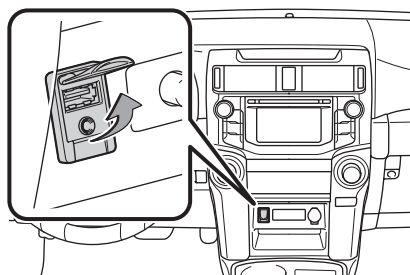

USB media port


By connecting a USB-compatible portable audio device or USB memory stick into the USB media port, you can listen to music through the vehicle's speaker system.

AUX port


By inserting an AUX cable into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

Steering wheel switches & telephone controls (Bluetooth®)


Audio switches

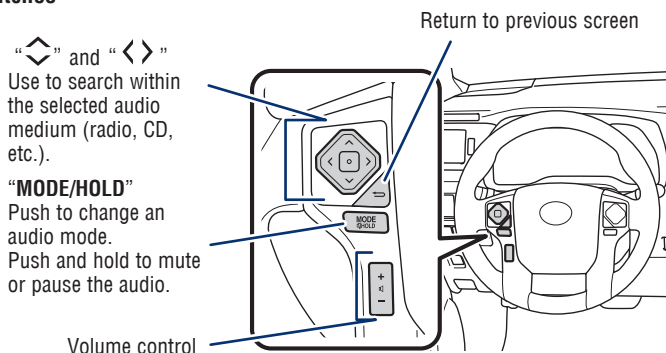

Telephone switches

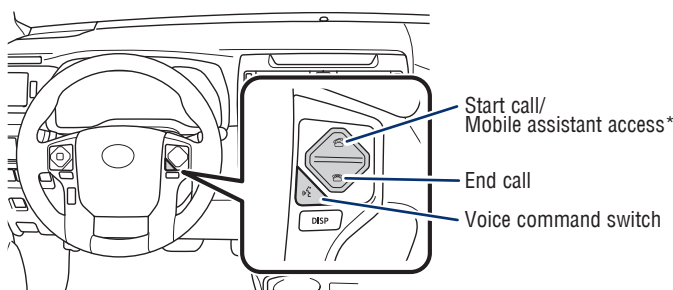

Microphone

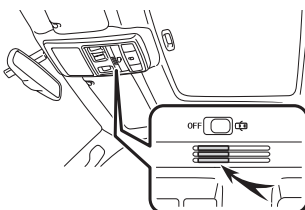

Bluetooth® technology allows dialing or receipt of calls without removing your hands from the steering wheel or using a cable to connect the compatible telephone and the system.

* Push and hold to access Mobile Assistant. When a compatible smartphone is Bluetooth® connected push and hold the off hook switch 2-3 seconds to access Siri® Eyes Free.


Refer to the “Navigation and Multimedia System Owner’s Manual” for more details.

Refer to the “Bluetooth® Device Pairing Section” in this guide for more information about phone connections and compatibility.


NOTE: Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.

Multi-Information Display (MID)

Display

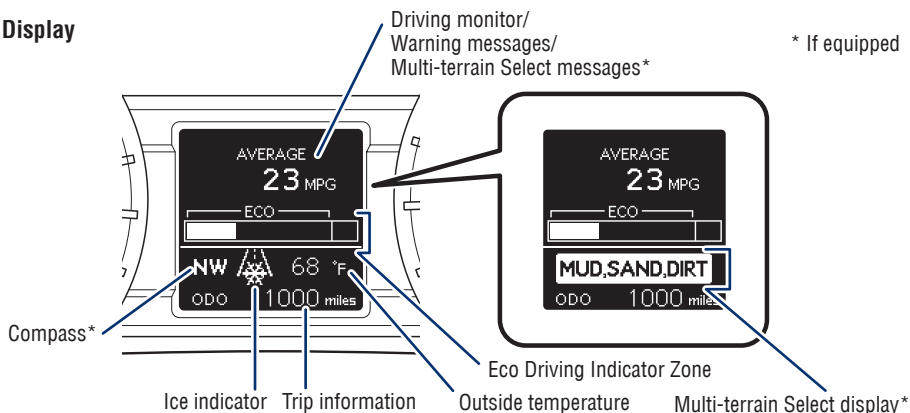



“DISP” switch

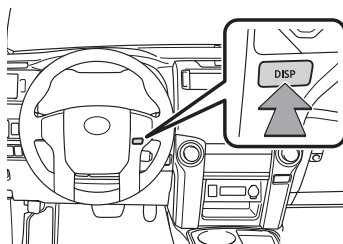

The multi-information display presents the driver with a variety of driving-related data. Items displayed can be switched by pressing the “DISP” switch.

Refer to the Owner's Manual for more settings and customizable features.

Power outlets-120V AC (if equipped)

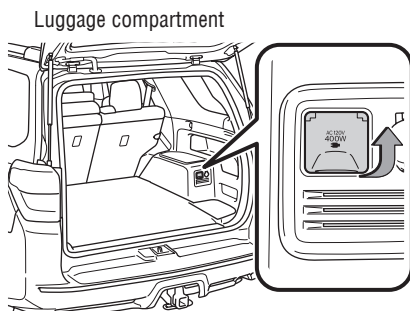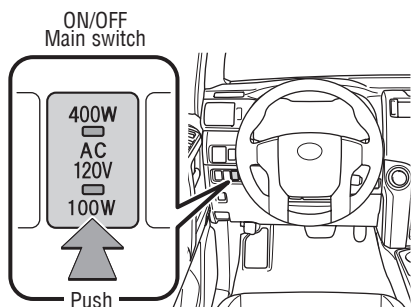


NOTE: The 120V AC power outlet can only be used when engine is running.

FEATURES & OPERATIONS


Power outlets-12V DC

CENTER PANEL

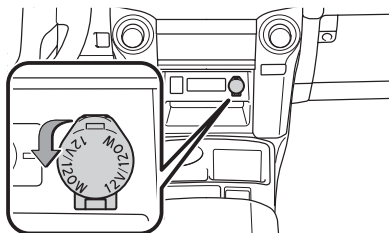


CONSOLE BOX

Outside

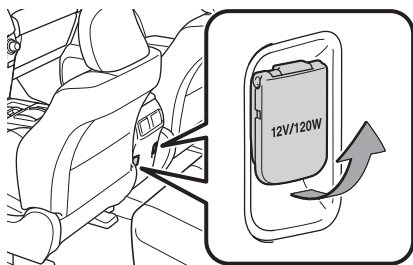


Inside

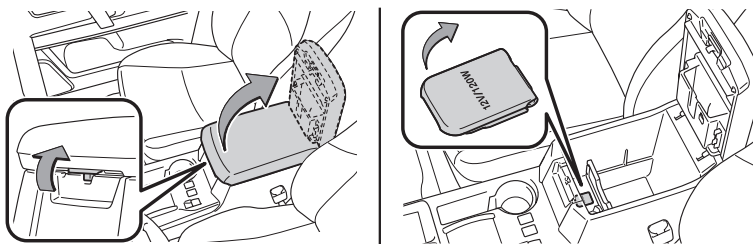


LUGGAGE COMPARTMENT

With 120V AC outlet

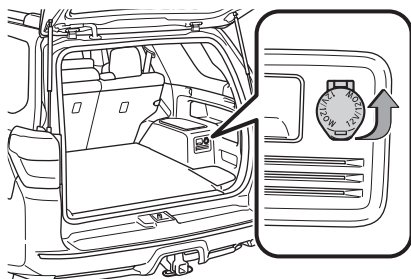

Without 120V AC outlet

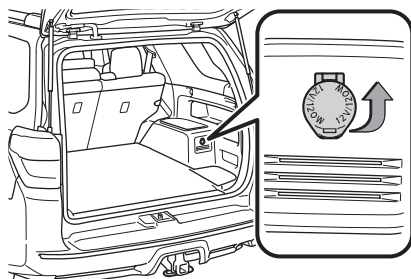

NOTE: Designed for car accessories. Ignition switch/“ENGINE START STOP” switch must be in the “ACC” or “ON” position to be used.

Four-wheel drive (if equipped)

PART-TIME FOUR-WHEEL DRIVE MODELS

Push “UNLOCK” button and then push and turn the selector (type B.)

H2 High speed (2WD)

H4 High speed (4WD)

Shift to “H” with speed below 50 mph (type A) or 62 mph (type B.)

N Neutral


L4 Low speed (4WD)

Stop vehicle, shift to “N” position, then move the lever to “L4” (type A) or push and turn to “L4” (type B.)

Type A



Type B

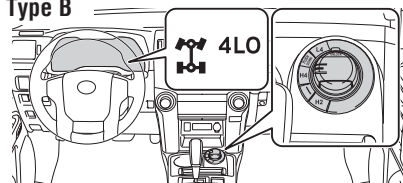

FULL-TIME FOUR-WHEEL DRIVE MODELS

Push “UNLOCK” button and then push and turn the selector.

H4F High speed


H4L High speed

(center differential locked)

L4L Low speed



(center differential locked)

Stop vehicle, shift to “N” position, then push and turn to “L4L.”

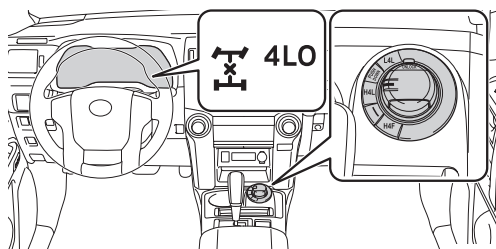

Refer to the Owner's Manual for limitations and more details.

VSC OFF button

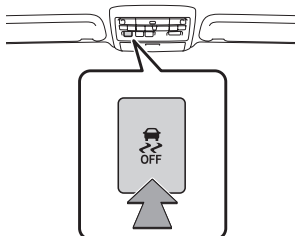


The VSC OFF button is used to switch between modes related to the TRAC, VSC and Auto LSD (2WD) functions.

Refer to Section 4-5 of the Owner's Manual for limitations and more information.

FEATURES & OPERATIONS

Garage door opener (HomeLink®)* (if equipped)

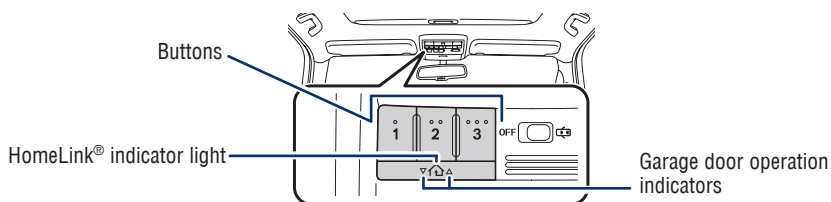


Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.

Refer to the Owner's Manual for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.

* HomeLink® is a registered trademark of Johnson Controls, Inc.

Active traction control system (if equipped)

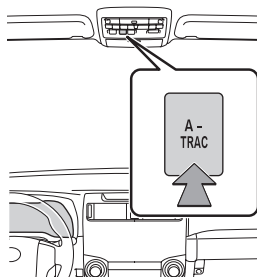


A-TRAC

The active traction control system automatically helps prevent the spinning of 4 wheels when the vehicle is started or accelerated on slippery road surfaces.

Refer to Section 4-5 of the Owner's Manual for limitations and more information.


Downhill assist control system (if equipped)

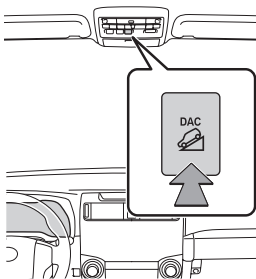

The downhill assist control system helps to prevent excessive speed on steep downhill slopes. The system will operate when the vehicle is traveling under 15 mph (25 km/h) with the accelerator and brake pedals released and the transfer mode is in L4 (part-time 4WD models) or L4L (full-time 4WD models).

Refer to Section 4-5 of the Owner's Manual for limitations and more information.


Rear differential lock system (if equipped)

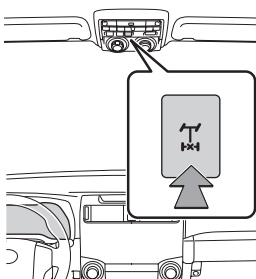


The rear differential lock system is provided for use only when wheel spinning occurs in a ditch or on a slippery or rugged surface. The following systems do not operate when the rear differential is locked. (ABS/Multi Terrain ABS/Brake assist system/VSC/Hill-start assist control)

Refer to Section 4-5 of the Owner's Manual for limitations and more information.

Crawl Control

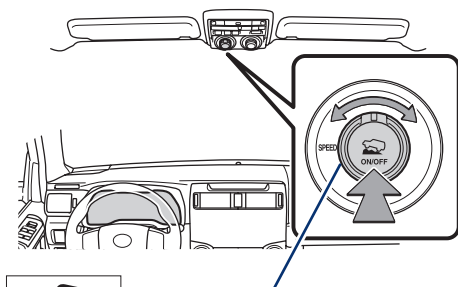

Speed selector dial

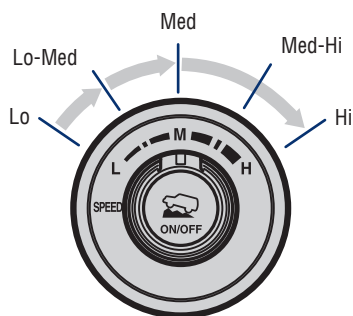

Speed modes

Crawl Control allows travel on extremely rough off-road surfaces at a fixed low speed without pressing the accelerator or brake pedal. Operating status displays on the MID.


Lo to Lo-Med - Rock, mogul (downhill) and gravel (downhill)

Lo-Med to Med - Mogul (uphill)


Med-Hi - Snow, mud, gravel (uphill), sand, dirt, mogul (uphill) and grass

Refer to the Owner's Manual for limitations and more details on this system before attempting to use it.

Multi-terrain select

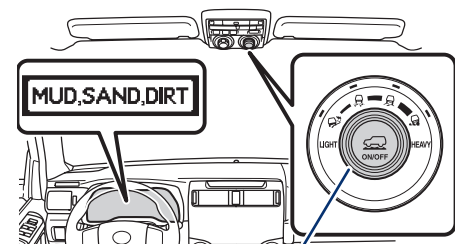

Mode selector dial

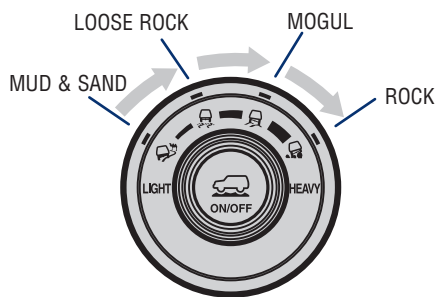

Multi-terrain Select modes

The Multi-terrain Select system has 4 terrain modes. When a terrain mode is selected in accordance with terrain conditions, engine power and active traction control system is controlled to enhance off-road drivability. Additionally, guidance messages such as transfer mode selection advice are displayed on the multi-information display to assist the driver in operating the vehicle.


Refer to the Owner's Manual for limitations and more details on this system before attempting to use it.

Tire Pressure Monitoring (warning) System (TPMS)

If tire pressure becomes critically low on any of the tires, “(!)” indicator light will come on. Correctly adjusting tire inflation will turn off the light after a few minutes. If the light does not turn off, have the system checked by your Toyota dealer.

Refer to the Owner's Manual for more details.


Rear door child safety locks

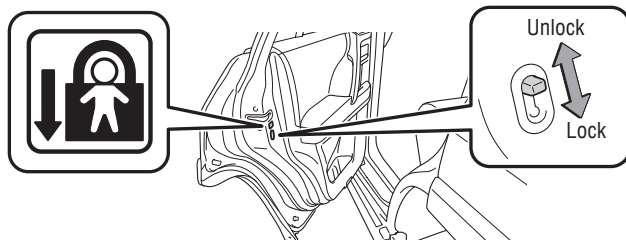

Moving the lever downward will allow the door to be opened only from the outside.

SAFETY & EMERGENCY FEATURES


Seat belts

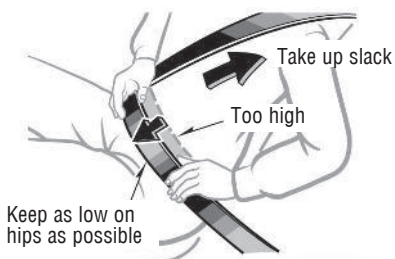

NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic locking retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.


To find more information about seat belts, and how to install a child restraint system, refer to the Owner's Manual.

Seat belts-Shoulder belt anchor

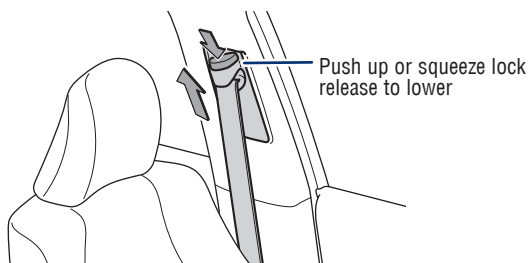


Spare tire & tools

TOOL LOCATION

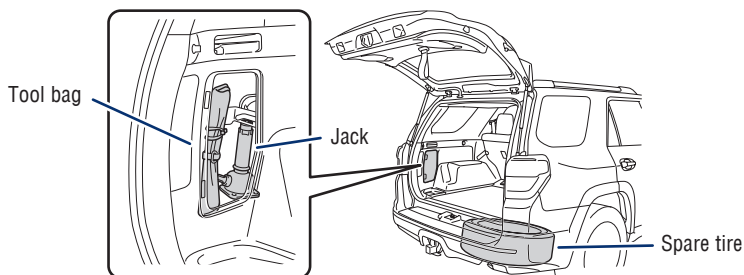


REMOVING THE SPARE TIRE

(1)

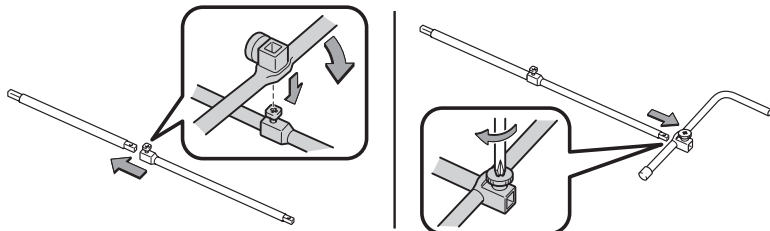


Assemble the jack handle.

(2)

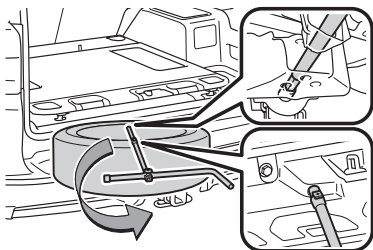

Insert the jack handle end through the opening in the bumper, and into the lowering screw.

(3)

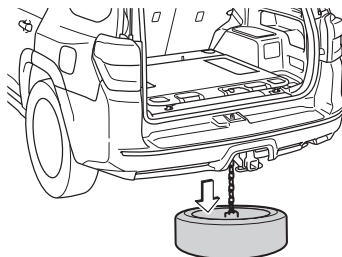

Turn the jack handle counter-clockwise.

Refer to the Owner's Manual for tire changing and jack positioning procedures.

SAFETY & EMERGENCY FEATURES

Star Safety System™

Your vehicle comes standard with the Star Safety System™, which combines Anti-lock Braking System (ABS), Brake Assist (BA), Electronic Brake-force Distribution (EBD), Smart Stop Technology (SST), Traction Control (TRAC) and Vehicle Stability Control (VSC).

Refer to the Owner's Manual for more details and important information on limitations to these systems.

ANTI-LOCK BRAKE SYSTEM (ABS)

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

BRAKE ASSIST (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

SMART STOP TECHNOLOGY (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

VEHICLE STABILITY CONTROL (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

TRACTION CONTROL (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).



Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use Toyota floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

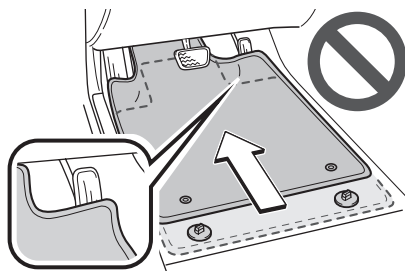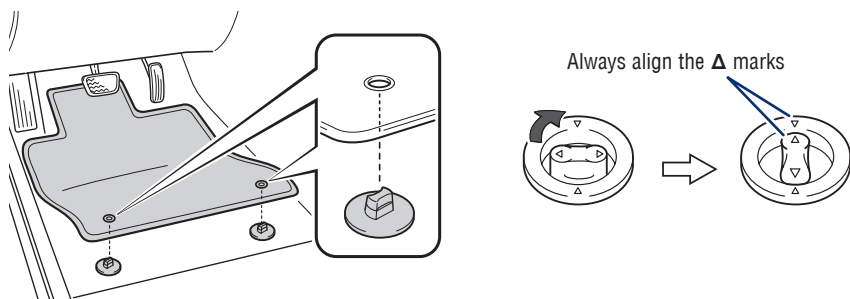

BLUETOOTH® DEVICE PAIRING SECTION

Do not attempt the Bluetooth® Pairing process while driving.

To begin the Bluetooth® Pairing process, press the HOME button on the faceplate of your Toyota Vehicle Entune™ Multimedia Head Unit.¹


Bluetooth® Pairing for Android phone and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Android mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.²

Initiate Bluetooth® on your Android®




STEP 1
From your **APPS SCREEN**, select **SETTINGS**.

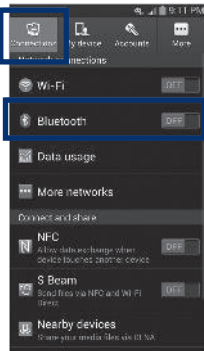

STEP 2
Select **CONNECTIONS** and select **BLUETOOTH**.



STEP 3
Ensure **BLUETOOTH** is **ON**.

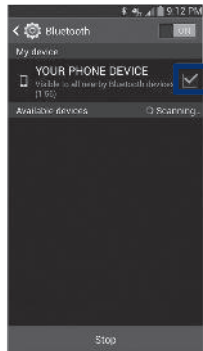

STEP 4
Select **YOUR PHONE DEVICE** to make it discoverable.

Phone will seek out Bluetooth devices while remaining discoverable.



STEP 5
While your Android device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

¹ To determine which head unit is installed in your vehicle, refer to the Audio section in this guide. Entune™ Premium Audio screens are shown in this section. Screens and features may vary by Entune™ system.

² Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

BLUETOOTH® DEVICE PAIRING

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



STEP 6


On your Toyota Vehicle Entune™ Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.



STEP 7


Select **BLUETOOTH**.

Image shown is a sample image, features may vary.

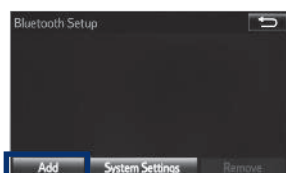

STEP 8


Select **ADD**, to add your phone device.

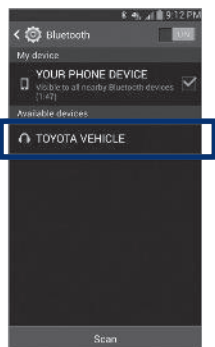

STEP 9


Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.

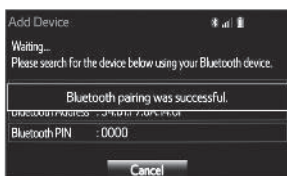

STEP 10


Your smartphone is now paired with Entune.

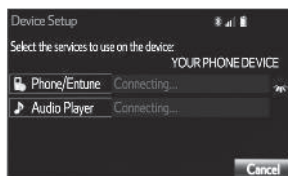

STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.


Initiate Bluetooth® on your Entune™ Multimedia Head Unit

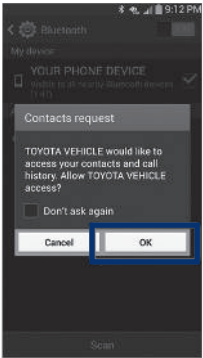

STEP 12

Using your smartphone, you will need to allow Entune access to your messaging and contacts.

It is recommended to check the “Don’t ask again” box, so as not to have to press OK every time the phone makes a Bluetooth connection with your Toyota.

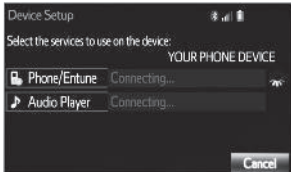

STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

Bluetooth® Pairing for iPhone and Entune™ touch screen system

****Do not attempt the Bluetooth® Pairing process while driving.****


Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all iPhone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

Initiate Bluetooth® on your iPhone®



STEP 1

From the **HOME SCREEN**, select **SETTINGS**.

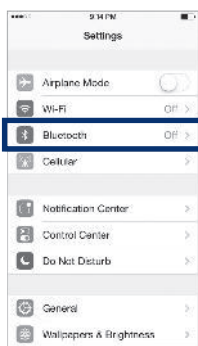


STEP 2

Select **BLUETOOTH**.



STEP 3

Ensure **BLUETOOTH** is **ON**.

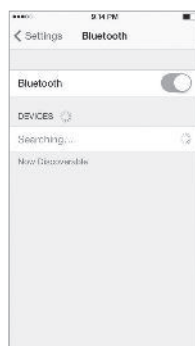

STEP 4

Your iPhone will seek out Bluetooth devices while remaining discoverable.



STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.


For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.



STEP 7


Select **BLUETOOTH**.

Image shown is a sample image, features may vary.

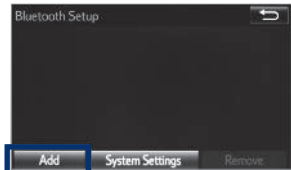

STEP 8


Select **ADD**, to add your phone device.

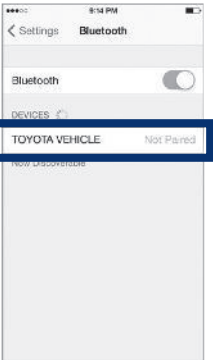

STEP 9


Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.

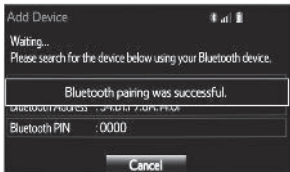

STEP 10


Your smartphone is now paired with Entune.

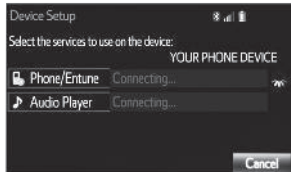

STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.


BLUETOOTH® DEVICE PAIRING

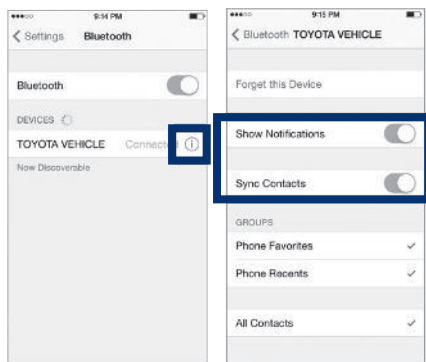

STEP 12

Using your smartphone, you may need to allow Entune access to your messaging and contacts.

Only current iPhone text messages can be viewed on the head unit. iPhone does not allow text message reply.

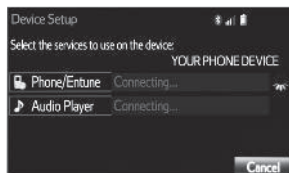

STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.


1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

Bluetooth® Pairing for Windows Phone and Entune™ touch screen system

****Do not attempt the Bluetooth® Pairing process while driving.****

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Windows Phone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

Initiate Bluetooth® on your Windows Phone®

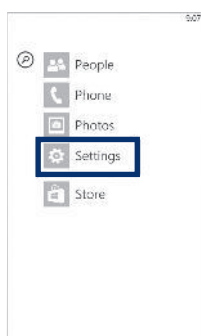

STEP 1

From your APP LIST, select **SETTINGS**.



STEP 2

Select **BLUETOOTH**.



STEP 3

Ensure **BLUETOOTH** is **ON**.



STEP 4

Phone will seek out Bluetooth devices while remaining discoverable.



STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

BLUETOOTH® DEVICE PAIRING

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth® enabled on your phone and ready to pair, you will need to initiate Bluetooth® on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



STEP 6


On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.



STEP 7

Select **BLUETOOTH**.


Image shown is a sample image, features may vary.

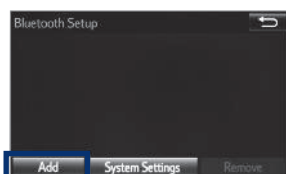

STEP 8

Select **ADD**, to add your phone device.


For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.

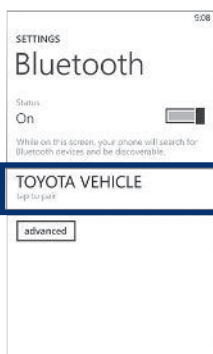

STEP 9


Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.

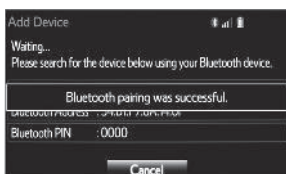

STEP 10


Your smartphone is now paired with Entune.

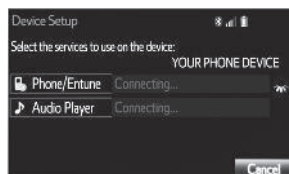

STEP 11


Once paired, Entune will attempt to connect audio and contacts on your phone.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

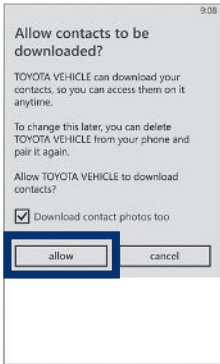

STEP 12

Using your smartphone, you may need to allow Entune access to your contacts.

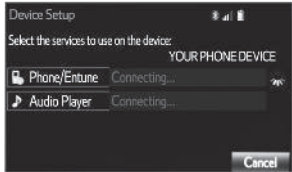

STEP 13

A confirmation will appear that your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

NOTES

NOTES

NOTES

NOTES

NOTES

NOTES

NOTES



www.toyota.com/owners

CUSTOMER EXPERIENCE CENTER

1-800-331-4331



Printed in U.S.A. 07/18

18-MKG-12045



00505QRG194RUN