

QUICK REFERENCE GUIDE



TOYOTA

COROLLA
COROLLA HYBRID

2022

2022

COROLLA / COROLLA HYBRID

This Quick Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Quick Reference Guide is not intended as a substitute for the Owner's Manual located in your vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor North America, Inc. wish you many years of satisfied driving in your new Corolla.

A word about safe vehicle operations

This Quick Reference Guide is not a full description of Corolla operations. Every Corolla owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the Owner's Manual. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this Quick Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

OVERVIEW

Engine maintenance	11-12
Fuel tank door release & cap	10
Hood release	10
Indicator symbols	6-7
Instrument cluster	4-5
Instrument panel	2-3
Instrument panel light control	12
Keyless entry ^{1,2}	8-9
Smart Key system ^{1,2}	9

FEATURES & OPERATIONS

Air conditioning/heating ^{1,2}	28-29
Audio	25
Auto lock/unlock ^{1,2}	14
Blind Spot Monitor (BSM) and Rear Cross Traffic Alert (RCTA) ^{1,2}	32
Bottle holders	19
Clock	27
Continuously variable transmission/ Hybrid transmission	13
Cup holders	19
Door locks	16
Driving mode select switches	30-31
Electric parking brake	18-19
EV drive mode	31
Heated seats	27
Hybrid Synergy Drive System	15
Lights ^{1,2} & turn signals	22
Manual transmission	14
Moonroof ¹	16
Multi-Information Display (MID) ²	20
Power outlet-12V DC	23
Power windows ¹	16
Qi Wireless charger	24
Rear seats-Folding	21
Rear view monitor system	33
Seat adjustments-Front	21
Seats-Head restraints	21
Steering lock release	17

FEATURES & OPERATIONS (continued)

Steering wheel switches & telephone controls (Bluetooth®)	26
Tilt & telescopic steering wheel	17
USB charge port	24
USB media port	23
Vehicle Stability Control (VSC)/ TRAC OFF switch	33
Windshield wipers & washers	23

TOYOTA SAFETY SENSE™ 2.0 (TSS 2.0)

Automatic High Beams (AHB)	48
Dynamic Radar Cruise Control (DRCC) or Full-Speed Range DRCC	45-47
Lane Departure Alert with Steering Assist (LDA w/SA)	38-41
Lane Tracing Assist (LTA)	41-44
Pre-Collision System with Pedestrian Detection (PCS w/PD)	35-37
Quick overview-Toyota Safety Sense™ 2.0 (TSS 2.0)	34
Road Sign Assist (RSA)	49
Sensors	35

SAFETY & EMERGENCY FEATURES

Floor mat installation	48
Rear door child safety locks	50
Safety Connect®	51
Seat belts	50
Seat belts-Shoulder belt anchor	50
Spare tire & tools	54-55
Star Safety System™	56-57
Tire Pressure Monitoring (warning) System (TPMS)	52
Tire repair kit & tools	53
Trunk-Internal release	51


BLUETOOTH® DEVICE PAIRING SECTION

58-60


¹ Visit your Toyota dealer for information on customizing this feature.

² Programmable by customer. Refer to the Owner's Manual for instructions and more information.

Instrument panel


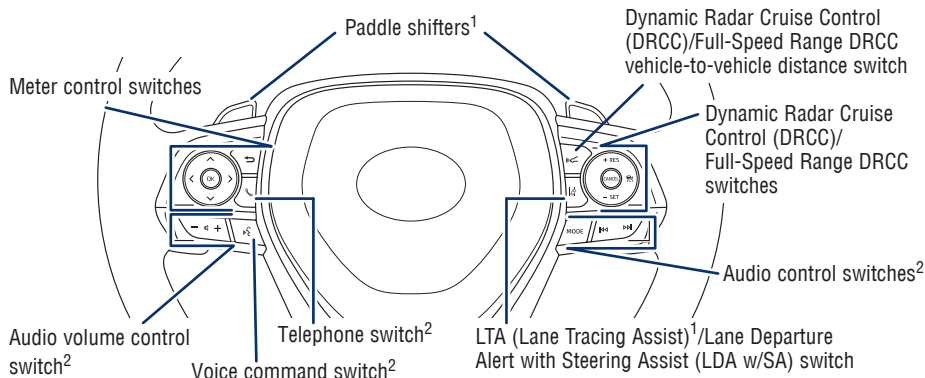


Steering wheel controls

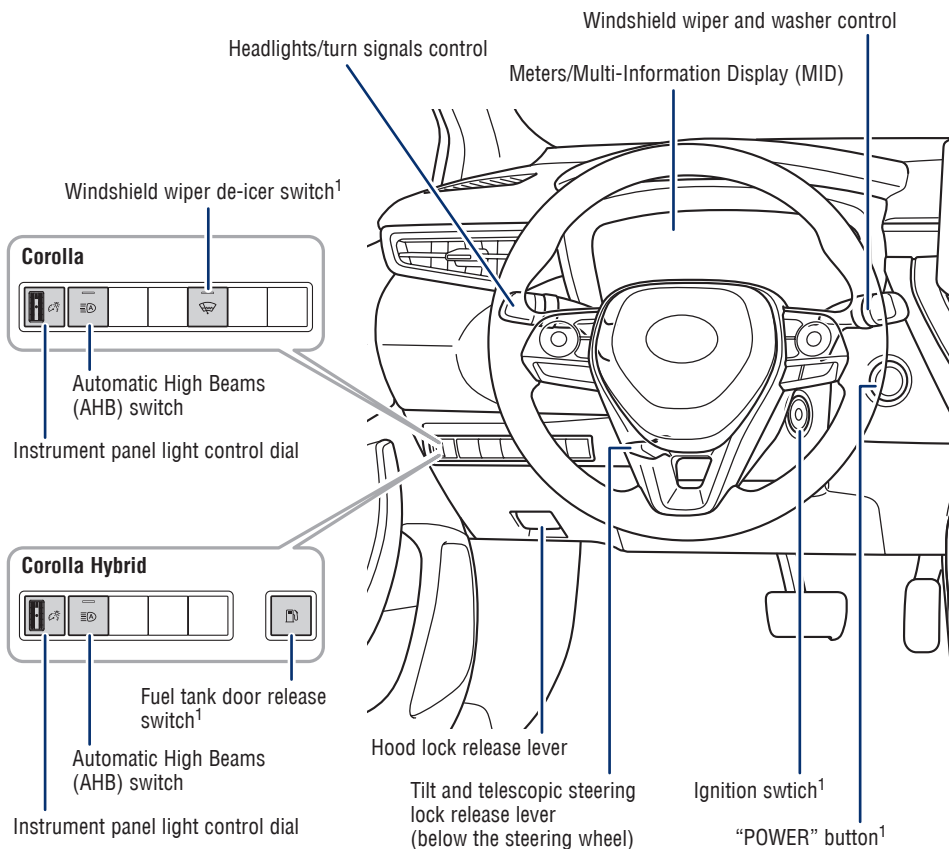


¹ If equipped.

² For details, refer to the "Owner's Manual", "Navigation and Multimedia System Owner's Manual" or visit www.toyota.com/audio-multimedia for additional resources.

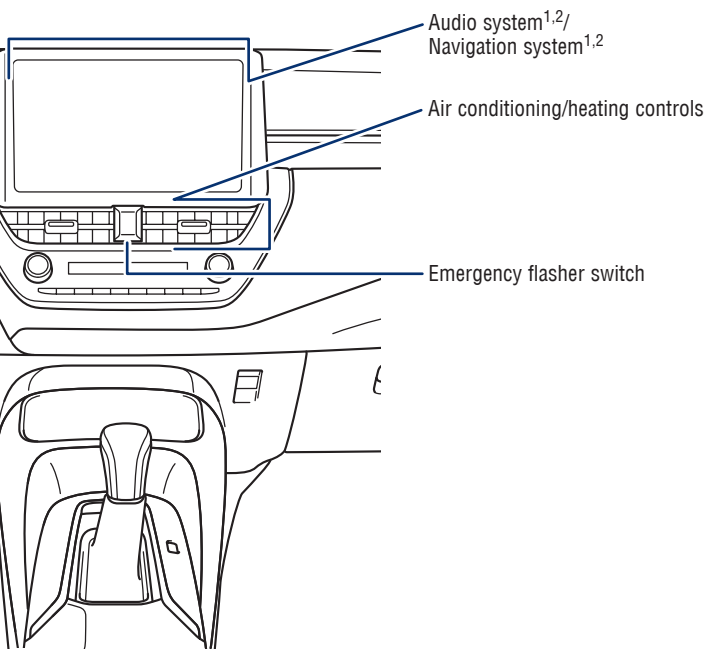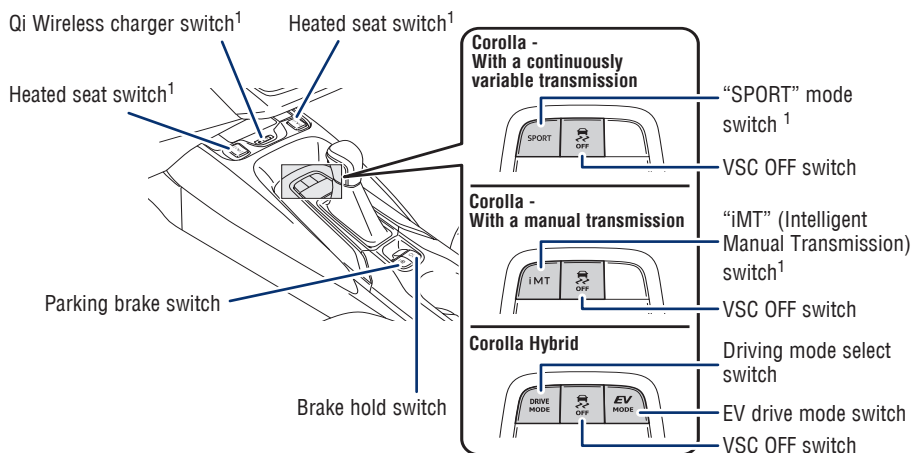


COROLLA


Vehicles equipped with 4.2-in display

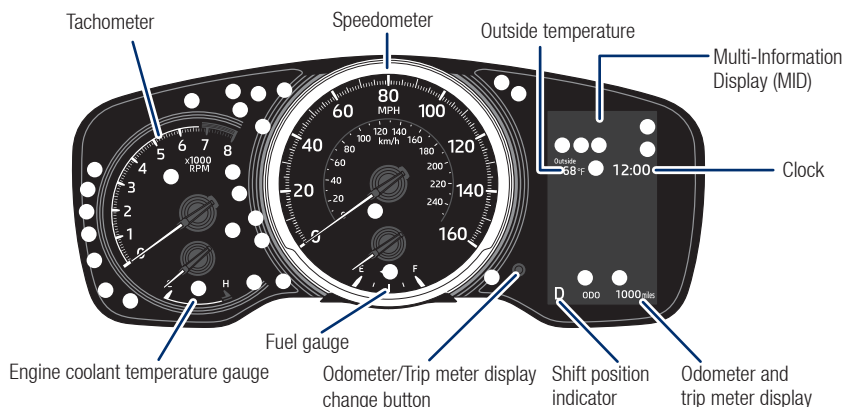


Vehicles equipped with 7-in display (Analog speedometer)

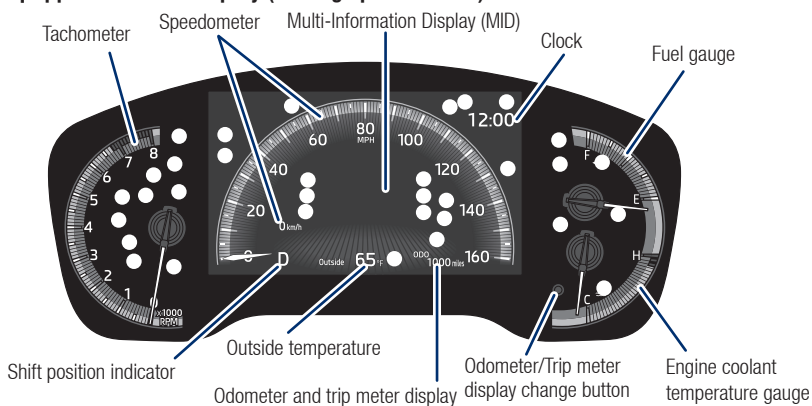


Vehicles equipped with 7-in display (Digital speedometer)

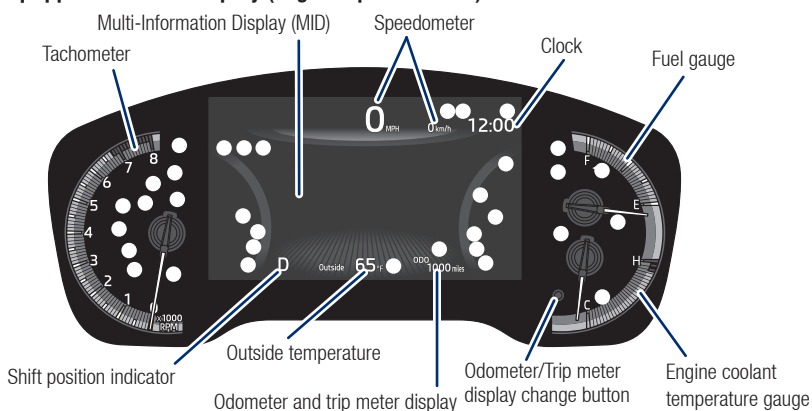

Vehicles equipped with 7-in display (Analog speedometer)

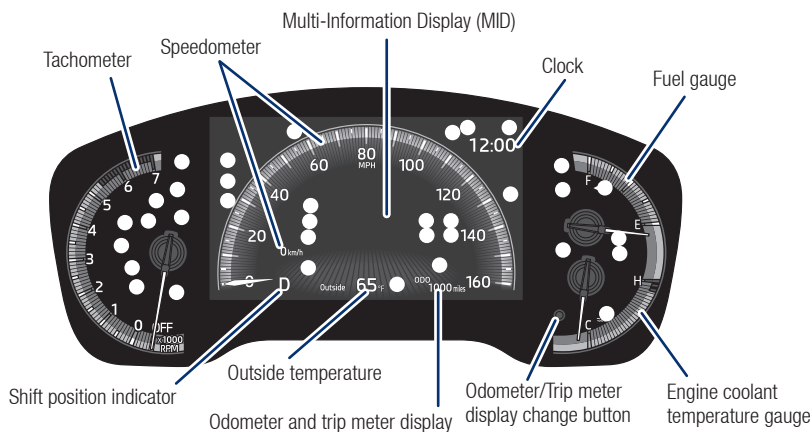

Vehicles equipped with 7-in display (Digital speedometer)

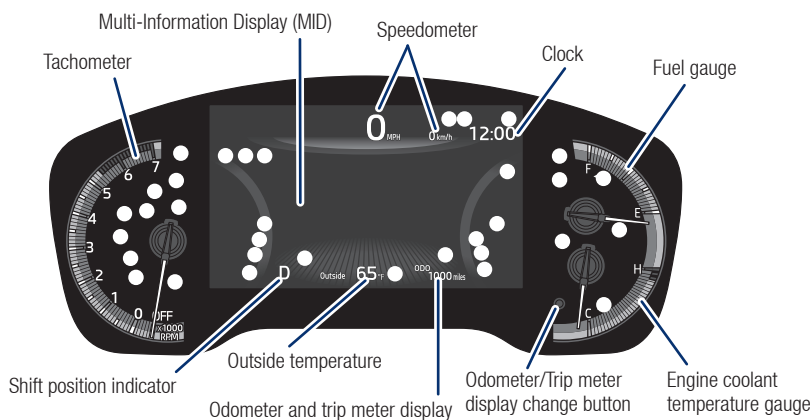

○ Service indicators and warning lights

OVERVIEW

Indicator symbols

For details, refer to “Warning lights and indicators,” Section 2-1, 2022 Owner's Manual.

	“AIR BAG ON/OFF” indicator ¹		Eco drive mode indicator ⁶
	Airbag SRS warning ¹		Eco Driving Indicator light ^{1,4,5}
	Anti-lock Brake System (ABS) warning ¹		Electric power steering system warning [red/yellow] ¹
	Auto EPB OFF indicator ^{1,4,5}		EV drive mode indicator ⁶
	Automatic High Beams (AHB) indicator		EV indicator ⁶
	Blind Spot Monitor (BSM) indicator ⁴		Fuel tank door position
	BSM outside rear view mirror indicators ⁴		Headlight low/high beam indicators
	Brake hold operating indicator ^{1,2,4}		High coolant temperature warning
	Brake hold standby indicator ^{1,4}		Hybrid system overheat warning ⁶
	Brake Override System/Drive-Start Control warning		iMT indicator [orange/green] ^{4,5}
	Brake system warning ¹		Lane Tracing Assist (LTA) ⁴ / Lane Departure Alert with Steering Assist indicator (LDA w/SA) [white/green/orange ³]
	Brake system warning (yellow) ¹		Low engine oil pressure warning
	Charging system warning ¹		Low fuel level warning
	Constant speed cruise control/ Full-Speed Range Dynamic Radar Cruise Control (DRCC) indicator		Low outside temperature indicator
	Constant speed cruise control/ Full-Speed Range DRCC SET indicator		Low tire pressure warning ¹
	Driver's and front passenger's seat belt reminder (alarm will sound when the vehicle is on)		



Malfunction/Check Engine indicator¹



Parking brake indicator²



Power mode indicator⁶



Pre-Collision System (PCS) warning^{1,2}



READY indicator⁶



RCTA OFF indicator^{1,2,4}



Slip indicator^{1,3}



Sport mode indicator^{4,5}



Rear passengers' seat belt reminder



Security indicator



Smart Key system indicator⁴



Turn signal indicator



Vehicle Stability Control (VSC) OFF indicator¹

¹ If the indicator does not turn off within a few seconds of starting the vehicle, there may be a malfunction. Have the vehicle inspected by your Toyota dealer.

² If the indicator flashes, there may be a malfunction. Refer to the Owner's Manual.

³ If the indicator flashes, it indicates that the system is operating.

⁴ If equipped.


⁵ Corolla only.

⁶ Corolla Hybrid only.

OVERVIEW


Keyless entry (if equipped)

UNLOCKING OPERATION

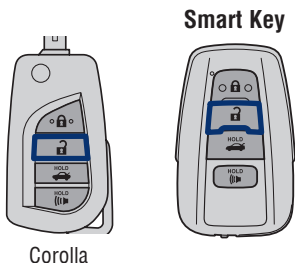


Push

Push ONCE: Driver door
TWICE: All doors

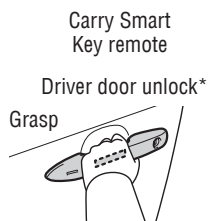


NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.


LOCKING OPERATION

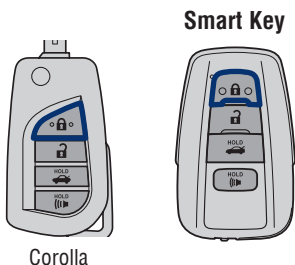


Push

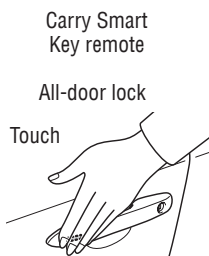

TRUNK LOCKING/UNLOCKING

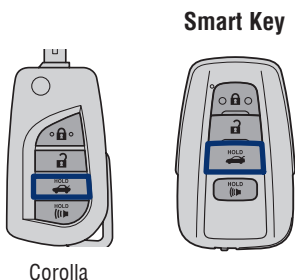

Push and hold

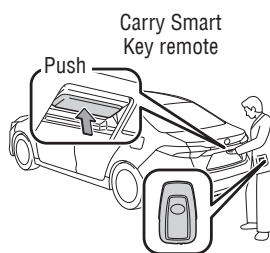

* Driver door unlocking function can be programmed to unlock driver door only, or all doors. In some models, grasping front passenger door handle will unlock all doors.

Please refer to the Owner's Manual for more details on how to program the doors.

NOTE: Doors may also be locked/unlocked using the mechanical key (vehicle with a Smart Key system.)

PANIC BUTTON

Smart Key



Corolla



HOLD


Push and hold



Smart Key system (if equipped)


START FUNCTION

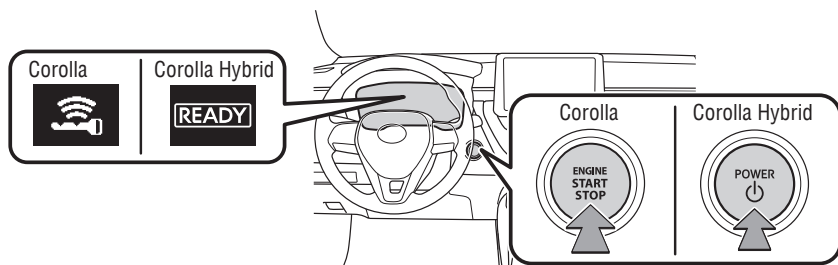

NOTE: The Smart Key must be carried to enable the start function. With the shift lever in Park* or N** and the brake pedal* or clutch pedal** depressed, push the power button.

POWER (WITHOUT STARTING VEHICLE)

Without depressing the brake pedal* or clutch pedal**, pressing the power button will change the operation mode in succession from:

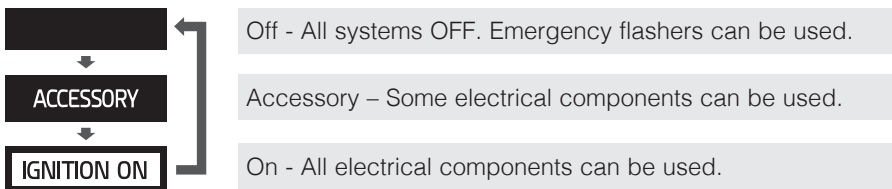


* Available only on vehicles with continuously variable transmissions or hybrid system




** Available only on vehicles with manual transmissions

Fuel tank door release & cap

Corolla


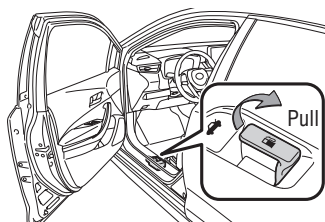


Corolla Hybrid

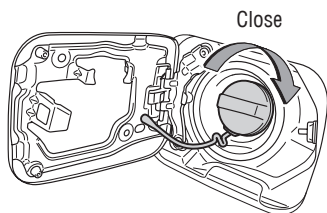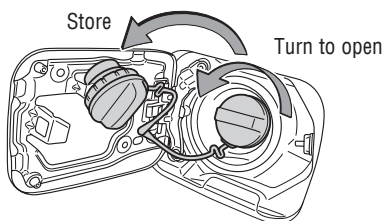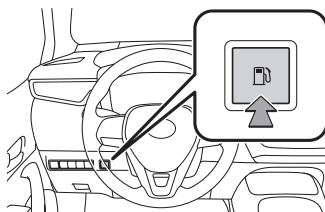


NOTE: Tighten until one click is heard. If the cap is not locked or tightened enough, the Check Engine indicator “ CHECK” may illuminate.

Hood release

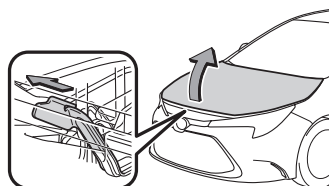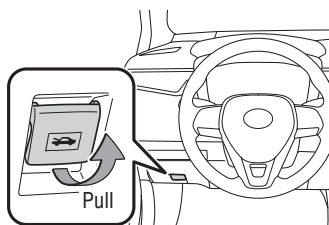

Pull the latch to the left and raise hood

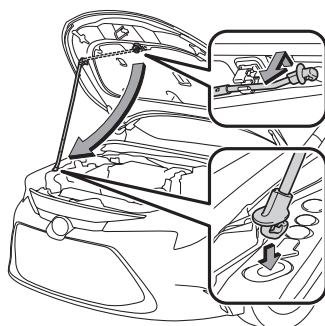


Insert the rod to hold hood open

Engine maintenance

1.8 L 4-CYLINDER (2ZR-FAE) ENGINE - COROLLA

Engine coolant reservoir

Engine oil filler cap

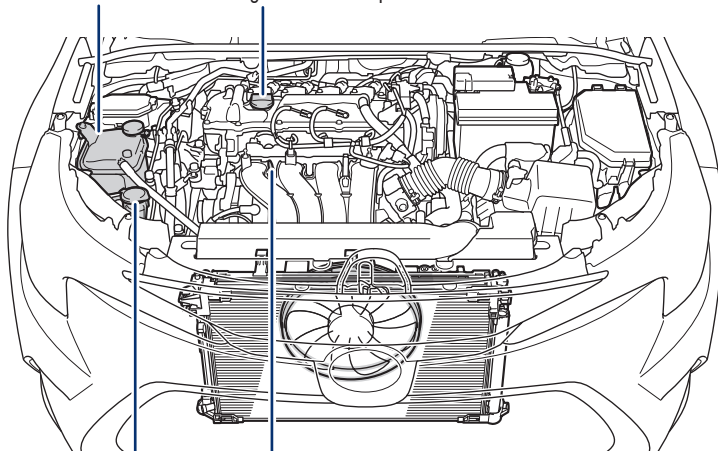


Washer fluid tank

Engine oil level dipstick

2.0 L 4-CYLINDER (M20A-FKS) ENGINE - COROLLA

Engine coolant reservoir

Engine oil filler cap

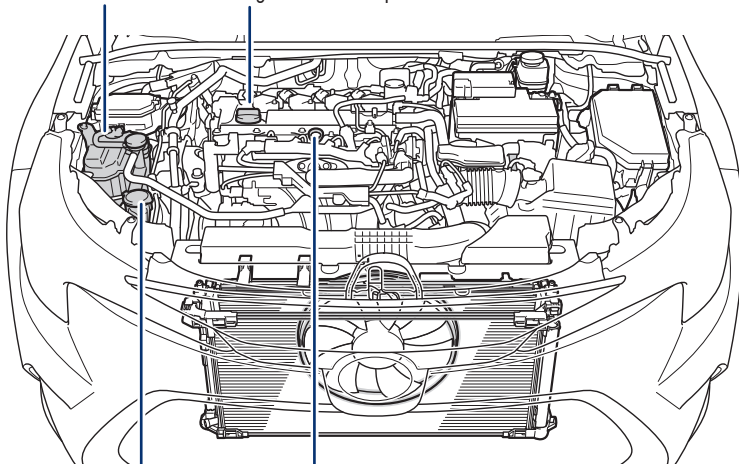

Washer fluid tank


Engine oil level dipstick

OVERVIEW

COROLLA HYBRID

Engine coolant reservoir

Engine oil filler cap

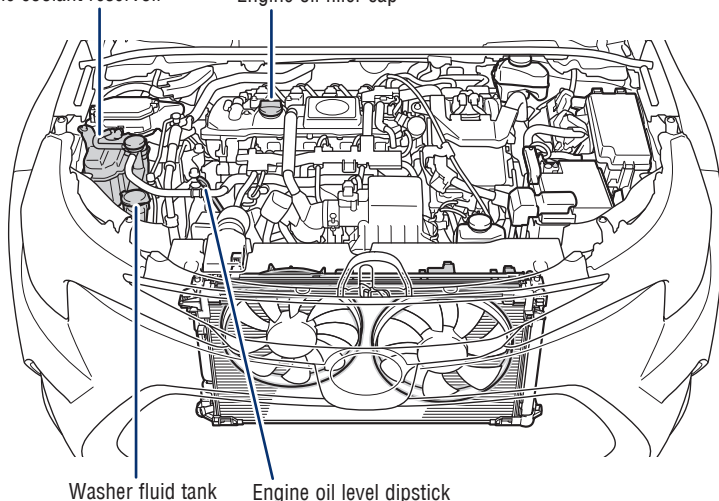


Washer fluid tank

Engine oil level dipstick

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty & Maintenance Guide.”


Instrument panel light control

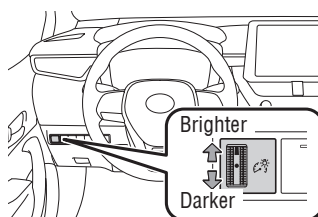


FEATURES & OPERATIONS

Continuously variable transmission / Hybrid transmission

VEHICLES EQUIPPED WITHOUT PADDLE SHIFTERS -
COROLLA / COROLLA HYBRID

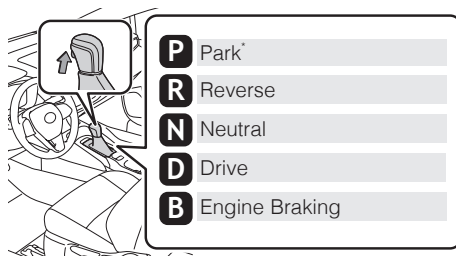

VEHICLES EQUIPPED WITH PADDLE SHIFTERS** - COROLLA

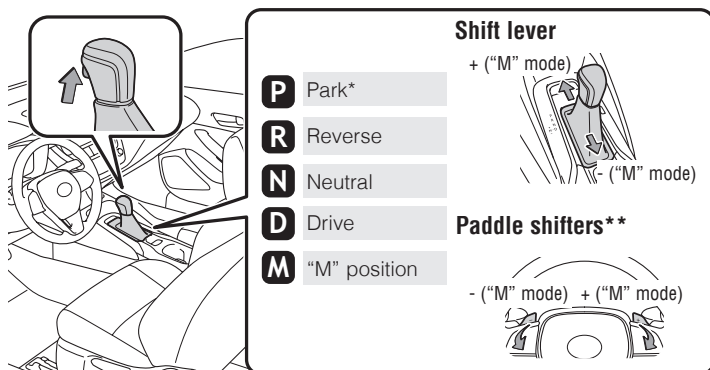

* The vehicle must be on and the brake pedal depressed to shift from Park.

** If equipped.

CHANGING GEAR STEPS IN THE M POSITION

Shift the shift lever to "M" position from "D" position.

Shift lever type:

- + : Upshift (push and release)
- : Downshift (pull and release)

Paddle shifters type (if equipped):


- + : Upshift (pull and release)
- : Downshift (pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

Refer to the Owner's Manual for more details.

FEATURES & OPERATIONS

Manual transmission (if equipped)

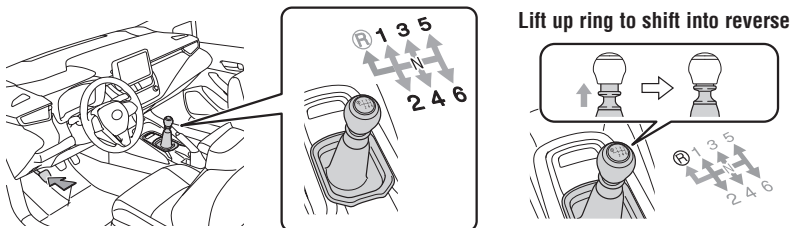

Auto lock/unlock

Automatic door locks can be programmed to operate in different modes, or turned OFF.

DEFAULT SETTING*

Shift position linked door locking/unlocking function

- Doors lock when shifting from Park.
- Doors unlock when shifting into Park.

CUSTOMIZED SETTING

Speed linked door locking function

- Doors lock when the vehicle speed goes above approximately 12 mph (20 km/h) or higher.

Driver's door linked door unlocking function

- Doors automatically unlock when the driver's door is opened.

* The Shift position linked door locking/unlocking function is only available on vehicles with continuously variable transmissions or hybrid system. The default setting for vehicles with manual transmissions is OFF.

Refer to the Owner's Manual or contact your Toyota dealer for more details.

Hybrid Synergy Drive System


The Hybrid Synergy Drive System utilizes a computer-controlled gasoline engine and electric motor to provide the most efficient combination of power for the vehicle. To conserve energy, when the brakes are applied, the braking force generates electricity which is then sent to the traction battery. In addition, the engine shuts off when the vehicle is stopped. The benefits are better fuel economy and reduced vehicle emissions.

NOTE: Fuel consumption and energy information of the Hybrid System are shown on the Multi-Information Display (MID) and the Audio Multimedia system screen.

TIPS FOR IMPROVED FUEL ECONOMY


- Ensure tire pressures are maintained at levels specified in the Owner's Manual.
- When possible, link trips to reduce engine cold starts.
- Avoid driving at speeds that are higher than necessary, especially on the highway.
- When possible, avoid sudden stops to maximize regenerative braking energy.
- Minimize use of the air conditioning.

STARTING YOUR VEHICLE

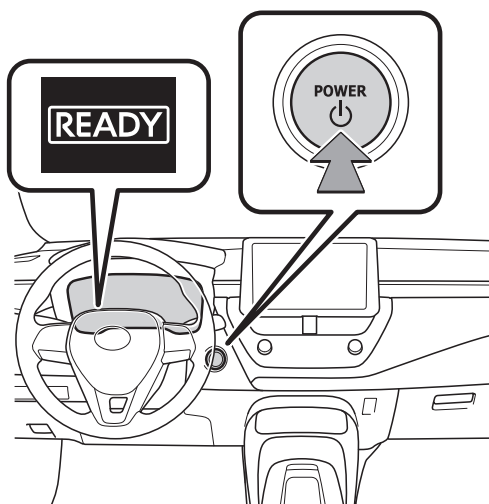

1. Put the shift lever in "P."
2. Depress the brake pedal, and "P" will be displayed on the Multi-Information Display (MID).
3. Press the "POWER" button briefly and firmly.
4. The "READY" light will indicate. After a few seconds, when the light remains steady and a beep sounds, shift the gear to the desired position and you may begin driving.


Door locks

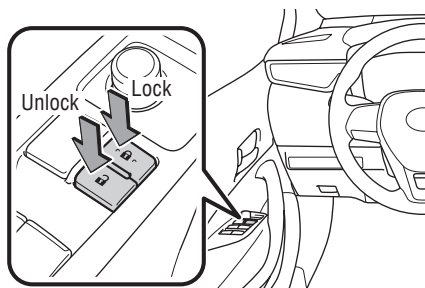

Moonroof (if equipped)


SLIDING OPERATION

Recommended open position to minimize wind noise.

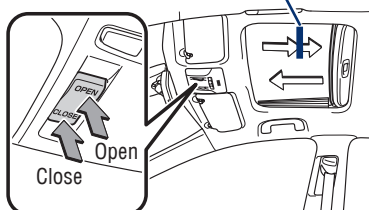

Push once to open partway.
Push again to open completely.

TILTING OPERATION

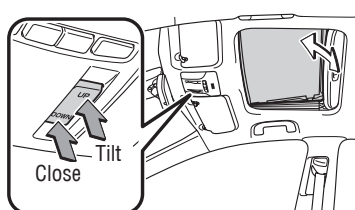


Push once to open completely.


Lightly press either side of the moonroof switch while opening/tilting is in progress, the moonroof stops partway.

Power windows

Driver side

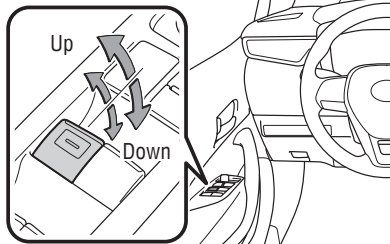

Window lock switch

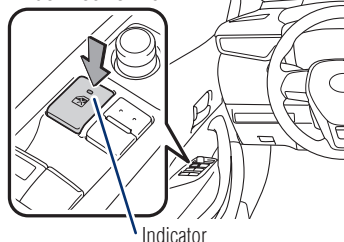

All window auto up/down


Push the switch completely down or pull it completely up and release to fully open or close. To stop the window partway, operate the switch in the opposite direction.

Window lock switch

Deactivates all passenger windows. Driver's window remains operable.


Steering lock release

Without Smart Key system (if equipped)

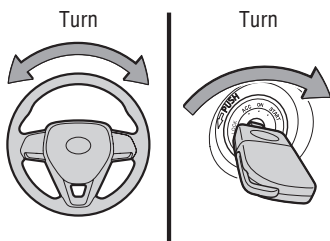

When starting the engine, the engine switch may seem stuck in OFF. To free it, turn the key while turning the steering wheel slightly left and right.


With Smart Key system

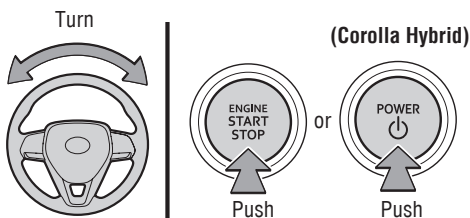

When the steering lock cannot be released, "Push Power Button while Turning Steering Wheel in Either Direction" will be displayed on the Multi-Information Display (MID).

Press the power button shortly and firmly while turning the steering wheel left and right.

Tilt & telescopic steering wheel

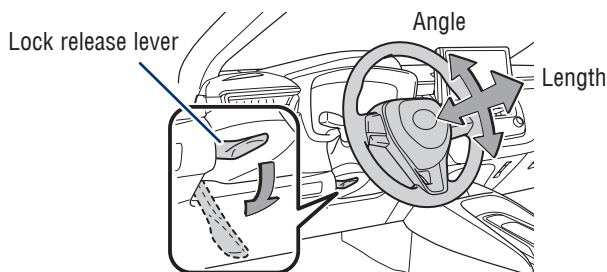


Hold the steering wheel, push the lever down, set angle and length, and return the lever.

NOTE: Do not attempt to adjust while the vehicle is in motion.


Electric parking brake

PARKING BRAKE


Automatic mode ON

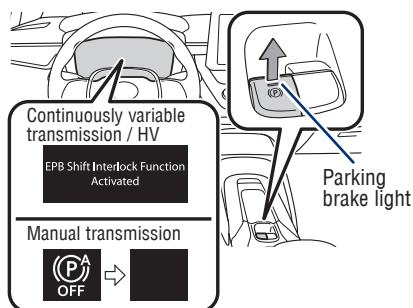

Automatic mode OFF

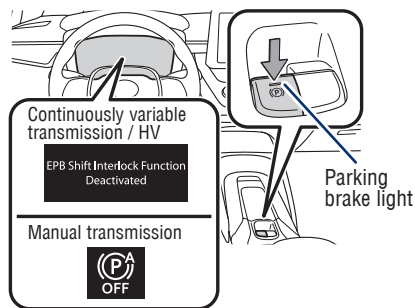

Manual mode

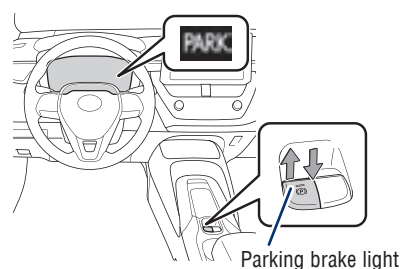

Automatic

To turn automatic mode ON, while vehicle is stopped, pull and hold the switch until “EPB Shift Interlock Function Activated” displays on Multi-Information Display (MID)* or auto EPB OFF indicator turns off**. While depressing brake, shifting into P position* or when the engine is off** will automatically set the brake, and turn the parking brake indicator and parking brake light on. To release brake, depress brake and shift out of P. The indicator and the light turn off.

To turn automatic mode OFF, push and hold the parking brake switch until “EPB Shift Interlock Function Deactivated” displays on the MID* or auto EPB OFF indicator turns on**.


Manual

While vehicle is stopped and brake pedal is depressed, pull the switch to set parking brake and turn the parking brake indicator and parking brake light on. To release, press the brake pedal and push the switch. The indicator and the light turn off.

* Available only on vehicles with continuously variable transmissions or hybrid system

** Available only on vehicles with manual transmissions

BRAKE HOLD

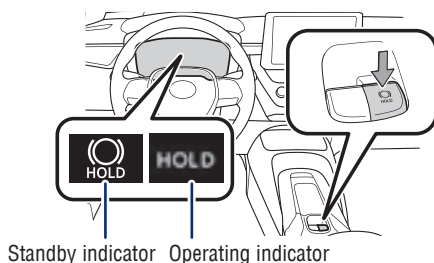

Brake hold

The brake hold system keeps the brake applied when the shift lever is in D, B or M*/a forward driving position** or N with the system on and the brake pedal has been depressed to stop the vehicle. The system releases the brake when the accelerator pedal is depressed with the shift lever in D, B or M*/a forward driving position** to allow smooth start off.


Refer to the Owner's Manual for limitations and more details.

* Available only on vehicles with continuously variable transmissions or hybrid system


** Available only on vehicles with manual transmissions

Bottle holders

FRONT (DOOR MOUNTED)

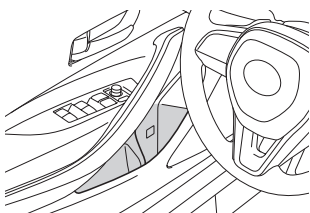


REAR (DOOR MOUNTED)

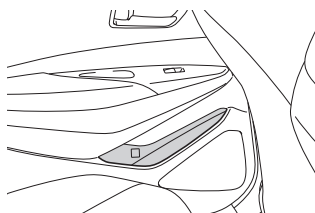


Cup holders

FRONT

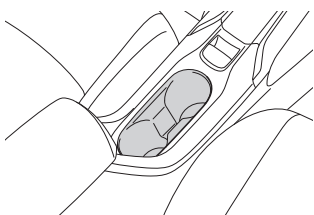

REAR (IF EQUIPPED)

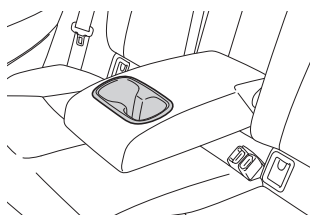


FEATURES & OPERATIONS

Multi-Information Display (MID)

VEHICLES EQUIPPED WITH
4.2-in DISPLAY - COROLLA


Driving support system status display area

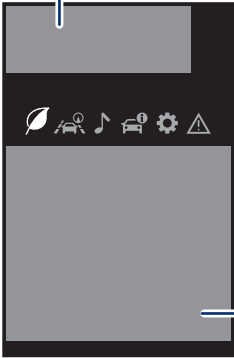

Content display area

VEHICLES EQUIPPED WITH 7-in
DISPLAY - COROLLA / COROLLA HV

Driving support system status display area

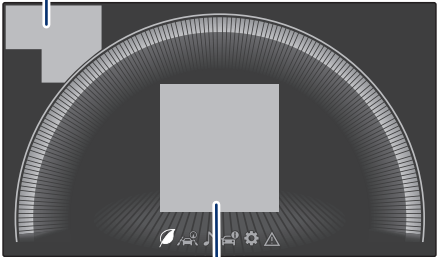


Content display area

Return to the previous screen

Push: enter/set
Push and hold: reset

Scroll/search screens/
select menu icons

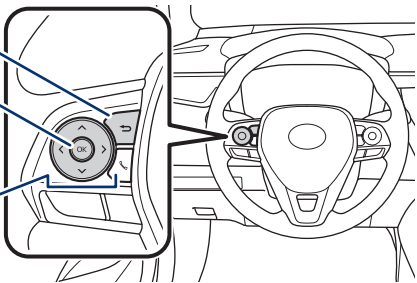

Press meter control switches to change and select information in the following:



Driving information display



Driving support system information display



Audio system-linked display



Vehicle information display



Settings display




Warning message display

Refer to the Owner's Manual for limitations and more details.


Seat adjustments-Front

MANUAL SEAT

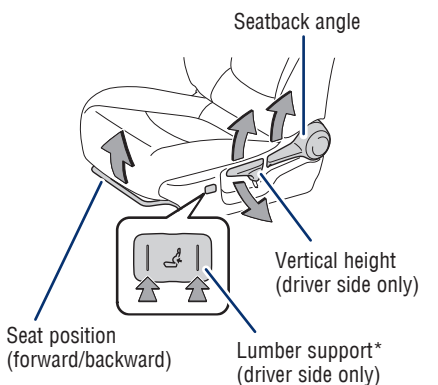


* If equipped

POWER SEAT (DRIVER'S SIDE ONLY)

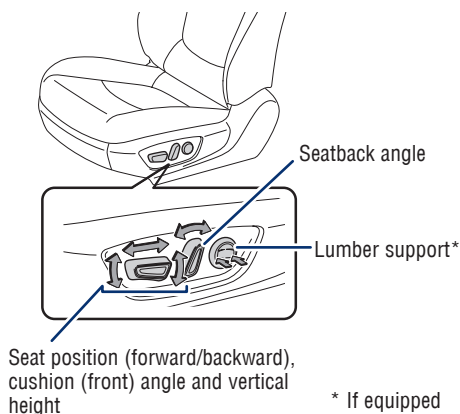


* If equipped

Rear seats-Folding

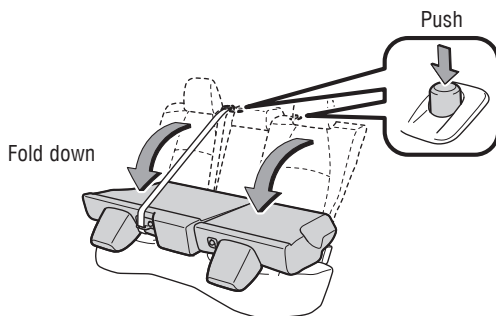


Seats-Head restraints

Front

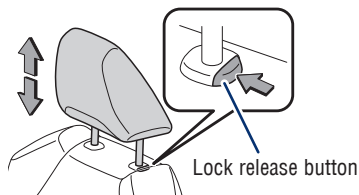


Rear outside (adjustable type)

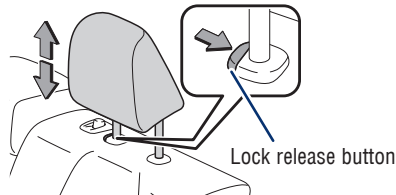

FEATURES & OPERATIONS

Lights & turn signals

HEADLIGHTS

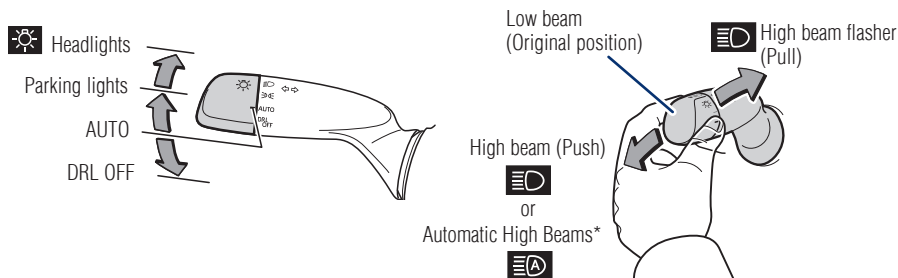

Daytime Running Light system (DRL) Automatically turns on under certain conditions to make vehicle more visible to other drivers. Not for use at night.

Automatic light cut off system


- Headlights are on: The lights will turn off automatically 30 seconds after the vehicle is turned from ON to ACC or OFF and a door is opened and closed. (If the lock switch on the Smart Key remote is pushed after all doors are closed, the lights will turn off immediately.)
- Only the tail lights are on: The tail lights will turn off automatically if the vehicle is turned from ON to ACC or OFF and the driver's door is opened.

Automatic High Beams (AHB) system Automatically switches between high and low beams as appropriate to enhance vision at night.

Refer to *Toyota Safety Sense™ 2.0 (TSS 2.0)* in this guide or the *Owner's Manual* for more details on the Automatic High Beams feature.


* Operating conditions must be met. Refer to the *Owner's Manual* for details.

TURN SIGNALS

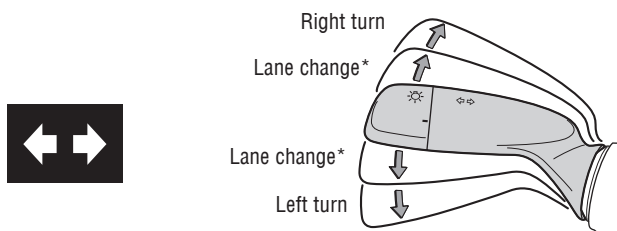

* Move lever partway and release. The signals will flash three times.


Windshield wipers & washers

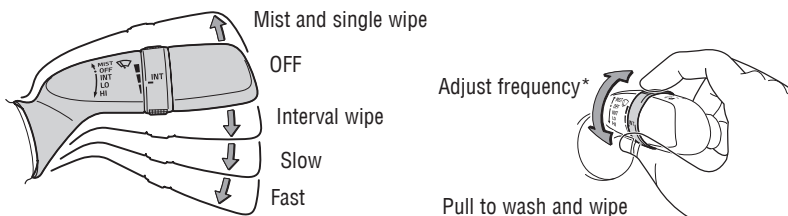

*** Intermittent windshield wiper frequency adjustment:** Rotate to increase/decrease wiper frequency. (Available on select grades.)


Refer to the Owner's Manual for more information.

Power outlet-12V DC

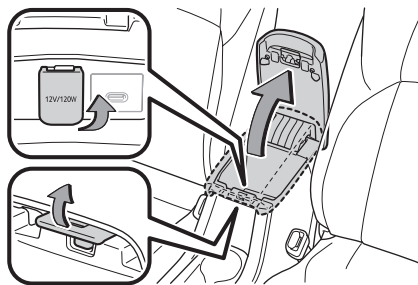


The vehicle must be in the “ACC” or “ON” position (without a Smart Key system) / ACCESSORY or IGNITION ON mode (with a Smart Key system) for use.

USB media port

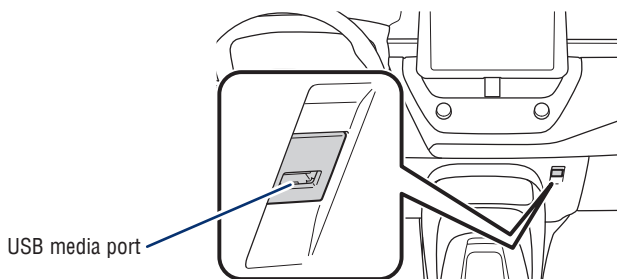



Connecting a compatible device and cable into the USB media port will support charging and music playback through the audio multimedia system.

USB charge port (if equipped)

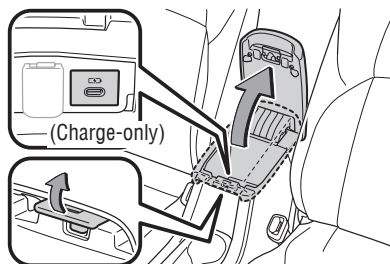


The vehicle must be in the “ACC” or “ON” position (without a Smart Key system) / ACCESSORY or IGNITION ON mode (with a Smart Key system) for use.

Qi Wireless charger (if equipped)

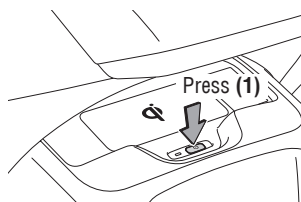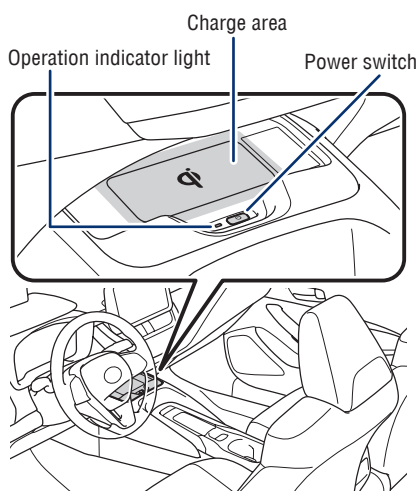


When the vehicle is turned off, the last state (ON/OFF) of the charger is retained.

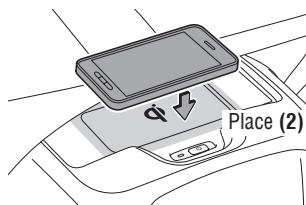

Place device nearest the center of charging area for best results. Moving device may result in stopping or restarting the charging process.

A mobile device can be charged wirelessly on the tray. **(1)** Press the wireless charger power switch and the green operation indicator light turns on. **(2)** Place a compatible mobile device on the tray as shown in the illustration. An amber indicator illuminates while charging is in progress. When charging is complete, the indicator illuminates green. Some phones, cases or cover type wireless chargers may not cause the green indicator to illuminate even though it is fully charged.

Refer to the Owner's Manual for limitations and more details on this system before attempting to use it.

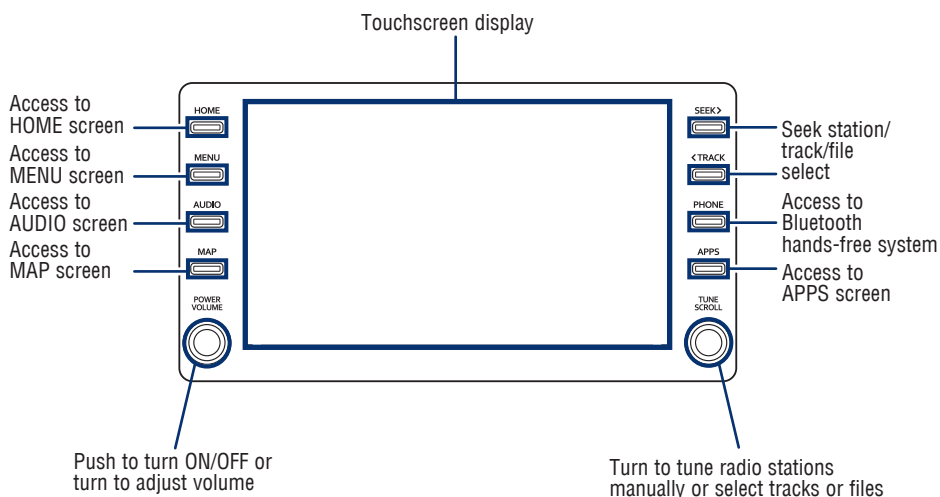


Refer to the "Owner's Manual", "Navigation and Multimedia System Owner's Manual" or visit www.toyota.com/audio-multimedia for additional resources.

NOTE: Always use safe driving practices and follow all traffic rules.

FEATURES & OPERATIONS

Steering wheel switches & telephone controls (Bluetooth®)

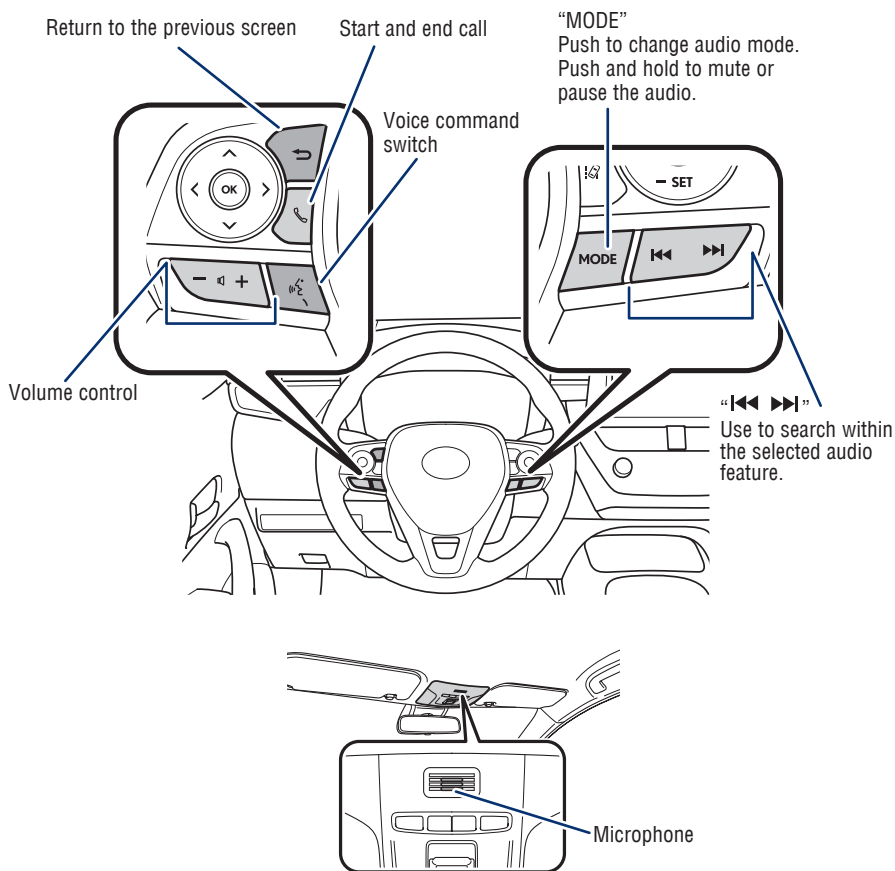

Bluetooth® technology allows dialing or receipt of calls without removing your hands from the steering wheel.

Refer to the Bluetooth® device pairing in this guide or the Navigation and Multimedia System Owner's Manual for additional user instructions.

NOTE: Always use safe driving practices and follow all traffic rules.


Clock

Select to change the time zone.

Select to set daylight saving time ON/OFF/AUTO.*

Select to set automatic adjustment of the clock by GPS on/off.

Select to set the 24 hour time format on/off.

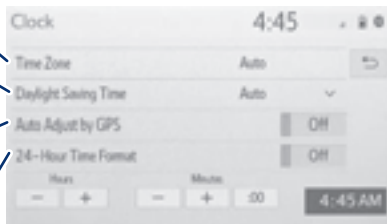


- 1) Push **"MENU"** button next to the screen.
- 2) Select **"Setup"** or **"General"** on the touchscreen to access the general setting screen.
- 3) Select **"Clock."**
- 4) Select the desired items to be set.

Refer to the "Navigation and Multimedia System Owner's Manual" for more details.


* Premium Audio only.

Heated seats (if equipped)

FRONT

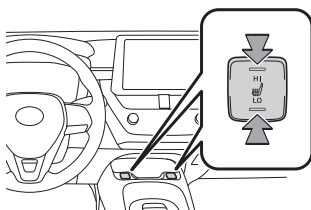

REAR

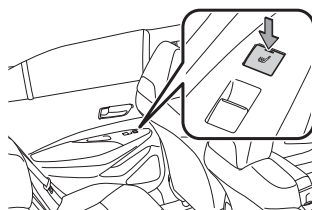


The vehicle must be on for use.


FEATURES & OPERATIONS

Air conditioning/heating (Corolla)


AUTOMATIC AIR CONDITIONING (IF EQUIPPED)

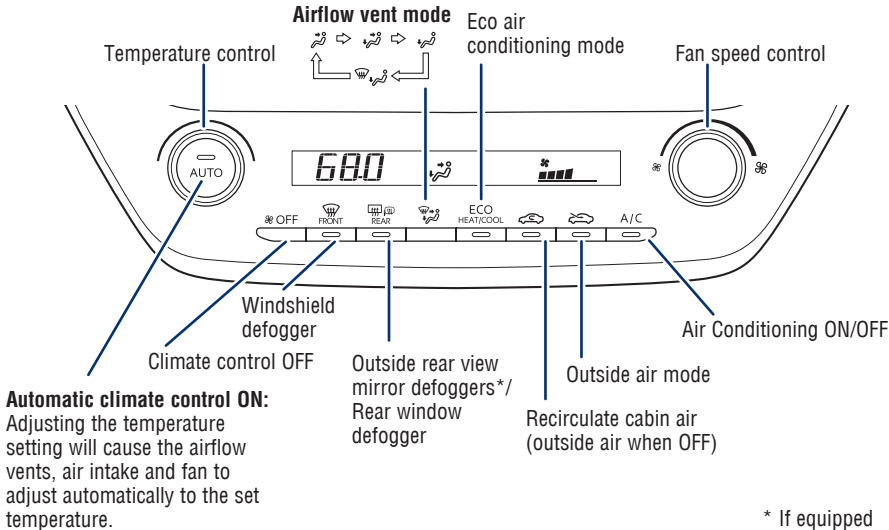

MANUAL AIR CONDITIONING (IF EQUIPPED)

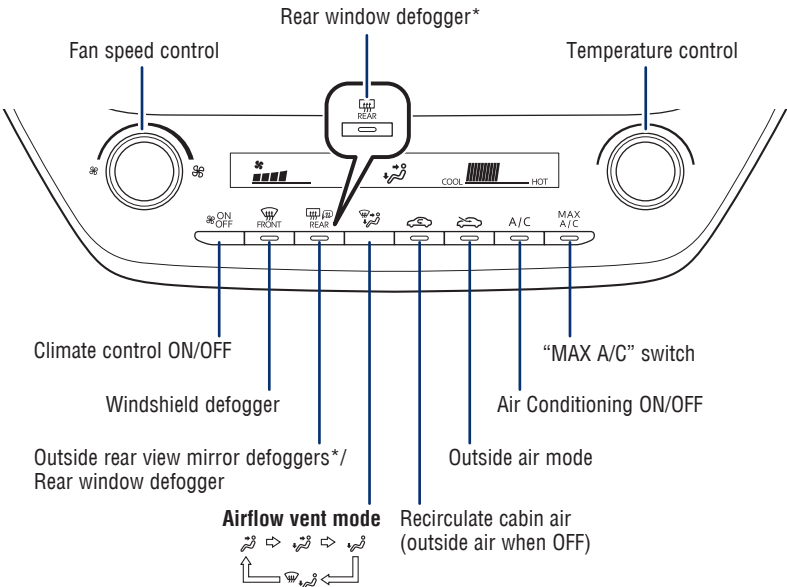


WINDSHIELD WIPER DE-ICER (IF EQUIPPED)

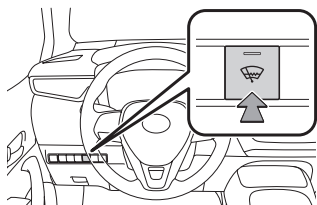

The windshield wiper de-icer will automatically turn off after a period of time.

Air conditioning/heating (Corolla Hybrid)

AUTOMATIC AIR CONDITIONING

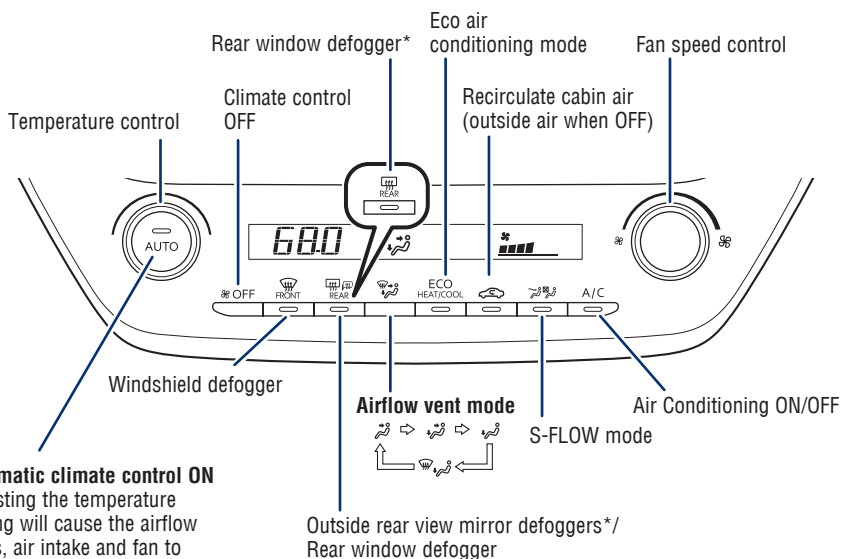

Automatic climate control ON


Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically to the set temperature.

* If equipped

FEATURES & OPERATIONS

Driving mode select switches (if equipped)

SPORT MODE (IF EQUIPPED) - COROLLA

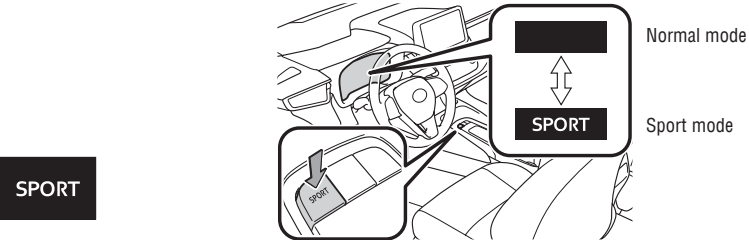


Normal mode

Suitable for normal driving.



Sport mode

Use Sport mode when increased acceleration response and precise handling is desired, for example, when driving on roads with many curves.

iMT (WITH A MANUAL TRANSMISSION) - COROLLA

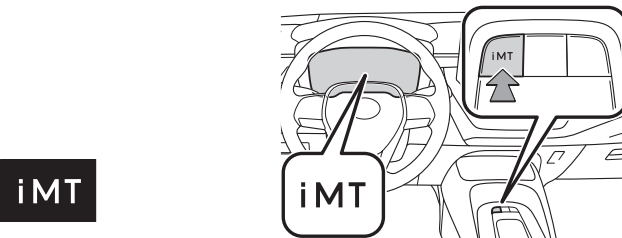

The iMT is designed to control the engine speed to suit the driver's operation of the clutch pedal and shift lever optimally, helping the driver to shift gears more smoothly.

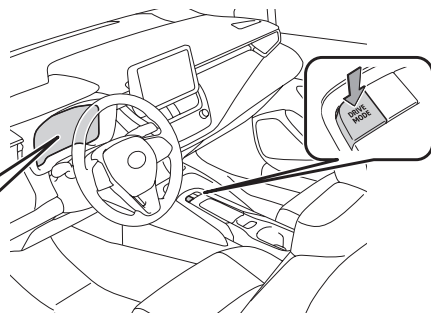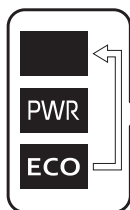

Normal mode

Suitable for normal driving.

POWER mode


Controls the hybrid system to provide quick, powerful acceleration. Making it suitable for when agile driving response is desired, such as when driving on roads with many curves.

ECO drive mode

Helps the driver accelerate in an eco-friendly manner and improve fuel economy through moderate throttle characteristics and by controlling the operation of the air conditioning system (heating/cooling).

Refer to the Owner's Manual for limitations and more details on this system.

EV drive mode

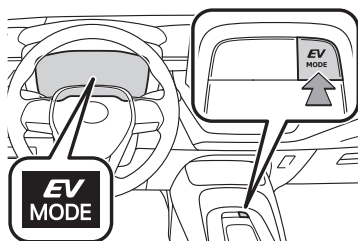


Use EV drive mode when driving short distances to reduce noise early in the morning and late at night in residential areas or to cut emissions when parking in a small garage or indoor car park.

Refer to the Owner's Manual for limitations and more details on this system.

FEATURES & OPERATIONS

Blind Spot Monitor (BSM) and Rear Cross Traffic Alert (RCTA) (if equipped)

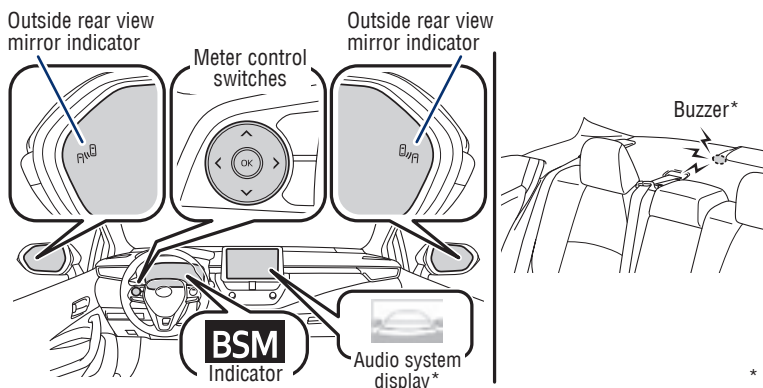

BLIND SPOT MONITOR (BSM)

The system is designed to use radar sensors to detect vehicles traveling in the Corolla's blind spot when changing lanes. If a vehicle is detected, the driver will be alerted via the outside rear view mirror indicators.

REAR CROSS TRAFFIC ALERT (RCTA)


While in reverse, when a vehicle approaching from the right or left rear of the Corolla is detected, the outside rear view mirror indicators will flash. Also, the RCTA icon for the detected side will be displayed on the audio system display, and the RCTA buzzer will sound.

SYSTEM ON/OFF

- (1) Press “<>” switches and select “” from the Multi-Information Display (MID).
- (2) Press “<” switches and select “” or “RCTA” and then press “.” The setting screen is displayed.
- (3) Select the “On/Off” setting function and then press “.
- (4) Press “” to go back to the menu.

Refer to the Owner's Manual for limitations and more details on this system before attempting to use it.

Rear view monitor system

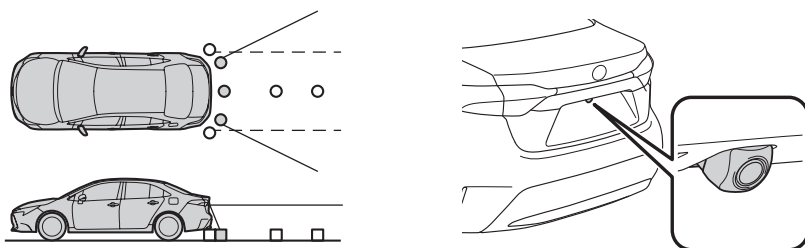


The rear view monitor system displays an image of the view from the bumper of the rear area of the vehicle. The camera for the rear view monitor system is located above the license plate.

To adjust the image on the rear view monitor screen, press the "MENU" button and select "Display." Select "Camera" to adjust the screen contrast and brightness.

Refer to the Owner's Manual and the Navigation and Multimedia System Owner's Manual for limitations and more details on this system.

Vehicle Stability Control (VSC)/ TRAC OFF switch

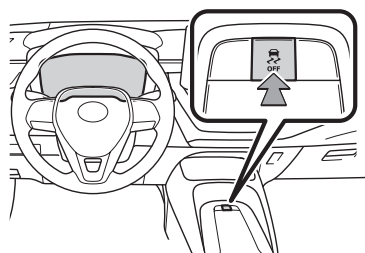

Traction Control
Turned OFF

The VSC OFF switch can be used to help free a stuck vehicle in surroundings like mud, dirt or snow. While the vehicle is stopped, press switch to disable the TRAC system.

To disable both VSC and TRAC systems, press and hold the switch for at least 3 seconds.

Refer to the Owner's Manual for limitations and more details.

Quick overview-Toyota Safety Sense™ 2.0

Toyota Safety Sense™ 2.0 (TSS 2.0) is a set of active safety technologies designed to help mitigate or prevent collisions across a wide range of traffic situations, in certain conditions. TSS 2.0 is designed to help support the driver's awareness, decision making and vehicle operation contributing to a safe driving experience.

Refer to the Owner's Manual for operation, setting adjustments, limitations and more details to understand these functions and complete safety precautions. For more information, please go to www.toyota.com/safety-sense.



Pre-Collision System with Pedestrian Detection (PCS w/PD)

PCS w/PD is designed to provide alert, mitigation, and/or avoidance support in certain conditions, when the system detects a potential collision with a preceding vehicle is likely to occur.

The advanced grille-mounted radar system is designed to work with the forward-facing camera to help recognize a preceding pedestrian or bicyclist, and provide an alert, mitigation and/or avoidance support in certain conditions.



Lane Departure Alert with Steering Assist (LDA w/SA)

LDA w/SA is designed to provide notification when the system detects an unintended lane departure.

The Steering Assist function is designed to provide small corrective steering inputs to the steering wheel for a short period of time to help keep the vehicle in its lane.

The Sway Warning function is designed to detect vehicle swaying (based on the vehicle location and steering wheel operation) and alert drivers with an audio and visual alert, urging them to take a break.



Lane Tracing Assist (LTA)**

LTA is designed to help keep the vehicle in the center of a lane by assisting the driver in steering control when using Full-Speed Range DRCC**.



Dynamic Radar Cruise Control (DRCC)* or Full-Speed Range DRCC**

DRCC is designed to help maintain a pre-set distance to a preceding vehicle when the preceding vehicle is traveling at a lower speed. Full-Speed Range DRCC is the same as regular DRCC except the available speed range is extended down to 0 MPH.



Automatic High Beams (AHB)

AHB is designed to detect the headlights of oncoming vehicles and the tail lights of preceding vehicles and switch between high beams and low beams as appropriate.



Road Sign Assist (RSA)


RSA is designed to recognize specific road signs using the forward-facing camera to provide information to the driver via the display.

* Available only on vehicles with manual transmissions


** Available only on vehicles with continuously variable transmissions or hybrid system

Sensors

TSS 2.0 combines a forward-facing camera mounted in front of the inside rear view mirror and a grille-mounted radar mounted in the front grille. These sensors support the driver assist systems.

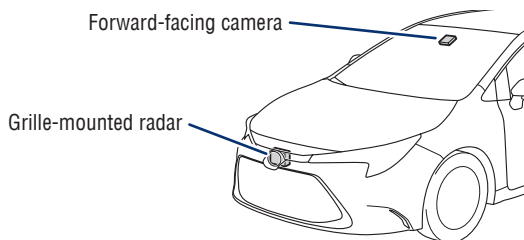

Pre-Collision System with Pedestrian Detection (PCS w/PD)

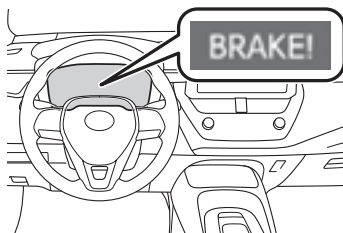

The Pre-Collision System with Pedestrian Detection (PCS w/PD) is designed to help detect a vehicle, a bicyclist, or a pedestrian in certain situations. Using both a camera and radar, PCS w/ PD can provide an audio/visual alert to warn you of a possible collision under certain circumstances. If you don't react, the system is designed to automatically brake.

As there is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. This system will not prevent collisions or lessen collision damage or injury in every situation. Do not use PCS instead of normal braking operations under any circumstances. Do not attempt to test the operation of the Pre-Collision System yourself, as the system may not operate or engage, possibly leading to an accident. In some situations, such as when driving in inclement weather such as heavy rain, fog, snow or a sandstorm or while driving on a curve and for a few seconds after driving on a curve, a vehicle or pedestrian or bicyclist may not be detected by the radar and camera sensors, preventing the system from operating or engaging properly.

See www.toyota.com/safety-sense for more information.

Refer to the *Toyota Owner's Manual* for a list of additional situations in which the system operation may be limited.

PRE-COLLISION SYSTEM (CONTINUED)

Pre-Collision Warning

When the system determines that the possibility of a frontal collision is high, a buzzer will sound and a warning message will be displayed on the Multi-Information Display (MID) to urge the driver to take evasive action.

Pre-Collision Brake Assist

If the driver notices the hazard and brakes, the system may provide additional braking force using Brake Assist. This system may prime the brakes and may apply greater braking force in relation to how strongly the brake pedal is depressed.


Pre-Collision Braking

If the driver does not brake in a set time and the system determines that the possibility of a frontal collision with a preceding vehicle is extremely high, the system may automatically apply the brakes, reducing speed in order to help the driver reduce the impact and in certain cases avoid the collision.

Refer to the Toyota Owner's Manual for additional information on PCS w/PD operation, settings, adjustments, limitations, and precautions before attempting to use it.

PCS PEDESTRIAN DETECTION


Under certain conditions, the PCS w/PD included with the TSS 2.0 package may also help to detect a pedestrian or bicyclist in front of your vehicle using the forward-facing camera and front grille-mounted radar. The forward-facing camera of PCS detects a potential pedestrian or bicyclist based on size, profile, and motion of the detected pedestrian or bicyclist. However, a pedestrian or bicyclist may not be detected depending on the conditions, including the surrounding brightness and the motion, posture, size, and angle of the potential detected pedestrian or bicyclist, preventing the system from operating or engaging.

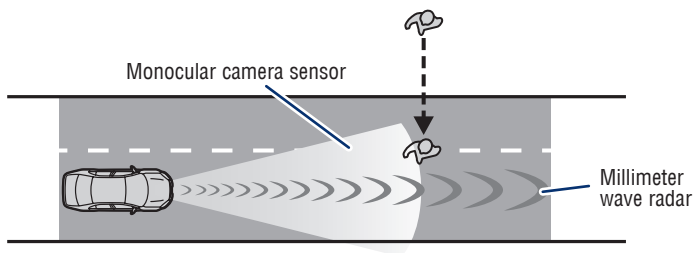

As part of the Pre-Collision System, this function is also designed to first provide an alert and then automatic braking if needed.

Refer to the Toyota Owner's Manual for additional limitations and information.


CHANGING PRE-COLLISION ALERT TIMING

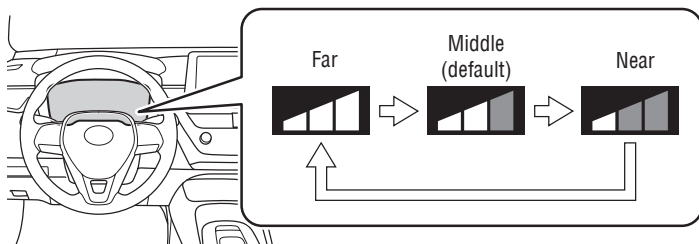

- (1) Press “<>” switches and select “” from the Multi-Information Display (MID).
- (2) Press “<>” switches and select “ (PCS)” and then press or press and hold “OK.” The setting screen is displayed.
- (3) Press “<>” switches and select “Adjust alert timing” and then press or press and hold “OK” to select the desired setting. Each time it is pressed, the response to the PCS warning timing changes as shown above.
- (4) Press “<>” to go back to the menu.

Note: PCS is enabled each time the vehicle is turned on. The system can be disabled/enabled and the alert timing of the system can be changed. (Alert timing only, brake operation remains the same.)

DISABLING PRE-COLLISION SYSTEM (PCS)

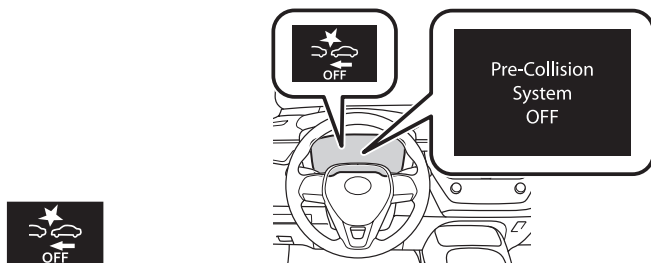


- (1) Press “<>” switches and select “” from the Multi-Information Display (MID).
- (2) Press “<>” switches and select “ (PCS)” and then press or press and hold “OK.” The setting screen is displayed.
- (3) Press “<>” switches and select “PCS” and then press or press and hold “OK” to select the desired setting.
- (4) Press “<>” to go back to the menu.

Note: The system is enabled each time the vehicle is turned on.

Refer to the Toyota Owner's Manual for additional information on PCS w/PD operation, settings, adjustments, limitations, and precautions before attempting to use it.

Lane Departure Alert with Steering Assist (LDA w/SA)

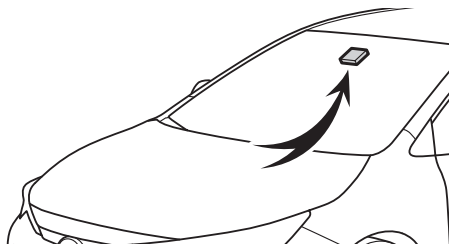


By detecting visible white/yellow lane markings or the road's edge at speeds above 32 mph, Lane Departure Alert with Steering Assist (LDA w/SA) is designed to issue an audio/visual alert if an inadvertent lane departure is detected. If the driver does not take corrective action, the Steering Assist function is designed to provide gentle corrective steering.*

* See www.toyota.com/safety-sense for more information.

Refer to the Toyota Owner's Manual for a list of additional situations in which the system operation may be limited.

TURNING THE LDA SYSTEM ON/OFF

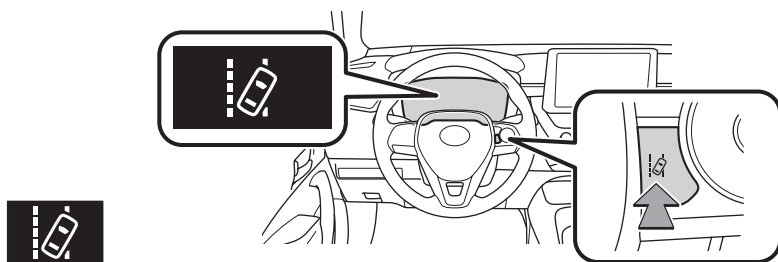


Press the LDA switch to turn the LDA system on. Depress again to turn it off.

Note: Operation of the LDA system and setting adjustments continues in the same condition regardless of Ignition cycle until changed by the driver or the system is reset.

Refer to the Toyota Owner's Manual for additional information on LDA operation, settings, adjustments, limitations, and precautions before attempting to use it.

LDA function display

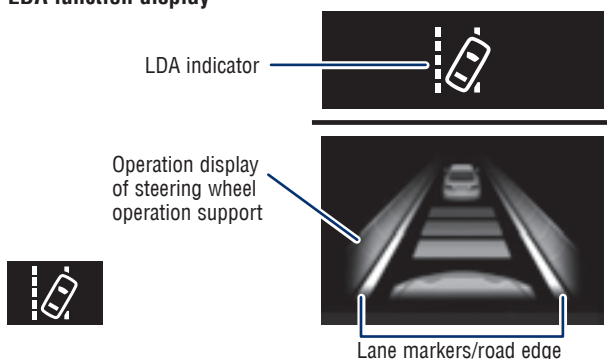

Lane Departure Alert (LDA) indicator flashes orange when operating.



(1)



(2)

The LDA function  displays when the Multi-Information Display (MID) is switched to the driving assist system information screen.

- (1) The system displays solid white lines on the LDA indicator when visible lane markers or the road are detected. A side flashes orange to alert the driver when the vehicle deviates from its lane.
- (2) The system displays outlines on the LDA indicator when lane markers or the road are not detected or the function is temporarily canceled.

Note: When operation conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function is automatically restored. For example, LDA may not function on the side(s) where white/yellow lines are not detectable.

DISABLING STEERING ASSIST

- (1) Press “◀▶” switches and select “⚙️” from the Multi-Information Display (MID).
- (2) Press “⏏️” switches and select the “🚗 (LDA)” and then press or press and hold “OK”. The setting screen is displayed.
- (3) Press “⏏️” switches and select the “Steering assist function” and then press or press and hold “OK” to select the desired setting.
- (4) Press “⏏️” to go back to the menu.

Note: Operation of the LDA system and setting adjustments continues in the same condition regardless of Ignition cycle until changed by the driver or the system is reset.

ADJUSTING LDA ALERT SENSITIVITY

The driver can adjust the sensitivity of the LDA (warning) function from the Multi-Information Display (MID) customization screen.

High - Is designed to warn approximately before the front tire crosses the lane marker.

Normal - Is designed to warn approximately when the front tire crosses the lane marker.

- (1) Press “◀▶” switches and select “⚙️” from the Multi-Information Display (MID).
- (2) Press “⏏️” switches and select the “🚗 (LDA)” and then press or press and hold “OK”. The setting screen is displayed.
- (3) Press “⏏️” switches and select the “Alert sensitivity” and then press or press and hold “OK” to select the desired setting.
- (4) Press “⏏️” to go back to the menu.

SWAY WARNING SYSTEM



Continuous lane deviations from swaying.



Gentle swaying from driver's inattentiveness.



Acute steering wheel operation after the number of operations decrease due to driver's inattentiveness.

SWS is a function of LDA and is designed to detect swaying based on the vehicle location in the lane and the driver's steering wheel operation. To help prevent swaying, the system alerts the driver using a buzzer sound and a warning display on the MID.

DISABLING LDA SWAY WARNING ALERT

- (1) Press “<>” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select the “ (LDA)” and then press or press and hold “.” The setting screen is displayed.
- (3) Press “” switches and select the “Vehicle sway warning function” and then press or press and hold “” to select the desired setting.
- (4) Press “” to go back to the menu.


Note: Operation of the LDA system and setting adjustments continues in the same condition regardless of Ignition cycle until changed by the driver or the system is reset.

ADJUSTING SWAY ALERT SENSITIVITY

- (1) Press “<>” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select the “ (LDA)” and then press or press and hold “.” The setting screen is displayed.
- (3) Press “” switches and select the “Vehicle sway warning sensitivity” and then press or press and hold “” to select the desired setting.
- (4) Press “” to go back to the menu.

Refer to the Toyota Owner's Manual for additional information on LDA operation, settings, adjustments, limitations, and precautions before attempting to use it.

Lane Tracing Assist (LTA)*

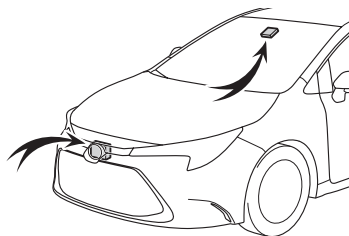


* Available only on vehicles with continuously variable transmission or hybrid system

When Full-Speed Range Dynamic Radar Cruise Control (DRCC)* is enabled and lane markers are detectable, Lane Tracing Assist (LTA) uses the lines on the road and/or preceding vehicles to help keep the vehicle centered in its lane.

** Not available on all models. See www.toyota.com/safety-sense for model applicability.*

Refer to the Toyota Owner's Manual for a list of additional situations in which the system operation may be limited.

TURNING THE LTA SYSTEM ON/OFF

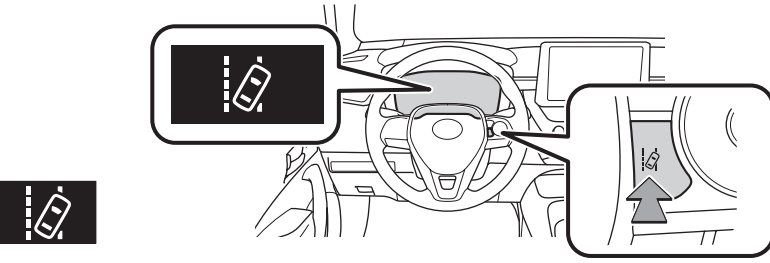


Press the LTA switch to turn the LTA system on. Depress again to turn it off.

Note: Operation of the LTA system and setting adjustments continues in the same condition regardless of ignition cycle until changed by the driver or the system is reset.

Refer to the Toyota Owner's Manual for additional information on LTA operation, settings adjustments, limitations, and precautions before attempting to use it.

LANE TRACING ASSIST

LTA function display

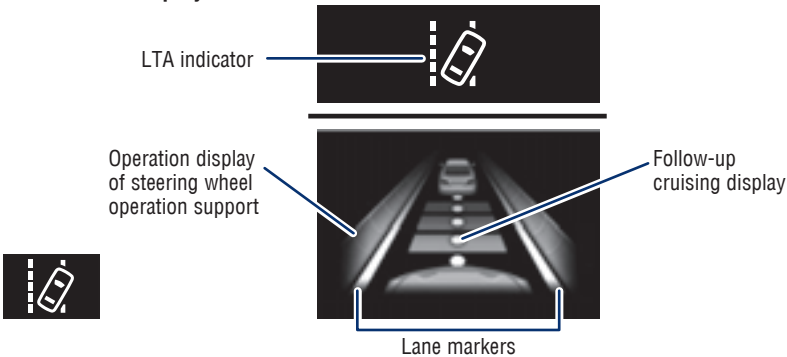

Lane departure alert (LDA) indicator flashes orange when operating.



(1)



(2)

LANE TRACING ASSIST (CONTINUED)

The LTA function  displays when the Multi-Information Display (MID) is switched to the driving assist system information screen.

- (1) The system displays solid white lines on the LTA indicator when visible lane markers on the road are detected. A side flashes orange to alert the driver when the vehicle deviates from its lane.
- (2) The system displays outlines on the LTA indicator when lane markers on the road are not detected or the function is temporarily canceled.

Note: When operation conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function is automatically restored. For example, LTA may not function on the side(s) where white/yellow lines are not detectable.

Refer to the Toyota Owner's Manual for additional information on LTA operation, settings, adjustments, limitations, and precautions before attempting to use it.

DISABLING STEERING ASSIST

- (1) Press “<>” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select the “ (LTA)” and then press or press and hold “.
 The setting screen is displayed.
- (3) Press “” switches and select the “Steering assist function” and then press or press and hold “.
 to select the desired setting.
- (4) Press “.
 to go back to the menu.

Note: Operation of the LTA system and setting adjustments continues in the same condition regardless of Ignition cycle until changed by the driver or the system is reset.

ADJUSTING LTA ALERT SENSITIVITY


The driver can adjust the sensitivity of the LTA (warning) function from the Multi-Information Display (MID) customization screen.

High - Is designed to warn approximately before the front tire crosses the lane marker.

Normal - Is designed to warn approximately when the front tire crosses the lane marker.

- (1) Press “<>” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select the “ (LTA)” and then press or press and hold “.
 The setting screen is displayed.
- (3) Press “” switches and select the “Alert sensitivity” and then press or press and hold “.
 to select the desired setting.
- (4) Press “.
 to go back to the menu.

LANE CENTERING

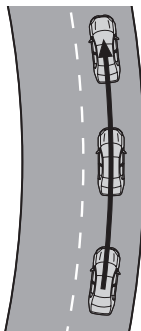

The lane centering function is linked with Full-Speed Range Dynamic Radar Cruise Control (DRCC) and provides the required assistance by operating the steering wheel to keep the vehicle in its current lane.

When Full-Speed Range Dynamic Radar Cruise Control (DRCC) is not operating, the lane centering function does not operate.

DISABLING LANE CENTERING FUNCTION

- (1) Press “< >” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select the “ (LTA)” and then press or press and hold “”. The setting screen is displayed.
- (3) Press “” switches and select the “Lane centering function” and then press or press and hold “” to select the desired setting.
- (4) Press “” to go back to the menu.

Note: Operation of the LTA system and setting adjustments continues in the same condition regardless of Ignition cycle until changed by the driver or the system is reset.

Refer to the Toyota Owner's Manual for additional information on LTA operation, settings, adjustments, limitations, and precautions before attempting to use it.


Dynamic Radar Cruise Control (DRCC)* or Full-Speed Range DRCC**

Intended for highway use, Dynamic Radar Cruise Control (DRCC) lets you drive at a preset speed. DRCC is designed to function at speeds of 25-110 mph and uses vehicle-to-vehicle distance control, helping maintain a preset distance from the vehicle ahead of you.*

Full-Speed Range DRCC is designed to function between 0-110 mph.*

* Not available on all models. See www.toyota.com/safety-sense for model applicability.

Refer to the Toyota Owner's Manual for a list of additional situations in which the system operation may be limited.

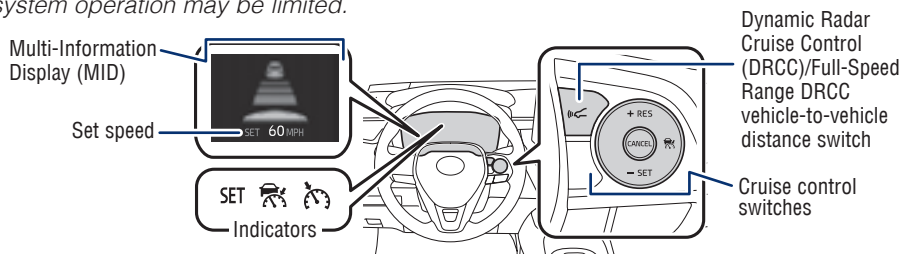

* Available only on vehicles with manual transmissions

** Available only on vehicles with continuously variable transmission or hybrid system

TURNING SYSTEM ON/OFF

(1)




Push once: On
Push twice: Off


Refer to page 47 for switching to Constant Speed (Cruise) Control Mode.

ADJUSTING SET SPEED

(2)

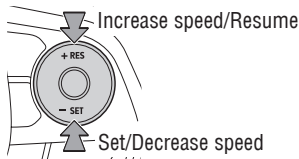

(3)

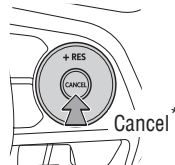


Vehicle will cruise at a set speed, decelerate to maintain a selected distance from a slower vehicle traveling in front and accelerate back up to the selected speed if the vehicle in front changes lanes or speeds up.

- (1) Push “” to turn DRCC system ON. The “Radar Ready” and “” indicator will come on the Multi-Information Display (MID).
- (2) Use the steering wheel controls to increase speed by pushing “+RES” or decrease the speed by pushing “-SET.” Push and hold to make a large adjustment or push each time to make fine adjustments (1 mph [1.6 km/h] or 1 km/h [0.6 mph] increments.)
- (3) Push “**Cancel**” to cancel the speed control.


* The speed control may also be canceled by depressing the brake pedal.

ADJUSTING DISTANCE

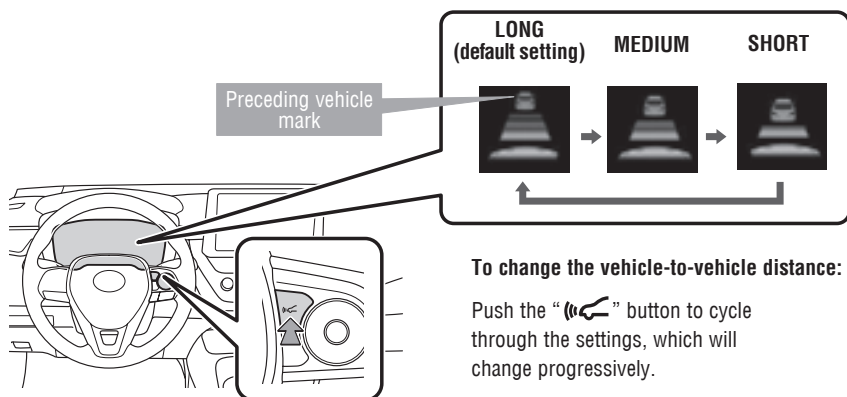

This mode employs a radar sensor to detect the presence of a preceding vehicle up to approximately 328 ft (100 m) ahead, determines the current vehicle-to-vehicle following distance and operates to maintain a preset following distance from the vehicle ahead. These distances vary based on vehicle speed.

Note: Vehicle-to-vehicle distance will close in when traveling on long downhill slopes.

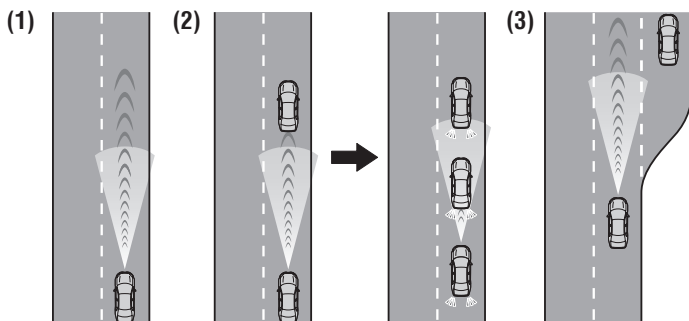

(1) Constant speed cruising when there are no vehicles ahead

The vehicle travels at the speed set by the driver. The desired vehicle-to-vehicle distance can also be set by operating the vehicle-to-vehicle distance control switch.

(2) Deceleration cruising and follow-up cruising when a preceding vehicle driving slower than the set speed appears

When a slower vehicle is detected running ahead of you, the system automatically decelerates your vehicle. When a greater reduction in vehicle speed is necessary, the system may apply the brakes (the brake lights will come on at this time.) The system will respond to changes in the speed of the vehicle ahead in order to maintain the vehicle-to-vehicle distance set by the driver. A warning tone warns you when the system cannot decelerate sufficiently to prevent your vehicle from closing in on the vehicle ahead.


ADJUSTING DISTANCE (CONTINUED)

(3) Acceleration when there are no longer any preceding vehicles driving slower than the set speed

The system accelerates until the set speed is reached. The system then returns to constant speed cruising.

Note: When your vehicle is too close to a vehicle ahead, and sufficient automatic deceleration via the cruise control is not possible, the display will flash and the buzzer will sound to alert the driver. An example of this would be if another driver cuts in front of you while you are following a vehicle. Depress the brake pedal to ensure an appropriate vehicle-to-vehicle distance.


SWITCHING TO CONSTANT SPEED (CRUISE) CONTROL MODE

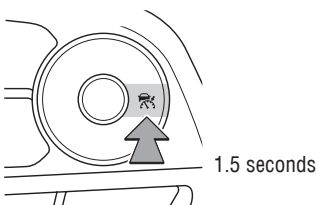

If you are already using DRCC “,” push “” to turn the system off first, then push and hold the switch for at least 1.5 seconds to switch.

Note: When the vehicle is turned off, it will automatically default to DRCC.


SETTING CONSTANT SPEED (CRUISE) CONTROL

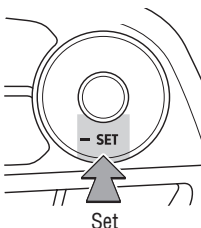

To adjust speed or cancel, see steps (2) and (3) of ADJUSTING SET SPEED on page 45.

Refer to the Toyota Owner's Manual for additional information on DRCC operation, settings adjustments, limitations, and precautions before attempting to use it.

Automatic High Beams (AHB)

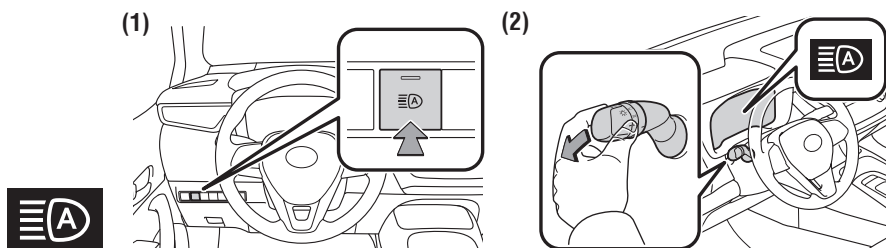

The Automatic High Beams (AHB) safety system is designed to help you see more clearly at night. At speeds above 25 mph, AHB can detect the headlights of oncoming vehicles and taillights of preceding vehicles, then automatically toggles between high and low beams accordingly.

See www.toyota.com/safety-sense for more information.

Refer to the Toyota Owner's Manual for a list of additional situations in which the system operation may be limited.

ACTIVATING THE AHB SYSTEM

- (1) Press the “” switch.
- (2) Push the lever away from you with the headlight switch is in the “” or “AUTO” position.

The AHB indicator will come on when the headlights are turned on automatically to indicate that the system is active.

Note: Pull the lever back toward you or press the AHB switch to turn the AHB system off.

The AHB indicator will turn off and “” or “” will turn on. To activate the system again, push the lever away from you or press the “” switch.

CONDITIONS WHERE AHB WILL TURN ON/OFF AUTOMATICALLY

When all of the following conditions are met, the high beams will be automatically turned on (after approximately 1 second):

- Vehicle speed is above approximately 21 mph (34 km/h).
- The area ahead of the vehicle is dark.
- There are no oncoming or preceding vehicles with headlights or tail lights turned on.
- There are few streetlights on the road ahead.

If any of the following conditions occur, the high beams will be automatically turned off:

- Vehicle speed drops below approximately 17 mph (27 km/h).
- The area ahead of the vehicle is not dark.
- Oncoming or preceding vehicles have headlights or tail lights turned on.
- There are many streetlights on the road ahead.

Road Sign Assist (RSA)


Using an intelligent camera, Road Sign Assist (RSA) is designed to detect speed limit signs, stop signs, do not enter signs and yield signs, and display them on the Multi-Information Display (MID).*

* All vehicle actions must be driver-initiated and are not automated.


See www.toyota.com/safety-sense for model applicability.

Refer to the Toyota Owner's Manual for a list of additional situations in which the system operation may be limited.

RSA DISPLAY

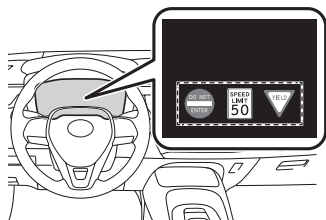

When the driving support system information is selected, a maximum of 3 signs can be displayed.

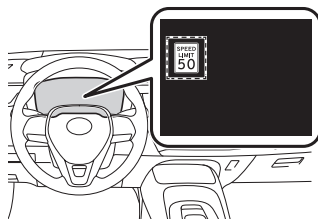

When a tab other than the driving support system information is selected, the following types of road signs will be displayed.

- Speed limit sign
- Do Not Enter sign (when notification is necessary)

SUPPORTED TYPES OF ROAD SIGNS



Speed limit



Stop



Do Not Enter



Yield

SETTING RSA

- (1) Press “<>” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select the “” and then press “”. The setting screen is displayed.
- (3) Press “” each time to change the setting.
- (4) Press “” to go back to the menu.

Note: If the vehicle was last turned off while a speed limit sign was displayed on the Multi-Information Display (MID), the same sign displays again when the vehicle is turned on.

Refer to the Toyota Owner's Manual for additional information on RSA operation, settings, adjustments, limitations, and precautions before attempting to use it.

SAFETY & EMERGENCY FEATURES


Seat belts



NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic locking retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.


To find more information about seat belts, and how to install a child restraint system, refer to the Owner's Manual.

Seat belts-Shoulder belt anchor

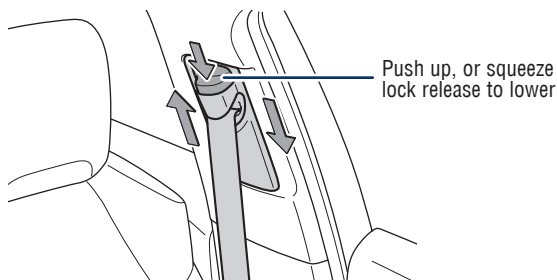


Rear door child safety locks

Rear door

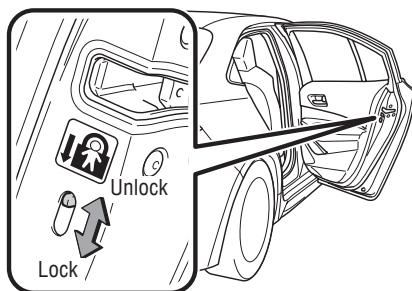

Moving the lever downward will allow the door to be opened only from the outside.

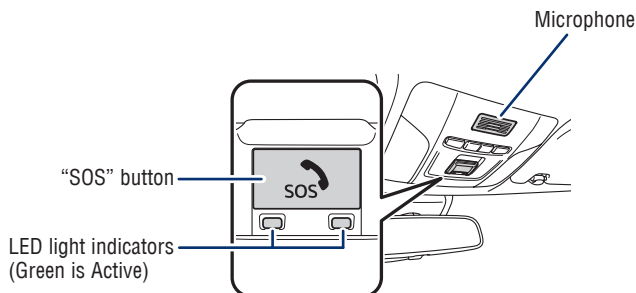


Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is staffed with live agents at the Toyota response center, which operates 24 hours per day, 7 days per week.

Services for subscribers include:


- Automatic collision notification
- Stolen vehicle locator
- Emergency assistance (“SOS” button)
- Enhanced roadside assistance

For limitations and additional information, refer to the “Owner’s Manual” or visit www.toyota.com/connected-services.

Trunk-Internal release

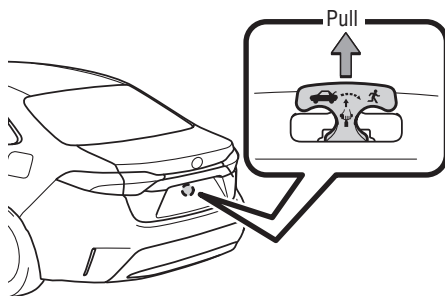

Tire Pressure Monitoring (warning) System (TPMS)

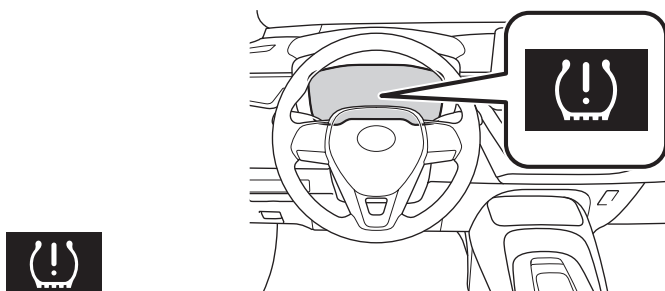

The tire pressure warning system can be selected on “” of the Multi-Information Display (MID).

System reset initialization

- (1) Press “<>” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select the “Vehicle Settings,” then press and hold “.
- (3) Press “” switches and select “TPWS” and then press “.
- (4) Press “” switches and select “Set Pressure” then press and hold “” until the warning light blinks three times.

The tire pressure detected by the tire pressure warning system can be displayed on the Multi-Information Display (MID).

If the tire pressure indicator flashes for approximately 1 minute and then remains on, take the vehicle to your local Toyota dealer.


Refer to the load label on the door jamb or the Owner's Manual for tire inflation specifications.

NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.


Tire repair kit & tools (if equipped)

TOOL LOCATION

Jack and tools

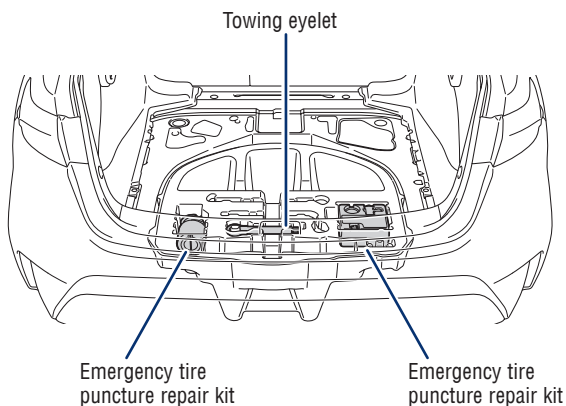

Tire repair kit components

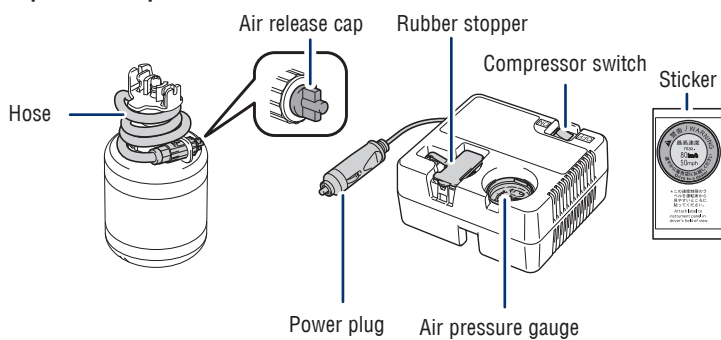


Refer to the Owner's Manual for jack positioning and tire changing procedures.

SAFETY & EMERGENCY FEATURES


Spare tire & tools (if equipped)

TOOL LOCATION

Corolla - Type A / Corolla Hybrid

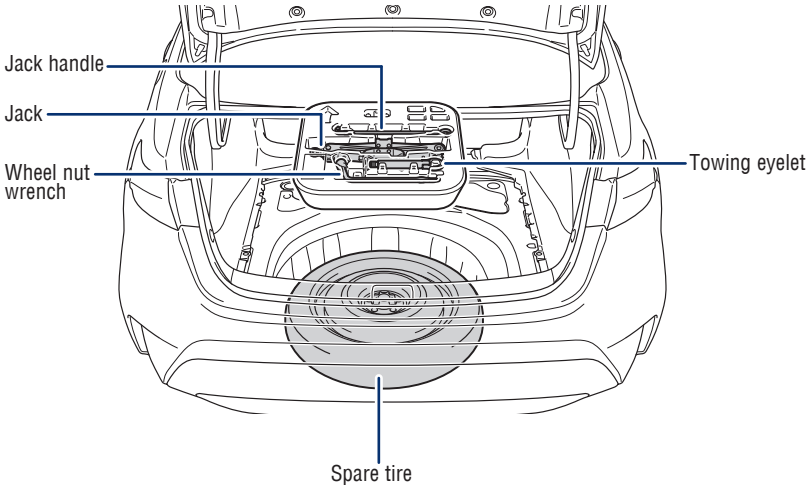


Corolla - Type B

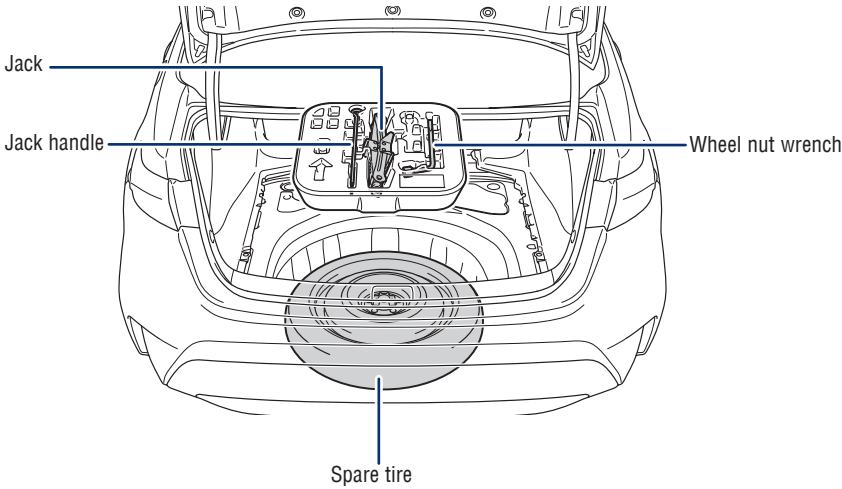


REMOVE THE SPARE TIRE

- (1) Remove the luggage floor cover.

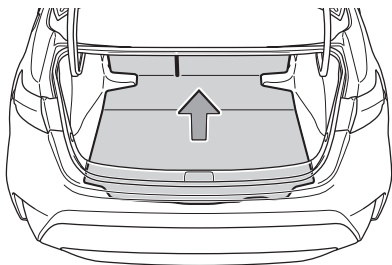


- (2) Remove the tool tray.


Corolla - Type A / Corolla Hybrid

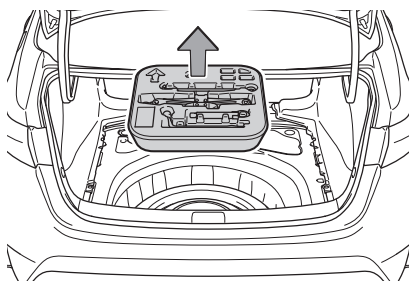

Corolla - Type B

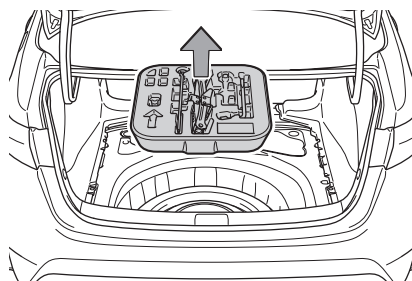

- (3) Loosen the center fastener that secures the spare tire.

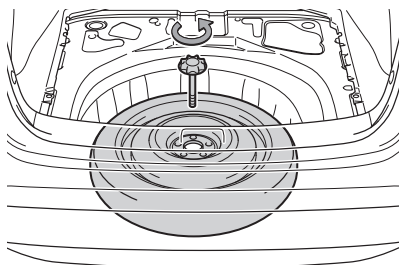

Refer to the Owner's Manual for tire changing and jack positioning procedures.

SAFETY & EMERGENCY FEATURES

Star Safety System™

Your vehicle comes standard with the Star Safety System™, which combines Anti-lock Braking System (ABS), Brake Assist (BA), Electronic Brake-force Distribution (EBD), Smart Stop Technology (SST), Traction Control (TRAC) and Vehicle Stability Control (VSC).

Refer to the Owner's Manual for more details and important information on limitations to these systems.

ANTI-LOCK BRAKE SYSTEM (ABS)

Toyota's Anti-lock Brake System detects which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

BRAKE ASSIST (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

SMART STOP TECHNOLOGY (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

ENHANCED VEHICLE STABILITY CONTROL (VSC)

Enhanced Vehicle Stability Control provides cooperative control of the ABS, TRAC, VSC and EPS.

Enhanced VSC helps to maintain directional stability when loss of traction occurs during a turn.

TRACTION CONTROL (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).


Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use Toyota floor mats designed for your specific model.
- Only use one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

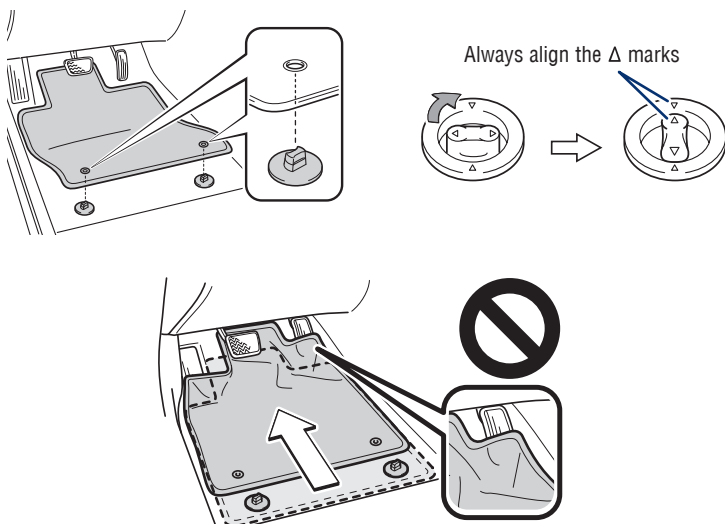


BLUETOOTH® DEVICE PAIRING SECTION

Do not attempt the Bluetooth® Pairing process while driving.

To begin the Bluetooth® Pairing process, press the HOME button.


Bluetooth® Pairing for your phone

Pairing your phone is the first step in connecting with your Toyota. This pairing process is quick and easy. All you have to do is setup the phone and multimedia system to form a connection.¹

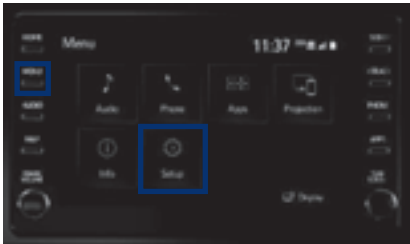


Audio / Audio Plus / Premium Audio

STEP 1 Press [MENU], then select "Setup" on display screen.



iPhone bluetooth Menu

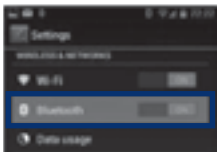


Android bluetooth Menu



STEP 2 Ensure Bluetooth is turned on for your phone.

STEP 3 Select "Bluetooth," then select "Add New Device" on display screen.

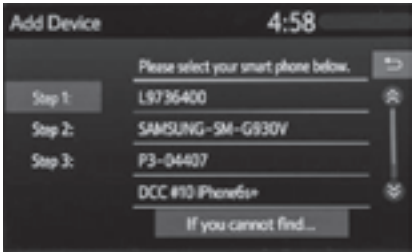


STEP 4 Select "Phone Name."




STEP 5 Check the display on your phone. Does the PIN XXXX match the PIN displayed? If it does, select "Pair."

¹ Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

Bluetooth® Pairing for your phone (cont.)

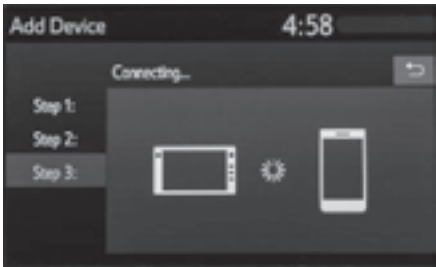


STEP 6 "Connecting" displays while phone is forming the connection to the multimedia system.

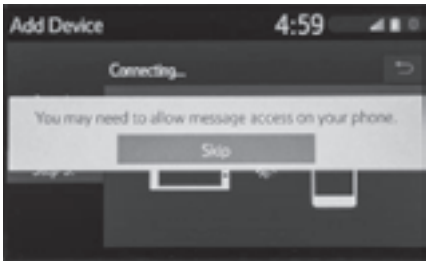


STEP 7 Enable Notifications (text message). While pairing your phone, a message will be displayed:
"You may need to allow message access on your phone."

Note: You may also select "Skip" on display screen to skip enabling notifications.
If skipped, proceed to **Step 8**.

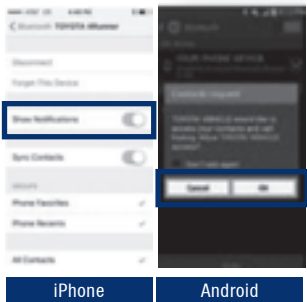

STEP 8 Turn on "Show Notifications" for iPhone or "ON" for Android.

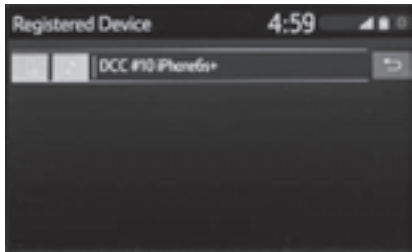

STEP 9 A confirmation will appear once your phone has been paired and connected.



TOYOTA

Quick Reference Guide 2022



00505QRG22COR



Printed in U.S.A. 5/21
21-MKG-15664

toyota.com