

QUICK REFERENCE GUIDE



TOYOTA

CAMRY

CAMRY AWD

CAMRY HYBRID

2023

2023

CAMRY / CAMRY AWD / CAMRY HV

This Quick Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Quick Reference Guide is not intended as a substitute for the Owner's Manual located in your vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor North America, Inc. wish you many years of satisfied driving in your new Camry.

A word about safe vehicle operations

This Quick Reference Guide is not a full description of Camry operations. Every Camry owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the Owner's Manual. Each box contains operating instructions to help you avoid injury or equipment malfunction.

All information in this Quick Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

OVERVIEW

Engine maintenance	11
Fuel tank door release & cap	10
Hood release	10
Indicator symbols	6-7
Instrument cluster	4-5
Instrument panel	2-3
Instrument panel light control	10
Keyless entry ^{1,2}	8-9
Smart Key system ^{1,2}	9

FEATURES & OPERATIONS

Air conditioning/heating ^{1,2}	28-29
Audio	25
Auto lock/unlock ^{1,2}	12
Automatic transmission/Hybrid transmission	12
Blind Spot Monitor (BSM) and Rear Cross Traffic Alert (RCTA) ¹	32
Bottle holders/Cup holders	19
Clock	23
Color Head-Up Display (HUD)	17
Door lock switches	23
Driving mode select switches	30
Dynamic Torque Control	
AWD system	30
Electric parking brake	15
EV drive mode	30
Front and Rear Parking Assist with Automatic Braking (PA w/AB)	35
Front seats-Adjustments	18
Garage door opener (HomeLink®) ³	19
Heated steering wheel	27
Heated/ventilated seats	27
Hybrid Synergy Drive System	13
Lights ^{1,2} & turn signals	20-21
Moonroof ¹	23
Multi-Information Display (MID) ^{1,2}	16
Panoramic glass roof with front moonroof ¹	22
Panoramic View Monitor (PVM)	34
Parking brake	14
Power outlet-12V DC	26
Power windows ¹	21

FEATURES & OPERATIONS (continued)

Qi Wireless charger	26
Rear Camera Detection	
Function (RCD)	33
Rear seats-Folding	18
Rear view monitor system	31
Seats-Head restraints	18
Steering lock release	14
Steering wheel switches & telephone controls (Bluetooth®)	24
Tilt and telescopic steering wheel	14
USB charge ports	25
USB media port	25
Vehicle Stability Control (VSC)/TRAC OFF switch	31
Windshield wipers & washers	21

TOYOTA SAFETY SENSE™ 2.5+ (TSS 2.5+)

Automatic High Beams (AHB)	49-50
Dynamic Radar Cruise Control (DRCC)	
or Full-Speed Range DRCC	46-48
Lane Tracing Assist (LTA) System	40-45
Pre-Collision System with Pedestrian Detection (PCS w/PD)	37-39
Quick overview-Toyota Safety Sense™ 2.5+ (TSS 2.5+)	36
Road Sign Assist (RSA)	50-51
Sensors	37

SAFETY & EMERGENCY FEATURES



Floor mat installation	58
Rear door child safety locks	53
Safety Connect®	53
Seat belts	52
Seat belts-Shoulder belt anchor	52
Spare tire & tools	54-55
Star Safety System™	57-58
Tire Pressure Monitoring (warning) System (TPMS)	56
Trunk-Internal release	55

GETTING STARTED WITH TOYOTA AUDIO MULTIMEDIA AND CONNECTED SERVICES

60-73


¹ Visit your Toyota dealer for information on customizing this feature.
² Programmable by customer. Refer to the "Owner's Manual" for instructions and more information.
³ HomeLink® is a registered trademark of Gentex Corporation.

Instrument panel

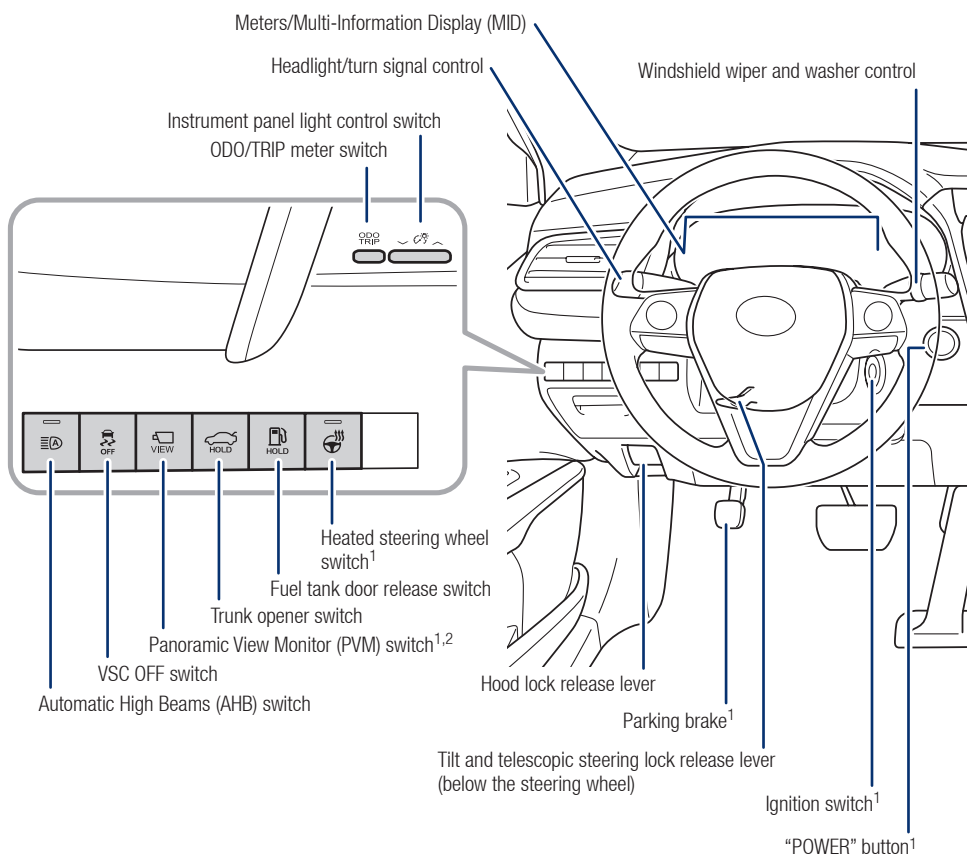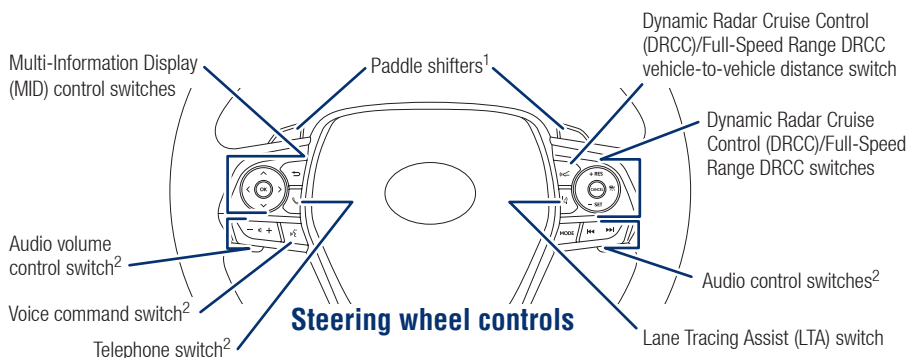

¹ If equipped.


² For details, refer to the "Navigation and Multimedia System Owner's Manual" or visit www.toyota.com/audio-multimedia for additional resources.

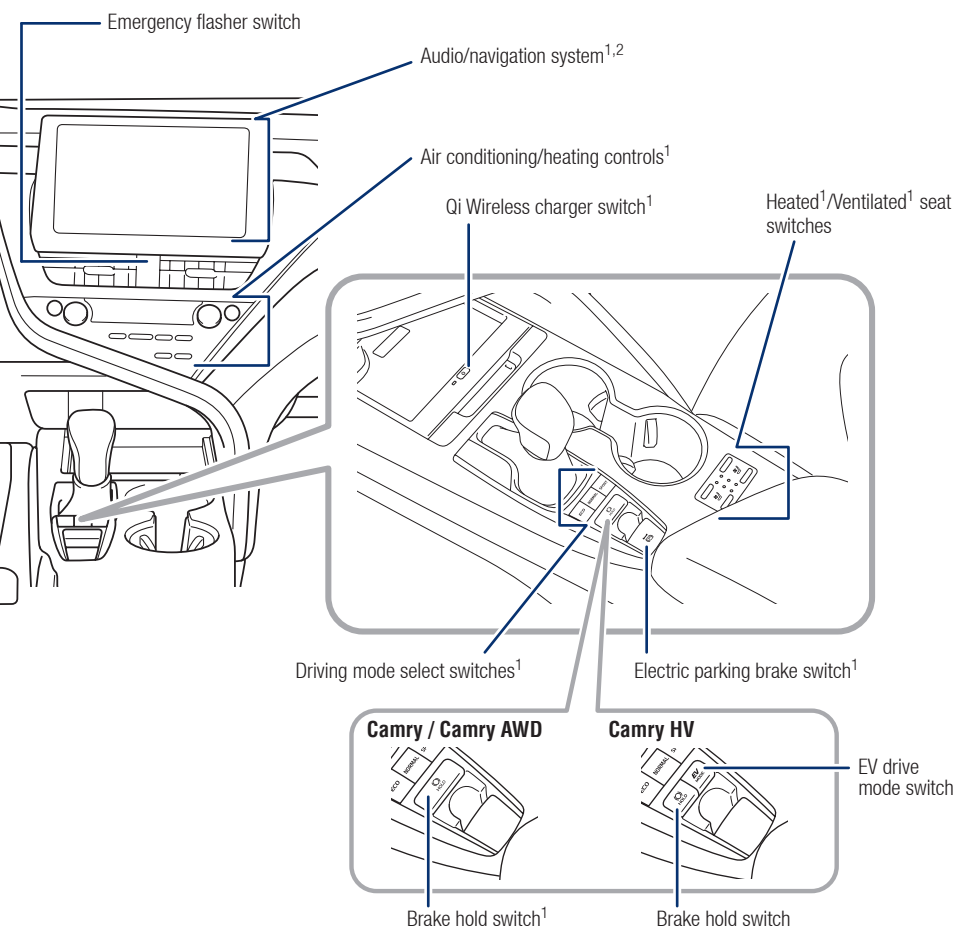


Instrument cluster

CAMRY / CAMRY AWD

Vehicles equipped with 4.2-in display

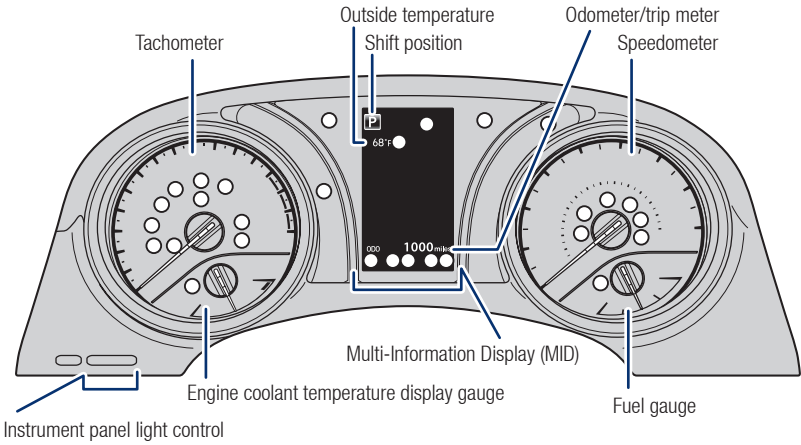


Vehicles equipped with 7-in display

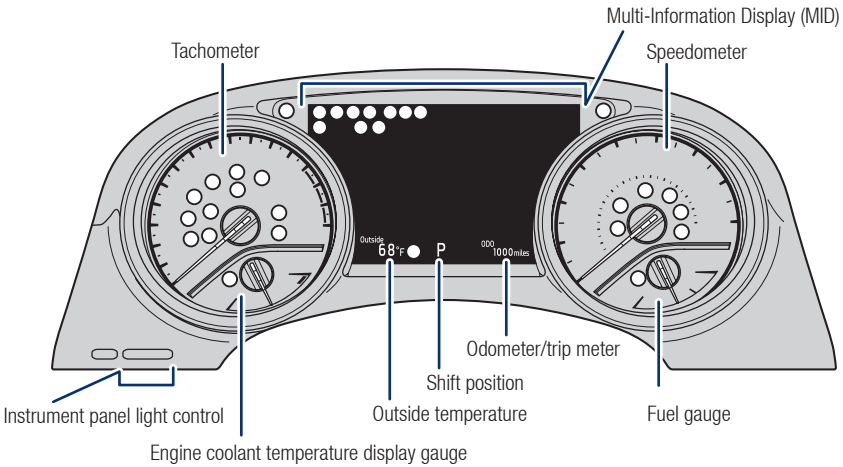


○ Service indicators and warning lights

Vehicles equipped with 4.2-in display

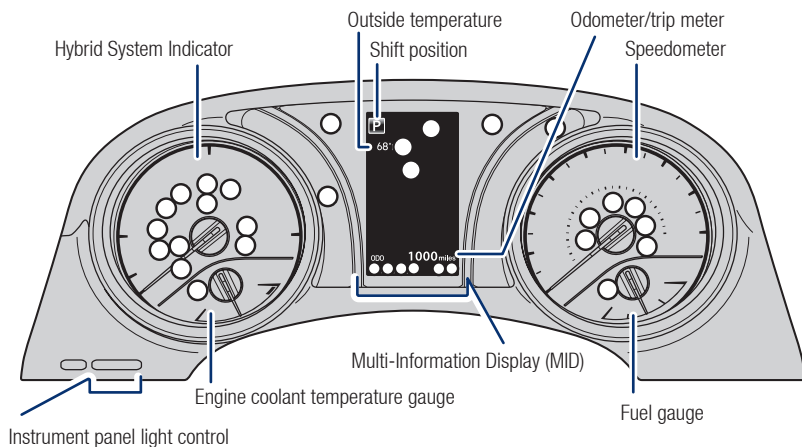

Vehicles equipped with 7-in display

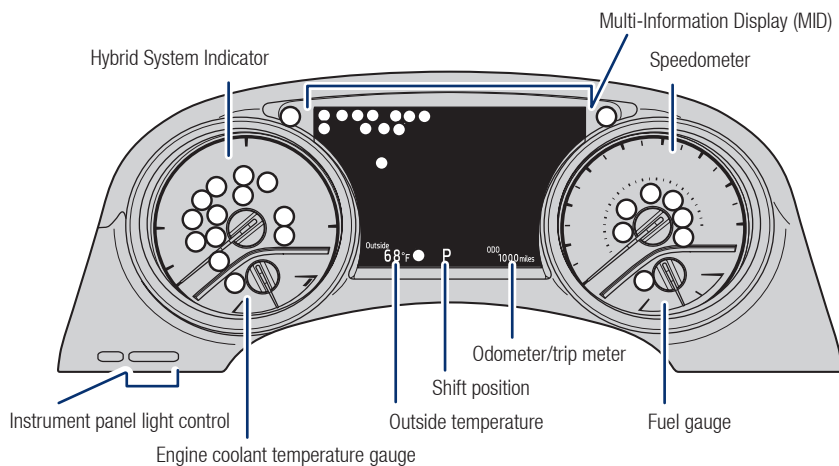

○ Service indicators and warning lights

Indicator symbols

For details, refer to “Warning lights and indicators,” Section 2, 2023 “Owner’s Manual”.

	AGC (Auto Glide Control) indicator ⁶		ECO driving indicator ^{1,5}
	AIRBAG ON/OFF indicator ¹		ECO MODE indicator ⁴
	ABS (Anti-lock Brake System) warning ¹		Electric power steering system warning ^{1,8} [red/yellow]
	AHB (Automatic High Beams) indicator ¹		EV drive mode indicator ⁶
	BSM (Blind Spot Monitor) indicator ⁴		EV indicator ⁶
	BSM outside rear view mirror indicators ⁴		Front and Rear Parking Assist with Automatic Braking OFF indicator ^{1,2,4,7,8}
	Brake hold operating indicator ^{1,2,4}		Fuel tank door position
	Brake hold standby indicator ^{1,4}		Headlight low/high beam indicators
	Brake system warning ¹		High coolant temperature warning ⁸
	Brake system warning ^{1,4} [yellow]		Inappropriate pedal operation warning ^{7,8}
	Charging system warning		LTA (Lane Tracing Assist) indicator ⁸ [white/green/yellow ³]
	Constant speed cruise control/Dynamic Radar Cruise Control (DRCC) indicator		Low engine oil pressure warning
	Constant speed cruise control/Dynamic Radar Cruise Control (DRCC) SET indicator		Low fuel level warning
	Driver's and front passenger's seat belt reminder ⁸ (alarm will sound when the vehicle is on)		Low outside temperature indicator
			Low tire pressure warning ¹



Malfunction/
Check Engine indicator¹



Master warning^{1,2,8}



Parking brake indicator^{2,8}



PCS (Pre-Collision System)
warning^{1,2,8}



RCD (Rear Camera Detection) OFF
indicator^{2,4,8}



READY indicator⁶



RCTA (Rear Cross Traffic Alert)
Indicator⁴



Rear passengers' seat belt reminder⁸



Security indicator



Slip indicator^{1,3}



Sport mode indicator⁴



SRS airbag warning¹



Turn signal indicator



VSC (Vehicle Stability Control)
OFF indicator¹

¹ If the indicator does not turn off within a few seconds of starting the vehicle, there may be a malfunction. Have the vehicle inspected by your Toyota dealer.

² If the indicator flashes, there may be a malfunction. Refer to the "Owner's Manual".

³ If the indicator flashes, it indicates that the system is operating.

⁴ If equipped.

⁵ Camry / Camry AWD only.

⁶ Camry HV only.

⁷ Refer to section PKSB (Parking Support Braking function) in the "Owner's Manual".

⁸ With warning buzzer.

OVERVIEW

Keyless entry

UNLOCKING OPERATION



(Camry / Camry AWD)

Smart Key



Press

ONCE: Driver door
TWICE: All doors

Carry Smart
Key remote

Driver door unlock*

Grasp



NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

LOCKING OPERATION



(Camry / Camry AWD)

Smart Key



Press

Carry Smart
Key remote

All-door lock

Touch




TRUNK UNLOCKING/OPENING OPERATION



(Camry / Camry AWD)

Smart Key

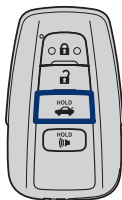


HOLD



Press and hold

Carry Smart
Key remote

Push

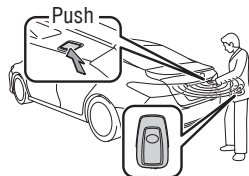

* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping front passenger door handle will unlock all doors.

Please refer to the "Owner's Manual" for more details on how to program the doors.


NOTE: Vehicle with a Smart Key system - Doors may also be locked/unlocked using the mechanical key. (Slide the release lever on the bottom of Smart Key and take the mechanical key out.)

PANIC BUTTON

Smart Key



(Camry / Camry AWD)

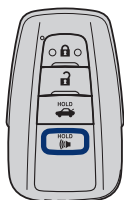

HOLD




Press and hold




Smart Key system (if equipped)

START FUNCTION

Camry / Camry AWD

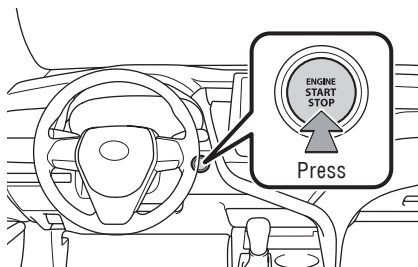

Camry HV

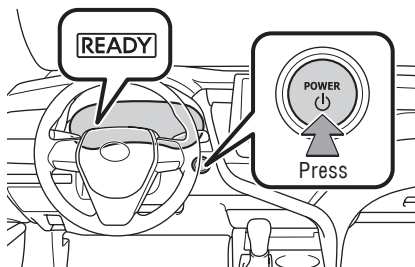

NOTE: The Smart Key must be carried to enable the start function. With the shift lever in Park and the brake pedal depressed, press the power button.

POWER (WITHOUT STARTING VEHICLE)

Without depressing the brake pedal, pressing the power button will change the operation mode in succession from:






Off - All systems OFF. Emergency flashers can be used.

Accessory – Some electrical components can be used.

On - All electrical components can be used.




Fuel tank door release & cap

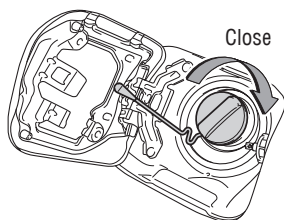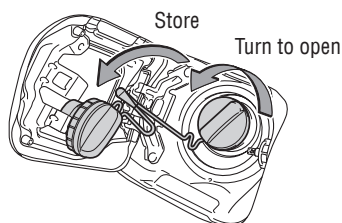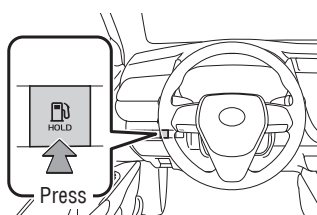


NOTE: Tighten until one click is heard. If the cap is not locked or tightened enough, the Check Engine indicator may illuminate.



Hood release

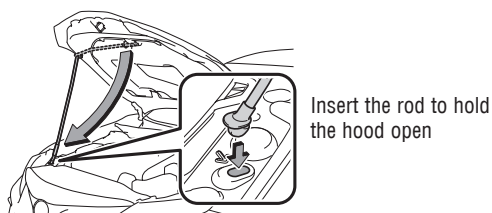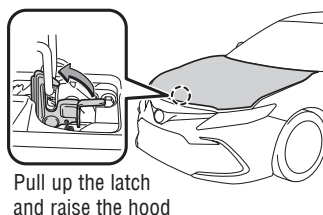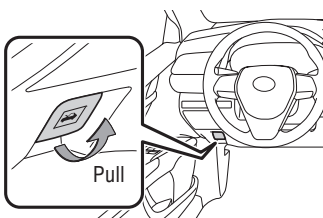


Instrument panel light control

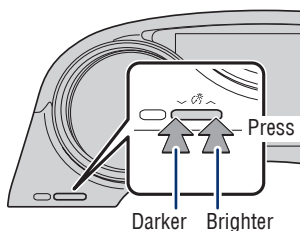


Engine maintenance


2.5 L 4-CYLINDER (A25A-FKS) ENGINE - CAMRY / CAMRY AWD

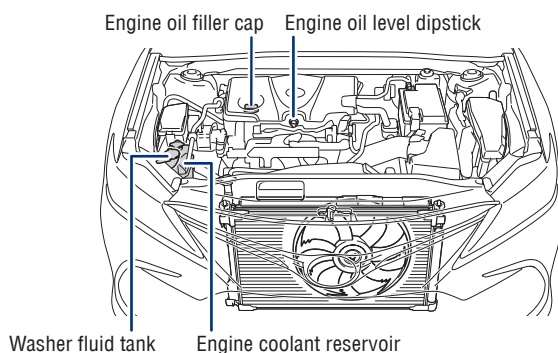

3.5 L V6 (2GR-FKS) ENGINE - CAMRY

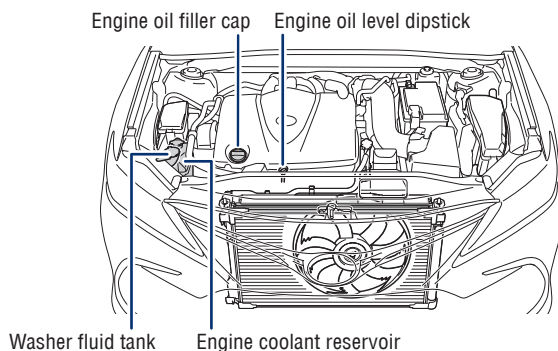


HYBRID MODELS

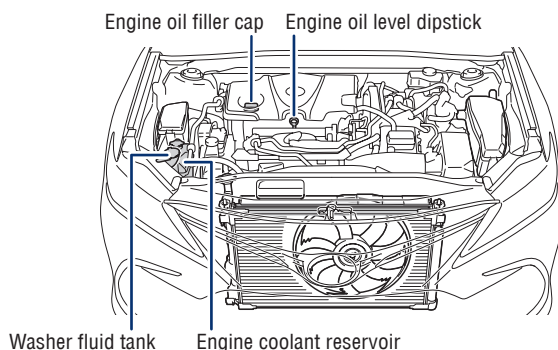

NOTE: Regularly scheduled maintenance at your Toyota dealer, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “*Warranty Maintenance Guide.*”

Automatic transmission/Hybrid transmission

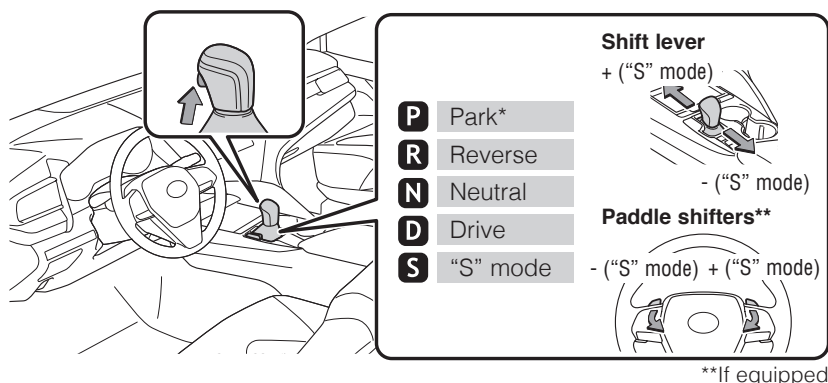

* The vehicle must be on and the brake pedal depressed to shift from Park.

"S" (SEQUENTIAL) MODE

Shift the shift lever to "S" position from "D" position.

Shift lever type:

- + : Upshift (push and release)
- : Downshift (pull and release)

Paddle shifters type (if equipped):

- + : Upshift (pull and release)
- : Downshift (pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

Refer to the "Owner's Manual" for more details.

Auto lock/unlock

Automatic door locks can be programmed to operate in different modes, or turned OFF.

DEFAULT SETTING

Shift position linked door locking/unlocking function

- Doors lock when shifting from Park.
- Doors unlock when shifting into Park.

CUSTOMIZED SETTING

Speed linked door locking function

- Doors lock when the vehicle speed is approximately 12 mph (20 km/h) or higher.

Driver's door linked door unlocking function

- Doors unlock when the driver's door is opened.

Refer to the "Owner's Manual" for more details.

Hybrid Synergy Drive System (Camry HV only)


The Hybrid Synergy Drive System utilizes a computer-controlled gasoline engine and electric motor to provide the most efficient combination of power for the vehicle. When the brakes are applied, the braking force generates electricity, which is then sent to the traction battery to conserve energy. In addition, the engine shuts off when the vehicle is stopped. The benefits are better fuel economy and reduced vehicle emissions.

NOTE: Fuel consumption and energy information of the Hybrid System are shown on the Multi-Information Display (MID) screen and Audio Multimedia System screen.

TIPS FOR IMPROVED FUEL ECONOMY

- Ensure tire pressures are maintained at levels specified in the "Owner's Manual".
- When possible, link trips to reduce engine cold starts.
- Avoid driving at speeds that are higher than necessary, especially on the highway.
- When possible, avoid sudden stops to maximize regenerative braking energy.
- Minimize use of the air conditioning.


STARTING YOUR VEHICLE

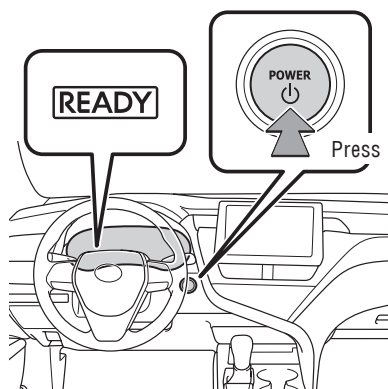

1. Put the shift lever in "P."
2. Depress the brake pedal, and "READY" and a message will be displayed on the Multi-Information Display (MID).
3. Press the "POWER" button briefly and firmly.
4. Continue depressing the brake pedal until the "READY" indicator is illuminated. If the "READY" indicator turns on, the hybrid system will operate normally. Shift the lever to the desired position and you may begin driving.


Steering lock release

Without Smart Key - Camry / Camry AWD only (if equipped)

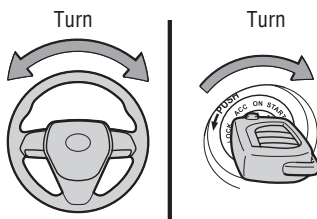

When starting the engine, the engine switch may seem stuck in the "LOCK" position. To free it, turn the key while turning the steering wheel slightly left and right.


Tilt and telescopic steering wheel

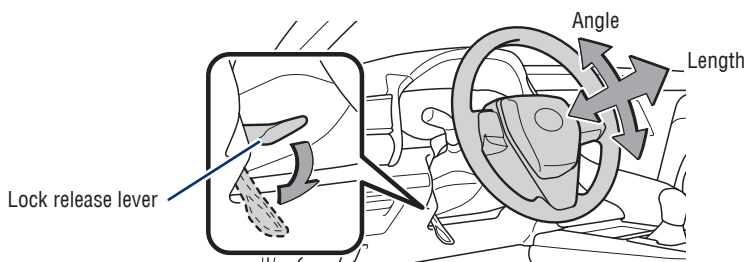

Hold the steering wheel, push the lever down, set angle and length, and return the lever.

NOTE: Do not attempt to adjust while the vehicle is in motion.


Parking brake (if equipped)

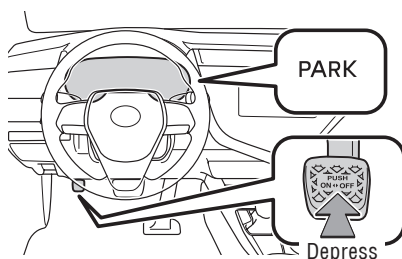


Electric parking brake (if equipped)

PARKING BRAKE

Automatic mode

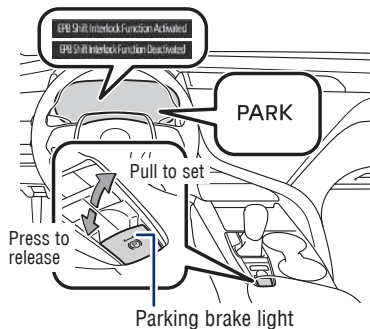

Manual mode

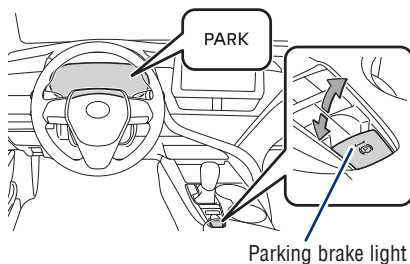

Automatic mode

To turn automatic mode ON, while vehicle is stopped, pull and hold the switch until “EPB Shift Interlock Function Activated” displays on the Multi-Information Display (MID). While depressing the brake pedal, shifting the lever into P position will automatically set the brake and turn the parking brake indicator and parking brake light will turn on. To release brake, depress the brake pedal and shift the lever out of P. The indicator and the light will turn off.

To turn automatic mode OFF, press and hold the parking brake switch until “EPB Shift Interlock Function Deactivated” displays on the MID.


Manual mode

While the vehicle is stopped and the brake pedal is depressed, pull the switch to set the parking brake and turn the parking brake indicator and parking brake light will turn on. To release, depress the brake pedal and press the switch. The indicator and the light will turn off.

Refer to the “Owner’s Manual” for limitations and more details.


BRAKE HOLD

Camry / Camry AWD

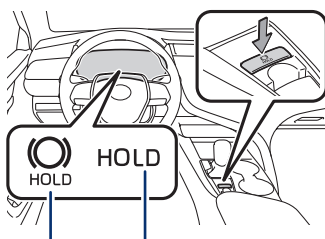

Standby indicator Operating indicator

Camry HV

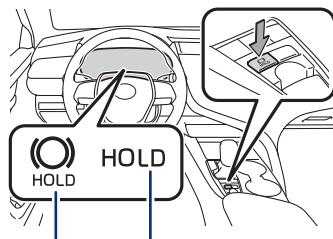

Standby indicator Operating indicator


The brake hold system keeps the brake applied when the shift lever is in D, S or N while the system is on and the brake pedal has been depressed to stop the vehicle. The system releases the brake when the accelerator pedal is depressed with the shift lever in D or S to allow smooth start off.

Refer to the “Owner’s Manual” for limitations and more details.

FEATURES & OPERATIONS

Multi-Information Display (MID)


VEHICLES EQUIPPED WITH 4.2-in DISPLAY

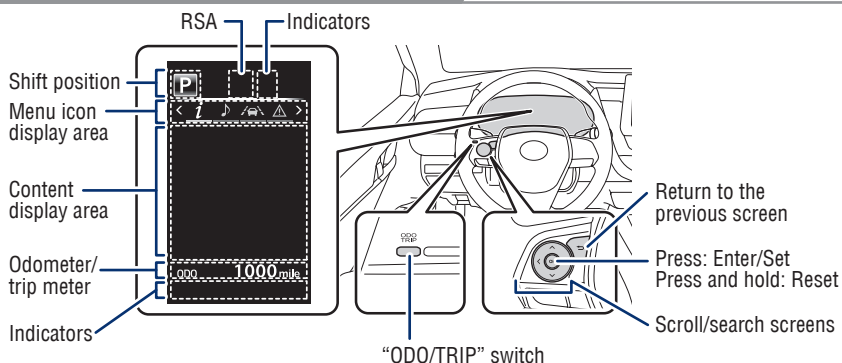

Press MID control switches to change and select information in the following:

-  Drive information
-  Warning message display
-  Audio system-linked display
-  Settings display
-  Driving assist system information

VEHICLES EQUIPPED WITH 7-in DISPLAY

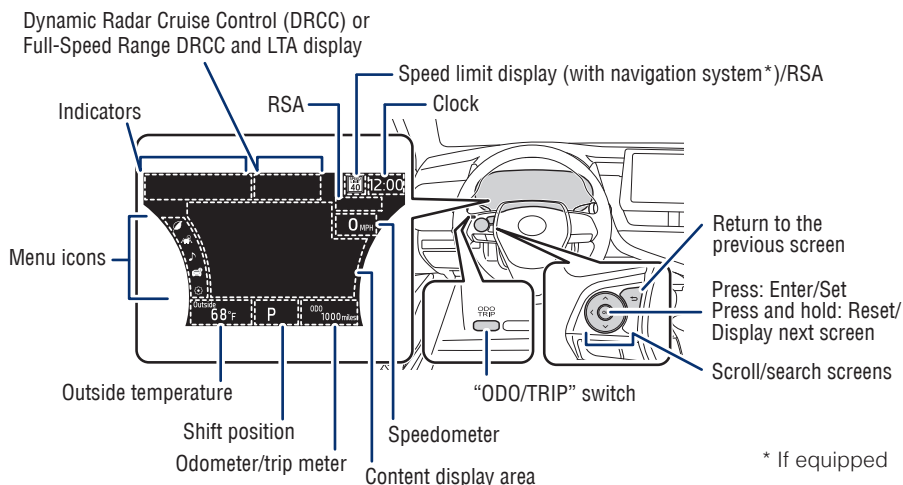


Press MID control switches to change and select information in the following:

-  Warning message display
-  Audio system-linked display
-  Eco-friendly driving information
-  Vehicle information
-  Driving assist system information
-  Settings display


Refer to the "Owner's Manual" for more details.

Color Head-Up Display (HUD) (if equipped)

CAMRY / CAMRY AWD

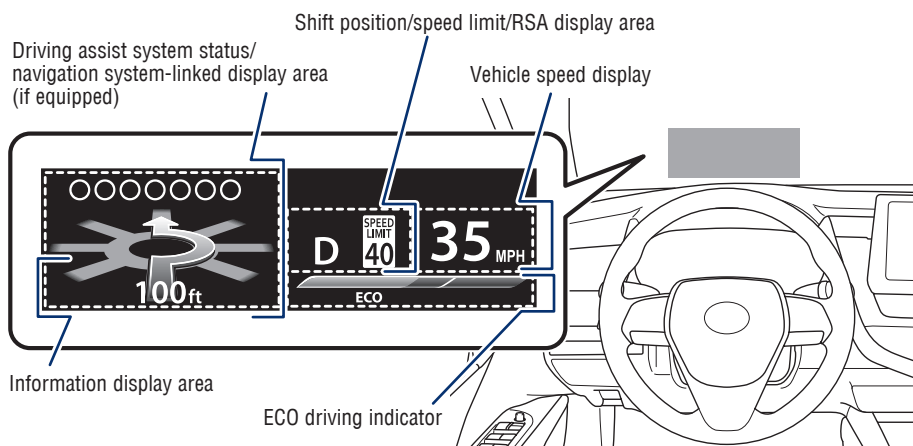

CAMRY HV

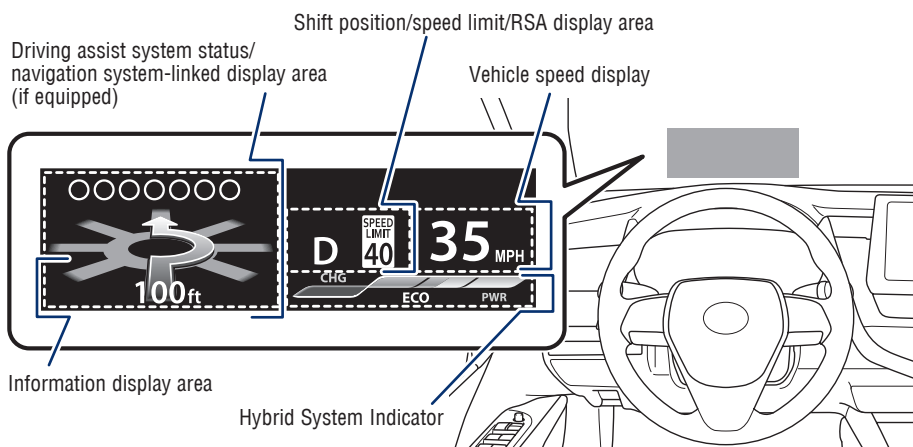

The head-up display is linked to the meters and navigation system (if equipped) and projects a variety of information in front of the driver, such as the current vehicle speed.


Press MID control switches and select “” on the Multi-Information Display (MID) and then select “” to access Head-up display settings. And press “” to enter selection.

Refer to the “Owner’s Manual” for more details.


FEATURES & OPERATIONS

Front seats-Adjustments


MANUAL SEAT (IF EQUIPPED)

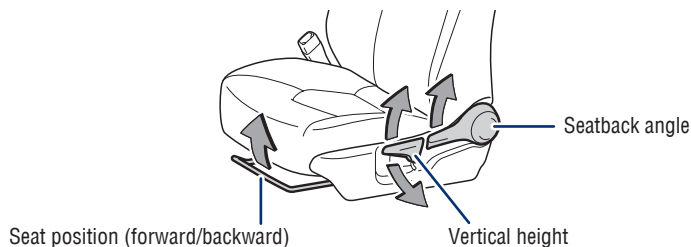

POWER SEAT (IF EQUIPPED)

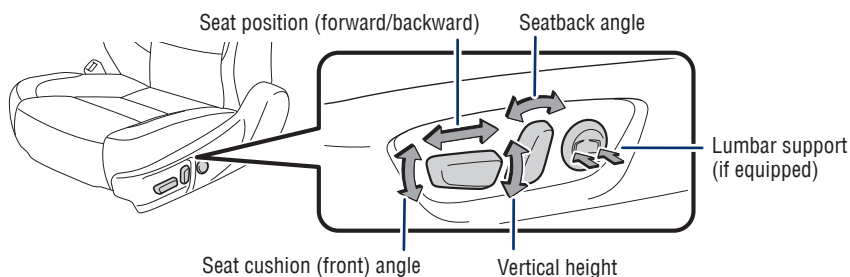


Rear seats-Folding (if equipped)

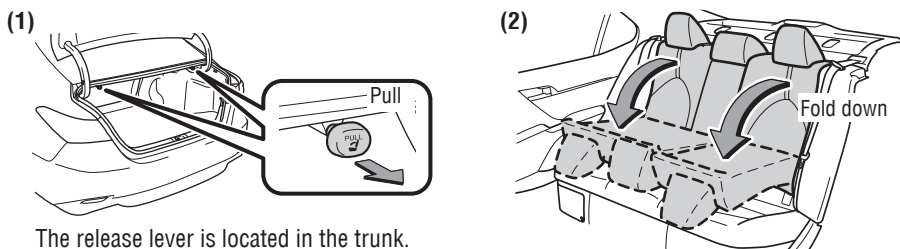

Refer to the "Owner's Manual" for more details.


Seats - Head restraints

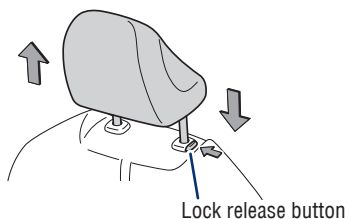


Bottle holders/Cup holders

BOTTLE HOLDERS (DOOR MOUNTED)

Front

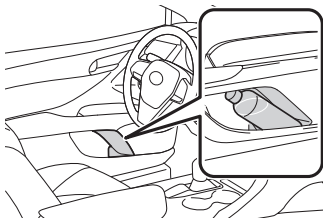


Rear

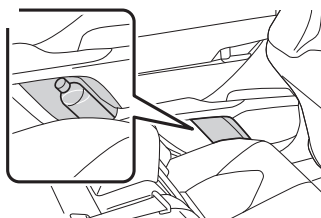


CUP HOLDERS


Front

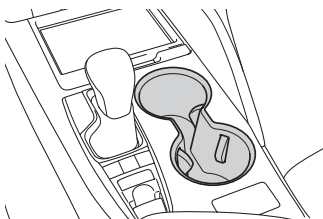

Rear (if equipped)

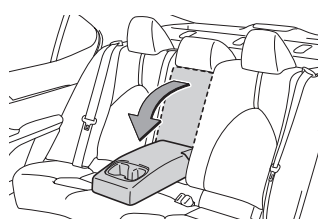

Garage door opener (HomeLink®*) (if equipped)

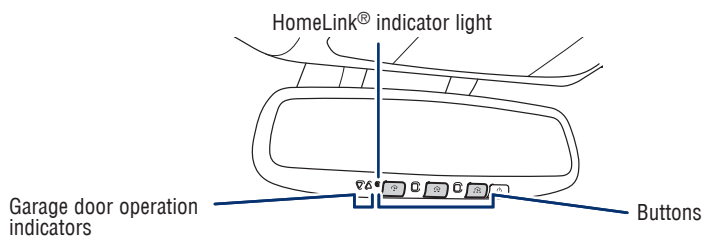

Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.

Refer to the "Owner's Manual" for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit www.homelink.com/toyota.




* HomeLink® is a registered trademark of Gentex Corporation.

Lights & turn signals

HEADLIGHTS

Operating the  switch turns on the headlight indicator .

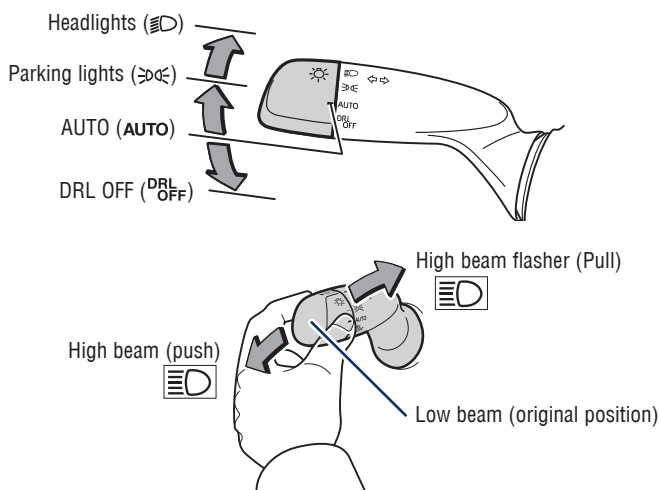

Daytime Running Light system (DRL)

Automatically turns on under certain conditions to make vehicle more visible to other drivers. Not for use at night. (The parking brake needs to be released and the headlight switch must be in the “” or “**AUTO**” position while the vehicle is on.)

Automatic light cut off system (AUTO)

- Headlights are on: The headlights and taillights will turn off automatically 30 seconds after the vehicle is turned from ON to ACC or LOCK position**/ACCESSORY mode or OFF*** and a door is opened and closed. (If the “” switch on the key is pressed after all doors are closed, the lights will turn off immediately.)
- Only the taillights are on: The taillights will turn off automatically if the vehicle is turned from ON to ACC or LOCK position**/ACCESSORY mode or OFF*** and the driver’s door is opened.

Automatic High Beams system (AHB)*

Automatically switches between high and low beams as appropriate to enhance vision at night.


Refer to Toyota Safety Sense™ 2.5+ (TSS 2.5+) in this guide or the “Owner’s Manual” for more details on the Automatic High Beams feature.

* Operating conditions must be met. Refer to the “Owner’s Manual” for details.

** Vehicles equipped without a Smart Key.



*** Vehicles equipped with a Smart Key.

TURN SIGNALS

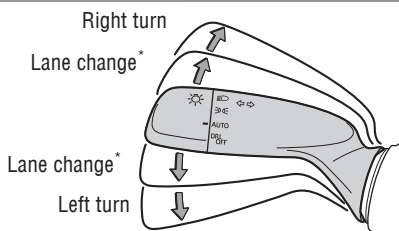

* Move the lever partway and release. The signals will flash three times.

Windshield wipers & washers

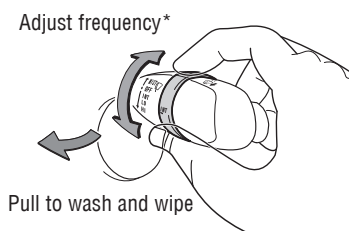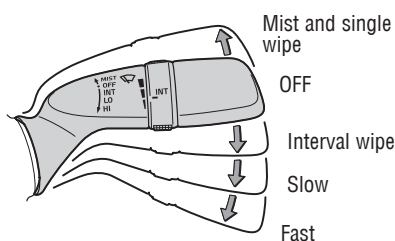


* **Intermittent windshield wiper frequency adjustment:** Rotate to increase/decrease wiper frequency.


Refer to the "Owner's Manual" for more details.

Power windows

Driver side

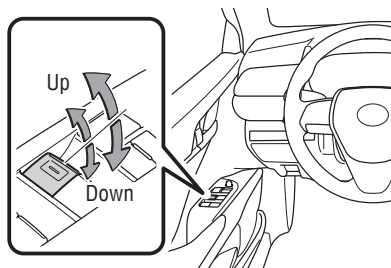

Window lock switch

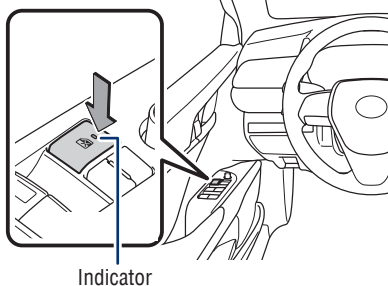

All window auto up/down

Press the switch completely down or pull it completely up and release to fully open or close. To stop the window partway, operate the switch in the opposite direction.

Window lock switch

Deactivates all passenger windows. Driver's window remains operable.


FEATURES & OPERATIONS

Panoramic glass roof with front moonroof (if equipped, Camry / Camry AWD only*)

* Not applicable to Camry Hybrid.

SLIDING OPERATION

Opening and closing the electronic sunshade

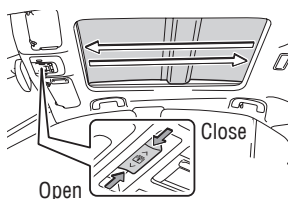


Open - Slide and hold the “☰” switch backward.
The electronic sunshade will open fully automatically.*


Close - Slide and hold the “☰” switch forward.
The electronic sunshade will close fully automatically.*

* Quickly slide and release the “☰” switch in either direction to stop the electronic sunshade partway.

Opening and closing the panoramic moonroof

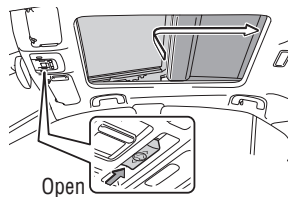

Open - Slide and hold the “↔” switch backward.
The panoramic moonroof and electronic sunshade will open automatically.*

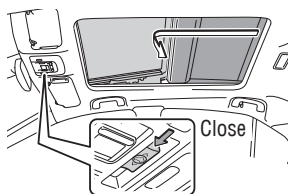


Close - Slide and hold the “↔” switch forward.
The panoramic moonroof will fully close automatically.

* Quickly slide and release the “↔” switch in either direction to stop the panoramic moonroof partway.

TILTING OPERATION

Tilting the panoramic moonroof up and down

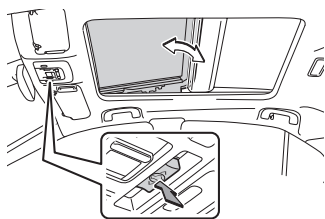

Tilt-up - Press the center of the “↔” switch to tilt the panoramic moonroof up. When the panoramic moonroof is tilted up, the electronic sunshade will open to the half-open position.


Tilt-down - Press and hold the center of the “↔” switch to tilt down. The panoramic moonroof can be tilted down only when it is in the tilt-up position.

Note: The panoramic moonroof can be opened from the tilt-up position. Also, lightly pressing the “↔” switch again stops the panoramic moonroof partway.

Moonroof (if equipped)

SLIDING OPERATION


Press once to open partway.
Press again to open completely.

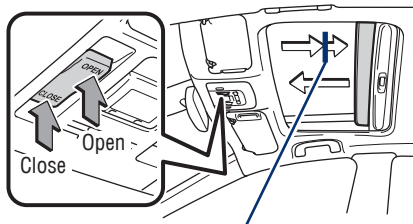

Recommended open position
to minimize wind noise.

TILTING OPERATION

Press once to open completely.

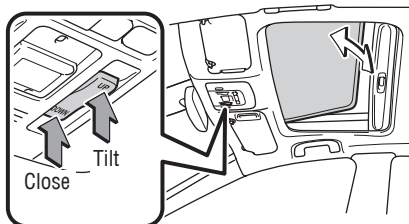

Lightly press either side of the moonroof switch while opening/tilting is in progress, the moonroof stops partway.


Clock

Select to change the time zone.

Select to set daylight saving time
ON/OFF/AUTO.¹

Select to set automatic adjustment
of the clock by GPS on/off.²

Select to set the 24 hour time
format on/off.

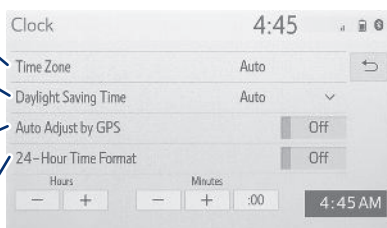


- 1) Press "**MENU**" button next to the screen.
- 2) Select "**Setup**" or "**General**" in the touchscreen to access the general setting screen.
- 3) Select "**Clock**."
- 4) Select the desired items to be set.

Refer to the "Navigation and Multimedia System "Owner's Manual" for more details.

¹ Premium Audio only


² Audio Plus/Premium Audio only

Door lock switches

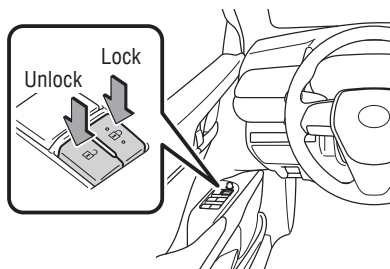

FEATURES & OPERATIONS

Steering wheel switches & telephone controls (Bluetooth®)

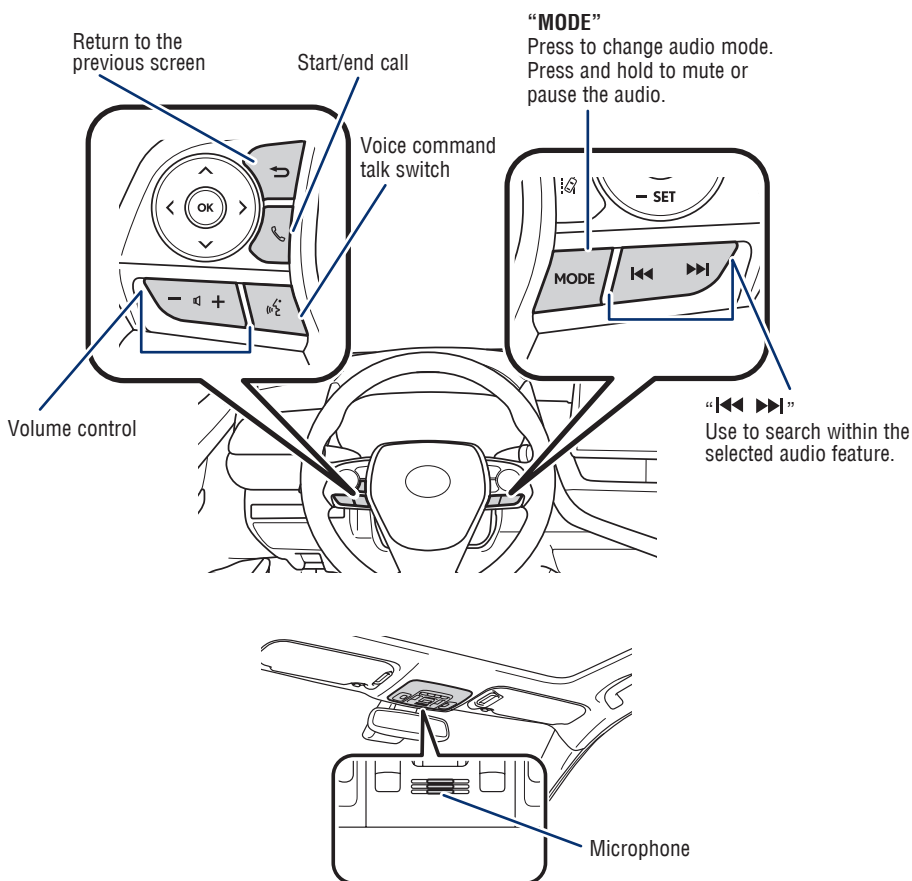


Bluetooth® technology allows dialing or receipt of calls without removing your hands from the steering wheel.

Refer to the Bluetooth® device pairing in this guide or the “Navigation and Multimedia System Owner’s Manual” for additional user instructions.

NOTE: Always use safe driving practices and follow all traffic rules.

Audio

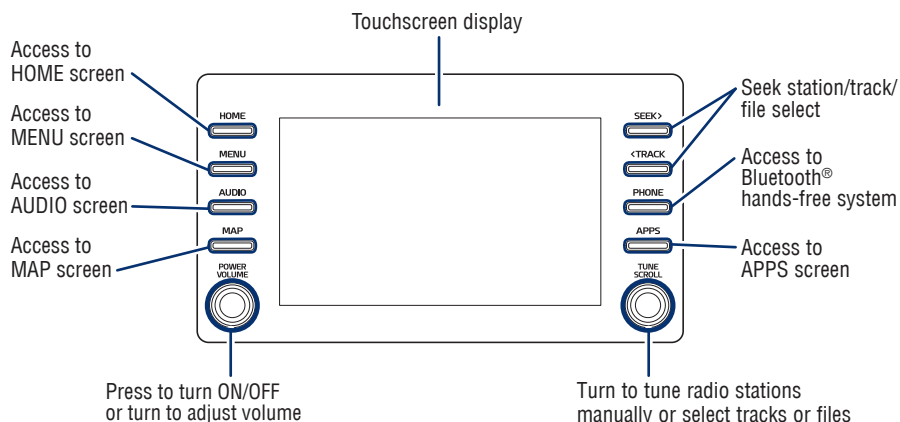


Refer to the “Navigation and Multimedia System “Owner’s Manual” or visit www.toyota.com/audio-multimedia for additional resources.

NOTE: Always use safe driving practices and follow all traffic rules.


USB charge ports

USB Type-A port: 2.5A / USB Type-C port: 3.0A

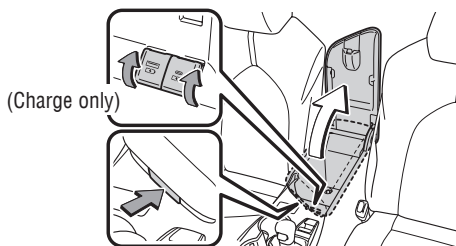


The vehicle must be in the “ACC” or “ON” position (without Smart Key) / “ACCESSORY” or “IGNITION ON” mode (with Smart Key) for use.

USB media port

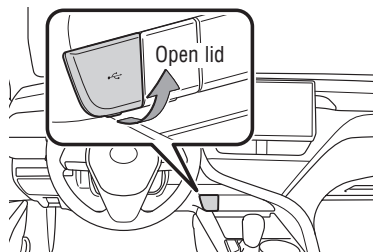



Connecting a compatible device and cable into the USB media port will support charging and music playback through the audio multimedia system.

Power outlet-12V DC

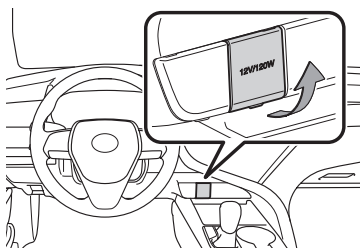


The vehicle must be in the “ACC” or “ON” position (without Smart Key) / “ACCESSORY” or “IGNITION ON” mode (with Smart Key) for use.

Qi Wireless charger (if equipped)

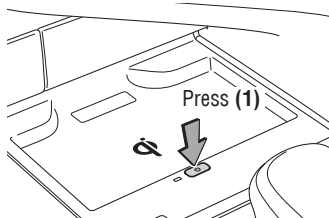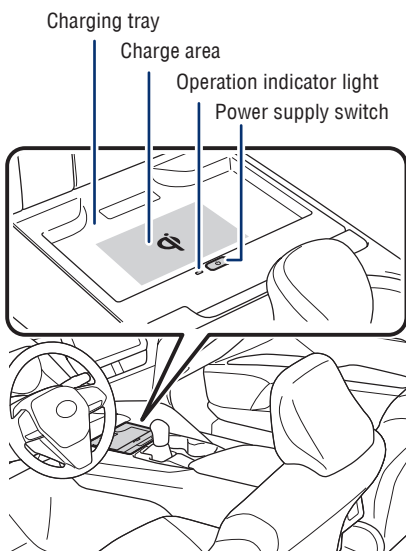

When the vehicle is turned off, the last state (ON/OFF) of the charger is retained.

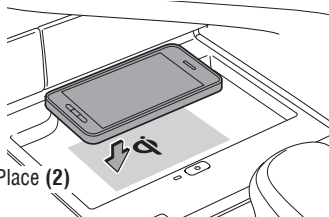

Place the device in the center of the charging area. If the charging coil is not in the center of the device, place the device so that its charging coil is centered in the charging area.

A mobile device can be charged wirelessly on the tray. **(1)** Press the power supply switch and the green operation indicator light turns on. **(2)** Place a compatible mobile device on the tray as shown in the illustration. An amber indicator illuminates while charging is in progress. When charging is complete, the indicator illuminates green. Some phones, cases or cover type wireless chargers may not cause the green indicator to illuminate even though it is fully charged.


The vehicle must be in the “ACC” or “ON” position (without Smart Key) / “ACCESSORY” or “IGNITION ON” mode (with Smart Key) for use.

Refer to the “Owner’s Manual” for limitations and more details on this system before attempting to use it.


Heated/ventilated seats (if equipped)

HEATED SEAT OPERATION (IF EQUIPPED)

Heated only

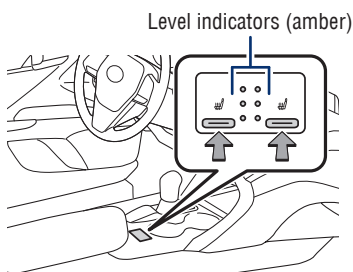


Heated and Ventilated

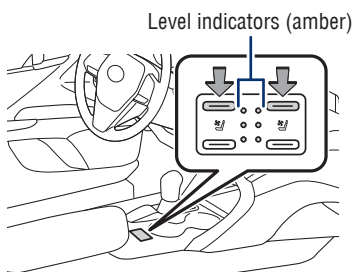


The vehicle must be on for use.

VENTILATED SEAT OPERATION (IF EQUIPPED)

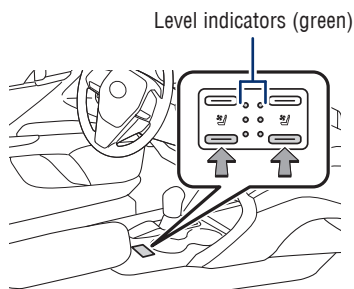

The vehicle must be on for use.

Heated steering wheel (if equipped)

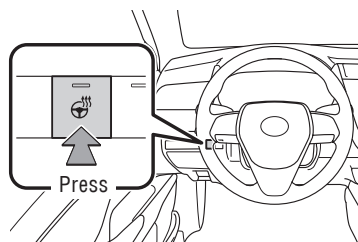


The vehicle must be on for use.

FEATURES & OPERATIONS


Air conditioning/heating (Camry / Camry AWD)

AUTOMATIC AIR CONDITIONING (IF EQUIPPED)

Without “SYNC” button

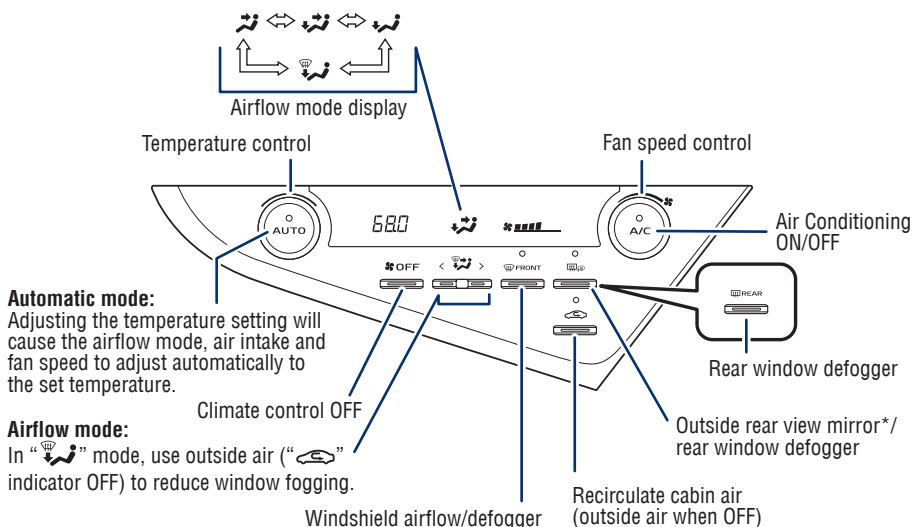


With “SYNC” button

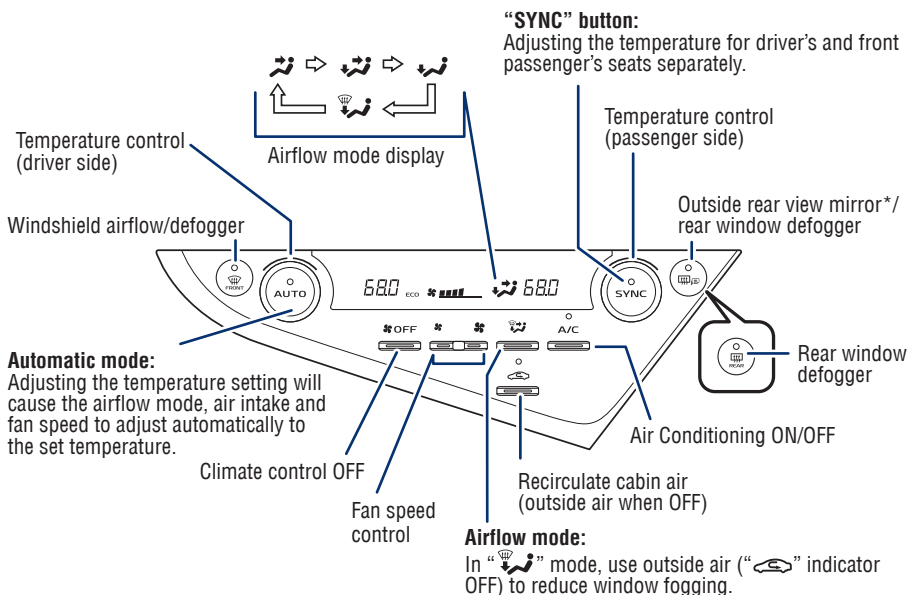


Airflow mode:

In “” mode, use outside air (“” indicator OFF) to reduce window fogging.

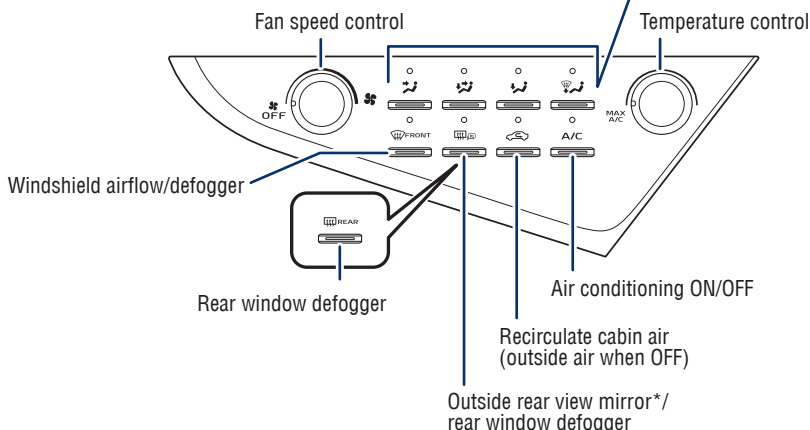

* If equipped

Air conditioning/heating (Camry HV)

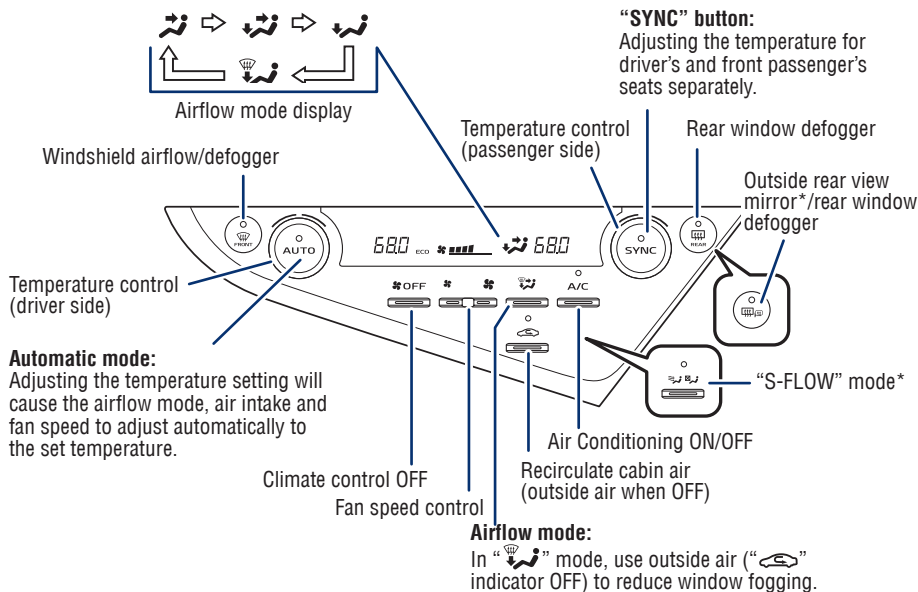

Automatic mode:

Adjusting the temperature setting will cause the airflow mode, air intake and fan speed to adjust automatically to the set temperature.

“SYNC” button:

Adjusting the temperature for driver’s and front passenger’s seats separately.

Airflow mode:

In “” mode, use outside air (“” indicator OFF) to reduce window fogging.

* If equipped

FEATURES & OPERATIONS

Driving mode select switches (if equipped)

Normal mode:


Suitable for normal driving.

ECO mode:

Helps achieve lower fuel consumption during trips that involve frequent accelerating and braking.


SPORT mode:

Use when a higher level of response is desired, such as when driving in mountainous regions.

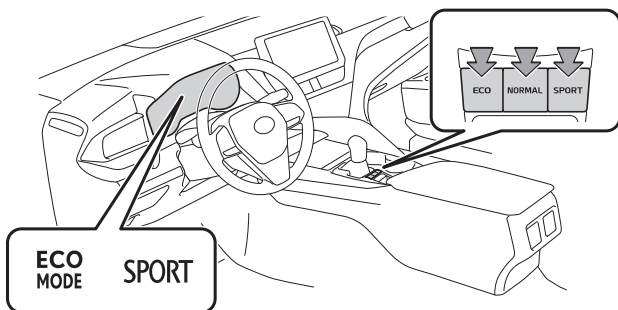

Refer to the "Owner's Manual" for more details.

EV drive mode (Camry HV only)

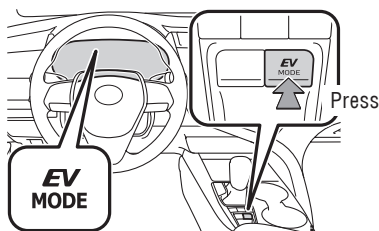

Use EV drive mode when driving short distances to reduce noise early in the morning and late at night in residential areas or to cut emissions when parking in a small garage or indoor car park.

Dynamic Torque Control AWD system (Camry AWD only)

The Dynamic Torque Control AWD system is designed to help to enhance performance and ensure reliable handling and stability.


The system will automatically switch from front-wheel drive to all-wheel drive (AWD) according to the driving conditions such as when cornering, going uphill, starting off or accelerating, and when the road surface is slippery due to snow, rain, etc.

DO NOT DRIVE THE VEHICLE OFF-ROAD.

This is not an AWD vehicle designed for off-road driving, proceed with all due caution if it becomes unavoidable to drive off-road.

Refer to the "Owner's Manual" for limitations and more details.

Vehicle Stability Control (VSC)/ TRAC OFF switch

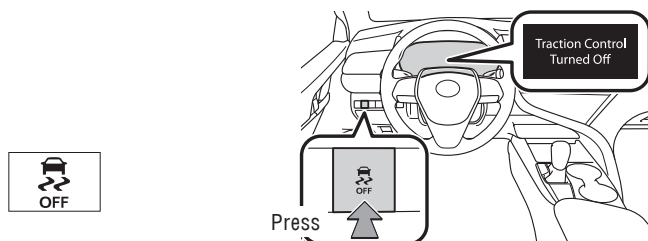


The VSC OFF switch can be used to help free a stuck vehicle in surroundings like mud, dirt or snow. While the vehicle is stopped, press the switch to disable the TRAC system.

To disable both VSC and TRAC systems, press and hold the switch for at least 3 seconds while the vehicle is stopped.

Refer to the "Owner's Manual" for limitations and more details.

Rear view monitor system

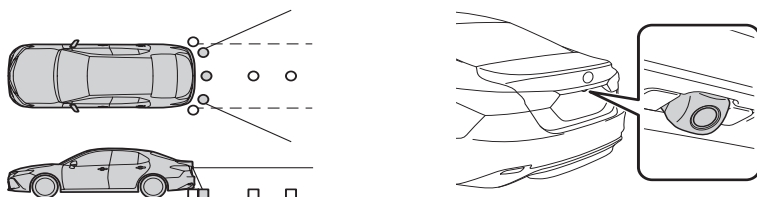


The rear view monitor system displays an image of the view from the bumper of the rear area of the vehicle. The camera for the rear view monitor system is located above the license plate.

To adjust the image on the rear view monitor screen, press the "MENU" button and select "Display." Select "Camera" to adjust the screen contrast and brightness.

Refer to the "Navigation and Multimedia System Owner's Manual" for limitations and more details on this system.

FEATURES & OPERATIONS

Blind Spot Monitor (BSM) and Rear Cross Traffic Alert (RCTA) (if equipped)

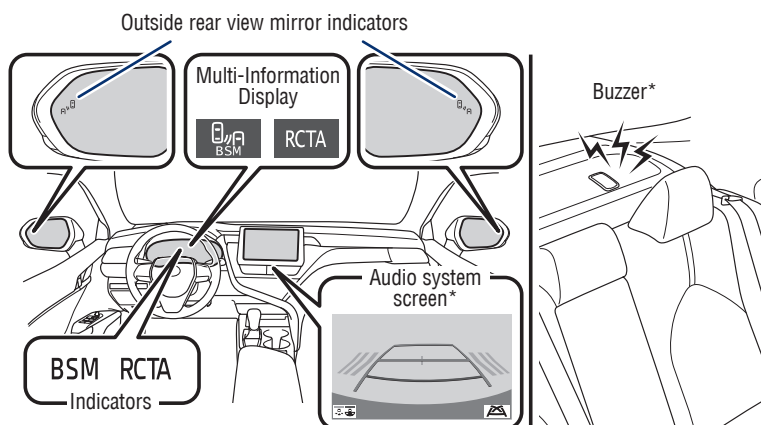

* RCTA only

BLIND SPOT MONITOR (BSM)

The system is designed to use radar sensors to detect vehicles traveling in the Camry's blind spot. If a vehicle is detected, the driver will be alerted via the outside rear view mirror indicator on the detected side.

REAR CROSS TRAFFIC ALERT (RCTA)

While in reverse, when a vehicle approaching from the right or left rear of the Camry is detected, the outside rear view mirror indicators will flash. Also, the RCTA icon for the detected side will be displayed on the audio system screen, and the RCTA buzzer will sound.

SYSTEM ON/OFF

- (1) Press “<>” or “ ” switches and select “ (4.2-in display)” or “ (7-in display)” from the Multi-Information Display (MID).
- (2) Press “<>” or “ ” switches and select “ ” or “ ” and then press “ ” to turn the system on or off.
- (3) Press “ ” to go back to the menu.


Refer to the “Owner’s Manual” for limitations and more details on this system before attempting to use it.

Rear Camera Detection Function (RCD) (if equipped)


The rear camera detection (RCD) function is designed to detect pedestrians in the detection area behind the vehicle when the vehicle is backing up. If a pedestrian is detected, a buzzer will sound and an icon will be displayed on the audio system screen to inform the driver of the pedestrian.

DISPLAY ON AUDIO SYSTEM SCREEN

Toyota parking assist monitor

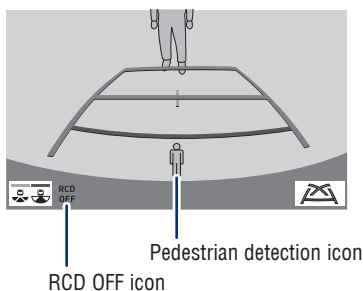

Panoramic view monitor

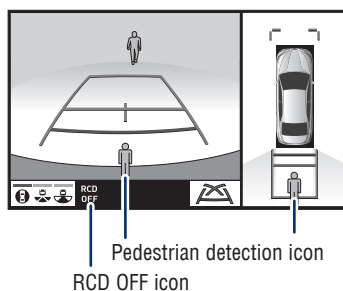

Pedestrian detection icon: The icon will be displayed automatically when a pedestrian is detected.


RCD OFF icon: The RCD OFF icon will illuminate when the RCD function is disabled.

SYSTEM ON/OFF


- (1) Press “<>” or “◇” switches and select “ (4.2-in display)” or “ (7-in display)” from the Multi-Information Display (MID).
- (2) Press “<>” or “◇” switches and select “**RCD**” and then press “” to turn the system on or off.
- (3) Press “↩” to go back to the menu.

Refer to the “Owner’s Manual” for limitations and more details on this system before attempting to use it.


Panoramic View Monitor (PVM) (if equipped)

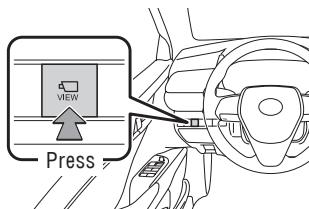

Moving view

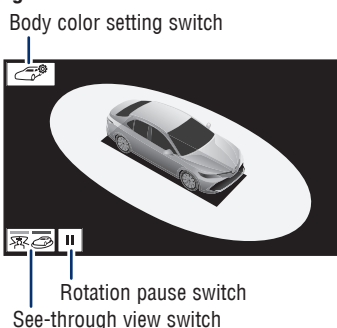

See-through view

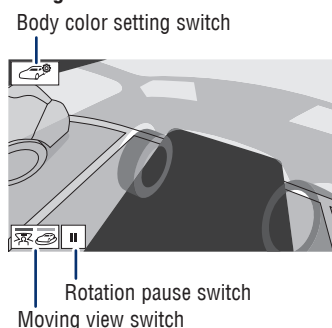

Panoramic View Monitor (PVM) is designed to assist the driver in viewing the surroundings, when operating at low speeds or parking, by combining front, side and rear cameras and displaying an overhead image on the Audio Multimedia system screen.

To view the moving view/see-through view screen, press the camera switch when the shift lever is in the “P” position. Press the camera switch again to display the previous display screen, such as the navigation screen.


Refer to the “Navigation and Multimedia System Owner’s Manual” for limitations and more details on this system before attempting to use it.

Front and Rear Parking Assist with Automatic Braking (PA w/AB) (if equipped)


Front and Rear Parking Assist with Automatic Braking consists of the following functions that operate when driving at a low speed or backing up, such as when parking. When the system determines that the possibility of a collision with a detected object is high, a warning operates to urge the driver to take evasive action. If the system determines that the possibility of a collision with a detected object is extremely high, the brakes are automatically applied to help avoid the collision or help reduce the impact of the collision.

FUNCTIONALITY


For static objects

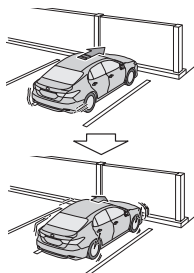

When traveling at a low speed and the brake pedal is not depressed, or is depressed late.

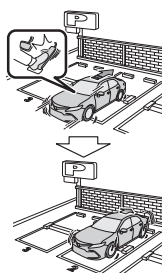

When the accelerator pedal is depressed excessively.

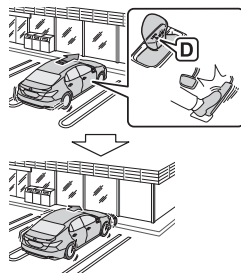

When the vehicle moves in the unintended direction due to the wrong shift position being selected.

For rear-crossing vehicles



When reversing, a vehicle is approaching and the brake pedal is not depressed, or is depressed late.

SYSTEM ON/OFF

- (1) Press “<>” or “⬢” switches and select “ (4.2-in display)” or “ (7-in display)” from the Multi-Information Display (MID).
- (2) Press “<>” or “⬢” switches and select “ PKSB” and then press “” to turn the system on or off.
- (3) Press “↩” to go back to the menu.

Refer to the section “Parking Support Brake function” (static objects and rear-crossing vehicles) in the “Owner’s Manual” for limitations and more details.

Quick overview-Toyota Safety Sense™ 2.5+

Toyota Safety Sense™ 2.5+ (TSS 2.5+) is a set of active safety technologies designed to help mitigate or prevent collisions across a wide range of traffic situations, in certain conditions. TSS 2.5+ is designed to help support the driver's awareness, decision making and vehicle operation contributing to a safe driving experience.

Refer to the “Owner’s Manual” for operation, setting adjustments, limitations and more details to understand these functions and complete safety precautions.

For more information, please go to www.toyota.com/safety-sense.



Pre-Collision System with Pedestrian Detection (PCS w/PD)

PCS w/PD is designed to provide alert, mitigation, and/or avoidance support in certain conditions, when the system detects a potential collision with a preceding vehicle is likely to occur.

The advanced grille-mounted radar system is designed to work with the forward-facing camera to help recognize a preceding vehicle, pedestrian or bicyclist, and provide an alert, mitigation and/or avoidance support in certain conditions.



Lane Tracing Assist (LTA) System

While driving on a road with clear white (yellow) lane lines, the LTA system warns the driver if the vehicle may deviate from the current lane or course, and also can slightly operate the steering wheel to help avoid deviation from the lane or course. Also, while the dynamic radar cruise control with full-speed range is operating, this system will operate the steering wheel to help maintain the vehicle's lane position.

Functions included in the LTA system are Lane Departure Alert with Steering Assist, Vehicle Sway Warning and Lane Centering.



Dynamic Radar Cruise Control (DRCC) or Full-Speed Range DRCC

DRCC is designed to help maintain a pre-set distance to a preceding vehicle when the preceding vehicle is traveling at a lower speed. Full-Speed Range DRCC is the same as regular DRCC except the available speed range is extended down to 0 MPH.



Automatic High Beams (AHB)

AHB is designed to detect the headlights of oncoming vehicles and the taillights of preceding vehicles and switch between high beams and low beams as appropriate.




Road Sign Assist (RSA)


RSA is designed to recognize specific road signs using the forward-facing camera to provide information to the driver via the display.

Sensors

TSS 2.5+ combines a forward-facing camera mounted in front of the inside rear view mirror and a grille-mounted radar mounted in the front grille. These sensors support the driving assist systems.

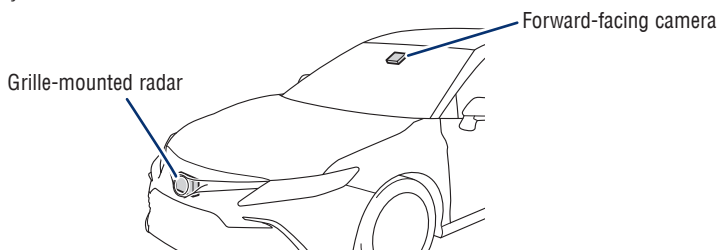

Pre-Collision System with Pedestrian Detection (PCS w/PD)

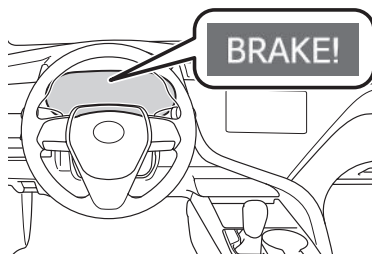

The Pre-Collision System with Pedestrian Detection (PCS w/PD) is designed to help detect a vehicle, bicyclist or pedestrian in certain situations. Using both a camera and radar, PCS w/ PD can provide an audio/visual alert to warn you of a possible collision under certain circumstances. If you don't react, the system is designed to automatically brake.

As there is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. This system will not prevent collisions or lessen collision damage or injury in every situation. Do not use PCS instead of normal braking operations under any circumstances. Do not attempt to test the operation of the Pre-Collision System yourself, as the system may not operate or engage, possibly leading to an accident. In some situations, such as when driving in inclement weather such as heavy rain, fog, snow or a sandstorm or while driving on a curve and for a few seconds after driving on a curve, a vehicle, pedestrian or bicyclist may not be detected by the radar and camera sensors, preventing the system from operating or engaging properly.

See www.toyota.com/safety-sense for more information.

Refer to the Toyota "Owner's Manual" for a list of additional situations in which the system operation may be limited.

PRE-COLLISION SYSTEM (CONTINUED)

Pre-Collision Warning

When the system determines that the possibility of a frontal collision is high, a buzzer will sound and a warning message will be displayed on the Multi-Information Display (MID) to urge the driver to take evasive action.

Pre-Collision Brake Assist

If the driver notices the hazard and brakes, the system may provide additional braking force using Brake Assist. This system may prime the brakes and may apply greater braking force in relation to how strongly the brake pedal is depressed.


Pre-Collision Braking

If the driver does not brake in a set time and the system determines that the possibility of a frontal collision with a preceding vehicle is extremely high, the system may automatically apply the brakes, reducing speed in order to help the driver reduce the impact and in certain cases avoid the collision.

Refer to the Toyota "Owner's Manual" for additional information on PCS w/PD operation, settings adjustments, limitations, and precautions before attempting to use it.

PCS PEDESTRIAN DETECTION


Under certain conditions, the PCS included with the TSS 2.5+ package may also help to detect a pedestrian or bicyclist in front of your vehicle using the forward-facing camera and front grille-mounted radar. The forward-facing camera of PCS detects a potential pedestrian or bicyclist based on size, profile, and motion of the detected pedestrian or bicyclist. However, a pedestrian or bicyclist may not be detected depending on the conditions, including the surrounding brightness and the motion, posture, size, and angle of the potential detected pedestrian or bicyclist, preventing the system from operating or engaging.

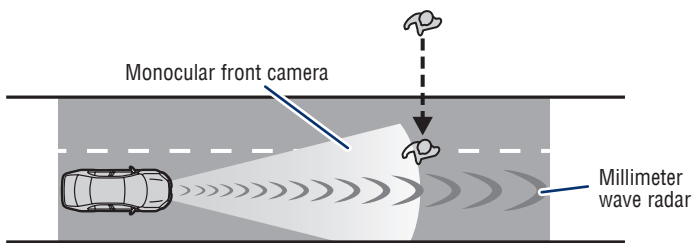

As part of the Pre-Collision System, this function is also designed to first provide an alert and then automatic braking if needed.

Refer to the Toyota "Owner's Manual" for additional limitations and information.


CHANGING PCS ALERT TIMING

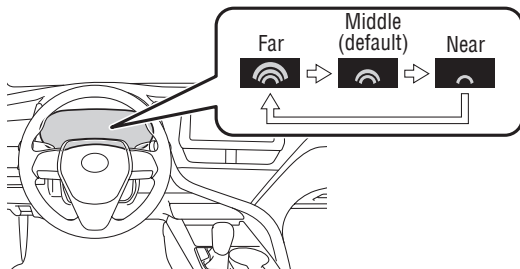

- (1) Press “<>” or “⬢” switches and select “ (4.2-in display)” or “ (7-in display)” from the Multi-Information Display (MID).
- (2) Press “<>” or “⬢” switches and select “ PCS” and then press and hold “OK.” The setting screen is displayed.
- (3) Press “<>” or “⬢” switches and select “Sensitivity” and then press “OK” to change the warning timing. Each time it is pressed, the PCS warning timing changes as shown above.
- (4) Press “↩” to go back to the menu.

Note: PCS is enabled each time the vehicle is turned on. The system can be disabled/enabled and the alert timing of the system can be changed. (Alert timing only, brake operation remains the same.)

DISABLING PRE-COLLISION SYSTEM (PCS)

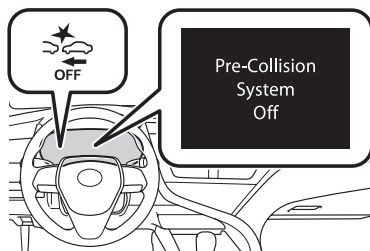


- (1) Press “<>” or “⬢” switches and select “ (4.2-in display)” or “ (7-in display)” from the Multi-Information Display (MID).
- (2) Press “<>” or “⬢” switches and select “ PCS” and then press “OK” to turn PCS on or off.
- (3) Press “↩” to go back to the menu.

Note: The system is enabled each time the vehicle is turned on.

Refer to the Toyota “Owner’s Manual” for additional information on PCS w/PD operation, settings adjustments, limitations, and precautions before attempting to use it.

Lane Tracing Assist (LTA) System

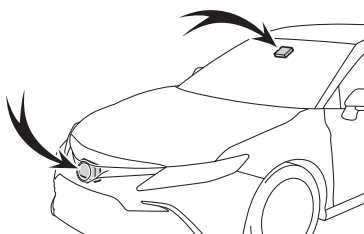

While driving on a road with clear white (yellow) lane lines, the LTA system warns the driver if the vehicle may deviate from the current lane or course, and also can slightly operate the steering wheel to help avoid deviation from the lane or course. Also, while the dynamic radar cruise control is operating, this system will operate the steering wheel to help maintain the vehicle's lane position. The LTA system recognizes white (yellow) lane lines or a course using the front camera. Additionally, it detects preceding vehicles using the front camera and radar.


Functions included in the LTA system are Lane Departure Alert with Steering Assist, Vehicle Sway Warning and Lane Centering.

Refer to the Toyota Owner's Manual for additional information on the LTA system operation, settings, adjustments, limitations, and precautions before attempting to use it.

TURNING THE LTA SYSTEM ON/OFF


Press and hold the LTA switch to turn the LTA system OFF.

Press the LTA switch again to turn it on.

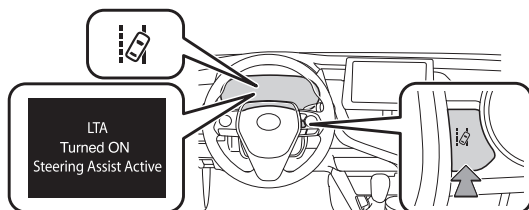

Note: Operation of the LTA system and setting adjustments continues in the same condition regardless of Ignition cycle until changed by the driver or the system is reset. The LTA indicator is illuminated when the LTA system is on.

Press and hold the LTA switch to deactivate Lane Departure Alert with Steering Assist.

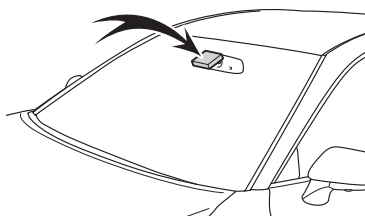


By detecting visible white/yellow lane markings or the road's edge at speeds above 32 mph, Lane Departure Alert with Steering Assist is designed to issue an audio/visual alert if an inadvertent lane departure is detected. If the driver does not take corrective action, the Steering Assist function is designed to provide gentle corrective steering.*

* See www.toyota.com/safety-sense for more information.

LTA function display

Steering assist indicator

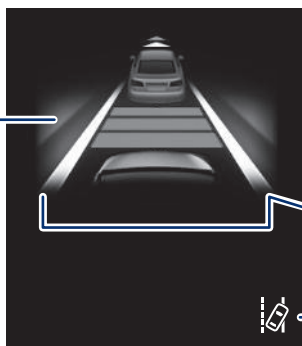

Lane indicators

LTA indicator



The LTA indicator is illuminated when Lane Departure Alert is active. The LTA indicator and lane markers flash orange when operating.

LANE DEPARTURE ALERT WITH STEERING ASSIST (CONTINUED)



(1)



(2)

The LTA system  is displayed when the Multi-Information Display (MID) is switched to the driving support system information display.

- (1) The system displays solid white lines on the Lane Departure Alert indicator when visible lane markers or the road edge are detected. A lane indicator flashes orange to alert the driver when the vehicle deviates from its lane.
- (2) The system displays outlines on the Lane Departure Alert indicator when lane markers or the road edge are not detected or the function is temporarily canceled.

Note: When operation conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function is automatically restored. For example, Lane Departure Alert may not function on the side(s) where white/yellow lines are not detectable.

ADJUSTING LANE DEPARTURE ALERT SENSITIVITY

The driver can adjust the sensitivity of the Lane Departure Alert function from the Multi-Information Display (MID) customization screen.

High - Is designed to warn approximately before the front tire crosses the lane marker.

Standard - Is designed to warn approximately when the front tire crosses the lane marker.

- (1) Press “<>” or “” switches and select “ (4.2-in display)” or “ (7-in display)” from the Multi-Information Display (MID).
- (2) Press “<>” or “” switches and select “ LTA” and then press and hold “.
 The setting screen is displayed.
 - (3) Press “<>” or “” switches and select “Sensitivity” and then press “” to change the desired setting.
- (4) Press “” to go back to the menu.

SWAY WARNING SYSTEM



Continuous lane deviations from swaying.



Gentle swaying from driver's inattentiveness.



Acute steering wheel operation after the number of operations decrease due to driver's inattentiveness.

Sway warning is a function of the LTA system and is designed to detect swaying based on the vehicle location in the lane and the driver's steering wheel operation. To help prevent swaying, the system alerts the driver using a buzzer sound and a warning display on the MID.

DISABLING SWAY WARNING SYSTEM

- (1) Press “<>” or “◇” switches and select “ (4.2-in display)” or “ (7-in display)” from the Multi-Information Display (MID).
- (2) Press “<>” or “◇” switches and select “ LTA” and then press and hold “.” The setting screen is displayed.
- (3) Press “<>” or “◇” switches and select “Sway warning” and then press “” to change the desired setting.
- (4) Press “↶” to go back to the menu.

Note: Operation of the LTA system and setting adjustments continues in the same condition regardless of Ignition cycle until changed by the driver or the system is reset.

ADJUSTING SWAY ALERT SENSITIVITY

- (1) Press “<>” or “◇” switches and select “ (4.2-in display)” or “ (7-in display)” from the Multi-Information Display (MID).
- (2) Press “<>” or “◇” switches and select “ LTA” and then press and hold “.” The setting screen is displayed.
- (3) Press “<>” or “◇” switches and select “Sway sensitivity” and then press “” to change the desired setting.
- (4) Press “↶” to go back to the menu.

Refer to the Toyota “Owner’s Manual” for additional information on the LTA system operation, settings adjustments, limitations, and precautions before attempting to use it.


TOYOTA SAFETY SENSE™

LANE CENTERING


Lane Centering is a function of the LTA system. Turning the LTA system off will deactivate Lane Centering.

Press and hold the LTA switch to turn the LTA system OFF.

Press the LTA switch again to turn it on and to activate/deactivate Lane Centering.

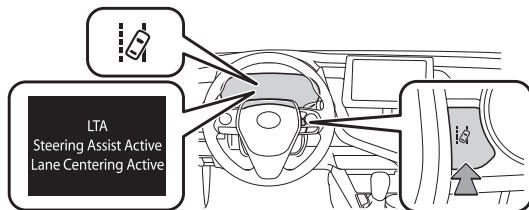


LTA system display

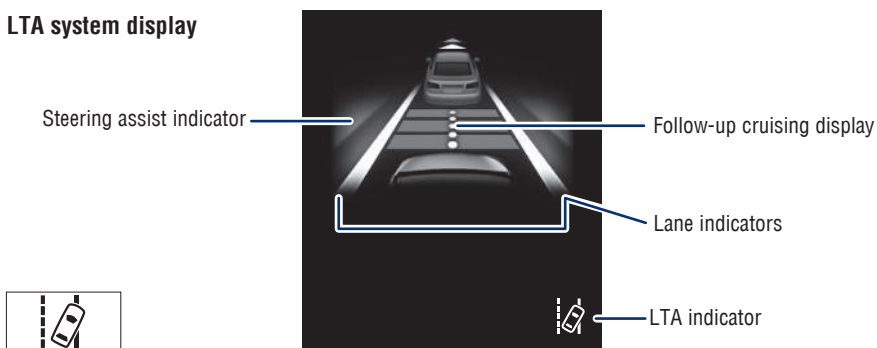

The lane centering function is linked with Dynamic Radar Cruise Control (DRCC) or Full-Speed Range DRCC and provides the required assistance by operating the steering wheel to help keep the vehicle in its current lane.

When Dynamic Radar Cruise Control (DRCC) or Full-Speed Range DRCC is not operating, the lane centering function does not operate.

See www.toyota.com/safety-sense for more information.



DISABLING LANE CENTERING FUNCTION

- (1) Press “<>” or “↕” switches and select “ (4.2-in display)” or “ (7-in display)” from the Multi-Information Display (MID).
- (2) Press “<>” or “↕” switches and select “ LTA” and then press and hold “.
- (3) Press “<>” or “↕” switches and select “Lane center” and then press “” to change the desired setting.
- (4) Press “↩” to go back to the menu.

Note: Operation of the LTA system and setting adjustments continues in the same condition regardless of ignition cycle until changed by the driver or the system is reset.

Refer to the Toyota “Owner’s Manual” for additional information on the LTA system operation, settings adjustments, limitations, and precautions before attempting to use it.


Dynamic Radar Cruise Control (DRCC) or Full-Speed Range DRCC

Intended for highway use, Dynamic Radar Cruise Control (DRCC) lets you drive at a preset speed. DRCC is designed to function at speeds of 25-110 mph and uses vehicle-to-vehicle distance control, helping maintain a preset distance from the vehicle ahead of you.*

Full-Speed Range DRCC is designed to function between 0-110 mph.

* Not available on all models. See www.toyota.com/safety-sense for model applicability.


Refer to the Toyota “Owner’s Manual” for a list of additional situations in which the system operation may be limited.

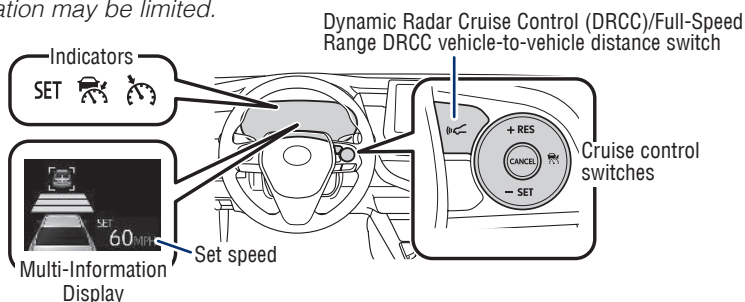

ACTIVATING DRCC




(1)

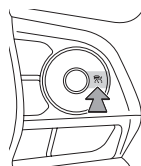


Press the cruise control main switch to turn DRCC on. Press it again to turn it off.

Refer to page 48 for switching to Constant Speed (Cruise) Control Mode.

ADJUSTING SET VEHICLE SPEED

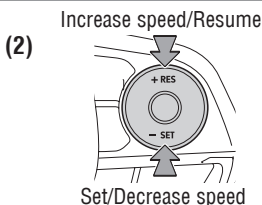

(3)


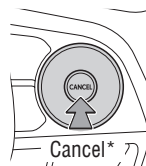


60
MPH

The vehicle will cruise at a set speed, decelerate to maintain a selected distance from a slower preceding vehicle and accelerate back up to the selected speed if the vehicle in front changes lanes or speeds up.

- (1) Press “ ” to turn DRCC system ON. The “Radar Ready” and “ ” indicator will come on.
- (2) Press the “-SET” switch to set the speed. To increase speed by pressing “+RES” or decrease the speed by pressing “-SET”. Press and hold to make a large adjustment or press each time to make fine adjustments (1 mph [1.6 km/h] or 1 km/h [0.6 mph] increments).
- (3) Press “Cancel” to cancel the speed control.

* The speed control may also be canceled by depressing the brake pedal.

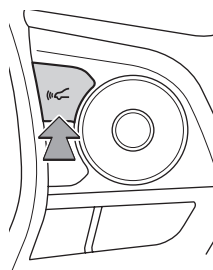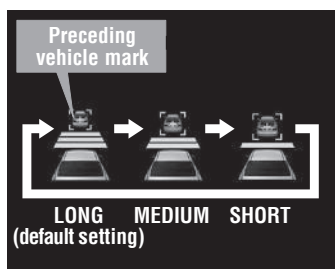


To change the vehicle-to-vehicle distance:

Press the “” switch to cycle through the settings, which will change progressively.

This mode employs a radar sensor to detect the presence of a preceding vehicle up to approximately 328 ft (100 m) ahead, determines the current vehicle-to-vehicle following distance and operates to maintain a preset following distance from the vehicle ahead. These distances vary based on the vehicle speed.

Note: Vehicle-to-vehicle distance will close in when traveling on long downhill slopes.

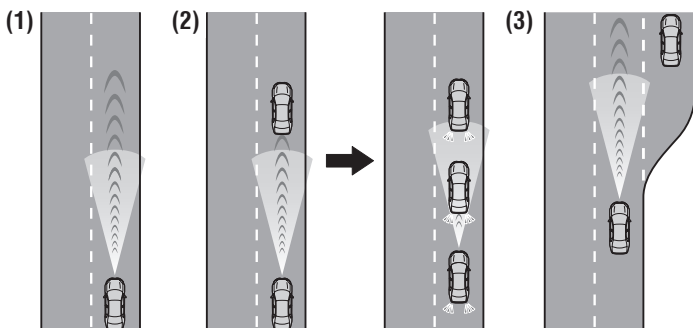

(1) Constant speed cruising when there are no vehicles ahead

The vehicle travels at the speed set by the driver. The desired vehicle-to-vehicle distance can also be set by operating the vehicle-to-vehicle distance control switch.

(2) Deceleration cruising and follow-up cruising when a preceding vehicle driving slower than the set speed appears

When a slower vehicle is detected running ahead of you, the system automatically decelerates your vehicle. When a greater reduction in vehicle speed is necessary, the system may apply the brakes (the brake lights will come on at this time). The system will respond to changes in the speed of the vehicle ahead in order to maintain the vehicle-to-vehicle distance set by the driver. A warning tone warns you when the system cannot decelerate sufficiently to prevent your vehicle from closing in on the vehicle ahead.


ADJUSTING DISTANCE (CONTINUED)

(3) Acceleration when there are no longer any preceding vehicles driving slower than the set speed

The system accelerates until the set speed is reached. The system then returns to constant speed cruising.

Note: When your vehicle is too close to a vehicle ahead, and sufficient automatic deceleration via the cruise control is not possible, the display will flash and the buzzer will sound to alert the driver. An example of this would be if another driver cuts in front of you while you are following a vehicle. Depress the brake pedal to ensure an appropriate vehicle-to-vehicle distance.

SWITCHING TO CONSTANT SPEED (CRUISE) CONTROL MODE

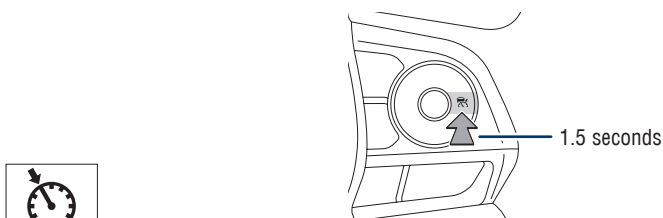

Press and hold the cruise control main switch “” for at least 1.5 seconds to turn on constant speed cruise control. If you are already using DRCC, press the cruise control main switch “” to turn DRCC off before activating constant speed cruise control.

Note: When the vehicle is turned off, it will automatically default to DRCC.

SETTING CONSTANT SPEED (CRUISE) CONTROL




To adjust speed or cancel, see steps (2) and (3) of ADJUSTING SET VEHICLE SPEED on page 46.


Refer to the Toyota “Owner’s Manual” for additional information on DRCC operation, settings adjustments, limitations, and precautions before attempting to use it.

Automatic High Beams (AHB)

(1)

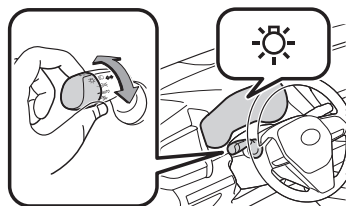

(2)

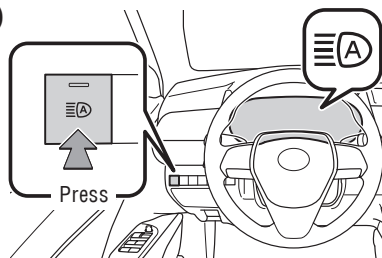

The Automatic High Beams (AHB) safety system is designed to help the driver see more clearly at night. At speeds above 25 mph, AHB can detect the headlights of oncoming vehicles and taillights of preceding vehicles, then automatically toggles between high and low beams accordingly.

See www.toyota.com/safety-sense for more information.

Refer to the Toyota “Owner’s Manual” for additional information on AHB operation, settings adjustments, limitations, and precautions before attempting to use it.

ACTIVATING THE AHB SYSTEM

(1) Turn the headlight switch to the “ ” or “**AUTO**” position.

(2) Press the “ ” switch.

The AHB indicator “ ” will come on when the headlights are on and the headlight switch lever is in the low beam position to indicate the system is active.

Note: Push the lever away from you to manually turn on high beams. Press the AHB switch to turn the AHB system off.

The “ ” indicator will turn off and “ ” or “ ” will turn on. To activate the system again, pull the lever to its original position or press the “ ” switch.

CONDITIONS WHERE AHB WILL TURN ON/OFF AUTOMATICALLY


When all of the following conditions are met, the high beams will be automatically turned on (after approximately 1 second):

- Vehicle speed is approximately 21 mph (34 km/h) or more.
- The area ahead of the vehicle is dark.
- There are no oncoming or preceding vehicles with headlights or taillights turned on.
- There are few streetlights on the road ahead.

If any of the following conditions occur, the high beams will be automatically turned off:

- Vehicle speed drops below approximately 17 mph (27 km/h).
- The area ahead of the vehicle is not dark.
- Oncoming or preceding vehicles have headlights or taillights turned on.
- There are many streetlights on the road ahead.

TEMPORARILY SWITCHING TO THE LOW BEAMS

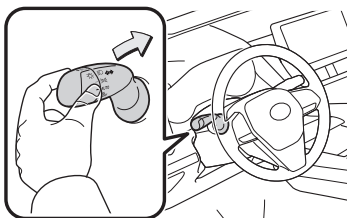

Pull the lever toward you and then return it to its original position to switch to the low beams temporarily.

The high beams are on while the lever is pulled toward you, however, after the lever is returned to its original position, the low beams remain on for a certain amount of time. Afterwards, the Automatic High Beams will be activated again.

NOTE: It is recommended to switch to the low beams when the high beams may cause problems or distress to other drivers or pedestrians nearby.

Refer to the Toyota "Owner's Manual" for additional information on AHB operation, settings adjustments, limitations, and precautions before attempting to use it.


Road Sign Assist (RSA)

Using the forward-facing camera and navigation system (if equipped), Road Sign Assist (RSA) is designed to detect certain road signs and display them on the instrument cluster.


All vehicle actions must be driver-initiated and are not automated.

Refer to the Toyota "Owner's Manual" for additional information and limitations.

RSA DISPLAY

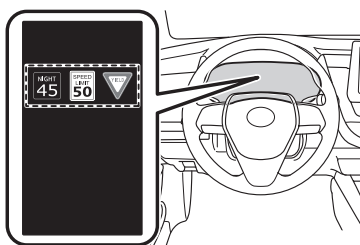

When the driving assist system information is selected, a maximum of 3 signs can be displayed.

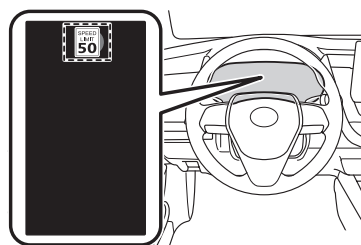

When a tab other than the driving assist system information is selected, the following types of road signs will be displayed.

- Speed limit sign
- Do Not Enter sign (when notification is necessary)

SUPPORTED TYPES OF ROAD SIGNS



Speed limit



Stop



Do Not Enter



Yield



SYSTEM ON/OFF

- (1) Press “<>” or “⬆” switches and select “ (4.2-in display)” or “ (7-in display)” from the Multi-Information Display (MID).
- (2) Press “<>” or “⬆” switches and select “ RSA” and then press “” to turn RSA on or off.
- (3) Press “⬅” to go back to the menu.

Note: If the vehicle was last turned off while a speed limit sign was displayed on the Multi-Information Display (MID), the same sign displays again when the vehicle is turned back ON.

Refer to the Toyota “Owner’s Manual” for additional information on RSA operation, settings adjustments, limitations, and precautions before attempting to use it.


Seat belts

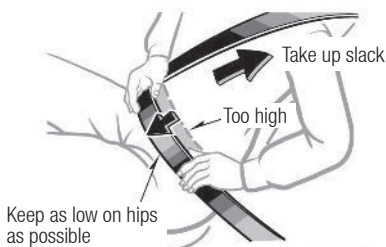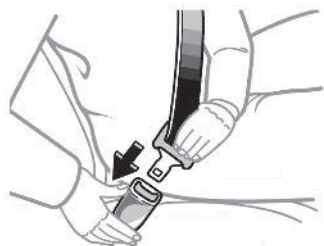

NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic Locking Retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.


To find more information about seat belts, and how to install a child restraint system, refer to the "Owner's Manual".

Seat belts - Shoulder belt anchor

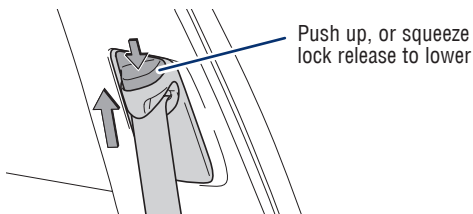


Rear door child safety locks

Rear door

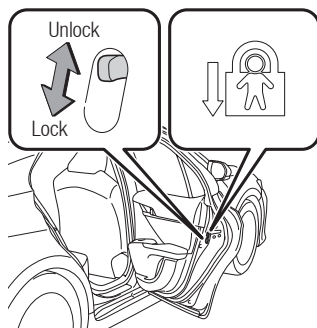

Moving the lever downward will allow the door to be opened only from the outside.

Safety Connect®

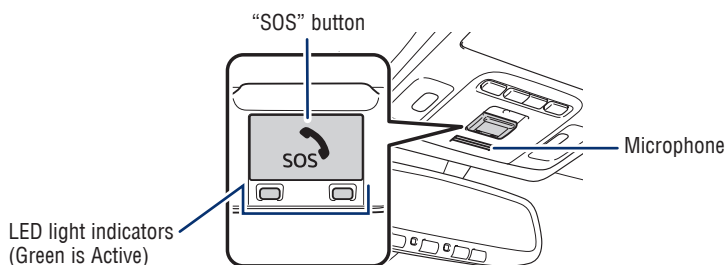

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is staffed with live agents at the Toyota response center, which operates 24 hours per day, 7 days per week.

Services for subscribers include:


- Automatic collision notification
- Stolen vehicle locator
- Emergency assistance ("SOS" button)
- Enhanced roadside assistance

For limitations and additional information, refer to the "Owner's Manual" or visit www.toyota.com/connected-services.


Spare tire & tools

TOOL LOCATION

Camry / Camry Hybrid

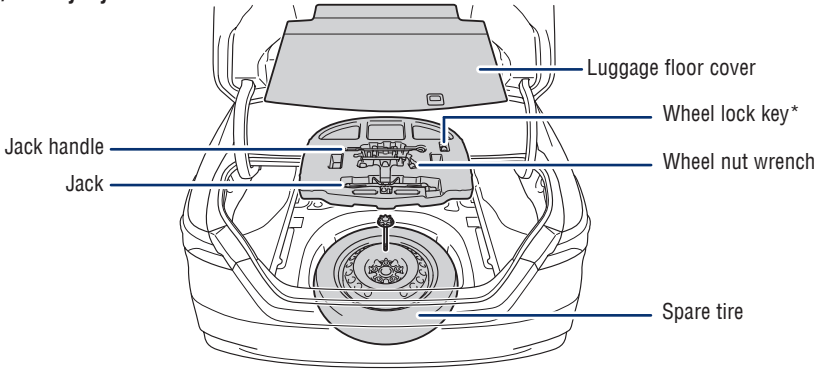

Camry AWD

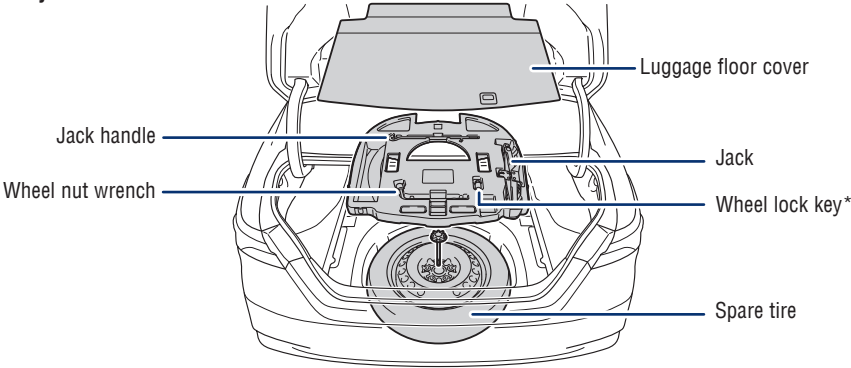


* If equipped.


REMOVING THE SPARE TIRE

- (1) Remove the tool tray.


Camry / Camry HV

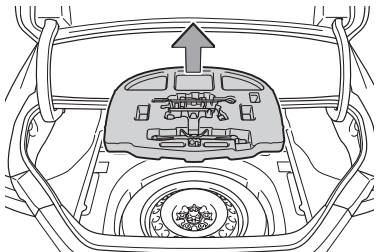

Camry AWD

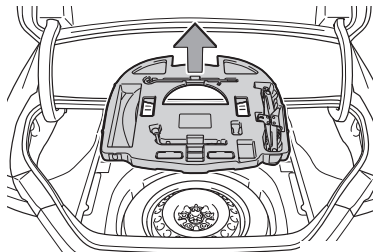


- (2) Loosen the center fastener that secures the spare tire.

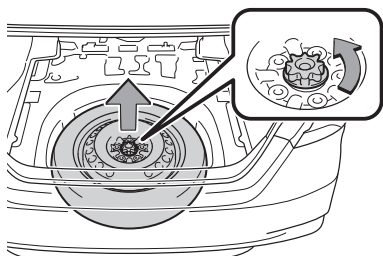

Refer to the "Owner's Manual" for tire changing and jack positioning procedures.

Trunk - Internal release


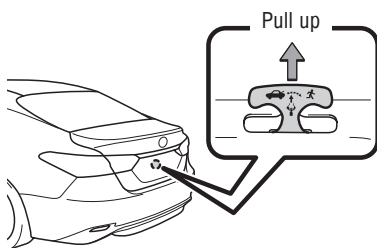


SAFETY & EMERGENCY FEATURES

Tire Pressure Monitoring (warning) System (TPMS)

VEHICLES EQUIPPED 4.2-in DISPLAY

VEHICLES EQUIPPED 7-in DISPLAY

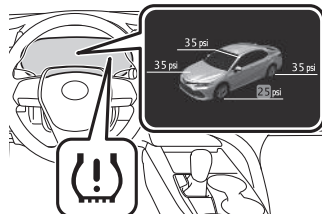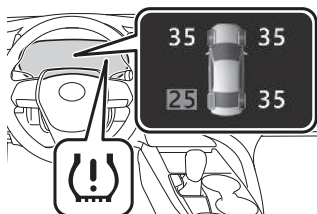

The tire pressure warning system can be selected on “ (4.2-in display)” or “ (7-in display)” of the Multi-Information Display (MID).

System reset initialization

- (1) Press “<>” or “” switches and select “ (4.2-in display)” or “ (7-in display)” from the Multi-Information Display (MID).
- (2) Select “Vehicle Settings” and then press “” (4.2-in display)/“” and then press and hold “” (7-in display.)
- (3) Select “TPWS” and then press “”.
- (4) Select “Set Pressure” then press and hold “” until the warning light blinks three times. Then a message will be displayed on the Multi-Information Display (MID).

The tire pressure detected by the tire pressure warning system can be displayed on the Multi-Information Display (MID).

If the tire pressure indicator flashes for approximately 1 minute and then remains on, take the vehicle to your local Toyota dealer.

Refer to the load label on the door jamb or the “Owner’s Manual” for tire inflation specifications.

NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

Star Safety System™

Your vehicle comes standard with the Star Safety System™, which combines Anti-lock Braking System (ABS), Brake Assist (BA), Electronic Brake-force Distribution (EBD), Smart Stop Technology (SST), Traction Control (TRAC) and Vehicle Stability Control (VSC).

Refer to the “Owner’s Manual” for more details and important information on limitations to these systems.

ANTI-LOCK BRAKE SYSTEM (ABS)

Toyota’s Anti-lock Brake System detects which wheels are locking up and limits wheel lockup by “pulsing” each wheel’s brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

BRAKE ASSIST (BA)

Brake Assist is designed to detect sudden or “panic” braking, and then add braking pressure to help decrease the vehicle’s stopping distance. When there’s only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)

Toyota’s ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

SMART STOP TECHNOLOGY (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

SST doesn’t engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

ENHANCED VEHICLE STABILITY CONTROL (VSC)

Enhanced Vehicle Stability Control provides cooperative control of the ABS, TRAC, VSC and EPS.

Enhanced VSC helps to maintain directional stability when loss of traction occurs during a turn.

SAFETY & EMERGENCY FEATURES

TRACTION CONTROL (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).


Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use Toyota floor mats designed for your specific model.
- Only use one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

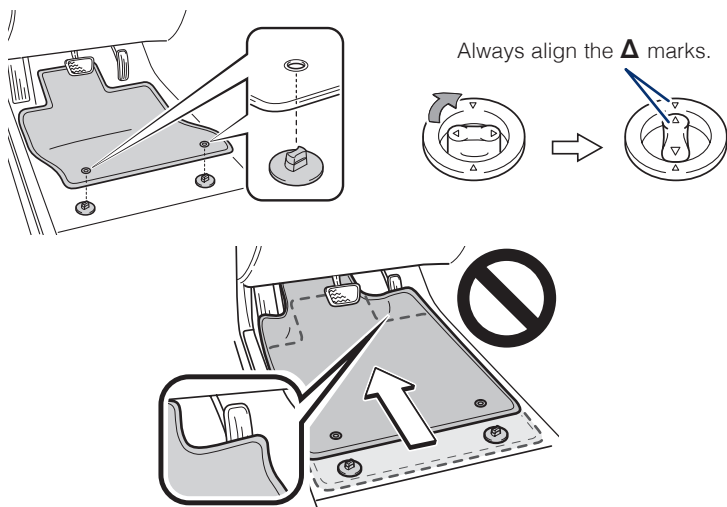

GETTING STARTED WITH TOYOTA AUDIO MULTIMEDIA AND CONNECTED SERVICES

- Bluetooth® Pairing
- Toyota app
- Connected Services
- Apple CarPlay®
- Android Auto™
- Amazon Alexa
- SiriusXM®
- Online Support Tool

Scan QR Code to Download Toyota app

Apple




Android




Do not attempt the process while driving.

Bluetooth® Pairing¹

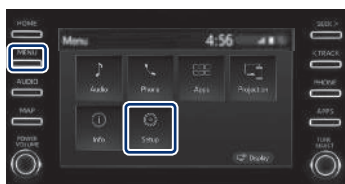


Note:
Do not attempt the Bluetooth® Pairing process while driving.

STEP 1 Press [MENU] on the faceplate, then select “Setup” on display screen.



iPhone Bluetooth Menu

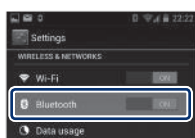

Android Bluetooth Menu


STEP 2 Ensure Bluetooth is turned on for your phone.



STEP 3 Select “Bluetooth,” then select “Add New Device” on display screen.



STEP 4 Select “Phone Name.”

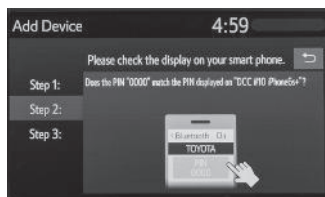

STEP 5 Check the display on your phone. Does the PIN XXXX match the PIN displayed? If it does, select “Pair.”

Bluetooth® Pairing¹ (continued)



STEP 6 “Connecting” displays while phone is forming the connection to the multimedia system.




STEP 7 Enable Notifications (text message). While pairing your phone this message will display: **“You may need to allow message access on your phone.”**

Note: You may also select **“Skip”** on display screen to skip enabling notifications. If skipped, proceed to **STEP 9**.



STEP 8 Turn on “Show Notifications” for iPhone® or “ON” for Android.

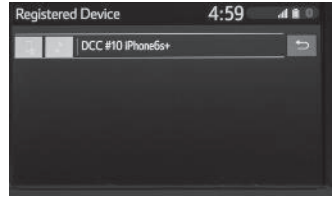

STEP 9 A confirmation will appear once your phone has been paired and connected.

Getting Started with Toyota app



TOYOTA

Toyota app allows access to valuable information about your vehicle and control of capable features equipped with your vehicle.

- Manuals & Warranties
- Schedule Maintenance
- Roadside Assistance
- Vehicle Health Report
- SiriusXM® Radio
- Safety Recalls
- Toyota Financial Services - Vehicle Payment

Remote Connect equipped vehicle functions:

- Lock/Unlock
- Start Vehicle
- Vehicle Finder
- Guest Driver settings

Scan QR Code to Download Toyota app.

Apple



Android



Or

Search “Toyota” at your applicable app store.



If you have a Toyota Owner’s account, use your credentials to “**Sign In**” and get started with Toyota app.

Or

If you do not have a Toyota Owner’s account, “**Register**” now to get started with Toyota app.



Getting Started with Connected Services²


Safety Connect³

- (SOS) EMERGENCY ASSISTANCE BUTTON
- AUTOMATIC COLLISION NOTIFICATION
- ROADSIDE ASSISTANCE
- STOLEN VEHICLE LOCATOR

Remote Connect⁴ (if equipped)


- START VEHICLE
- VEHICLE STATUS ALERTS
- LOCK/UNLOCK VEHICLE DOORS
- VEHICLE FINDER

Authentication is required to enable Remote Connect.

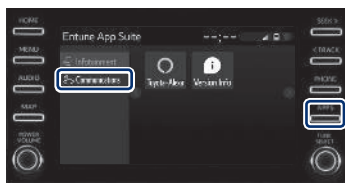


Available on select 2018 and newer vehicles.
(Remote Start/Stop is not available on vehicles equipped with Manual Transmission.)


- STEP 1** Press [APPS] on the faceplate, then select “Communications” on display screen.

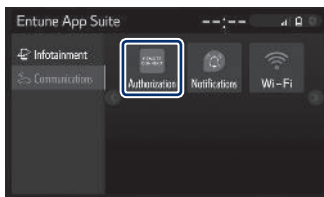


- STEP 2** Select “Authorization” icon.

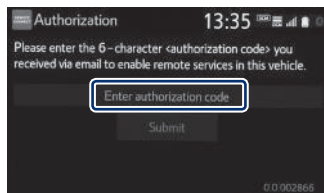

- STEP 3** Enter the 6 character authorization code you received via email to enable remote services.

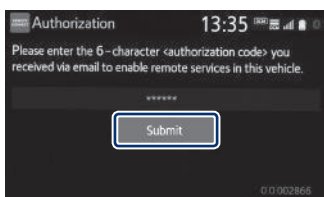

- STEP 4** Select “Submit.”

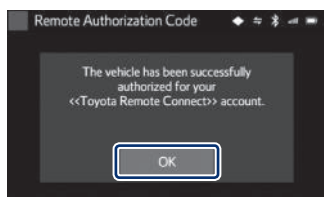


- STEP 5** The vehicle has been successfully authorized for remote services. Select “OK.”

Service Connect⁵ (if equipped)


- VEHICLE HEALTH REPORT
- VEHICLE MAINTENANCE ALERT NOTIFICATION

Available on select 2018 and newer vehicles.

STEP 1 After registering and opting into Service Connect, you will be greeted with a notification of the following language **“Would you like to start Toyota Service Connect Activation?”**

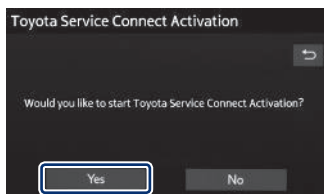


STEP 2 Select **“Yes.”**

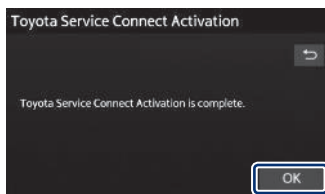

STEP 3 Select **“OK.”**

Destination Assist⁶ (if equipped)

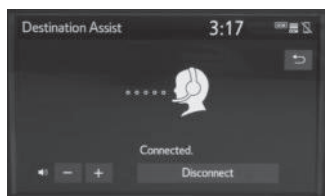

Destination Assist provides drivers 24-hour access to a live agent who can provide directions through the vehicle's factory-installed navigation system to an address or point of interest.


Wi-Fi Connect⁷

Multiple mobile devices

- Connect up to 5 Wi-Fi enabled devices
- Passengers can use smartphones, laptops and tablets

Infotainment

- Browse the internet
- Send and receive email
- Stay connected on social media
- Access favorite apps
- Stream movies

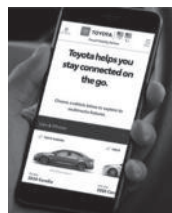


Several factors may affect smartphone and/or system performance *including:*

1. Smartphone operating system software version
2. Smartphone battery power level
3. Poor cellular reception to the smartphone
4. Multiple applications running on a smartphone at the same time
5. Charge/media cable quality
6. Smartphone operating system updates may also affect Toyota app functionality

For additional information, please visit: www.toyota.com/connected-services

Connected Services Online Support

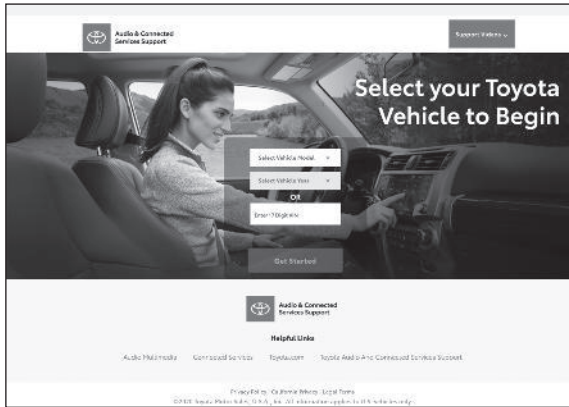

Toyota's online support tool provides intuitive "How-To" instruction and videos. To begin, please visit: <https://toyotaaudioandconnectedservicesupport.com/>

Apple CarPlay® (if equipped)


Setup of Apple CarPlay®



STEP 1 Ensure Siri® is enabled on your phone.



STEP 2 Plug a compatible iPhone® into the USB media port using an Apple® approved cable.

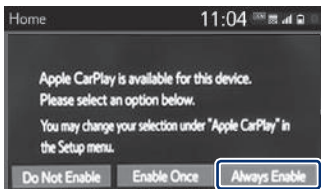


STEP 3 Select "Always Enable" to use CarPlay® each time the vehicle is operated.



STEP 4 Select "Allow" to use CarPlay® while the phone is locked.

Setup of Apple CarPlay® (continued)

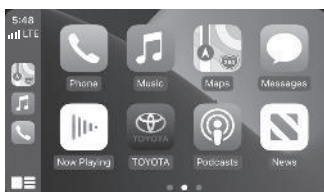

* Screen depiction accurate at time of posting.

STEP 5 Apple CarPlay® is now ready to operate.

Requirements:

Bluetooth® functions will be inoperable while CarPlay® is in use. Wireless CarPlay® is not supported. Features may vary by vehicle model and phone.


To learn more about how your iPhone® works with CarPlay® visit: <https://support.apple.com/en-us/HT205634>

To view a full list of CarPlay® supported apps visit: <https://www.apple.com/ios/carplay/>

Siri® through CarPlay®



Press and hold the voice command talk switch for 2-3 seconds to activate.

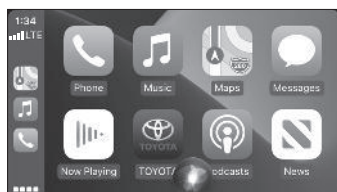

* Screen depiction accurate at time of posting.

Once Siri® is activated you can ask to: make calls, send and receive text messages, listen to music and more.

GETTING STARTED WITH

Android Auto™ (if equipped)

Setup of Android Auto™




STEP 1 With Android 9 or below, the Android Auto™ app download is required. With Android 10, Android Auto™ is built in and the app is NOT required.



STEP 2 Open Android Auto™ app and tap get started.




STEP 3 Ensure Android Auto™ is enabled on the phone.

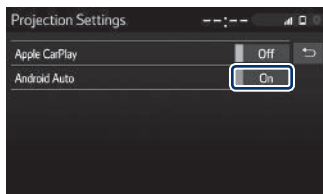

STEP 4 In the Projection Settings screen select Android Auto™ to on.




STEP 5 Plug a compatible Android™ smartphone into the USB media port using an Android approved cable.

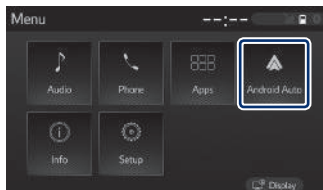

STEP 6 Press menu button and then select the Android Auto™ icon.

Setup of Android Auto™ (continued)

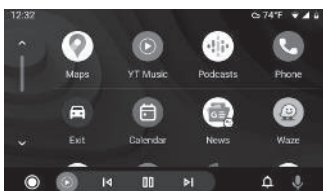

* Screen depiction accurate at time of posting.

STEP 7 Android Auto™ is now ready to operate.

Requirements:


Bluetooth® functions will be inoperable while Android Auto™ is in use. Wireless Android Auto™ is not supported. Features may vary by vehicle model and phone.

To learn more about how to use Android Auto™ visit: <https://www.android.com/auto>

Google Assistant through Android Auto™



Press and hold the voice command talk switch for 2-3 seconds to activate.

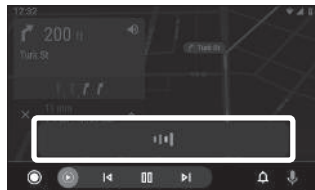

* Screen depiction accurate at time of posting.

Once Google Assistant is activated, you can ask to: make calls, send and receive text messages, listen to music and more.

GETTING STARTED WITH

Amazon Alexa (if equipped)

Toyota + Alexa Setup



STEP 1 **Toyota app** and **Toyota+Alexa** apps are available to download at your app store.



STEP 2 Once **Toyota+Alexa** has successfully installed, open the app to complete the setup. Tap **Get started**.



iPhone users



STEP 3 Depending on your phone and application settings, Toyota+Alexa may automatically sign you in. Otherwise, **Sign In** or **Create a new Amazon account**.



STEP 4 Tap **Allow** for Toyota+Alexa to access Alexa Voice Services and Alexa Account Connection. Allow permissions.



Android users



STEP 3 Depending on your phone and application settings, Toyota+Alexa may automatically sign you in. Otherwise, **Sign In** or **Create a new Amazon account**.



STEP 4 Tap **Allow** for Toyota+Alexa to access Alexa Voice Services and Alexa Account Connection. Tap **Enable Permissions**.

Toyota + Alexa Setup



STEP 5 To use the Toyota+Alexa app, your mobile device must be paired to the vehicle via *Bluetooth®*.



STEP 6 To launch Toyota+Alexa, press **Apps** and select **Toyota+Alexa**. Toyota+Alexa is now ready. Just say “Alexa” and wait for the tone, then speak your command.

Note: Ensure the Toyota + Alexa app is open on the paired phone.

SiriusXM® 8 (If equipped)


SiriusXM® Audio



Toyota vehicles equipped with SiriusXM® come with a 3-month All Access trial subscription. Also enjoy SiriusXM® when you're not in your vehicle by linking the vehicle account with the SiriusXM® app.



* Screen depiction accurate at time of posting.

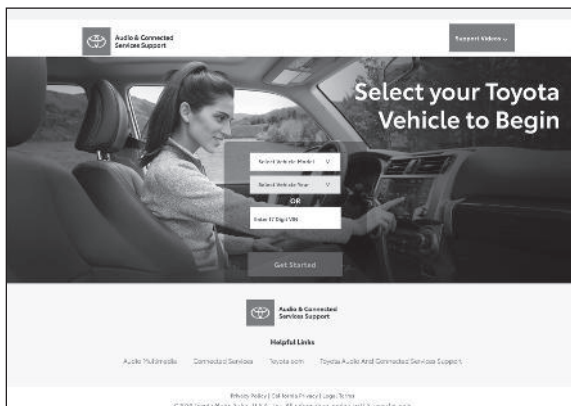

Toyota's online support tool provides intuitive "How-To" instruction and videos.

To begin, please visit: <https://toyotaaudioandconnectedservicesupport.com/>

Privacy & Protection

To learn about Toyota's Connected Services data collection, use, sharing and retention, visit: www.toyota.com/privacyvts/.

- ¹ The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage and carrier.
- ² Visit [Toyota.com/connected-services](https://www.toyota.com/connected-services) or see your local Toyota Dealer for additional details.
- ³ Safety Connect depends on an operative telematics device, a cellular connection, GPS signal strength and other factors outside of Toyota's control, all of which can limit system functionality or availability, including access to response center and emergency support. Stolen vehicle police report required to use Stolen Vehicle Locator. Some features may require the Toyota app. Registration required. Subscription required after trial. Service subject to change at any time without notice. Terms of Use apply. Data charges may apply. Service may vary by vehicle and region. See usage precautions and service limitations in Owner's Manual and [Toyota.com/connected-services/](https://www.toyota.com/connected-services/) for additional details.
To learn about Toyota's data collection, use, sharing and retention practices, please visit <https://www.toyota.com/privacyvts/>.
- ⁴ Toyota - Remote Connect
Use only if aware of circumstances surrounding vehicle and it is legal and safe to do so (e.g., do not remotely start engine if vehicle is in an enclosed space or vehicle is occupied by a child). Toyota Remote Connect depends on an operative telematics device, a cellular connection, GPS signal strength and other factors outside of Toyota's control, which can limit system functionality and availability. Service may vary by vehicle and region. Registration and Toyota app download required. Subscription required after trial. Terms of Use apply. Data charges may apply. Remote start/stop not available on manual transmission-equipped vehicles. Services subject to change at any time without notice. See usage precautions and service limitations in Toyota Owner's Manual and <https://www.toyota.com/connected-services> for additional details.
To learn about Toyota's data collection, use, sharing and retention practices, please visit <https://www.toyota.com/privacyvts/>.
- ⁵ Service Connect information provided is based on the last time data was collected from the vehicle and is not real time data. Service Connect depends on an operative telematics device, a cellular connection, GPS signal strength and other factors outside of Toyota's control, which can limit functionality or availability. Service may vary by vehicle and region. Registration required. Subscription required after trial. Service subject to change at any time without notice. Terms of Use apply. Data charges may apply. See usage precautions and service limitations in Owner's Manual and [Toyota.com/connected-services](https://www.toyota.com/connected-services) for additional details.
To learn about Toyota's data collection, use, sharing and retention practices, please visit <https://www.toyota.com/privacyvts/>.
- ⁶ Destination Assist depends on an operative telematics device, a cellular connection, navigation map data and GPS signal strength and other factors outside of Toyota's control, which can limit system ability functionality or availability. Use common sense when relying on this information. Service may vary by vehicle and region. Registration required. Subscription required after trial. Services subject to change at any time without notice. Terms of Use apply. Data charges may apply. See Owner's Manual and [Toyota.com/connected-services](https://www.toyota.com/connected-services) for additional limitations and details.
To learn about Toyota's data collection, use, sharing and retention practices, please visit <https://www.toyota.com/privacyvts/>.
- ⁷ Wi-Fi Connect is available on select 2018 and newer Toyota vehicles.
Visit [Toyota.com/connectedservices](https://www.toyota.com/connectedservices) for vehicle availability.
- ⁸ SiriusXM® audio services require a subscription sold separately by Sirius XM Radio Inc. To cancel, you must call SiriusXM at 1-866-635-2349. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com.
All fees and programming subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. SiriusXM and all related marks and logos are trademarks of Sirius XM Radio Inc.



TOYOTA

Quick Reference Guide 2023



00505QRG23CAM



Printed in U.S.A. 7/22
21-MKG-16274

toyota.com