

R680EA-IM-Z



Industrial Motherboard

Copyright © 2024 ASUSTeK COMPUTER INC. All Rights Reserved.

No part of this manual, including the products and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of ASUSTeK COMPUTER INC. ("ASUS").

Product warranty or service will not be extended if: (1) the product is repaired, modified or altered, unless such repair, modification or alteration is authorized in writing by ASUS; or (2) the serial number of the product is defaced or missing.

ASUS PROVIDES THIS MANUAL "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL ASUS, ITS DIRECTORS, OFFICERS, EMPLOYEES OR AGENTS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFITS, LOSS OF BUSINESS, LOSS OF USE OR DATA, INTERRUPTION OF BUSINESS AND THE LIKE), EVEN IF ASUS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES ARISING FROM ANY DEFECT OR ERROR IN THIS MANUAL OR PRODUCT.

SPECIFICATIONS AND INFORMATION CONTAINED IN THIS MANUAL ARE FURNISHED FOR INFORMATIONAL USE ONLY, AND ARE SUBJECT TO CHANGE AT ANY TIME WITHOUT NOTICE, AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY ASUS. ASUS ASSUMES NO RESPONSIBILITY OR LIABILITY FOR ANY ERRORS OR INACCURACIES THAT MAY APPEAR IN THIS MANUAL, INCLUDING THE PRODUCTS AND SOFTWARE DESCRIBED IN IT.

Products and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

Contents

Chapter 1	Product Overview	1-1
1.1	Package contents	1-1
1.2	Features	1-1
1.3	Specifications	1-2
Chapter 2:	Motherboard information	2-1
2.1	Before you proceed	2-1
2.2	Motherboard layout	2-2
2.3	Central Processing Unit (CPU)	2-4
2.3.1	CPU installation	2-5
2.3.2	CPU heatsink and fan assembly installation	2-7
2.4	System memory	2-9
2.5	Jumpers	2-10
2.6	Connectors	2-17
2.6.1	Rear panel connectors	2-17
2.6.2	Internal connectors	2-19
2.7	Slots	2-28
Chapter 3:	BIOS setup	3-1
3.1	BIOS Setup program	3-1
3.2	Main menu	3-2
3.3	Advanced menu	3-2
3.3.1	Asus Config Lock	3-2
3.3.2	PCH-FW Configuration	3-2
3.3.3	Trusted Computing	3-3
3.3.4	CPU Configuration	3-4
3.3.5	Memory Configuration	3-5
3.3.6	Graphics Configuration	3-5
3.3.7	PCI Express Configuration	3-6
3.3.8	AMT Configuration	3-8
3.3.9	Super IO Configuration	3-9
3.3.10	Serial Console Redirection	3-10
3.3.11	SATA Configuration	3-13
3.3.12	VMD setup menu	3-13
3.3.13	Network Stack Configuration	3-13

3.3.14	USB Configuration	3-14
3.3.15	NVMe Configuration	3-15
3.3.16	Onboard Devices Configuration	3-15
3.3.17	APM Configuration	3-16
3.3.18	EZ-Flash	3-17
3.3.19	IO Expander Configuration	3-17
3.3.20	Watchdog Timer	3-18
3.4	Hardware Monitor menu	3-19
3.5	Security menu.....	3-20
3.5.1	Administrator Password.....	3-20
3.5.2	User Password.....	3-20
3.5.3	Secure Boot.....	3-21
3.6	Boot menu	3-22
3.7	Exit menu.....	3-23
Appendix		A-1
Notices		A-1
FCC Compliance Information		A-1
Service and Support.....		A-5

Chapter 1

Product overview

1.1 Package contents

Check your industrial motherboard package for the following items.

- ☒ 1 x ASUS R680EA-IM-Z Motherboard
- ☒ 2 x Dedicated M.2 Heatsink
- ☒ 1 x DIMM BKT Screw Pack
- ☒ 2 x DIMM BKT



If any of the above items is damaged or missing, contact your distributor or sales representative immediately.

1.2 Features

- Intel® socket LAG1700 for 14th/ 13th/ 12th Gen Intel® Core™ i9/ i7/ i5/ i3, Pentium®, and Celeron® processors; max. 125W TDP (supports K series CPU)
- 4 x DDR5 U-DIMMs, up to 128GB
- 6 x SATA Gen 3.0, up to 6Gb/s, support RAID 0, 1, 5, 10
- 2 x M.2 2280 M-key (PCIe x4 / SATA mode, both support RAID 0, 1, 10)
- 2 x PCIe x16 slots, 3 x PCIe x4 slots
- Multi-display: 2 x DisplayPort, 1 x HDMI™ port
- MIL-STD 810H durability, featuring DIMM lock and PCIe bracket
- Integrated I/O provides easier system installation
- Wide operating temperature: -10 ~ +70°C
- ASUS IoT's dedicated WDT 2.0 automatically solves your problems faster and lowers on-site maintenance costs

1.3 Specifications

CPU	Intel® socket LGA1700 for 14 th / 13 th / 12 th Gen Intel® Core™ i9/ i7/ i5/ i3, Pentium®, and Celeron® processors Supports up to 125W TDP
Chipset	Intel® R680E Chipset
Memory	4 x U-DIMM, max. 128GB DDR5 4400MT/s (2DPC - 1DIMM 1R&2R) (ECC support)* 4000MT/s (2DPC – 2DIMM 1R) 3600MT/s (2DPC – 2DIMM 2R) * ECC is available only while using ECC memory.
Graphics	Multi-display output support: DP/HDMI™ ports - Supports 2 x DisplayPort 1.2 outputs with a maximum resolution of 3840 x 2160 @ 60 Hz - Supports an HDMI™ 2.1 output with a maximum resolution of 4096 x 2160 @ 60 Hz
Expansion slots	1 x PCIe 5.0 x16 slot (x16 / x8 mode) 1 x PCIe 3.0 x4 slot (x4 mode) 1 x PCIe 5.0 x16 slot (x8 mode) 1 x PCIe 4.0 x4 slot (x4 mode) 1 x PCIe 4.0 x4 slot (x4 mode) 1 x M.2 2280 M key from CPU (PCIe 4.0 x4 / SATA mode, both support RAID 1, 5, 10) 1 x M.2 2280 M key from PCH (PCIe 3.0 x4 / SATA mode, both support RAID 0, 1, 10)
Storage	6 x SATA 6.0 Gb/s ports, supports RAID 0, 1, 5, 10
LAN	3 x Intel® LAN controllers: - 1 x Intel® I210-AT - 1 x Intel® I226-V - 1 x Intel® I226-LM (Intel vPro supported)
Audio	Realtek ALC897
Rear panel I/O ports	1 x HDMI™ port 2 x DisplayPort 4 x USB 3.2 Gen 2 ports (3 x Type-A + 1 x Type-C®) 4 x LAN (RJ45) ports 1 x COM port (RS232/422/485) 3 x Audio jacks (Line-Out, Line-In, Mic In) 1 x Multi-function button 1 x Multi-function LED

(continued on the next page)

Internal I/O ports	5 x COM Port headers (1 x RS232/422/485, 4 x RS232) 3 x USB 3.2 Gen 1 headers support 6 additional USB 3.2 Gen 1 ports 2 x CPU Fan headers with PWM mode 3 x Chassis Fan headers with PWM mode 1 x System Panel header 1 x Chassis Intrusion header 1 x I ² C header 1 x Clear CMOS header 2 x Extended Temperature sensors 1 x Buzzer 1 x GPIO header 1 x Disable ME jumper 1 x AT/ATX Mode selection jumper 1 x 24-pin ATX Power connector 1 x 8-pin + 4-pin ATX 12V Power connector 1 x 6-pin P1Ce Slot Power connector
EC	ASUS IoT's dedicated Watch Dog Timer 2.0 solution
GPIO	1 x 8-bit GPIO header
Watch dog timer	Yes
Power type	AT mode / ATX mode
Environment	Operation temperature: -10~70°C Non-operation temperature: -40~85°C Relative humidity: 40°C @ 10%~95%
OS Support	Windows® 10 (64-bit) Windows® IoT Enterprise Ubuntu RedHat Enterprise Fedora Workstation OpenSUSE

(continued on the next page)

Software support	ASUS IoT suite - HW monitor - Power scheduling - Fan control - Watchdog timer - GPIO - I²C (API only) - Buzzer (API only) - Linux sample code User interfaces - API - GUI
Certification	EMC (Class B) - CE, FCC, BSMI, VCCI, RCM Safety - CE-LVD
Form Factor	ATX Form Factor: 305mm x 244mm



Specifications are subject to change without notice. Please refer to the ASUS website for the latest specifications.

Chapter 2

Motherboard information

2.1 Before you proceed

Take note of the following precautions before you install motherboard components or change any motherboard settings.



-
- Unplug the power cord from the wall socket before touching any component.
 - Before handling components, use a grounded wrist strap or touch a safely grounded object or a metal object, such as the power supply case, to avoid damaging them due to static electricity.
 - Hold components by the edges to avoid touching the ICs on them.
 - Whenever you uninstall any component, place it on a grounded antistatic pad or in the bag that came with the component.
 - Before you install or remove any component, always remove the AC power by unplugging the power cord from the power outlet. Failure to do so may cause severe damage to the motherboard, peripherals, or components.
-


2.2 Motherboard layout



Place nine screws into the holes indicated by circles to secure the motherboard to the chassis.




Do not overtighten the screws! Doing so can damage the motherboard.

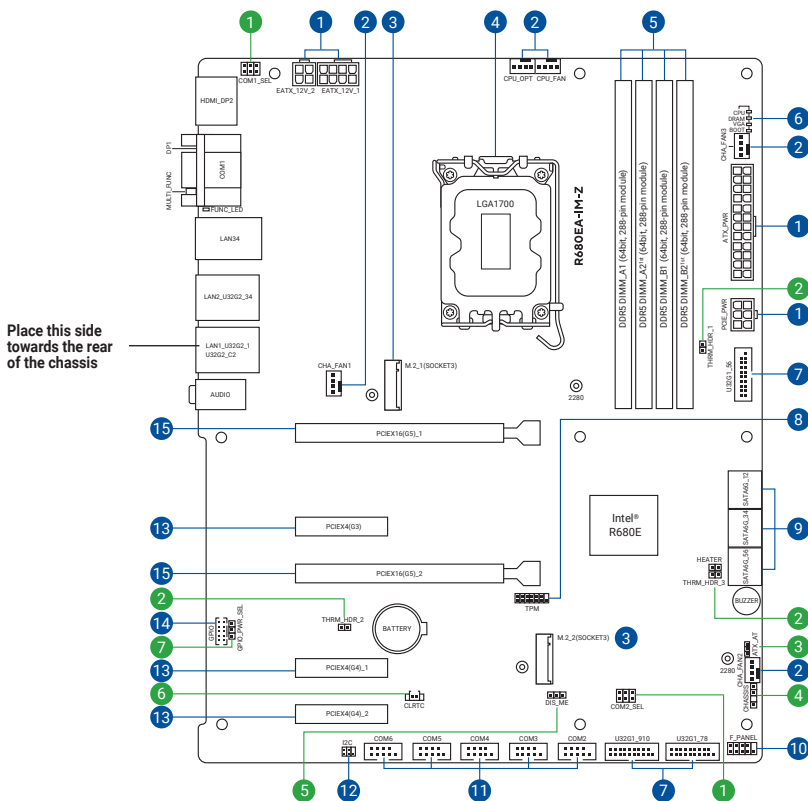

Connectors/Slots		Page
1.	ATX Power connectors (24-pin ATX_PWR, 8-pin + 4-pin ATX12V, 6-pin PCIE_PWR)	2-19
2.	CPU and Chassis Fan headers (4-pin CPU_FAN, 4-pin CPU_OPT, 4-pin CHA_FAN1-3)	2-20
3.	M.2 slots (M.2(SOCKET3))	2-21
4.	Intel® LGA1700 CPU socket	2-4
5.	DDR5 U-DIMM slots	2-9
6.	Q-LEDs	2-21
7.	USB 3.2 Gen 1 connector / headers	2-22
8.	SPI TPM header (14-1 pin TPM)	2-23
9.	SATA 6.0Gb/s ports (7-pin SATA6G_1-6)	2-23
10.	System Panel header (10-1 pin F_PANEL)	2-24
11.	COM Port headers (10-1 pin COM2-6)	2-25
12.	I ² C header (6-1 pin I2C)	2-26
13.	PCI Express x4 slots	2-28
14.	General Purpose Input/Output header (10-pin GPIO_CON)	2-27
15.	PCI Express x16(G5) slots	2-28
Jumpers		Page
1.	COM1/2 Ring/+5V/+12V selection jumpers (6-pin COM1_SEL, COM2_SEL)	2-10
2.	Thermal Sensor header (2-pin THRM_HDR_1-3)	2-11
3.	AT/ATX Mode selection jumper (3-pin AT_ATX)	2-12
4.	Chassis Intrude header (4-1 pin CHASSIS)	2-13
5.	Disable ME jumper (3-pin DIS_ME)	2-14
6.	Clear CMOS header (2-pin CLRRTC)	2-15
7.	General Purpose Input/Output Power selection jumper (3-pin GPIO_PWR_SEL)	2-16

2.3 Central Processing Unit (CPU)

The motherboard comes with a surface mount LGA1700 socket designed for the 14th/ 13th/ 12th Gen Intel® Core™ i9/ i7/ i5/ i3, Pentium®, and Celeron® processors.

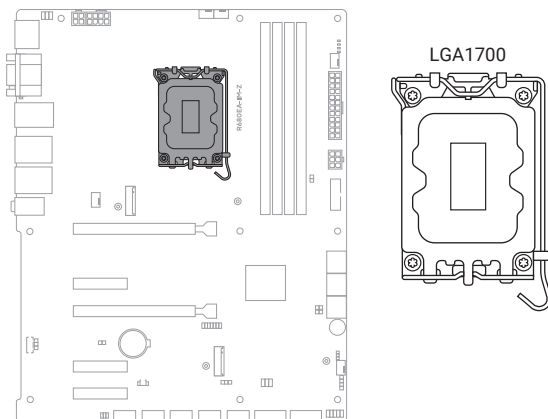




Unplug all power cables before installing the CPU.




- Upon purchase of the motherboard, ensure that the PnP cap is on the socket and the socket contacts are not bent. Contact your retailer immediately if the PnP cap is missing, or if you see any damage to the PnP cap/socket contacts/motherboard components. The manufacturer will shoulder the cost of repair only if the damage is shipment/transit-related.
 - Keep the cap after installing the motherboard. The manufacturer will process Return Merchandise Authorization (RMA) requests only if the motherboard comes with the cap on the socket.
 - The product warranty does not cover damage to the socket contacts resulting from incorrect CPU installation/removal, or misplacement/loss/incorrect removal of the PnP cap.
-

2.3.1 CPU installation

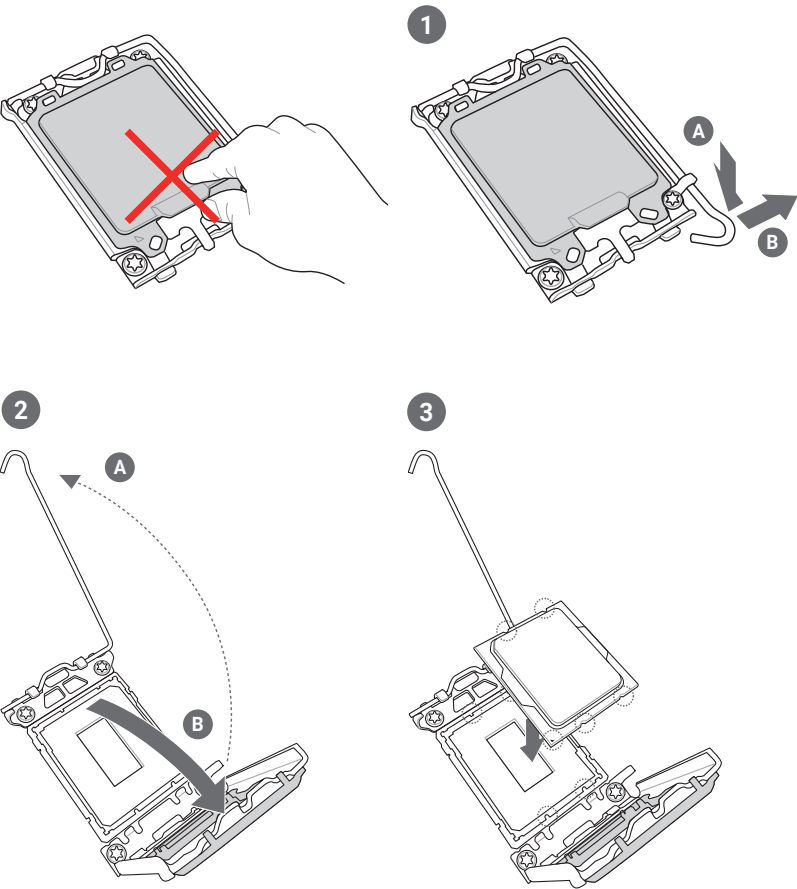

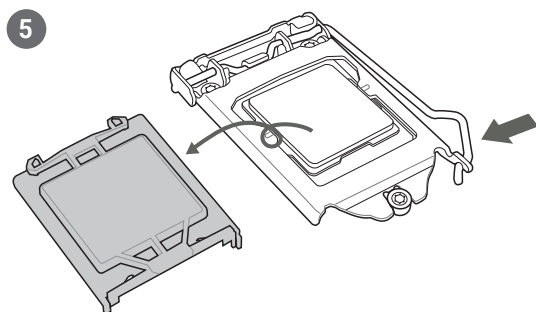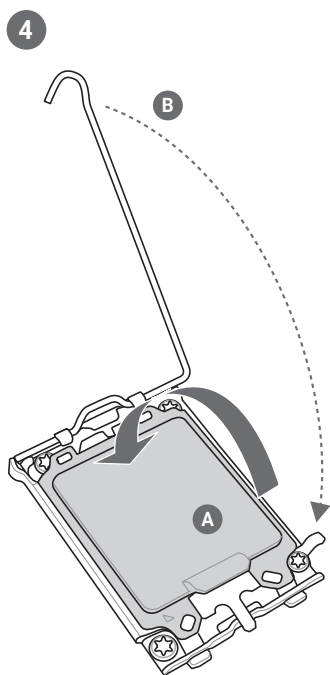


2.3.2 CPU heatsink and fan assembly installation

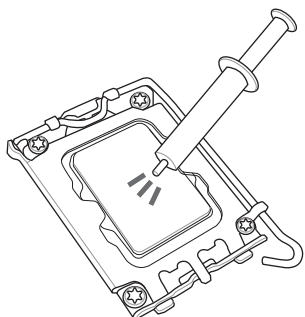


Apply Thermal Interface Material to the CPU cooling system and CPU before you install the cooling system, if necessary.

To install the CPU heatsink and fan assembly

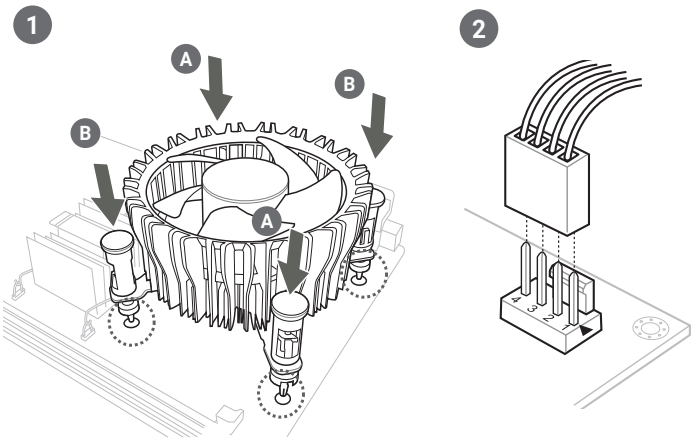

To uninstall the CPU heatsink and fan assembly

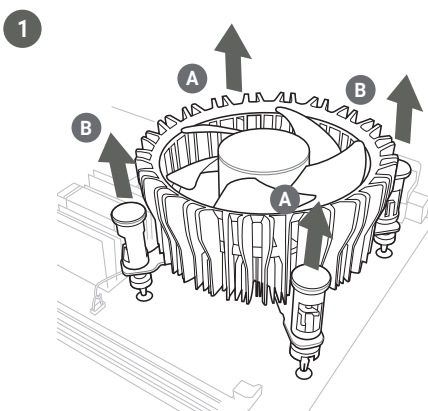


2.4 System memory


The motherboard comes with Dual Inline Memory Modules (DIMM) slots designed for DDR5 (Double Data Rate 5) memory modules.



A DDR5 memory module is notched differently from a DDR, DDR2, DDR3, or DDR4 module. DO NOT install a DDR, DDR2, DDR3, or DDR4 memory module to the DDR5 slot.

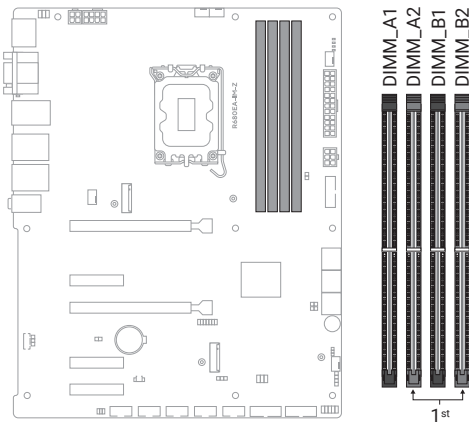


Recommended memory configurations

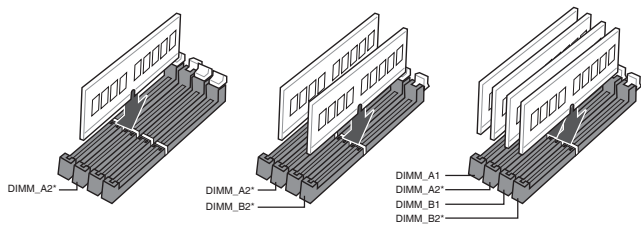

2.5 Jumpers

1. COM1/2 Ring/+5V/+12V selection jumpers (6-pin COM1_SEL, COM2_SEL)

These jumpers allow you to select 5V or 12V depending on your COM device.

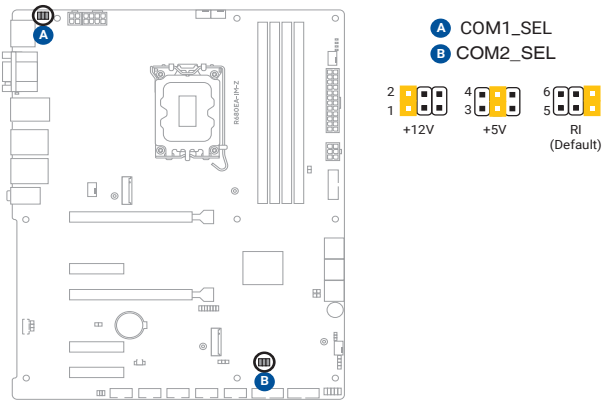


Setting	Pins
+12V	1-2
+5V	3-4
Ring (Default)	5-6

Connector type	HEADER 2x3p, 2.54mm pitch, S/T
----------------	--------------------------------


2. Extended Temperature Sensor headers (2-pin THRM_HDR_1-3)

The Extended Temperature Sensor headers allow you to connect a sensor to monitor the temperature of the devices and the critical components inside the motherboard. Connect the temperature sensor and place it on the device or the motherboard's component to detect its temperature.

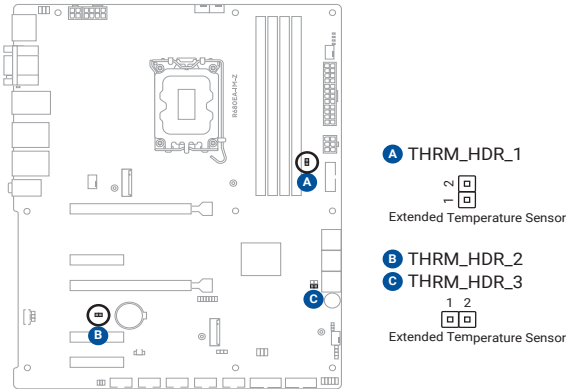

3. **AT/ATX Mode selection jumper (3-pin AT_ATX_SEL)**

In ATX mode (default), you will need to manually press the power button to turn on the system power. In AT mode, the board will automatically turn on when system power is connected.

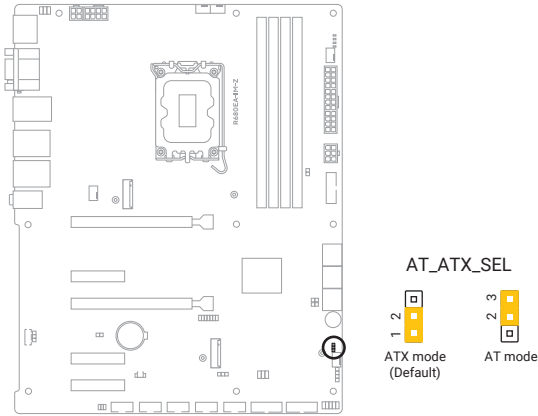


Pins	Description
1-2 (Default)	ATX mode
2-3	AT mode

Connector type	HEADER 1x3p, 2.54mm pitch, S/T
----------------	--------------------------------

4. Chassis intrusion header (4-1 pin CHASSIS)


This header is for a chassis-mounted intrusion detection sensor or switch. Connect one end of the chassis intrusion sensor or switch cable to this connector. The chassis intrusion sensor or switch sends a high-level signal to this connector when a chassis component is removed or replaced. The signal is then generated as a chassis intrusion event.

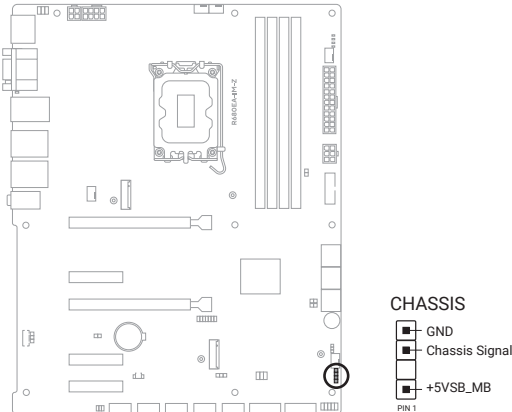

Connector type	HEADER 4p, K2, 2.54mm pitch
----------------	-----------------------------

5. **Disable ME jumper (3-pin DIS_ME)**


This jumper allows you to enable or disable the Intel® ME function. Set this jumper to pins 1-2 to enable (default) the Intel® ME function and to pins 2-3 to disable it.

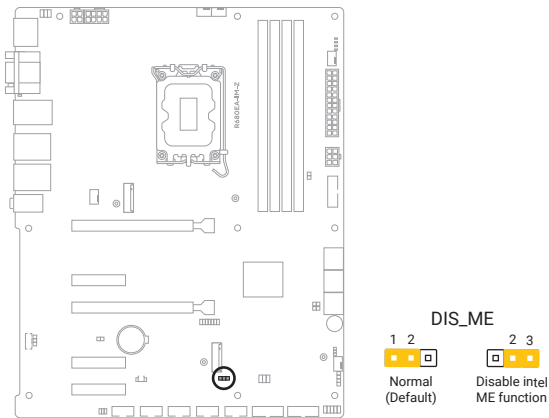

Connector type	HEADER 1x3p, 2.54mm pitch, S/T
----------------	--------------------------------

6. Clear CMOS header (2-pin CLRTC)

This header allows you to clear the CMOS RTC RAM data of the system setup information such as date, time, and system passwords.

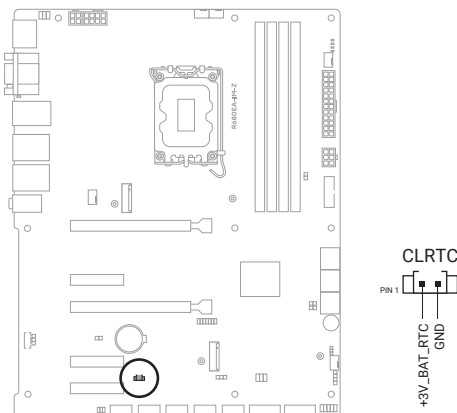

Connector type	HEADER 1x2p, 1.25mm pitch, S/T
-----------------------	--------------------------------

To erase the RTC RAM:


1. Turn OFF the computer and unplug the power cord.
2. Use a metal object such as a screwdriver to short the two pins.
3. Plug the power cord and turn ON the computer.
4. Hold down the **** key during the boot process and enter BIOS Setup to re-enter data.



DO NOT short-circuit the pins except when clearing the RTC RAM. Short-circuiting or placing a jumper cap will cause system boot failure!

7. General Purpose Input/Output Power selection jumper (10-pin GPIO_PWR_SEL)

This jumper allows you to select 3V or 5V for a general purpose input/output module.

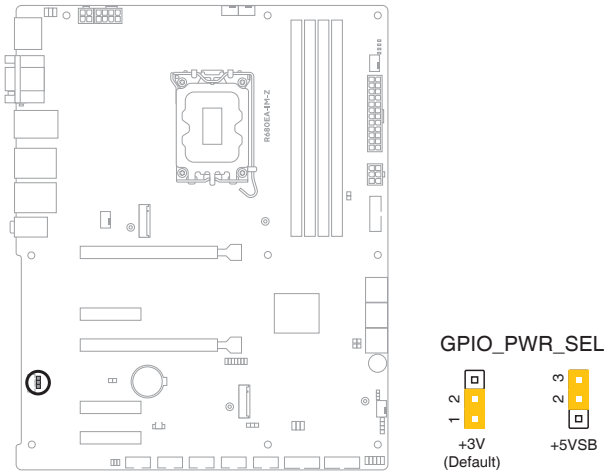


Setting	Pins
+3V (Default)	1-2
+5V	2-3

Connector type	HEADER 1x3p, 2.54mm pitch, S/T
----------------	--------------------------------

2.6 Connectors

2.6.1 Rear panel connectors

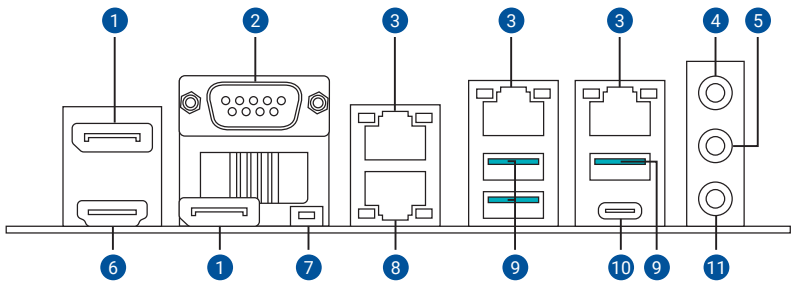


1. **DisplayPort.** These ports are for DisplayPort-compatible devices.
2. **Serial port (COM).** This port connects a modem or other device that conforms with serial specification.
3. **LAN (RJ-45) ports.** These ports allow Gigabit connection to a Local Area Network (LAN) through a network hub.

LAN port LED indications

Activity/Link LED	
Status	Description
Off	No link
Green	Linked
Green (Blinking)	Data activity
Green (Blinking then steady)	Ready to wake up from S5 mode

Speed LED	
Status	Description
OFF	10Mbps/100Mbps connection
ORANGE	1Gbps connection
GREEN	2.5Gbps connection

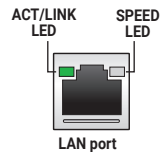

4. **Line In port (light blue).** This port connects to the tape, CD, DVD player, or other audio sources.
5. **Line Out port (lime).** This port connects to a headphone or a speaker. In the 4 and 5.1 channel configurations, the function of this port becomes Front Speaker Out.
6. **HDMI™ port.** These ports are for a High-Definition Multimedia Interface (HDMI™) connector, and are HDCP compliant allowing playback of HD DVD, Blu-ray, and other protected content.
7. **Multi-function button (MULTU_FUNC).** The Multi-function button enables you to manually clear the CMOS and recover the BIOS by varying the duration of your press.

MULTI_FUNC		
Task	Function	Description
1	Clear CMOS	Long press for 3 seconds
2	BIOS Recovery	Long press for 10 seconds

* The function is disabled during each stage of the boot cycle.

FUNC_LED (for Auto-Retry)			
Task	BIOS Setting	Boot Cycle Status	Description
1	Enabled	Enter procedure	Always bright
2		Proceeded	Twinkle by 2Hz
3		Exit procedure	Turn off
4	Disabled	N/A	Turn off


* Exit procedure: Force entry into the BIOS setup menu or boot into the operating system.

8. **LAN (RJ-45) port.** This port allows Gigabit connection to a Local Area Network (LAN) through a network hub.

LAN port LED indications

Activity/Link LED	
Status	Description
Off	No link
Orange	Linked
Orange (Blinking)	Data activity
Orange (Blinking then steady)	Ready to wake up from S5 mode

Speed LED	
Status	Description
OFF	10Mbps connection
ORANGE	100Mbps connection
GREEN	1Gbps connection

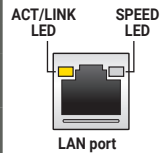

9. **USB 3.2 Gen 2 (up to 10Gbps) ports (teal blue, Type-A).** These 9-pin Universal Serial Bus (USB) ports are for USB 3.2 Gen 2 devices.
10. **USB 3.2 Gen 2 (up to 10Gbps) port (USB Type-C®).** This Universal Serial Bus (USB) port is for a USB 3.2 Gen 2 Type-C® device.




We strongly recommend that you connect USB 3.2 Gen 2 devices to USB 3.2 Gen 2 ports for faster and better performance from your USB 3.2 Gen 2 devices.

11. **Microphone port (pink).** This port connects a microphone.

2.6.2 Internal connectors

1. ATX Power connectors (24-pin ATX_PWR, 8-pin + 4-pin ATX12V, 6-pin PCIE_PWR)

Correctly orient the ATX power supply plugs into these connectors and push down firmly until the connectors completely fit.

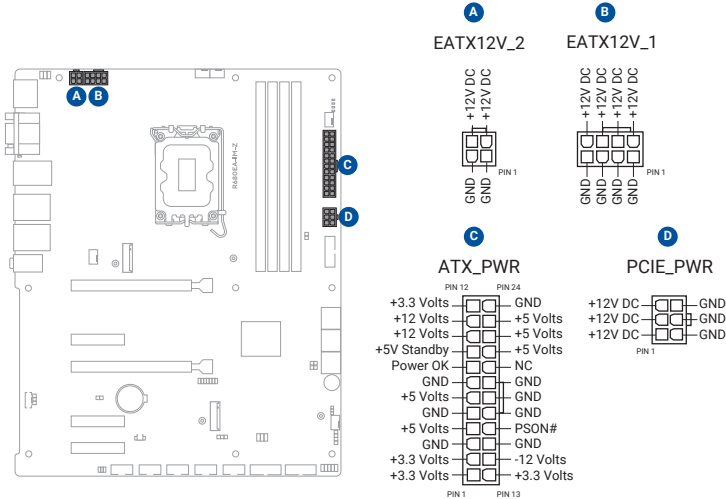

DC Mode ATXPWR

Pins	Signal	Pins	Signal
1	+3.3V out	13	+3.3V out
2	+3.3V out	14	-12V
3	GND	15	GND
4	+5V out	16	PSON#
5	GND	17	GND
6	+5V out	18	GND
7	GND	19	GND
8	Power OK	20	NC
9	+5V Standby	21	+5V out
10	+12V in	22	+5V out
11	+12V in	23	+5V out
12	+3.3V out	24	GND

DC Mode ATX12V_1

Pins	Signal	Pins	Signal
1	GND	5	+12V in
2	GND	6	+12V in
3	GND	7	+12V in
4	GND	8	+12V in

DC Mode ATX12V_2

Pins	Signal	Pins	Signal
1	GND	3	+12V in
2	GND	4	+12V in

PCE_PWR


Pins	Signal	Pins	Signal
1	+12V in	4	GND
2	+12V in	5	GND
3	+12V in	6	GND



We recommend that you use a PSU with a higher power output when configuring a system with more power-consuming components. The system may become unstable or may not boot up if the power is inadequate.

2. CPU and Chassis Fan headers (4-pin CPU_FAN, 4-pin CPU_OPT, 4-pin CHA_FAN1-3)

Connect the fan cables to the fan headers on the motherboard, ensuring that the black wire of each cable matches the ground pin of the header.

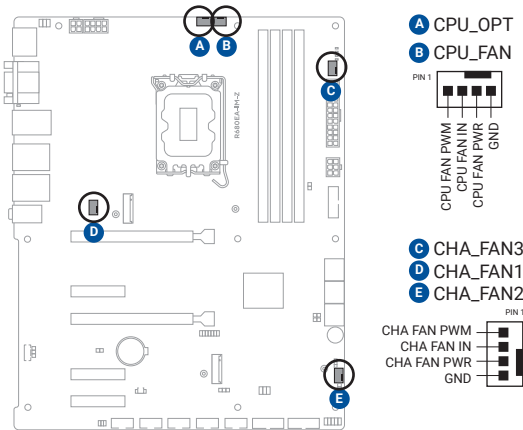


Connector type WAFER HD 4p, 2.54mm pitch, S/T



Do not forget to connect the fan cables to the fan headers. Insufficient air flow inside the system may damage the motherboard components. These are not jumpers! Do not place jumper caps on the fan headers!

3. **M.2 Slots (M.2(SOCKET3))**


These slots allow you to install M.2 SSD modules and support PCIE and SATA modes.

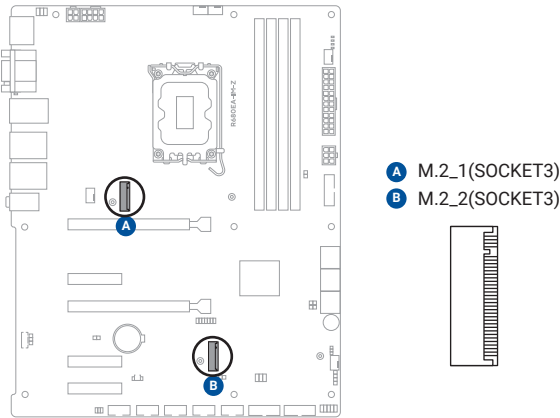

- The M.2 SSD module is purchased separately.
- This socket supports M Key and 2242/2260/2280 storage devices.
- We recommend using a PH1 screwdriver with a torque of 2.0 +/- 0.2 kgf.cm when tightening the screw.


4. **Q-LEDs**

The Q-LEDs check key components (CPU, DRAM, VGA, and booting devices) during the motherboard booting process. If an error is found, the critical component's LED stays lit up until the problem is solved.

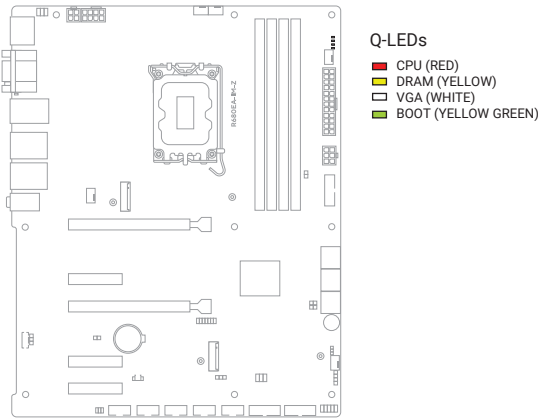


5. USB 3.2 Gen 1 connectors (20-pin U32G1_56, U32G1_78, U32G1_910)

Connect a USB 3.2 Gen 1 module to any of these connectors for additional USB 3.2 Gen 1 front or rear panel ports. These connectors comply with USB 3.2 Gen 1 specifications and provide faster data transfer speeds of up to 5 Gbps, faster charging time for USB-chargeable devices, optimized power efficiency, and backward compatibility with USB 2.0.

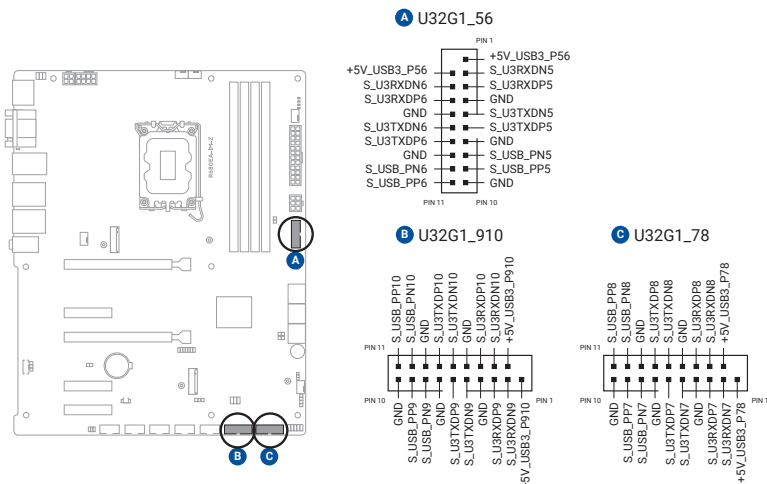

6. SPI TPM header (14-1 pin TPM)


This header supports a Trusted Platform Module (TPM) system with a Serial Peripheral Interface (SPI), allowing you to securely store keys, digital certificates, passwords and data. A TPM system also enhances network security, protects digital identities, and ensures platform integrity.

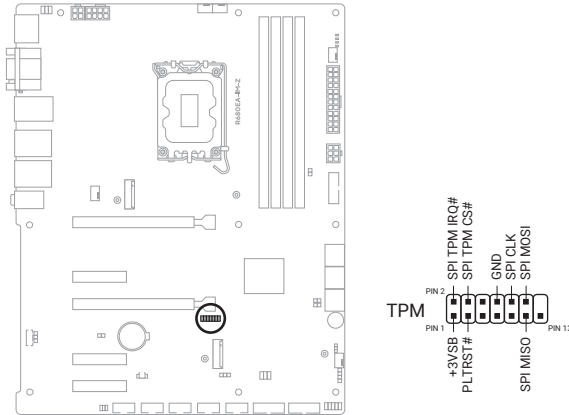

Connector type	Header 2x7p, K14, 2.0mm pitch
----------------	-------------------------------

7. SATA 6.0Gb/s ports (7-pin SATA6G_1-6)


These ports connect to Serial ATA 6.0 Gb/s hard disk drives or an optical drive via Serial ATA 6.0 Gb/s signal cables.

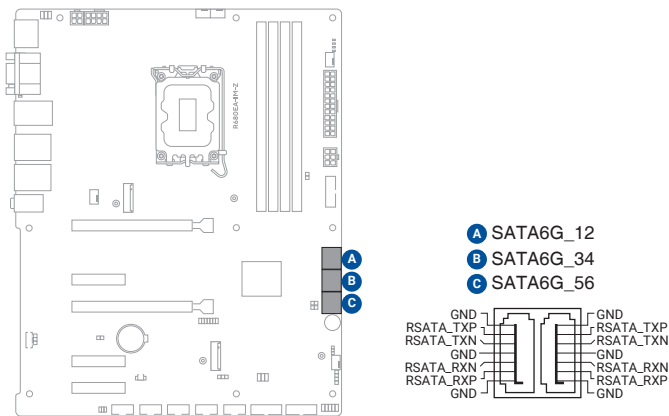

Connector type	WAFER HD 7p, 1.27mm pitch
----------------	---------------------------

8. System Panel header (10-1 pin F_PANEL)

This header supports several chassis-mounted functions.

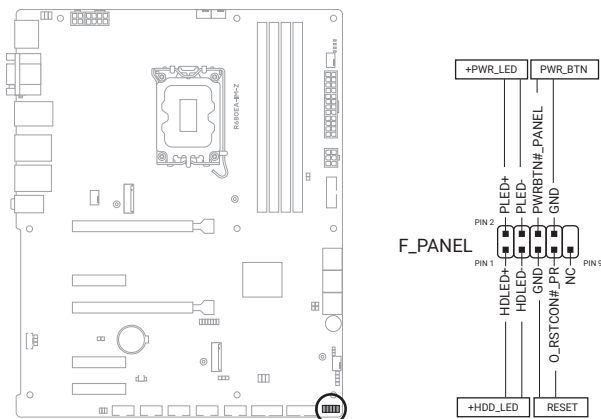

Connector type	Header 2x5p, K10, 2.54mm pitch
-----------------------	--------------------------------

- **System power LED (2-pin PLED)**

This 2-pin header is for the system power LED. Connect the chassis power LED cable to this header. The system power LED lights up when you turn on the system power, and blinks when the system is in sleep mode.

- **Hard disk drive activity LED (2-pin HDD_LED)**

This 2-pin header is for the HDD Activity LED. Connect the HDD Activity LED cable to this header. The IDE LED lights up or flashes when data is read from or written to the HDD.

- **ATX power button/soft-off button (2-pin PWR_BTN#_PANEL)**


This 2-pin header is for the system power button.

- **Reset button (2-pin O_RSTCON#_PR)**

This 2-pin header is for the chassis-mounted reset button for system reboot without turning off the system power.

9. COM Port headers (10-1 pin COM2-6)

These connectors are for serial (COM) ports. Connect the serial port cables to these connectors, then install the module to a slot opening at the back of the system chassis.

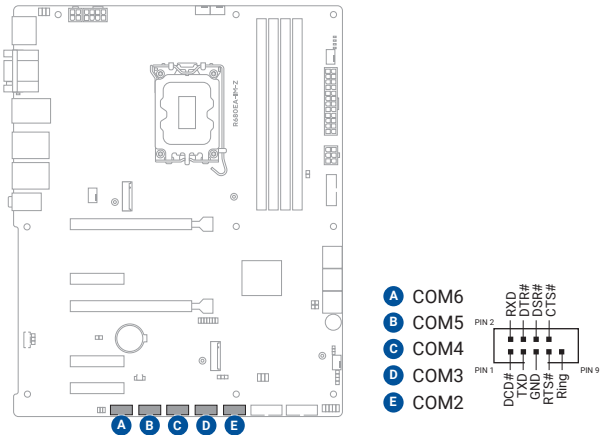


Connector type BOX header 2x5p, K10, 2.54mm pitch



The serial port cables are purchased separately.

10. I²C header (6-1 pin I²C)

The I²C (Inter-Integrated Circuit) header allows you to connect an I²C compatible IoT security module.

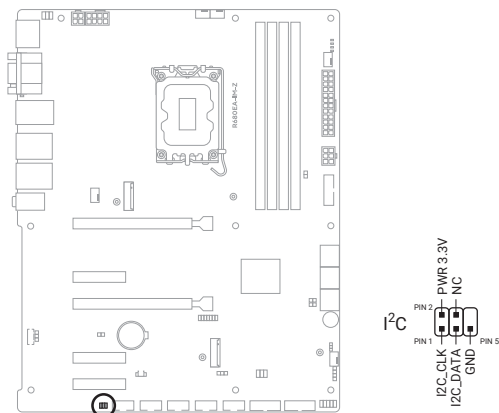


Connector type

Header 2x3p, K6, 2.0mm pitch

11. General Purpose Input/Output header (10-pin GPIO_CON)

This header is for a general purpose input/output module with 3V or 5V power which allows you to customize the digital signal input/output.

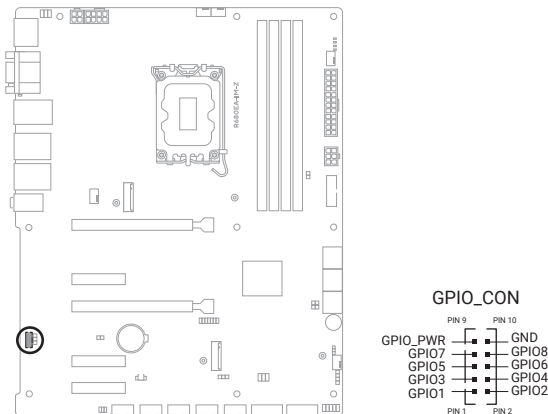


Connector type	WAFER HD 2x5p, 2.0mm pitch, S/T
----------------	---------------------------------

2.7 Slots


1. PCI Express x16 slots

This motherboard supports two PCIe x16 graphics cards that comply with the PCI Express specification.

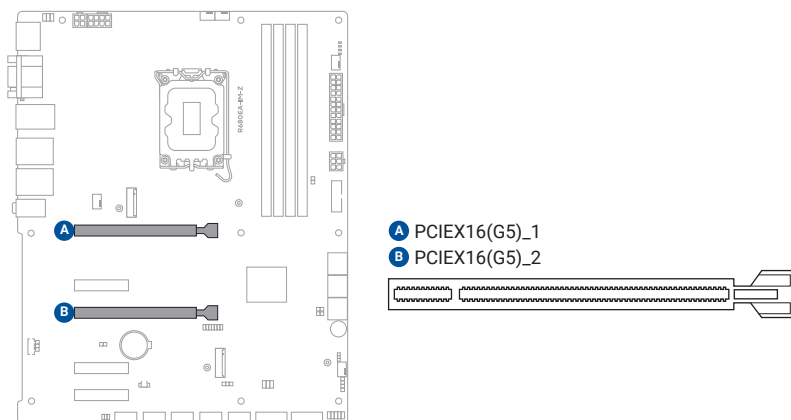

2. PCI Express x4 slots

This motherboard supports three PCIe x4 network cards, SCSI cards and other cards that comply with the PCI Express specification.

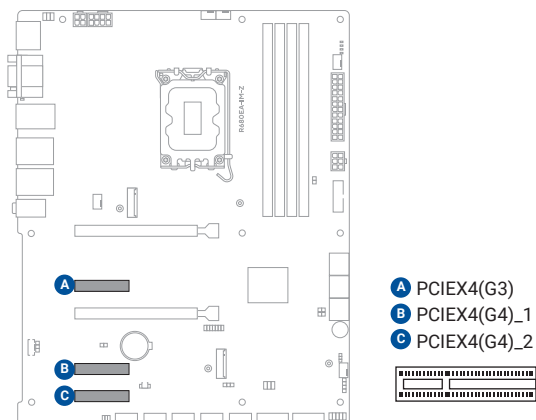

Chapter 3

BIOS setup



Scan the code to view the BIOS update guide.



3.1 BIOS Setup program

Use the BIOS Setup program to configure its parameters. The BIOS screens include navigation keys and brief online help to guide you in using the BIOS Setup program.

Entering BIOS Setup at startup

To enter BIOS Setup at startup:

Press <Delete> or <Esc> during the Power-On Self Test (POST). If you do not press <Delete> or <Esc>, POST continues with its routines.

Entering BIOS Setup after POST

To enter BIOS Setup after POST:

- Press <Ctrl>+<Alt>+ simultaneously.
- Press the reset button on the system chassis.
- Press the power button to turn the system off then back on. Do this option only if you failed to enter BIOS Setup using the first two options.



Using the power button, reset button, or the <Ctrl>+<Alt>+ keys to reboot a running operating system can cause damage to your data or system. Always shut down the system properly from the operating system.



- Visit the ASUS website at www.asus.com to download the latest BIOS file for this motherboard.
- The default BIOS settings for this motherboard apply to most working conditions and ensures optimal performance. If the system becomes unstable after changing any BIOS settings, load the default settings to regain system stability. Select the option **Restore Defaults** under the Exit menu or press hotkey <F3>.
- The BIOS Setup screens shown in this section are for reference purposes only, and may not exactly match what you see on your screen.

BIOS menu screen

The menu bar on top of the screen has the following main items:

Main	For changing the basic system configuration.
Advanced	For changing the advanced system settings.
Hardware Monitor	For displaying the system temperatures, fan and power status, and changing smart fan settings.
Security	For configuring the system security settings.
Boot	For changing the system boot configuration.
Exit	For selecting the save options and default options.

To select an item on the menu bar, press the right or left arrow key on the keyboard until the desired item is highlighted.

3.2 Main menu

The Main menu provides you with an overview of the basic system information, and allows you to set the system date and the system time.

System Date [Day MM/DD/YYYY]

Allows you to set the system date.

System Time [HH:MM:SS]

Allows you to set the system time.

3.3 Advanced menu

The Advanced menu items allow you to change the settings for the CPU and other system devices.



Be cautious when changing the settings of the Advanced menu items. Incorrect field values can cause the system to malfunction.

3.3.1 Asus Config Lock

When this function is enabled and the configuration of a connected device is changed, users will get an alarm message. The function will be disabled by default when a port is not in use. Configuration options: [Disabled] [Enabled]

3.3.2 PCH-FW Configuration

TPM Device Selection

Selects TPM device: PTT or dTPM.

[PTT] Enables PTT in SkuMgr.

[dTPM] Disables PTT in SkuMgr.



When PTT is disabled, all data saved on it will be lost.

3.3.3 Trusted Computing

Security Device Support

Allows you to enable or disable BIOS support for security device.

Configuration options: [Disabled] [Enabled]



The following items appear when a TPM device is installed on your motherboard.

SHA256 PCR Bank

Configuration options: [Disabled] [Enabled]

SHA384 PCR Bank

Configuration options: [Disabled] [Enabled]

SM3_256 PCR Bank

Configuration options: [Disabled] [Enabled]

Pending operation

Allows you to schedule an operation for security device.

Configuration options: [None] [TPM Clear]



Your computer will reboot during restart in order to change the state of security device.

Platform Hierarchy

Configuration options: [Disabled] [Enabled]

Storage Hierarchy

Configuration options: [Disabled] [Enabled]

Endorsement Hierarchy

Configuration options: [Disabled] [Enabled]

Physical Presence Spec Version

Allows you to select to tell O.S. to support PPI Spec Version 1.2 or 1.3.

Configuration options: [1.2] [1.3]



Some HCK tests might not support 1.3.

PH Randomization

Allows you to enable or disables Platform Hierarchy randomization. Configuration options: [Disabled] [Enabled]



Do not enable this question in production platforms. This is for development testing. OVERRIDE ChangePlatformAuth ELINK for production platforms supports TXT.

3.3.4 CPU Configuration

The items in this menu show CPU-related information the BIOS automatically detects.

Intel (VMX) Virtualization Technology

This item, when set to [enabled], will allow a VMM to utilize the additional hardware capacities provided by Vanderpool Technology.

Configuration options: [Disabled] [Enabled]

Hyper-Threading

The Intel Hyper-Threading Technology allows a hyper-threading processor to appear as two logical processors to the operating system, allowing the operating system to schedule two threads or processes simultaneously.

[Enabled] Two threads per activated core are enabled.

[Disabled] Only one thread per activated core is enabled.

Intel Trusted Execution Technology

When set to [Enabled], allows you to enable the utilization of additional hardware capabilities provided by Intel® Trusted Execution Technology and requires a full power cycle. Configuration options: [Disabled] [Enabled]

VT-d

Configuration options: [Disabled] [Enabled]

Active Performance Cores

Allows you to select the number of CPU cores to activate in each processor package. Configuration options: [All] [7] - [1]

Active Efficient Cores

Allows you to select the number of Efficient cores to activate in each processor package. Configuration options: [All] [7] - [0]



Number of Cores and Efficient Cores are looked at together. When both are {0,0}, Pcode will enable all cores.

CPU - Power Management Control

This item allows you to manage and configure the CPU's power.

Intel(R) SpeedStep(tm)

Allows your system to support more than two frequency ranges.

Configuration options: [Disabled] [Enabled]

Intel(R) Speed Shift Technology

Allows you to enable or disable Intel® Speed Shift Technology support. When enabled, CPPC v2 interface allows hardware controlled P-state.

Configuration options: [Disabled] [Enabled]

C states

Allows you to enable or disable CPU Power Management.

Configuration options: [Disabled] [Enabled]



The following item appears only when you set **C states** to **[Enabled]**.

Enhanced C-states

Allows you to enable or disable C1E. CPU will switch to minimum speed when all cores enter C-state. Configuration options: **[Disabled]** **[Enabled]**

Power Limit 1 Override

Allows you to enable or disable Power Limit 1 Override. If this option is set to **[Disabled]**, BIOS will program the default values for Power Limit 1 and Power Limit 1 Time Window.

Configuration options: **[Enabled]** **[Disabled]**



The following item appears only when you set **Power Limit 1 Override** to **[Enabled]**.

Power Limit 1

Allows you to configure Power Limit 1 value in milliwatts.

Power Limit 2 Override

Allows you to enable or disable Power Limit 2 Override. If this option is set to **[Disabled]**, BIOS will program the default values for Power Limit 2.

Configuration options: **[Enabled]** **[Disabled]**



The following item appears only when you set **Power Limit 2 Override** to **[Enabled]**.

Power Limit 2

Allows you to configure Power Limit 2 value in milliwatts.

Max TOLUD [Dynamic]

Configures the maximum value of TOLUD. Dynamic assignment will adjust TOLUD automatically based on the largest MMIO length of installed graphics controller. Configuration options: **[Dynamic]** **[0.75 GB]** **[1 GB]** ~ **[2.5GB]**

3.3.5 Memory Configuration

The items in this submenu allow you to set memory configuration parameters.

Memory Remap

Allows you to enable or disable memory remap above 4GB.

Configuration options: **[Enabled]** **[Disabled]**

3.3.6 Graphics Configuration

This item allows you to select a primary display from IGFX and PEG graphical devices.

Primary Display

Allows you to select which of the IGFX/PEG/PCI Graphics devices should be the primary display or select **[FORCE]** for dual display.

Configuration options: **[FORCE]** **[Auto]** **[IGFX]** **[PEG Slot]** **[PCH PCI]**



The following items appear only when you set **Primary Display** to **[Auto]**, **[IGFX]**, **[PEG Slot]**, or **[PCH PCI]**.

Internal Graphics

[Disabled] Disables internal graphics.

[Enabled] Enables internal graphics.

RC6 (Render Standby)

Allows you to enable or disable render standby support.

Configuration options: [Disabled] [Enabled]

3.3.7 PCI Express Configuration

This item allows you to configure PCI Express settings.

PCH PCIe Clock Gating

Allows you to enable or disable PCH PCI Express clock gating for all ports.

Configuration options: [Disabled] [Enabled]

PCH PCIe Power Gating

Allows you to enable or disable PCH PCI Express power gating for all ports.

Configuration options: [Disabled] [Enabled]

PCIEx16(G5)_1 Slot

Allows you to configure the PCI Express Root Port settings.

PCIEx16(G5)_1 Slot

Allows you to enable or disable the PCI Express Root Port.

Configuration options: [Disabled] [Enabled]



The following items appear only when you set **PCIEx16(G5)_1 Slot** to **[Enabled]**.

PCIe Speed

Allows you to configure the PCIe speed.

Configuration options: [Auto] [Gen1] [Gen2] [Gen3] [Gen4] [Gen5]

Detect Timeout

Allows you to set the time (milliseconds) of waiting for link to exit Detect state for enabled ports before assuming there is no device and potentially disabling the port. Use the <+> and <-> keys to adjust the value or input the desired value.

Detect Non-Compliance Device

When set to [Enabled], this item allows you to detect the non-compliance device in PEG.

Configuration options: [Disabled] [Enabled]

PCIEx16(G5)_2 Slot

Allows you to configure the PCI Express Root Port settings.

PCIEx16(G5)_2 Slot

Allows you to enable or disable the PCI Express Root Port.
Configuration options: [Disabled] [Enabled]



The following items appear only when you set **PCIEx16(G5)_2 Slot** to **[Enabled]**.

PCIe Speed

Allows you to configure the PCIe speed.
Configuration options: [Auto] [Gen1] [Gen2] [Gen3] [Gen4] [Gen5]

Detect Timeout

Allows you to set the time (milliseconds) of waiting for link to exit Detect state for enabled ports before assuming there is no device and potentially disabling the port.
Use the <+> and <-> keys to adjust the value or input the desired value.

Detect Non-Compliance Device

When set to [Enabled], this item allows you to detect the non-compliance device in PEG.
Configuration options: [Disabled] [Enabled]

PCIEx4(G3) Slot

Allows you to configure the PCI Express Root Port settings.

PCIEx4(G3) Slot

Allows you to enable or disable the PCI Express Root Port.
Configuration options: [Disabled] [Enabled]



The following items appear only when you set **PCIEx4(G3) Slot** to **[Enabled]**.

PCIe Speed

Allows you to configure the PCIe speed.
Configuration options: [Auto] [Gen1] [Gen2] [Gen3]

Detect Timeout

Allows you to set the time (milliseconds) of waiting for link to exit Detect state for enabled ports before assuming there is no device and potentially disabling the port.
Use the <+> and <-> keys to adjust the value or input the desired value.

Detect Non-Compliance Device

When set to [Enabled], this item allows you to detect the non-compliance device in PEG.
Configuration options: [Disabled] [Enabled]

PCIEx4(G4)_1 Slot

Allows you to configure the PCI Express Root Port settings.

PCIEx4(G4)_1 Slot

Allows you to enable or disable the PCI Express Root Port.
Configuration options: [Disabled] [Enabled]



The following items appear only when you set **PCIEx4(G4)_1 Slot** to **[Enabled]**.

PCIe Speed

Allows you to configure the PCIe speed.

Configuration options: [Auto] [Gen1] [Gen2] [Gen3] [Gen4]

Detect Timeout

Allows you to set the time (milliseconds) of waiting for link to exit Detect state for enabled ports before assuming there is no device and potentially disabling the port. Use the <+> and <-> keys to adjust the value or input the desired value.

Detect Non-Compliance Device

When set to [Enabled], this item allows you to detect the non-compliance device in PEG.

Configuration options: [Disabled] [Enabled]

PCIEx4(G4)_2 Slot

Allows you to configure the PCI Express Root Port settings.

PCIEx4(G4)_2 Slot

Allows you to enable or disable the PCI Express Root Port.

Configuration options: [Disabled] [Enabled]



The following items appear only when you set **PCIEx4(G4)_2 Slot** to **[Enabled]**.

PCIe Speed

Allows you to configure the PCIe speed.

Configuration options: [Auto] [Gen1] [Gen2] [Gen3] [Gen4]

Detect Timeout

Allows you to set the time (milliseconds) of waiting for link to exit Detect state for enabled ports before assuming there is no device and potentially disabling the port. Use the <+> and <-> keys to adjust the value or input the desired value.

Detect Non-Compliance Device

When set to [Enabled], this item allows you to detect the non-compliance device in PEG.

Configuration options: [Disabled] [Enabled]

3.3.8 AMT Configuration

This item allows you to configure Intel® Active Management Technology parameters.

AMT BIOS Features

Allows you to enable or disable AMT BIOS Features. When set to [Disabled], MEBx Setup will be inaccessible.

Configuration options: [Disabled] [Enabled]



This item does not disable Manageability Features in FW.

USB Provisioning of AMT

Allows you to enable or disable AMT USB Provisioning.

Configuration options: [Disabled] [Enabled]

Unconfigure ME

Allows you to unconfigure ME by resetting the MEBx password to default.

Configuration options: [Disabled] [Enabled]

End Of Post Message

Allows you to enable or disable End of Post message sent to ME.

Configuration options: [Disabled] [Send in DXE]

Extend CSME Measurement to TPM-PCR

Allows you to enable or disable Extend CSME Measurement to TPM-PCR [0] and AMT config to TPM-PCR [1].

Configuration options: [Disabled] [Enabled]

Secure Erase Configuration

Secure Erase mode

Allows you to change Secure Erase module behavior.

Configuration options: [Simulated] [Real]

[Simulated] Performs SE flow without erasing SSD.

[Real] Erases SSD.

Force Secure Erase

Allows you to force Secure Erase on next boot.

Configuration options: [Disabled] [Enabled]

Remote Platform Erase Configuration

Enable Remote Platform Erase Feature

Allows you to enable or disable remote platform erase feature.

Configuration options: [Disabled] [Enabled]

SSD Erase Mode

The item can be configured only when you set **Enable Remote Platform Erase Feature** to [Enabled] and allows you to enable or disable remote platform erase feature.

Configuration options: [Simulated] [Real]

3.3.9 Super IO Configuration

Serial Port 1 Configuration

This item allows you to set parameters of Serial Port 1 (COMA).

Serial Port

Allows you to enable or disable the serial port (COM).

Configuration options: [Disabled] [Enabled]



The following item appears only when you set **Serial Port** to **[Enabled]**.

COM1 Control

Allows you to select COM1 mode.

Configuration options: [RS232] [RS422] [RS485]

Serial Port 2 Configuration

This item allows you to set parameters of Serial Port 2 (COMB).

Serial Port

Allows you to enable or disable the serial port (COM).

Configuration options: [Disabled] [Enabled]



The following item appears only when you set **Serial Port** to **[Enabled]**.

COM2 Control

Allows you to select COM2 mode.

Configuration options: [RS232] [RS422] [RS485]

Serial Port 3 Configuration

This item allows you to set parameters of Serial Port 3 (COMC).

Serial Port

Allows you to enable or disable the serial port (COM).

Configuration options: [Disabled] [Enabled]

Serial Port 4 Configuration

This item allows you to set parameters of Serial Port 4 (COMD).

Serial Port

Allows you to enable or disable the serial port (COM).

Configuration options: [Disabled] [Enabled]

Serial Port 5 Configuration

This item allows you to set parameters of Serial Port 5 (COME).

Serial Port

Allows you to enable or disable the serial port (COM).

Configuration options: [Disabled] [Enabled]

Serial Port 6 Configuration

This item allows you to set parameters of Serial Port 5 (COMF).

Serial Port

Allows you to enable or disable the serial port (COM).

Configuration options: [Disabled] [Enabled]

3.3.10 Serial Console Redirection

COM1(~6)

Console Redirection

Allows you enable or disable the console redirection feature.

Configuration options: [Enabled] [Disabled]



The following item is accessible when you set **Console Redirection** to **[Enabled]**.

Console Redirection Settings

The settings specify how the host computer and the remote computer (which the user is using) will exchange data. Both computers should have the same or compatible settings.

Terminal Type

[VT100]	ASCII char set.
[VT100Plus]	Extends VT100 to support color, function keys, etc.
[VT-UTF8]	Uses UTF8 encoding to map Unicode chars onto 1 or more bytes.
[ANSI]	Extended ASCII char set.

Bits per second

Allows you to select serial port transmission speed. The speed must be matched on the other side. Long or noisy lines may require lower speeds.
Configuration options: [9600] [19200] [38400] [57600] [115200]

Data Bits

Configuration options: [7] [8]

Parity

A parity bit can be sent with the data bits to detect some transmission errors.

[None]	Disables parity check.
[Even]	Parity bit is 0 if the num of 1's in the data bits is even.
[Odd]	Parity bit is 0 if the num of 1's in the data bits is odd.
[Mark]	Parity bit is always 1.
[Space]	Parity bit is always 0.



Mark and Space Parity do not allow for error detection.

Stop Bits

Stop bits indicate the end of a serial data packet. The standard setting is 1 stop bit. Communication with slow devices may require more than 1 stop bit.
Configuration options: [1] [2]

Flow Control

Flow control can prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a "stop" signal can be sent to stop the data flow. Once the buffers are empty, a "start" signal can be sent to re-start the flow. Hardware flow control uses two wires to send start/stop signals.
Configuration options: [None] [Hardware RTS/CTS]

VT-UTF8 Combo Key Support

Allows you to enable or disable VT-UTF8 Combination Key Support for ANSI/VT100 terminals.
Configuration options: [Disabled] [Enabled]

Recorder Mode

With this mode enabled only text will be sent. This is to capture Terminal data.
Configuration options: [Disabled] [Enabled]

Resolution 100x31

Allows you to enable or disable extended terminal resolution.
Configuration options: [Disabled] [Enabled]

Putty KeyPad

Allows you to select FunctionKey and KeyPad on Putty.

Configuration options: [VT100] [LINUX] [XTERMR6] [SCO] [ESCN] [VT400]

COM7(Pci Bus0, Dev0, Func0) (Disabled)



The following items can be configured only when AMT is provisioned.

Console Redirection

Terminal Type

[VT100]	ASCII char set.
[VT100Plus]	Extends VT100 to support color, function keys, etc.
[VT-UTF8]	Uses UTF8 encoding to map Unicode chars onto 1 or more bytes.
[ANSI]	Extended ASCII char set.

Bits per second

Allows you to select serial port transmission speed. The speed must be matched on the other side. Long or noisy lines may require lower speeds.

Configuration options: [9600] [19200] [38400] [57600] [115200]

Data Bits

Configuration options: [7] [8]

Parity

A parity bit can be sent with the data bits to detect some transmission errors.

[None]	Disables parity check.
[Even]	Parity bit is 0 if the num of 1's in the data bits is even.
[Odd]	Parity bit is 0 if the num of 1's in the data bits is odd.
[Mark]	Parity bit is always 1.
[Space]	Parity bit is always 0.



Mark and Space Parity do not allow for error detection.

Stop Bits

Stop bits indicate the end of a serial data packet. The standard setting is 1 stop bit.

Communication with slow devices may require more than 1 stop bit.

Configuration options: [1] [2]

Flow Control

Flow control can prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a "stop" signal can be sent to stop the data flow. Once the buffers are empty, a "start" signal can be sent to re-start the flow. Hardware flow control uses two wires to send start/stop signals.

Configuration options: [None] [Hardware RTS/CTS]

VT-UTF8 Combo Key Support

Allows you to enable or disable VT-UTF8 Combination Key Support for ANSI/VT100 terminals.

Configuration options: [Disabled] [Enabled]

Recorder Mode

With this mode enabled only text will be sent. This is to capture Terminal data.
Configuration options: [Disabled] [Enabled]

Resolution 100x31

Allows you to enable or disable extended terminal resolution.
Configuration options: [Disabled] [Enabled]

Putty KeyPad

Allows you to select FunctionKey and KeyPad on Putty.
Configuration options: [VT100] [LINUX] [XTERM6] [SCO] [ESCN] [VT400]

3.3.11 SATA Configuration

This item allows you to configure SATA device options settings.

SATA Controller(s)

Allows you to enable or disable the onboard SATA device.
Configuration options: [Disabled] [Enabled]



The following item appears only when you set **SATA Controller(s)** to **[Enabled]**.

SATA Mode Selection

Allows you to determine how SATA controller(s) operate.
Configuration options: [AHCI]

SATA6G_1(~7)

Allows you to enable or disable SATA Port.
Configuration options: [Disabled] [Enabled]

M.2

Configuration options: [Disabled] [Enabled]

3.3.12 VMD setup menu

Enable VMD controller

This item allows you to disable or enable VMD controller.
Configuration options: [Disabled] [Enabled]

3.3.13 Network Stack Configuration

Network Stack

This item allows you to disable or enable the UEFI Network Stack.
Configuration options: [Disabled] [Enabled]



The following items appear only when you set **Network Stack** to **[Enabled]**.

IPv4 PXE Support

Allows you to enable or disable IPv4 PXE boot support. If disabled, IPv4 PXE boot support will be unavailable.

Configuration options: [Disabled] [Enabled]

IPv6 PXE Support

Allows you to enable or disable IPv6 PXE boot support. If disabled, IPv6 PXE boot support will be unavailable.

Configuration options: [Disabled] [Enabled]

3.3.14 USB Configuration

XHCI Hand-off

This item functions as a workaround for OSES without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.

Configuration options: [Enabled] [Disabled]

USB Mass Storage Driver Support

Allows you to enable or disable USB Mass Storage Driver Support.

Configuration options: [Disabled] [Enabled]

LAN1_U32G2_1

Allows you to enable or disable USB port. Once set to **[Disabled]**, any USB devices plugged into the connector will not be detected by BIOS or OS.

Configuration options: [Disabled] [Enabled]

U32G2_C2

Allows you to enable or disable USB port. Once set to **[Disabled]**, any USB devices plugged into the connector will not be detected by BIOS or OS.

Configuration options: [Disabled] [Enabled]

LAN2_U32G2_3

Allows you to enable or disable USB port. Once set to **[Disabled]**, any USB devices plugged into the connector will not be detected by BIOS or OS.

Configuration options: [Disabled] [Enabled]

LAN2_U32G2_4

Allows you to enable or disable USB port. Once set to **[Disabled]**, any USB devices plugged into the connector will not be detected by BIOS or OS.

Configuration options: [Disabled] [Enabled]

U32G1_5

Allows you to enable or disable USB port. Once set to **[Disabled]**, any USB devices plugged into the connector will not be detected by BIOS or OS.

Configuration options: [Disabled] [Enabled]

U32G1_6

Allows you to enable or disable USB port. Once set to **[Disabled]**, any USB devices plugged into the connector will not be detected by BIOS or OS.

Configuration options: [Disabled] [Enabled]

U32G1_7

Allows you to enable or disable USB port. Once set to **[Disabled]**, any USB devices plugged into the connector will not be detected by BIOS or OS.

Configuration options: [Disabled] [Enabled]

U32G1_8

Allows you to enable or disable USB port. Once set to **[Disabled]**, any USB devices plugged into the connector will not be detected by BIOS or OS.

Configuration options: [Disabled] [Enabled]

U32G1_9

Allows you to enable or disable USB port. Once set to **[Disabled]**, any USB devices plugged into the connector will not be detected by BIOS or OS.

Configuration options: [Disabled] [Enabled]

U32G1_10

Allows you to enable or disable USB port. Once set to **[Disabled]**, any USB devices plugged into the connector will not be detected by BIOS or OS.

Configuration options: [Disabled] [Enabled]

3.3.15 NVMe Configuration

The NVMe Configuration menu displays the NVMe controller and drive information of the devices connected and allows you to configure NVMe device options settings.

3.3.16 Onboard Devices Configuration

HD Audio

Allows you to control detection of the HD-Audio device.

[Enabled] Enables the HD Audio Device unconditionally.

[Disabled] Disables the HD Audio Device unconditionally.

LAN1 I226LM

Configuration options: [Disabled] [Enabled]

LAN2 I226V

Configuration options: [Disabled] [Enabled]

LAN3 I210

Configuration options: [Disabled] [Enabled]

LAN4 I226V

Configuration options: [Disabled] [Enabled]

I2C0 Controller

If given device is Function 0 PSF disabling is skipped. PSF default will remain and device PCI CFG Space will still be visible. This is needed to allow PCI enumerator access functions above 0 in a multifunction device. The following devices depend on each other: I2C0 and I2C1, 2, 3; UART0 and UART1, SPI0, 1; UART2 and I2C4, 5. UART 0 (00:30:00) cannot be disabled when: 1. Child device is enabled like CNVi Bluetooth (_SB.PC00.UA00.BTH0). UART 0 (00:30:00) cannot be enabled when: 1. I2S Audio codec is enabled (_SB.PC00.I2C0.HDAC).
Configuration options: [Disabled] [Enabled]

CPU PCIEX16 switch function

Configuration options: [2x8] [1x16] [AUTO]

3.3.17 APM Configuration

This item allows you to configure APM (Advanced Power Management) settings.

Restore AC Power Loss

Allows you to select AC power state when power is re-applied after a power failure.
Configuration options: [S5 State] [S0 State]

Power On By PCIe/PCI

Allows you to enable or disable the Wake-on-LAN function of the onboard LAN controller or other installed PCIe LAN cards.
Configuration options: [Disabled] [Enabled]

Power On By Ring

Configuration options: [Disabled] [Enabled]

Power On By RTC

Configuration options: [Disabled] [Single event] [Daily event] [Weekly event] [Monthly event]



The following items appear when you set **Power On By RTC** to **[Single event]** or **[Daily event]**.

Wake up hour

Allows you to enter a natural number within 0-23 for hour. For example, enter 3 for 3:00 am and 15 for 3:00 pm.

Wake up minute

Allows you to enter a natural number within 0-59 for minute.

Wake up second

Allows you to enter a natural number within 0-59 for second.



The following items appear when you set **Power On By RTC** to **[Weekly event]**.

Alarm day of Week

Allows you to select the day of the week when the system is to wake up.

Configuration options: [Sunday] [Monday] [Tuesday] [Wednesday] [Thursday] [Friday] [Saturday]

Wake up hour

Allows you to enter a natural number within 0-23 for hour. For example, enter 3 for 3:00 am and 15 for 3:00 pm.

Wake up minute

Allows you to enter a natural number within 0-59 for minute.

Wake up second

Allows you to enter a natural number within 0-59 for second.



The following items appear when you set **Power On By RTC** to **[Monthly event]**.

Day of the Month

Allows you to select the day of the month when the system is to wake up.

Wake up hour

Allows you to enter a natural number within 0-23 for hour. For example, enter 3 for 3:00 am and 15 for 3:00 pm.

Wake up minute

Allows you to enter a natural number within 0-59 for minute.

Wake up second

Allows you to enter a natural number within 0-59 for second.

3.3.18 EZ-Flash

This item allows you to enter EZ-Flash mode. After you press <Enter>, a confirmation message appears. Use the left/right arrow key to select between **[Yes]** or **[No]**, then press <Enter> to confirm your choice.

3.3.19 IO Expander Configuration

IO Expander GPIO 0(~7)

Direction

Allows you to select the direction of this GPIO.

Configuration options: [Output] [Input]



The following item appears when you set **Direction** to **[Output]**.

Output Value

Allows you to set the Output Value of this GPIO.

Configuration options: [Low] [High]

3.3.20 Watchdog Timer

Watchdog Support

Configuration options: [Disabled] [Enable WDT Mode] [Enable AUTO Retry Mode]



The following items appear when you set **Watchdog Support** to **[Enable WDT MODE]** or **[Enable AUTO Retry Mode]**.

Watchdog Count mode

Allows you to select Watchdog Timer I count mode.

Configuration options: [Second Mode] [Minute Mode]

Watchdog Timer

Allows you to set the Watchdog Timer I Time-out value.

3.4 Hardware Monitor menu

The Hardware Monitor menu displays the system temperatures, fan and power status, and allows you to configure the smart fan.

Smart Fan Mode

Allows you to select the Smart Fan mode.

Configuration options: [Disabled] [Normal] [Manual Mode]



The following items appear only when you set **Smart Fan Mode** to **[Manual Mode]**.

Smart Fan Function

Chassis Fan 1 Setting

Chassis Fan Temperature 1(~4)

Allows you to set the value of temperature1(~4).

Chassis Fan FD/RPM 1(~4)

Allows you to set the value of Fan Duty/PRM 1(~4) when temperature is T1(~4).

Chassis Fan 2 Setting

Chassis Fan2 Temperature 1(~4)

Allows you to set the value of temperature1(~4).

Chassis Fan2 FD/RPM 1(~4)

Allows you to set the value of Fan Duty/PRM 1(~4) when temperature is T1(~4).

Chassis Fan 3 Setting

Chassis Fan3 Temperature 1(~4)

Allows you to set the value of temperature1(~4).

Chassis Fan3 FD/RPM 1(~4)

Allows you to set the value of Fan Duty/PRM 1(~4) when temperature is T1(~4).

CPU Fan Setting / CPU OPT Fan Setting

CPU Fan Temperature 1(~4) / CPU OPT Fan Temperature 1(~4)

Allows you to set the value of temperature1(~4).

CPU Fan FD/RPM 1(~4) / CPU OPT Fan FD/RPM 1(~4)

Allows you to set the value of Fan Duty/PRM 1(~4) when temperature is T1(~4).

3.5 Security menu

The Security menu allows a new password to be created or a current password to be changed. The menu also enables or disables the Secure Boot state and lets the user configure the System Mode state.

3.5.1 Administrator Password

If you have set an administrator password, we recommend that you enter the administrator password for accessing the system.

To set an administrator password:

1. Select the **Administrator Password** item and press <Enter>.
2. From the **Create New Password** box, key in a password, then press <Enter>.

To change an administrator password:

1. Select the **Administrator Password** item and press <Enter>.
2. From the **Enter Current Password** box, key in the current password, then press <Enter>.
3. From the **Create New Password** box, key in a new password, then press <Enter>.
4. Confirm the password when prompted.



To clear the administrator password, follow the same steps as in changing an administrator password, but press <Enter> when prompted to create/confirm the password.

3.5.2 User Password

If you have set a user password, you must enter the user password for accessing the system.

To set a user password:

1. Select the **User Password** item and press <Enter>.
2. From the **Create New Password** box, key in a password, then press <Enter>.
3. Confirm the password when prompted.

To change a user password:

1. Select the **User Password** item and press <Enter>.
2. From the **Enter Current Password** box, key in the current password, then press <Enter>.
3. From the **Create New Password** box, key in a new password, then press <Enter>.
4. Confirm the password when prompted.

To clear a user password:

1. Select the **Clear User Password** item and press <Enter>.
2. Select **Yes** from the Warning message window then press <Enter>.

3.5.3 Secure Boot

Secure Boot feature is active when Secure Boot is set to [Enabled], Platform Key (PK) is enrolled and the system is running in User mode. Changing the mode requires platform reset.

Configuration options: [Disabled] [Enabled]

Secure Boot Mode

Allows you to select Secure Boot Mode. When set to [Custom], Secure Boot Policy variables can be configured by a physically present user without full authentication.

Configuration options: [Standard] [Custom]

Key Management

Allows you to modify Secure Boot Policy variables without full authentication.

Platform Key (PK)

Configuration options: [Details] [Export] [Update] [Delete]

Key Exchange Keys / Authorized Signatures / Forbidden Signatures

Configuration options: [Details] [Export] [Update] [Append] [Delete]

3.6 Boot menu

The items in the Boot menu allow you to change the system boot options.

Boot Configuration

CHASSIS INTRUDE

Allows you to enable or disable CHASSIS INTRUDE. Configuration options:
[Disabled] [Enabled]

Setup Prompt Timeout

Allows you to set the number of seconds to wait for setup activation key.
65535(0xFFFF) means indefinite waiting.

Bootup NumLock State

Allows you to select the keyboard NumLock state.
Configuration options: [On] [Off]

Quiet Boot

Configuration options: [Disabled] [Enabled]

Fast Boot

Allows you to enable or disable boot with initialization of a minimal set of devices required to launch active boot option. This has no effect for BBS boot options.
[Enabled] Select to accelerate the boot speed.
[Disabled] Select to go back to normal boot speed.

FIXED BOOT ORDER Priorities

Boot Option #1(~6)

Allows you to set the system boot order.
Configuration options: [Hard Disk] [NVME] [CD/DVD] [SD] [USB Device] [Network]
[Disabled]

3.7 Exit menu

The items in the Exit menu allow you to save or discard your changes to the BIOS items.

Save Changes and Exit

Allows you to exit the system setup program after saving the changes.

Discard Changes and Exit

Allows you to exit the system setup program without saving the changes you made. When you select this option or if you press <Esc>, a confirmation window appears. Select **Yes** to discard changes and exit.

Save Changes and Reset

Allows you to reset the system setup after saving the changes.

Discard Changes and Reset

Allows you to reset the system setup without saving the changes you made.

Save Options

Save Changes

Allows you to save changes done so far to any of the setup options.

Discard Changes

Allows you to discard changes done so far to any of the setup options.

Restore Defaults

Allows you to restore or load default values for all the setup options.

Save as User Defaults

Allows you to save the changes done so far as User Defaults.

Restore User Defaults

Allows you to restore the User Defaults to all the setup options.

Appendix

Notices

FCC Compliance Information

Responsible Party: Asus Computer International
Address: 48720 Kato Rd., Fremont, CA 94538, USA
Phone / Fax No: (510)739-3777 / (510)608-4555

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

HDMI Trademark Notice

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Compliance Statement of Innovation, Science and Economic Development Canada (ISED)

This device complies with Innovation, Science and Economic Development Canada licence exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES (B)/NMB (B)

Déclaration de conformité de Innovation, Sciences et Développement économique Canada (ISED)

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

CAN ICES (B)/NMB (B)

VCCI: Japan Compliance Statement

Class B ITE

この装置は、クラス B 情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

V C C I - B

KC: Korea Warning Statement

B급 기기 (가정용 방송통신기자재)

이 기기는 가정용(B급) 전자파적합기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.

ASUS Recycling/Takeback Services

ASUS recycling and takeback programs come from our commitment to the highest standards for protecting our environment. We believe in providing solutions for you to be able to responsibly recycle our products, batteries, other components as well as the packaging materials. Please go to <https://esg.asus.com/en/Takeback.htm> for detailed recycling information in different regions.

REACH

Complying with the REACH (Registration, Evaluation, Authorisation, and Restriction of Chemicals) regulatory framework, we published the chemical substances in our products at ASUS REACH website at <https://esg.asus.com/Compliance.htm>.



DO NOT throw the motherboard in municipal waste. This product has been designed to enable proper reuse of parts and recycling. This symbol of the crossed out wheeled bin indicates that the product (electrical and electronic equipment) should not be placed in municipal waste. Check local regulations for disposal of electronic products.



DO NOT throw the mercury-containing button cell battery in municipal waste. This symbol of the crossed out wheeled bin indicates that the battery should not be placed in municipal waste.

Safety Precautions

Accessories that came with this product have been designed and verified for the use in connection with this product. Never use accessories for other products to prevent the risk of electric shock or fire.

安全上のご注意

付属品は当該専用品です。他の機器には使用しないでください。機器の破損もしくは、火災や感電の原因となることがあります。

English ASUSTeK Computer Inc. hereby declares that this device is in compliance with the essential requirements and other relevant provisions of related Directives. Full text of EU declaration of conformity is available at: www.asus.com/support

Français AsusTek Computer Inc. déclare par la présente que cet appareil est conforme aux critères essentiels et autres clauses pertinentes des directives concernées. La déclaration de conformité de l'UE peut être téléchargée à partir du site Internet suivant : www.asus.com/support

Deutsch ASUSTeK Computer Inc. erklärt hiermit, dass dieses Gerät mit den wesentlichen Anforderungen und anderen relevanten Bestimmungen der zugehörigen Richtlinien übereinstimmt. Der gesamte Text der EU-Konformitätserklärung ist verfügbar unter: www.asus.com/support

Italiano ASUSTeK Computer Inc. con la presente dichiara che questo dispositivo è conforme ai requisiti essenziali e alle altre disposizioni pertinenti con le direttive correlate. Il testo completo della dichiarazione di conformità UE è disponibile all'indirizzo: www.asus.com/support

Русский Компания ASUS заявляет, что это устройство соответствует основным требованиям и другим соответствующим условиям соответствующих директив. Подробную информацию, пожалуйста, смотрите на www.asus.com/support

Български С настоящото ASUSTeK Computer Inc. декларира, че това устройство е в съответствие със съществените изисквания и другите приложими постановления на свързаните директиви. Пълният текст на декларацията за съответствие на ЕС е достъпен на адрес: www.asus.com/support

Hrvatski ASUSTeK Computer Inc. ovim izjavljuje da je ovaj uređaj sukladan s bitnim zahtjevima i ostalim odgovarajućim odredbama vezanih direktiva. Cijeli tekst EU izjave o sukladnosti dostupan je na: www.asus.com/support

Čeština Společnost ASUSTeK Computer Inc. tímto prohlašuje, že toto zařízení splňuje základní požadavky a další příslušná ustanovení souvisejících směrnic. Plné znění prohlášení o shodě EU je k dispozici na adrese: www.asus.com/support

Dansk ASUSTeK Computer Inc. erklærer hermed, at denne enhed er i overensstemmelse med hovedkravene og andre relevante bestemmelser i de relaterede direktiver. Hele EU-overensstemmelseserklæringen kan findes på: www.asus.com/support

Nederlands ASUSTeK Computer Inc. verklaart hierbij dat dit apparaat voldoet aan de essentiële vereisten en andere relevante bepalingen van de verwante richtlijnen. De volledige tekst van de EU-verklaring van conformiteit is beschikbaar op: www.asus.com/support

Eesti Käesolevaga kinnitab ASUSTeK Computer Inc, et see seade vastab asjakohaste direktiivide oluliste nõuetele ja teistele asjassepuutuvatele sätetele. EL vastavusdeklaratsiooni täielik tekst on saadaval järgmisel aadressil: www.asus.com/support

Suomi ASUSTeK Computer Inc. ilmoittaa täten, että tämä laite on asiaankuuluvien direktiivien olennaisien vaatimusten ja muiden tätä koskevien säädösten mukainen. EU-yhdenmukaisuusilmoituksen koko teksti on luettavissa osoitteessa: www.asus.com/support

Ελληνικά Με το παρόν, η Asu\$Tek Computer Inc. δηλώνει ότι αυτή η συσκευή συμμορφώνεται με τις θεμελιώδεις απαιτήσεις και άλλες σχετικές διατάξεις των Οδηγιών της ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης είναι διαθέσιμο στη διεύθυνση: www.asus.com/support

Magyar Az ASUSTeK Computer Inc. ezennel kijelenti, hogy ez az eszköz megfelel a kapcsolódó irányelvek lényeges követelményeinek és egyéb vonatkozó rendelkezéseinek. Az EU megfelelőségi nyilatkozat teljes szövege innen letölthető: www.asus.com/support

Latviski ASUSTeK Computer Inc. ar šo paziņo, ka šī ierīce atbilst saistošo Direktīvu būtiskajām prasībām un citiem citiem saistošajiem nosacījumiem. Pilns ES atbilstības paziņojuma teksts pieejams šeit: www.asus.com/support

Lietuviai „ASUSTeK Computer Inc.“ šiuo tvirtina, kad šis įrenginys atitinka pagrindinius reikalavimus ir kitas svarbias susijusių direktyvų nuostatas. Visą ES atitikties deklaracijos tekstą galima rasti: www.asus.com/support

Norsk ASUSTeK Computer Inc. erklærer herved at denne enheten er i samsvar med hovedsaklige krav og andre relevante forskrifter i relaterte direktiver. Fullstendig tekst for EU-samsvarserklæringen finnes på: www.asus.com/support

Polski Firma ASUSTeK Computer Inc. niniejszym oświadcza, że urządzenie to jest zgodne z zasadniczymi wymogami i innymi właściwymi postanowieniami powiązanych dyrektyw. Pełny tekst deklaracji zgodności UE jest dostępny pod adresem: www.asus.com/support

Português A ASUSTeK Computer Inc. declara que este dispositivo está em conformidade com os requisitos essenciais e outras disposições relevantes das Diretivas relacionadas. Texto integral da declaração da UE disponível em: www.asus.com/support

Română ASUSTeK Computer Inc. declară că acest dispozitiv se conformează cerințelor esențiale și altor prevederi relevante ale directivelor conexe. Textul complet al declarației de conformitate a Uniunii Europene se găsește la: www.asus.com/support

Srpski ASUSTeK Computer Inc. ovim izjavljuje da je ovaj uređaj u saglasnosti sa osnovnim zahtevima i drugim relevantnim odredbama povezanih Direktiva. Pun tekst EU deklaracije o usaglašenosti je dostupan na adresi: www.asus.com/support

Slovensky Spoločnosť ASUSTeK Computer Inc. týmto vyhlasuje, že toto zariadenie vyhovuje základným požiadavkám a ostatným príslušným ustanoveniam príslušných smerníc. Celý text vyhlásenia o zhode pre štáty EÚ je dostupný na adrese: www.asus.com/support

Slovenščina ASUSTeK Computer Inc. izjavlja, da je ta naprava skladna z bistvenimi zahtevami in drugimi ustreznimi določbami povezanih direktiv. Celotno besedilo EU-izjave o skladnosti je na voljo na spletnem mestu: www.asus.com/support

Español Por la presente, ASUSTeK Computer Inc. declara que este dispositivo cumple los requisitos básicos y otras disposiciones pertinentes de las directivas relacionadas. El texto completo de la declaración de la UE de conformidad está disponible en: www.asus.com/support

Svenska ASUSTeK Computer Inc. förklarar härmed att denna enhet överensstämmer med de grundläggande kraven och andra relevanta föreskrifter i relaterade direktiv. Fulltext av EU-försäkran om överensstämmelse finns på: www.asus.com/support

Українська ASUSTeK Computer Inc. заявляє, що цей пристрій відповідає основним вимогам та іншим відповідним положенням відповідних Директив. Повний текст декларації відповідності стандартам ЄС доступний на: www.asus.com/support

Türkçe Asu\$Tek Computer Inc., bu aygıtın temel gereksinimlerle ve ilişkili Yönergelerin diğer ilgili koşullarıyla uyumlu olduğunu beyan eder. AB uyumluk bildiriminin tam metni şu adreste bulunabilir: www.asus.com/support

Bosanski ASUSTeK Computer Inc. ovim izjavljuje da je ovaj uređaj uskladan sa bitnim zahtjevima i ostalim odgovarajućim odredbama vezanih direktiva. Cijeli tekst EU izjave o uskladenosti dostupan je na: www.asus.com/support

Service and Support

Visit our multi-language website at <https://www.asus.com/support/>



Manufacturer	ASUSTek COMPUTER INC.
Address, City	1F., No. 15, Lide Rd., Beitou Dist., Taipei City 112
Authorized Representative in Europe	ASUS COMPUTER GmbH
Address	Harkortstrasse 21-23, 40880 Ratingen
Country	Germany
Authorized Representative in United Kingdom	ASUSTEK (UK) LIMITED
Address	1st Floor, Sackville House, 143-149 Fenchurch Street, London, EC3M 6BL, England
Country	United Kingdom