

EPSON Stylus® C82WN

Setup and Installation

Copyright Notice

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of SEIKO EPSON CORPORATION. The information contained herein is designed only for use with this EPSON printer. EPSON is not responsible for any use of this information as applied to other printers.

Neither SEIKO EPSON CORPORATION nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with SEIKO EPSON CORPORATION's operating and maintenance instructions.

SEIKO EPSON CORPORATION shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original EPSON Products or EPSON Approved Products by SEIKO EPSON CORPORATION.

A Note Concerning Responsible Use of Copyrighted Materials

Ink jet printers, like photocopiers, digital cameras, and scanners, can be misused by improper copying and reprinting of copyrighted material. While some countries' laws permit limited copying of copyrighted material in certain circumstances, those circumstances may not be as broad as some people assume. EPSON encourages each user to be responsible and respectful of the copyright laws when using digital cameras, scanners, and ink jet printers.

Trademarks

EPSON and EPSON Stylus are registered trademarks of SEIKO EPSON CORPORATION.

EPSON Connection, EPSON Store, and SoundAdvice are service marks, and DuraBrite and EPSON Software are trademarks of Epson America, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. EPSON disclaims any and all rights in those marks.

The ENERGY STAR emblem does not represent EPA endorsement of any product or service.



Printed on recycled paper

Contents

INTRODUCTION	1
Wireless Printing	2
Windows System Requirements	4
Macintosh System Requirements	5
Where to Get Information	6
SETTING UP YOUR PRINTER	7
Unpacking the Printer	8
Installing the Ink Cartridges	9
Loading Paper	11
Running a Printer Check	11
CONFIGURING WIRELESS PRINTING FOR WINDOWS	13
Preparing to Install	14
Installing the C82WN Software	15
Installing the Printer Driver and Status Monitor	16
Installing the EpsonNet Wireless Print Server and WP-Admin Utility	17
Setting Up the Print Server	18
Connecting the Print Server	18
Configuring the Print Server	20
Completing the Installation	23
Setting Up a Network Port	25
Setting Up a Network Port on Windows XP or 2000	25
Setting Up a Network Port on Windows Me, 98, or 95	27
Setting Up a Network Port on Windows NT	29
Setting Up Additional Computers	30

CONFIGURING WIRELESS PRINTING FOR MACINTOSH	31
Preparing to Install	32
Installing the C82WN Software	33
Installing the Printer Software on Mac OS X	34
Installing the Printer Software on Mac OS 8.6 to 9.x	35
Installing the EpsonNet Wireless Print Server and WP-Admin Utility	36
Setting Up the Print Server	37
Connecting the Print Server	37
Configuring the Print Server	39
Adding the Printer to the Mac OS X Print Center	41
Selecting the Printer on Mac OS 8.6 to 9.x	42
Setting Up Additional Macintosh Computers	42
SOLVING WIRELESS PRINTING PROBLEMS	43
Problems and Solutions	44
Uninstalling the Software	50
Windows	50
Macintosh OS X	51
Macintosh OS 8.6 to 9.x	51
Where To Get Help	52
APPENDIX A: CONFIGURATION SETTINGS	53
APPENDIX B: SPECIFICATIONS AND NOTICES	59
Print Server Specifications	59
Epson America, Inc. Limited Warranty	60
FCC Compliance Statement	62
INDEX	63

Introduction


Your EPSON Stylus® C82WN printer combines all the features of EPSON's exclusive ink jet technology—extremely fast print speeds, ultra-sharp text, vibrant colors, and long-lasting DuraBrite™ ink—with a wireless print server.

- You can print from any computer on your existing network, if the network includes a wireless access point.
- Even without an existing network, you can print from any wireless-equipped Windows® PC or laptop, Macintosh®, Apple® iBook,™ or PowerBook®, from distances up to 120 feet.

The EpsonNet 802.11b Wireless Print Server included with the printer is compatible with most wireless adapters and access points that comply with the WiFi™ (Wireless Fidelity) standard. This book provides all the instructions you'll need for setting up the printer, installing the software, and configuring your system for wireless printing.

Wireless Printing

The EPSON Stylus C82WN is designed for use in a small office, home, or school network. On a wired network like the one illustrated below, the computers and other equipment share information through a series of cables.

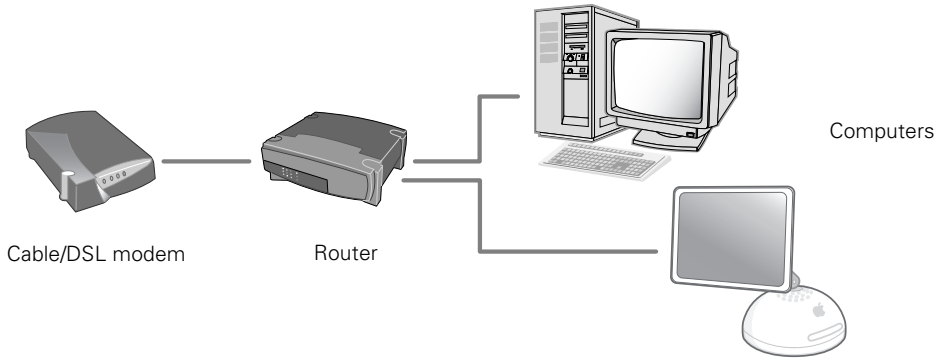


With a wireless network, you share information between computers and printers using radio waves, similar to the technology used in cordless phones. You can place the EPSON Stylus C82WN in a convenient location and print to it without having to connect it to your computer or network.


You can add the EPSON Stylus C82WN to your network either with or without a wireless access point (or AirPort™ Base Station).

If you have an access point/base station, both wired and wireless-equipped computers can print to the printer. An access point might also allow computers to share other resources, such as Internet access.

The illustration below shows a wireless network that uses an access point.

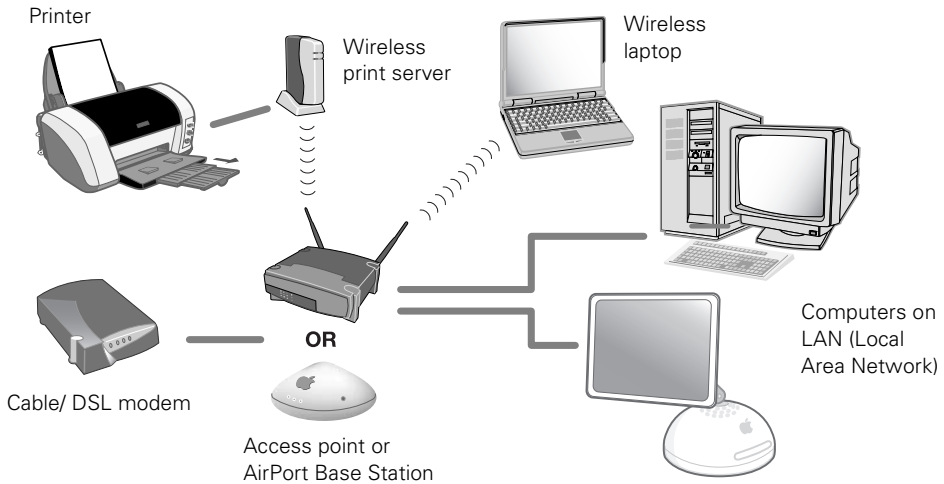

If you don't have an access point, you can still print to the EPSON Stylus C82WN from any desktop computer or laptop that has a wireless adapter. In the illustration below, both wireless-equipped computers communicate directly with the print server.

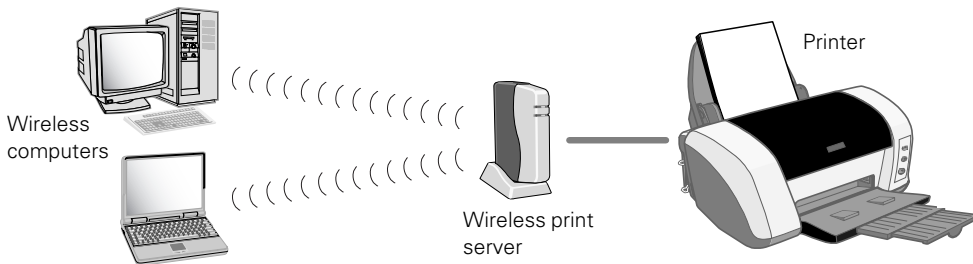

Before you can set up your EPSON Stylus C82WN, you need to decide how you will use it: either with an access point (in *infrastructure mode*), or without an access point (in *ad hoc mode*, also called ad hoc 802.11b, computer-to-computer, and peer-to-peer).

Windows System Requirements

For wireless printing with the EPSON Stylus C82WN, make sure each computer meets the following requirements:

- A Microsoft® Windows compatible PC or laptop with a Pentium®-equivalent processor, 333 MHz or faster recommended
- Windows 95, Windows 98, Windows Me, Windows NT® 4.0, Windows 2000, or Windows XP
- 64MB of RAM (128MB recommended)
- 100MB of free hard disk space (200MB or more recommended)
- VGA or better display adapter and monitor (SVGA for Windows XP)
- CD-ROM or DVD drive for installing the printer software

In addition, each computer needs to be connected to an existing wired network that has a wireless access point, or needs to have a wireless adapter installed.

- An access point may be combined with a hub or router or may be a separate unit. For a current list of supported access points, see EPSON's web site at: <http://support.epson.com>.
- Wireless adapters can be installed in a PCMCIA slot on a laptop, a PCI slot in a desktop computer, or connected through a USB port.

Make sure your wireless adapter(s) work in ad hoc mode if you want to print without an access point. For a list of supported adapters, see EPSON's web site at: <http://support.epson.com>.

Macintosh System Requirements

For wireless printing with the EPSON Stylus C82WN, make sure each Macintosh meets the following requirements:

- An Apple iBook, iMac,[™] PowerBook G3 or G4, Power Mac G4 Cube, or Power Mac G3 or G4
- Mac[®] OS 8.6 through 9.x; OS X 10.1 or later (Mac OS 9.1 or later recommended)
- For Mac OS 8.6 through 9.x: 32MB of available RAM (64MB recommended)
For Mac OS X: 128MB RAM (256MB recommended)
- 100MB of free hard disk space (200MB recommended)
- VGA display or better
- CD-ROM or DVD drive for installing the printer software

In addition, each computer either needs to have a wireless adapter installed, or needs to be connected to an existing wired network that has a wireless access point or AirPort Base Station.

Note: If you are using AirPort, EPSON recommends that you use the print server with an access point or AirPort Base Station. With AirPort, your print server works more reliably in infrastructure mode.

- Make sure the access point supports AppleTalk[®]. For a list of supported access points, see EPSON's web site at: <http://support.epson.com>.
- For computers not connected to a wired network, you need an AirPort card or Macintosh-compatible wireless adapter. Make sure your card or adapter works in ad hoc mode if you want to print without an access point. For a list of supported adapters, see EPSON's web site at: <http://support.epson.com>.
- If you are using an AirPort card or the AirPort Base Station, use AirPort software version 2.04 or later.

Where to Get Information

Use this booklet to set up and configure your EPSON Stylus C82WN for wireless network printing. Please follow these guidelines:

Warnings must be followed carefully to avoid bodily injury.

Cautions must be observed to avoid damage to your equipment.

Notes contain important information about your printer.

For additional information, check the following:

■ ***Start Here***

Fast-track instructions for setting up your printer and configuring your network for wireless printing.

■ ***Printer Basics***

Tells you how to print all types of documents and photos with Windows or on a Macintosh, maintain the printer, and solve basic problems.

■ ***Your on-screen EPSON Printer Information Center***

Gives you quick, on-screen access to information about your printer. It includes EPSON Print Show animated tutorials on loading special paper, replacing ink cartridges, and other tasks. It also includes your on-screen *Reference Guide* for additional information about your printer. See *Printer Basics* for instructions on viewing the Print Show animations and *Reference Guide*.

■ **On-screen software help**

If you need assistance as you use the printer software, click the **Help** button.

■ **<http://support.epson.com>**

You can receive technical advice through e-mail and access troubleshooting information, software updates, and new print server firmware. Information about configuring the print server for NetWare® environments and other network protocols is also available.

If you still need help after checking these sources, you can speak to a technical support representative or take advantage of EPSON's automated support services as described on page 52.

Setting Up Your Printer

This chapter describes how to unpack and set up your printer.

You can locate the printer and print server anywhere in your home or office. However, keep in mind that walls and ceilings will weaken the signal between your print server, computer(s), and access point, and that the print server must be within 120 feet of your other equipment.

Make sure you choose a location away from high temperatures, direct sunlight, humidity, and dust. Do not place the print server on a metal surface or near other devices that might cause interference, such as cordless phones operating at 2.4 GHz, microwave ovens, or Bluetooth™ devices.

Follow the instructions in these sections:

- Unpacking the printer
- Installing the ink cartridges
- Loading paper
- Running a printer check

Unpacking the Printer

Follow these steps to unpack the printer, remove the packaging material, and attach the paper support:

1. Take everything out of the box. Make sure you have all the items shown here:




Print server
power supply



Printer Basics



Printer software
CD-ROM

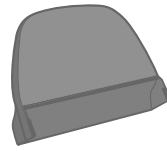

Paper support



Print server
base




Print
server



Parallel cable






Ink cartridges

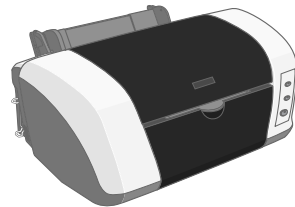

Printer

2. Remove all the tape and packing material from the printer, as shown.


Be sure to check inside and all around the printer for tape and other packing materials.

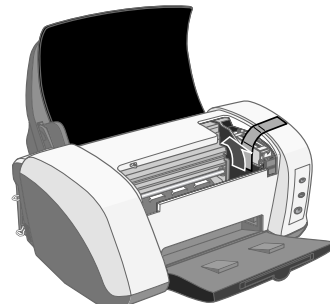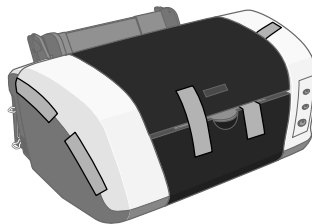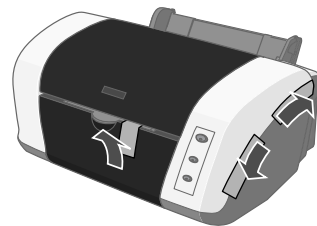

Caution: Make sure you follow all the Safety Instructions listed in the *Printer Basics* book.

3. Slide the paper support into the grooves on either side of the sheet feeder.

The paper support should fit securely.

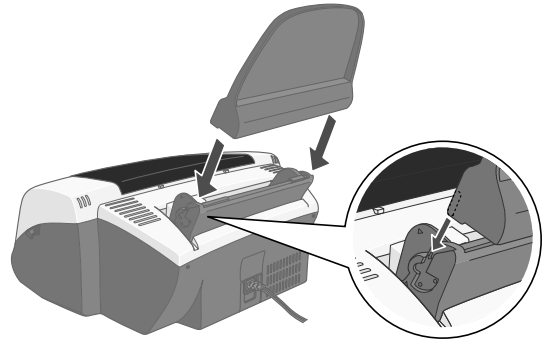


Installing the Ink Cartridges

Follow these steps to plug in the printer, turn it on, and install the ink cartridges:


1. Plug the printer's power cord into a grounded electrical outlet.
2. Press the  power button until the green power light comes on.

Caution: Always use the  power button to turn the printer on or off. Never use an external switch, such as a power strip switch or wall switch.

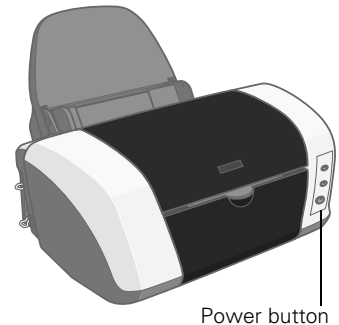


3. Lower the printer's output tray and open the cover.

Warning: Keep ink cartridges out of the reach of children. If ink gets on your skin, wash the area thoroughly with soap and water. If ink gets in your eyes, flush them immediately with water.

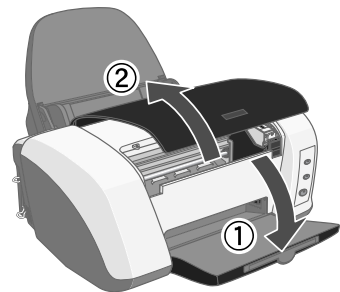

4. Shake the package of ink cartridges four or five times. Then remove the cartridges from the package. Don't shake them after removing the packaging.


Caution: Don't remove the cartridge labels, or ink may leak. Don't touch the green circuit boards on the back of the cartridges.

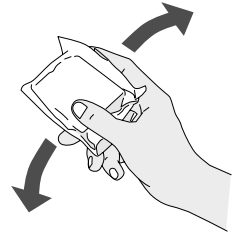

5. Lower each ink cartridge into its holder. The color of the cartridge label should match the marker on the holder.

Note: Install all four ink cartridges, and leave them installed for all types of printing, or the printer won't work.

6. Gently push each cartridge down until it is firmly seated.

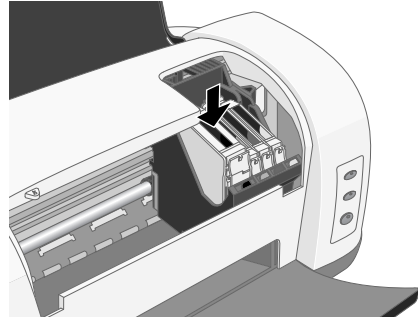


Tip: Press the "bull's-eye" on the cartridge label to make sure the cartridge is all the way down.

7. Press the Δ ink button and close the printer cover.

Ink charging takes about 90 seconds. You see the green Δ power light flash and hear the printer working. Don't turn off the printer during this process or you'll waste ink.

Caution: Never turn off the printer when the green Δ power light is flashing, unless the printer hasn't moved or made any noise for more than 5 minutes.

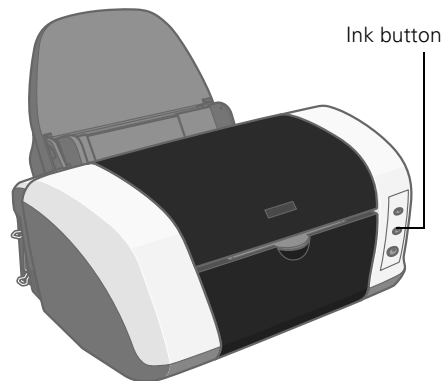


Loading Paper

1. Fan a few sheets of paper and place them against the right edge guide. Don't push the paper in.
2. Slide the left edge guide against the paper, but not too tightly.

Don't load paper above the arrow inside the edge guides.

Make sure the paper lies flat against the paper support.

3. Pull out the output tray extensions.

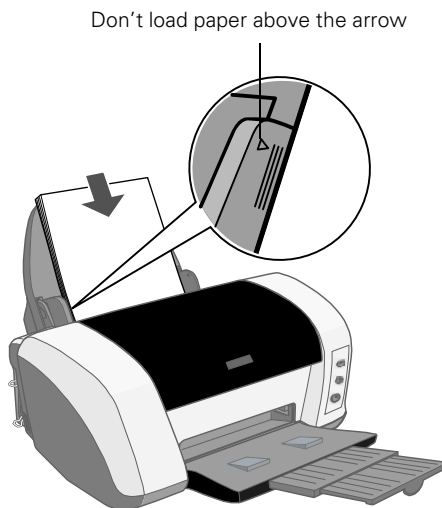

Running a Printer Check

Before you connect the printer, print a test page to make sure the printer is working properly. Make sure letter-size or larger paper is loaded in the printer.

1. Press the  power button to turn off the printer.
2. Hold down the  paper button as you press and release the  power button.
3. Continue holding down the  paper button until the  power light starts flashing, then release it.

The printer prints a sheet showing its ROM version number, ink counter, and a nozzle check pattern.

If the test page doesn't print, check for any red lights on the printer. See the "Problem Solving" chapter in the *Printer Basics* book for guidelines. If none of the solutions work, contact EPSON as described on page 52.

Once the printer is set up and has ink and paper, you're ready to install the software and connect the print server. See the next section for instructions.

Configuring Wireless Printing for Windows

This chapter explains how to install the software, set up the print server, and configure wireless printing in Windows. It also explains how to set up additional computers to use the printer on a wireless network.

Before you can install the print server, you need to make sure that your wireless network adapter(s) are installed and ready. If you have an existing network, you also need to verify that your access point is operating correctly and linked to your network adapters. If you need instructions, see the documentation or help files that came with your equipment.

Then follow the instructions in these sections:

- Preparing to install the printer and print server
- Installing the C82WN software
- Setting up and configuring the print server
- Setting up a network port
- Setting up additional computers

Preparing to Install

Make sure you do the following to prepare for installation:

- Follow the instructions beginning on page 7 to set up the printer, install ink cartridges, and load paper.
- If your computer has a wireless network interface, make sure the wireless mode is set to **Infrastructure** (if you are connecting to the printer through an access point), or **802.11b Ad Hoc** (if you are connecting without an access point). For instructions, see the documentation or online help for your wireless adapter.

Note: Do not select a pseudo ad hoc or proprietary ad hoc mode.

- Make sure you have selected the correct network name or SSID (Service Set Identifier).
- In Windows XP, check your Wireless Network Connection Properties and make sure your settings are correct.
- If you're using WEP (Wired Equivalent Privacy) encryption on your wireless network, you need to temporarily disable WEP on your computer. This allows you to connect to and configure the print server. Follow the instructions in your wireless adapter's documentation.

Be sure to write down the WEP key used on your network. After you configure the print server, you can enable WEP on your computer again.

Note: If your access point only allows WEP-enabled clients to connect to it, you may have to set your computer's wireless mode to 802.11b Ad Hoc before you configure the print server.

- If you're going to use the printer in ad hoc mode, note the IP address of your computer. (For instructions on viewing a computer's IP address, see page 54.)
- If your computer has a wireless network interface and you're using infrastructure mode, make sure there is a link with good signal strength (greater than 50 percent) between the computer and the access point. See your wireless adapter's documentation for details.

Installing the C82WN Software

Your printer CD-ROM includes the following software:

- **EPSON Stylus C82WN printer driver**

You must install the printer driver on every computer that uses the EPSON Stylus C82WN printer. This software controls print settings and provides several utilities for printer maintenance. For instructions on using your printer driver, see the *Printer Basics* book.

- **EPSON Status Monitor**

This program keeps track of the ink levels in the printer and notifies you when paper runs out or gets jammed.

- **WP-Admin**

This utility lets you configure the print server for your network. You only need to install it on one computer, and in most cases, it is the only configuration utility you need to install.

- **EpsonNet Direct Print**

This software, which sets up a network printer port, must be installed on every Windows Me, 98, or 95 computer that uses the printer.

- **EPSON Software™ Film Factory™**

This photo management program lets you organize, beautify, and print your photos in a flash.

- **EPSON Printer Information Center**

This program includes Print Show animated tutorials and a comprehensive reference guide for your printer.

- **XAdmin32**

This utility lets you configure the print server for a Novell® NetWare network and perform more advanced configuration for other protocols.

- Your print server also comes with a built-in web-based configuration utility, which enables you to change configuration settings from any computer on the wireless network that supports a standard web browser. You must configure the print server using WP-Admin or XAdmin32 before you can use this utility.

Note: To use the print server's built-in configuration utility, just start your web browser and enter the print server's IP address in the browser's Address box. For more information, visit EPSON's web site at <http://support.epson.com>.

Installing the Printer Driver and Status Monitor

1. Insert your printer CD-ROM in the drive. You see the EPSON Installation Program.

If you don't see this window, go to **My Computer**, then double-click the  **Epson CD-ROM** icon.

2. Double-click **Install EPSON Stylus C82WN Printer Driver**.
3. Read the license agreement and click **Accept** to continue.

The files are copied to your computer.



4. When you see this window, wait until you see the **Stop searching** button, then click **Stop searching**. (The button will take a few minutes to appear.)


More files are copied.



Click Stop searching

5. When you see this message, click **OK**.
6. When you see the Product Registration screen, follow the instructions to register your printer. At the last screen, click **Done** or close your browser.

You see the Installation Program again.

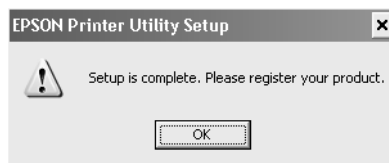


- Double-click **Install EPSON Status Monitor** and wait while the files are copied to your computer. Click **OK** when setup is complete.
- Continue with the instructions below to install the EpsonNet Wireless Print Server and WP-Admin utility.

Installing the EpsonNet Wireless Print Server and WP-Admin Utility

Once the printer driver and Status Monitor are installed, you're ready to install the EpsonNet Wireless Print Server and WP-Admin utility.

- Double-click **Install EpsonNet Wireless Print Server Utilities** on the Installation Program screen.
- If you see this message, click **Continue**.


Caution: You must install the Java Runtime Environment if it's not already installed on your computer.

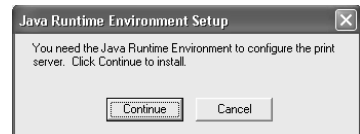

- When you see the license agreement, read it and click **Yes** to continue. Follow the instructions on the screen.

You see a selection window:

- Select **Program Files** and **WP-Admin**, and click **Next**.

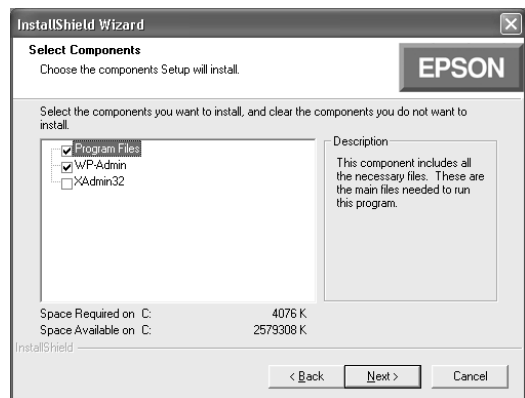

You see the Wireless Server Search window:

- Follow the instructions in the next section to set up and connect the print server.




Setting Up the Print Server


Once the software is installed, you're ready to connect the print server to the printer and configure it for your network. Before you start, make sure the printer is turned off.

Connecting the Print Server


1. Slide the print server into the base and press firmly to attach it.

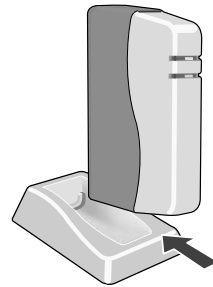

2. Locate the parallel cable included with the printer. Connect the larger end of the cable to the printer's parallel port. Then secure it with the wire clips.

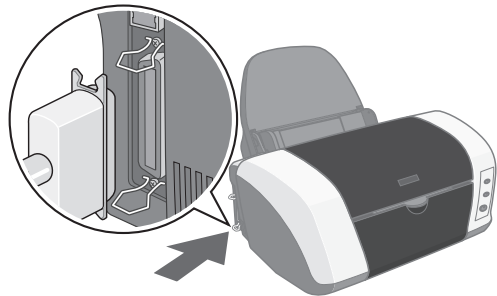


3. Connect the other end of the cable to the parallel port on the print server and secure it as necessary.

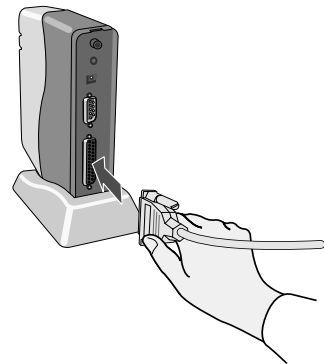

4. Connect the power supply to the print server.
5. Plug the AC adapter into an electrical outlet. Both the green and yellow lights come on for a moment and then go out.


Note: If the green light blinks continuously in a regular pattern, try unplugging the print server. If you still see the light blinking after you plug it in again, contact EPSON as described on page 52.

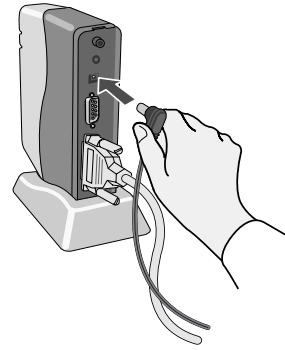

6. Press the  power button on the printer to turn it on.
7. To test the connection between the print server and printer, press the test button for one second and release it.

The status page prints.

Note: If you hold the test button down, you may reset the print server. If you do this, wait for the print server's lights to go out, then press the button again and release it immediately to print the status page.

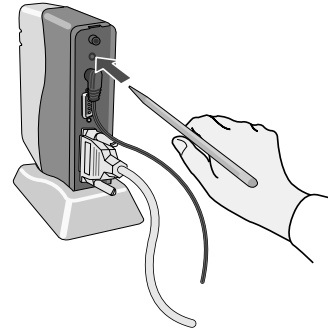

- If the print server status page prints, you're ready to configure your system for wireless printing. Make sure you save the status page for reference, and see the next section for instructions.
- If the status page doesn't print, make sure the printer is ready and is not out of ink or paper. (See page 11 for instructions on running a printer check.) Then turn off the printer, unplug the print server, and check the cable connections at both ends. Plug the server back in, turn on the printer, and press the test button again. If the test page still doesn't print, contact EPSON as described on page 52.

8. Check the following information on the status page:
 - Note the WiFi Channel and Mode, and the Actual SSID. If the SSID does not match your network, your print server may be picking up signals from somewhere else. You can correct this when you configure the print server.
 - Under NETWORK STATISTICS, make sure you see numbers indicating that the print server has received and transmitted data. If only zeroes appear, your print server may not be working correctly. Try holding down the print server's test button for at least five seconds to reset it. If it is still not working, contact EPSON as described on page 52.
9. Continue with the following instructions to configure the print server.


Configuring the Print Server

After your print server is set up and plugged in, you're ready to configure it for your network.

1. On the Wireless Server Search screen click **START**.



WP-Admin picks up the signal from the print server and displays information like the following:

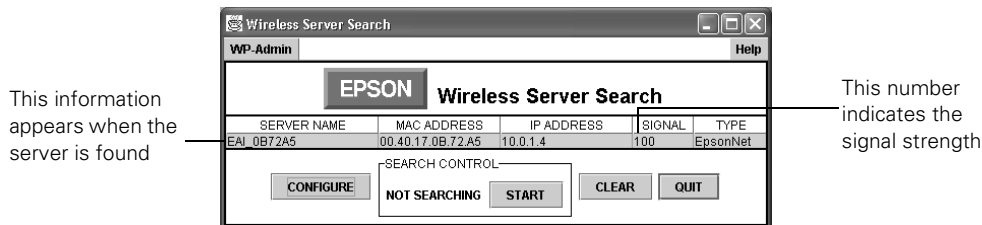

Note: If WP-Admin fails to pick up a signal from the print server, try holding down the print server's test button for at least five seconds to reset it. The lights go out, then both the green and yellow lights come on briefly. The yellow light remains on when your network has a connection to the print server.

If it still fails to pick up a signal, check the solutions beginning on page 44.


If WP-Admin picks up a signal from more than one print server, select the connection that matches the MAC address on the back of your print server.

2. Check the signal strength to make sure you have a strong link to the print server.

When you have a link, click
CONFIGURE.

You see the password window:

Click OK

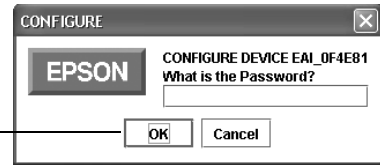

Note: If you see the message Wireless Communication Failed, click OK, then click CONFIGURE again. If you continue to see this message, move the print server closer to your computer and access point, if you have one. Also, move it away from large metal objects and devices such as cordless phones or microwave ovens. See page 44 for more information.

3. Click OK on the password window. (The default password is null, or blank.)

The print server automatically detects the settings for your wireless network. You see the Wireless Server Configuration screen:

Note: For descriptions of all the settings on this screen, see Appendix A.

4. Note the IP Address that appears on the screen.

If the address is **192.0.0.192**, you will need to enter a new address, as described below.

If any other number appears here, the address has been assigned by your existing network, through a technology called DHCP (Dynamic Host Configuration Protocol). In most cases, you can leave this setting as it is, and skip to step 7.

5. If **192.0.0.192** appears in the IP Address box and you are not using DHCP, enter an address that will work with your computer(s) and network.

For example, if your computer's IP address is 192.189.207.3, the print server's IP address should begin with 192.189.207. The last part of the address can be any number between 1 and 254 except 3 or 4.

See page 54 for instructions on viewing your computer's IP address.

6. In most cases, you can leave the Boot Method set to **Auto**.

If you entered an IP address manually, set the Boot Method to **STATIC**.

7. If your existing network uses WEP encryption, do the following:

- Select either **64BIT** or **128BIT** in the WEP Key box, depending on which version of WEP your network supports.
- Enter your WEP key in either the 128Bit Key 1 box or the 64Bit Key 1 box.

Note: You can enter up to four WEP keys on the screen. (Changing your WEP key periodically adds to network security.) To communicate, every node on the network must use the same WEP key. For more information about WEP keys, check the documentation for your wireless adapter or access point.

- If you're using an access point, set the Wireless Mode to **Infrastructure**. (Remember to enable WEP and reset the wireless mode on your computer when you're done configuring the print server.)
8. Make sure the SSID matches your network's name or SSID. If it doesn't match, your print server may have received an IP address from another access point. Change the SSID to match the network you want to use.

9. Make any other changes you want and click OK.


For example, you might want to change the Server Name to something that is easy to remember, or enter a password to limit access to the Configuration screen.

Continue with the instructions in the next section to complete the configuration and installation.

Completing the Installation

After you finish configuring the print server and click OK, you see the Wireless Server Search window again:

1. Click QUIT.

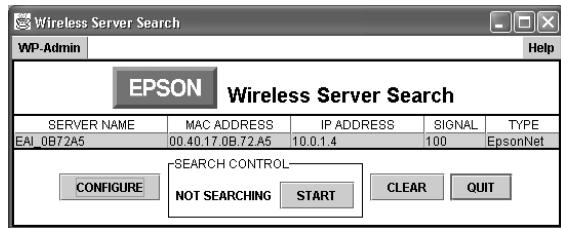

You see the following:

2. Click Finish.



You see the Installation Program again:

3. Double-click **Install EPSON Printer Information Center**.

Follow the on-screen instructions to install the information center. Once it is installed, you can click the icon on your desktop at any time to view Print Show animated tutorials or a comprehensive *Reference Guide*.

4. If you want to install Film Factory, double-click **Install EPSON Software Film Factory** and follow the instructions on the screen.

If you see a message about installing QuickTime®, click **Yes** and follow the instructions on the screen. You don't need a registration number.


5. If you're using Windows Me, 98, or 95, double-click **Install EpsonNet Direct Print Utility**. (You won't see this option in Windows XP or 2000.)

Follow the on-screen instructions to install the utility and restart your computer.

6. Click the  button to exit the installation program.

Note: Now that you've installed WP-Admin, you can change the print server's configuration at any time. To start WP-Admin from the Windows Start menu, click Programs or All Programs > Epson Printers > EpsonNet Wireless > WP-Admin.

Now you're ready to set up a network port so that your computer can use the printer over the wireless network. Continue with the instructions in the next section.

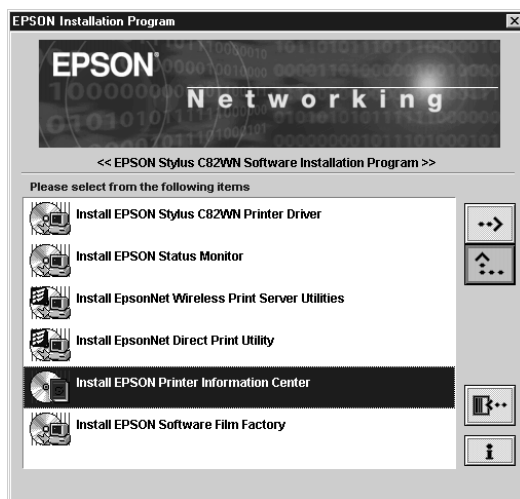

Setting Up a Network Port

The steps for setting up a network port vary depending on your operating system. Before you begin, print a status page and note the IP address of your print server. Make sure the printer driver and status monitor are installed, as described on page 16.


Then follow the instructions in one of these sections:

- If you're using Windows XP or 2000, follow the steps below.
- If you're using Windows Me, 98, or 95, go to page 27.
- If you're using Windows NT, go to page 29.


Setting Up a Network Port on Windows XP or 2000

The process of setting up a network port is similar on Windows XP and Windows 2000. Although this section shows Windows XP, you'll see similar screens in Windows 2000. For either system, make sure you are logged in to the computer as an administrator.

1. Do one of the following:
 - In Windows XP, click **Start > Control Panel > Printers and Other Hardware > Printers and Faxes**.
 - In Windows 2000, click **Start > Settings > Printers**.
2. Right-click the EPSON Stylus C82 Series printer icon, then click **Properties**.
3. On the **Ports** tab, click **Add Port**. You see this window:
4. Select **Standard TCP/IP Port** and click **New Port**. You see the Add Standard TCP/IP Printer Port wizard.

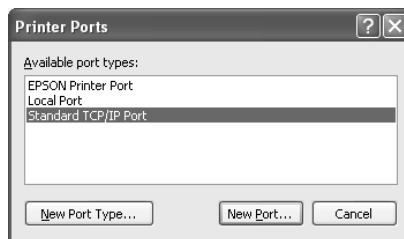

5. Click **Next**. You see a window like this:
6. In the **Printer Name or IP Address** box, enter the print server's name or IP address and click **Next**.
7. Follow the instructions on the screen to complete the wizard.
8. Click **Close** to close the Printer Ports window, then click **Apply** on the Properties window.

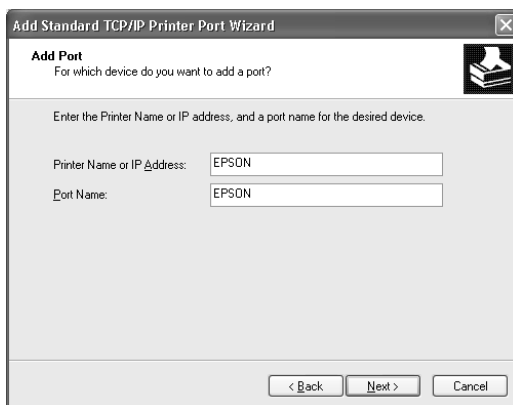

9. To test the connection, select the **General** tab and click **Print Test Page**.

If the test page prints, click **OK** to close the Properties window.

If it fails to print, try the following:


- Make sure that the printer and print server are connected, plugged in, and turned on.
- Check the printer to see if a red light is on or flashing, indicating that paper or ink is out, or paper is jammed. See *Printer Basics* for details.
- Check WP-Admin to make sure you have a signal (see page 20).
- Make sure you've entered the correct name or IP address in step 6.
- Make sure you clicked **Apply** in step 8.

Now you're ready to start printing. For instructions, see *Printer Basics*.

Setting Up a Network Port on Windows Me, 98, or 95


You need to install the EpsonNet Direct Print Utility for wireless printing on any computer running Windows Me, 98, or 95. If you haven't already installed the utility, follow the instructions on page 24 before you set up your port, as described below.

1. From the Start menu, click **Settings > Printers**.
2. Right-click the **EPSON Stylus C82 Series** printer icon, and then click **Properties**. Click the **Details** tab to display a window like this:
3. Click **Add Port** on the Details tab.

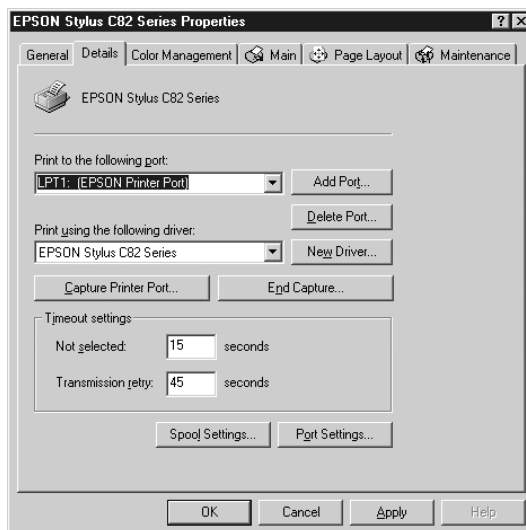

You see the Add Port window:

4. On the Add Port window, make sure **Network** is selected, then click **Browse**.

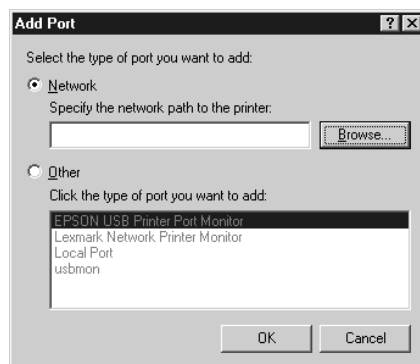


You see the Browse for Printer window:

5. Click the + next to **Entire Network**, then click the + next to **Epson_lpr** and select the **Stylus C82** printer.

(Make sure the IP address matches your print server's IP address.)

6. Click **OK**, then click **OK** again.
7. Click **Apply** on the Details tab.
8. To test the connection, click the **General** tab and click **Print Test Page**. Wait for the page to print.

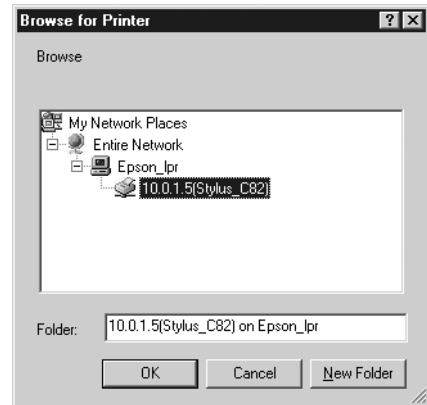

If the test page prints, click **Yes**, then click **OK** to close the Properties window.

If it fails to print, try the following:


- Make sure the printer and print server are connected and both are turned on.
- Check the printer to see if a red light is on or flashing, indicating that paper or ink is out, or paper is jammed. See *Printer Basics* for details.
- Check WP-Admin to make sure you have a signal (see page 20).
- Make sure you selected the correct printer in step 5.
- Make sure you clicked **Apply** in step 7.

Now you're ready to print. For instructions, see *Printer Basics*.

Setting Up a Network Port on Windows NT


Make sure you have Microsoft TCP/IP Printing installed on your computer before you begin.

1. From the Start menu, click **Settings > Printers**.
2. Right-click the **EPSON Stylus C82 Series** printer icon and then click **Properties**.
3. On the Port tab, click **Add Port**. You see the Printer Ports window:
4. Select **LPR Port** and click **New Port**.

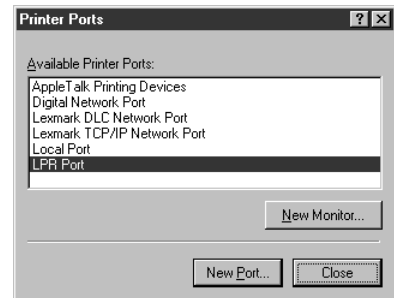

You see a window like this:

5. Enter the server's IP address in the **Name or address of server providing lpd** box, and the server name in the **Name of printer or print queue on that server** box. Then click **OK**.
6. Click **Close** to close the Printer Ports window.
7. Click **OK** to close the Properties window.
8. Right-click the **EPSON Stylus C82 Series** printer icon in the Printers window and click **Properties**.
9. To test the connection, select the **General** tab and click **Print Test Page**.
If the test page prints, click **OK** to close the Properties window.

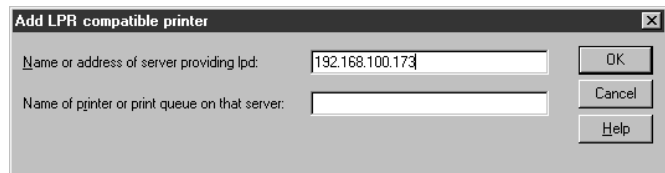

If it fails to print, try the following:

- Make sure that the printer and print server are connected and that both are on.
- Check the printer to see if a red light is on or flashing, indicating that paper or ink is out, or paper is jammed. See *Printer Basics* for details.
- Check WP-Admin to make sure you have a signal (see page 20).
- Make sure you entered the correct IP address and server name in step 5.

Now you're ready to print. For instructions, see *Printer Basics*.

Setting Up Additional Computers

You need to install the EPSON Stylus C82WN printer driver and status monitor and configure a network port on every computer using the printer.

- For computers on a wired network that has a wireless access point, skip to step 3.
- For computers that have wireless network interfaces, follow all of these steps:
 1. Make sure your computer's wireless mode is set to either **Infrastructure**, if you are connecting to the printer through an access point, or **802.11b Ad Hoc** if you are connecting without an access point.

If your wireless adapter doesn't include an **802.11b Ad Hoc** option, select **Ad Hoc, Computer-to-Computer**, or whatever mode your adapter uses to communicate without an access point. *Do not* select a pseudo ad hoc or proprietary ad hoc mode.

2. If you're using infrastructure mode, make sure there is a link with good signal strength between the computer and the access point.
3. Follow steps 1 through 7 starting on page 16.
4. If you're using Windows Me, 98, or 95, double-click **Install EpsonNet Direct Print Utility** on the EPSON Installation Program screen and follow the instructions to install the utility.
5. Go to page 25 and follow the appropriate set of instructions for setting up a network port.

Configuring Wireless Printing for Macintosh

This chapter explains how to install the software, set up the print server, and configure wireless printing on a Macintosh. Once the print server is configured, you can select and use the printer from any Macintosh on your wireless network that has the printer driver installed.

Before you can install the print server, you need to make sure that your AirPort adapters are installed and ready. If you have an existing network, you also need to verify that your AirPort Base Station is operating correctly and linked to your computers. If you need instructions, see the documentation or help files that came with your equipment.

Then follow the instructions in these sections:

- Preparing to install the printer and print server
- Installing the C82WN software
- Setting up and configuring the print server
- Setting up additional Macintosh computers

Preparing to Install

Configuring the print server is the process of setting it up to work with your network. This process begins immediately after you install the software, so it's important to make sure your printer is set up before you start installing.

Follow the instructions beginning on page 7 to set up the printer, install ink cartridges, and load paper. Then follow the guidelines below:

- *Make sure* that AirPort is enabled on your Macintosh. If your Macintosh and AirPort Base Station or access point are connected over an existing Ethernet network, enable **Ethernet**.
- *Make sure* that both AppleTalk and TCP/IP are enabled and configured to connect via AirPort.
- To use the printer in infrastructure mode, select a working connection to a base station or access point from the AirPort Networks list.

Note: Make sure you note the name of the AirPort Network. If you have a Windows computer on your wireless network, use this name as your computer's SSID (Service Set Identifier). For instructions on setting the SSID, see the documentation for the wireless adapter in your Windows computer.

- To use the printer in computer-to-computer (ad hoc) mode, create or join a computer-to-computer network. See your AirPort documentation for details.

Note: EPSON recommends that you use the print server with an AirPort Base Station or access point. With AirPort, your print server works more reliably in infrastructure mode than computer-to-computer (ad hoc) mode.

- If you want to use WEP encryption on your AirPort network, you need to change your password to a hexadecimal value. Follow the instructions beginning on page 48 to install and configure your software.

- If you're using a non-AirPort wireless adapter, make sure your Macintosh computer's wireless mode is set correctly. Set it to **Infrastructure** if you are connecting through an access point, or **802.11b Ad Hoc** if you are connecting without an access point.

If your adapter does not include an **802.11b Ad Hoc** option, set the wireless mode to **Ad Hoc**, **Computer-to-Computer**, or whatever mode your adapter uses to communicate without an access point. *Do not* select a pseudo ad hoc or proprietary ad hoc mode. See the documentation for your wireless adapter for details.

If you're using infrastructure mode, make sure there is a link with good signal strength (greater than 50 percent) between the Macintosh and base station or access point. See your wireless adapter's documentation for details.

If you're configuring the print server from a Macintosh with a non-AirPort wireless adapter, make sure WEP (Wired Equivalent Privacy) is disabled before you begin. See the documentation for your wireless adapter for instructions.

Installing the C82WN Software

Your printer CD-ROM includes the following software:

- **EPSON Stylus C82WN printer driver**
You must install the printer driver on every Macintosh that uses the EPSON Stylus C82WN printer. This software controls print settings, monitors printer status, and provides several utilities for printer maintenance. For instructions on using your printer driver, see the *Printer Basics* book.
- **WP-Admin**
This utility lets you configure the print server for your network. You only need to install it on one Macintosh, and in most cases it is the only configuration utility you need to install.
- **EPSON Software Film Factory**
This photo management program lets you organize, beautify, and print your photos in a flash.

■ EPSON Printer Information Center


This program includes Print Show animated tutorials and a comprehensive reference guide for your printer.

- The print server also comes with a built-in web-based configuration utility. This lets you change configuration settings from any computer on the wireless network that supports a standard web browser. You must configure the print server using WP-Admin before you can use the utility.

Note: To use the print server's web-based configuration utility, start your web browser and enter the print server's IP address. For more information about the web-based utility, visit EPSON's web site at <http://support.epson.com>.

Installing the Printer Software on Mac OS X

1. Insert the printer CD-ROM in your drive. Double-click the CD-ROM icon to open it.
2. Open the **Software for OSX** folder, then double-click the  **C82Series** icon to start the installation program.
3. Enter your administrator password or Passphrase if necessary. You see the software installer window:
4. Click **Continue**.
5. Read the license agreement and click **Continue**, then click **Agree**.
6. Follow the instructions on the screen to install the printer driver and restart your Macintosh.
7. Open the **Software for OS X** folder if necessary, then double-click the  **Printer Information Center** icon. Follow the instructions on the screen to install your EPSON Printer Information Center.

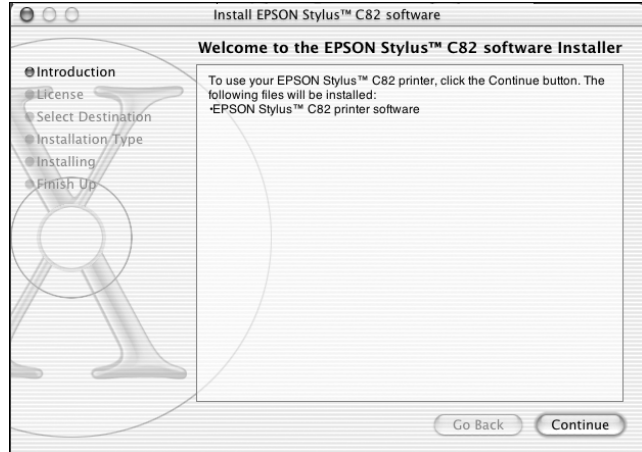


Once it is installed, you can click the icon on your desktop at any time to view animated tutorials or a comprehensive *Reference Guide*.

8. If you want to install Film Factory, double-click  Film Factory Installer and follow the on-screen instructions.
9. Continue with the instructions on page 36 to install the wireless print server and WP-Admin utility.

Installing the Printer Software on Mac OS 8.6 to 9.x

1. Insert the printer CD-ROM in your drive. Double-click the CD icon to open it if necessary.
2. Double-click the **Software for OS 8.6-9.x** folder, then double-click the **Printer Driver Installer** folder.
3. Double-click the  **Stylus C82WN Installer** icon to start the installation program.
4. Click **Continue**. You see the Driver Installer window:
5. Click **Install**, then follow the instructions on the screen to install the printer driver and restart your Macintosh.
6. Double-click the OS 8.6-9.x folder to open it. Double-click the **Epson Electronic Registration** folder, then double-click **Epson Product Registration**. Follow the instructions on the screen to register your printer, then click **Quit** or close your browser.
7. Double-click the **Printer Information Center** folder, then double-click the  **Printer Information Center** icon. Follow the instructions on the screen to install your EPSON Printer Information Center.

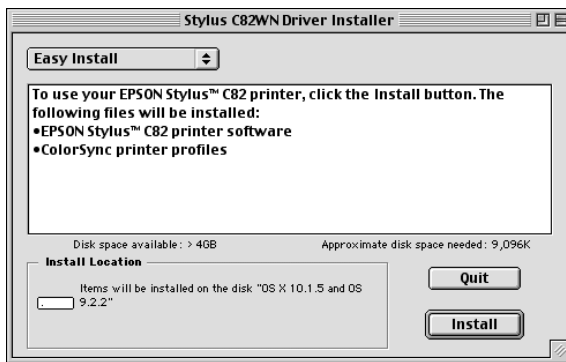

Once it is installed, you can click the icon on your desktop at any time to view animated tutorials or a comprehensive *Reference Guide*.

8. If you want to install Film Factory, double-click the **Film Factory** folder, then double-click  **Film Factory Installer** and follow the on-screen instructions.

9. Continue with the instructions below to install the wireless print server and WP-Admin utility.


Installing the EpsonNet Wireless Print Server and WP-Admin Utility

1. Do one of the following:

- If you're using Mac OS X, double-click the  Wireless Utility Installer icon.
- If you're using Mac OS 9.x, double-click the Install Wireless Utility folder, then double-click the  Wireless Utility Installer icon.

You see the install window:

2. Click **Next**.
3. Read the license agreement. Click **Next** to accept the agreement and continue.
4. Follow the instructions on the screen to install the print server and WP-Admin utility.
5. At the last screen, click **Done**.

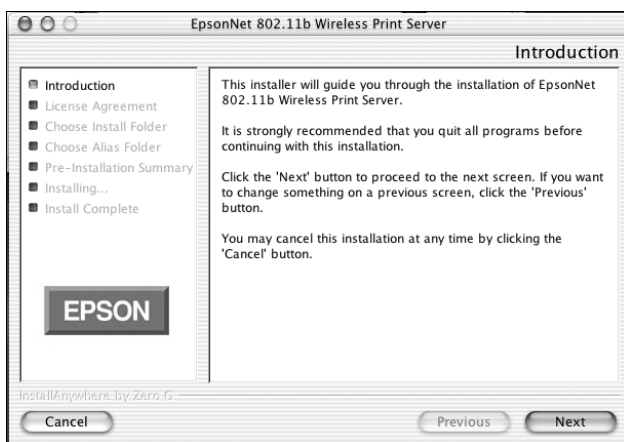

You see the Wireless Server Search window:

6. Follow the instructions in the next section to set up and connect the print server.




Setting Up the Print Server

Once the software is installed, you're ready to connect the print server to the printer and configure it for your network. Before you start, make sure the printer is turned off.


Connecting the Print Server

1. Slide the print server into the base and press firmly to attach it.

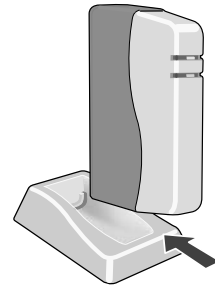


2. Locate the parallel cable included with the printer. Connect the larger end of the cable to the printer's parallel port.

Then secure it with the wire clips.

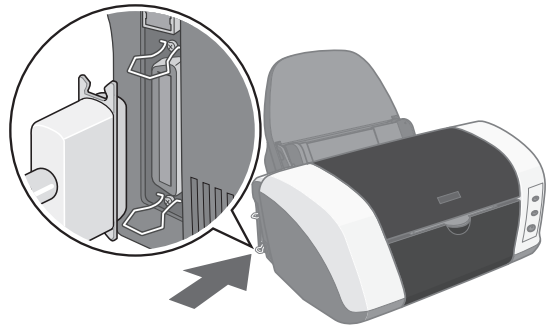


3. Connect the other end of the cable to the parallel port on the print server and secure it as necessary.

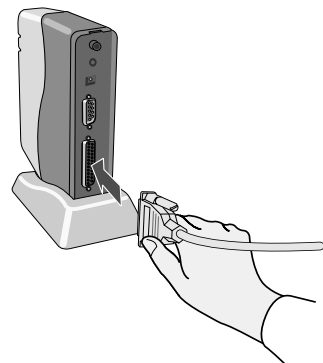


4. Connect the power supply to the print server.
5. Plug the AC adapter into an electrical outlet. Both the green and yellow lights come on for a moment and then go out.

Note: If the green light blinks continuously in a regular pattern, try unplugging the print server. If you still see the light blinking after you plug it in again, contact EPSON as described on page 52.

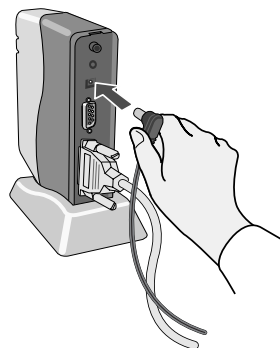

6. Press the  power button to turn on the printer.
7. To test the connection between the print server and printer, press the test button for one second and release it. The status page prints.

Note: If you hold the test button down, you may reset the print server. If you do this, wait for the print server's lights to go out, then press the button again and release it immediately to print the status page.

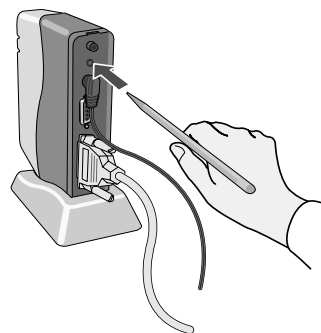

- If the print server status page prints, you're ready to configure your system for wireless printing. Make sure you save the status page for reference, and see the next section for instructions.
 - If the status page doesn't print, make sure the printer is ready and is not out of ink or paper. Then turn off the printer, unplug the print server, and check the cable connections at both ends. Plug the server back in, turn on the printer, and press the test button again. If the status page still doesn't print, contact EPSON as described on page 52.
8. Check the following information on the status page:
 - Note the WiFi Channel and Mode, and the Actual SSID. If the SSID does not match your network, your print server may be picking up signals from somewhere else. You can correct this when you configure the print server.
 - Under NETWORK STATISTICS, make sure you see numbers indicating that the print server has received and transmitted data. If only zeroes appear, your print server may not be working correctly. Try holding down the print server's test button for at least five seconds to reset it. If it is still not working, contact EPSON as described on page 52.

9. Continue with the following instructions to configure the print server.

Configuring the Print Server

After your print server is set up and plugged in, you're ready to configure it for your Macintosh.

1. On the Wireless Server Search screen, click **START**.



WP-Admin picks up the signal from the print server and displays information like the following:




Note: If WP-Admin fails to pick up a signal from the print server, try holding down the print server's test button for five seconds to reset it. The lights go out, then both the green and yellow lights on the print server come on briefly. The yellow light remains on when your network has a connection to the print server.

If it still fails to pick up a signal, check the solutions beginning on page 44.

If WP-Admin picks up a signal from more than one print server, select the connection that matches the MAC address on the back of your print server.

2. Check the signal strength to make sure you have a strong link to the print server.
3. When you have a link, click **CONFIGURE**.

You see the following:

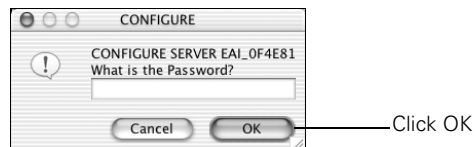

Note: If you see the message Wireless Communication Failed, click OK. Then click CONFIGURE again. If you continue to see this message, move the print server closer to your computer and AirPort Base Station or access point, if you have one. Also, move it away from large metal objects and devices such as cordless phones and microwave ovens. For more information, see page 44.

4. Click **OK** on the Password window. (The default password is null, or blank.)

The print server automatically detects the settings for your wireless network. You see a screen similar to the one below:

Must be the name of your AirPort network

Note: For descriptions of all the settings on the Wireless Server Configuration screen, see Appendix A.

5. If you want, change the Server Name to something that is easy to remember, or enter a password to limit access to the Wireless Server Configuration screen.

Note: This password does not affect access to your AirPort network.

6. Make any other changes you want and click **OK**. You see the Wireless Server Search window again:
7. Click **QUIT**.


8. Follow the instructions below to complete the printer setup for your operating system.

Adding the Printer to the Mac OS X Print Center


After you install your printer software, you need to add the printer to the OS X Print Center.

1. Double-click the **Applications** folder on your OS X drive.
2. Double-click the **Utilities** folder.
3. Double-click **Print Center**.

If you see this screen, click **Add**.
If **EPSON Stylus C82 Series** already appears in the printer list, go to step 6.

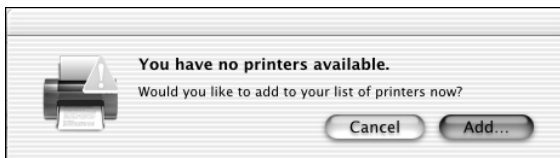

4. At the Printer List screen, click **Add Printer**.
5. Select **EPSON AppleTalk** in the Directory Services list at the top of the screen. Then click your printer in the list that appears and click **Add**.

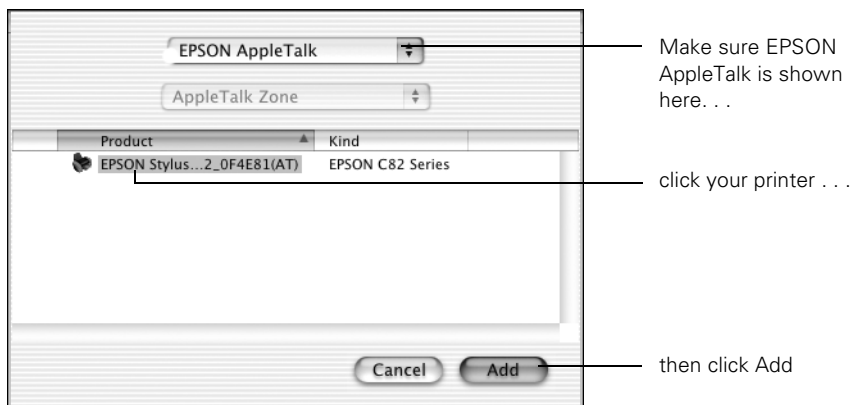

6. Your printer appears in the Printer List. Close Print Center.

You're ready for wireless printing. For instructions, see *Printer Basics*.

Note: When you print, make sure Stylus C82 Series (AT) is selected on the printer settings screen. For details on print settings, click **Help**.

Now that you've installed the print server software, you can change the print server's configuration at any time. To start WP-Admin, do one of the following:

- Double-click the  WP-Admin alias on your desktop, if you've created one.
- Open the EpsonNet folder in the Applications > Utilities folder on your hard drive. Then double-click the  WP-Admin icon.

Selecting the Printer on Mac OS 8.6 to 9.x

After you install your printer software, you need to select the printer in the Chooser.

1. Open the Chooser from the Apple menu.
2. Click the C82 Series icon, then click the (EPSON Stylus C82 . . .) icon. Turn on background printing, make sure AppleTalk is active, then close the Chooser.

You're ready for wireless printing. For instructions, see *Printer Basics*.

Now that you've installed the print server software, you can change the print server's configuration at any time. To start WP-Admin, do one of the following:

- Double-click the  WP-Admin alias on your desktop, if you've created one.
- Open the EpsonNet folder in the Applications folder on your hard drive, then double-click the  WP-Admin icon.

Setting Up Additional Macintosh Computers

Once the print server is configured on your wireless network, you need to install the EPSON Stylus C82WN printer driver on each Macintosh using the printer.

1. Make sure each Macintosh is set up to use the wireless network, as explained on page 32. If you're using a non-AirPort wireless adapter, see page 33.
2. Follow the steps to install the printer driver (page 34 for Mac OS X or page 35 for Mac OS 8.6 to 9.x).
3. Follow the steps on page 41 to add the printer to the Print Center (in Mac OS X) or the steps above to select the printer in the Chooser (for Mac 8.6 to OS 9.x).

Solving Wireless Printing Problems

This chapter gives you information on solving problems with print server setup and wireless printing. If you have a problem with print quality or paper feeding, see *Printer Basics* for help.

Note: If you need to clean or align the print head, follow the instructions in *Printer Basics* to run the appropriate utilities. These programs work on your wireless network the same as they do when the printer is connected directly to a computer.

If you can't print, follow these steps to diagnose the problem:

- First, check for any red lights on the printer. They let you know if an ink cartridge runs out or your paper is jammed. You may also see a message on your computer screen. See *Printer Basics* for more information.
- If the printer lights do not indicate a problem, try running a printer check. Turn off the printer and disconnect the print server. Hold down the  paper button, then press and release the  power button. After the printer test page prints, turn off the printer. See *Printer Basics* for more information.

If the printer test page doesn't print, contact EPSON as described on page 52.

- If the test page prints, test the connection between the printer and print server. Connect the print server as described on page 18. Turn on the printer, then press the test button on the print server and release it immediately, as described on page 19. The print server status page prints.
- If the print server status page doesn't print, try resetting the print server. Press the test button and hold it down until the green and yellow lights on the print server come on briefly (about five seconds). Then press the button again for one second to print the status page. If it still doesn't print, contact EPSON as described on page 52.

If the print server status page prints, but you still can't print through your wireless network, follow the suggestions in this chapter to solve the problem.

Problems and Solutions

Here are some troubleshooting tips if you are having trouble setting up your print server or printing over your wireless network.

When you start WP-Admin, you see a message that Javaw.exe was not found.

You must have the Java Runtime Environment installed on your computer to run WP-Admin. Uninstall the print server software, as described on page 50, then reinstall it as described in the instructions on page 17 (Windows) or page 36 (Macintosh).

You're having trouble connecting to the print server.

If the green light on the print server flashes continuously, it indicates a communication error. Try the following suggestions:

- Move the print server and access point closer to each other and to your computer. Make sure they are not located near large metal objects and other devices that interfere with radio signals, such as cordless phones and microwave ovens.
- Hold down the test button on the back of the print server for at least five seconds to reset the print server to its factory defaults. The print server's green and yellow lights come on briefly when the print server resets.

Note: If you've already configured the print server, you need to run WP-Admin again to reconfigure it.

- Make sure your computer's wireless adapter is installed and configured correctly. See the instructions that came with the adapter.
- Try restarting your computer.
- If you're using AirPort, make sure that AirPort is enabled in the AppleTalk Control Panel or Network Preferences. Also, make sure that AppleTalk and TCP/IP are enabled in your AirPort Admin utility and Network Preferences. Finally, make sure that you are using AirPort version 2.04 or later. (If you have an earlier version of AirPort, you can download an upgrade from Apple's web site).
- If you're using an AirPort Base Station, make sure that you've selected a working connection to your base station. If you're using AirPort in computer-to-computer (ad hoc) mode, create or join a computer-to-computer network.

- Make sure the wireless mode for your computer is set to Infrastructure if you are connecting through an access point, or 802.11b Ad Hoc if you are connecting without an access point. (Your wireless adapter may use different terms. Check the documentation for your adapter.) Never select a pseudo ad hoc or proprietary ad hoc mode.
- If you are using WEP encryption on your wireless network, disable it on your computer before you configure the print server. Then enable WEP on the print server (see page 22). When you're done configuring the print server, enable WEP on your computer again.

Note: If your access point only allows WEP-enabled clients to connect to it, you may have to set your computer's wireless mode to 802.11b Ad Hoc (or your adapter's wireless ad hoc mode) before you configure the print server. If your computer's wireless mode was originally set to Infrastructure, you can set it back to Infrastructure when you're done.

You see the message “Wireless Communication Failed” when you click CONFIGURE on the Wireless Server Search window.

- Click OK to close the message, then click CONFIGURE again on the Wireless Server Search window. (If WP-Admin is picking up a signal from more than one print server, select the correct print server first.)
- If you continue to see this message, move the print server closer to your computer and access point, if you have one. Also, move the print server away from large metal objects and other devices that interfere with radio signals, such as cordless phones and microwave ovens.
- Your network could be malfunctioning. If you have an access point, make sure it is turned on and configured correctly. Try resetting the access point. See the instructions that came with your access point for more information.

You are getting a wireless signal, but you are not able to print.

- Make sure the printer and print server are connected, both are plugged in, and the printer is turned on.
- If you're running Windows, make sure you set up your network port correctly. See the instructions beginning on page 25.
- Make sure your wireless link has adequate signal strength—at least 50 percent. If the signal is weak, try moving the print server and printer to a different location, away from large metal objects and other devices that interfere with radio signals, such as cordless phones and microwave ovens.
- Make sure you're connecting to the correct print server. Check the MAC address printed on the back of the print server against the MAC address that appears in the WP-Admin Wireless Server Search window.
- Check the printer's lights to see if there is a problem with the printer. See *Printer Basics* for details.

You are using AirPort and you are unable to see the printer in the Print Center or in the Chooser.

- Make sure the printer and print server are connected, both are plugged in, and the printer is turned on.
- Make sure you're using the latest version of the AirPort software. Check for upgrades on the Apple web site at www.apple.com.
- For OS X, make sure AppleTalk is active in your Network Preferences.
- If you have recently upgraded your Mac OS, try reinstalling the upgrade.
- If you are using AirPort in computer-to-computer (ad hoc) mode, change the channel to 3 in the Create Network section of the AirPort Admin Utility. Then create a network name and restart the print server. Launch WP-Admin and try reconfiguring the print server.

If this problem happens frequently, EPSON recommends that you use the print server with an access point or AirPort Base Station. With AirPort, your print server works more reliably in infrastructure mode.

Printing is too slow.

- Try moving the print server away from large metal objects and other devices that interfere with radio signals, such as cordless phones, microwave ovens or Bluetooth devices.
- Move your computer, print server, and access point (if you have one) closer to each other.
- WEP can generate “overhead” that affects network performance. Try disabling WEP to increase print speed.
- If you’re using infrastructure mode, change the RF Channel on your access point. If you’re using ad hoc mode, change the channel on your computer.

To avoid interference from other wireless networks in the vicinity, choose a setting that is at least five channels higher or lower than that for any other wireless network (for example, if another network is set to channel 6, choose channel 11 or higher, or channel 1). Then change the channel on the computers on your wireless network. Make sure you use the same channel for your access point and computers.

- On a Macintosh AirPort network, change the channel in the Create Network section of the AirPort Admin Utility. Then create a network name and restart the print server. Launch WP-Admin and try reconfiguring the print server.
- Network traffic can affect print performance. Adding another access point or router may improve performance.

For other solutions, see *Printer Basics*.

You see a communication error message when you try to print.

You may see an error message if another computer on your network is trying to print at the same time. The green light on the print server flashes when data is transmitted to the print server. Wait until the first print job is printed. Your job will print when it reaches the top of the print queue.

You want to use WEP encryption on your AirPort network.

Because AirPort uses passwords that do not follow the standard for WEP encryption, you need to change your network password to a hexadecimal value.

Follow these steps:

1. Create a computer-to-computer network without password protection on the Macintosh computer that you use to configure the print server.
2. Follow the steps beginning on page 33 to install the printer driver and WP-Admin, and to establish a connection to the print server.
3. Make the following selections on the Wireless Server Configuration screen:
 - Select **64BIT** in the WEP key box.
 - In the 64Bit Key 1 box, enter a hexadecimal value consisting of 10 digits, or a combination of digits and letters. Digits can be from 0 to 9, and letters must be between A and F. For example: **62B91F2A98**.
 - If you have an AirPort Base Station, enter your network name in the SSID box. Then change the Wireless Mode to **Infrastructure**.
4. Make any other changes that you want to the Wireless Server Configuration screen and click **OK**. When you see the Wireless Server Search window, click **QUIT**.
5. If you want to use the printer in computer-to-computer (ad hoc) mode, go to step 6.

If you have an AirPort Base Station, do the following:

- For Network Name, configure the base station to use the name that you entered in the SSID box on the Wireless Server Configuration screen.
 - For Network Password, select the hexadecimal value that you entered in the 64Bit Key 1 box, preceded by the number zero (0) and lowercase letter x. For example: **0x62B91F2A98**. Then go to step 7.
6. To use the printer in computer-to-computer mode, do the following:
 - Create a computer-to-computer network.

- When prompted, enter as your password the hexadecimal value you entered in the 64Bit Key 1 box on the Wireless Server Configuration screen. This value must be preceded by the number zero (0) and lowercase letter x. For example: **0x62B91F2A98**.
7. Select your printer as described on page 41 (for OS X) or page 42 (for OS 8.6 to 9.x).
 8. For each Macintosh on your network, either select a connection to your base station from the AirPort Networks list, or join the computer-to-computer network that your print server is on.
 9. When prompted, enter the network password that you created in step 5 (if you're using a base station) or step 6 (if you're using the printer in computer-to-computer mode).
 10. Follow the instructions on page 42 to set up printing on your other Macintosh computers.

Uninstalling the Software

You may need to uninstall and then reinstall the software for your printer. For example, this might be necessary if you upgrade your computer operating system.

Windows

Follow these steps to uninstall the WP-Admin utility and EpsonNet Direct Print:

1. Click **Start > Control Panel** (or **Start > Settings > Control Panel**).
2. Double-click **Add or Remove Programs** (or **Add/Remove Programs**).
3. Select **EpsonNet 802.11b Wireless Print Server** and click **Change/Remove** or **Add/Remove**. You see the Uninstall program.
4. Click **Uninstall**.
5. When you see the Uninstall Complete message, click **Quit**.
6. If you've installed EpsonNet Direct Print, select it on the Add/Remove programs windows and click **Add/Remove**. Then follow the on-screen instructions.
7. When uninstall is complete, click **OK**. Then click **OK** again when you see the confirmation message.

Follow these steps to uninstall the EPSON Stylus C82 printer driver:

1. On your Windows Start menu, click **All Programs** (or **Programs**).
2. Click **EPSON Printers** (or **Epson**), then **EPSON Printer Software Uninstall**.
3. Make sure your **C82 Series** printer is highlighted, then click **OK**.
4. Follow the instructions on the screen to uninstall the Status Monitor and printer driver.
5. If prompted, restart your computer when you're done.

Macintosh OS X

Follow these steps to uninstall the WP-Admin utility and the EPSON Stylus C82 printer driver:

1. Open the Applications > EpsonNet > Uninstaller Data folder. Double-click **Uninstall WP-Admin**. The Uninstall window opens.
2. Click **Uninstall** and follow the instructions on the screen.
3. Open the Print Center.
4. Select your printer and click **Delete**.

Macintosh OS 8.6 to 9.x

Follow these steps to uninstall the WP-Admin utility:

1. Drag the **EpsonNet** folder on your hard drive to the trash.
2. If you've created a desktop alias for WP-Admin, drag it to the trash.
3. Restart your Macintosh.

Follow these steps to uninstall the EPSON Stylus C82 printer driver:

1. Insert the printer CD-ROM in your drive.
2. Double-click the **Printer Driver Installer** folder in the EPSON window. (You may have to double-click the **EPSON** icon if the window doesn't open automatically.)
3. Double-click the **Stylus C82WN Driver Installer** icon to start the installation program.
4. Click **Continue** on the next screen.
5. On the installer screen, click the arrow in the Easy Install list at the top and select **Uninstall**. Then click the **Uninstall** button at the bottom and follow the instructions on the screen.
6. When you're finished, click **Quit**.

Where To Get Help

If you need help with your printer or print server, see the contact information below. If you need help using non-EPSON software with your printer, see the documentation for that software for technical support information.

EPSON provides technical assistance 24 hours a day through the electronic support services and automated telephone services listed below:

Service	Access
World Wide Web	From the Internet, you can reach EPSON Support at http://support.epson.com . At this site, you can download drivers and other files, look at product documentation, access troubleshooting information, and receive technical advice through e-mail.
Automated Telephone Services	A variety of automated help services are available 24 hours a day, seven days a week. To use these services, you must have a touch tone telephone and call (800) 922-8911 . Your EPSON SoundAdvice SM Express Code is 70400. Use this code to quickly select the EPSON Stylus C82WN in SoundAdvice.

To speak to a technical support representative, dial:

- U.S.: **(562) 276-7525**, 6 AM to 8 PM, Pacific Time, Monday through Friday and 7 AM to 4 PM, Saturday.
- Canada: **(905) 709-2567**, 6 AM to 6 PM, Pacific Time, Monday through Friday.

Toll or long distance charges may apply. Before you call, have this information ready:

- Product name (EPSON Stylus C82WN)
- Printer serial number (located on the back of the printer)
- Print server serial number (located on the back of the print server)
- Proof of purchase (such as a store receipt) and date of purchase
- Computer configuration
- Description of the problem

You can purchase ink cartridges, paper, manuals, and accessories from EPSON at (800) 873-7766, or visit the EPSON StoreSM at www.epsonstore.com (U.S. sales only). In Canada, please call (800) 463-7766 for dealer referral.

Appendix A:

Configuration Settings

The Wireless Server Configuration screen includes both fields that display information and fields that allow you to modify print server settings. Since most of the settings are configured automatically based on your existing network, you don't need to change these settings for the typical wireless network. Some settings, such as the Server Name or Password, you may want to change for convenience or security.

If you contact EPSON for technical support, you need to provide configuration information such as the serial number and firmware revision.

Following are definitions of the configuration settings:

Server Name

Name that identifies the print server (and its printer) on your wireless network. The default is EAI_XXXXXX (where XXXXXX are the last six digits of the MAC/Ethernet address). Choose any name that makes it easier for you to identify the printer (for example, Epson Ink Jet Printer). You can enter from one to 32 characters in this field.

Serial Number

Unique number that identifies each EpsonNet 802.11b Wireless Print Server that is produced. This number is set during manufacture and cannot be changed.

Password

Used to restrict access to the Wireless Server Configuration screen. The default password is null (blank). The maximum number of characters you can use in this field is 16.

Firmware Revision

Indicates the version of the software embedded in the print server. This field cannot be changed.

IP Address

Address used to identify a node on a network supporting the TCP/IP protocol. The format for IP (Internet Protocol) addresses is a set of four bytes or segments, separated by periods. Each byte can have any value from zero (0) to 254. If you need to enter an address, make sure it conforms to the addressing scheme for your network and that it does not conflict with the IP address for any other node on your network. The print server's default IP address is 192.0.0.192.

To view your computer's IP address, subnet mask, and other information, do the following:

Windows XP/2000/NT:

1. From the Windows Start menu, click **Run**.
2. Enter `cmd` in the text box and click **OK**. You see a DOS window.
3. At the prompt, type `ipconfig` and press **Enter**. You see your computer's IP configuration file, which includes the IP address.
4. At the prompt, type `exit` to exit the DOS window.

Windows Me/98/95:

1. From the Windows Start menu, click **Run**.
2. Enter `winipcfg` in the text box and click **OK**. You see the IP Configuration window.
3. Select your wireless adapter from the drop-down list. You see IP configuration information, including the IP address.
4. Click **OK** to close the IP Configuration window.

WorkGroup/Domain

Used on networks that support NetBIOS or NetBEUI. WP-Admin detects this setting automatically, so you should not have to change it. The print server must be on the same workgroup or domain as all computers using the printer.

Subnet Mask

Make sure this matches the subnet mask for your network. This setting will be 255.255.255.0 for most networks in the home or small office.

Boot Method

Method the print server uses to obtain an IP address. **AUTO** attempts to detect your IP address through DHCP, BOOTP, and RARP. If unable to detect an IP address automatically, it uses the default IP address: 192.0.0.192.

Leave this setting on **AUTO**, unless you assign the print server's IP address manually. For manual configuration (without DHCP), change the boot method to **STATIC**.

Gateway (or Router)

Use this setting only if you are using the print server in a large organization that has subnets for different departments.

RF Channel

Defines the radio frequency channel (WiFi channel) that the print server uses to communicate. In most cases, the print server will automatically configure the RF channel. This value must match for all nodes on a network.

If you find that printing is too slow, you may be able to improve performance by changing the RF channel on your computer(s) and access point, if you have one. To avoid interference from other networks, choose a setting at least three channels higher or lower than that for any nearby wireless network (for example, if another network is set to channel 7, choose channel 10 or higher, or channel 4 or lower). Then run WP-Admin to reconfigure the print server.

MAC Address

Defines the Ethernet address of the print server. The MAC (Medium Access Control) address is set during manufacture and cannot be changed. You can find it on the sticker on the back of the print server.

Data Rate

Indicates the throughput speed in Mbps of the wireless Ethernet connection (1, 2, 5.5, or 11). The print server will automatically negotiate to the highest possible rate.

SSID

Name that identifies your wireless network, equivalent to the network name on Macintosh. When you configure the print server in WP-Admin, it automatically detects the SSID (Service Set Identifier) for the wireless network. The SSID must match for all nodes on the network for them to communicate. The maximum number of characters that you can use in this field is 32.

Wireless Mode

Mode used by computers on a wireless network to communicate with the print server. WP-Admin detects this setting automatically, based on the mode set in your wireless adapter configuration software. To communicate, all computers must be set to the same wireless mode (or its equivalent, depending on your wireless adapter) as the print server.

- **Infrastructure**—Used when computers on the wireless network communicate with the print server through an access point or base station.
- **Ad Hoc (802.11b)**—Used when computers on the wireless network communicate with the print server directly, without using an access point or base station.
- **Pseudo Ad-Hoc**—Used for testing. Don't select this mode in your wireless adapter configuration software or on the Wireless Server Configuration screen.
- **Auto**—Default factory setting. Auto mode attempts connection with each of the other methods in turn. This mode enables the print server to detect all your other wireless network settings (for example, IP address, SSID, workgroup, etc.).

If you move your print server to a different wireless network, you must press the test button on the back of the print server for at least five seconds to reset it to its factory defaults (including **Auto** mode). This enables the print server to detect the settings for the new network.

WEP Key

Disables or enables WEP (Wired Equivalent Privacy), which provides a level of security for your network. To communicate, all nodes on your network must be WEP-enabled and must use the same WEP key. See the documentation for your wireless adapter or access point for more information about WEP. If you have an AirPort network, see page 48.

WEP Key Index

Lets you choose between four WEP keys for either 64-bit or 128-bit WEP. For details about WEP, see the documentation for your wireless adapter or access point.

128 Bit / 64 Bit WEP Key

Fields for entering the WEP key(s) used on your network. To communicate, all nodes on the network must be set to the same WEP key. See the documentation for your wireless adapter or access point for more information about WEP.

Appendix B:

Specifications and Notices

Print Server Specifications

Printer Connection

Parallel (IEEE-1284)

Serial (9 pin; factory diagnostics only)

Operating Systems

Windows 95/98/Me/NT 4/2000/XP

NetWare (2 through 5 with NDS)

Mac OS 8.6 through OS X.

Dimensions

Width: 6 inches (15.2 cm)

Depth: 1.25 inches (3.2 cm)

Height: 4.25 inches (10.8 cm)

Electrical

Input Power: 1 A @ 5 VDC

External Power Supply: 115 VAC

Wireless Communication

Variable Data Rates: 11, 5.5, 2, 1 Mbps

Frequency Band: 2.4 GHz ISM Band

Range: up to 120 ft (36.6 m) indoors or 300 ft (91.4 m) outdoors

Wired Equivalent Privacy: 128-bit, 64-bit (compatible with 40-bit), none

Sensitivity (typ, AWGN, 8E-2 PER):
-91 dBm at 1 Mbps, -88 dBm at 2 Mbps,
-87 dBm at 5.5 Mbps, -84dBm at 11 Mbps

Protocols

TCP/IP (lpd or raw TCP port)

IPP (Internet Printing Protocol)

IPX/SPX

Direct Mode IPX/IP

NetBEUI

NetBIOS/IP

AppleTalk

Management

WP-Admin: utility for easy configuration from Windows or Macintosh

WebXAdmin: web-browser utility

XAdmin32: utility for NetWare and advanced configuration

Print server console accessible via serial port, TELNET or NetWare

NetWare PCONSOLE, PRINTCON, PRINTDEF, NWADMIN

Simple Network Management Protocol (SNMP) MIB I and II; IP or IPX

Firmware downloads via NetWare or TCP/IP (master mode tftp, slave mode TFTP, or BOOTP); multiple print servers may be downloaded simultaneously

Test page and factory reset switch

Epson America, Inc. Limited Warranty

What Is Covered: Epson America, Inc. (“Epson”) warrants to the first retail purchaser that the EPSON printer and included printer server (the “Product”) covered by this limited warranty statement, if purchased and used in the United States or Canada, conform to the manufacturer’s specifications and will be free from defects in workmanship and materials for a period of one (1) year from the date of original purchase. Epson also warrants that the consumable ink cartridges enclosed with the printer will perform to the manufacturer’s specified usage, which usage may expire before the expiration of the limited warranty for the EPSON product. For warranty service, you must provide proof of the date of original purchase.

What Epson Will Do To Correct Problems: Should your EPSON product prove defective during the warranty period, please call the EPSON ConnectionSM at (562) 276-7525 (U.S.) or (905) 709-2567 (Canada) for warranty instructions and return authorization. An Epson service technician will provide telephone diagnostic service to determine whether the product requires service. If service is needed during the warranty period, Epson will, at its option, exchange or repair the unit without charge for parts or labor. If Epson authorizes an exchange for the defective product, Epson will ship a replacement product to you, freight prepaid. You are responsible for securely packaging the defective product and returning it to Epson within five (5) working days of receipt of the replacement unit. Epson requires a debit or a credit card number to secure the cost of the replacement product in the event that you fail to return the defective one. If your product is being repaired, Epson will direct you to send your product to Epson or its authorized service center. The product will be fixed and sent back to you. You are responsible for packing the product and for shipping costs to and from the Epson authorized service center. When warranty service involves the exchange of the product or of a part, the item replaced becomes Epson property. The exchanged product or part may be new or refurbished to the Epson standard of quality. Epson’s liability for replacement of the covered product will not exceed the original retail selling price of the covered product. Exchange products and parts assume the remaining warranty period of your original product covered by this limited warranty.

What This Warranty Does Not Cover: This warranty covers only normal use in the United States and Canada. This warranty is not transferable and will not apply to products purchased from an end user. This warranty does not cover damage to the EPSON product caused by parts or supplies not manufactured, distributed or certified by Epson. This warranty does not cover ribbons, ink cartridges or third party parts, components, or peripheral devices added to the EPSON product after its shipment from Epson, e.g., dealer or user-added boards or components. Epson is not responsible for warranty service should the Epson label or logo or the rating label or serial number be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, improper installation, neglect, improper shipping, damage caused by disasters such as fire, flood, and lightning, improper electrical current, software problems, interaction with non-Epson products, or service other than by an Epson Authorized Servicer. If a claimed defect cannot be identified or reproduced, you will be held responsible for the costs incurred.

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR

PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSON OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, NEITHER EPSON AMERICA, INC. NOR ITS AFFILIATES SHALL BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE EPSON PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

In Canada, warranties include both warranties and conditions.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Epson America, Inc. ● P.O. Box 93012 ● Long Beach, CA 90809-3012

FCC Compliance Statement

For United States Users

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The radiated output power of the print server is far below the FCC radio frequency exposure limits. Nevertheless, the print server shall be used in such a manner that the potential for human contact during normal operation is minimized.

WARNING

The connection of a non-shielded equipment interface cable to this equipment will invalidate the FCC Certification of this device and may cause interference levels which exceed the limits established by the FCC for this equipment. It is the responsibility of the user to obtain and use a shielded equipment interface cable with this device. If this equipment has more than one interface connector, do not leave cables connected to unused interfaces. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

For Canadian Users

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Index

Numerics

- 128 Bit/ 64 Bit WEP Key setting, 57
- 802.11b Ad Hoc mode, 30, 33, 56

A

- Access point
 - description, 4
 - Macintosh, 33
 - problems connecting, 44 to 45
 - signal strength, 14, 33
 - supported, 4, 5
- Accessories, ordering, 52
- Ad hoc mode
 - definition, 3
 - illustration, 3
 - using in Windows, 14
 - using on Macintosh, 32, 33
- Adapters, supported, 4, 5
- Additional network computers, setting up, 30, 42
- AirPort
 - base station signal strength, 33
 - enabling, 32
 - enabling WEP encryption, 32, 48 to 49
 - requirements, 5
- AppleTalk, 5, 32, 41
- Auto wireless mode, 56

B

- Bluetooth, 7
- Boot Method setting, 55

C

- Chooser, 42
- Computer-to-computer mode, 32

- Configuring print server
 - Macintosh, 39 to 40
 - Windows, 20 to 23
- Connecting print server
 - Macintosh, 37 to 38
 - Windows, 18 to 19

D

- Data Rate setting, 55
- DHCP, 22, 55
- Direct Print
 - description, 15
 - installing, 24
 - uninstalling, 50
- Documentation, 6
- Domain setting, 54
- Driver, printer
 - Macintosh, 34 to 35
 - Windows, 15, 16

E

- EPSON
 - accessories, 52
 - help, 52
 - Store, 52
 - support web site, 6, 52
 - warranty, 60 to 61
- EPSON Printer Information Center, 6, 24, 34, 35
- EPSON Status Monitor, installing, 17
- EpsonNet Direct Print
 - description, 15
 - installing, 24
 - uninstalling, 50
- EpsonNet Wireless Print Server Utility,
 - installing, 17 to 23, 36

F

Film Factory, installing, 24, 35
Firmware downloads, 59
Firmware Revision setting, 53

G

Gateway setting, 55

H

Help, EPSON, 52

I

Infrastructure mode
 definition, 3, 56
 illustration, 2
 using in Windows, 14
 using on Macintosh, 32, 33
Ink cartridges
 installing, 9 to 10
 ordering, 52
Ink counter, 11
Installing
 EPSON Status Monitor, 17
 EpsonNet Wireless Print Server Utility,
 17 to 23, 36
 Film Factory, 24, 35
 ink cartridges, 9 to 10
 Mac OS 9.x printer driver, 35
 Mac OS X printer driver, 34
 Macintosh software, 33 to 40
 Windows printer driver, 16
 Windows software, 16 to 24
 WP-Admin, 17, 36
IP Address setting
 accessing the computer's IP address, 54
 default print server IP address, 54
 network requirements, 22
Ipconfig, 54

J

Java Runtime Environment, 17, 44

L

LEDs, 19, 38, 47
Loading paper, 11

M

MAC Address setting, 55
Macintosh
 adding printer to OS X Print Center, 41
 AirPort, 32
 AppleTalk, 32
 computer-to-computer mode, 32
 enabling WEP encryption, 48 to 49
 infrastructure mode, 32
 installing and configuring software, 33 to 40
 selecting printer in Chooser, 42
 setting up additional computers, 42
 starting WP-Admin, 42
 system requirements, 5
 uninstalling software, 51

N

NetWare, 15, 59
Network computers, setting up, 30, 42
Network port
 setting up on Windows Me, 98, or 95,
 27 to 28
 setting up on Windows NT, 29 to 30
 setting up on Windows XP or 2000, 25 to 26
Network statistics, 20, 38

P

Paper
 loading, 11
 ordering, 52

Password, WP-Admin, 21, 40, 53

Print Center, 41

Print server

- configuring, 20 to 23, 39 to 40
- connecting to printer, 18 to 19, 37 to 38
- dimensions, 59
- establishing connection, 17 to 21, 37 to 40
- location, 7, 47
- management tools, 59
- name, 40, 53
- printing status page, 19, 38
- protocols supported, 59
- serial number, 53
- signal strength, 20
- specifications, 59
- status lights, 19, 38
- test button, 19, 38, 43
- utility, installing, 36

Print Show animations, 6, 24, 34, 35

Printer

- checking, 11
- connecting to print server, 18 to 19, 37 to 38
- driver, description, 15, 33
- ink counter, 11
- lights, 11, 43
- location, 7, 44, 47
- Macintosh driver, installing, 34 to 35
- maintenance, 43
- ROM version, 11
- test page, 11, 43
- unpacking, 8 to 9
- Windows driver, installing, 16

Printer check, running, 11

Printer Information Center, 6

Problems

- communication error, 47
- connecting to print server, 44 to 45
- Java Runtime Environment, 44
- no signal, 20, 44 to 45
- setting up network port, 26, 28, 30
- setting up WEP on AirPort, 48 to 49
- setting up WEP on Windows, 45
- signal strength, 20
- slow printing, 47
- unable to print, 43, 46

Protocols supported, 59

Pseudo Ad Hoc mode, 56

R

Reference Guide, 6, 24, 34, 35

Requirements, system, 4 to 5

RF Channel setting, 47, 55

ROM version, printer, 11

S

Security

- Macintosh, 32, 48 to 49
- problems, 45
- Windows, 14

Serial connector, 59

Serial number

- print server, 53
- printer, 52

Server Name setting, 40, 53

Service, 52

Signal strength, 14, 20

Slow printing, 47

Software

- Macintosh, 33 to 35
- uninstalling, 50 to 51
- Windows, 15 to 24

SoundAdvice, 52

Specifications, print server, 59

SSID setting, 22, 32, 56

Status lights, print server, 19, 38, 47

Status Monitor, installing, 17

Status page, printing, 19, 38, 43

Subnet Mask setting, 54

Supplies, ordering, 52

Support, 6, 52

System requirements, 4 to 5

T

TCP/IP, 25, 32, 54

Technical support, 52

Test button, print server, 19, 20, 38, 43
Test page, printing, 11, 19, 38, 43

U

Uninstalling software, 50 to 51
Unpacking, 8 to 9
USB, 4
Utility, installing, 17 to 23, 36

W

Warranty, 60 to 61
WEP
 problems, 45
 setting up on AirPort, 32, 48 to 49
 setting up on Windows, 14
 WEP Key Index setting, 57
 WEP Key setting, 56
WiFi channel and mode, 20, 38, 55
Windows
 ad hoc mode, 14
 infrastructure mode, 14
 installing and configuring software, 16 to 24
 network port, 25 to 30
 security, 14
 setting up additional computers, 30
 starting WP-Admin, 24
 system requirements, 4
 uninstalling software, 50

Winipcfg, 54
Wireless Mode setting, 56
Wireless Server Search, 20, 39
Wireless utility, 17 to 23, 36
Workgroup setting, 54
World Wide Web, 52
WP-Admin
 configuration settings, 53 to 57
 configuring, 20 to 23, 40
 connecting with print server, 17 to 21,
 39 to 40
 description, 15, 33
 installing, 17, 36
 password, 21, 40, 53
 starting, 24, 42
 uninstalling, 50, 51

X

XAdmin32, 15, 59

