

Jeep[®]

2020 **RENEGADE**

QUICK REFERENCE GUIDE



STARTING AND OPERATING

ELECTRIC PARK BRAKE (EPB)

Your vehicle is equipped with an Electric Park Brake System (EPB) that offers greater convenience. The EPB switch is located in the center console.



Park Brake Switch

To apply the park brake manually, pull up on the switch momentarily. The BRAKE warning lamp in the instrument cluster and an indicator on the switch will illuminate.

To release the park brake manually, the ignition must be in RUN. Then put your foot on the brake pedal and push the park brake switch down momentarily. Once the park brake is fully disengaged, the BRAKE warning lamp and the switch indicator will extinguish.

The park brake can also be automatically released. With the engine running and the transmission in gear, release the brake pedal and depress the throttle pedal. For safety reasons, your seat belt must also be fastened.

NOTE:

- You may hear a slight whirring sound from the back of the vehicle while the parking brake engages or disengages.
- If your foot is on the brake pedal while you are engaging or disengaging the parking brake, you may notice a small amount of brake pedal movement.

- The Auto Park Brake feature can be used to apply the park brake automatically every time you park the vehicle. Auto Park Brake can be enabled and disabled in the Settings menu in Uconnect.
- The parking brake can be engaged even when the ignition is OFF, however, it can only be disengaged when the ignition is in the RUN mode.
- Safehold is a feature that will automatically apply the park brake under certain conditions. The EPB monitors the status of the driver's seat belt, driver's door and pedal positions to determine if the driver may have exited while the vehicle is still capable of moving and will then automatically apply the park brake to prevent the vehicle from rolling.
- The EPB fault lamp will illuminate if the EPB switch is held for longer than 20 seconds in either the released or applied position. The light will extinguish upon releasing the switch.

Auto Park Brake

The EPB can be programmed to be applied automatically whenever the vehicle speed is below 1.9 mph (3 km/h) and the automatic transmission is placed in PARK, or with a manual transmission, whenever the ignition is in the OFF mode. Auto Park Brake is enabled and disabled by customer selection through the Customer Programmable Features section of the Uconnect Settings.

Any single Auto Park Brake application can be bypassed by pushing the EPB switch to the release position while the transmission is placed in PARK (automatic transmission) and the ignition is in the RUN mode. In some cases, like Automatic or Dual clutch transmission, when the ignition is in the OFF mode EPB can automatically apply even if it has been previously disabled.


For further information, and applicable warnings and cautions, please refer to the Owner's Manual at www.mopar.com/en-us/care/owners-manual.html (U.S. Residents) or www.owners.mopar.ca (Canadian Residents).

SELEC-TERRAIN


Selec-Terrain combines the capabilities of the vehicle control systems, along with driver input, to provide the best performance for all terrains.

Mode Selection Guide

Rotate the Selec-Terrain knob to select the desired mode.

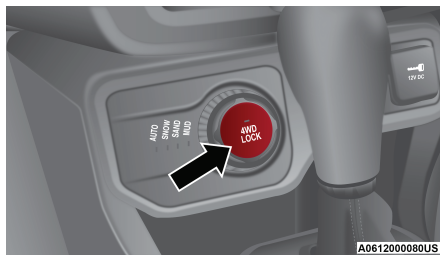

Selec-Terrain Switch

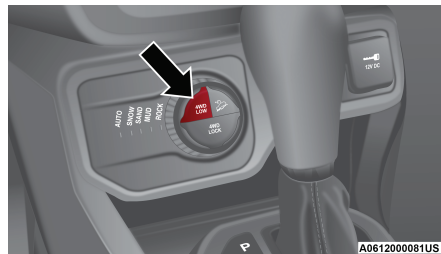

Selec-Terrain Switch (Trailhawk)

- **AUTO:** This four-wheel drive operation is a continuous operation, is fully automatic and can be used on and off-road. This mode balances traction to ensure maneuverability and acceleration improvement compared to a vehicle with two wheel drive. This mode also reduces fuel consumption, since it allows the disconnect of the drive shaft where conditions permit.
- **SNOW:** This mode allows you to have greater stability under conditions of bad weather. It's used on and off-road and on surfaces with poor traction, such as roads covered with snow. When in SNOW mode (depending on certain operating conditions), the transmission will use SECOND gear (rather than FIRST gear) during launches, to minimize wheel slippage, except for in 4WD LOW (Trailhawk models only).

- **SAND:** For off-road driving or use on surfaces with poor traction, such as sandy bottoms. The transmission is set to provide maximum traction. This mode allows more wheel spin and higher shift points to help motor through loose areas.
- **MUD:** For off-road driving or use on surfaces with poor traction, such as roads covered by mud or wet grass.
- **ROCK** (Trailhawk only): This mode is only available in 4WD LOW range. The device sets the vehicle to maximize traction and allow the highest steering capacity for off-road surfaces. This mode gives you the maximum performance off-road. Use for low speed obstacles such as large rocks, deep ruts, etc.

NOTE:

- ROCK mode is only available on the vehicles equipped with the Trailhawk package.
- Activate the Hill Descent Control or Selec Speed Control for steep downhill control.

FOUR WHEEL DRIVE (4x4)

The four wheel drive (4WD) is fully automatic in normal driving mode.

NOTE:

It is not possible to carry out the change of mode when the vehicle exceeds the speed of 75 mph (120 km/h).

Four Wheel Drive (4x4)

The buttons for the activation of four wheel drive are located on the device Selec-Terrain and allow you to select the following:

- **4WD LOCK** — The Power Transfer Unit (PTU) is locked to ensure immediate availability of torque to the rear drive axles. This feature is selectable in AUTO mode and automatic in the other driving modes.
- **4WD LOW** (Trailhawk models only) — The 4WD LOW mode helps to improve the off-road performance in all modes.

Hill Descent Control (HDC)

HDC is intended for low speed off-road driving while in 4WD LOW. HDC maintains vehicle speed while descending hills during various driving situations. HDC controls vehicle speed by actively controlling the brakes.

PASSIVE ENTRY

KEYLESS ENTER-N-GO — IF EQUIPPED


The Passive Entry system is an enhancement to the vehicle's Remote Keyless Entry system and a feature of Keyless Enter-N-Go. This feature allows you to lock and unlock the vehicle's door(s) without having to push the key fob lock or unlock buttons.

NOTE:

- Passive Entry can be enabled or disabled.
- If wearing gloves on your hands, or if it has been raining/snowing on the Passive Entry door handle, the unlock sensitivity can be affected, resulting in a slower response time.
- If the vehicle is unlocked by the Passive Entry Door Handle, and no door is opened within 60 seconds, the vehicle will re-lock and if equipped, the security alarm will arm.
- The key fob may not be able to be detected by the vehicle Keyless Enter-N-Go system if it is located next to a mobile phone, laptop or other electronic device; these devices may block the key fob's wireless signal and prevent the Keyless Enter-N-Go system from starting the vehicle.

TO UNLOCK FROM THE DRIVER'S OR PASSENGER'S SIDE DOORS

With a valid Passive Entry key fob within 5 ft (1.5 m) of the driver's door handle, grab the front driver door handle to unlock the driver's door automatically.

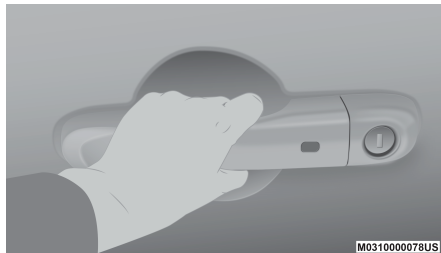

Grab The Door Handle To Unlock

NOTE:

If "Unlock All Doors 1st Press" is programmed, all doors will unlock when you grab hold of the front driver's door handle."

To Unlock From The Passenger Side

With a valid Passive Entry key fob within 5 ft (1.5 m) of the passenger door handle, grab the front passenger door handle to unlock all four doors and the liftgate automatically.

NOTE:

All doors will unlock when the front passenger door handle is grabbed regardless of the driver's door unlock preference setting ("Unlock Driver Door 1st Press" or "Unlock All Doors 1st Press").

To Lock The Vehicle's Doors And Liftgate

With one of the vehicle's Passive Entry key fobs within 5 ft (1.5 m) of the driver or passenger front door handles, push the door handle lock button to lock all four doors.

Do NOT grab the door handle when pushing the door handle lock button. This could unlock the door(s).



Push The Door Handle Button To Lock



DO NOT Grab The Door Handle When Locking

NOTE:

The Passive Entry system will not operate if the key fob battery is depleted.

The vehicle doors can also be locked by using the lock button located on the vehicle's interior door panel.


LIFTGATE

OPENING

To unlock the liftgate, use the key fob or activate the power door lock switches located on the driver door handle.

To open the liftgate, squeeze the electronic liftgate release and pull the liftgate open with one fluid motion.

The Liftgate Passive Entry unlock feature is built into the Electronic Liftgate release. With a valid Passive Entry key fob within 5 ft (1.5 m) of the Liftgate, push the Electronic Liftgate release to open with one fluid motion.

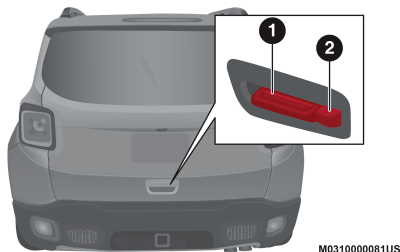

Passive Entry Liftgate Handle Location

- 1 — Liftgate Handle
- 2 — Liftgate Passive Entry Location

CLOSING

Grasp the liftgate closing handle and initiate lowering the liftgate. Release the handle when the liftgate takes over the closing effort.

NOTE:

Before closing the liftgate, make sure to be in possession of the key because the liftgate may be locked.

To Lock The Liftgate

With a valid Passive Entry key fob within 5 ft (1.5 m) of the liftgate, pushing the Keyless Enter-N-Go — Passive Entry lock button located to the right of the outside handle release will lock the vehicle.

NOTE:

The liftgate unlock feature is built into the electronic liftgate release.

MY SKY SUN ROOF

POWER MY SKY RETRACTABLE ROOF

To Open/Close The Front Panel

The power My Sky switches are located on the overhead console. The switches are used to open and close the front panel.


Venting The Front Panel

To vent the front panel push and release the vent switch. During the vent operation, any push on the open/close switch will stop the closing of the panel.

WINDSHIELD WIPER/ WASHER FEATURES

FRONT WIPER OPERATION

The windshield wiper/washer controls are located on the lever on the right side of the steering column.

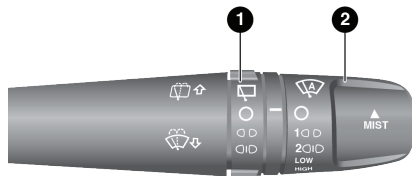

M0318000039US

Windshield Wiper Stalk

- 1 — Rear Wiper Operation
- 2 — Front Wiper Operation

Front Wiper Operation

The front wipers are operated by rotating a switch, located on the end of the lever.

Rear Wiper Operation

The rear wiper/washer is operated by rotating a switch, located at the middle of the lever.

NOTE:

When the front wipers are activated and reverse gear is engaged, the rear wiper will activate to clear the rear window.

Mist Feature

Use this feature when weather conditions make occasional usage of the wipers necessary. Push the lever upward to the MIST position and release for a single wiping cycle.

Rain Sensing Wipers — If Equipped

This feature senses moisture on the windshield and automatically activates the wipers for the driver. The feature is especially useful for road splash or overspray from the windshield washers of the vehicle ahead. Rotate the end of the multifunction lever to one of two settings to activate this feature. Rain Sensing Wipers are activated through the Uconnect Settings.

SPEED CONTROL

ADAPTIVE CRUISE CONTROL (ACC) – IF EQUIPPED

If your vehicle is equipped with Adaptive Cruise Control, the controls operate exactly the same as the standard cruise control, with one difference. You can set a specified distance you would like to maintain between you and the vehicle in front of you.

- If the ACC sensor detects a vehicle ahead, ACC will apply limited braking or acceleration automatically to maintain a preset following distance while matching the speed of the vehicle ahead.

- If the sensor does not detect a vehicle directly ahead of you, it functions like a standard cruise control system, maintaining the speed you set.



Adaptive Cruise Switches

- 1 — Adaptive Cruise Control (ACC) On/Off
- 2 — Distance Setting – Decrease
- 3 — Distance Setting – Increase

PARKSENSE

PARKSENSE REAR OR PARKSENSE FRONT AND REAR PARK ASSIST – IF EQUIPPED

- The six ParkSense sensors, located in the rear fascia/bumper, monitor the area behind the vehicle that is within the sensors' field of view. The sensors can detect obstacles from approximately 12 inches (30 cm) up to 59 inches (150 cm) from the rear fascia/bumper in the horizontal direction, depending on the location, type and orientation of the obstacle.
- The six ParkSense sensors, located in the front fascia/bumper, monitor the area in front of the vehicle that is within the sensors' field of view. The sensors can detect obstacles from approximately 12 inches (30 cm) up to 39 inches (100 cm) from the front fascia/bumper in the horizontal direction, depending on the location, type and orientation of the obstacle.

- When an obstacle is detected, a warning will display in the instrument cluster, and a chime will sound (when Sound and Display is selected from the Uconnect Settings/ Customer Programmable Features section of the Uconnect System screen). As the vehicle moves closer to the object, the chime rate will change from single 1/2 second tone, to slow, to fast, to continuous.
- If the system detects a potential impact with an object, the vehicle brakes may be applied.

PARKSENSE ACTIVE PARK ASSIST SYSTEM

The ParkSense Active Park Assist system is intended to assist the driver during parallel and perpendicular parking maneuvers by identifying a proper parking space, providing audible/visual instructions, and controlling the steering wheel. The ParkSense Active Park Assist system is defined as “semi-automatic” since the driver maintains control of the accelerator, gear selector and brakes. Depending on the driver's parking maneuver

selection, the ParkSense Active Park Assist system is capable of maneuvering a vehicle into a parallel or a perpendicular parking space on either side (i.e., driver side or passenger side).

NOTE:

- The driver is always responsible for controlling the vehicle, responsible for any surrounding objects, and must intervene as required.
- The system is provided to assist the driver and not to substitute the driver.
- During a semi-automatic maneuver, if the driver touches the steering wheel after being instructed to remove their hands from the steering wheel, the system will cancel, and the driver will be required to manually complete the parking maneuver.
- The system may not work in all conditions (e.g. environmental conditions such as heavy rain, snow, etc., or if searching for a parking space that has surfaces that will absorb the ultrasonic sensor waves).

Enabling And Disabling The ParkSense Active Park Assist System

The ParkSense Active Park Assist system can be enabled and disabled with the ParkSense Active Park Assist switch, located on the switch panel below the Uconnect display.

To enable the ParkSense Active Park Assist system, push the ParkSense Active Park Assist switch once (LED turns on).

To disable the ParkSense Active Park Assist system, push the ParkSense Active Park Assist switch again (LED turns off).

When the ParkSense Active Park Assist system is enabled, the “Active ParkSense Searching — Press ◀ or ▶ to Switch Maneuver” message will appear in the instrument cluster display. You may switch to perpendicular parking or Parallel Park Exit if you desire. The arrow buttons on the left side of the steering wheel can be used to switch parking maneuvers.

PARKVIEW

PARKVIEW REAR BACK UP CAMERA

You can see an on-screen image of the rear of your vehicle whenever the transmission is shifted into REVERSE. The ParkView Rear Back Up Camera image will be displayed on the Uconnect Display, located on the center stack of the instrument panel.

LIGHTS

FRONT FOG LIGHTS – IF EQUIPPED

The front fog light switch is built into the headlight switch.

To activate the front fog lights, turn on the parking lights or the low beam headlights and push the fog light button on the headlight switch. To turn off the front fog lights, push the fog light button on the headlight switch a second time or turn off the headlight switch.

An indicator light in the instrument cluster illuminates when the fog lights are turned on.

NOTE:

The fog lights will operate with the low beam headlights or parking lights on. Selecting the high beam headlights will turn off the fog lights.

Cornering Lights

The cornering lights are a feature to improve visibility at night while turning the vehicle. When activated, a light incorporated in the front fog light will illuminate on the side of the vehicle the steering wheel is rotated or the turn signal indicator is on. It can be activated through the Uconnect System.

SAFETY FEATURES

FORWARD COLLISION WARNING WITH MITIGATION – IF EQUIPPED

The Forward Collision Warning (FCW) system provides the driver with active braking, audible and visual warnings (within the instrument cluster display) and may apply a brake jerk to warn the driver when it detects a potential frontal collision. The warnings and limited braking are intended to provide the driver with enough time to react and avoid or mitigate the potential collision.

FCW monitors the information from the forward-looking sensor, as well as the Electronic Brake Controller (EBC) to calculate a probable collision. When the system determines that a collision is probable, a warning message (both audible and visual) will be displayed within the cluster display along with a brake jerk warning (previously enabled in the Uconnect Settings). When the system senses the driver applying the brakes to avoid a probable collision, additional brake force will be provided to the vehicle. When

the system determines a collision with the vehicle in front of you is no longer probable, the warning message will be deactivated.

NOTE:

The FCW feature can be customized and turned off through the Uconnect System touchscreen.

BLIND SPOT MONITORING — IF EQUIPPED

The Blind Spot Monitoring (BSM) system uses two radar-based sensors, located inside the rear bumper fascia, to detect highway licensable vehicles (automobiles, trucks, motorcycles, etc.) that enter the blind spot zones from the rear/front/side of the vehicle.

Rear Cross Path

The Rear Cross Path (RCP) feature is intended to aid the driver when backing out of parking spaces where their vision of oncoming vehicles may be blocked. Proceed slowly and cautiously out of the parking space until the rear end of the vehicle is exposed. The RCP system will then have a clear view of the cross traffic and if an oncoming vehicle is detected, alert the driver.

Mode Of Operation

Three selectable modes of operation are available in the Uconnect System. They are available through the Uconnect System.

Blind Spot Monitoring Fault Warnings

Blinded Sensor – In the case of a blinded sensor:

- BSM Mirror Warning Lights are turned on continuously.
- An instrument cluster message will display “Blind Spot Monitoring Unavailable - Wipe Rear Bumper Corners.”

System Not Available – In the case of the system being temporary unavailable:

- BSM Mirror Warning Lights are turned on continuously.
- An instrument cluster message will display “Blind Spot Monitoring Temporarily Unavailable.”

In the case of the system being completely unavailable:

- A chime will turn on.
- An instrument cluster message will display “Blind Spot Monitoring Unavailable - Service Required.”

LANESENSE — IF EQUIPPED

The LaneSense system is operational at speeds above 37 mph (60 km/h) and below 112 mph (180 km/h). The LaneSense system uses a forward looking camera to detect lane markings and measure vehicle position within the lane boundaries.

Turning LaneSense On Or Off

The default status of LaneSense is “off”. The LaneSense button is located on the center stack.

LaneSense Warning Message

The LaneSense system will indicate the current lane drift condition through the instrument cluster display. The instrument cluster display will provide a visual warning depicting the unintentional lane departure.


When both lane markings are detected and the driver unintentionally drifts out of the lane (no turn signal applied), the LaneSense system provides a haptic warning in the form of torque applied to the steering wheel to prompt the driver to remain within the lane boundaries. The driver may manually override the haptic warning by applying torque into the steering wheel at any time. When only a single lane marking is detected and the driver unintentionally drifts across the lane marking (no turn signal applied), the LaneSense system provides a visual warning through the instrument cluster display to prompt the driver to remain within the lane. When only a single lane marking is detected, a haptic (torque) warning will not be provided.

NOTE:

The LaneSense system can be customized and turned off through the Uconnect System touchscreen.

FRONT USB PORT/AUDIO JACK (AUX) PORT

USB PORT

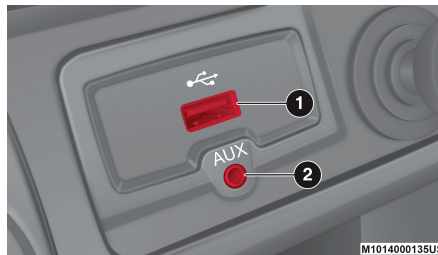

Front USB Port And AUX Jack

- 1 — USB Port
- 2 — AUX Jack

This feature allows an iPod® or external USB device to be plugged into the USB port. The USB port supports certain iPod® and iPhone® devices. The USB port also supports playing music from external USB devices. Some iPod® software versions may not fully support the USB port features. Please visit Apple's® website for iPod® software updates. Connect your iPod® or compatible device using a USB

cable connected to the USB port. USB memory sticks with audio files can also be used. Then, audio from the device can be played on the vehicle's sound system while providing the artist, track title, and album information on the radio display (if available on device). When connected, the iPod®/USB device can be controlled using the radio or steering wheel audio controls to play, skip to the next or previous track, browse, and list the contents.

AUX/AUDIO JACK

The AUX/audio jack provides a means to connect a portable audio device, such as an MP3 player, to the vehicle's sound system. This requires the use of a 3.5 mm stereo audio patch cable. AUX mode is entered by pushing the Media button. Once in Media mode, select the AUX button when the audio jack is connected. Volume on the connected device may need to be adjusted to optimize audio quality.

SIRIUSXM GUARDIAN™ — IF EQUIPPED

ACTIVATION

Activate your account to enjoy advanced safety, security and convenience features.

1. Press the Apps icon on the bottom of your in-vehicle touchscreen.
2. Select the “Activate Services” icon from your list of apps.
3. Select “Customer Care” to speak with a SiriusXM Guardian™ Customer Care agent who will activate services in your vehicle, or select “Enter Email” to activate on the web.

Once you have activated your services, you’re only a few steps away from using remote services.



Mobile App

Download the Uconnect mobile app:

- Once downloaded, use your Owner Account login and password to access the app.
- A PIN is required to execute remote services.
- Tap the Location button on the bottom menu bar of the app to locate your vehicle or send a destination to your Uconnect Navigation (if equipped).
- Tap the “Settings” side menu in the upper left corner of the app to bring up app settings and access the Assist Call Centers.

For further information:

- US residents visit: <https://www.driveuconnect.com/sirius-xm-guardian.html>
- Canadian residents visit: <https://www.siriusxm.ca/guardian-v1/>

FEATURES

In-Vehicle

SiriusXM Guardian™ enhances your ownership and driving experience by connecting your vehicle to an operable network. When connected to an operable network, you have access to:

- SOS Call: Connect to a live agent who will contact emergency services and stay on the line with you until help arrives.
- Customer Care Assistance: Speak with a live agent by pressing the ASSIST button on the overhead console to get Roadside Assistance or support.

Remote Services

- Vehicle Finder helps you find where you parked your car.
- Send & Go allows you to send destinations to your navigation system for easy access on the go.
- Remote Door Lock/Unlock lets you unlock or lock your doors from any distance.
- Remote Horn & Lights allows you to sound your horn and flash your lights to easily find your car.
- Receive monthly Vehicle Health Reports, and Alerts whenever a problem is detected under the hood.

Security Services

- Receive stolen vehicle assistance, using GPS technology to help authorities locate your vehicle if it is stolen.

SiriusXM Guardian™ remote services can be used with the Uconnect app from virtually anywhere.

For further information on SiriusXM Guardian™ or the Uconnect mobile App, refer to your Uconnect Owner's Manual Supplement.

VEHICLE FINDER AND SEND & GO

Vehicle Finder

Vehicle Finder allows you to find the location of your vehicle. To find your vehicle:

1. Press the "Location" tab on the Uconnect mobile App bottom bar.
2. Select the "Vehicle" icon to determine the location of your vehicle.
3. Select the Find Route button that appears, once your vehicle is located.
4. Select your preferred Navigation app to route a path to your vehicle.

Send & Go

To send an address to your Uconnect Navigation using the Uconnect mobile app:

1. Press the "Location" tab on the bottom bar of the Uconnect mobile app.
2. Type in the destination you would like to navigate to, or search through one of the categories provided.

3. Select the destination you want to send from the list that appears.
4. Press the Send To Vehicle button, and then confirm the destination by pressing "Yes," to send the destination to the Uconnect Navigation in your vehicle.
5. Finally, confirm the destination inside your vehicle by pressing the "Go Now" option on the pop-up that appears on the touchscreen when the vehicle is started.

AMAZON ALEXA® — IF EQUIPPED

Amazon Alexa®

Alexa® is Amazon's cloud-based voice service and it lets you voice-command your Uconnect system from just about anywhere.

To link your Uconnect system to Amazon Alexa®:

1. Download the Amazon Alexa® app on your iPhone® or Android™.
2. Launch the app, then tap MENU, and go to SKILLS.


3. Search for your vehicle. Then tap "ENABLE."
4. Select LINK ACCOUNT.
5. Log in using your vehicle's Owner Account ID and password.

Examples of commands:

- "Alexa®, ask Dodge Durango how much gas is in my vehicle."
- "Alexa®, ask Jeep® Grand Cherokee to send directions to Iron Mountain to my vehicle."
- "Alexa®, ask Chrysler 300 to start my vehicle."

ANDROID AUTO™ AND APPLE CARPLAY® — IF EQUIPPED

ANDROID AUTO™ INTEGRATION

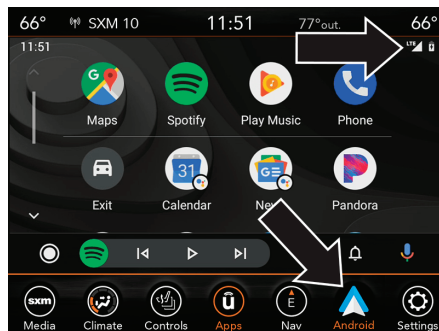


Android Auto™ And LTE Data Coverage

With easy touchscreen navigation and voice recognition, Android Auto™ brings useful information and organizes it into simple cards that appear just when they are needed.

1. Download the Android Auto™ app from the Google Play store on your Android™-powered smartphone.
2. Connect your Android™-powered smartphone to one of the media USB ports in your vehicle. If the Android Auto™ app was not downloaded, it will begin to download when you plug in your device.
3. Once the device is connected and recognized, the "Phone" icon on the personalized menu bar will automatically change to the Android Auto™ Icon.

APPLE CARPLAY® INTEGRATION

Apple CarPlay® is the smarter, safer way to use your iPhone® to get directions with Apple Maps, listen to Apple Music®, make calls and send messages — all through the Uconnect touchscreen or with your voice through Siri.

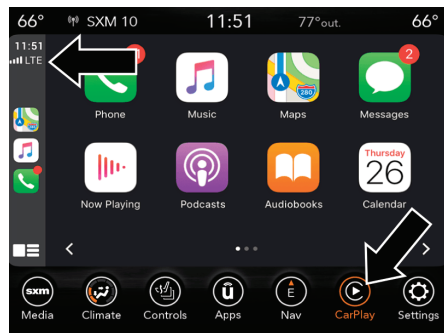

Apple CarPlay® And LTE Data Coverage

To use Apple CarPlay®, make sure you are using iPhone® 5 or later, have Siri enabled in Settings, ensure your iPhone® is unlocked for the very first connection only, and then follow these steps:

1. Connect your iPhone® to one of the media USB ports in your vehicle.
2. Once the device is connected and recognized, the “Phone” icon on the personalized menu bar will automatically change to the Apple CarPlay® icon.

NOTE:

Long Press: Press and hold the VR button to activate Siri or Google Assistant.

Short Press: Briefly tap the VR button to activate the native Uconnect voice recognition system.

When using Android Auto™ or Apple CarPlay®, be sure to use the factory-provided cable that came with your phone, as aftermarket cables may not work.

JEEP VEHICLE OWNER'S MOBILE APP

NOTE:

The Owner's Mobile App content is applicable to vehicles sold in the US market and are not available from the Canadian App Store® or Google Play Store.

KEY FEATURES

- Owner Information For Your Vehicle
- Accident Assistant
- Online Service Scheduling
- Roadside Assistance
- Maintenance History
- And More

To get this FREE application, go directly to the App Store® or Google Play Store and enter the search keyword “Jeep”.

The Jeep Vehicle Owner's Information Application is the essential app for owners of Jeep brand vehicles. The app puts driver and lifestyle information right in the palm of your hand, anywhere you go. Whether it's providing information about specific product features, taking a tour through your vehicle's equipment, staying up to date on your vehicle's health, knowing what steps to take following an accident, or scheduling your next appointment, we know you'll find the app an important extension of your Jeep vehicle. Simply download the FREE app, select your make and model and enjoy the ride.

FEATURES/BENEFITS

- Available for free on iOS and Android™ smartphones and tablets.
- Select Jeep brand vehicles from model year 2011 to current model year.
- You can also add other Chrysler, Dodge, Ram, FIAT, or Alfa Romeo vehicles.*
- Easy access to vehicle information anywhere you go using categories, bookmarks, search and an A-Z index.
- Vehicle information such as operating instructions, maintenance, service history, vehicle controls and emergency procedures.
- Find a dealer or an FCA-certified repair facility.
- Easily document and email an accident report.

- A parking reminder that allows you to drop a pin on your location and navigate back to your vehicle.
- Contact customer care with one click.
- Access to vehicle heritage, parts, accessories, and social media networks.
- Schedule your next service appointment.
- Available in English and Spanish.

*App supports selected vehicles from model year 2011 to present.

To get this FREE application, go directly to the App Store® or Google Play Store and enter the search keyword "Jeep".





Do not attempt water fording unless depth is known and consistent with the vehicle's water fording rating. Traversing water can cause damage that may not be covered by the new vehicle warranty. Always off road responsibly in approved areas.



Whether it's providing information about specific product features, taking a tour through your vehicle's heritage, knowing what steps to take following an accident or scheduling your next appointment, we know you'll find the app an important extension of your Jeep® brand vehicle.

Simply download the app, select your make and model and enjoy the ride. To get this app, go directly to the App Store® or Google Play® Store and enter the search keyword "JEEP" (U.S. residents only).

U. S.



mopar.com/om

**DOWNLOAD A FREE ELECTRONIC COPY OF THE MOST UP-TO-DATE
OWNER'S MANUAL, UCONNECT AND WARRANTY BOOKLETS**

Canada



owners.mopar.ca

© 2019 FCA US LLC. All Rights Reserved. Tous droits réservés.
Jeep is a registered trademark of FCA US LLC. Jeep est une marque déposée de FCA US LLC.

App Store is a registered trademark of Apple Inc. Google Play Store is a registered trademark of Google.