



AutoConnect Mid-Mount Mower 60D and 72D



JOHN DEERE



OPERATOR'S MANUAL

AutoConnect Mid-Mount Mower 60D and 72D

OMLVU27667 ISSUE K5 (ENGLISH)

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

If this product contains a gasoline engine:



WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

The State of California requires the above two warnings.

John Deere Augusta Works

North American Edition
Printed in U.S.A.



Introduction

Foreword

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. See www.techpubs.deere.com (Ag&Turf/JDPS), www.johndeeretechnico.com (C&F), or your John Deere dealer to order.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (PIN) in the Specification or Machine Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. PIN information is helpful when ordering parts. File the identification numbers in a secure place off the machine.


WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate or statement which you should have received at time of purchase.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

If you are not the original owner of this machine, it is in your interest to contact your local John Deere dealer to inform them of this unit's serial number. This will help John Deere notify you of any issues or product improvements.

DX,IFC1-19-03APR09

John Deere Is at Your Service

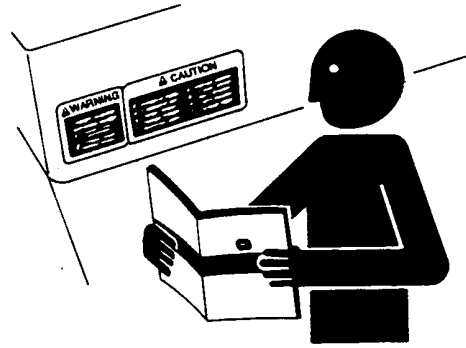

TS201—UN—15APR13

Customer satisfaction is important to John Deere.

Our dealers strive to provide you with prompt, efficient parts, and service:

- Maintenance and service parts to support your equipment.
- Trained service technicians and the necessary diagnostic and repair tools to service your equipment.
- **John Deere replacement parts, repair services, and information for maintenance or repair are available. For more information, please visit deere.com or deere.ca.**

DX,IFC,JDS-19-30SEP25

Contents

	Page		Page
Product Identification		Engaging Mower	35-3
Product Compatibility	00-1	Unplugging Mower	35-3
Record Identification Numbers	00-1	Transporting Mower on Machine	35-3
Safety Labels		Service	
Understanding the Machine Safety Labels	05-1	Service Intervals	40-1
Safety Labels	05-1	Grease	40-1
Safety		Gear Oil	40-1
Read Safety in Machine Operator's Manual	10-1	Lubricating Mower	40-1
Operator Training Required	10-1	Servicing Gearbox	40-2
Preparation	10-1	Servicing Mower Belt	40-2
Operating Safely	10-1	Servicing Mower Blades	40-3
Parking Safely	10-2	Replacing Wheels	40-4
Checking Mowing Area	10-2	Replacing Sheaves	40-4
Rotating Blades are Dangerous	10-2	Specifications	
Protect Children	10-2	60 Inch 7-Iron Mower Deck	60-1
Stay Clear of Rotating Drivelines	10-3	72 Inch 7-Iron Mower Deck	60-1
Avoid Tipping	10-3		
Wear Appropriate Clothing	10-3		
Maintenance and Storage	10-3		
Assembly			
Parts in Lift Kit	15-1		
Install Gearbox and Tensioner Pulley (60D only)	15-3		
Install Wheels	15-4		
Install Discharge Chute	15-5		
Install Forward Lift Link on Mower Deck	15-5		
Assemble Rear Lift Link	15-6		
Install Hangers	15-6		
Install Brackets	15-7		
Install Mid Rockshaft	15-7		
Install Height Adjust Link	15-8		
Complete Installation of Lift Kit	15-9		
Installing			
Preparing Machine	25-1		
Prepare Tractor and PTO Coupler	25-1		
Attach Mower Deck to Tractor	25-1		
Removing and Storing			
Removing Mower	30-1		
Storing Mower	30-1		
Operating			
Raising and Lowering Mower	35-1		
Adjusting Mower Level (Side-to-Side)	35-1		
Adjusting Mower Level (Front-to-Rear)	35-1		
Adjusting Mower Wheels	35-2		
Using Height Adjust Link	35-2		

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2025
DEERE & COMPANY
Moline, Illinois
All rights reserved.
Previous Editions
Copyright © 2009, 2010, 2013

Product Identification

Product Compatibility

The 60D and 72D AutoConnect mowers are designed for use with compact utility tractor models: 3120, 3320, 3520, 3720, 3033R, 3038R, 3039R, 3045R and 3046R.

Before operating the mower, the following equipment must be installed on the machine.

- Mid-PTO Kit
- Mower Lift Kit

UP00731,000004D-19-21OCT25

Record Identification Numbers

AutoConnect Mower

60D Serial No. (060001-)

72D Serial No. (060001-)

If you need to contact an Service Center for information on servicing, always provide the product model and serial number.

You will need to locate the model and serial numbers for the mower deck and record the information in the spaces provided below.

DATE OF PURCHASE:

DEALER NAME:

DEALER PHONE:

PRODUCT SERIAL NUMBER:

UP00731,000004E-19-21OCT25

Safety Labels

Understanding the Machine Safety Labels



MXAL42363—UN—22MAY13

The machine safety labels shown in this section are placed in important areas on your machine to draw attention to potential safety hazards. DANGER or WARNING safety labels are located near specific hazards.

The operator's manual also explains any potential safety hazards whenever necessary in special safety messages that are identified with the word, CAUTION, and the safety-alert symbol.

On your machine safety labels, the words DANGER, WARNING, and CAUTION are used with this safety-alert symbol. DANGER identifies the most serious hazards:

- **DANGER;** The signal word DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.
- **WARNING;** The signal word WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.
- **CAUTION;** The signal word CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. CAUTION may also be used to alert against unsafe practices associated with events which could lead to personal injury.

Replace missing or damaged safety labels. Use this operator's manual for correct safety label placement.

There can be more safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.

French or Spanish Safety Labels and Operator's Manual

Operator's manuals and safety labels with content in French or Spanish are available for this machine through authorized John Deere dealers. See your John Deere dealer.

NOTE: Both text and no-text labels are shown. Your machine is only equipped with one of these types of labels.


MP47322,00F4601-19-21FEB23

Safety Labels




LV18771—UN—20AUG13

Safety Label - LVU118610

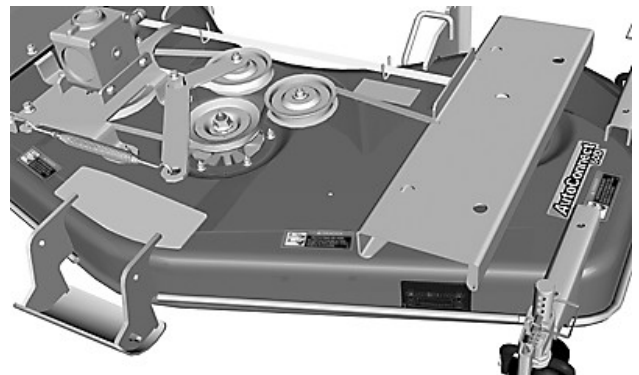

LV18643—UN—20AUG13

60 Inch Mower Deck

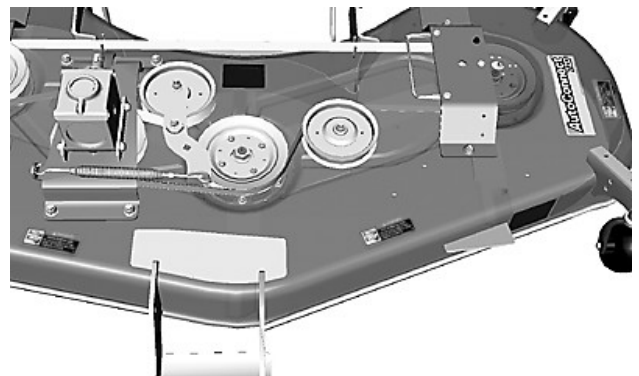

LV18646—UN—20AUG13

72 Inch Mower Deck

DANGER


ROTATING BLADE

Do not put hands or feet under or into mower when engine is running.




LV18772—UN—20AUG13

Safety Label - M139128

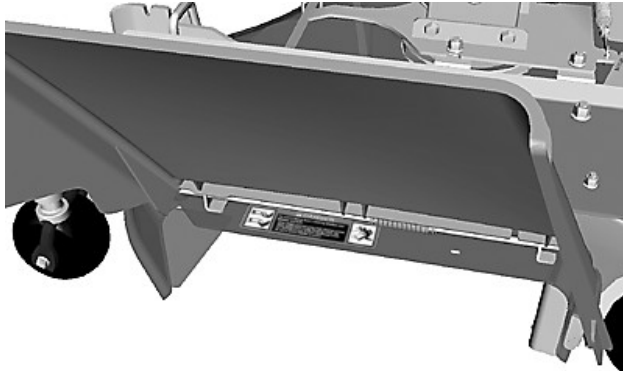

LV18644—UN—20AUG13

60 Inch Mower Deck

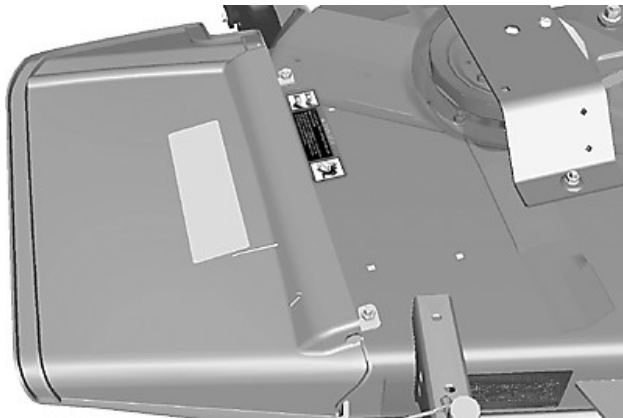

LV18647—UN—20AUG13

72 Inch Mower Deck

DANGER

To avoid injury from rotating blades and thrown objects:


Keep hands and feet away from rotating blades.

Keep bystanders a safe distance away. Do not operate mower without discharge chute or entire grass catcher in place.




LV18773—UN—20AUG13

Safety Label - M156388

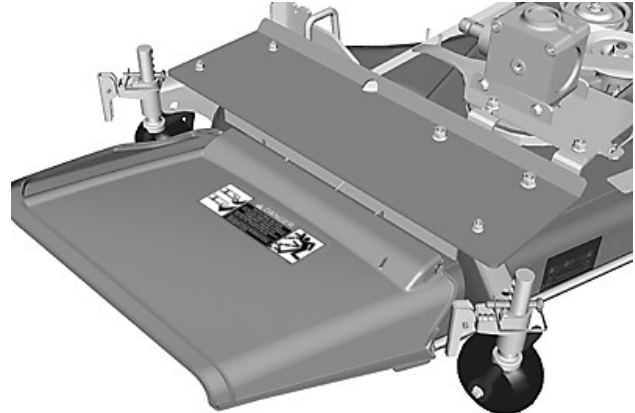

LV18645—UN—20AUG13

60 Inch Mower Deck

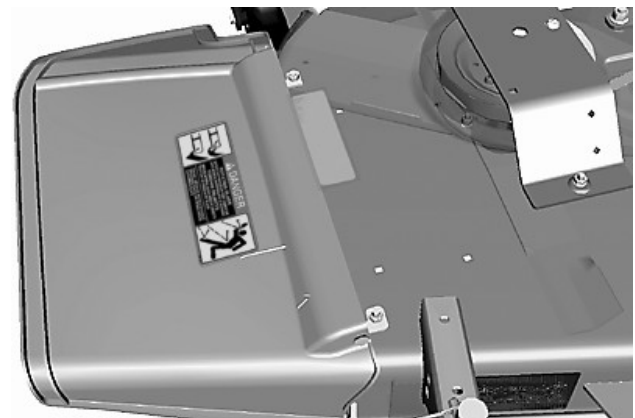

LV18648—UN—20AUG13

72 Inch Mower Deck

DANGER

ROTATING BLADE

Do not put hands or feet under or into mower when engine is running.

THROWN OBJECTS

Before mowing, clear area of objects that may be thrown by blade.

Do not operate mower without discharge chute or entire grass catcher in place.

Safety

Read Safety in Machine Operator's Manual

Read the general safety operating precautions in your machine operator's manual for additional safety information.

UP00731,0000095-19-04SEP13

Operator Training Required

- Read the operator's manual and other training material. If the operator or mechanic cannot read English, it is the owner's responsibility to explain this material to them. This publication is available in other languages.
- Become familiar with the safe operation of the equipment, operator controls, and safety signs.
- All operators and mechanics should be trained. The owner of the machine is responsible for training the users.
- Never let children or untrained people operate or service the equipment. Local regulations may restrict the age of the operator.
- The owner/user can prevent and is responsible for accidents or injuries occurring to themselves, other people, or property.
- Operate the machine in an open, unobstructed area under the direction of an experienced operator.

UP00731,0000096-19-04SEP13

Preparation

- Evaluate the terrain to determine what accessories and attachments are needed to properly and safely perform the job. Only use accessories and attachments approved by the manufacturer.
- Wear appropriate clothing including hard hat, safety glasses and hearing protection. Long hair, loose clothing or jewelry may get tangled in moving parts.
- Inspect the area where the equipment is to be used and remove all objects such as rocks, toys and wire which can be thrown by the machine.
- Use extra care when handling gasoline and other fuels. They are flammable and vapors are explosive.
 - Use only an approved container.
 - Never remove gas cap or add fuel when engine is running. Do not smoke.
 - Never refuel or drain the machine indoors.
- Check that the operator's presence controls, safety switches and shields are attached and functioning properly. Do not operate unless they are functioning properly.

UP00731,0000097-19-04SEP13

Operating Safely

- Never run an engine in an enclosed area where dangerous carbon monoxide fumes can collect.
 - Only operate in good light, keeping away from holes and hidden hazards.
- Be sure all drives are in neutral and parking brake is engaged before starting engine. Only start engine from the operator's position. Use seat belts if provided.
- Slow down and use extra care on hillsides. Be sure to travel in the recommended direction on hillsides. For this machine, drive up and down hillsides, not across. Turf conditions can affect the machine's stability. Use caution while operating near drop-offs.
- Slow down and use caution when making turns and when changing directions on slopes.
- Never raise deck with the blades running
- Never operate with the PTO shield, or other guards, not securely in place. Be sure all interlocks are attached, adjusted properly, and functioning properly.
- Never operate with the discharge deflector raised, removed or altered, unless using a grasscatcher. Do not operate mower without discharge chute or entire grasscatcher in place.
- Do not change the engine governor setting or overspeed the engine. Operating the engine at excessive speed can increase the hazard of personal injury.
- Stop on level ground, lower implements, disengage drives, engage parking brake, and shut off engine before leaving the operator's position for any reason including emptying the grasscatchers or unclogging the chute.
- Stop equipment and inspect blades after striking objects or if an abnormal vibration occurs. Make necessary repairs before resuming operations.
- Keep hands and feet away from the cutting units.
- Look behind and down before backing up to be sure of a clear path.
- Never carry passengers and keep pets and bystanders away.
- Slow down and use caution when making turns and crossing roads and sidewalks. Stop blades if not mowing. Watch for traffic when operating near or crossing roadways.
- Be aware of the mower discharge direction and do not point it at anyone.
- Do not operate the machine while under the influence of alcohol or drugs.
- Use care when loading or unloading the machine into or off of a trailer or truck.
- Use care when approaching blind corners, shrubs, trees, or other objects that may obscure vision.
- Inspect machine before you operate. Be sure hardware is tight. Repair or replace damaged, badly worn, or missing parts. Be sure guards and shields

are in good condition and fastened in place. Make any necessary adjustments before you operate.

- Before using, always visually inspect to see that the blades, blade bolts and the mower assembly are not worn and damaged. Replace worn and damaged blades and bolts in sets to preserve balance.
- Keep safety labels visible when installing accessories and attachments.
- Do not wear radio or music headphones. Safe service and operation require your full attention.
- When machine is left unattended, stored, or parked, lower the mower deck unless a positive mechanical lock is used.


UP00731,0000098-19-04SEP13

Parking Safely

1. Stop machine on a level surface, not on a slope.
2. Disengage PTO and stop attachments.
3. Lower attachments to the ground.
4. Lock the park brake.
5. Stop the engine.
6. Remove the key.
7. Wait for engine and all moving parts to stop before you leave the operator's seat.
8. Close fuel shut-off valve, if your machine is equipped.
9. Disconnect the negative battery cable or remove the spark plug wire(s) (for gasoline engines) before servicing the machine.

UP00731,000009D-19-04SEP13

Checking Mowing Area

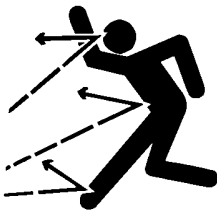

TCAL41689—UN—08APR13

- Clear mowing area of objects that might be thrown. Keep people and pets out of mowing area.
- Low-hanging branches and similar obstacles can injure the operator or interfere with mowing operation. Before mowing, identify potential obstacles such as low-hanging branches, and trim or remove those obstacles.
- Study mowing area. Set up a safe mowing pattern. Do not mow where traction or stability is doubtful.

- Test drive area with mower lowered but not running. Slow down when you travel over rough ground.

AP43109,000028C-19-15APR13

Rotating Blades are Dangerous

HELP PREVENT SERIOUS OR FATAL ACCIDENTS:




TCAL43410—UN—15MAR13

- Rotating blades can cut off arms and legs, and throw objects. Failure to observe safety instructions could result in serious injury or death.
- Keep hands, feet and clothing away from mower deck when engine is running.
- Be alert at all times, drive forward and in reverse carefully. People, especially children can move quickly into the mowing area before you know it.
- Before backing up, stop mower blades or attachments and look down and behind the machine carefully, especially for children.
- Do not mow in reverse.
- Shut off blades when you are not mowing.
- Park machine safely before leaving the operator's station for any reason including emptying the grasscatchers or unplugging the chute.

UP00731,000009E-19-04SEP13

Protect Children

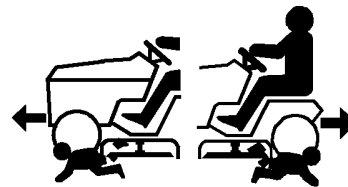

MXAL41929—UN—18FEB13

- Death or serious injury can occur when young children associate having fun with a lawn mowing machine simply because someone has given them a ride on a machine.
- Children are attracted to lawn mowing machines and mowing activities. They don't understand the dangers of rotating blades or the fact that the operator is unaware of their presence.
- Children who have been given rides in the past may suddenly appear in the mowing area for another ride and be run over or backed over by the machine.
- Tragic accidents with children can occur if the operator is not alert to the presence of children,

especially when a child approaches a machine from behind. Before and while backing up, stop mower blades and look down and behind the machine carefully, especially for children.

- Never carry children on a machine or attachment, even with the blades off. Do not tow children in a cart or trailer. They can fall off and be seriously injured or interfere with safe machine operation.
- Never use the machine as a recreational vehicle or to entertain children.
- Never allow children or an untrained person operate the machine. Instruct all operators not to give children a ride on the machine or in an attachment.
- Keep children indoors, out of the mowing area, and in the watchful eye of a responsible adult, other than the operator, when a mower is being operated.
- Stay alert to the presence of children. Never assume that children will remain where you last saw them. Turn the machine off if a child enters the work area.
- Use extreme care when approaching blind corners, shrubs, trees, or other objects that may block your view of a child.

OUO1023,0000037-19-21FEB13

Stay Clear of Rotating Drivelines

Entanglement in rotating driveline can cause serious injury or death.

- Wear close fitting clothing.
- Stop the engine and be sure PTO driveline is stopped before getting near it.

UP00731,000009A-19-04SEP13

Avoid Tipping



TCAL47141—UN—12APR13

- Slopes are a major factor related to loss-of-control and tip-over accidents, which can result in severe injury or death. Operation on all slopes requires extra caution.
- Be aware that mechanical front wheel drive (MFWD) can improve access to dangerously sloped terrain, thereby increasing the possibility of a tipover.
- Drive up and down a hill - not across.
- Watch for holes, ruts, bumps, rocks, or other hidden objects. Uneven terrain could overturn the machine. Tall grass can hide obstacles.
- Do not mow or operate machine on wet grass. Tires may lose traction. Tires may lose traction on slopes even though the brakes are functioning properly.

- Choose a low ground speed so you will not have to stop or shift while on a slope.
- Always keep the machine in gear when going down slopes. Do not shift to neutral and coast downhill.
- Avoid starting, stopping or turning on a slope. If the tires lose traction, disengage the blades and proceed slowly, straight down the slope.
- Keep all movement on slopes slow and gradual. Do not make sudden changes in speed or direction, which could cause the machine to roll over.
- Do not operate machine near drop-offs, ditches, embankments, or bodies of water. The machine could suddenly roll over if a wheel goes over the edge or the edge caves in. Leave a safety area between the machine and any hazard.
- Danger of tipping is increased greatly with tires in narrow tread setting and driving at high speed.
- Follow the manufacturer's recommendations for wheel weights or counterweights for added stability when operating on slopes or using front or rear mounted attachments. Remove weights when not required.

UP00731,000009B-19-04SEP13

Wear Appropriate Clothing



TCAL41682—UN—08MAR13

- Always wear safety goggles, or safety glasses with side shields, and a hard hat when operating the machine.
- Wear close fitting clothing and safety equipment appropriate for the job.
- While operating this machine, always wear substantial footwear and long trousers. Do not operate the equipment when barefoot or wearing open sandals.
- Wear a suitable protective device such as earplugs. Loud noise can cause impairment or loss of hearing.

UP00731,00000A0-19-04SEP13

Maintenance and Storage

- Never operate machine in a closed area where dangerous carbon monoxide fumes can collect.
- Disengage drives, lower implement, lock parking brake, stop engine and remove key or disconnect spark plug (for gas engines). Wait for all movement to stop before adjusting, cleaning or repairing.
- Clean grass and debris from cutting units, drives,

mufflers, and engine to help prevent fires. Clean up oil or fuel spillage.


- Let engine cool before storing and do not store near flame.
- Shut off fuel while storing or transporting. Do not store fuel near flames or drain indoors.
- Park machine on level ground. Never allow untrained personnel to service machine. Understand service procedure before doing work.
- Use jack stands or lock service latches to support components when required. Securely support any machine elements that must be raised for service work.
- Before servicing machine or attachment, carefully release pressure from any components with stored energy, such as hydraulic components or springs.
- Release hydraulic pressure by lowering attachment or cutting units to the ground or to a mechanical stop and move hydraulic control levers back and forth.
- Disconnect battery or remove spark plug (for gas engines) before making any repairs. Disconnect the negative terminal first and the positive last. Reconnect positive first and negative last.
- Use care when checking blades. Wrap the blades or wear gloves, and use caution when servicing them. Only replace blades. Never straighten or weld them.
- Keep hands, feet, clothing, jewelry and long hair away from moving parts. If possible, do not make adjustments with the engine running.
- Charge batteries in an open well ventilated area, away from spark and flames. Unplug charger before connecting or disconnecting from battery. Wear protective clothing and use insulated tools.
- Keep all parts in good working condition and all hardware tightened. Replace all worn or damaged decals.
- Check grasscatcher components and the discharge guard frequently and replace with manufacturer's recommended parts, when necessary. Grasscatcher components are subject to wear, damage, and deterioration which could expose moving parts or allow objects to be thrown.
- Keep all nuts and bolts tight, especially blade attachment bolts, to be sure the equipment is in safe working condition.
- Check brake operation frequently. Adjust and service as required.
- On multi-bladed machines, take care as rotating one blade can cause other blades to rotate.

UP00731,000009C-19-04SEP13

Assembly

Parts in Lift Kit

*NOTE: Some parts are installed on tractor, and others
are installed on mower.*

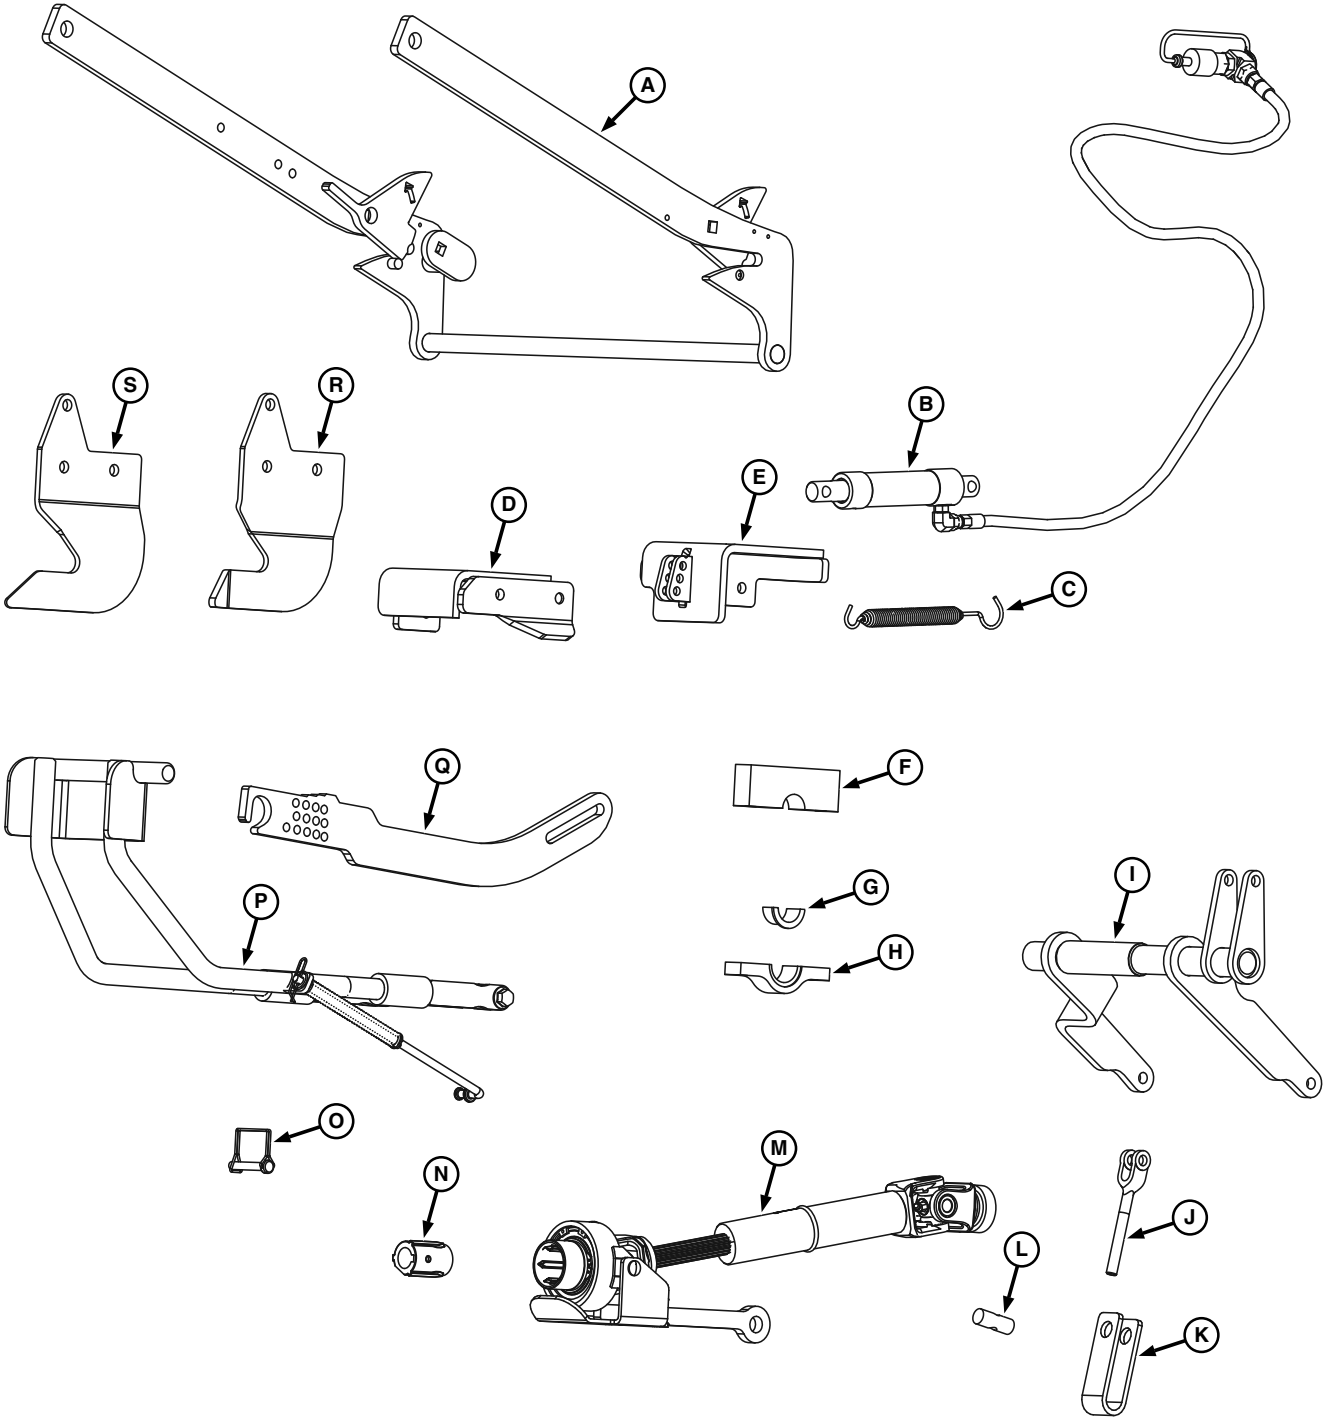

Parts in Kit

LV18642—UN—20AUG13


Qty	Description
1	Rear Lift Link (A)
1	Cylinder (B)
1	Spring (C)
1	Right Bracket (D)
1	Left Bracket (E)
2	Block Clamp (F)
2	Rockshaft Bushing (G)
2	Half Clamp (H)
1	Mid Rockshaft (I)
2	Adjustable Yoke (J)
2	U-Bracket (K)
2	Link Pin (L)
1	Bearing Assembly (M)
1	**Coupler, Male (N)
2	Snap Lock Pin Assembly (O)
1	**Forward Lift Link (P)
1	Height Adjust Link (Q)
1	Left Hanger (R)
1	Right Hanger (S)
1	**Set Screw, M8x8
2	Clevis
2	Drilled Pin
6*	Flange Head Bolt, M12x65
6*	Flange Head Bolt, M12x45
12	Locknut, M12
1	Hex Socket Head Bolt, M12x30
3	Hex Head Bolt, M12x30
4	Hex Head Bolt, M12x90
1	Pin, Cylinder to Rockshaft
1	Clevis Pin, M12x70
4	Washer, 1/2
3	Cotter Pin
4	Bushing
4	Flange Head Bolt, M12x50
2	Drilled Pin, M12x35
2	Locking Ring

* Quantity used will depend on tractor with grille guard application.


** Parts will be installed on mower deck.

UP00731,000004F-19-03OCT13

Install Gearbox and Tensioner Pulley (60D only)

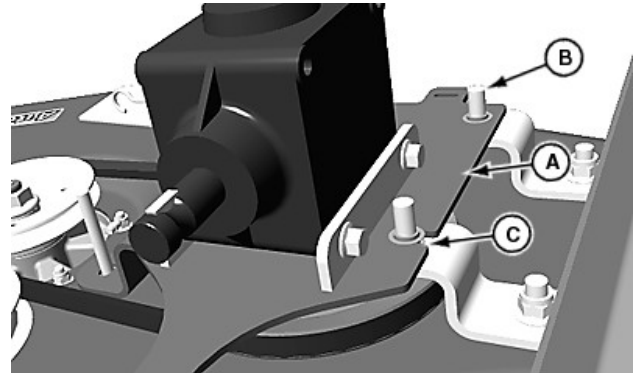


LV18649—UN—20AUG13

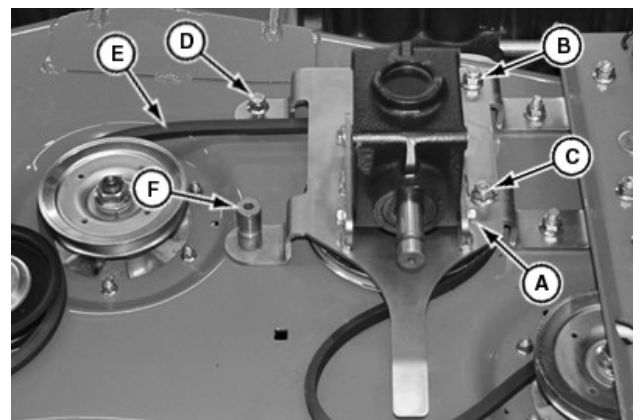

LV18650—UN—20AUG13

A—Gearbox Support
B—Bolt
C—Slot Position
D—Bolt Location
E—Belt
F—Bushing

1. Place gearbox support (A) over bolt (B) and rotate slot into position at location (C).
2. Drop support down onto bolt at location (D).
3. Route belt (E) between left legs of gearbox support and around gearbox pulley as shown.
4. Install nuts on bolts (B) (C) and (D).
5. Install bushing (F) on left rear bolt. It may be necessary to grasp end of bolt and pull upward to install bushing.

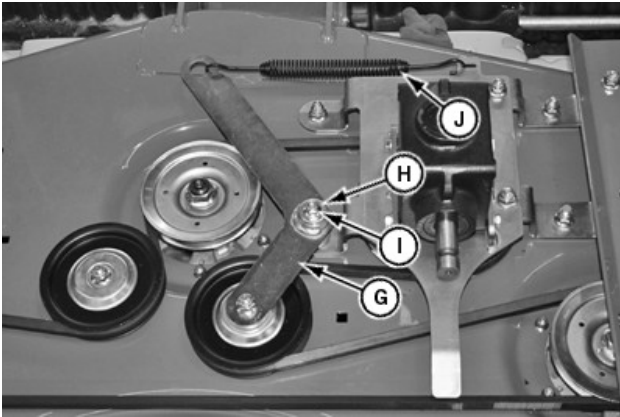


LV18651—UN—20AUG13


G—Tensioner Pulley
H—Washer
I—Nut
J—Spring

6. Position tensioner pulley (G) on top of bushing. Install washer (H) and secure with nut (I).
7. Route belt around tensioner pulley as shown.
8. Attach spring (J) to tensioner arm and gearbox support.
9. Tighten nut (I) to 73 N•m (53.8 lb-ft).
10. Tighten remaining three nuts to 120 N•m (88.5 lb-ft).
11. Check all pulleys for proper belt alignment.

NOTE: Gearbox side mounting bolts (K) are loose. Slide gearbox as far rearward as possible within the mounting slots and tighten to 80 N•m (59 lb-ft).

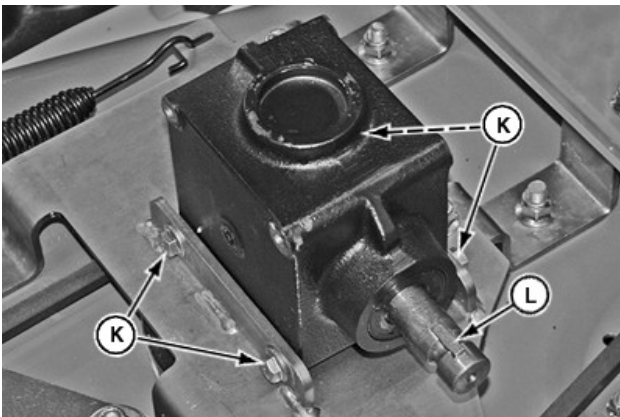

LV18652—UN—20AUG13

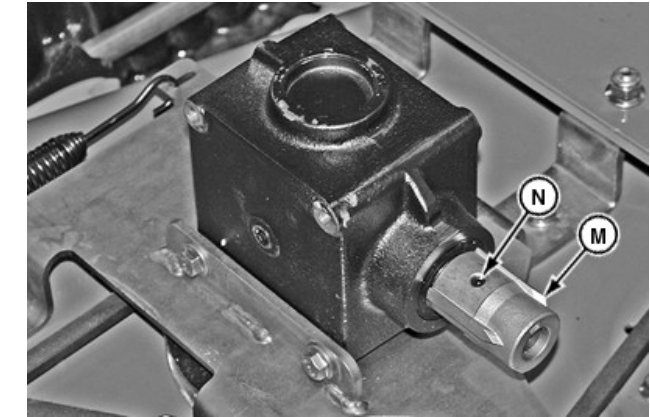

LV18653—UN—20AUG13

K—Bolts
L—Woodruff Key
M—Male Coupler
N—Screw

12. Install woodruff key (L) in slot in gearbox shaft. Coat shaft with MPG-2 anti-seize lubricant or equivalent.
13. Install male coupler (M) onto gearbox shaft and secure with set screw (N). Male coupler and set screw are provided in lift kit.


UP00731,0000050-19-05SEP13

Install Wheels

NOTE: 60D mower includes two offset wheels which are to be installed on right side of mower; 72D mower wheels are all the same.

CAUTION: Machine component or attachment is heavy. Use a safe lifting device with correct load capacity rating to lift, install or remove component or attachment.

1. Remove mower from crate using chain hoist or other suitable device.
2. 60D Mower only:

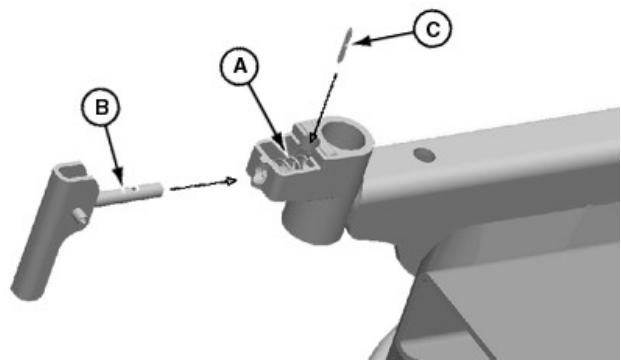

LV18654—UN—20AUG13


60D mower left rear wheel area shown.

A—Spring
B—Lock Assembly

C—Roll Pin

- Install spring (A) in bracket as shown.
- Push wheel lock assembly (B) into bracket.
- Install roll pin (C) to secure wheel lock assembly.

NOTE: After wheels are installed, it may be necessary to lock wheels by pressing downward on handles (A) until they are perpendicular to ground. However, wheels must be in the unlocked position before installing mower on tractor.

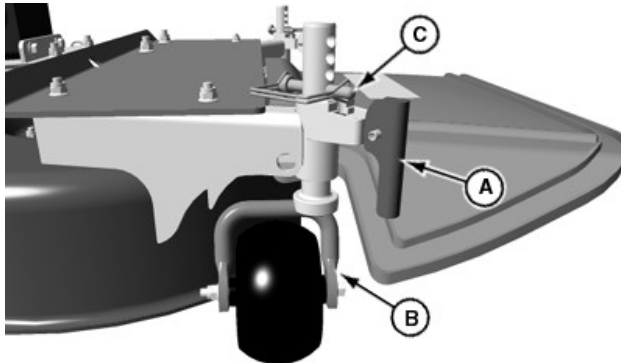

LV18655—UN—20AUG13


60D mower offset wheels shown installed on right side of mower

A—Handles
B—Wheels
C—Spring Pin

- Install wheels (B) by sliding wheel shaft up through wheel bracket.
- Install spring pin (C) in each wheel.

UP00731,0000051-19-26AUG13

Install Discharge Chute

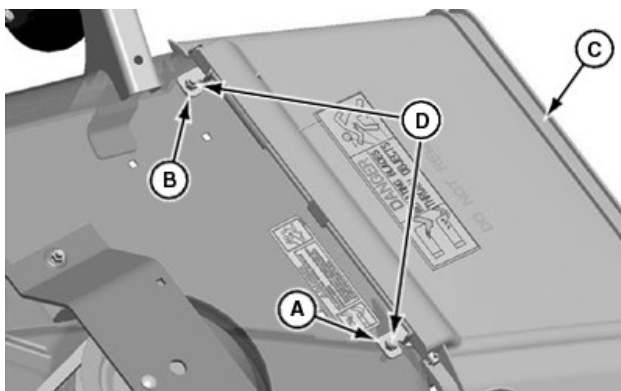

LV18656—UN—20AUG13


72 Mower Shown

A—Rear Hinge
B—Front Hinge
C—Chute Assembly
D—Nuts

- Attach rear hinge (A) to deck with nut. Do not tighten.
- Pre-load spring with one hand and attach front hinge (B) to deck with nut. Do not tighten.
- Pull chute assembly (C) away from deck as nuts (D) are tightened to help align hinges.

UP00731,0000052-19-26AUG13


Install Forward Lift Link on Mower Deck

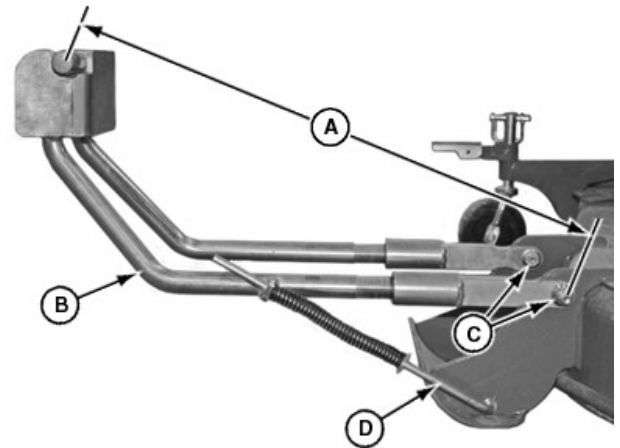

LV18657—UN—20AUG13

A—Distance from center of horizontal frame to center of bolt
B—Forward lift link
C—lock nuts
D—rod

- Measure distance (A) from center of horizontal frame to center of bolt. Distance (A) should be 599 mm (23.6 in.).
- Secure forward lift link (B) to mower deck with two M12x50 flange head bolts and two locknuts (C). Adjust as necessary to obtain correct distance before tightening locknuts completely.
- Insert end of rod (D) in slot with front link raised so spring is fully extended.

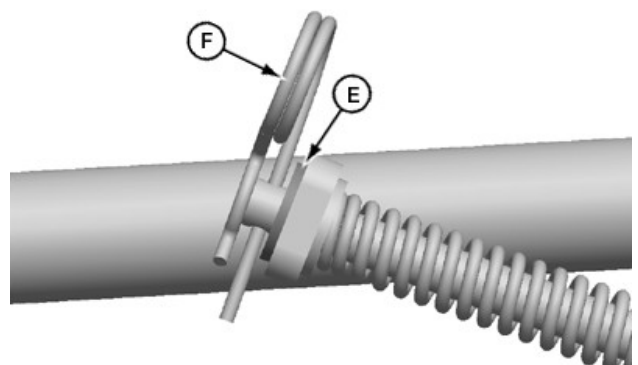

LV18658—UN—20AUG13

Tractors with loaders installed

E—Washers
F—Hair pin


4. Tractors with loader installed: Loader components may hit forward link when removing mower. During initial set up, add washers (E) as needed to prevent contact with loader components.

- a. Remove hair pin (F) from top of rod.
- b. Add washers (E) as needed to prevent contact with loader components.
- c. Install hair pin.

UP00731,0000053-19-26AUG13

Assemble Rear Lift Link

NOTE: If installing kit on tractor with cab, a lock (A) and roll pin (B) must be ordered separately.

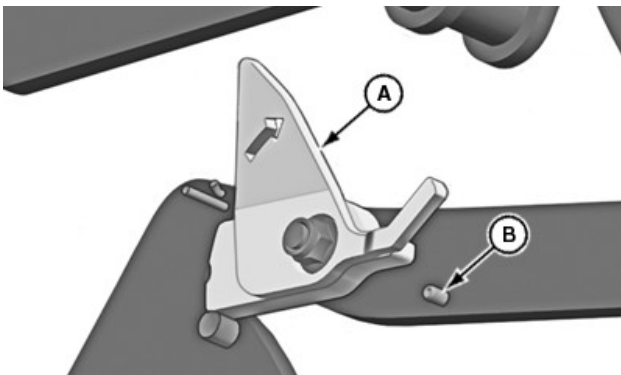


LV18659—UN—20AUG13

Image shown from inside of rear lift link. Lock is shown in the install / locked position.

A—Lock
B—Roll Pin

1. Tractors with cab: Replace lock on left side of rear link with new lock (A). Push roll pin (B) in from outside of rear lift link. Roll pin should clear sheet metal tab on new lock.

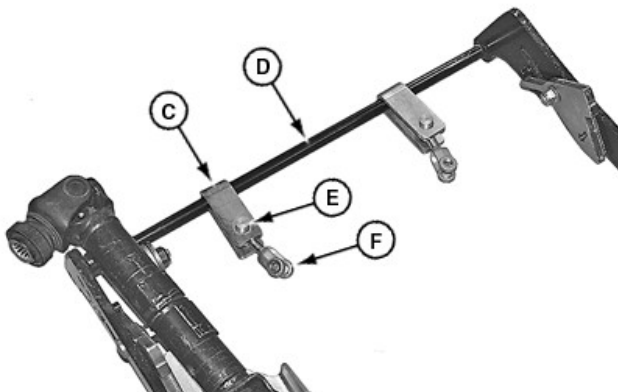

LV18660—UN—20AUG13


C—U-brackets
D—Rear lift link
E—Link pins
F—Yokes

2. Install two U-brackets (C) on rear lift link (D) with two link pins (E) and adjustable yokes (F).

UP00731,0000054-19-26AUG13

Install Hangers

Install Hangers on Tractors without Front Hitch

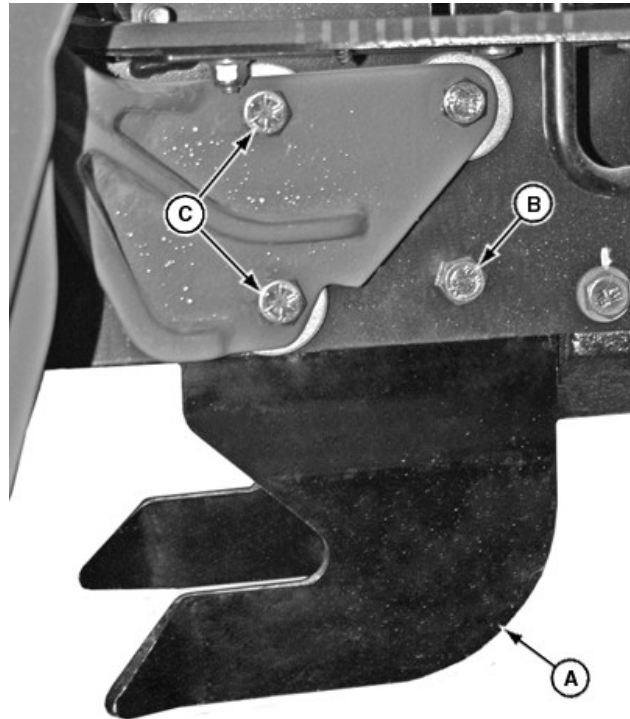

LV18661—UN—20AUG13

Hangers shown on tractor with grille guard


A—Hanger
B—Flange Head Bolts
C—Flange Head Bolts

1. Install left hanger (A).
 - a. Tractor with grille guard: Install left hanger (A) on inside of tractor frame with one M12x45 flange head bolt (B), two M12x65 flange head bolts (C) and three M12 locknuts.
 - b. Tractor without grille guard: Install left hanger (A) on inside of tractor frame with three M12x45 flange head bolts (B and C) and M12 locknuts.
2. Install right hanger.
3. Push bottom of hangers fully rearward and tighten hardware to 130 N•m (96 lb-ft).

Install Hangers on Tractors with Front Hitch

NOTE: Hangers included in this kit are intended for use on tractors without front hitch. If kit is being installed on tractor with front hitch, different hangers must be purchased and installed. See your John Deere Dealer.

1. Fully lower front hitch using hydraulics.
2. Completely close flow valve.
3. Disconnect front hitch hoses from SCV and tie out of way.

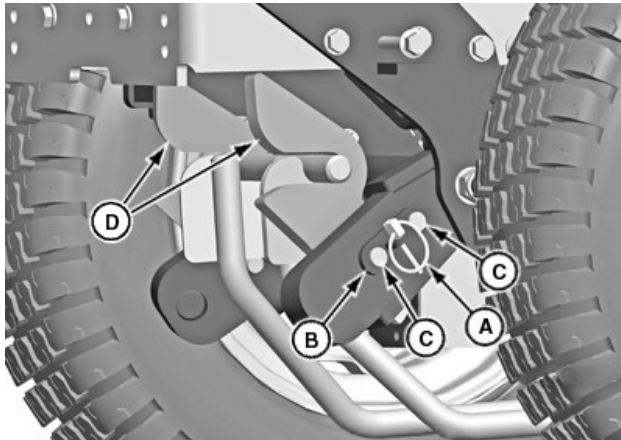


LV18662—UN—20AUG13

A—Locking ring
B—Bracket
C—Pin
D—Hanger

4. Remove locking rings (A) securing hitch arms to front hitch structure.
5. Pull brackets (B) and pins (C) out enough to insert new hangers (D).
6. Push pins (C) through holes in hangers and replace locking rings (A).

UP00731,000008F-19-05SEP13


Install Brackets

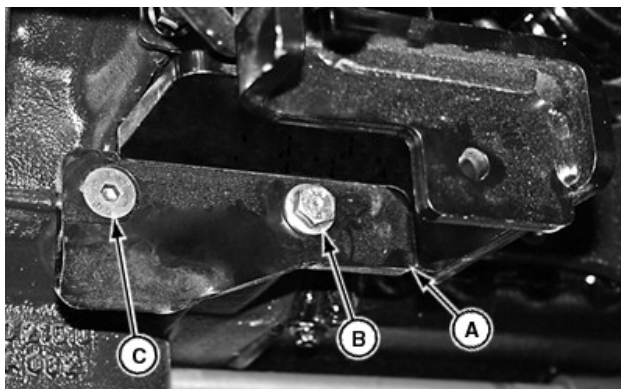

LV18663—UN—20AUG13

A—Bracket
B—Hex Head Bolt, M12x30
C—Socket Head Bolt M12x30


1. Install right bracket (A) on tractor with one M12x30 hex head bolt (B) and one M12x30 hex socket head bolt (C). Push bracket fully forward and tighten hardware.

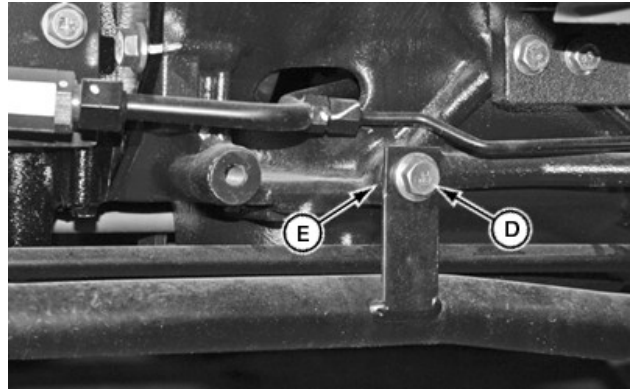

LV18664—UN—20AUG13

D—Bolt
E—Spacer

2. Remove bolt (D) and spacer (E) from suction side filtration tube at left side of tractor.

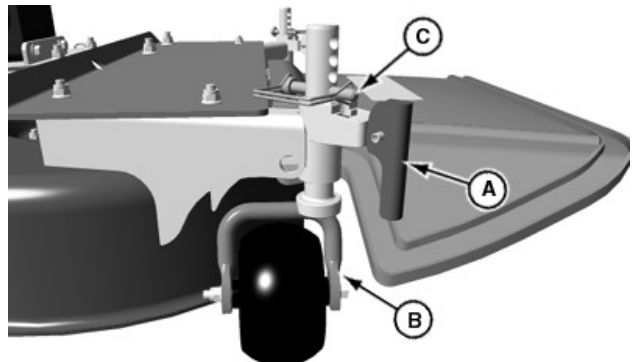

LV18655—UN—20AUG13


F—Bracket
G—Tab
H—Hex Head Bolts, M12x30

3. Slide edge of right bracket (F) behind tab (G). Push bracket fully forward and secure with two M12x30 hex head bolts (H).

UP00731,0000057-19-05SEP13

Install Mid Rockshaft

NOTE: Make sure rockshaft bushings (A) are properly seated as the half clamps are tightened. Bushings may be damaged if not properly seated.

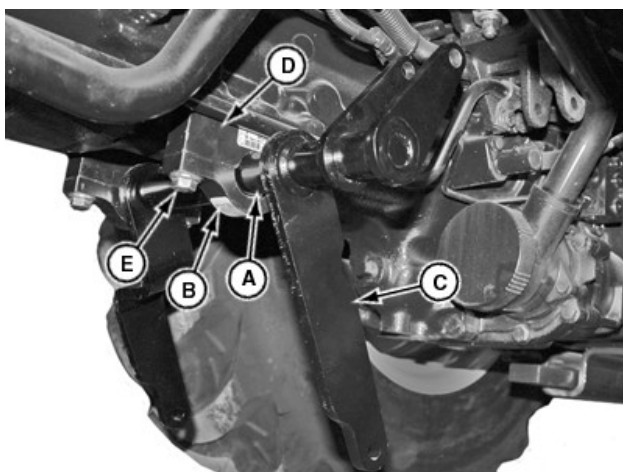


LV18666—UN—20AUG13

- A—Rockshaft bushing
- B—Half Clamp
- C—Rockshaft
- D—Block Clamp
- E—Hex Head Bolts, M12x90

1. Position rockshaft bushings (A) with flange end facing centerline of tractor, and between half clamp (B) and mid rockshaft (C).
2. Position block clamp (D) on top of mid rockshaft and install all parts to tractor with four M12x90 hex head bolts (E).
3. Tighten bolts to 130 N•m (96 lb-ft).

UP00731,0000058-19-05SEP13


Install Height Adjust Link

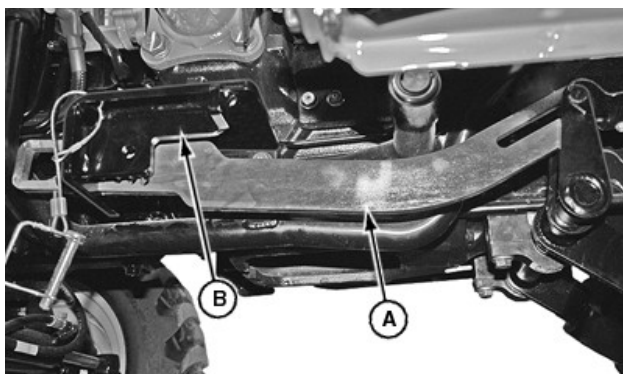

LV18667—UN—20AUG13

- A—Height Adjust Link
- B—Bracket

1. Slide height adjust link (A) in left bracket (B).

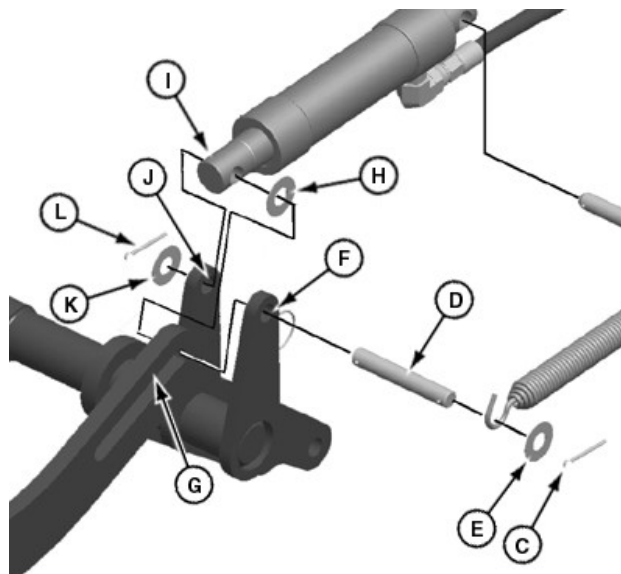


LV18668—UN—20AUG13

- C—Cotter Pin
- D—Rockshaft Pin
- E—Washer
- F—Arm of Rockshaft
- G—Lock Link
- H—Washer
- I—Cylinder
- J—Arm of Rockshaft
- K—Washer
- L—Cotter Pin

2. Install cylinder rod end and height lock link to rockshaft. Insert cotter pin (C) into end of rockshaft pin (D). Push pin through washer (E), first arm of rockshaft (F), slot in height lock link (G), washer (H), rod end of cylinder (I), second arm on rockshaft (J) and final washer (K). Secure with cotter pin (L). Make sure washers are installed as shown.

NOTE: If installing lift kit on tractor with cab, a separate bracket must be purchased before cylinder can be installed.

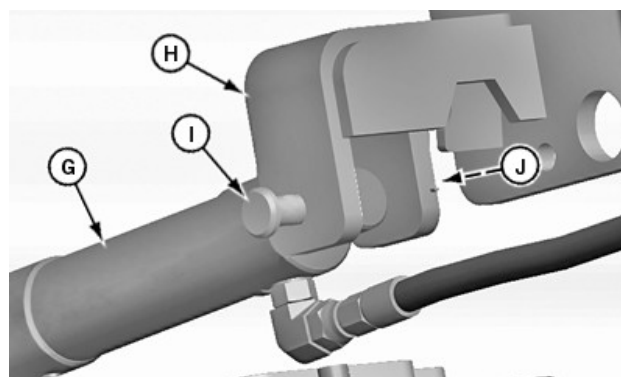


LV18669—UN—20AUG13

Tractor with cab

- G—Cylinder
- H—Bracket
- I—Drilled Pin, M12x70

3. Tractor with cab: Attach head end of cylinder (G) to

bracket (H) with M12x70 drilled pin (I) and locking ring (J).

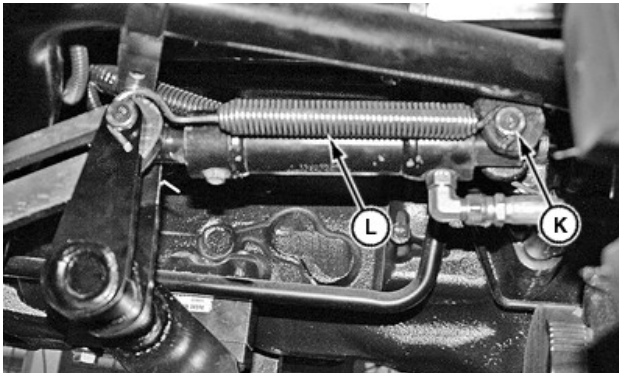


LV18670—UN—20AUG13

K—Drilled Pin M12x70
L—Spring

4. Secure other end of cylinder with M12x70 drilled pin (K), washer and cotter pin.
5. Install spring (L) with spring rotation down.

UP00731,0000059-19-05SEP13


Complete Installation of Lift Kit

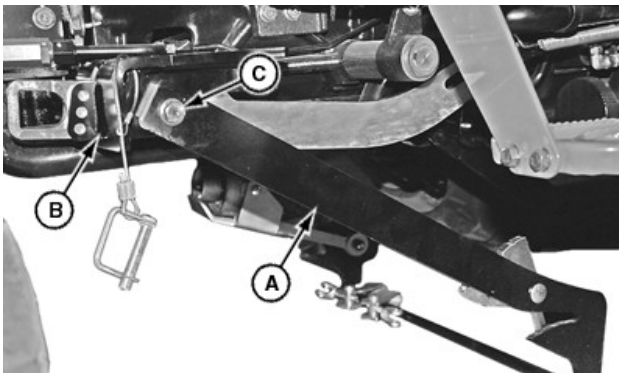

LV18671—UN—20AUG13

A—Lift Link
B—Bracket
C—Bolt, Bushing and Locknut


1. Secure rear lift link (A) to left bracket (B) with one M12x50 flange bolt, one bushing and one M12 locknut (positioned at outside of lift link) (C).
2. Secure rear lift link to right bracket.

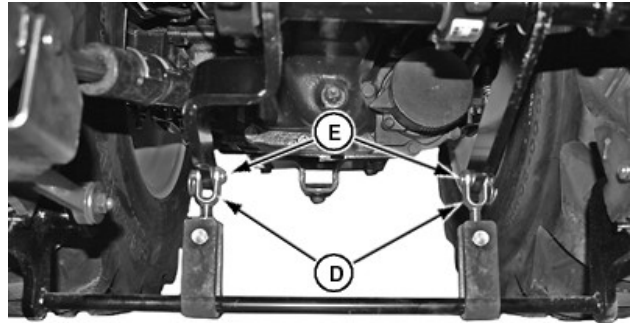

LV18672—UN—20AUG13

D—Adjustable Yokes
E—Drilled Pins, M12x35

3. Attach adjustable yokes (D) to mid rockshaft with two M12x35 drilled pins (E) and locking rings.
4. Install mid PTO shaft.
5. Either route hydraulic cylinder hose to rear of tractor and attach to third SCV, or attach it to curl circuit on dual SCV.
6. Install one hair pin in rear hole on right arm of rear lift link. Install hair pin in hole in left bracket.

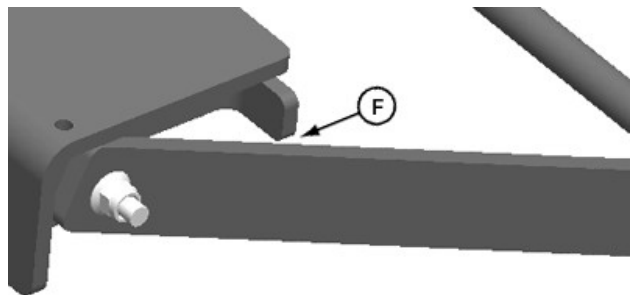

LV18673—UN—20AUG13

F—Arms should clear up-stops by 1-2 mm (0.04-0.08 in.)

7. Start tractor and slowly raise lift system. Arms of rear link should clear up-stops at rear of brackets mounted on transmission by 1-2 mm (0.04 - 0.08 in.) (F).

UP00731,000005A-19-26AUG13

Installing

Preparing Machine

Required Equipment:

- Tractor Mid-PTO
- Mower Lift Kit


Machine Setup:

1. Park machine safely. (See Parking Safely in SAFETY.)
2. Follow machine operator's manual instructions to check tire pressure.
3. Follow instructions in ASSEMBLY in this manual.

UP00731,000005F-19-26AUG13

Prepare Tractor and PTO Coupler


1. Raise lift system fully.
2. Remove pin from height lock.
3. Lower lift system fully.
4. Remove snap lock pin from coupler support and make sure support drops completely.

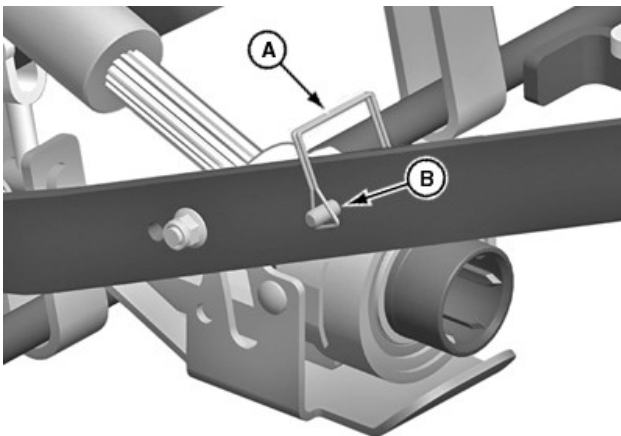

LV18674—UN—20AUG13

A—Pins
B—Storage holes

5. Place pins (A) in forward storage holes (B) in lift link.

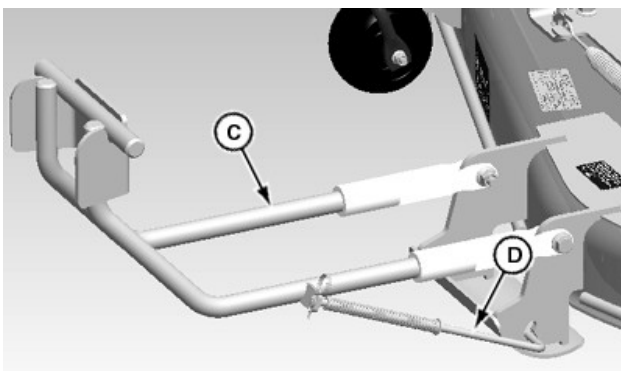


LV18675—UN—20AUG13

C—Front Link

D—Spring Rod

6. Make sure front link (C) of mower is unfolded from top of deck and spring rod (D) is inserted in slot at front of deck.

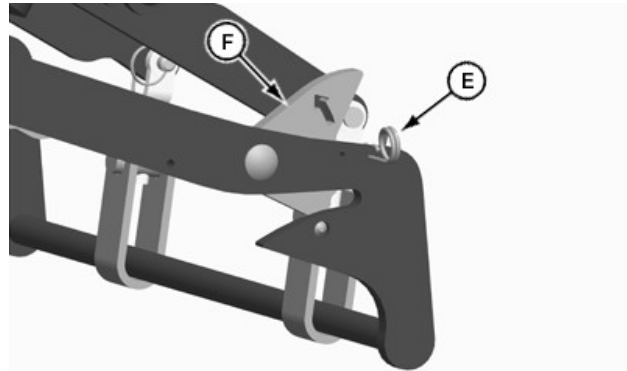

LV18676—UN—20AUG13


E—Hair Pins
F—Locks

7. Hair pins (E) should be in the storage position and locks (F) should be in the install/locked position.

UP00731,0000060-19-26AUG13

Attach Mower Deck to Tractor

1. Ensure that deck is sitting on firm, level ground. An extremely smooth surface can allow deck to be pushed along by tractor.

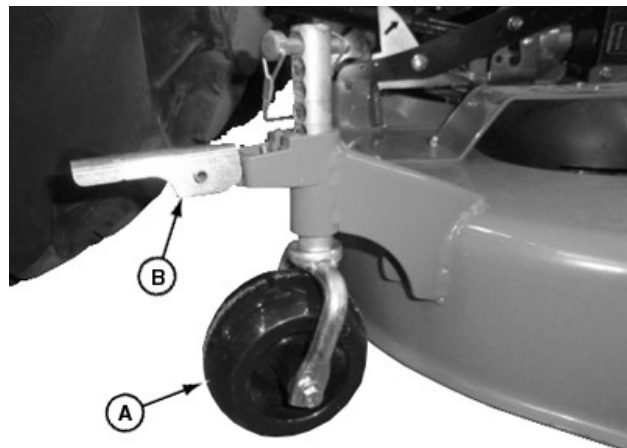



LV18677—UN—20AUG13

A—Gage Wheels
B—Handles

2. Ensure that all four mower deck gage wheels (A) are in unlocked position, with handles (B) parallel to ground. Deck should be resting fully on ground.
3. Place tractor in A range four wheel drive.
4. Drive tractor onto mower deck:

NOTE: Driver should concentrate on the side of the tractor indicated in the instructions and should not look back and forth from one side to the other. while driving over mower deck. Drive forward smoothly.


- 60 D mower: Drive tractor up to mower deck with right front tire aligned approximately 1/2-in. from angled edge (C) of right drive over ramp.
- 72 D mower: Drive tractor up to mower deck with left front tire aligned approximately 1/2-in. from wire form (D) on left drive over ramp.

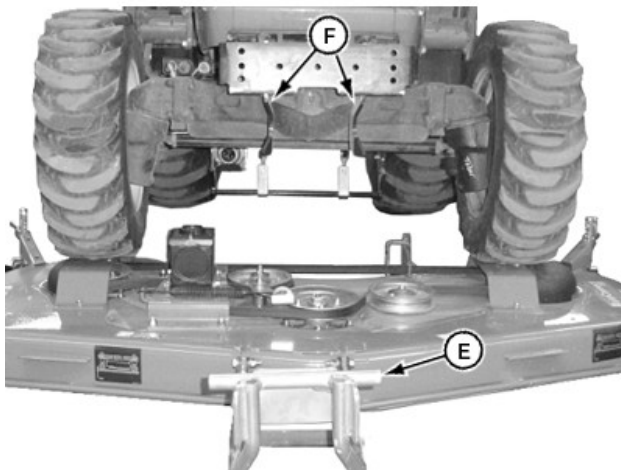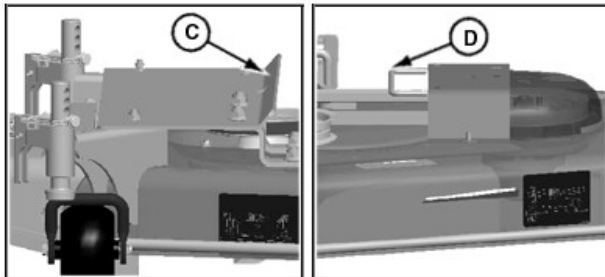

LV18678—UN—20AUG13

C—Angled Edge
D—Wire Form
E—Forward Lift Link
F—Hangers

5. Drive tractor slowly, smoothly and straight over mower deck making sure forward lift link (E) aligns hangers (F).
6. If mower deck pulls forward early or appears to be caught in lift system, stop tractor, reverse slightly and move forward again. If mower deck still does not properly attach, stop tractor, lock park brake, dismount tractor and determine cause of problem.

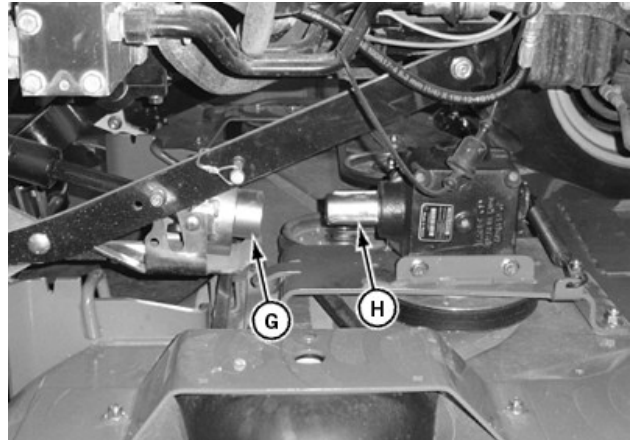

LV18679—UN—20AUG13

G—PTO Coupler
H—Gear Box Coupler


7. PTO coupler (G) will align with gear box coupler (H).
8. Continue to slowly drive tractor forward until mower begins to pull along ground approximately 102 mm (4 inches) behind front wheels.



LV18680—UN—20AUG13

I—locks

9. Dismount tractor and ensure locks (I) on both sides have dropped to locked position shown. Mower may sometimes have to be pulled rearward slightly to engage lock. On first installation, mower may not lock in position if front link is too short.
10. Install hair pins in locked position.

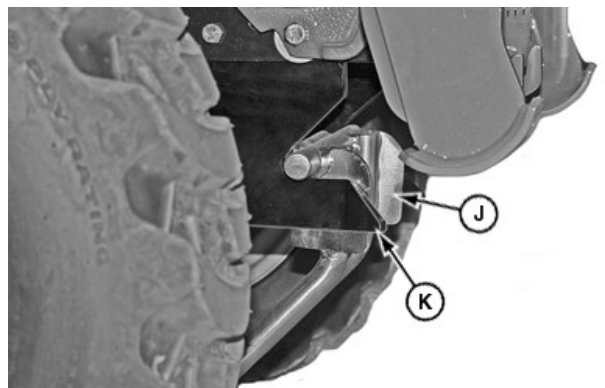

LV18681—UN—20AUG13

J—Forward Lift Link

K—Hangers


11. Make sure forward lift link (J) is nested into hangers (K).
12. Start engine and lift mower to full height.
13. Pull height lock fully forward and place pin in nearest hole for transport or set link to desired height.
14. Lock all gage wheels down by snapping handles down and ensuring that lock pins are fully seated in vertical rods.

UP00731,0000061-19-26AUG13

Removing and Storing

Removing Mower


1. Park machine on a level surface, not on a slope.
2. Lock park brake.
3. Disengage mower blades.
4. Ensure tractor can be pulled forward to deposit mower deck and that sufficient room exists to back fully off deck before turning tractor wheels.
5. Place tractor in A range four wheel drive.
6. Fully raise mower deck and release gage wheel locks.
7. Remove pin from height lock.
8. Remove hair pins and place in rear storage holes.
9. Lower mower deck to ground and release rear locks by pushing them forward in direction of arrow. If lock sticks, pull mower deck rearward slightly on side with stuck lock and push lock forward.
10. Slowly back tractor straight off mower deck.
11. When removing the mower for storage, raise forward lift link, pull wireform gently to side and fold forward lift link back over the deck.
12. Raise lift system fully and lock in highest position by pulling forward on height lock link and placing tethered pin in closest available hole.

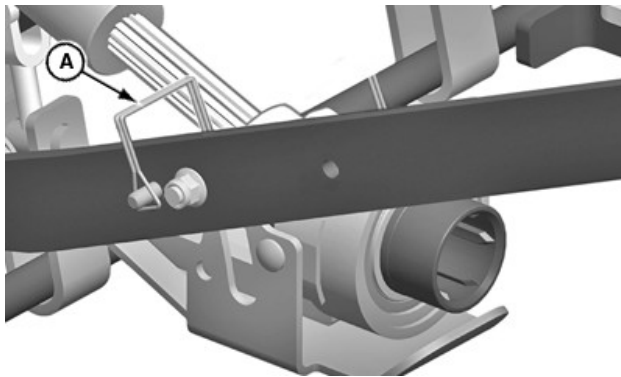

A—Lock Pin

LV18682—UN—20AUG13


13. Lock coupler support up by lifting and installing the snap lock pin (A) in hole as shown.
14. If mid PTO will be used for other applications:
 - a. Lock lift link in transport position.
 - b. Remove quick connect driveshaft from mid PTO by pulling collar.

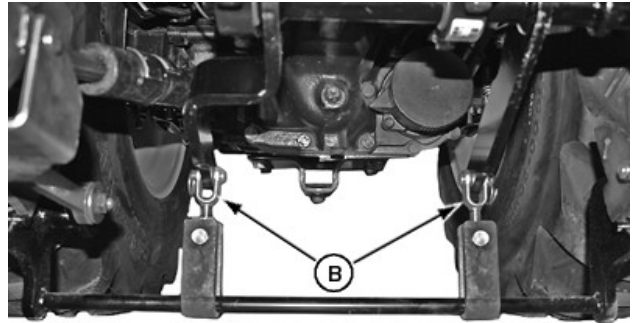

B—Yokes

LV18683—UN—20AUG13

- c. Remove yokes (B) from mid rockshaft.

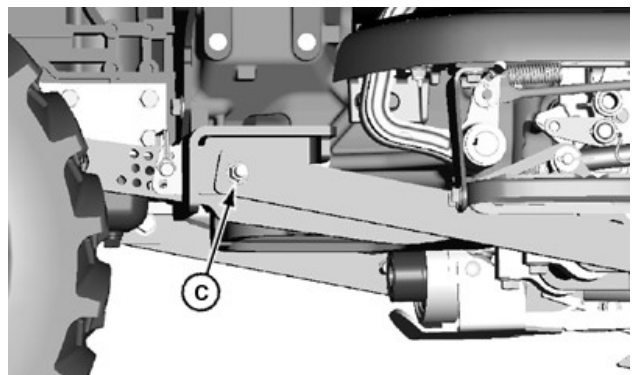

C—Bolt

LV18684—UN—20AUG13

- d. Remove bolt (C), bushing, and locknut securing the rear lift link to the bracket on both sides.
- e. Keep all hardware attached to the rear lift link and store for later use.

UP00731,0000062-19-26AUG13

Storing Mower

CAUTION: Blades are sharp. Do not store mower deck on machine or removed from machine with blades exposed. Store mower deck laying flat on ground.

1. Remove mower from machine. (If machine is to be stored with mower on machine, refer to Storing Machine in your machine's operator's manual.)
2. Clean underside of mower with water pressure and scraper.
3. Inspect blades:
 - Have dull blades sharpened and balanced.
 - Replace damaged blades.
4. Clean top of deck and the area around all of the sheaves.

5. Check condition of belt. If necessary, get a new belt. Do not install new belt until you remove mower from storage.
6. Repair or replace any worn or damaged parts.
7. Apply touch-up paint where needed to prevent rust.
8. Lubricate grease points.
9. Release belt tension.
10. Store mower in a clean, dry place.
11. Put a waterproof cover over mower, if you store the mower outside.

UP00731,0000063-19-26AUG13

Operating

Raising and Lowering Mower

1. Review instructions on using dual and third selective control valve lever included in your machine operator's manual.
2. Remove mower from transport lock position. See Transporting Mower on Machine in OPERATING in this manual.
3. Follow machine operator's manual instructions to raise and lower the implement using the third selective control valve lever or the dual SCV curl function.

UP00731,0000064-19-26AUG13

Adjusting Mower Level (Side-to-Side)


CAUTION: Rotating blades are dangerous. Before adjusting or servicing mower:

- Disconnect spark plug wire(s) or battery negative (-) cable to prevent engine from starting accidentally.
- Always wear gloves when handling mower blades or working near blades.

1. Park machine on a level surface, not on a slope.
2. Lock park brake.
3. Disengage mower blades.
4. Raise mower fully and stop engine.
5. Remove key.
6. Wait for engine and all moving parts to stop before leaving operator's seat.
7. Remove height lock pin.

NOTE: Mower wheels should not contact ground during leveling.

8. Lower mower slowly to the middle cutting height range, or 3 inches (76 mm).
9. Pull height lock link fully forward and lock at first hole available. Lower mower so pin supports height.

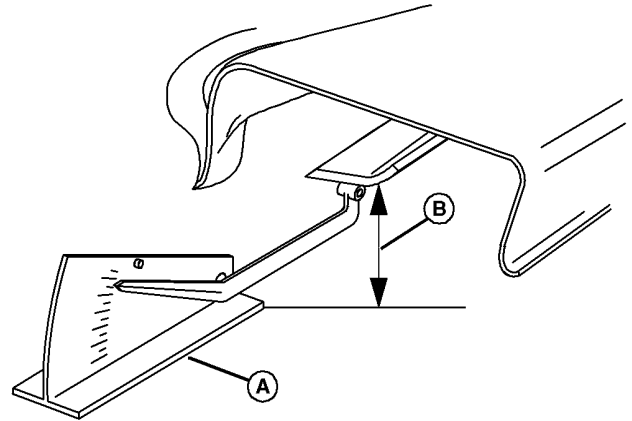

MXAL41824—UN—18FEB13
Leveling Gauge (A) is available from your John Deere Dealer.

A—Leveling Gauge
B—Blade Tip

10. Measure distance from each outside blade tip (B) to the level surface.
11. Remove retaining ring from right or left rear link support. Adjust only one link at a time. Adjust link as necessary to level deck. Install retaining ring.


UP00731,0000065-19-10MAY16

Adjusting Mower Level (Front-to-Rear)

1. Park machine on a level surface, not on a slope.
2. Lock park brake.
3. Disengage mower blades.
4. Raise mower fully and stop engine.
5. Remove key.
6. Wait for engine and all moving parts to stop before leaving operator's seat.
7. Remove height lock pin.

NOTE: Mower wheels should not contact ground during leveling.

8. Lower mower slowly to the middle cutting height range, or 3 inches (76 mm)
9. Pull height lock link fully forward and lock at first hole available. Lower mower so pin supports height.

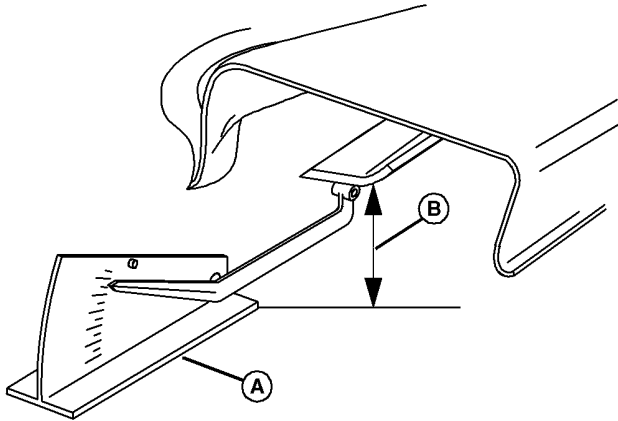

MXAL41824—UN—18FEB13
Leveling Gauge (A) is available from your John Deere Dealer.

A—Leveling Gauge
B—Blade Tip

10. Measure distance from each outside blade tip (B) to the level surface.

NOTE: Front of mower should never be higher than rear of mower.

11. Front measurement should be 0 - 3.18 mm (0 - 1/8 in.) lower than rear.
12. Remove deck and adjust front yokes as required to obtain desired measurement.
13. If locks are not releasing or locking easily, front link may need to be loosened slightly. A sticking lock might require the opposing front yoke be tightened slightly.

UP00731,0000066-19-10MAY16

Adjusting Mower Wheels

CAUTION: Rotating blades are dangerous. Before adjusting or servicing mower:

- Disconnect spark plug wire(s) or battery negative (-) cable to prevent engine from starting accidentally.
- Always wear gloves when handling mower blades or working near blades.

IMPORTANT: Avoid damage! The mower deck can be damaged if mower wheels are adjusted wrong:

- Wheels must not ride on ground supporting mower weight.
- Check wheel adjustment each time cutting height is changed.

1. Park machine on a level surface, not on a slope.

2. Disengage mower blades.
3. Fully raise the mower.
4. Lock park brake.
5. Stop engine.
6. Remove key.
7. Wait for engine and all moving parts to stop before leaving operator's seat.
8. Set cut height with height lock pin and lower mower until the mower weight is supported by the height lock.
9. Set gage wheel height:
 - a. Release wheel lock.
 - b. Adjust wheel to 3/8-in. distance from ground and lock wheels.
 - c. Install snap lock pin in hole just above gage wheel bracket.

IMPORTANT: Avoid damage! Ensure that at least one hole remains above lock bracket. In extreme mowing conditions, retract wheels completely to avoid damage.

UP00731,0000067-19-26AUG13

Using Height Adjust Link


For Transport

NOTE: Do not mow with mower in highest (transport) position. Mow at least 25 mm (1 in.) lower than highest position.

- Raise deck to highest position, pull link forward and install pin in nearest hole available. Lower deck after pin is engaged to transport position.

To Set Cut Height

1. Lower mower slowly to desired cutting height.

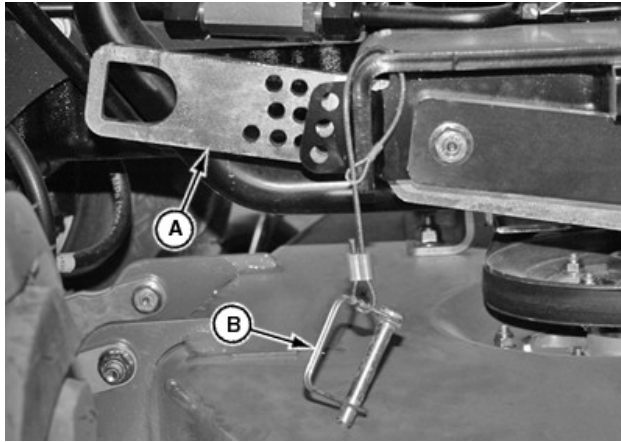

LV18685—UN—20AUG13

A—Height Adjust Link
B—Pin

2. Pull height adjust link (A) forward fully and place pin (B) in nearest hole. Be aware of hole location for any future adjustments.
3. Lower mower.
4. If cutting height is too low, raise mower, remove pin and install in adjacent hole then lower mower. Holes in height adjust link allow for adjustment in (13 mm) 1/2 increments.

UP00731,0000068-19-26AUG13

3. Remove debris and check for proper operation.

UP00731,000006A-19-06AUG15

Transporting Mower on Machine

1. Remove height lock pin at left side of mower.
2. Pull height link fully forward and install pin in hole that secures link in highest position.

UP00731,000006B-19-26AUG13

Engaging Mower

1. Review instructions on using mid-PTO included in your machine operator's manual.
2. Follow machine operator's manual instructions to engage mid-PTO and mower.

UP00731,0000069-19-26AUG13

Unplugging Mower

⚠ CAUTION: Avoid injury! Do not attempt to unplug attachment with machine running.

- Rotating blades are dangerous. Shut off the engine and remove the key before getting off the seat to inspect the machine and attachment.
- Thrown objects can cause serious injury. Make sure all machine parts are stopped before raising hopper top or removing chutes.

1. Park machine safely. Wait for all moving parts to stop before getting off to inspect machine.
2. Check under mower deck and discharge chute for debris.

Service

Service Intervals

Every 10 Hours

- If operating in dry conditions, clean debris from mower.

Every 25 Hours

- Lubricate spindles
- Lubricate driveshaft
- Inspect mower blades
- Inspect mower belt

Every 100 Hours

- Check gearbox oil level
- Wash mower

Every 500 Hours

- Change gearbox oil

UP00731,000006C-19-26AUG13

Grease

IMPORTANT: Avoid damage! Use recommended John Deere greases to avoid component failure and premature wear. The recommended John Deere greases are effective within an average air temperature range of -29 to 135 degrees C (-20 to 275 degrees F). If operating outside that temperature range, contact your Servicing dealer or other service provider for a special-use grease.

The following greases are preferred:

- John Deere Multi-Purpose SD Polyurea Grease
- John Deere Multi-Purpose HD Lithium Complex Grease

If not using any of the preferred greases, be sure to use a general all-purpose grease with an NLGI grade No.2 rating.

Wet or high speed conditions may require use of a special-use grease. Contact your Servicing provider for information.

UP00731,000006E-19-15OCT25

Gear Oil

Use oil viscosity based on the expected air temperature range during the period between oil changes.

John Deere GL-5 Gear Lubricant is recommended.


Other oils may be used if they meet one or more of the following:

- API Service Classification GL-5.
- Military Specification MIL-L-2105D.
- Military Specification MIL-L-2105C.
- Military Specification MIL-L-2105B.

Oils meeting Military Specification MIL-L-10324A may be used as arctic oils.


UP00731,000006F-19-26AUG13

Lubricating Mower

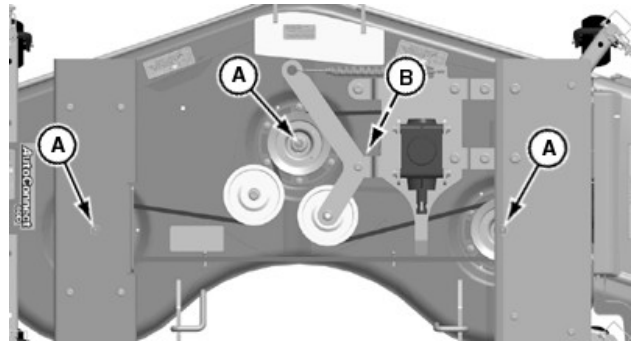

60D Mower Shown

LV18686—UN—20AUG13

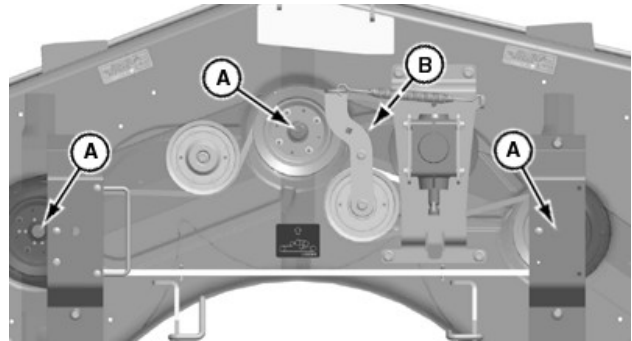


72D Mower Shown

LV18687—UN—20AUG13

A—Grease Fittings on Sheaves
B—Grease Fitting on Tensioner Pulley

1. Lubricate three grease fittings (A) on sheaves with recommended grease.
2. Lubricate grease fitting (B) on tensioner pulley with recommended grease.

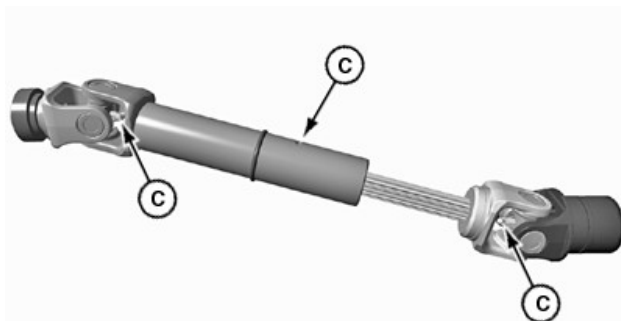

LV18688—UN—20AUG13

C—Grease Fittings on mid PTO

3. Lubricate three grease fittings (C) on mid PTO with recommended lubricant.

UP00731,0000070-19-05SEP13


Servicing Gearbox

Checking Oil Level

1. Remove plug from one side of gearbox.
2. Oil level should be even with bottom edge of plug hole.
3. If oil is low, add recommended oil.
4. Install plug.

Changing Oil

1. Remove gearbox bracket with gearbox. See Removing Belt in SERVICE Section.

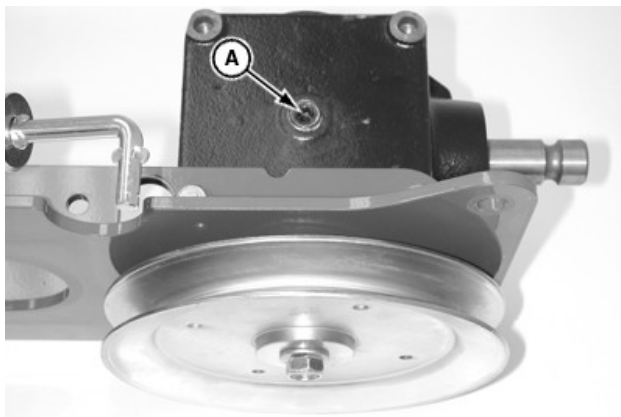

LV18689—UN—20AUG13

A—Plug

2. Remove plug (A) on both sides of gearbox.
3. Lift and turn gearbox bracket on side to drain oil from gearbox.
4. Route belt around gearbox sheave as you install gearbox bracket on five bolts. See Installing Belt in SERVICE.
5. Following remaining instructions in Installing Belt in SERVICE to install gearbox and rod.


6. Add recommended oil to bottom edge of plug hole in gearbox.
7. Install plugs.

UP00731,0000071-19-05SEP13

Servicing Mower Belt

Removing Belt

1. Remove mower from machine.
2. Clean area around and under ramps.
3. 60D Mower:

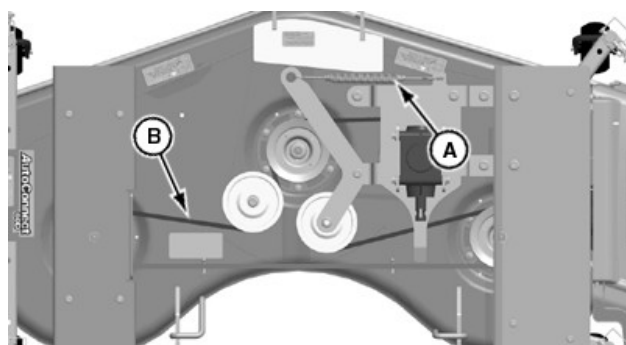


LV18690—UN—20AUG13

**A—Spring
B—Belt**

- a. Remove spring (A) to relieve belt tension.
- b. Remove belt (B) from mower.

4. 72D Mower:

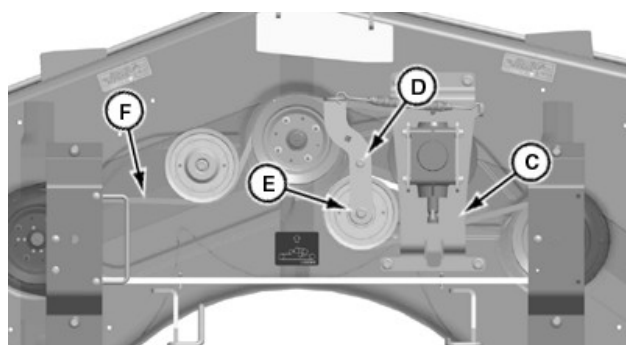

LV18691—UN—20AUG13

**C—Gearbox Support
D—Tensioner
E—Tensioner Pulley
F—Belt**

- a. Remove the gearbox support (C) by removing four nuts.
- b. Remove the nut, washer and tensioner (D).
- c. Remove the bolt and hardware retaining the tensioner pulley (E).
- d. Remove belt (F) from mower.

Installing Belt

1. Install belt around sheaves and route as shown.
2. 60D Mower: Install spring.
3. 72D Mower: Install tensioner pulley, tensioner and gearbox support.

UP00731,0000072-19-05SEP13


Servicing Mower Blades

CAUTION: Avoid injury! Blades are sharp. Always wear gloves when handling blades or working near blades.

Replace blades if defective. Never straighten or weld them.

Checking for Bent Mower Blades

1. Park machine on a level surface, not on a slope.
2. Disengage mower blades.
3. Fully raise the mower.
4. Lock the park brake.
5. Stop the engine.
6. Remove the key.
7. Wait for engine and all moving parts to stop before you leave the operator's seat.
8. Block the mower.

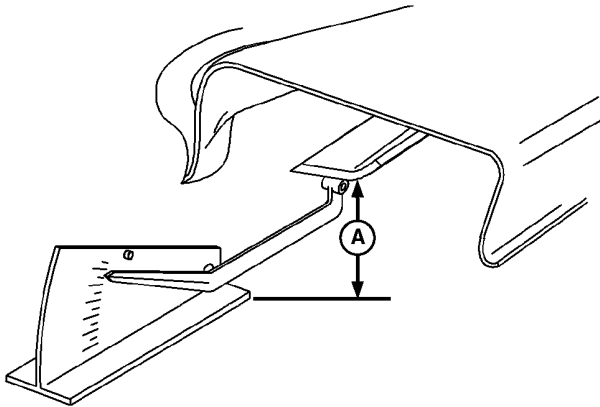


A—Distance - Blade to Level Surface

LV18692—UN—20AUG13

9. Measure the distance (A) from blade tip to level surface with a ruler or a leveling gauge available at your John Deere dealer.
10. Rotate blade 180° and measure the distance between other end of blade and surface.
11. Check all blades. Install new blade if difference between measurements is more than 3 mm (1/8 in.).

Removing Mower Blades

1. Park machine safely.
2. Remove mower from machine.
3. Use a suitable lifting device to raise mower to gain access to blades.
4. Insert wood block between blade and mower to prevent blade from turning when removing bolt.

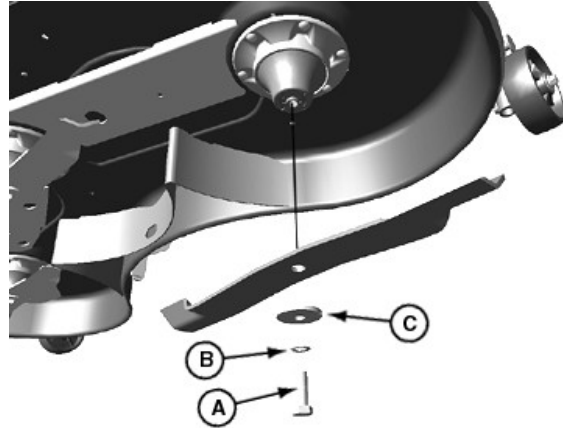


A—Bolt
B—Washer
C—Washer

LV18693—UN—20AUG13

5. Remove bolt (A), washer (B), washer (C) and blade.

Installing Mower Blades

1. Install blade with cutting edge toward the ground.

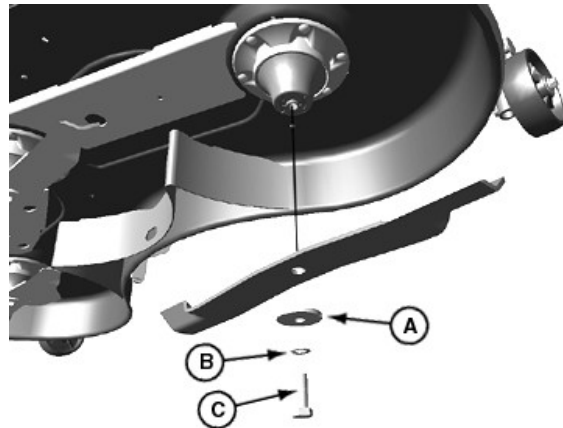

A—Washer
B—Washer
C—Bolt


LV18694—UN—20AUG13

2. Install blade, washer (A), washer (B) and bolt (C).
3. Insert wood block between blade and mower to prevent blade from turning when tightening bolt. Tighten to 122 N•m (90 lb-ft).

Sharpening Blades

CAUTION: Avoid injury! Rotating blades are dangerous. Before adjusting or servicing mower:

- Disconnect spark plug wire(s) or battery negative (-) cable to prevent engine from starting accidentally.
- Always wear gloves when handling mower blades or working near blades.

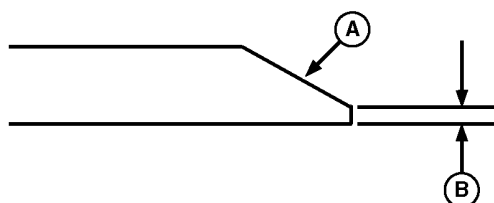

LV18695—UN—20AUG13


A—Bevel
B—Cutting Edge

1. Sharpen blade with grinder, hand file or electric blade sharpener.
 - Keep original bevel (A) when grinding..
 - Blade should have 0.40 mm (1/64 in.) cutting edge (B) or less.

2. Balance blade before installing.

Balancing Blades

1. Clean the blade.

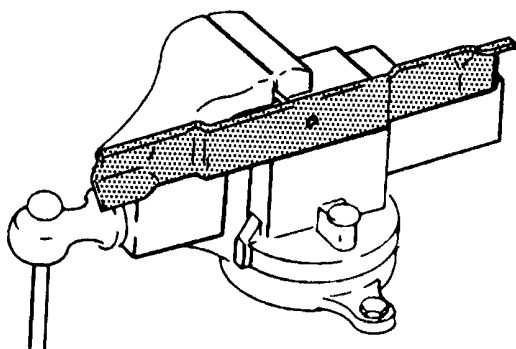


LV18696—UN—20AUG13

2. Put blade on a nail in a vice or in a vertical wall stud. Turn blade to horizontal position. If blade is not balanced, heavy end of blade will drop.
3. Grind bevel of heavy end. Do not change blade bevel.

UP00731,0000090-19-10MAY16

Replacing Wheels

1. Park machine on a level surface, not on a slope.
2. Disengage mower blades.
3. Fully raise mower.
4. Lock park brake.
5. Stop engine.
6. Remove key.
7. Wait for engine and all moving parts to stop before leaving operator's seat.

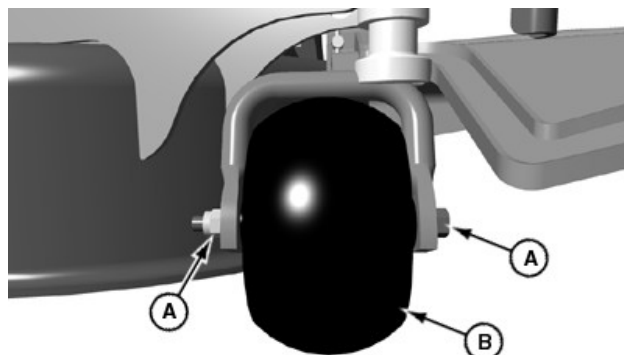

LV18697—UN—20AUG13

A—Wheel Hardware
B—Wheel


8. Remove wheel hardware (A).

IMPORTANT: Avoid damage! Do not overtighten wheel hardware. Overtightening hardware will cause damage to bushing.

9. Install new wheel (B) with hardware.

UP00731,0000077-19-05SEP13

Replacing Sheaves

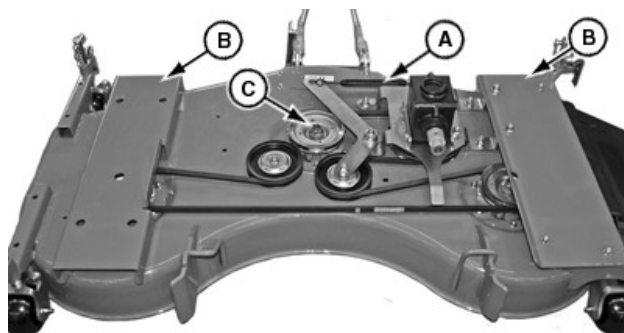

LV18698—UN—20AUG13

60D mower shown, 72D mower sheaves have four nuts instead of one.

A—Spring
B—Ramp
C—Center Bolt

1. Remove spring (A) to relieve belt tension.

2. If necessary, remove drive over ramp (B).
3. 60D mower: Remove center bolt (C) on sheave to be replaced.
4. 72D mower: Remove four bolts on sheave to be replaced.
5. Replace sheave(s) and install hardware.

UP00731,0000078-19-05SEP13

Specifications

60 Inch 7-Iron Mower Deck

Mower Type	Mulch or Side Discharge
Cutting Blades	3
Overall Width	1.9 m (75.3 in.)
Overall Length	1.04 m (41 in.)
Cutting Height ^a	3.8 - 12.7 cm (1-1/2 - 5 in.)
Cutting Width	1.5 m (60.9 in.)
Mower Weight	147 kg (324 lb.)
Blade Bolt Torque	122 N·m (90 lb.-ft.)
Gearbox Oil Capacity	136 mL (4.6 oz.)

^aMay vary depending on tire size.

UP00731,0000079-19-26AUG13

72 Inch 7-Iron Mower Deck

Mower Type	Mulch or Side Discharge
Cutting Blades	3
Overall Width	2.19 m (86 in.)
Overall Length	1.14 m (45 in.)
Cutting Height ^a	3.8 - 12.7 cm (1-1/2 - 5 in.)
Cutting Width	1.8 m (72.8 in.)
Mower Weight	156 kg (345 lb.)
Blade Bolt Torque	122 N·m (90 lb.-ft.)
Gearbox Oil Capacity	136 mL (4.6 oz.)

^aMay vary depending on tire size.

UP00731,000007A-19-26AUG13

Index

B		Mower Belt	
Brackets		Servicing	40-2
Installation	15-7	Mower Blades	
		Servicing	40-3
C		Mower Deck to Tractor	
Compatibility		Attach	25-1
Product	00-1	Mower Level	
		Adjusting - Front to Rear	35-1
		Adjusting - Side to Side.....	35-1
D		Mower on Machine	
Discharge Chute		Transporting	35-3
Installation	15-5	Mower Wheels	
		Adjusting	35-2
F		N	
Forward Lift Link		Numbers	
Installation	15-5	Identification	00-1
G		R	
Gear Oil	40-1	Rear Lift Link	
Gearbox		Assemble	15-6
Servicing	40-2	Rockshaft	
Gearbox and Tensioner Pulley		Installation	15-7
Installation	15-3	S	
Grease	40-1	Safety labels, with text	05-1
H		Sheaves	
Hangers		Replacing	40-4
Installation	15-6	Specification	
Height Adjust Link		60 Inch Deck	60-1
Installation	15-8	72 Inch Deck	60-1
Using	35-2	T	
I		Tractor and PTO Coupler	
Installation		Prepare	25-1
Complete	15-9	W	
Intervals		Wheels	
Service	40-1	Installation	15-4
L		Replacing	40-4
Labels			
Safety	05-1		
Labels, safety with text.....	05-1		
Lift Kit, Parts.....	15-1		
M			
Machine			
Preparing	25-1		
Mower			
Engaging	35-3		
Lubricating.....	40-1		
Raising and Lowering	35-1		
Removing.....	30-1		
Storing	30-1		
Unplugging	35-3		

