

9R Tractors (Serial No. 085001-) Export Edition G3



JOHN DEERE

OPERATOR'S MANUAL

9R Tractors (Serial No. 085001-)
Export Edition

OMTR131299 ISSUE G3 (ENGLISH)

John Deere Waterloo Works

Export Edition
PRINTED IN U.S.A.

Introduction

Foreword

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages (see your John Deere dealer to order).

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I. N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

SETTING FUEL DELIVERY BEYOND PUBLISHED factory specifications or otherwise overpowering will result in loss of warranty protection for this machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for an agreed upon period, schedule an after-sale inspection with your John Deere dealer to ensure best performance.

THIS TRACTOR IS DESIGNED SOLELY for use in customary agricultural or similar operations ("INTENDED USE"). Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS TRACTOR SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its

particular characteristics and acquainted with the relevant safety rules (accident prevention). The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times. Any arbitrary modifications carried out on this tractor will relieve the manufacturer of all liability for any resulting damage or injury.

REGISTER USED PRODUCTS. If you purchased used John Deere products from an authorized John Deere dealer, the warranty registration information was updated by the dealer and requires no further information on your part.

If you purchased any used John Deere product from an auction, through a trader or from a farmer, please register it now. John Deere and John Deere dealers value their customer's safety and satisfaction. Your local John Deere dealer is best equipped and anxious to provide you superior levels of support for your machine. Please enter your product details and your address online, using the John Deere website corresponding to your country. Then select the dealer of your choice.

RW29387,00000CC-19-22JUL19

Emissions Performance and Tampering

Operation and Maintenance

The engine, including the emissions control system, shall be operated, used, and maintained in accordance with the instructions provided in this manual to maintain the emissions performance of the engine within the requirements applicable to the engine's category/certification.

Tampering

No deliberate tampering with or misuse of the engine emissions control system shall take place; in particular with regard to deactivating or not maintaining an exhaust gas recirculation (EGR) or a DEF dosing system. Tampering with an engine's emissions control system will void the European Union (EU) type approval and applicable emissions-related warranties.

DX,EMISSIONS,PERFORM-19-12JAN18

Trademarks

Trademarks	
ACS™ (ActiveCommand Steering)	Trademark of Deere & Company
ActiveSeat™	Trademark of Deere & Company
AirCushion™	Trademark of Deere & Company
Apple CarPlay®	iPhone and Siri are trademarks of Apple Inc., registered in the U.S. and other countries. Apple CarPlay is a trademark of Apple Inc.
AutoLoad™	Trademark of Deere & Company
AutoPower™	Trademark of Deere & Company

Introduction

Trademarks	
AutoTrac™	Trademark of Deere & Company
Bio Hy-Gard™	Trademark of Deere & Company
Bluetooth®	Trademark of Bluetooth SIG
Break-In Plus™	Trademark of Deere & Company
CommandARM™	Trademark of Deere & Company
CommandCenter™	Trademark of Deere & Company
CommandPRO™	Trademark of Deere & Company
Cool-Gard™	Trademark of Deere & Company
DURABUILT™	Trademark of Camoplast Inc.
e18™	Trademark of Deere & Company
e23™	Trademark of Deere & Company
eAutoPowr™	Trademark of Deere & Company
Efficiency Manager™	Trademark of Deere & Company
ExactRate™	Trademark of Deere & Company
GreenStar™	Trademark of Deere & Company
Hy-Gard™	Trademark of Deere & Company
HydraCushion™	Trademark of Deere & Company
ILS™ (Independent-Link Suspension)	Trademark of Deere & Company
iTEC™	Trademark of Deere & Company
IVT™ (Infinitely Variable Transmission)	Trademark of Deere & Company
JDLINK™	Trademark of Deere & Company
PLUS-50™	Trademark of Deere & Company
PowerShift™	Trademark of Deere & Company
PowerTech™	Trademark of Deere & Company
PowerZero™	Trademark of Deere & Company
QUICK METAL™	Trademark of Henkel Corporation
Quik-Tatch™	Trademark of Deere & Company
Service ADVISOR™	Trademark of Deere & Company
SERVICEGARD™	Trademark of Deere & Company
Siri®	iPhone and Siri are trademarks of Apple Inc., registered in the U.S. and other countries. Apple CarPlay is a trademark of Apple Inc.
SprayMaster™	Trademark of Deere & Company
StarFire™	Trademark of Deere & Company
StellarSupport™	Trademark of Deere & Company
TEFLON™	Trademark of DuPont Co.
TLS™ (Triple-Link Suspension)	Trademark of Deere & Company
TouchSet™	Trademark of Deere & Company

Contents

	Page		Page
Glossary			
Glossary of Terms	00-1	Tightening Wheel Retaining Bolts/Nuts	05-17
Safety		Avoid High-Pressure Fluids	05-17
Recognize Safety Information	05-1	Do Not Open High-Pressure Fuel System	05-18
Understand Signal Words	05-1	Store Attachments Safely	05-18
Follow Safety Instructions	05-1	Decommissioning — Proper Recycling and	
Prepare for Emergencies	05-1	Disposal of Fluids and Components	05-18
Wear Protective Clothing	05-2	Safety Signs	
Protect Against Noise	05-2	Operator's Manual	05A-1
Handle Fuel Safely—Avoid Fires	05-2	Seat Belt	05A-1
Handle Starting Fluid Safely	05-2	Hinge Area	05A-2
Fire Prevention	05-3	HydraCushion Suspension Accumulators (If	
In Case of Fire	05-3	Equipped)	05A-2
Avoid Static Electricity Risk When Refueling	05-4	Park Brake (Stored Energy)	05A-2
Keep ROPS Installed Properly	05-4	Rear Hitch (If Equipped for China Only) [Ag]	05A-3
Use Foldable ROPS and Seat Belt Properly	05-4	Rear PTO (If Equipped for China Only) [Ag]	05A-3
Stay Clear of Rotating Drivelines	05-5	Engine Cooling System (For China Only)	05A-4
Use Steps and Handholds Correctly	05-5	Vehicle Overview	
Read Operator's Manuals for ISOBUS		9R Series Tractor	10-1
Controllers	05-6	Engine Operation	
Use Seat Belt Properly	05-6	Engine Settings—Access	20-1
Operating the Tractor Safely	05-6	Engine Settings	20-1
Avoid Backover Accidents	05-7	Engine Settings—Engine Power	20-3
Limited Use in Forestry Operation	05-7	Engine Settings—Max Engine Speed	20-3
Operating the Loader Tractor Safely	05-8	Engine Settings—Exhaust Filter System	
Keep Riders Off Machine	05-8	Overview	20-4
Instructional Seat	05-8	Engine Settings—AUTO Exhaust Filter	
Use Safety Lights and Devices	05-9	Cleaning	20-5
Transport Towed Equipment at Safe Speeds	05-9	Engine Settings—Disable AUTO Exhaust	
Use Caution on Slopes, Uneven Terrain, and		Filter Cleaning	20-5
Rough Ground	05-10	Engine Settings—Parked Filter Cleaning	20-6
Freeing a Mired Machine	05-10	Engine Settings—Decelerator	20-7
Avoid Contact with Agricultural Chemicals	05-11	Engine Settings—Advanced	20-7
Handle Agricultural Chemicals Safely	05-11	Required Machine Stop Warning	20-8
Handling Batteries Safely	05-12	Engine Fuel System and Power Rating	20-9
Avoid Heating Near Pressurized Fluid Lines	05-12	Battery Disconnect Switch	20-9
Remove Paint Before Welding or Heating	05-13	Start the Engine	20-9
Handle Electronic Components and Brackets		Theft Deterrent Systems	20-10
Safely	05-13	Run the Engine	20-11
Practice Safe Maintenance	05-13	Stop the Engine	20-11
Avoid Hot Exhaust	05-14	Restart Engine That Has Run Out of Fuel	20-11
Clean Exhaust Filter Safely	05-14	Reduce Fuel Consumption	20-11
Work In Ventilated Area	05-15	Battery Booster or Charger	20-12
Support Machine Properly	05-15	Cold Weather Operation	
Prevent Machine Runaway	05-15	Cold Weather Starting—With Starting Aid	20A-1
Park Machine Safely	05-16	Change Starting Fluid Canister	20A-1
Transport Tractor Safely	05-16	Engine Coolant Heater Use	20A-1
Service Cooling System Safely	05-16		
Service Accumulator Systems Safely	05-16		
Service Tires Safely	05-17		
Service Front-Wheel Drive Tractor Safely	05-17		

Continued on next page

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

	Page		Page
Emissions Equipment		Recommendations (AutoLearn)	40-5
Aftertreatment Indicators Overview	20B-1	iTEC Functions—Efficiency Manager	40-6
Selective Catalytic Reduction (SCR) System Overview	20B-3		
Diesel Particulate Filter (DPF) Service	20B-4	Tractor-Implement Automation (TIA)	
Front Console		TIA—General Information	40A-1
Front Console	30-1	Activate TIA Equipment	40A-1
Adjust Steering Wheel and Column	30-1	Operate TIA	40A-1
Operate Horn	30-1	PTO Requirements [Ag]	40A-2
Operate Wipers and Washers	30-1	SCV Requirements	40A-2
Key Switch	30-2	PowerShift Transmission Requirements	40A-2
Operate Turn Signals	30-2	AutoTrac Guidance Requirements	40A-2
Pedals	30-2	Rear Hitch Requirements [Ag]	40A-3
Operate Lights	30-3		
Differential Lock Switch	30-4	Drivetrain	
Corner Post Display		Drivetrain Overview	50-1
Corner Post Display	30A-1	Suspension Settings—Access	50-1
CommandARM Controls		Suspension Settings	50-1
CommandARM	30B-1	Suspension Settings—Manual	50-2
CommandARM Hitch Controls [Ag]	30B-1	Differential Lock	50-2
CommandARM SCV Control Levers	30B-2	Operate Suspension	50-3
CommandARM PTO Control Levers [Ag]	30B-2	Drivetrain Protection	50-3
CommandARM Climate, Radio, and Lighting Controls	30B-2		
CommandARM Controls—Left Side	30B-4	Brakes	
CommandARM Secondary Brake Lever	30B-6	Trailer Brake System Settings—Access	50A-1
CommandARM Navigation Bar	30B-6	Trailer Brake System Settings	50A-1
Adjust CommandARM Position	30B-7	Trailer Brake System Settings—Brake Gain	50A-2
CommandCenter		Trailer Brake System Settings—Pre-Brake Offset	50A-2
Use Electronic Display Properly	30C-1	Trailer Brake System Settings—Trailer Brake Test	50A-3
Rear Hitch or PTO Availability	30C-1	Trailer Brake System Settings—Advanced	50A-3
Machine Settings Overview	30C-1	Brake Use	50A-3
Navigate G5 CommandCenter	30C-3	Trailer Brakes Regulation (EAEU-compliant Tractors Only)	50A-4
Compatible Universal Displays	30C-4	Hydraulic Trailer Brakes (If Equipped)	50A-4
Power Display On and Off	30C-4		
Change Pages and Values	30C-4	Transmission—General Information	
Factory and Service ADVISOR Installed Onscreen Help	30C-5	Transmission Settings—Access Advanced	50B-1
Radar Calibration	30C-5	Transmission Settings—Advanced	50B-1
Slip Calibration	30C-6	Warm-Up Transmission-Hydraulic System	50B-3
Steering Settings—Access	30C-7	Backup Alarm	50B-4
Steering Settings	30C-7		
Steering Settings—Steering Wheel Resistance	30C-7	e18 PowerShift Transmission	
Controls Setup	30C-7	Operate Transmission—e18	50G-1
Install Video Display Camera	30C-8	Shift Transmission—e18	50G-1
Intelligent Total Equipment Control (iTEC)		e18 Set Speeds and Efficiency Manager	50G-3
CommandARM Control Functions	40-1	e18 Transmission Settings—Access	50G-4
iTEC Station Description (EU 1322/2014)	40-1	e18 Transmission Settings	50G-4
CommandCenter Pages Descriptions and Functions	40-1	e18 Transmission Settings—Mode	50G-6
Status Area	40-2	e18 Transmission Settings—Custom	50G-6
All Sequence Page	40-2	e18 Transmission Settings—Droop	50G-6
Add New Sequence	40-2	e18 Transmission Settings—ECO	50G-7
Sequence Step Status	40-3	e18 Transmission Settings—Max Speeds	50G-7
Edit or Remove Sequence	40-3		
Sequence Sets Page	40-4	PTO—General Information [Ag]	
Perform Sequence	40-5	PTO Settings—Access	60A-1
		PTO Settings	60A-1
		PTO Settings—Advanced	60A-2
		PTO Settings—Engagement Rate	60A-3
		PTO Settings—Rear PTO Speed Limit	60A-3
		PTO Settings—PTO Out-of-Seat	60A-3
		Operating Instructions (EU 1322/2014)	60A-4
		Operate PTOs	60A-5

	Page		Page
External PTO Switches	60A-5	Hydraulics—General Information	
Select Correct Engine Speed	60A-6	Hydraulic System Overview	70-1
		Hydraulic Option Connector	70-1
Rear PTO [Ag]		Selective Control Valves	
Use PTO Shield (If Equipped)	60C-1	SCV Settings—Access	70A-1
Attach PTO-Driven Implement [Ag]	60C-1	SCV Settings	70A-1
		SCV Settings—Standard Mode	70A-3
Rear Hitch [Ag]		SCV Settings—Independent Mode	70A-3
Hitch Lift Capacities	60E-1	SCV Settings—Feature Mode	70A-4
Rear Hitch Settings—Access	60E-1	SCV Settings—Flow Adjustment	70A-4
Rear Hitch Settings	60E-1	SCV Settings—Time Adjustment	70A-5
Rear Hitch Settings—Upper Limit	60E-3	SCV Settings—Advanced	70A-5
Rear Hitch Settings—Drop Rate	60E-3	SCV Settings—Activating Independent Mode ..	70A-6
Rear Hitch Settings—Raise Rate	60E-3	SCV Settings—Automation	70A-6
Rear Hitch Settings—Load Depth	60E-4	SCV Settings—Assignment	70A-6
Rear Hitch Settings—Slip Sensitivity	60E-4	SCV Settings—Flow Adjustment Sensitivity	70A-7
Rear Hitch Settings—Position	60E-5	SCV Control Lever Adjustments	70A-7
Rear Hitch Settings—Position Control	60E-6	Total SCV Flow	70A-8
Rear Hitch Settings—Draft Control	60E-6	Flow Sharing	70A-9
Hitch Control Lever Adjustments	60E-7		
Hitch Depth Set Point	60E-8	Hydraulic Connections	
Float Operation	60E-8	Connect/Disconnect Hydraulic Hoses	70B-1
Hitch Components	60E-8	Implements Requiring Large Volumes of	
External Hitch Switches	60E-9	Hydraulic Oil	70B-2
Hitch Manual Lowering	60E-9	Use Load Sense Hydraulic System—Power	
Adjust Sway Blocks	60E-9	Beyond	70B-2
Attach Implement to Quick-Hitch	60E-10	Component Identification and Location [Ag]	70B-4
Detach Implement from Quick-Hitch	60E-10	Use Hydraulic Spray Pumps [Ag]	70B-6
Adjust Implement Level	60E-11	Implement Connection Example [Ag]: Closed	
Adjust Lateral Float	60E-11	Center Valve and Pump at High Pressure	
Hitch Conversion—Category 4N/4/3		—Less Hitch	70B-7
Convertible Quick-Hitch	60E-11	Implement Connection Example [Ag]: Planter	
Convert Category 4N/3 Convertible Quick-		with Vacuum Motor and Return Line to	
Hitch Lower Hooks	60E-12	SCV Using Motor Return Tip	70B-8
Convert Category 4N/3 Convertible Quick-		Implement Connection Example [Ag]: Planter	
Hitch Upper Hook	60E-13	with Vacuum Motor and Return Line to	
		Motor Return—With Hitch and Implement	
Drawbar		Lift Assist	70B-9
Drawbar Load Limitations [Ag]	60F-2	Implement Connection Example [Ag]:	
Scraper Applications [Ag]	60F-2	Pressure Control Valve Applications—	
Scraper Applications [Scraper]	60F-3	Less Hitch (Grain Drills or Air Seeders with	
Calculate Static Vertical Drawbar Load	60F-3	Constant Down-Pressure System)	70B-10
Calculate Vertical Drawbar Load Distance		Implement Connection Example—High-Flow	
Behind Rear Axle	60F-4	Hydraulics [Ag]: Implement Control Valves	
Category 5 Heavy-Duty Drawbar Support		—Less Hitch	70B-11
Load Limitations [Ag]	60F-4	Component Identification and Location	
Adjust Drawbar [Ag]	60F-4	[Scraper]	70B-11
Install Drawbar or Quick-Attach in Short		Scraper Hydraulic Hose Tips [Scraper]	70B-12
Drawbar Support [Scraper]	60F-5	Implement Connection Example [Scraper]:	
Short Scraper Drawbar Conversion [Scraper] ..	60F-5	Pulling 1, 2, and 3 Scrapers	70B-13
Long Drawbar Support Load Limitations			
[Scraper]	60F-6	TouchSet Depth Control	
Tow Cable	60F-6	TouchSet Depth Control Settings and	
Install Clevis Assembly—Category 4		Adjustments	70C-1
Drawbar [Ag]	60F-7	Connect/Disconnect the Implement Position	
Install Clevis Assembly—Category 4 Heavy-		Connector	70C-1
Duty Drawbar [Ag]	60F-7		
Install Clevis Assembly—Category 5		Laser Scraper Control [Ag]	
Drawbar [Ag]	60F-7	Laser Scraper—Scrapers Equipped with	
Clevis Assembly Use [Ag]	60F-8	Scraper Control Unit	70D-1
Use Correct Drawbar Pin—Category 5 to 4			
[Ag]	60F-8		

	Page		Page
Scraper Information [Scraper]		Accessories	
Scraper Operation Cycle	70E-1	Right-Hand Side Console	90D-1
Weight Transfer Limits	70E-2	CommandARM Storage	90D-1
Scraper/Tractor Attachment	70E-2	Right-Hand Front Corner Post	90D-2
Loading Techniques	70E-2	Left-Hand Rear Corner Post	90D-2
Connect AutoLoad Harness	70E-3	Right-Hand Rear Corner Post	90D-3
AutoLoad Settings—Access	70E-4	Refrigerator and Cool/Storage Box	90D-3
AutoLoad Settings	70E-4	Sunshade	90D-4
AutoLoad Settings—Scraper Status	70E-5	Storage Compartments	90D-4
AutoLoad Settings—Initial Draft	70E-6	Monitor Bracket Mounts	90D-4
AutoLoad Settings—Scraper Position	70E-6	Emergency Exit	90D-5
AutoLoad Settings—Average Draft	70E-7	Install Business Band/Citizens Band (CB)	
AutoLoad Settings—Advanced	70E-7	Antenna and/or Radio	90D-5
AutoLoad Settings—Scraper Dimensions	70E-7	Mount StarFire Receiver	90D-6
		Mount RTK (Real-Time Kinematic) Radio	90D-7
Wheels and Tires—General Information		Implement Connector	90D-8
Determine Tire Load Capacity	80-1	Implement Ethernet Connector	90D-8
Tire Group Sizes	80-1	RS232 Serial Communication Connection	90D-8
Change Tire Size	80-1	AutoLoad Harness Connector [Scraper]	90D-8
Use Correct Tire Combinations	80-2	Chain Box	90D-9
Tire Load Index	80-2		
Tire Inflation Pressure Guidelines	80-3	HVAC	
		HVAC Settings—Access	90E-1
Wheels and Tires		HVAC Settings	90E-1
Wheel, Tire, and Tread Guidelines	80A-1	HVAC Settings—Climate Control Automation	90E-2
Tread Settings	80A-1	HVAC Settings—Set Temperature	90E-2
Dual Tire Use	80A-2	HVAC Settings—Air Flow Mode	90E-3
Triple Wheels [Ag]	80A-3	HVAC Settings—Fan Speed	90E-3
Triple Wheels (Heavy Duty Wheel Hubs)	80A-4	HVAC Settings—Air Conditioning	90E-3
Install Wheel Rim to Drive (Inner) Wheel Hub	80A-4		
Install Wheel Rim to Dual Wheel Hub	80A-5	Performance Ballasting	
Wheel Weight Holding Wrench—JDG10958	80A-6	General Ballasting Information	100-1
Adjust and Tighten—Drive (Inner) Wheel		General Guidelines	100-1
Hubs	80A-6	General Weight Split Guidelines	100-2
Adjust and Tighten—Dual Wheel Hubs	80A-7	Ballast Options	100-3
Recommended Inflation Pressures—Group		Measure Slip	100-4
47	80A-8	Quik-Tatch Weight Use	100-4
Recommended Inflation Pressures—Group		Rear Wheel Weight Use	100-5
48	80A-13	Rear Wheel Weight Installation—Dual Drive	
		Wheels	100-6
Seats		Control Power Hop	100-8
Adjust Air Seat	90-1	Implement Guidelines [Ag]	100-9
Adjust ActiveSeat II	90-3	Implement and Scraper Size Guidelines	
Operator Presence Sensor	90-5	[Scraper]	100-9
Adjust Instructional Seat	90-6	Calculate Tractor Ballast Package	100-9
		Liquid Ballast Use	100-12
Mirrors		Unballasted Tractor Weight Chart	100-13
Adjust Mirrors	90A-1		
		Transport	
Lights		Driving Tractor on Roads	110-1
Light Identification (Version A)	90C-1	Towed Mass	110-1
Light Identification (Version B)	90C-1	Towed Loads and Transport with Ballast	110-1
Lights Settings—Access	90C-2	Transport Rear Mounted Implements with	
Lights Settings	90C-2	Ballast	110-2
Lights Settings—Worklights Presets	90C-4	Safety Chain Use	110-2
Lights Settings—Hood/Belt Line Lights	90C-4	Tow Points	110-3
Lights Settings—Advanced	90C-4	Carrier Transport	110-3
Hazard and Extremity Lights	90C-5	Tow Mode—Engine Will Start	110-7
Beacon Light	90C-5	Tow Mode—Engine Will Not Start	110-7
7-Pin Outlet (Version A Lighting)	90C-5	Freeing a Mired Tractor	110-8
7-Pin Outlet (Version B Lighting)	90C-6		
Trailer Lighting	90C-6		

Fuel, Lubricants, and Coolant—General Information

Determine Tractor Engine Type	200-1
Minimizing the Effect of Cold Weather on Diesel Engines	200-1
Oil Filters	200-2

Fuel

Diesel Fuel	200A-1
Supplemental Diesel Fuel Additives	200A-1
Biodiesel Fuel	200A-2
Lubricity of Diesel Fuel	200A-3
Handling and Storing Diesel Fuel	200A-3
Fill Fuel Tank	200A-3
Testing Diesel Fuel	200A-4
Fuel Filters	200A-4

Diesel Exhaust Fluid (DEF)

Diesel Exhaust Fluid (DEF) — Use in Selective Catalytic Reduction (SCR) Equipped Engines	200B-1
Storing Diesel Exhaust Fluid (DEF)	200B-1
Refilling Diesel Exhaust Fluid (DEF) Tank	200B-2
Fill DEF Tank—Final Tier 4/Stage V Engine	200B-2
Testing Diesel Exhaust Fluid (DEF)	200B-3
Disposal of Diesel Exhaust Fluid (DEF)	200B-3

Engine Oil

Diesel Engine Oil Service Interval for Operation at High Altitude	200C-1
John Deere Break-In Plus Engine Oil — Interim Tier 4, Final Tier 4, Stage IIIB, Stage IV, and Stage V	200C-1
Diesel Engine Oil — Interim Tier 4, Final Tier 4, Stage IIIB, Stage IV, and Stage V	200C-1
Engine Oil and Filter Service Intervals — Interim Tier 4, Final Tier 4, Stage IIIB, Stage IV, and Stage V Engines	200C-2
Diesel Engine Oil — Tier 2 and Stage II	200C-2
Engine Oil and Filter Service Intervals — Tier 2 and Stage II Engines	200C-3
Diesel Engine Oil — Tier 3 and Stage IIIA	200C-4
Engine Oil and Filter Service Intervals — Tier 3 and Stage III A — PowerTech Plus Engines	200C-4

Engine Coolant

Diesel Engine Coolant (Engine with Wet Sleeve Cylinder Liners)	200D-1
John Deere Cool-Gard II Coolant Extender	200D-1
Operating in Warm Temperature Climates	200D-2
Water Quality for Mixing with Coolant Concentrate	200D-2
Testing Coolant Freeze Point	200D-2
Disposing of Coolant	200D-3

Other Lubricants

Transmission and Hydraulic Oil	200E-1
Transmission and Hydraulic Oil Use	200E-1
Multipurpose Extreme Pressure (EP) Grease	200E-1
Lubricant Storage	200E-2
Mixing of Lubricants	200E-2
Alternative and Synthetic Lubricants	200E-2

Service—General Information

Service Sections Overview	210-1
Service Tasks Performed As Required	210-1
Identify Tractor Engine Emissions Status	210-1
Open Hood	210-1
Open Hood (If Equipped)	210-2
Remove Engine Access Panel	210-2
Remove Front Engine Side Shield	210-2
Remove Rear Engine Side Shield	210-2
Remove Cab Rear Panel	210-3
Access Battery Compartment	210-3
Jack Up Tractor—Lifting Points and Support Stand Placement	210-4
Service and Connect STC (Snap-to-Connect) Fittings	210-6
High-Pressure Washer Use	210-7
Transmission Calibration	210-7
Abort Transmission Calibration	210-10
Do Not Modify Fuel System	210-10
Bleed Fuel System	210-10
Identify Zinc-Flake Coated Fasteners	210-10
Metric Bolt and Screw Torque Values	210-11
Unified Inch Bolt and Screw Torque Values	210-12

Service—Break-In (100 Hours or Less)

Perform Break-In Services	210A-1
---------------------------------	--------

Service—Record Charts

Service Record Chart Overview	210B-1
Service Interval Chart	210B-1
Service Record Chart	210B-2

Service—Clean

Cleaning Diesel Exhaust Fluid (DEF) Tank	220A-1
DEF Tank Filler Neck Filter	220A-1
Tractor Exterior	220A-2
Clean Display	220A-2
Engine Cooling System	220A-2
Engine Cooling System	220A-3
Dual Beam Radar Sensor	220A-4
Optional Fuel Water Separator	220A-4
Implement Connector	220A-5

Service—Check

Engine Coolant Level	220B-1
Engine Coolant Freeze Point	220B-1
Water Separator	220B-1
Engine and Exhaust Compartments	220B-2
Air Conditioning System	220B-2
Engine Water Pump Weep Hole	220B-3
Fuel Tank Sump	220B-3
Engine Oil Level	220B-3
Hydraulic System Oil Level	220B-4
Tires	220B-5
Secondary Brake	220B-5
Transmission PARK System	220B-5
Engine Air Intake System—Tier 2/Stage II Engine	220B-5
Engine Air Intake System—Final Tier 4/Stage V or Tier 3/Stage IIIa Engine	220B-6
Seat Belts	220B-6
HydraCushion Suspended Front Axle Accumulator Charge Pressure	220B-6

	Page		Page
Engine Auxiliary Drive Belt and Drive Belt Tensioner	220B-6	Disconnect Battery	220F-2
Axle End Play	220B-8	Service Batteries and Connections	220F-2
Engine Valve Clearance	220B-8	Load Center—Cab	220F-3
Front Driveshaft Health (FDH) Sensor System	220B-8	Load Center—Front	220F-5
Drawbar Sensor Calibration [Scraper]	220B-8	Access Master Fuses	220F-6
Drawbar Wear	220B-9	Access Implement Power Relay Module Relays	220F-6
Engine Brake	220B-9	Handle Halogen Light Bulbs Safely	220F-7
Service—Tighten		Aim Headlights	220F-7
Wheel and Wheel Weight Bolts	220C-1	Adjust Front Grille Lights	220F-9
Use Wheel Tightening Stand	220C-1	Change Halogen Bulbs	220F-9
Use Wheel Torque Wrench Adapter	220C-1	Change Front HID/LED Light Assembly	220F-10
Drawbar Support and Cap Screws	220C-2	Change Front/Rear Belt Line Work Lights	220F-10
Service—Change		Change Brake or Turn Signal Light Bulb	220F-11
Fan Belt—Tier 2/Stage II or Tier 3/Stage IIIa Engine	220D-1	Change Cab Roof Light	220F-11
Engine Auxiliary Drive Belt	220D-1	Change Wrap-Around Cab Light	220F-11
Engine Oil and Filter	220D-2	Change Extremity Arm Light	220F-13
Fuel Filters	220D-3	Change Cab Dome Light	220F-13
Optional Fuel Water Separator Filter Element (If Equipped)	220D-3	Change Trailing Light Bulb	220F-13
Fuel Tank Vent Filters	220D-4	Troubleshooting—Procedures	
Cab Filters	220D-4	Troubleshooting Features	300A-1
Engine Primary and Secondary Air Filters—Final Tier 4/Stage V or Tier 3/Stage IIIa Engine	220D-6	Electrical System	300A-1
Engine Primary and Secondary Air Filters—Tier 2/Stage II Engine	220D-7	Engine	300A-2
SCV Pilot Valve Filter	220D-8	Hitch	300A-5
Diesel Exhaust Fluid (DEF) Tank Vent Filter	220D-8	Hydraulic System	300A-7
Access Diesel Exhaust Fluid (DEF) In-Line Filter	220D-9	Operator's Station	300A-8
Change Diesel Exhaust Fluid (DEF) In-Line Filter	220D-9	Selective Control Valve (SCV)	300A-9
Access Diesel Exhaust Fluid (DEF) Dosing Unit Filter	220D-11	Steering System	300A-10
Change Diesel Exhaust Fluid (DEF) Dosing Unit Filter	220D-12	Tractor Operation	300A-11
Hydraulic System Oil and Filters	220D-13	Transmission	300A-11
Engine Coolant	220D-16	Troubleshooting—Diagnostic Trouble Codes (DTC)	
Engine Crankshaft Damper	220D-19	STOP, Service, and Information Alerts on CommandCenter	300B-1
Front Drive Shaft U-Joints	220D-19	Access Diagnostic Trouble Codes	300B-1
Service—Lubricate		Service—Storage	
Heavy Duty Lift Link Pins (Optional)	220E-1	Place Tractor in Storage	400-1
Hinge Pins	220E-1	Remove Tractor from Storage	400-1
Steering Pins	220E-1	Specifications	
PTO Drive Shaft	220E-2	Engine	500A-1
Heavy-Duty Gudgeon Bearings	220E-2	Capacities	500A-2
Lower Drive Line Bearings	220E-2	Hydraulic System	500A-3
Rear Hitch	220E-3	Transmission and Drivetrain	500A-4
Lift Cylinders and Rockshaft	220E-3	PTO [Ag], Hitch [Ag], and Drawbar	500A-5
HydraCushion Front Axle Suspension	220E-4	Electrical System	500A-5
Service—Electrical		Integrated Technology	500A-5
Service—Electrical Overview	220F-1	Overall Dimensions	500A-6
Welding Near Electronic Control Units	220F-1	Tractor Loads/Weights	500A-8
Keep Electronic Control Unit Connectors Clean	220F-1	Sound Level (EU 1322/2014)	500A-9
Compressed Air Use	220F-2	Vibration Level	500A-9
High-Pressure Washer Use	220F-2	Cab Classification According to EN 15695-1 (for Application of Crop Protection Chemicals and Liquid Fertilizer) (EU 1322/2014)	500A-9
		Ground Speeds—e18 PowerShift Transmission	500A-10
		Agricultural Heavy-Duty Land Leveling Package [Ag]	500A-10
		Eurasian Economic Union	500A-10
		Machine Design Life	500A-11

Page

Required Emission-Related Information	500A-11
Carbon Dioxide Emissions (CO ₂)	500A-11
China Emission Control Warranty Statement ..	500A-13
Third-Party Software Notifications and Licenses	500A-14

Identification Numbers

Identification Plates	500B-1
Product Identification Number	500B-1
Product Identification Number (China Only)	500B-1
Engine Serial Number	500B-2
Cab Serial Number	500B-2
Transmission Serial Number	500B-2
PTO Drop Box Serial Number [Ag]	500B-3
PTO Clutch Serial Number [Ag]	500B-3
Keep Proof of Ownership	500B-3
Keep Machines Secure	500B-4

Change of Ownership

Subsequent Ownership	600A-1
----------------------------	--------

Predelivery

Predelivery Checklist	700-1
Delivery Checklist and Certificate	700-3

Glossary

Glossary of Terms

ITEM	ABBREVIATION	DESCRIPTION
Agriculture Tractor	[AG]	Tractor primary application
Scraper Tractor	[Scraper]	Tractor primary application
Air Conditioning	A/C	System used for conditioning the air in the cab
Automatic PowerShift	APS	Transmission feature
Controller Area Network	CAN	A communication system linking on-board electronics
Cold Cranking Amperes	CCA	Refers to a battery's capability to perform during cold-weather operation
Chassis Control Unit	CCU	Computerized system for tractor monitoring
Diesel Exhaust Fluid	DEF	Abbreviation
Diesel Particulate Filter	DPF	Filter that prevents ash and soot from entering the atmosphere
Diagnostic Trouble Codes	DTC	Codes that inform the operator of stop, service, or information alerts
Economy Mode	ECO	Abbreviation
Engine Control Unit	ECU	Abbreviation
Engine Revolutions Per Minute	erpm	Abbreviation
Gallons per Minute	gpm	Fluid flow measured over a period of 1 minute
Global Positioning System	GPS	Abbreviation
Heavy Duty	HD	Abbreviation
High Intensity Discharge	HID	Type of Xenon working light used for front lighting
Heating Ventilating Air Conditioning	HVAC	Abbreviation
International Standards Organization	ISO	Abbreviation
John Deere Central Tire Inflation System	John Deere CTIS	Abbreviation
Left-Hand	LH	Abbreviation
Liters per Minute	L/min	Fluid flow measured over a period of 1 minute
Light Emitting Diode	LED	Abbreviation
Low Temperature Circuit	LTC	Abbreviation
Maximum Ballast Weight	MBW	Abbreviation
Mechanical Front Wheel Drive	MFWD	Powered front axle which is driven mechanically from the transmission
Product Identification Number	PIN	Serial number relating to tractor identification
PowerShift Transmission	PST	Abbreviation
EVT/eAutoPowr Transmission Control Unit	PTE	Abbreviation
IVT/AutoPowr Transmission Control Unit	PTI	Abbreviation
Power Take-Off	PTO	Abbreviation
PowerShift Transmission Control Unit	PTP	Computerized system used to control IVT transmission shift functions
Roll-Over Protective Structure	ROPS	Abbreviation
Right-Hand	RH	Abbreviation
Revolutions per Minute	rpm	Abbreviation
Society of Automotive Engineers	SAE	Engineering Standards Organization
Selective Control Valve	SCV	Device used to control remote hydraulic functions
Tire Pressure System	TPS	Abbreviation
Voltage Class-B	VC-B	Abbreviation

RX32825,000179D-19-29JUN22

Safety

Recognize Safety Information



T81389—UN—28JUN13

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

DX,ALERT-19-03OCT22

Understand Signal Words



▲ WARNING

▲ CAUTION

TS187—19—30SEP88

DANGER; The signal word DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING; The signal word WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION; The signal word CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. CAUTION may also be used to alert against unsafe practices associated with events which could lead to personal injury.

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards. DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

DX,SIGNAL-19-05OCT16

Follow Safety Instructions



TS201—UN—15APR13

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.


Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

DX,READ-19-01AUG22

Prepare for Emergencies

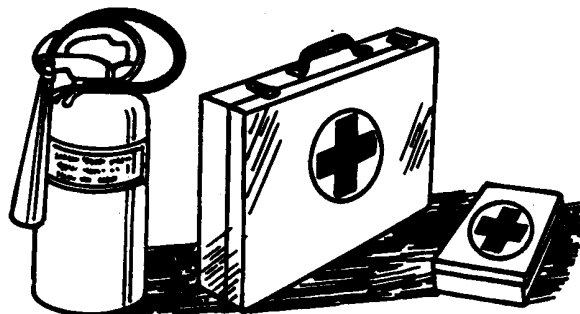

TS291—UN—15APR13


Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

DX,FIRE2-19-03MAR93

Wear Protective Clothing

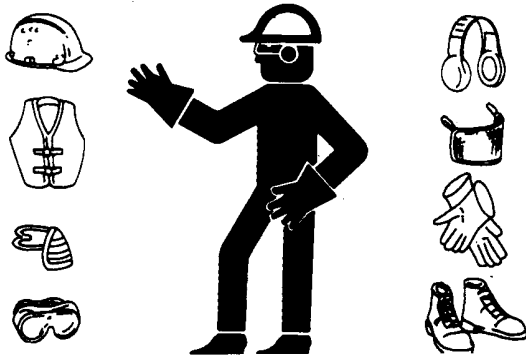


TS206—UN—15APR13

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

DX,WEAR2-19-03MAR93

Protect Against Noise

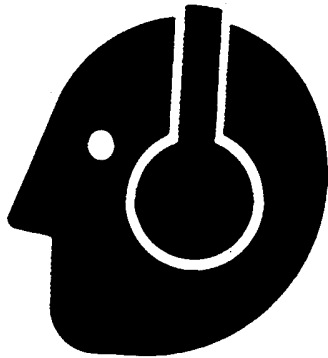

TS207—UN—23AUG88

There are many variables that affect the sound level range, including machine configuration, condition and maintenance level of the machine, ground surface, operating environmental, duty cycles, ambient noise, and attachments.

Exposure to loud noise can cause impairment or loss of hearing.

Always wear hearing protection. Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

DX,NOISE-19-03OCT17

Handle Fuel Safely—Avoid Fires



TS202—UN—23AUG88

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.

Use only an approved fuel container for transporting flammable liquids.

Never fill fuel container in pickup truck with plastic bed liner. Always place fuel container on ground before refueling. Touch fuel container with fuel dispenser nozzle before removing can lid. Keep fuel dispenser nozzle in contact with fuel container inlet when filling.

Do not store fuel container where there is an open flame, spark, or pilot light such as within a water heater or other appliance.

DX,FIRE1-19-12OCT11

Handle Starting Fluid Safely



TS1356—UN—18MAR92

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.

Do not use starting fluid on an engine equipped with glow plugs or an air intake heater.

DX,FIRE3-19-14MAR14

Fire Prevention

To reduce the risk of fire, your tractor should be regularly inspected and cleaned.

- Birds and other animals may build nests or bring other flammable materials into the engine compartment or onto the exhaust system. The tractor should be inspected and cleaned prior to the first use each day.
- A build up of grass, crop material and other debris may occur during normal operation. This is especially true when operating in very dry conditions or conditions where airborne crop material or crop dust is present. Any such build up must be removed to ensure proper machine function and to reduce the risk of fire. The tractor must be inspected and cleaned periodically throughout the day.
- Regular and thorough cleaning of the tractor combined with other routine maintenance procedures listed in the Operator's Manual greatly reduce the risk of fire and the chance of costly downtime.
- Do not store fuel container where there is an open flame, spark, or pilot light such as within a water heater or other appliance.
- Check fuel lines, tank, cap, and fittings frequently for damage, cracks or leaks. Replace if necessary.

Follow all operational and safety procedures posted on the machine and the Operator's Manual. Be careful of hot engine and exhaust components during inspection and cleaning. Before carrying out any inspection or cleaning, always shut OFF the engine, place the transmission in PARK or set parking brake, and remove the key. Removal of the key will prevent others from starting the tractor during inspection and cleaning.

DX,WW,TRACTOR,FIRE,PREVENTION-19-12OCT11

In Case of Fire



TS227—UN—15APR13



CAUTION: Avoid personal injury.

Stop machine immediately at the first sign of fire. Fire may be identified by the smell of smoke or sight of flames. Because fire grows and spreads rapidly, get off the machine immediately and move safely away from the fire. Do not return to the machine! The number one priority is safety.

Call the fire department. A portable fire extinguisher can put out a small fire or contain it until the fire department arrives; but portable extinguishers have limitations. Always put the safety of the operator and bystanders first. If attempting to extinguish a fire, keep your back to the wind with an unobstructed escape path so you can move away quickly if the fire cannot be extinguished.

Read the fire extinguisher instructions and become familiar with their location, parts, and operation before a fire starts. Local fire departments or fire equipment distributors may offer fire extinguisher training and recommendations.

If your extinguisher does not have instructions, follow these general guidelines:


1. Pull the pin. Hold the extinguisher with the nozzle pointing away from you, and release the locking mechanism.
2. Aim low. Point the extinguisher at the base of the fire.
3. Squeeze the lever slowly and evenly.
4. Sweep the nozzle from side-to-side.

DX,FIRE4-19-22AUG13

Avoid Static Electricity Risk When Refueling



RG22142—UN—17MAR14

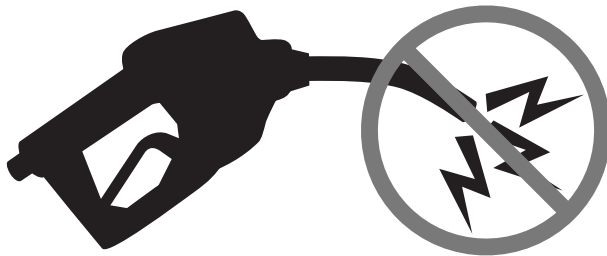

RG21992—UN—21AUG13

The removal of sulfur and other compounds in Ultra-Low Sulfur Diesel (ULSD) fuel decreases its conductivity and increases its ability to store a static charge.


Refineries may have treated the fuel with a static dissipating additive. However, there are many factors that can reduce the effectiveness of the additive over time.

Static charges can build up in ULSD fuel while it is flowing through fuel delivery systems. Static electricity discharge when combustible vapors are present could result in a fire or explosion.

Therefore, it is important to ensure that the entire system used to refuel your machine (fuel supply tank, transfer pump, transfer hose, nozzle, and others) is properly grounded and bonded. Consult with your fuel or fuel system supplier to ensure that the delivery system is in compliance with fueling standards for proper grounding and bonding practices.

DX,FUEL,STATIC,ELEC-19-12JUL13

Keep ROPS Installed Properly

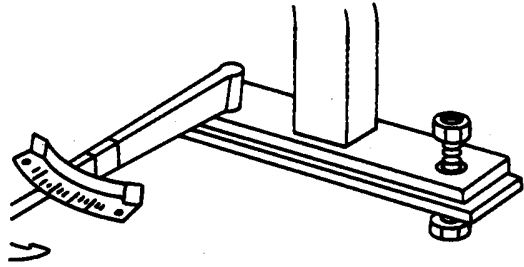

TS212—UN—23AUG88

Make certain all parts are reinstalled correctly if the roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to proper torque.


The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged ROPS should be replaced, not reused.

The seat is part of the ROPS safety zone. Replace only with John Deere seat approved for your tractor.

Any alteration of the ROPS must be approved by the manufacturer.

DX,ROPS3-19-12OCT11

Use Foldable ROPS and Seat Belt Properly

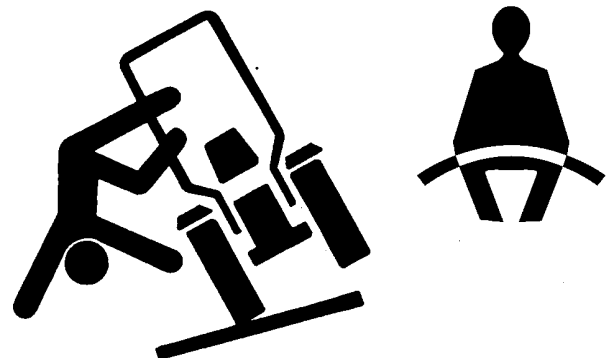

TS1729—UN—24MAY13

Avoid crushing injury or death during rollover.

- If this machine is equipped with a foldable rollover protective structure (ROPS), keep the ROPS in the fully extended and locked position. USE a seat belt when you operate with a ROPS in the fully extended position.
 - Hold the latch and pull the seat belt across the body.
 - Insert the latch into the buckle. Listen for a click.
 - Tug on the seat belt to make sure that the belt is securely fastened.


- Snug the seat belt across the hips.
- If this machine is operated with the ROPS folded (for example, to enter a low building), drive with extreme caution. DO NOT USE a seat belt with the ROPS folded.
- Return the ROPS to the raised, fully extended position as soon as the machine is operated under normal conditions.

DX,FOLDROPS-19-22AUG13

Stay Clear of Rotating Drivelines



TS1644—UN—22AUG95

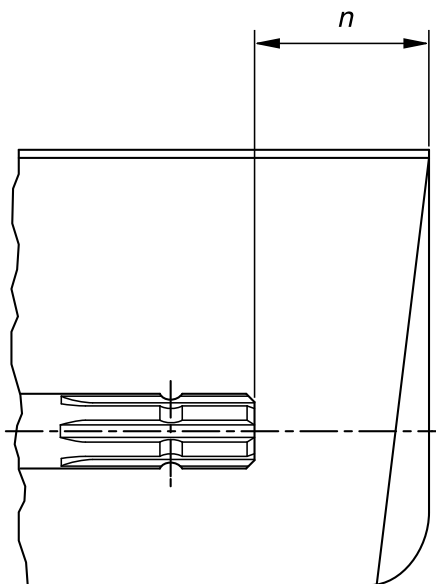

H96219—UN—29APR10

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Only use power take-off driveshafts with adequate guards and shields.

Wear close fitting clothing. Stop the engine and be sure that PTO driveline is stopped before making

adjustments, connections, or cleaning out PTO driven equipment.

Do not install any adapter device between the tractor and the primary implement PTO driveshaft that will allow a 1000 rpm tractor shaft to power a 540 rpm implement at speeds higher than 540 rpm.

Do not install any adapter device that results in a portion of the rotating implement shaft, tractor shaft, or the adapter to be unguarded. The tractor master shield shall overlap the end of the splined shaft and the added adaptor device as outlined in the table.

The angle at which the primary implement PTO driveshaft can be inclined may be reduced depending on the shape and size of the tractor master shield and the shape and size of the guard of the primary implement PTO driveshaft.


Do not raise implements high enough to damage the tractor master shield or guard of primary implement PTO driveshaft. Detach the PTO driveline shaft if it is necessary to increase implement height. (See Attching/ Detaching PTO Driveline)

When using Type 3/4 PTO, inclination and turning angles may be reduced depending on type of PTO master shield and coupling rails.

PTO Type	Diameter	Splines	$n \pm 5 \text{ mm (0.20 in.)}$
1	35 mm (1.378 in.)	6	85 mm (3.35 in.)
2	35 mm (1.378 in.)	21	85 mm (3.35 in.)
3	45 mm (1.772 in.)	20	100 mm (4.00 in.)
4	57.5 mm (2.264 in.)	22	100 mm (4.00 in.)

DX,PTO-19-28FEB17

Use Steps and Handholds Correctly

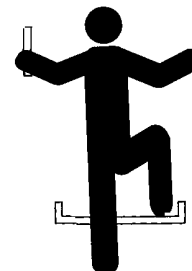

T133468—UN—15APR13

Prevent falls by facing the machine when getting on and off. Maintain 3-point contact with steps, handholds, and handrails.

Use extra care when mud, snow, or moisture present slippery conditions. Keep steps clean and free of grease

or oil. Never jump when exiting machine. Never mount or dismount a moving machine.

DX,WW,MOUNT-19-12OCT11

Read Operator's Manuals for ISOBUS Controllers


In addition to GreenStar Applications, this display can be used as a display device for any ISOBUS Controller that meets ISO 11783 standard. The display includes capability to control ISOBUS implements. When used in this manner, information and control functions placed on the display are provided by the ISOBUS Controller and are the responsibility of the ISOBUS Controller manufacturer.

Some of these functions could pose hazard to either the operator or a bystander. Read the Operator's Manual provided by the ISOBUS Controller manufacturer and observe all safety messages in manual and on ISOBUS Controller product before use.

NOTE: ISOBUS refers to the ISO Standard 11783.

DX,WW,ISOBUS(T)-19-04APR22

Use Seat Belt Properly

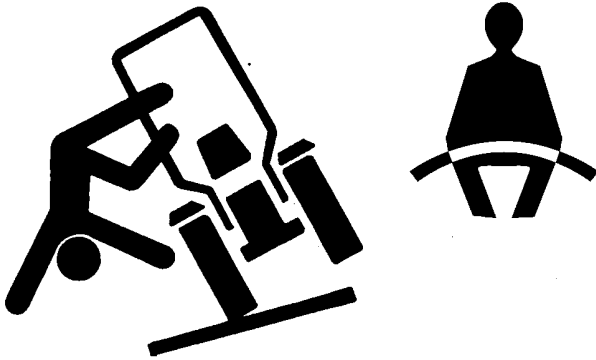

TS1729—UN—24MAY13

Avoid crushing injury or death during rollover.

This machine is equipped with a rollover protective structure (ROPS). USE a seat belt when you operate with a ROPS.

- Hold the latch and pull the seat belt across the body.
- Insert the latch into the buckle. Listen for a click.
- Tug on the seat belt latch to make sure that the belt is securely fastened.
- Snug the seat belt across the hips.

Replace entire seat belt if mounting hardware, buckle, belt, or retractor show signs of damage.

Inspect seat belt and mounting hardware at least once a year. Look for signs of loose hardware or belt damage,

such as cuts, fraying, extreme or unusual wear, discoloration, or abrasion. Replace only with replacement parts approved for your machine. See your John Deere dealer.

DX,ROPS1-19-22AUG13

Operating the Tractor Safely

You can reduce the risk of accidents by following these simple precautions:

- Use your tractor only for jobs it was designed to perform, for example, pushing, pulling, towing, actuating, and carrying a variety of interchangeable equipment designed to conduct agricultural work.
- Operators must be mentally and physically capable of accessing the operator's station and/or controls, and operating the machine properly and safely.
- Never operate machine when distracted, fatigued, or impaired. Proper machine operation requires the operator's full attention and awareness.
- This tractor is not intended to be used as a recreational vehicle.
- Read this operator's manual before operating the tractor and follow operating and safety instructions in the manual and on the tractor.
- Follow operation and ballasting instructions found in the operator's manual for your implements/ attachments, such as front loaders.
- Follow the instructions outlined in the operator's manual of any mounted or trailed machinery or trailer. Do not operate a combination of tractor-machine or tractor-trailer unless all instructions have been followed.
- Make sure that everyone is clear of machine, attached equipment, and work area before starting engine or operation.
- Stay clear of the three-point linkage and pickup hitch (if equipped) when controlling them.
- Keep hands, feet, and clothing away from power-driven parts.

Driving Concerns

- Never get on or off a moving tractor.
- Complete any required training prior to operating vehicle.
- Keep all children and nonessential personnel off tractors and all equipment.
- Never ride on a tractor unless seated on a John Deere approved seat with a seat belt.
- Keep all shields/guards in place.
- Use appropriate visual and audible signals when operating on public roads.
- Move to side of road before stopping.
- Reduce speed when turning, applying individual

brakes, or operating around hazards on rough ground or steep slopes.

- Stability degrades when attached implements are at high position.
- Couple brake pedals together for road travel.
- Pump brakes when stopping on slippery surfaces.
- Regularly clean fenders and fender valances (mud flaps) if installed. Remove dirt before driving on public roadways.

Heated and Ventilated Operator's Seat

- An overheated seat heater can cause a burn injury or damage to the seat. To reduce the risk of burns, use caution when using the seat heater for extended periods of time, especially if the operator cannot feel temperature change or pain to the skin. Do not place objects on the seat, such as a blanket, cushion, cover, or similar item, which can cause the seat heater to overheat.

Towing Loads

- Be careful when towing and stopping heavy loads. Stopping distance increases with speed and weight of towed loads, and on slopes. Towed loads with or without brakes that are too heavy for the tractor or are towed too fast can cause loss of control.
- Consider the total weight of the equipment and its load.
- Hitch towed loads only to approved couplings to avoid rearward upset.

Parking and Leaving the Tractor

- Before dismounting, shut off SCVs, disengage PTO, stop engine, lower implements/attachments to ground, place implement/attachment control devices in neutral, and securely engage park mechanism, including the park pawl and park brake. In addition, if the tractor is left unattended, remove key.
- Leaving transmission in gear with engine off will NOT prevent the tractor from moving.
- Never go near an operating PTO or an operating implement.
- Wait for all movement to stop before servicing machinery.

Common Accidents

Unsafe operation or misuse of the tractor can result in accidents. Be alert to hazards of tractor operation.

The most common accidents involving tractors are:

- Tractor rollover
- Collisions with motor vehicles
- Improper starting procedures
- Entanglement in PTO shafts
- Falling from tractor

- Crushing and pinching during hitching

DX,WW,TRACTOR-19-08MAY19

Avoid Backover Accidents



PC10857XW—UN—15APR13

Before moving machine, be sure that all persons are clear of machine path. Turn around and look directly for best visibility. Use a signal person when backing if view is obstructed or when in close quarters.

Do not rely on a camera to determine if personnel or obstacles are behind the machine. The system can be limited by many factors including maintenance practices, environmental conditions, and operating range.

DX,AVOID,BACKOVER,ACCIDENTS-19-30AUG10


Limited Use in Forestry Operation

The intended use of John Deere tractors when used in forestry operations is limited to tractor-specific applications like transport, stationary work such as log splitting, propulsion, or operating implements with PTO, hydraulic, or electrical systems.

These are applications where normal operation does not present a risk of falling or penetrating objects. Any forestry applications beyond these applications, such as forwarding and loading, requires fitment of application-specific components including Falling Object Protective Structure (FOPS) and/or Operative Protective Structures (OPS). Contact John Deere dealer for special components.

DX,WW,FORESTRY-19-12OCT11

Operating the Loader Tractor Safely

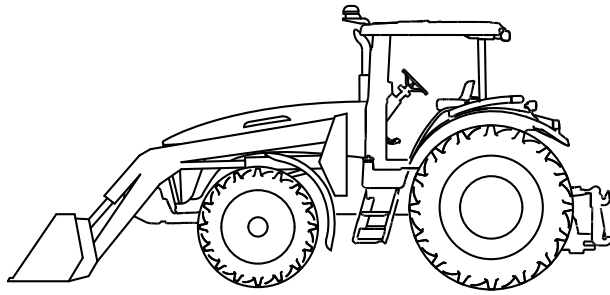

TS1692—UN—09NOV09

When operating a machine with a loader application, reduce speed as required to ensure good tractor and loader stability.

To avoid tractor rollover and damage to front tires and tractor, do not carry load with your loader at a speed over 10 km/h (6 mph).

To avoid tractor damage do not use a front loader or a sprayer tank if the tractor is equipped with a 3 Meter Front Axle.

Never allow anyone to walk or work under a raised loader.

Do not use loader as a work platform.

Do not lift or carry anyone on loader, in bucket, or on implement or attachment.


Lower loader to ground before leaving operators station.

The Rollover Protective Structure (ROPS) or cab roof, if equipped, may not provide sufficient protection from load falling onto the operators station. To prevent loads from falling onto the operators station, always use appropriate implements for specific applications (that is, manure forks, round bale forks, round bale grippers, and claspers).

Ballast tractor in accordance to Ballast Recommendations in PREPARE TRACTOR section.

DX,WW,LOADER-19-18SEP12

Keep Riders Off Machine

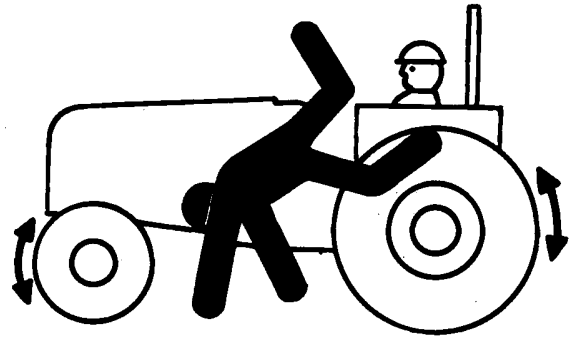

TS290—UN—23AUG88

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

DX,RIDER-19-03MAR93

Instructional Seat




TS1730—UN—24MAY13

The instructional seat, if so equipped, has been provided only for training operators or diagnosing machine problems.

DX,SEAT,NA-19-22AUG13

Use Safety Lights and Devices

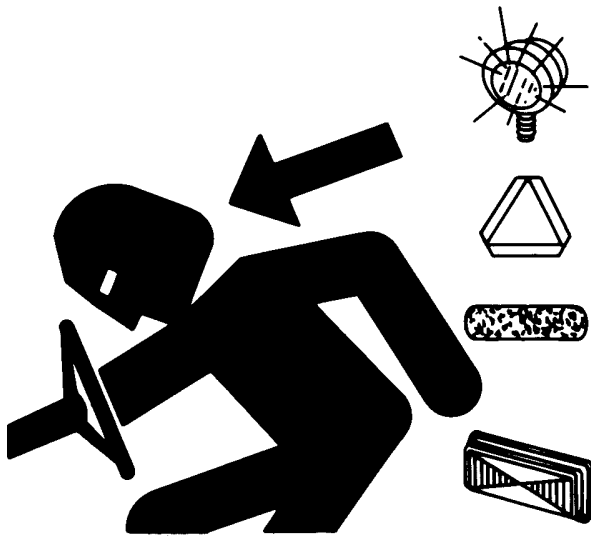


TS951—UN—12APR90

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible, clean, and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

DX,FLASH-19-07JUL99

Transport Towed Equipment at Safe Speeds

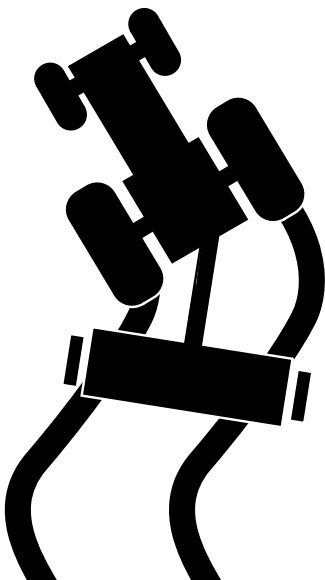

TS1686—UN—27SEP06

Do not exceed the maximum transport speed. This towing unit may be capable of operating at transport speeds that exceed the maximum allowable transport speed for towed implements.

Before transporting a towed implement, determine from signs on the implement or information provided in the implement's operator manual the maximum transport speed. Never transport at speeds that exceed the implement's maximum transport speed. Exceeding the implement's maximum transport speed can result in:

- Loss of control of the towing unit/implement combination
- Reduced or no ability to stop during braking
- Implement tire failure
- Damage to the implement structure or its components

Implements shall be equipped with brakes if the maximum fully loaded weight is greater than 1500 kg (3307 lbs) and greater than 1.5 times the weight of the towing unit.

Example: Implement mass is 1600 kg (3527 lbs) and towing unit mass is 1600 kg (3527 lbs), example implement is not required to have brakes.

Implements without brakes: Do not transport at speeds greater than 32 km/h (20 mph).


Implements with brakes:

- If the manufacturer does not specify a maximum transport speed, do not tow at speeds greater than 40 km/h (25 mph).
- When transporting at speeds up to 40 km/h (25 mph) the fully loaded implement must weigh less than 4.5 times the towing unit weight.
- When transporting at speeds between 40—50 km/h (25—31 mph) the fully loaded implement must weigh less than 3.0 times the towing unit weight.

When towing a trailer, become familiar with the braking characteristics and ensure the compatibility of the tractor/trailer combination in regard to the deceleration rate.

DX,TOW1-19-28FEB17

Use Caution on Slopes, Uneven Terrain, and Rough Ground

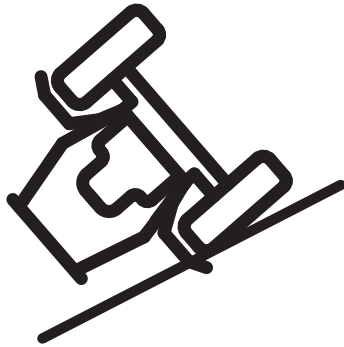

RXA0103437—UN—01JUL09

Avoid holes, ditches, and obstructions which cause the tractor to tip, especially on slopes. Avoid sharp uphill turns.

Driving forward out of a ditch, mired condition, or up a steep slope could cause the tractor to tip over rearward. Back out of these situations if possible.

Danger of overturn increases greatly with narrow tread setting, at high speed.

Not all conditions that can cause a tractor to overturn are listed. Be alert for any situation in which stability may be compromised.

Slopes are a major factor related to loss-of-control and tip-over accidents, which can result in severe injury or death. Operation on all slopes requires extra caution.

Uneven terrain or rough ground can cause loss-of-control and tip-over accidents, which can result in severe injury or death. Operation on uneven terrain or rough ground requires extra caution.

Never drive near the edge of a gully, drop-off, ditch, steep embankment, or a body of water. The machine could suddenly roll over if a wheel goes over the edge or the ground caves in.


Choose a low ground speed so you will not have to stop or shift while on a slope.

Avoid starting, stopping, or turning on a slope. If the tires lose traction, disengage the PTO and proceed slowly, straight down the slope.

Keep all movement on slopes slow and gradual. Do not make sudden changes in speed or direction, which could cause the machine to roll over.

DX,WW,SLOPE-19-28FEB17

Freeing a Mired Machine

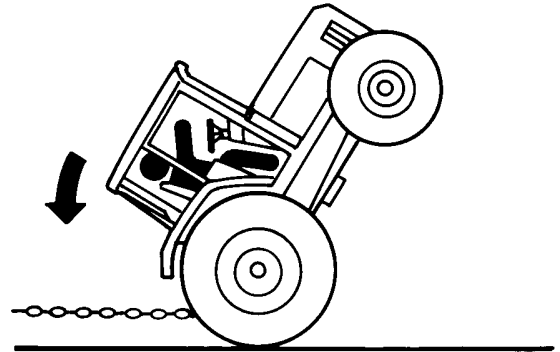

TS1645—UN—15SEP95



TS263—UN—23AUG88

Attempting to free a mired machine can involve safety hazards such as the mired tractor tipping rearward, the towing tractor overturning, and the tow chain or tow bar (a cable is not recommended) failing and recoiling from its stretched condition.


Back your tractor out if it gets mired down in mud. Unhitch any towed implements. Dig mud from behind the rear wheels. Place boards behind the wheels to provide a solid base and try to back out slowly. If necessary, dig mud from the front of all wheels and drive slowly ahead.

If necessary to tow with another unit, use a tow bar or a long chain (a cable is not recommended). Inspect the chain for flaws. Make sure all parts of towing devices are of adequate size and strong enough to handle the load.

Always hitch to the drawbar of the towing unit. Do not hitch to the front pushbar attachment point. Before moving, clear the area of people. Apply power smoothly to take up the slack: a sudden pull could snap any towing device causing it to whip or recoil dangerously.

DX,MIREDD-19-07JUL99

Avoid Contact with Agricultural Chemicals

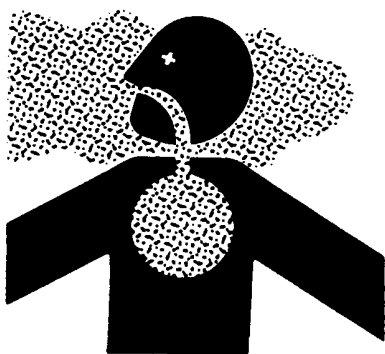

TS220—UN—15APR13



TS272—UN—23AUG88


This enclosed cab does not protect against inhaling vapor, aerosol or dust. If pesticide use instructions require respiratory protection, wear an appropriate respirator inside the cab.

Before leaving the cab, wear personal protective equipment as required by the pesticide use instructions. When re-entering the cab, remove protective equipment and store either outside the cab in a closed box or some other type of sealable container or inside the cab in a pesticide resistant container, such as a plastic bag.


Clean your shoes or boots to remove soil or other contaminated particles prior to entering the cab.

DX,CABS-19-25MAR09

Handle Agricultural Chemicals Safely

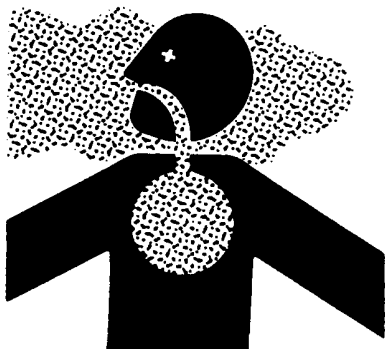

TS220—UN—15APR13

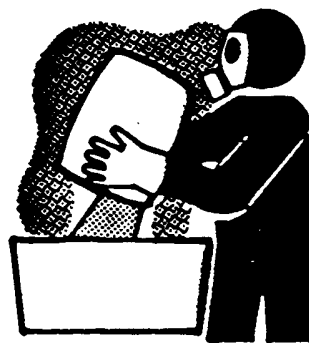

A34471

A34471—UN—11OCT88

Chemicals used in agricultural applications such as fungicides, herbicides, insecticides, pesticides, rodenticides, and fertilizers can be harmful to your health or the environment if not used carefully.

Always follow all label directions for effective, safe, and legal use of agricultural chemicals.

Reduce risk of exposure and injury:

- Wear appropriate personal protective equipment as recommended by the manufacturer. In the absence of manufacturer's instructions, follow these general guidelines:
 - Chemicals labeled **'Danger'**: Most toxic. Generally require use of goggles, respirator, gloves, and skin protection.
 - Chemicals labeled **'Warning'**: Less toxic. Generally require use of goggles, gloves, and skin protections.
 - Chemicals labeled **'Caution'**: Least toxic. Generally require use of gloves and skin protection.
- Avoid inhaling vapor, aerosol or dust.
- Always have soap, water, and towel available when working with chemicals. If chemical contacts skin, hands, or face, wash immediately with soap and water. If chemical gets into eyes, flush immediately with water.
- Wash hands and face after using chemicals and before eating, drinking, smoking, or urination.
- Do not smoke or eat while applying chemicals.
- After handling chemicals, always bathe or shower and change clothes. Wash clothing before wearing again.
- Seek medical attention immediately if illness occurs during or shortly after use of chemicals.
- Keep chemicals in original containers. Do not transfer chemicals to unmarked containers or to containers used for food or drink.
- Store chemicals in a secure, locked area away from human or livestock food. Keep children away.
- Always dispose of containers properly. Triple rinse


empty containers and puncture or crush containers and dispose of properly.

DX,VV,CHEM01-19-24AUG10

Handling Batteries Safely



TS204—UN—15APR13

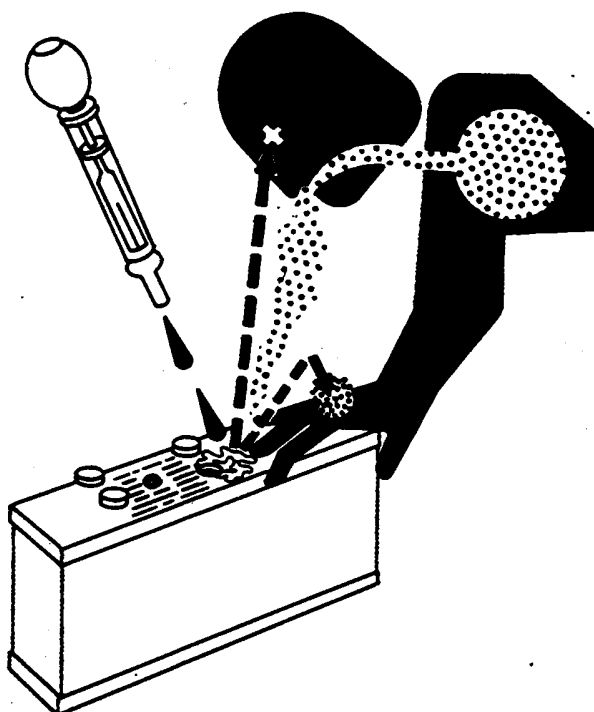

TS203—UN—23AUG88

Battery gas can explode. Keep sparks and flames away from batteries. Use a flashlight to check battery electrolyte level.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Always remove grounded (-) battery clamp first and replace grounded clamp last.

Sulfuric acid in battery electrolyte is poisonous and

strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid hazards by:

- Filling batteries in a well-ventilated area
- Wearing eye protection and rubber gloves
- Avoiding use of air pressure to clean batteries
- Avoiding breathing fumes when electrolyte is added
- Avoiding spilling or dripping electrolyte
- Using correct battery booster or charger procedure.

If acid is spilled on skin or in eyes:

1. Flush skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 qt.).
3. Get medical attention immediately.

WARNING: Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. **Wash hands after handling.**

DX,VV,BATTERIES-19-02DEC10

Avoid Heating Near Pressurized Fluid Lines




TS953—UN—15MAY90

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can accidentally burst when heat goes beyond the immediate flame area.

DX,TORCH-19-10DEC04

Remove Paint Before Welding or Heating

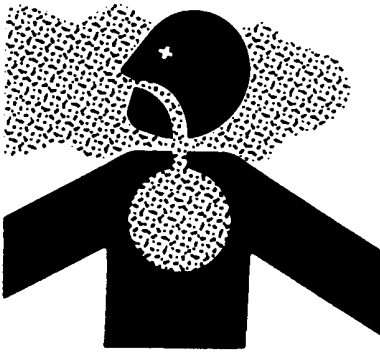

TS220—UN—15APR13

Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Remove paint before heating:

- Remove paint a minimum of 100 mm (4 in.) from area to be affected by heating. If paint cannot be removed, wear an approved respirator before heating or welding.
- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

Do not use a chlorinated solvent in areas where welding will take place.

Do all work in an area that is well ventilated to carry toxic fumes and dust away.

Dispose of paint and solvent properly.

DX,PAINT-19-24JUL02

Handle Electronic Components and Brackets Safely



TS249—UN—23AUG88

Falling while installing or removing electronic

components mounted on equipment can cause serious injury. Use a ladder or platform to easily reach each mounting location. Use sturdy and secure footholds and handholds. Do not install or remove components in wet or icy conditions.

If installing or servicing a RTK base station on a tower or other tall structure, use a certified climber.

If installing or servicing a global positioning receiver mast used on an implement, use proper lifting techniques and wear proper protective equipment. The mast is heavy and can be awkward to handle. Two people are required when mounting locations are not accessible from the ground or from a service platform.

DX,WW,RECEIVER-19-24AUG10

Practice Safe Maintenance



TS218—UN—23AUG88

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing away from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed.

Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.


On self-propelled equipment, disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.

On towed implements, disconnect wiring harnesses from tractor before servicing electrical system components or welding on machine.

Falling while cleaning or working at height can cause serious injury. Use a ladder or platform to easily reach each location. Use sturdy and secure footholds and handholds.

DX,SERV-19-28FEB17

Avoid Hot Exhaust

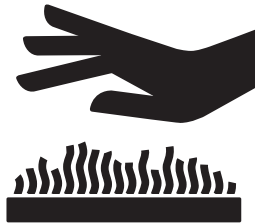

RG17488—UN—21AUG09

Servicing machine or attachments with engine running can result in serious personal injury. Avoid exposure and skin contact with hot exhaust gases and components.


Exhaust parts and streams become very hot during operation. Exhaust gases and components reach temperatures hot enough to burn people, ignite, or melt common materials.

DX,EXHAUST-19-20AUG09


Clean Exhaust Filter Safely



TS227—UN—15APR13

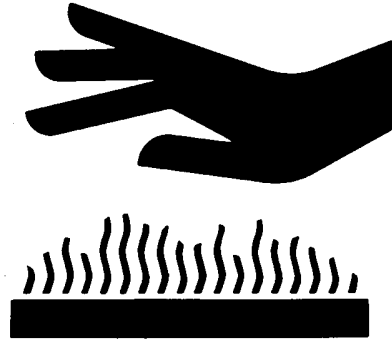

TS271—UN—23AUG88

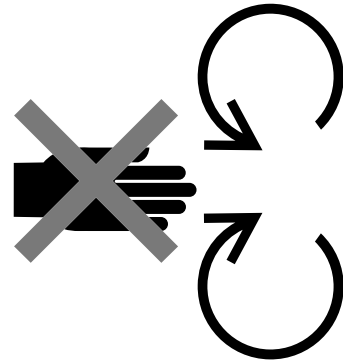

TS1693—UN—09DEC09



TS1695—UN—07DEC09

During exhaust filter cleaning operations, the engine may run at elevated idle and hot temperatures for an extended period of time. Exhaust gases and exhaust filter components reach temperatures hot enough to burn people, or ignite or melt common materials.

Keep machine away from people, animals, or structures which may be susceptible to harm or damage from hot exhaust gases or components. Avoid potential fire or explosion hazards from flammable materials and vapors near the exhaust. Keep exhaust outlet away from people and anything that can melt, burn, or explode.

Closely monitor machine and surrounding area for smoldering debris during and after exhaust filter cleaning.

Adding fuel while an engine is running can create a fire or explosion hazard. Always stop engine before refueling machine and clean up any spilled fuel.

Always make sure that engine is stopped while hauling machine on a truck or trailer.

Contact with exhaust components while still hot can result in serious personal injury.

Avoid contact with these components until cooled to safe temperatures.

If service procedure requires engine to be running:

- Only engage power-driven parts required by service procedure
- Ensure that other people are clear of operator station and machine


Keep hands, feet, and clothing away from power-driven parts.

Always disable movement (neutral), set the parking brake or mechanism and disconnect power to attachments or tools before leaving the operator's station.

Shut off engine and remove key (if equipped) before leaving the machine unattended.

DX,EXHAUST,FILTER-19-12JAN11

Work In Ventilated Area

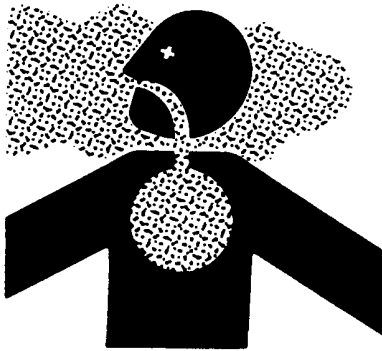


TS220—UN—15APR13

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

DX,AIR-19-17FEB99

Support Machine Properly

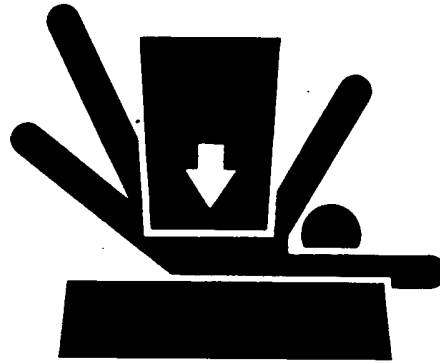

TS229—UN—23AUG88


Always lower the attachment or implement to the ground before you work on the machine. If the work requires that the machine or attachment be lifted, provide secure support for them. If left in a raised position, hydraulically supported devices can settle or leak down.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

When implements or attachments are used with a machine, always follow safety precautions listed in the implement or attachment operator's manual.

DX,LOWER-19-24FEB00

Prevent Machine Runaway

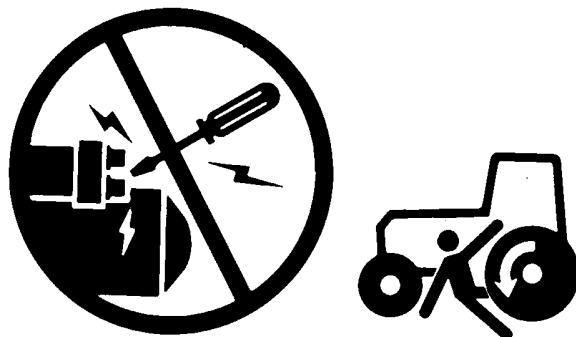

TS177—UN—11JAN89


Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

DX,BYPAS1-19-29SEP98

Park Machine Safely

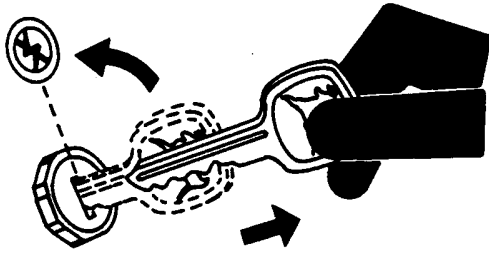

TS230—UN—24MAY89

Before working on the machine:

- Lower all equipment to the ground.
- Stop the engine and remove the key.
- Disconnect the battery ground strap.
- Hang a "DO NOT OPERATE" tag in operator station.

DX,PARK-19-04JUN90

Service Cooling System Safely




TS281—UN—15APR13

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

DX,WW,COOLING-19-19AUG09

Transport Tractor Safely

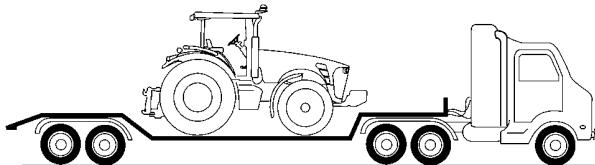

RXA0103709—UN—01JUL09


A disabled tractor is best transported on a flatbed carrier. Use chains to secure the tractor to the carrier. The axles and tractor frame are suitable attachment points.

Before transporting the tractor on a low-loader truck or flatbed rail wagon, make sure that the hood is secured over the tractor engine and that doors, roof hatch (if equipped) and windows are properly closed.

Never tow a tractor at a speed greater than 10 km/h (6 mph). An operator must steer and brake the tractor under tow.

DX,WW,TRANSPORT-19-19AUG09

Service Accumulator Systems Safely

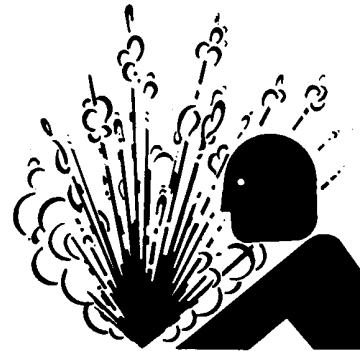

TS281—UN—15APR13

Escaping fluid or gas from systems with pressurized accumulators that are used in air conditioning, hydraulic, and air brake systems can cause serious injury. Extreme heat can cause the accumulator to burst, and pressurized lines can be accidentally cut. Do not weld or use a torch near a pressurized accumulator or pressurized line.


Relieve pressure from the pressurized system before removing accumulator.

Relieve pressure from the hydraulic system before removing accumulator. Never attempt to relieve hydraulic system or accumulator pressure by loosening a fitting.

Accumulators cannot be repaired.

DX,WW,ACCLA2-19-22AUG03

Service Tires Safely

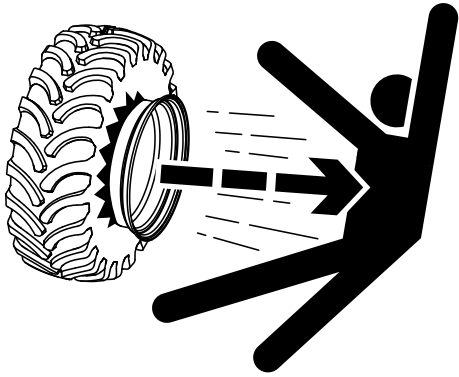

RXA0103438—UN—11JUN09

Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job.

Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.


When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims, or missing lug bolts and nuts.

Wheels and tires are heavy. When handling wheels and tires use a safe lifting device or get an assistant to help lift, install, or remove.

DX,WW,RIMS-19-28FEB17

Service Front-Wheel Drive Tractor Safely

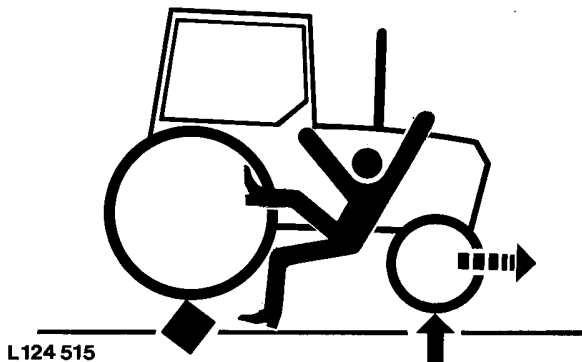

L124 515


L124515—UN—06AUG94

When servicing front-wheel drive tractor with the rear wheels supported off the ground and rotating wheels by engine power, always support front wheels in a similar manner. Loss of electrical power or transmission hydraulic system pressure will engage the front driving wheels, pulling the rear wheels off the support if front

wheels are not raised. Under these conditions, front drive wheels can engage even with switch in disengaged position.

DX,WW,MFWD-19-19AUG09

Tightening Wheel Retaining Bolts/Nuts

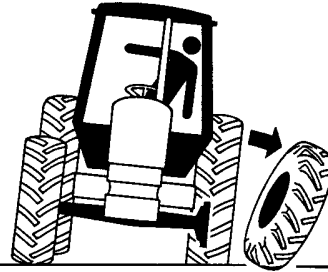


L124 516

L124516—UN—03JAN95

Torque wheel retaining bolts/nuts at the intervals specified in section Break-In Period and Service.

DX,WW,WHEEL-19-12OCT11

Avoid High-Pressure Fluids

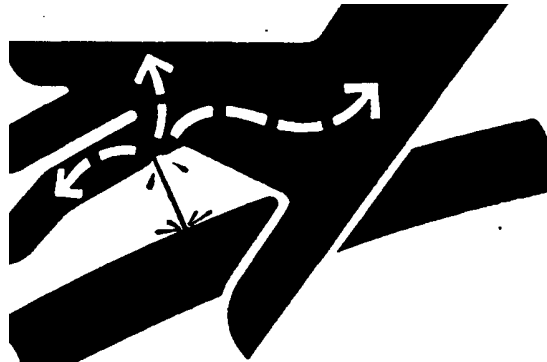

X9811—UN—23AUG88

Inspect hydraulic hoses periodically – at least once per year – for leakage, kinking, cuts, cracks, abrasion, blisters, corrosion, exposed wire braid or any other signs of wear or damage.

Replace worn or damaged hose assemblies immediately with John Deere approved replacement parts.

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high-pressure fluids.

If an accident occurs, see a doctor immediately. Any

fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available in English from Deere & Company Medical Department in Moline, Illinois, U.S.A., by calling 1-800-822-8262 or +1 309-748-5636.

DX,FLUID-19-12OCT11

Do Not Open High-Pressure Fuel System



TS1343—UN—18MAR92

High-pressure fluid remaining in fuel lines can cause serious injury. Do not disconnect or attempt repair of fuel lines, sensors, or any other components between the high-pressure fuel pump and nozzles on engines with High Pressure Common Rail (HPCR) fuel system.

Only technicians familiar with this type of system can perform repairs. (See your John Deere dealer.)

DX,WW,HPCR1-19-07JAN03

Store Attachments Safely




TS219—UN—23AUG88

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.

DX,STORE-19-03MAR93

Decommissioning — Proper Recycling and Disposal of Fluids and Components

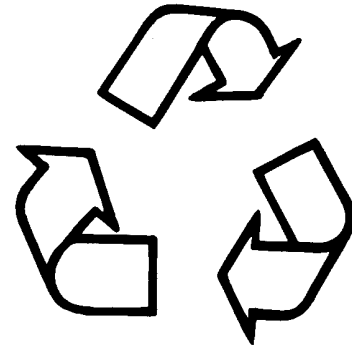

TS1133—UN—15APR13

Safety and environmental stewardship measures must be taken into account when decommissioning a machine and/or component. These measures include the following:


- Use appropriate tools and personal protective equipment such as clothing, gloves, face shields or glasses, during the removal or handling of objects and materials.
- Follow instructions for specialized components.
- Release stored energy by lowering suspended machine elements, relaxing springs, disconnecting the battery or other electrical power, and releasing pressure in hydraulic components, accumulators, and other similar systems.
- Minimize exposure to components which may have residue from agricultural chemicals, such as fertilizers and pesticides. Handle and dispose of these components appropriately.
- Carefully drain engines, fuel tanks, radiators, hydraulic cylinders, reservoirs, and lines before recycling components. Use leak-proof containers when draining fluids. Do not use food or beverage containers.
- Do not pour waste fluids onto the ground, down a drain, or into any water source.
- Observe all national, state, and local laws, regulations, or ordinances governing the handling or disposal of waste fluids (example: oil, fuel, coolant, brake fluid); filters; batteries; and, other substances or parts. Burning of flammable fluids or components in other than specially designed incinerators may be prohibited by law and could result in exposure to harmful fumes or ashes.
- Service and dispose of air conditioning systems appropriately. Government regulations may require a certified service center to recover and recycle air conditioning refrigerants which could damage the atmosphere if allowed to escape.
- Evaluate recycling options for tires, metal, plastic, glass, rubber, and electronic components which may be recyclable, in part or completely.

- Contact your local environmental or recycling center, or your John Deere dealer for information on the proper way to recycle or dispose of waste.

DX,DRAIN-19-01JUN15


Safety Signs

Operator's Manual

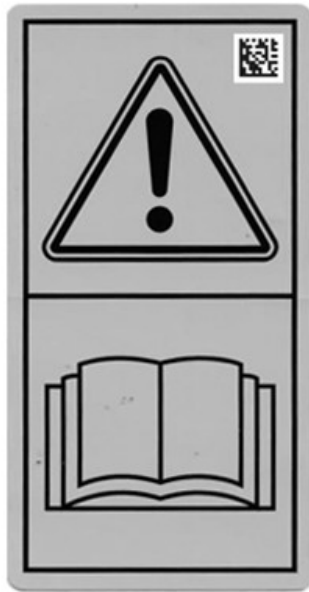

(A)

RXA0186042—UN—18NOV21

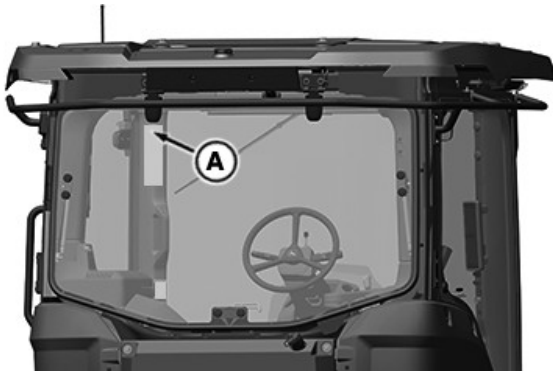

RXA0180320—UN—27OCT20

A—Operator's Manual Label (left-hand front cab post)

CAUTION: Avoid the risk of injury.

This Operator's Manual contains important information necessary for safe machine operation and explanation of safety signs. Carefully observe all safety rules to avoid accidents.


RD47322.0000375-19-07JAN22

Seat Belt



(A)

RXA0186043—UN—18NOV21

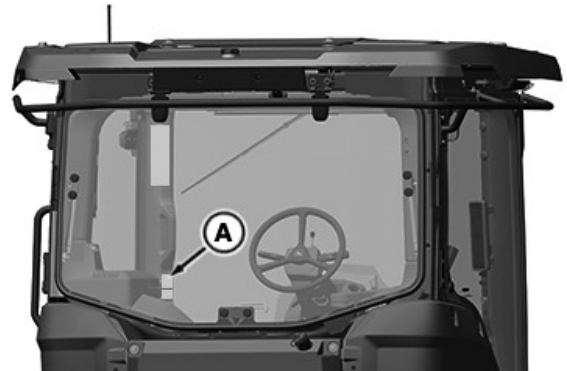

RXA0180321—UN—27OCT20

A—Seat Belt Label (left-hand front cab post)

Use seat belt properly.

CAUTION: Avoid crushing injury or death during rollover.

This machine is equipped with a roll-over protective structure (ROPS).

USE a seat belt when operating with a ROPS.

- Hold the latch and pull the seat belt across the body.
- Insert the latch into the buckle. Listen for a click.
- Tug on the seat belt latch to make sure that the belt is securely fastened.
- Snug the seat belt across the hips.


RD47322.0000376-19-18OCT22

Hinge Area



(A)

RXA0186057—UN—18NOV21

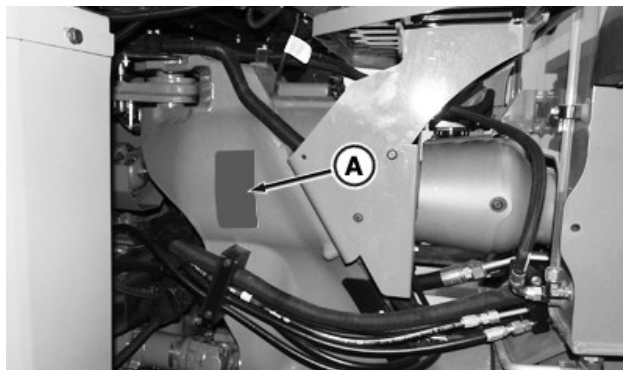

A—Hinge Area Label (left-hand and right-hand sides of gudgeon)

CAUTION: Avoid crushing and pinching.

Crushing injury may result in the hinge area when the machine turns. Make sure that people are clear of the machine before starting the engine or moving the steering wheel. Attach steering lockouts before performing services near the center of the machine or transporting on a truck.


RD47322,0000379-19-10MAY22

HydraCushion Suspension Accumulators (If Equipped)



(A)

RXA0186047—UN—18NOV21

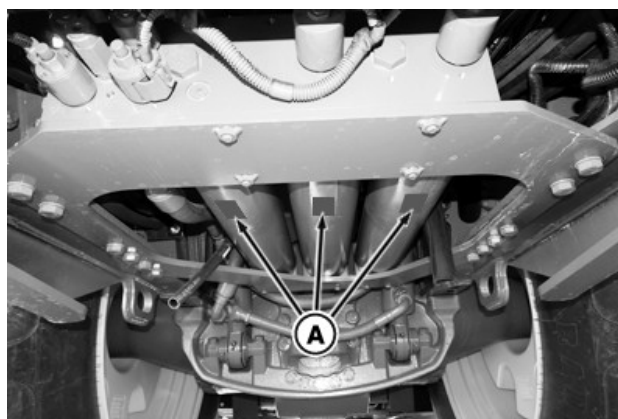

RXA0186172—UN—29NOV21


A—HydraCushion Suspension Label (hydraulic accumulators)

CAUTION: Avoid crushing and fluid injection.

Releasing pressure may cause machine movement and exposure to fluid under pressure. See your dealer for instruction on relieving pressure before servicing the system.


RD47322,000037A-19-23JUN22

Park Brake (Stored Energy)

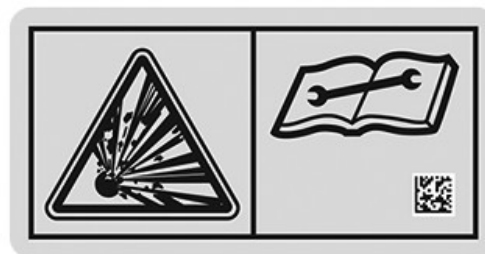

(A)

RXA0186047—UN—18NOV21

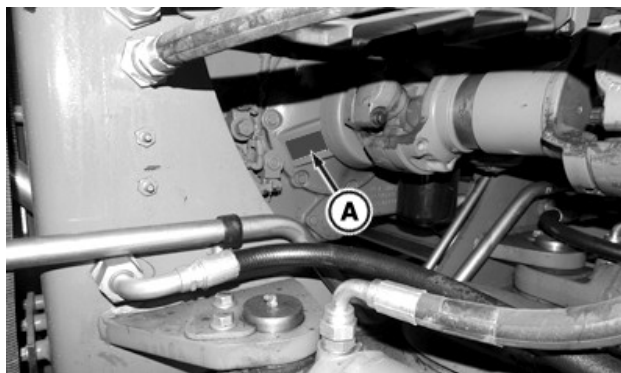

A—Park Brake Label (housing near park lock)

RXA0186177—UN—30NOV21

CAUTION: Avoid injury from sudden release of stored energy.

The park brake contains spring under load. Remove the park brake cover cap screws evenly.

RD47322,000037D-19-10JAN22

implement. When attaching to the hitch, stay clear of the area where the three-point hitch rises and do not permit anyone to be in the area.


RD47322,000037E-19-10JAN22

Rear PTO (If Equipped for China Only) [Ag]



RXA0186055—UN—18NOV21

(A)

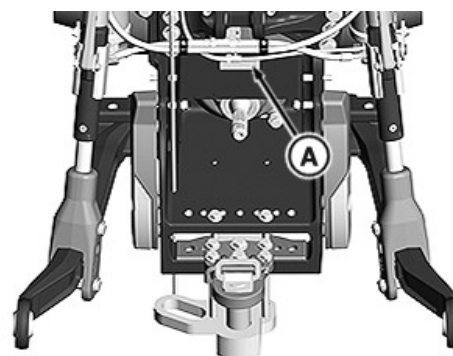

RXA0162409—UN—07MAR18

A—PTO Label (rear of tractor on PTO shield)

CAUTION: Avoid entanglement.

Keep hands, feet, and clothing away from rotating components. Shut off the engine and wait until all components have stopped turning. Keep all shields in place.


EC82310,0000694-19-10JAN22

Rear Hitch (If Equipped for China Only) [Ag]



(A)

RXA0186058—UN—18NOV21

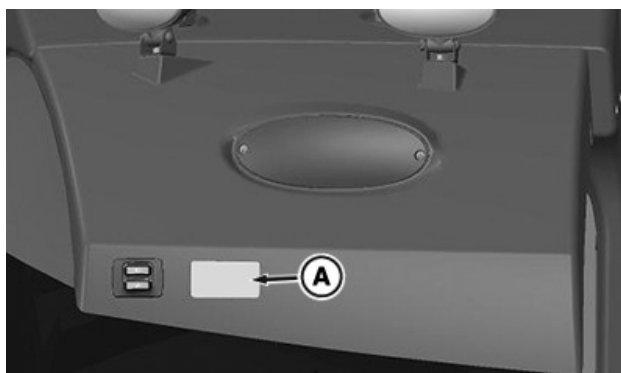

RXA0180290—UN—26OCT20

A—Left-Hand Label (left-hand rear fender)

CAUTION: Avoid crushing.


When attaching or detaching an implement, there is a risk of crushing in the area between the tractor and

Engine Cooling System (For China Only)



RXA0135618—UN—13NOV13

(A)

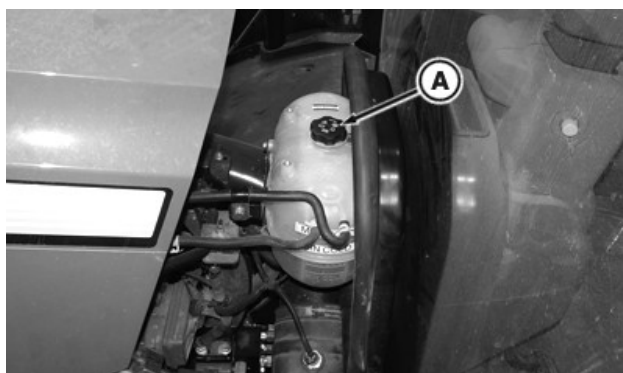

RXA0139435—UN—14FEB14

A—De-Aeration Tank Cap

CAUTION: Avoid scalding.

Coolant is under high pressure. Before removing the cap, allow sufficient time for the cooling system to cool down and for the pressure to drop.

Shut off the engine, open the hood, and wait until the cooling system has cooled down. Do not open the cap unless the hoses of the cooling system are cool enough to be touched with your bare hand. First, open the cap only far enough to allow the pressure to drop, then unscrew it completely.

RD47322,0000380-19-20JAN22

Vehicle Overview

9R Series Tractor



9R Series Tractor (Typical)

RXA0185262—UN—30AUG21

KD34109,00001CE-19-30AUG21

Engine Operation

Engine Settings—Access

Access Application through Display:

1.



Menu

RXA0167075—UN—20MAR19

Menu

2.



Machine Settings

RXA0167076—UN—20MAR19

Machine Settings tab

3.



Engine

RXA0175176—UN—17FEB20

Engine

Access Application through Navigation Bar:



Engine

RXA0168449—UN—30MAY19

Press engine button on navigation bar below display.

KD34109,00005AC-19-30JUN22

Engine Settings

The Engine application is used to access and adjust engine settings.

NOTE: Some items only display if machine is equipped with the associated option.



RXA0175172—UN—13FEB20

Engine Example

Items Accessible on the Engine Main Page:



Engine Power

RXA0175187—UN—13FEB20

Engine Power — select to display the current engine power level. See Engine Settings—Engine Power in this Operator's Manual section.

00000.0 h



Engine Hours

RXA0175162—UN—17FEB20

Engine Hours — displays the accumulated engine hours.

Max Engine Speed Items:



Max Engine Speed 1

RXA0175183—UN—17FEB20

Enable Max Engine Speed 1 — select to enable the saved maximum speed.

1400 n/min

RXA0175194—UN—18FEB20

Max Engine Speed 1 Value

Max Engine Speed 1 — select to adjust the maximum speed setting. See Engine Settings—Max Engine Speed in this Operator's Manual section.



RXA0175184—UN—17FEB20

Max Engine Speed 2

Enable Max Engine Speed 2 — select to enable the saved maximum speed.

1600 n/min

RXA0175195—UN—18FEB20

Max Engine Speed 2 Value

Max Engine Speed 2 — select to adjust the maximum speed setting. See Engine Settings—Max Engine Speed in this Operator's Manual section.



RXA0175181—UN—13FEB20

Indicator

Active Indicator — illuminates orange when a Max Engine Speed is enabled.

Standby Indicator — appears gray when a Max Engine Speed is disabled.

Rear PTO Items:

0




RXA0175189—UN—02APR20

Rear PTO Speed

Rear PTO — displays the current PTO speed.

Exhaust Filter Cleaning Items:

NOTE: Final Tier 4/Stage V engines only.



RXA0175166—UN—17FEB20

AUTO Exhaust Filter Cleaning

AUTO Exhaust Filter Cleaning — select to enable/disable an automated process to perform Exhaust Filter Cleaning during normal operation. See Engine Settings—Exhaust Filter System Overview in this Operator's Manual section.



RXA0175186—UN—18FEB20

Parked Filter Cleaning

Parked Filter Cleaning — select to start a process to perform Exhaust Filter Cleaning while the machine is

parked. See Engine Settings—Exhaust Filter System Overview in this Operator's Manual section.



RXA0175191—UN—18FEB20

Request Exhaust Filter Cleaning

Request Exhaust Filter Cleaning — select to start a more intense cleaning procedure than Parked Filter Cleaning. See Engine Settings—Exhaust Filter System Overview in this Operator's Manual section.

Decelerator Items:

50%



RXA0175169—UN—13FEB20

Decelerator

Decelerator — select to adjust how much the engine rpm decreases when the foot decelerator is used.

Engine Braking Items:



RXA0167071—UN—21MAR19

Advanced Settings

Advanced Settings — access further adjustments and less common settings.

Run Page Modules

Add modules for this application to run pages using Layout Manager. See the G5 CommandCenter Operator's Manual.

Example:



RXA0175178—UN—17FEB20

Engine Power

NOTE: Different modules may be available for your application.

Engine Power — quick access to the Engine Power module.

Shortcut Keys

Add shortcut keys for this application to the shortcut bar using Layout Manager. See the G5 CommandCenter Operator's Manual.

Example:



ON

RXA0175174—UN—17FEB20

NOTE: Different shortcut keys may be available for your application.

Engine Brake — quick access to turn the Engine Brake ON and OFF.

KD34109,00005AD-19-01MAR23

Engine Settings—Engine Power

The Engine Power page displays a graph of the current Engine Power level and the number of accumulated engine hours.

Items Accessible on Engine Power Page:



Power Level

RXA0175180—UN—17FEB20

The green fill indicates the amount of Engine Power being used. A reading does not display until 40% of the available Engine Power is being used.

00000.0 h



Engine Hours

RXA0175162—UN—17FEB20

Accumulated engine operating hours for the machine are displayed.

KD34109,00005AE-19-03SEP21

Engine Settings—Max Engine Speed

Limiting engine speed in light load situations can improve fuel economy. Max Engine Speed utilizes a constant speed governor curve, providing an instant response to varying loads. The setting can be adjusted 1100—2150 rpm. Two different speeds can be set,

enabling the operator to toggle quickly from one to the other.

Procedure to Modify:

NOTE: The engine must be running to adjust the Max Engine Speed.

1400 n/min

Max Engine Speed Value

RXA0175194—UN—18FEB20

1. Select Max Engine Speed value.



Adjust Speed

RXA0175163—UN—17FEB20

2. Select (+/++) to increase or (-/-) to decrease the setting. Use (++) and (-/-) to increase or decrease the value at a higher rate than (+) and (-). The value is shown in the display box.



Close

RXA0167129—UN—25MAR19

3. Select to close.

PTO Items:

0



Rear PTO Speed

RXA0175189—UN—02APR20

Rear PTO — displays the current PTO speed.

External Sources:

Max Engine Speed Button — enable/disable Max Engine Speeds using the button on the CommandARM. See CommandARM Controls—Left Side in CommandARM Controls section of this Operator's Manual. The last Max Engine Speed selected in the

CommandCenter is used. A box displays on the page around the Max Engine Speed that was enabled last.

Interaction with Transmission Modes:

NOTE: The transmission mode is changed on the Transmission page. For more information, see Transmission section.

- **Full AUTO** — at full throttle, the minimum engine speed is 1500 rpm with the PTO off. The transmission downshifts and the engine speeds up to the Max Engine Speed to compensate for increasing workloads. The available engine speed range is 1500 rpm to Max Engine Speed.
- **Custom** — two minimum engine speed settings are also available, ECO ON and ECO OFF. ECO ON runs the engine as low as possible for light loads that do not change quickly. ECO OFF can handle quick load changes.
- **Manual** — the operator sets the engine speed using the hand throttle. The engine speed stays constant and is limited by the Max Engine Speed.

KD34109,00005B0-19-23JUN22

Engine Settings—Exhaust Filter System Overview

Final Tier 4/Stage V engines clean and filter the exhaust. Under normal machine operation and with filter cleaning in AUTO mode, minimal interaction is required.

To avoid unnecessary buildup of diesel particulates or soot in the exhaust filter system:

- Utilize the AUTO Exhaust Filter Cleaning mode.
- Avoid unnecessary idling.
- Use proper engine oil.
- Use only ultra-low sulfur fuel.

CAUTION: When AUTO, Parked, or Requested Filter Cleaning is in progress, the exhaust temperature can be high under no load or light load conditions at certain times during the Exhaust Filter Cleaning cycle.

Servicing the machine or attachments during the Exhaust Filter Cleaning can result in serious personal injury. Avoid exposure and skin contact with hot exhaust gases and components.

During the AUTO and manual/stationary Exhaust Filter Cleaning operations, the engine runs at elevated idle and hot temperatures for an extended period. Exhaust gases and exhaust filter components reach temperatures hot enough to cause burns to people, or to ignite or melt common materials.

Never perform exhaust cleaning procedures in a closed building unless suitable exhaust is provided.

Corner post display indicators and CommandCenter prompts provide information related to the exhaust filter system activity.



NOTE: Exhaust Filter Cleaning automatically resets back to AUTO mode after every key cycle.

AUTO Exhaust Filter Cleaning — an automated process to perform Exhaust Filter Cleaning during normal operation. See Engine Settings—AUTO Exhaust Filter Cleaning in this Operator's Manual section.



Disable AUTO Exhaust Filter Cleaning — use in conditions where it can be unsafe for elevated exhaust temperatures. See Engine Settings—Disable AUTO Exhaust Filter Cleaning in this Operator's Manual section.



NOTE: The process requires about 1 hour to complete.

Parked Filter Cleaning — a process to perform Exhaust Filter Cleaning while machine is parked. See Engine Settings—Parked Filter Cleaning in this Operator's Manual section.



NOTE: The process requires about 2—3 hours to complete.

Request Exhaust Filter Cleaning — a more intense cleaning procedure than Parked Filter Cleaning. See Engine Settings—Parked Filter Cleaning in this Operator's Manual section.

Exhaust Filter Cleaning Indicator — illuminates on the corner post display when the exhaust filter system is

actively performing an Exhaust Filter Cleaning. See Corner Post Display in Corner Post Display section of this Operator's Manual.

KD34109,00005B1-19-20JUN22

Engine Settings—AUTO Exhaust Filter Cleaning

NOTE: Final Tier 4/Stage V engines only.

The Exhaust Filter Cleaning page allows you to enable/disable AUTO mode. AUTO mode automatically performs Exhaust Filter Cleaning as required.

CAUTION: When AUTO, Parked, or Requested Filter Cleaning is in progress, the exhaust temperature can be high under no load or light load conditions at certain times during the Exhaust Filter Cleaning cycle.

Servicing the machine or attachments during the Exhaust Filter Cleaning can result in serious personal injury. Avoid exposure and skin contact with hot exhaust gases and components.

During the AUTO and manual/stationary Exhaust Filter Cleaning operations, the engine runs at elevated idle and hot temperatures for an extended period. Exhaust gases and exhaust filter components reach temperatures hot enough to cause burns to people, or to ignite or melt common materials.

Never perform exhaust cleaning procedures in a closed building unless suitable exhaust is provided.

IMPORTANT: Disable AUTO Exhaust Filter Cleaning when temporarily connected to an indoor ducted exhaust system for diagnostic and repair activities, or in any elevated exhaust temperature conditions that are unsafe. See Engine Settings—Disable AUTO Exhaust Filter Cleaning in this Operator's Manual section.

Do not disable AUTO Exhaust Filter Cleaning unless absolutely necessary. Repeated disabling or ignoring prompts to perform manual or Parked Filter Cleaning procedure will cause additional engine power limitation and can eventually lead to required dealer service.

Damage to exhaust cleaning components can occur if the engine is turned off while performing Exhaust Filter Cleaning or shortly after the cleaning is complete.

Procedure to Modify When Disabled:



DISABLED

RXA0175164—UN—17FEB20

AUTO Exhaust Filter Cleaning Disabled

1. Select to open the AUTO Exhaust Filter Cleaning page.

NOTE: Exhaust Filter Cleaning automatically resets back to AUTO mode after every key cycle.



ON/OFF

RXA0167628—UN—26APR19

2. Select ON to enable AUTO Exhaust Filter Cleaning.



Close

RXA0167129—UN—25MAR19

3. Select to close.

KD34109,00005B2-19-09FEB22

Engine Settings—Disable AUTO Exhaust Filter Cleaning

NOTE: Final Tier 4/Stage V engines only.

AUTO Exhaust Filter Cleaning can be disabled in certain conditions.

IMPORTANT: Disable the AUTO Exhaust Filter Cleaning system only when necessary.

Modify When:

- Indoors or under a roof, unless a high temperature externally vented exhaust system is connected.
- There is not enough time available for the machine to complete a cleaning cycle before it is shut down.
- Operating in high crop dust or chaff conditions.
- Next to a fueling area.

Procedure to Modify:



AUTO

RXA0175166—UN—17FEB20

AUTO Exhaust Filter Cleaning

1. Select to open the AUTO Exhaust Filter Cleaning page.

NOTE: Exhaust Filter Cleaning automatically resets back to AUTO mode after every key cycle.



ON/OFF

RXA0167628—UN—26APR19

2. Select OFF to disable AUTO Exhaust Filter Cleaning.



Close

RXA0167129—UN—25MAR19

3. Select to close.



DISABLED

AUTO Exhaust Filter Cleaning Disabled

RXA0175164—UN—17FEB20

The DISABLED icon and text will display on the main page.

KD34109,00005B3-19-18FEB20

Engine Settings—Parked Filter Cleaning

NOTE: Final Tier 4/Stage V engines only.

Parked Filter Cleaning is an operator-initiated process to clean the exhaust filter.

During the process, the system controls engine speed and the machine must remain parked to complete the procedure. The time required for the Parked Filter Cleaning process is dependent upon the level of exhaust filter restriction, ambient temperatures, and the current exhaust gas temperature.

Modify When:

- The Exhaust Filter Cleaning indicator is flashing on the corner post display.
- Constantly disabling AUTO Exhaust Filter Cleaning mode.
- Idling excessively.
- Incorrect fuel quality is used.

NOTE: If Parked Filter Cleaning is ignored and the soot level gets too high, Request Filter Cleaning, a more intense cleaning procedure, will be forced.



CAUTION: When AUTO, Parked, or Requested Exhaust Filter Cleaning is in progress, the exhaust temperature can be high under no load or light load conditions at certain times during the Exhaust Filter Cleaning cycle.

Servicing the machine or attachments during the Exhaust Filter Cleaning can result in serious personal injury. Avoid exposure and skin contact with hot exhaust gases and components.

During the AUTO and manual/stationary Exhaust Filter Cleaning operations, the engine runs at elevated idle and hot temperatures for an extended period. Exhaust gases and exhaust filter components reach temperatures hot enough to cause burns to people, or to ignite or melt common materials.

Never perform exhaust cleaning procedures in a closed building unless suitable exhaust is provided.

Procedure to Modify:

1. Select appropriate procedure:



Parked Filter Cleaning

RXA0175186—UN—18FEB20

- a. Parked Filter Cleaning



Request Exhaust Filter Cleaning

RXA0175191—UN—18FEB20

- b. Request Exhaust Filter Cleaning

2. Verify that the machine is configured for Parked Filter Cleaning.

- Stop machine motion.
- Set the engine speed to low idle.
- Engage the park brake.
- Disengage the PTO (front and rear).



Check Mark

RXA0175167—UN—19FEB20

Once a condition has been met, a green check mark displays next to the condition.



Next

RXA0175185—UN—19FEB20

3. Once all conditions have been met, select Next.

NOTE: The exhaust filter system controls the engine speed to increase the exhaust temperature.



Progress Indicator

RXA0175188—UN—19FEB20

A progress indicator displays while Exhaust Filter Cleaning is running.



Complete

RXA0175168—UN—19FEB20

The system informs you when each of the two stages is complete:

- Preparation — the exhaust filter system controls engine speed to increase the exhaust temperature.
- Cleaning — diesel particulates (soot) are cleaned from the exhaust filter system. The process may exceed 40 minutes.



Close

RXA0167129—UN—25MAR19

4. Select to close.

NOTE: The system defaults to AUTO mode when cleaning is complete.

If you are not returning the machine to service immediately after the procedure, allow the engine enough time to return to normal operating temperature before turning off the engine.

Cancel Procedure:



Abort

RXA0175161—UN—19FEB20

To cancel the process, select Abort at any time during the cleaning procedure.

The process is also canceled by:

- Advancing the throttle.
- Engaging the transmission.
- Stopping the engine.
- Engaging the PTO (front or rear).

KD34109,00005B4-19-23NOV20

Engine Settings—Decelerator

The Decelerator page allows a percentage adjustment of the maximum engine rpm for the foot decelerator. When the decelerator is active, the full range of the throttle is affected.

When using Efficiency Manager and depressing the foot decelerator, transmission downshifts to the startup gear may occur in order to reduce wheel speed. To reduce the number of shifts, adjust the start gear.

Procedure to Modify:



Increase/Decrease Value

RXA0175170—UN—17FEB20

1. Select (+) to increase or (-) to decrease the percentage. The default setting is 65% and can be adjusted 50—95%. The value is shown in the display box.



Close

RXA0167129—UN—25MAR19

2. Select to close.

KD34109,00005B5-19-23JUN22

Engine Settings—Advanced

Advanced settings allow you to access further adjustments and less common settings.

Items Accessible on Advanced Settings Page:



AUTO ON/OFF

RXA0175165—UN—17FEB20

IMPORTANT: Avoid injury and/or engine damage:

- The Engine Braking system assists the service brakes in slowing the vehicle down. Never use only the engine brakes to stop the vehicle.


- Do not exceed the governed engine speed when operating the engine brakes.

Automatic Engine Braking — reduces the tractor speed using engine compression, allowing less wear on the service brakes. Use when traveling under load on level surfaces. Select ON to enable or OFF to disable.

KD34109,0000617-19-08SEP20

Required Machine Stop Warning

Machine Stop Mandate Occurs

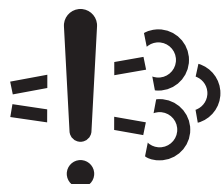

RG22491—UN—21AUG13

IMPORTANT: In some situations, machine engine power may be reduced as described. On notification, immediately place the machine in a safe state and or move it to a safe location. A mandated machine stop can only be removed by a service technician.

Engine Emissions System Malfunction Indicator illuminates when an emission-related fault occurs.



RG22492—UN—21AUG13


Warning Indicator illuminates when a condition exists which requires operator action.



RG22493—UN—21AUG13

Engine Stop Indicator illuminates when a condition exists which requires immediate operator action and service.

Emission System Fault Has Occurred

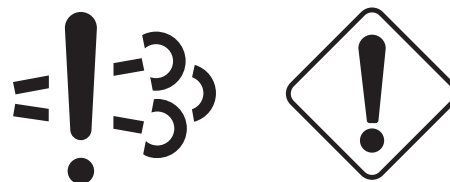

RG26361—UN—04SEP14

30 minutes remaining, Engine Emissions System Malfunction and Warning Indicators are illuminated and alarm sounds to warn operator of emissions-related fault. “Less than 30 minutes to Power Restriction” displayed on machines with display.

- Engine power is normal.
- Machine operation is normal.
- Place machine in a safe state.
- Contact service provider.



RG26972—UN—26MAR15

20 minutes remaining, Engine Emissions System Malfunction and Engine Stop Indicators are illuminated and alarm sounds to warn operator of emissions-related fault. “Less than 20 minutes to Power Restriction” displayed on machines with displays.

- Engine power and torque are reduced.
- Key Off - Key On will temporarily provide full power.
- Place machine in a safe state.
- Contact service provider.



RG26972—UN—26MAR15

2 minutes or less remaining, Engine Emissions System Malfunction and Engine Stop Indicators are illuminated and alarm sounds to warn operator of emissions-related fault which has not been corrected. “Power Restriction” displayed on machines with displays.

- Engine power is idle only.
- Place machine in a safe state.
- Contact service provider.

DX,MACHSTOPWARN,AG-19-02OCT15

Engine Fuel System and Power Rating

Fuel System

IMPORTANT: Modification or alteration of injection system or emission control devices will terminate warranty to purchaser.

Do not attempt to service injection system. Special training and special tools are required. See your John Deere dealer.


Engine Certification/Power Rating

kW (hp) rating on engine emissions certification label specifies gross engine kW (hp), which is flywheel power without fan.

TS36762,0000174-19-18NOV16

Battery Disconnect Switch

CAUTION: Avoid injury or damage to the tractor systems from inadvertent contact with electrical power. Disconnect the battery when directed.

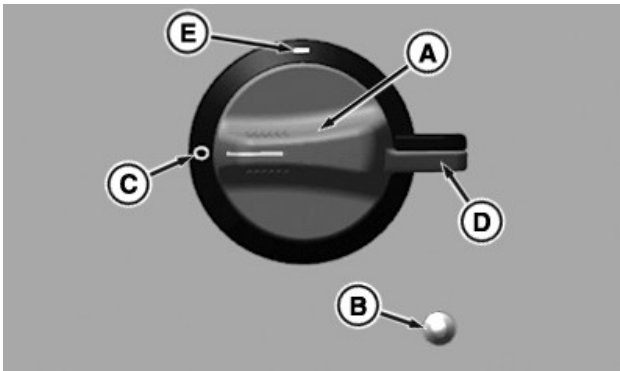

RXA0180392—UN—06NOV20

The battery disconnect switch is located near the tractor stairs.

IMPORTANT: Prevent damage to the tractor electrical system and emissions system. Never turn off the power using the battery disconnect switch (A) when the:

- Engine is running.
- Battery disconnect light (B) is illuminated.

During a long storage period, always turn the battery disconnect switch to the off position. If the battery disconnect switch is left on, the battery could lose charge.

1. Before using the battery disconnect switch, ensure that the:
 - a. Tractor is stopped.
 - b. Transmission is placed into PARK.

c. Key is switched to OFF.

2. When the battery disconnect switch indicator light has gone out, turn the battery disconnect switch off (C).
3. If desired, secure the battery disconnect switch in the off position using hole (D) provided.
4. Turn the battery disconnect switch on (E) before operating tractor.

EC82310,0000F58-19-03AUG22

Start the Engine

Before Starting the Engine

1. Move the SCV levers to the NEUTRAL position.
2. Disengage the PTO (if equipped).
3. Move the hand throttle to the low idle position.
4. Move the transmission shift lever to the PARK position.

CAUTION: Avoid possibility of serious injury or death. Be sure that the tractor and attached equipment are clear of people and other objects.

5. Depress clutch and brake pedals.
6. Sound horn.

Start the Engine



RXA0167042—UN—20MAR19

1. Turn the key switch (A) fully clockwise to the start position. The Engine Control Unit (ECU) senses the key position and sends a signal to the starter to start the engine. The key can be released.

2. If the engine fails to start after a time period determined by the ECU, based on ambient conditions, the ECU will terminate the start attempt until the cranking motor has had time to cool. Depending on conditions, the ECU can:
 - Attempt to start the engine for up to 2 minutes.
 - Prevent a second start attempt for up to 2 minutes.
3. The engine start attempt continues until any of the following conditions occur:
 - The engine starts.
 - The starting process is canceled by turning the key switch to OFF.
 - Or an engine problem is detected by the ECU.
 - The engine was unable to start after attempting for up to 2 minutes.
4. If the engine:
 - Starts—begin desired operations.
 - Does not start—attempt a second start. If the engine still does not start, go to step 5.

NOTE: If the engine fails to start, the ECU can prevent additional cranking attempts for up to 2 minutes, allowing the cranking motor sufficient time to cool.

5. Check the:
 - Quantity and quality of the fuel.
 - Electrical system.
 - Ambient temperature. In cold weather (at or below -6°C [21°F]), follow the steps listed in the appropriate Cold Weather Starting topic in Cold Weather Operation section of this Operator's Manual.
6. If all factors in step 5 are acceptable, attempt to start the engine again. If the engine fails to start after three attempts, see your John Deere dealer.

KT81203,0000136-19-03NOV20

Theft Deterrent Systems

Immobilizer Keys

Immobilizer is a system that must have a programmed key for that tractor. If the key does not have the specific electronic device, the engine starts, but only runs briefly before shutting off. Continued attempts with key not programmed for tractor will result in tractor engine turning over, but will not start.



RXA0108294—UN—24JUN10

Immobilizer Key Compared To Standard John Deere Key

NOTE: Immobilizer keys (A) can be identified because they are slightly thicker than a normal ignition key (B). Immobilizer keys are programmed for a specific tractor. There is only a limited number of keys available for any given tractor.

Immobilizer equipped tractors are delivered with two keys to the dealer. Up to three additional keys can be ordered through your John Deere dealer.

CESAR Datatag



RXA0117725—UN—09JUN11

CESAR Datatag

This theft deterrent system helps reduce tractor theft and also helps with recovery of stolen tractors.

Tractors equipped with the CESAR Datatag will have 2 large and 2 small waterproof, triangle shaped, identification plates located around the machine. These tags contain small Radio Frequency Identification (RFID) chips that can be read by a Datatag scanner to identify a machine if the serial numbers have been removed. Other secure items are used to identify tractors and/or tractor components if the machine is stolen.

TS36762,00002A7-19-14MAY19

Run the Engine

IMPORTANT: Do not start engine with throttle pushed completely forward.

Avoid excessive engine idling (more than 5 minutes). Prolonged idling may cause engine coolant temperature to fall below normal range. Prolonged idling causes crankcase oil dilution, due to incomplete fuel combustion, and permits formation of gummy deposits on valves, pistons, and piston rings. It promotes rapid accumulation of engine sludge and unburned fuel in exhaust system.

Operate engine between 1500—2100 rpm. Do not operate engine constantly below 1500 rpm during heavy draft usage or when tractor is under full PTO [Ag] load.

For maximum tractor performance:

- Ensure that tractor is correctly ballasted, see Performance Ballasting section of this Operator's Manual.
- For transmission information, see e18 PowerShift Transmission section of this Operator's Manual.

If engine stalls, start immediately to provide lubrication to critical engine parts.

Allow engine to idle for 20 seconds before turning key switch to OFF position.

IMPORTANT: Contact your John Deere dealer if any symptoms that may be early signs of engine problems are detected:

- Sudden drop in oil pressure
- Abnormal coolant temperatures
- Unusual noise or vibration
- Sudden loss of power
- Excessive fuel consumption
- Excessive oil consumption
- Fluid leaks

KT81203,00000C9-19-23JUN22

Stop the Engine

IMPORTANT: Before stopping an engine that has been operating at working load, idle engine at least 2 minutes at 1000—1200 rpm to cool hot engine parts. If an exhaust filter cleaning has just been performed, increase engine idle time to 4 minutes. If service work is going to be performed on exhaust filter, increase engine idle time to 10 minutes.

IMPORTANT: Prevent damage to tractor emissions system. Battery disconnect switch with indicator light: Tractor is equipped with an engine which uses a Selective Catalytic Reduction (SCR) system. Light is illuminated during Diesel Exhaust Fluid (DEF) purge from system. Do not turn disconnect switch off until light goes out.

Battery disconnect switch without indicator light: Engine not equipped with SCR system. No waiting period is required before turning off switch.

See Battery Disconnect Switch in Engine Operation section of this Operator's Manual.

1. Stop tractor and pull throttle back to slow idle position.
2. Depress clutch and brake pedals.
3. Put transmission in PARK position.
4. Lower all equipment to the ground.
5. Make sure SCV levers are in NEUTRAL position.
6. [Ag] Pull rear PTO (if equipped) switch rearward to disengage PTO.



CAUTION: Remove key to prevent accidents.

7. Turn key switch to OFF position and remove key.

KT81203,00000D1-19-21AUG18

Restart Engine That Has Run Out of Fuel

1. Fill fuel tank.
2. Turn key switch to RUN position to start electric fuel pump and bleed air from fuel system.

NOTE: Steps two and three may need to be repeated as necessary if fuel tanks have been removed or drained.

3. Allow pump to run for 30 seconds to 1 minute before attempting to restart engine.

Fuel pump will turn off after 1 minute. Key switch must be turned to OFF and back to RUN to turn pump back on.

TS36762,0000179-19-18NOV16

Reduce Fuel Consumption

Following are guidelines to reduce fuel consumption:

- Replace air cleaner elements and fuel, engine oil, and transmission/hydraulic filter elements at specified service intervals, see Service—Record

Charts section of this Operator's Manual or when indicated by CommandCenter display messages.

- Use recommended oils and lubricants only, see Fuel, Lubricants, and Coolant sections of this Operator's Manual.
- Adjust hitch function for most efficient operation, see TouchSet Depth Control Section of this Operator's Manual.
- Check tire for correct pressure weekly, see Wheels, Tires, and Treads Section of this Operator's Manual.
- Ballast tractor for conditions, see Performance Ballasting Section of this Operator's Manual.
- Always drive in highest possible gear with reduced engine speed. Choose a gear so engine speed drops 150-250 rpm when tractor is operating and engine is under load. See e18 PowerShift Transmission section of this Operator's Manual.

NOTE: For light work, reduce engine speed below 2000 rpm. Select a gear so that engine speed drops 200—300 rpm when operating.

Using Max Engine Speed may improve fuel economy. For more information on Max Engine Speed settings, see Engine Settings in this Operator's Manual section.

TO84419,00000B0-19-23JUN22

Battery Booster or Charger

CAUTION: Gas given off by batteries is explosive. Keep sparks and flames away from batteries. Make the last connection and first disconnection at a point away from booster batteries.

IMPORTANT: Be sure that polarity is correct before making the connections. Reversed polarity damages the electrical system or possibly cause the battery to explode.

If two or more booster batteries are used, they must be connected in parallel ensuring booster batteries are producing 12 volt charge.

Prevent damage to the tractor emissions system. Never disconnect the battery disconnect switch while the battery disconnect light is illuminated. See Battery Disconnect Switch in this Operator's Manual section.

Booster Battery



RXA0187645—UN—10AUG22

The battery jumper terminal posts are located near the tractor steps.

1. Remove the tractor battery terminal post caps.
2. Attach the red (positive) batter cable to the:
 - a. Remote positive starter terminal (A).
 - b. Positive terminal of the booster battery.
3. Attach the black (ground) battery cable to the:
 - a. Negative terminal of the booster battery.
 - b. Remote negative starter terminal (B).
4. When the tractor has started, remove the:
 - a. Negative cable from the tractor.
 - b. Negative cable from the booster battery.
 - c. Positive cable from the battery.
 - d. Positive cable from the tractor.

Battery Charger

IMPORTANT: Set battery charger at nominal 12 volt and no more than 16 volt maximum. Consult the battery charger manufacturers Operator's Manual.

1. Assure the battery charger is turned off.
2. Remove the tractor terminal post caps and attach the:
 - a. Positive (red) charger lead to the remote positive starter terminal.
 - b. Black (ground) negative charger lead to remote ground post.
3. Switch on the charger and charge battery according to charger manufacturers Operator's Manual.
4. Switch off the charger.
5. When the tractor has started, remove from the tractor the:
 - a. Negative charger lead.

b. Positive charger lead.

EC82310,0000F59-19-10AUG22

Cold Weather Operation

Cold Weather Starting—With Starting Aid

⚠ CAUTION: Starting fluid is extremely flammable. While using this product, do not smoke and make sure to extinguish all flames. Turn off all pilot lights, stoves, heaters, electrical motors, and other sources of ignition while using this product and/or if vapors are still present.

Tractors equipped with cold weather starting aid from the factory utilize an automatic starting aid injection system. System will automatically inject starting aid as needed based on fuel and engine coolant temperatures. Manually spraying starting fluid into air intake screens is not recommended or required.

If the engine fails to start:


- Check quantity and quality of fuel.
- Verify that starter fluid canister has fluid.
- Check FE14 fuse and KE14 relay.
- If engine fails to start after three attempts, consult your John Deere dealer.

To replace starting aid canister, see Change Starting Fluid Canister in this section of the Operator's Manual.

GH15097,00003E1-19-09MAR20

Change Starting Fluid Canister

⚠ CAUTION: Do not use starting fluid near fire, sparks or flames. Read caution information on container. Protect container against damage. Do not carry starting fluid cans inside cab.

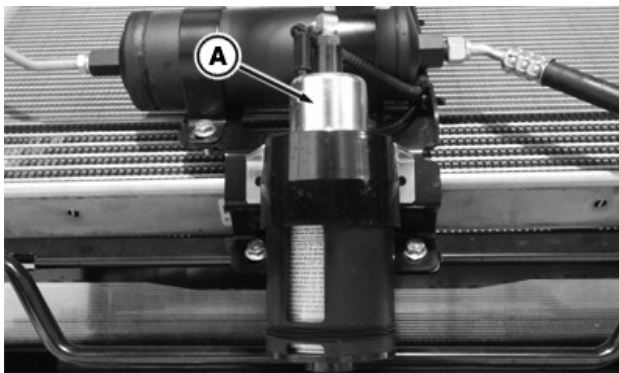

RXA0141914—UN—05JUN14

1. Raise hood to access canister (A).
2. Remove safety cap and plastic spray nozzle from new can.
3. Loosen canister and remove old can.

IMPORTANT: To avoid drawing dust into engine, always keep starting fluid can in position or clean bottom of canister and install bottom side up.

4. Install new can and tighten canister.

TO84419,000039B-19-25JUL17


Engine Coolant Heater Use

⚠ CAUTION: To avoid electrical shock or fire, use 3-wire, 14 AWG (14 gauge), heavy-duty electrical cord with 15-amp rating, suitable for outdoor use. Always plug electrical cord into 220-volt (120-volt if equipped) outlet protected by GFI (Ground Fault Interrupter).

Before connecting heater to power source, be sure that element is immersed in coolant. NEVER energize heater in air. Doing so can cause element sheath to burst causing personal injury.

IMPORTANT: Ground fault interrupter on tractor protects tractor only, not electrical wiring supplying power to tractor. Test ground fault interrupter before each use.

NOTE: Extremely cold weather may require 1—2 hours to heat engine.

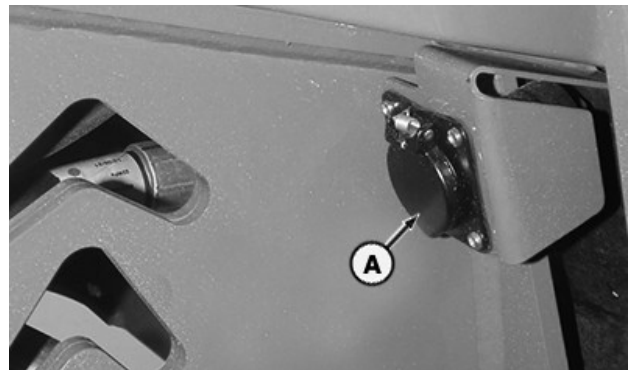

RXA0164452—UN—05SEP18

Front Right-Hand Side of Tractor

Connect engine coolant heater plug (A), located on right-hand side of engine, to a ground fault-protected 220-volt (120-volt if equipped) electrical outlet.

BH38674,0000D8D-19-03NOV22


Emissions Equipment

Aftertreatment Indicators Overview




Diesel Exhaust Fluid Indicator

RG22487—UN—21AUG13

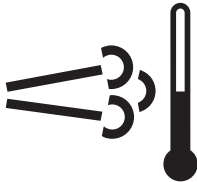


Engine Emissions Temperature Indicator

RG22488—UN—21AUG13

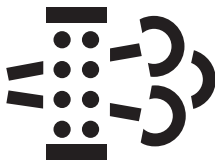


Exhaust Filter Indicator

RG22489—UN—21AUG13

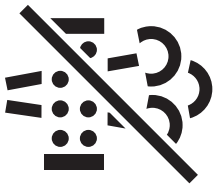

Auto Cleaning Disabled Indicator

RG22490—UN—21AUG13

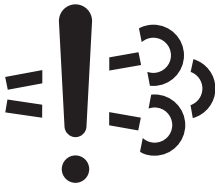

Engine Emissions System Malfunction Indicator

RG22491—UN—21AUG13



Warning Indicator

RG22492—UN—21AUG13



Engine Stop Indicator

RG22493—UN—21AUG13

IMPORTANT: The operator will be informed by the operator warning system when the emission control system does not function correctly and/or an engine malfunction is detected by the engine control unit. Ignoring the operator warning signals will lead to an emission related derate, resulting in an effective disablement of non-road mobile machinery operation.

It is essential to take prompt action to rectify any incorrect operation, use or maintenance of the emissions control system in accordance with the rectification measures indicated by the warnings referenced below.

The Diesel Exhaust Fluid (DEF) indicator illuminates when the DEF is low. Fill DEF tank.

When the DEF indicator is combined with the warning indicator or engine stop indicator engine performance is reduced by the Engine Control Unit (ECU) because the DEF is below a measurable level. Fill DEF tank.

When engine emissions temperature indicator illuminates exhaust gas temperature is high, elevated idle is active, or exhaust filter cleaning is in process. The machine can be operated as normal unless the operator determines the machine is not in a safe location for high exhaust temperatures and disables auto cleaning.

When engine emissions temperature indicator is combined with the warning indicator or engine stop indicator engine performance is reduced by the ECU because the exhaust gas temperature is higher than expected. Follow Diagnostic Trouble Code (DTC) procedure or see your authorized servicing dealer.

When the exhaust filter indicator illuminates the exhaust filter cleaning is in process, aftertreatment system has a fault, or the exhaust filter is in need of cleaning and the operator has disabled auto exhaust filter cleaning. If conditions are safe, the operator should enable the auto exhaust filter clean setting or perform manual service regeneration or follow DTC procedure.

When the exhaust filter indicator is combined with the warning indicator engine performance is reduced by the ECU because there is an aftertreatment system fault or the soot level of the exhaust filter is moderately high. If conditions are safe, the operator should enable the auto exhaust filter clean function. If conditions are not safe, the operator should move the machine to a safe location and engage the auto exhaust filter cleaning mode.

Perform manual service regeneration or follow DTC procedure.

When the exhaust filter indicator is combined with the engine stop indicator engine performance is further reduced by the ECU because there is an aftertreatment system fault or the soot level of the exhaust filter is extremely high. If this combination is present, see your authorized servicing dealer.

The auto cleaning disabled indicator illuminates when the operator has engaged the request to disable the auto exhaust filter cleaning function. This icon remains illuminated until the operator re-engages automatic exhaust filter cleaning from the diagnostic gauge. Disabling auto mode is not recommended for any situation unless it is safety-related or if the fuel tank



lacks the required fuel to complete the cleaning process.

The engine emissions system malfunction indicator illuminates when engine emissions are outside of normal operating range or engine emissions system fault. Follow DTC procedure or see your authorized servicing dealer.

When the engine emissions system malfunction indicator is combined with the warning indicator engine performance is reduced by the ECU because the engine emissions are outside of normal operating range or engine emissions system fault. Follow DTC procedure or see your authorized servicing dealer.

DX,AFTRTREAT,INDCATRS-19-12FEB18

Selective Catalytic Reduction (SCR) System Overview

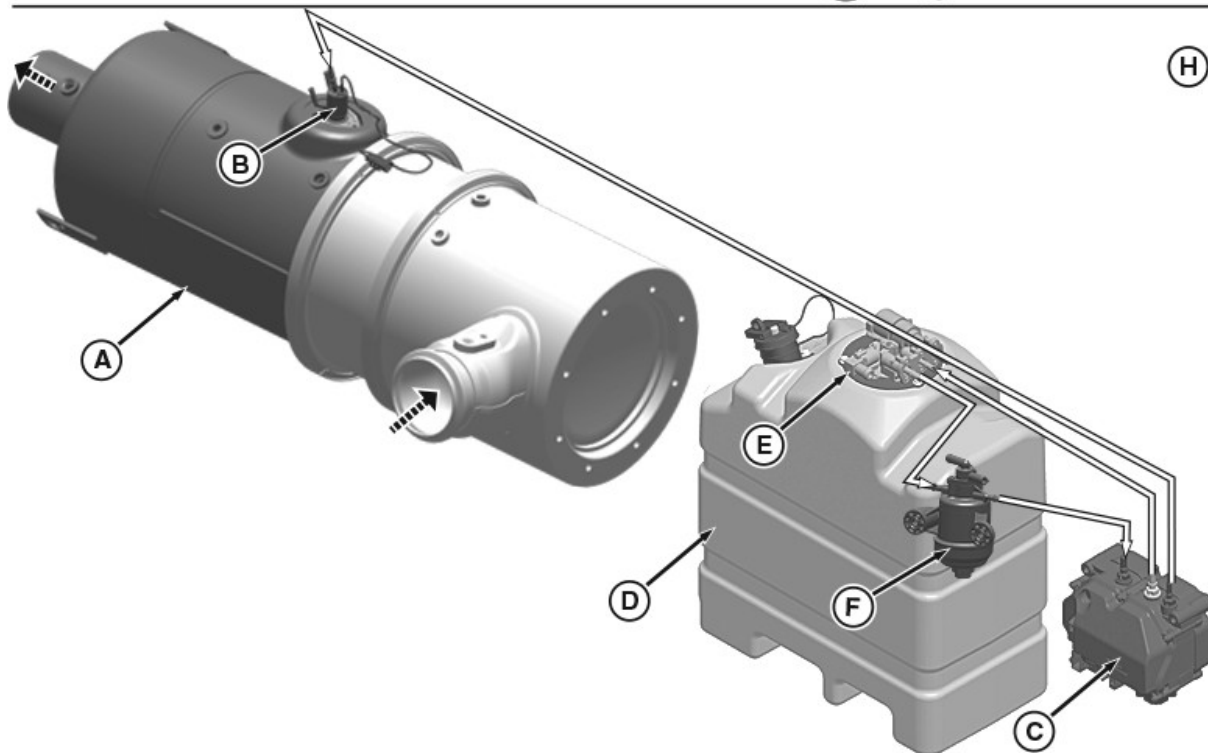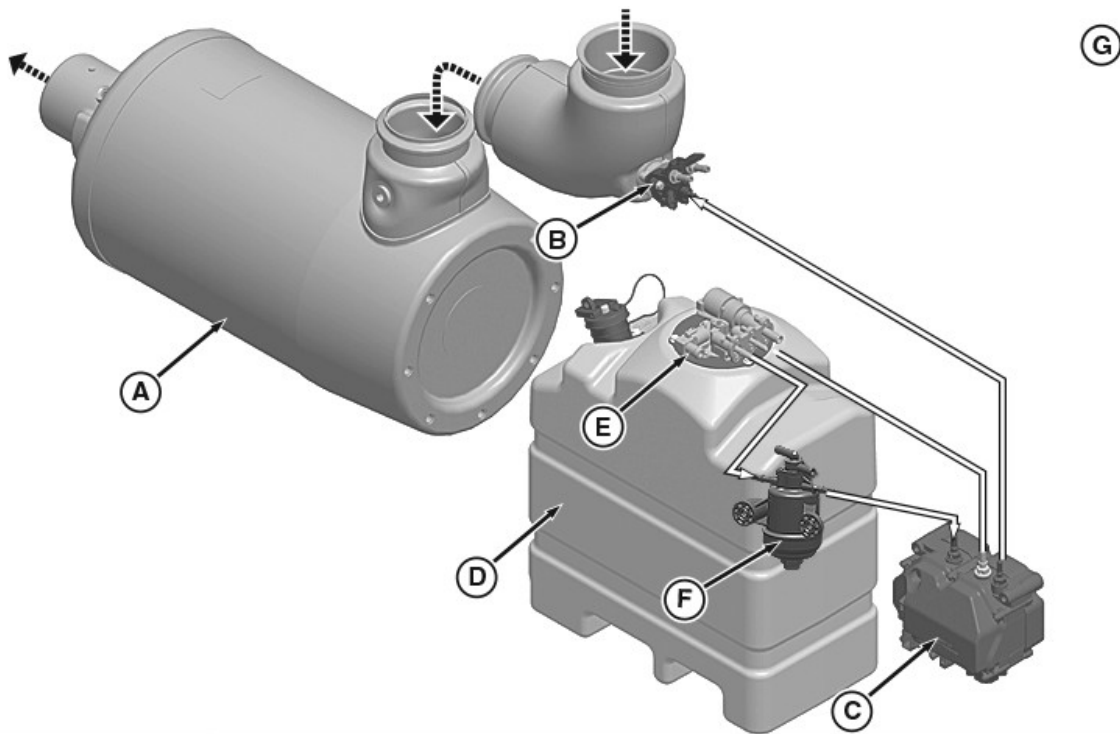

SCR System

RG22427A—UN—07JAN20

A—SCR Catalyst
B—DEF Dosing Injector
C—DEF Dosing Unit
D—DEF Tank

E—DEF Tank Header Assembly
F—Inline DEF Filter (If Equipped)
G—Modular Canning Configuration
H—Inline Canning Configuration

IMPORTANT: Do not remove battery leads for at least 4 minutes after engine stops. The SCR system automatically purges itself of Diesel Exhaust Fluid (DEF) immediately after the engine is stopped. If adequate time is not allowed for lines to be purged, residual DEF can freeze and possibly damage components of the SCR system during cold-weather exposure.

In order to comply with national and local emission requirements, this engine series contains a Selective Catalytic Reduction (SCR) system. The main components of the SCR system include the SCR catalyst (A), DEF dosing injector (B), DEF dosing unit (C), DEF tank (D), and DEF tank header assembly (E). The SCR system is effective at reducing the nitrogen oxides (NOx) emissions. NOx is a major component of smog and acid rain.

During combustion, NOx molecules are formed in the exhaust. DEF is injected into the exhaust stream before the SCR catalyst. Through a chemical reaction in the SCR, NOx is converted into nitrogen and water.

Water vapor is a normal by-product of combustion. During cold-weather operation at low exhaust temperatures, this water vapor can condense and resemble white smoke from the exhaust. This will dissipate as operating temperature increases and the water is further vaporized. This situation is considered normal.

A DEF solution begins to crystallize and freeze at -11 °C (12 °F). With climate temperatures that can range much colder than this, DEF is expected to freeze in the DEF tank. For this reason, the DEF tank contains a heating element that provides rapid thawing of DEF upon start-up. The heating element cycles to maintain fluidity during operation as needed. DEF is not dosed upon initial start-up, therefore it is not necessary to have liquid DEF at cold start-up.

If DEF quality deteriorates and it is no longer within specifications, the engine can derate. DEF should be crystal clear with a light ammonia smell. If DEF appears cloudy, has a colored tint, or has a profound ammonia smell, it is likely not within specification.

DX,SCR,OVERVIEW-19-30MAR20

Diesel Particulate Filter (DPF) Service

CAUTION: Correctly dispose of an exhaust filter that has reached the end of its useful life. The exhaust filter contains DPF ash that:

- Can be classified as a hazardous waste.
- Requires disposal in accordance with all applicable federal, state, and local laws or regulations governing hazardous waste disposal.

Used exhaust filters, including the DPF, can be exchanged at any John Deere dealer or qualified service provider.

- Always allow a qualified service provider to remove ash from the DPF.
- See your John Deere dealer or other qualified service provider for assistance.

Failure to follow approved DPF ash removal methods can:

- Violate U.S. federal, state, and local hazardous waste law.
- Damage the DPF, resulting in potential denial of the emissions warranty.

IMPORTANT: Avoid damage to the aftertreatment system. Never:

- Use incorrect or unapproved aftertreatment components.
- Interchange aftertreatment components between Interim Tier 4/Stage III B and other vehicles equipped with other aftertreatment systems.

The exhaust filter includes a DPF. The DPF is designed to:

- Retain residual ash, which is a noncombustible result of additives used in crankcase lubrication oils and the fuel.
- Provide many hours of maintenance-free operation. However, the DPF requires professional service to remove the accumulated ash at some point. The exact number of hours of operation before professional service is required depends on:
 - The engine power category, duty cycle, operating conditions, fuel quality, and ash content of the engine oil.
 - Adhering to the recommended oil and fuel specifications to maximize the hours of operation.

The engine owner is responsible for performing the required maintenance described in this Operator's Manual. During normal equipment operation:

- DPF maintenance requirements depend on the rate at which ash accumulates in the DPF.
- As ash levels rise in the DPF, the capacity for soot storage is reduced and the backpressure of the exhaust system rises more frequently.
- The dash lamp indicator or diagnostic gauge indicates when the DPF needs servicing.

EC82310,0000FOA-19-17JUN20

Front Console

Front Console

NOTE: See transmission section for left-hand reverser.




RXA0177210—UN—14APR20

Front Console Example

KD34109,00005E2-19-13APR20


Adjust Steering Wheel and Column

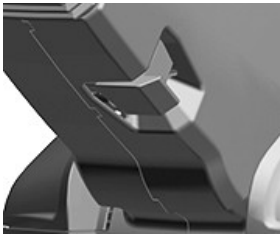

RXA0167453—UN—12APR19

Tilt/Telescope Stop Lever

Tilt/Telescope Stop Lever — pull lever away from steering column to unlock adjustments. While unlocked, extend/retract and tilt of steering wheel can be adjusted. Push lever back toward steering column to lock into desired position.

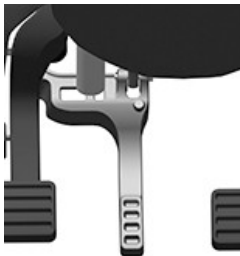

RXA0167454—UN—12APR19

Memory Tilt Pedal

Memory Tilt Pedal — push pedal to tilt steering column up away from operator or down closer to operator. Release pedal to lock into position.

KD34109,00004CB-19-29MAY19

Operate Horn



RXA0167455—UN—12APR19

Horn Button

Horn — push button at end of left-hand lever on steering column to sound horn.

KD34109,00004CC-19-29MAY19

Operate Wipers and Washers

Wiper and washer controls are on right-hand lever on steering column.

NOTE: Some items are only available if machine is equipped with the associated option.



RXA0167456—UN—12APR19

Front Wiper Speed

Front Wiper Speed — turn knob at the end of wiper/washer lever. The higher the setting, the faster the wiper operates. Bottom setting is off (circle shown). Arrow indicates current setting.



RXA0167457—UN—12APR19

Front Washer Button

Front Wiper Washer — push and hold button at end of wiper/washer lever. Let go of button to stop washer.



RXA0167458—UN—12APR19

Select Right-Hand/Rear Wiper Lever

Select Right-Hand/Rear Wiper — to select active wiper/wipers, move lever to one of the following positions:

- Left for right-hand wiper
- Center for right-hand and rear wipers
- Right for rear wiper



RXA0167459—UN—12APR19

Right-Hand/Rear Wiper Speed/Washer Lever

Right-Hand/Rear Wiper Speed/Washer — move lever up from off position (circle shown) to operate active wiper/wipers. The higher the setting, the faster the wiper operates. Push and hold lever down to operate washer. Release lever to stop washer.

KD34109,00004CD-19-26AUG19


Key Switch



RXA0168011—UN—17MAY19

Key Switch

Key switch is on right-hand side of steering column and has three positions:

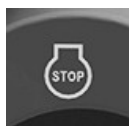

RXA0168012—UN—17MAY19

STOP

STOP — turns off all engine and accessory functions.



RXA0168013—UN—17MAY19

Run

Run — allows all accessories functions and engine to run once it has been started.



RXA0168014—UN—17MAY19

Start

Start — starts engine and returns to run position.

KD34109,00004CE-19-30MAY19

Operate Turn Signals



RXA0168015—UN—17MAY19

Turn Signal Lever

The turn signal control is the left-hand lever on the steering column.

Lane Change Turn Signal — move the lever one position (up for right-hand signal, down for left-hand signal) to activate. The signal automatically turns off after three flashes.

Self-Canceling Turn Signal — move the lever two positions (up for right-hand signal, down for left-hand signal) to activate. The signal turns off when the front wheels return to the neutral position or by moving the lever one position in the same direction. If an implement is connected, there is a delay in the signal turning off after a turn.

KD34109,00004CF-19-08JUN22

Pedals

NOTE: Some items are only available if machine is equipped with the associated option.



RXA0177205—UN—14APR20

Brake Pedal

Brake Pedal — use to slow and stop machine. For more information on brakes, see Brakes section of this Operator's Manual.



Clutch Pedal

RXA0177207—UN—14APR20

Clutch Pedal — use to disengage clutch.



Speed Control Pedal

RXA0177203—UN—13APR20

Speed Control Pedal:

NOTE: The tractor can be equipped with one of the speed control pedals or no pedal.

- **Accelerator Function (Orange)** — use to control engine or ground speed depending on transmission mode.
- **Decelerator Function (Gray)** — use to lower the engine rpm based on the decelerator setting. For setting adjustments, see Engine settings in Engine Operation section of this Operator's Manual.

KD34109,00005E0-19-11AUG21

Operate Lights



Lights Lever

RXA0168015—UN—17MAY19

High beams and lighting presets are controlled using left-hand lever on steering column. For additional lighting controls, including field and road lights buttons, see CommandARM Climate, Radio, and Lighting Controls in CommandARM section of this Operator's Manual.

- **Low/High Beam Position** — with road lights enabled, push lever toward window and release to

toggle between low and high beam modes. Indicator on corner post display lights when in high beam mode.

- **Momentary High Beam (Flash-to-Pass)** — with road lights enabled, pull lever away from window and hold to momentarily activate high beam mode. Release to return to low beam mode. Setting also momentarily activates high beam lights in park or off modes.
- **Worklights Presets** — with worklights enabled, pull lever away from window or push lever toward window to change active preset.



Convenience Lights Button

RXA0168021—UN—17MAY19

Convenience Lights (If Equipped) — press convenience lights button to turn on, press again to turn off. For convenience light locations, see Light Identification in Lights section of this Operator's Manual.

Button location:

- 7R, 8RW, and 8RX: Left-hand side of machine, between steps.
- 8RT and 9RT: Left-hand side of machine, next to battery disconnect.
- 9RW and 9RX: Left-hand side of machine, next to steps.



Trailing Lights Switch

RXA0173051—UN—09DEC19

Trailing Lights (If Equipped) — press top of switch to turn on or bottom of switch to turn off trailing lights. Switch is located near the radio. For trailing lights location, see Trailing Lights in Lights section of this Operator's Manual.

KD34109,00004D1-19-30AUG22

Differential Lock Switch



RXA0177202—UN—13APR20

Differential Lock Floor Switch

Differential Lock Floor Switch — to enable manual differential lock mode:

- 9RW Tractors: Press and release the floor switch. To disable, press the brake or the differential lock button on the CommandARM. For button location, see CommandARM Controls—Left Side in CommandARM Controls section of this Operator's Manual.
- 9RX Tractors: Press and hold the floor switch. To disable, release the floor switch.

For more information on differential lock, see Differential Lock in Drivetrain section of this Operator's Manual.

KD34109,00005E1-19-23JUN22

Corner Post Display

Corner Post Display




RXA0188009—UN—13SEP22
Corner Post Display

NOTE: Some items only display if machine is equipped with the associated option.



RXA0188030—UN—15SEP22
Clock (no time shown)

Clock — displays the current time.



RXA0188037—UN—15SEP22
Engine Hours (no hours shown)

Engine Hours — displays the total engine hours.



RXA0188039—UN—15SEP22
Fuel Hours (no hours shown)

Fuel Hours — displays the estimated remaining operating hours based on fuel in the tank and other operation settings.



RXA0167737—UN—06MAY19
Left-Hand Turn Indicator

Left-Hand Turn Indicator — flashes when the left turn signal or hazard lights are on.



RXA0167738—UN—06MAY19
Right-Hand Turn Indicator

Right-Hand Turn Indicator — flashes when the right turn signal or hazard lights are on.



RXA0167739—UN—06MAY19
High Beam Indicator

High Beam Indicator — illuminates when high beam lights are on.



RXA0188046—UN—15SEP22
Parking Lights Indicator

Parking Lights Indicator — illuminates when parking lights are on.



RXA0188052—UN—15SEP22
Worklights Indicator

Worklights Indicator — illuminates when worklights are on.



RXA0167740—UN—06MAY19
Trailer Turn Indicator Example

Trailer Turn Indicator — the trailer symbol and 1 flash when the turn signal or hazard lights are on and one trailer is attached. The symbol, 1, and 2 flash when the turn signal or hazard lights are on and two trailers are attached.



RXA0167741—UN—06MAY19
Engine Preheat Indicator

Engine Preheat Indicator — illuminates when the key is in the run position. The indicator turns off when the engine can be started.



RXA0188049—UN—15SEP22
Tachometer (no signal)

Tachometer — displays the engine speed in revolutions per minute (rpm). If 0000 displays, no speed signal is being received.



IPM Indicator

RXA0167743—UN—06MAY19

Intelligent Power Management (IPM) Indicator — illuminates when IPM is active.



Max Engine Speed Indicator and Number Example

RXA0188043—UN—15SEP22

Maximum Engine Speed Indicator and Number — the indicator illuminates when Max Engine Speed one or two is active. The number 1 or 2 displays depending on which Max Engine or Set Speed is active. 0 displays if Max Engine and Set Speeds are not active.



Manual Engine Speed Indicator

RXA0167745—UN—06MAY19

Manual Engine Speed Indicator — illuminates when engine speed is in manual mode on machines equipped with CommandPRO joystick.



Minimum Engine Speed Indicator

RXA0188045—UN—15SEP22

Minimum Engine Speed Indicator — illuminates when Minimum Engine Speed is active.



Exhaust Filter Cleaning Indicator

RXA0167747—UN—06MAY19

Exhaust Filter Cleaning Indicator — illuminates when Exhaust Filter Cleaning is active.



Ground Speed (no signal)

RXA0188042—UN—15SEP22

Ground Speed — displays the travel speed value in either miles per hour (mph) or kilometers per hour (km/h), depending on operator-selected units (U.S. or metric). If 00.0 displays, no speed signal is being received. When the engine preheat indicator (6.8 L and 18 L engines) is activated, the engine start time displays.



Ground Set Speed Value and Number (no signal)

RXA0188041—UN—15SEP22

Ground Set Speed Value and Number — displays the speed value (in orange) for the active Set Speed. Displays the Maximum Set Speed if the CommandPRO joystick is equipped and a Set Speed is not active. The number 1 or 2 displays depending on which Set Speed is active. 00.0 displays if no Set Speed signal is being received.



Ground Set Speed Indicator

RXA0188032—UN—15SEP22


Ground Set Speed Indicator — illuminates when ground Set Speed one or two is active.



Maximum Set Speed Indicator

RXA0188031—UN—15SEP22

Maximum Set Speed Indicator — illuminates when the Maximum Set Speed is active.

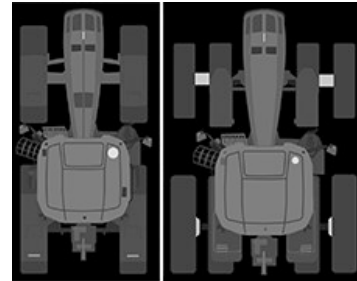

Tractor Examples

RXA0188907—UN—10APR23

Tractor — always displays as a reference point to other indicators (example: the front PTO indicator displays in front of the tractor).



Forward Indicator

RXA0188038—UN—15SEP22

Forward Indicator — illuminates when the tractor is in forward.



Reverse Indicator

RXA0188048—UN—15SEP22

Reverse Indicator — illuminates when the tractor is in reverse.



Direction and Gear (not selected)

RXA0188036—UN—15SEP22

Direction and Gear — the value on the left displays the selected direction of travel. The values on the right display the selected gear:

- Single gear (top left)
- Double gear (top right)
- Triple with range (bottom)



AutoTrac Indicator

RXA0167757—UN—06MAY19

AutoTrac Indicator — illuminates when AutoTrac is active.



Automatic Shifting Indicator

RXA0167758—UN—06MAY19

Automatic Shifting Indicator — illuminates when AUTO shift is on.



Inching Mode Indicator

RXA0167759—UN—06MAY19

Inching Mode Indicator — illuminates when the Set Speed is reduced below 2 km/h (1 mph) or the higher Set Speed is limited to a factor of 2.5 to avoid big speed increases.



Speed Control Pedal Mode Indicator

RXA0167760—UN—06MAY19

Speed Control Pedal Mode Indicator — illuminates when Pedal Mode is active.



iTEC Indicator

RXA0167761—UN—30MAY19

iTEC Indicator — illuminates when iTEC is enabled.



Tractor Automation Indicator

RXA0167762—UN—06MAY19

Tractor Automation Indicator — illuminates when some tractor automation is active.



Joystick Indicator

RXA0167763—UN—06MAY19

Joystick Indicator — illuminates when the joystick is active.



AutoClutch Disabled Indicator

RXA0188029—UN—15SEP22

AutoClutch Disabled Indicator — illuminates when AutoClutch is disabled.



Differential Lock Indicator

RXA0167764—UN—06MAY19

Differential Lock Indicator — illuminates when differential lock is active.



MFWD Indicator

RXA0167765—UN—06MAY19

Mechanical Front-Wheel Drive (MFWD) Indicator — illuminates when MFWD is active.



PTO Indicators Example

RXA0188047—UN—15SEP22

PTO Indicators — the PTO symbol illuminates when the front and/or rear PTO is active. The rated PTO value also illuminates next to the PTO symbol.



RXA0188051—UN—15SEP22

Trailer Air Brake Pressure Gauge Example

Trailer Air Brake Pressure Gauge — displays the percent of air pressure for the trailer air brake. The red zone indicates brake pressures from no pressure (0%) to low pressure (66%). The green zone indicates brake pressures from just above low pressure (66.4%) to full pressure (100%). When the air pressure is low, the red zone flashes.



RXA0188033—UN—15SEP22

Coolant Temperature Gauge Example

Coolant Temperature Gauge — displays the engine coolant temperature between 40—120°C (104—248°F). The indicator remains at the bottom until the coolant temperature is above 40°C (104°F). The indicator is at the top when the temperature is 120°C (248°F) and above. When the temperature reaches the red zone, the red zone and icon flash.



RXA0188040—UN—15SEP22

Fuel Level Gauge Example

Fuel Level Gauge — displays the fuel level in the tank. When the fuel tank is full, the entire gauge is illuminated green. When the fuel level is low, an alarm signal sounds once.



RXA0188034—UN—15SEP22

DEF Level Gauge Example

NOTE: Diesel exhaust fluid (DEF):

- Is only used on Final Tier 4/Stage V engine equipped tractors and will not display on machines equipped with other engines.
- Is not used on 18 L engine equipped tractors.

Diesel Exhaust Fluid (DEF) Level Gauge — displays the DEF level in the tank. When the DEF tank is full, the entire gauge is illuminated green. When the DEF level is low, an alarm signal sounds once. The DEF tank should be filled whenever the fuel tank is filled.

Alert Indicators:

Alert indicators are accompanied by an informative message, diagnostic trouble code, and/or fault description shown on the CommandCenter. For more information on CommandCenter alerts, see STOP, Service, and Information Alerts in Troubleshooting—Diagnostic Trouble Codes (DTC) section of this Operator's Manual.



RXA0167772—UN—06MAY19

STOP Alert Indicator

STOP Alert Indicator — flashes and an alarm pattern sounds continuously, indicating a serious malfunction requiring immediate attention.



RXA0167773—UN—06MAY19

Service Alert Indicator

Service Alert Indicator — flashes and an alarm pattern sounds five times, indicating a performance or operational problem has been detected and must be resolved as soon as possible.



RXA0167774—UN—06MAY19

Information Alert Indicator

- Flashes when the park lock cannot engage.

kd34109,1663074638253-19-11APR23

Information Alert Indicator — illuminates continuously, and when GSix is on the bus, an alarm pattern sounds for 2 seconds, indicating a possible fault condition.

Warning Indicators:

When a warning occurs:

- Park the tractor on level ground and prevent the tractor from rolling away.
- A diagnostic trouble code (DTC) will display on the CommandCenter. Follow the instructions to fix the fault.
- If the fault cannot be fixed, see your John Deere dealer.



RXA0167775—UN—06MAY19

Steering Warning Indicator

Steering Warning Indicator — illuminates when a serious fault has been detected in the steering system.



RXA0167776—UN—06MAY19

Yellow Brake Warning Indicator

Yellow Brake Warning Indicator — illuminates when an electrical fault has been detected that affects the ability to detect additional faults.



RXA0167777—UN—06MAY19

Red Brake Warning Indicator

Red Brake Warning Indicator — indicates the following:

NOTE: The brake warning indicator (red) illuminates while the trailer air brakes reach operating pressure. The indicator turns off once the operating pressure is reached.

- Illuminates when a serious fault has been detected that affects brake system performance. Stop the tractor immediately.

CommandARM Controls

CommandARM



RXA0188010—UN—13SEP22
CommandARM Example

kd34109,1663074711166-19-13SEP22



RXA0168025—UN—17MAY19
Hitch Depth Adjust Dial

NOTE: Dial will not raise hitch above upper limit.

Hitch Depth Adjust Dial — use to raise or lower hitch.



Set Button

RXA0168026—UN—17MAY19

Set Button — press to store a set point.



Lock Button

RXA0168027—UN—17MAY19

Lock Button — press to lock hitch. Press again to unlock.



Resume Button

RXA0168028—UN—17MAY19

Resume Button — press to move hitch to set point position.



Upper Limit Hitch Dial

RXA0168029—UN—17MAY19

Upper Limit Hitch Dial — use to adjust Upper Limit setting. A drop-down will display on CommandCenter to view adjustment.

CommandARM Hitch Controls [Ag]

NOTE: Some items are only available if machine is equipped with the associated option.

Front Hitch Items:



Front Hitch Lever

RXA0168023—UN—17MAY19

NOTE: Lever will not raise hitch above upper limit.

Front Hitch Lever — allows adjustment of front hitch position. See Hitch Control Lever in Rear Hitch section of this Operator's Manual.

Rear Hitch Items:



Rear Hitch Lever

RXA0168024—UN—17MAY19

NOTE: Lever will not raise hitch above upper limit.

Rear Hitch Lever — allows adjustment of rear hitch position. See Hitch Control Lever in Rear Hitch section of this Operator's Manual.



RXA0168030—UN—17MAY19

Drop Rate Hitch Dial

Drop Rate Hitch Dial — use to adjust Drop Rate setting. A drop-down will display on CommandCenter to view adjustment.



RXA0168031—UN—17MAY19

Load Depth Hitch Dial

Load Depth Hitch Dial — use to adjust Load Depth setting. A drop-down will display on CommandCenter to view adjustment.

KD34109,00005E4-19-20JUN22

CommandARM SCV Control Levers

NOTE: SCV control levers can be reconfigured to control tractor functions and implements. See Controls Setup in CommandCenter section of this Operator's Manual.



RXA0168032—UN—17MAY19

SCV I Lever

SCV Control Levers allow you to adjust SCV flow. Number of levers varies by machine. See SCV Control Lever Adjustments in Selective Control Valves section of this Operator's Manual.

KD34109,00004E1-19-15JUN22

CommandARM PTO Control Levers [Ag]

NOTE: Some items are only available if machine is equipped with the associated option.



RXA0168033—UN—17MAY19

Front PTO Lever

Front PTO Lever — engage/disengage front PTO. See Operate PTOs in PTO—General Information section of this Operator's Manual.



RXA0168034—UN—17MAY19

Rear PTO Lever

Rear PTO Lever — engage/disengage rear PTO. See Operate PTOs in PTO—General Information section of this Operator's Manual.

KD34109,00005E5-19-15JUN22

CommandARM Climate, Radio, and Lighting Controls



RXA0168035—UN—17MAY19

Volume

Volume — press (+) to increase or (-) to decrease volume.



RXA0168036—UN—17MAY19

Previous/Next

Previous/Next — press top arrow for next track/station or bottom arrow for previous track/station.



RXA0168037—UN—28JUN19

Mute

Mute — press to silence speaker volume, press again to unmute. Does not mute microphone during an active call. Microphone can only be muted from phone or radio faceplate.



PTT/Accept Call

RXA0178830—UN—22JUL20

NOTE: If equipped with non-touch screen radio, button only accepts incoming calls.

Push-To-Talk (PTT)/Accept Call — allows operator to perform various functions depending on radio state and length of button press. If equipped with the touch screen radio, see the global radio Operator's Manual for more information on PTT.



End Call

RXA0178829—UN—22JUL20

End Call — press to end call in progress or active voice recognition (VR) session.



Air Flow Mode

RXA0167638—UN—26APR19

Air Flow Mode — press to select mode of air flow. Each press moves to next mode.



Temperature

RXA0167640—UN—26APR19

Temperature — press (+) to increase or (-) to decrease temperature.



Fan Speed

RXA0167644—UN—26APR19

Fan Speed — press (+) to increase or (-) to decrease fan speed.



Hazard Lights

RXA0168040—UN—17MAY19

Hazard Lights — press to turn on hazard lights, press again to turn off. Indicator light is on when active.



Parking Lights

RXA0168041—UN—17MAY19

Parking Lights — press to turn on parking lights, press again to turn off. Indicator light is on when active.



Road Lights

RXA0168042—UN—17MAY19

Road Lights — press to turn road lights on. Press again to turn off. Indicator light is on when active. If equipped, hood/belt line lights page automatically displays when selected. Page disappears after 10 seconds of inaction. See Lights Settings in Lights section of this Operator's Manual.



Worklights

RXA0168043—UN—17MAY19

Worklights — press to turn on worklights, press again to turn off. Indicator light is on when active. Active preset page will automatically display. Page disappears after 10 seconds of inaction. See Lights Settings in Lights section of this Operator's Manual.



Beacon Lights

RXA0168044—UN—17MAY19

Beacon Lights — press to turn on beacon lights (if equipped). Press again to turn off. Indicator light is on when active.

KD34109,00004E3-19-30AUG22

CommandARM Controls—Left Side

NOTE: Some items are only available if machine is equipped with the associated option.



RXA0171324—UN—10OCT19

Speed/Shift Control Example

Speed/Shift Control — use to operate transmission. For more information on the control equipped on your machine, see your Transmission section of this Operator's Manual.



RXA0168423—UN—30MAY19

AutoTrac Resume Button (AUTO)

AutoTrac Resume Button (AUTO) — press to enable Tractor-Implement Automation (TIA) after preparing implement as indicated in implement Operator's Manual.



RXA0168424—UN—30MAY19

iTEC Buttons

1—4 Buttons — press to enable assigned function. For assignment information, see Controls Setup in CommandCenter section of this Operator's Manual.



RXA0168425—UN—30MAY19

MFWD Button

MFWD Button — press to enable manual mechanical

front-wheel drive (MFWD) mode. See Mechanical Front-Wheel Drive (MFWD) in Drivetrain section of this Operator's Manual.



RXA0168426—UN—30MAY19

AUTO MFWD Button

AUTO MFWD Button — press to enable AUTO mechanical front-wheel drive (MFWD) mode. See Mechanical Front-Wheel Drive (MFWD) in Drivetrain section of this Operator's Manual.



RXA0168427—UN—30MAY19

Differential Lock Button

Differential Lock Button — to enable manual differential lock mode:

- 7R, 8RW, 8RX, and 9RW Tractors: Press and release the button. To disable, press the button again or press the brake pedal/pedals.
- 9RX Tractors: Press and hold the button. To disable, release the button.

For more information on differential lock, see Differential Lock in Drivetrain section of this Operator's Manual.



RXA0168428—UN—30MAY19

AUTO Differential Lock Button

AUTO Differential Lock Button — press to enable AUTO differential lock mode. See Differential Lock in Drivetrain section of this Operator's Manual.



RXA0168429—UN—30MAY19

SCV Lock Button

SCV Lock Button — press to lock out SCV levers. Indicator on button illuminates when levers are locked. Press again to unlock.



ISB Button

RXA0168430—UN—30MAY19

CAUTION: Avoid injury. Verify button function in a safe and open area that is clear of bystanders.

ISOBUS (ISB) Button — press to signal ISOBUS to stop operations started at implement. Verify that implement is compatible with ISB button in implement Operator's Manual.



Hand Throttle

RXA0168431—UN—30MAY19

NOTE: Hand throttle commands engine speed only, not wheel speed.

Hand Throttle — use to increase or decrease engine speed.



Maximum Engine Speed Button

RXA0168432—UN—30MAY19

Maximum Engine Speed Button — press to enable maximum engine speed setting. Press again to disable. Indicator on button illuminates when enabled. See Engine Settings—Max Engine Speed in Engine Operation section of this Operator's Manual.



ECO Button

RXA0168433—UN—30MAY19

ECO Button — press to enable ECO Performance. ECO is only available in Custom Transmission mode. Press again to disable. Indicator on button illuminates when enabled. For ECO setting (if equipped)

information, see your Transmission section of this Operator's Manual.



Speed Control Pedal Lock Button

RXA0168434—UN—30MAY19

NOTE: The speed control pedal will not lock if the button is held for more than 1 second. If the speed control pedal decelerator function is equipped, the pedal lock/unlock button does not function.

Speed Control Pedal Lock/Unlock Button — press to lock speed control pedal to maintain commanded speed. Indicator on button illuminates when locked. Commanded speed will discontinue if button is pressed again, pedal is depressed after locking, brake is depressed, or machine is placed in PARK.



Engine Set Speed 1 Button

RXA0168435—UN—30MAY19

NOTE: Machines equipped with CommandPRO joystick only.

Engine Set Speed 1 Button — press to enable engine set speed 1 setting. Press again to disable. Indicator on button illuminates when enabled. See Engine Settings—Engine Set Speed in Engine Operation section of this Operator's Manual.



Engine Set Speed 2 Button

RXA0168436—UN—30MAY19

NOTE: Machines equipped with CommandPRO joystick only.

Engine Set Speed 2 Button — press to enable engine set speed 2 setting. Press again to disable. Indicator on button illuminates when enabled. See Engine Settings—Engine Set Speed in Engine Operation section of this Operator's Manual.



Engine Manual Mode Button

RXA0168437—UN—30MAY19

NOTE: Machines equipped with CommandPRO joystick only.

Engine Manual Mode Button — press to enable manual engine mode. Engine speed is determined by hand throttle. Press again to disable. Indicator on button illuminates when enabled.

KD34109,00004E4-19-14JUL22

CommandARM Secondary Brake Lever



RXA0169485—UN—02JUL19

Secondary Brake Lever

NOTE: Only applies brakes to rear axle.

Pull lever (if equipped) back and hold to engage secondary brake. To release secondary brake, release lever.

KD34109,00004FE-19-17JUN22

CommandARM Navigation Bar



RXA0171956—UN—12NOV19

Navigation Bar Example



RXA0168445—UN—30MAY19

Adjustment Dial

Adjustment Dial — turn clockwise to increase or counterclockwise to decrease selected input field. Button in center of adjustment wheel is used to close CommandCenter pages.



Run Page Scroll

RXA0168446—UN—30MAY19

Run Page Scroll — press to scroll through custom run pages.



SCV

RXA0168447—UN—30MAY19

SCV — press to open SCV application.



Rear Hitch

RXA0168448—UN—30MAY19

NOTE: Ag machines only.

Rear Hitch — press to open Rear Hitch application.



Engine

RXA0168449—UN—30MAY19

Engine — press to open Engine application.



Transmission

RXA0168450—UN—30MAY19

Transmission — press to open Transmission application.



PTO

RXA0168451—UN—30MAY19

NOTE: Ag machines only.

PTO — press to open PTO application.



iTEC

RXA0168452—UN—30MAY19

iTEC — press to open iTEC application.



Lights

RXA0168455—UN—05JUN19

Lights — press to open Lights application.



HVAC

RXA0168456—UN—30MAY19


HVAC — press to open HVAC application.



Controls Setup

RXA0168457—UN—30MAY19

Controls Setup — press to open Controls Setup application.



AutoLoad

RXA0168458—UN—30MAY19

NOTE: *Scraper machines only.*

AutoLoad — press to open AutoLoad application.


KD34109,00004E6-19-20JUN22



RXA0167305—UN—02APR19

Height Only Adjustment

Adjustment Knob (Height Only) — turn adjustment knob counterclockwise to loosen. Move CommandARM to desired position and tighten by turning knob clockwise.

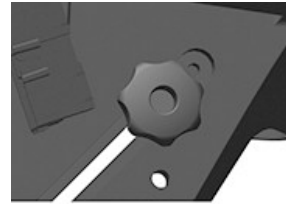

RXA0167306—UN—02APR19

Height and Tilt Adjustment

Adjustment Knob (Height and Tilt) — turn adjustment knob counterclockwise to loosen. Move CommandARM to desired position and tighten by turning knob clockwise. If adjusting tilt but not height, only this knob is needed.

TS36762,000023C-19-17JUN22

Adjust CommandARM Position



RXA0167304—UN—02APR19

CommandARM Adjustment

NOTE: *Both adjustment knobs must be loosened to adjust height.*

CommandCenter

Use Electronic Display Properly

Electronic displays are secondary devices intended to aid the operator in performing field operations, increase comfort and provide entertainment. Displays offer a wide range of functionality, are used in many different machine system applications and can be used with other secondary devices such as handheld electronic devices.

A secondary device is any device that is not required to operate your machine for its primary use. The operator is always responsible for safe operation and control of the machine.

To prevent injury while operating the machine:

- Position the display according to the installation instructions. Ensure that the device is secured and does not obstruct the driver's view or interfere with the machine operating controls.
- Do not become distracted by the display. Stay alert. Pay attention to the machine and surrounding environment.
- Do not change settings or access any functions that require prolonged use of the display controls while machine is moving. Stop the machine in a safe location and place in park position before attempting such operations.
- Never set the volume so high that you cannot hear outside traffic and emergency vehicles.

To promote safe operation, certain functions of displays may be disabled unless the machine movement is restricted and/or has been placed in the park position. Overriding this safety feature may violate applicable law and can result in damage, serious injury, or death.

Only use available display functionality when conditions permit you to do so safely and in accordance with instructions provided. Always observe safe driving rules, state, or local laws and traffic regulations when using any secondary device.

DX,ELEC,DISPLAY-19-13JAN15

Rear Hitch or PTO Availability

[Ag] PTO or rear hitch options are available only on an agricultural tractor.

[Scraper] For scraper tractor, ignore CommandCenter content that pertains to these options.

RX32825.0000004-19-20JUN22

Machine Settings Overview

NOTE: Some items only display if machine is equipped with the associated option.



RXA0167076—UN—20MAR19

Access machine-specific applications from the Machine Settings tab. Available applications vary depending on tractor configuration.



AutoLoad

RXA0180073—UN—09OCT20

AutoLoad

- Use AutoLoad application to adjust AutoLoad settings.
- For more information, see Scraper Information section of this Operator's Manual.



Engine

RXA0175176—UN—17FEB20

Engine

- Use Engine application to adjust engine and exhaust filter system settings.
- For more information, see Engine Settings in Engine Operation section of this Operator's Manual.



ExactRate Tractor Tank

RXA0178628—UN—08JUL20

ExactRate Tractor Tank

- Use ExactRate Tractor Tank application to view ExactRate fill information.
- For more information, see ExactRate Tractor Tanks section of this Operator's Manual.



Front Hitch

RXA0169132—UN—25JUN19

Front Hitch

- Use Front Hitch application to adjust front hitch settings.
- For more information, see Front Hitch Settings in Front Hitch section of this Operator's Manual.



HVAC

RXA0167626—UN—26APR19

HVAC

- Use HVAC application to adjust heating, ventilation, and air conditioning settings.
- For more information, see HVAC Settings in HVAC section of this Operator's Manual.



John Deere CTIS

RXA0177902—UN—14MAY20

John Deere CTIS

- Use John Deere CTIS application to adjust John Deere CTIS settings.
- For more information, see John Deere CTIS Settings in John Deere CTIS section of this Operator's Manual.



Lights

RXA0168488—UN—05JUN19

Lights

- Use Lights application to adjust lights settings.
- For more information, see Lights settings in Lights section of this Operator's Manual.



Maintenance and Calibrations

RXA0134981—UN—07AUG13

Maintenance and Calibrations

- Use Maintenance and Calibrations application to add/edit service intervals and perform ground radar and slip calibrations.
- For more information, reference the G5

CommandCenter Operator's Manual and the Help Center application on the display.



PTO

RXA0167685—UN—30APR19

PTO

- Use PTO application to adjust PTO settings.
- For more information, see PTO Settings in PTO—General Information section of this Operator's Manual.



Rear Hitch

RXA0169204—UN—26JUN19

Rear Hitch

- Use Rear Hitch application to adjust rear hitch settings.
- For more information, see Rear Hitch Settings in Rear Hitch section of this Operator's Manual.



SCV

RXA0173516—UN—03JAN20

SCV

- Use SCV application to adjust SCV settings.
- For more information, see SCV Settings in Selective Control Valves section of this Operator's Manual.



Steering

RXA0171926—UN—06NOV19

Steering

- Use Steering application to adjust steering settings.
- For more information, see Steering Settings in this Operator's Manual section.



Suspension

RXA0174230—UN—28JAN20

Suspension

- Use Suspension application to adjust suspension settings.
- For more information, see Suspension Settings in Drive Train section of this Operator's Manual.



Trailer Brake

RXA0177626—UN—28APR20

Trailer Brake

- Use Trailer Brake application to adjust brake and pre-brake settings and/or to test trailer brakes.
- For more information, see Trailer Brake System Settings in Brakes section of this Operator's Manual.



Transmission

RXA0167077—UN—20MAR19

Transmission


- Use Transmission application to adjust transmission settings.
- For more information, see appropriate transmission section of this Operator's Manual.

kd34109,1665681653127-19-13OCT22

Navigate G5 CommandCenter

NOTE: Images are for reference and may differ by tractor configuration or operator settings. As the operator pages through the CommandCenter, more in-depth information is presented, allowing the operator to fine-tune tractor functions.

Navigating CommandCenter Pages:

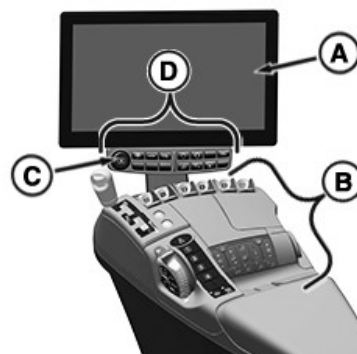

RXA0188124—UN—11OCT22


CommandCenter and CommandARM

Use touchscreen CommandCenter buttons or icons to make selections. To adjust input box values, enter the value on the keypad or select the input box and scroll the adjustment dial (C) to the desired value. A yellow highlight box appears around the selected input box and indicates that the adjustment dial is active.

A—CommandCenter: A touchscreen display attached to the CommandARM (B) that allows the operator to access pages required to operate the tractor. The operator can select (touch) options on the screen to move through pages and access tractor functions.

B—CommandARM: Made up of buttons, switches, and a joystick (if equipped) that allow the operator to manage tractor or implement functions.

C—Adjustment Dial/Close Window Button: Rotate the adjustment dial clockwise to raise or counterclockwise to lower input box values. Press the button one time to close a window. Press and hold the button to close all open windows.

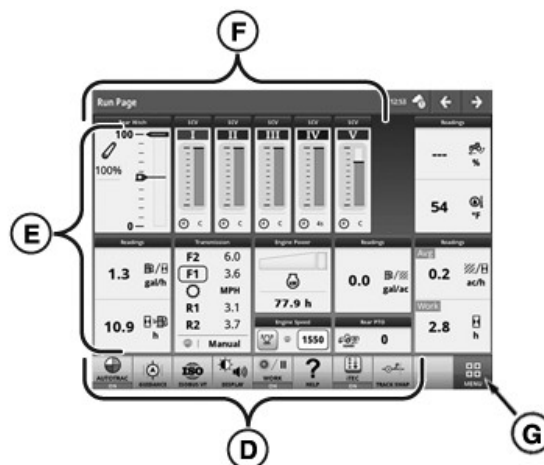

RXA0188279—UN—11OCT22


Run Page

D—Shortcut Keys: Allow quick access to application functions from the shortcut bar.

E—Run Page Modules: Allow quick access to application functions from the run pages.

F—Title Bar: Select to access available run pages or add a new run page.

G—Menu: Select to access all applications installed on the display and machine. Select left-hand tabs to view different groups of applications.

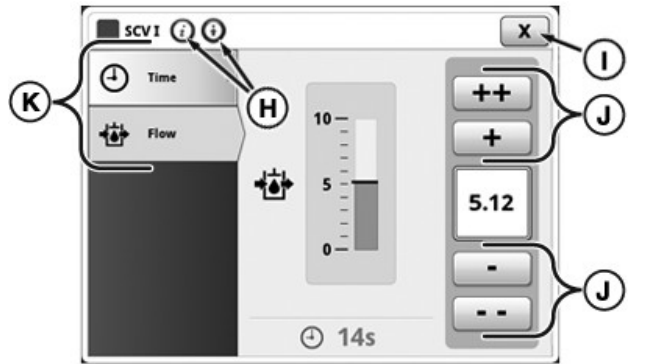

RXA0137084—UN—13DEC13

Module Functions

H—Help/Advanced Settings Buttons: While in an application, select the title bar to view the help pages or change additional settings for that application.

I—Close Button: Select to close the current page.

J—Increase/Decrease Value Buttons: Select to change a value within input boxes. Use (++) and (- -) buttons to make larger incremental changes when adjusting the value, rather than touching (+) or (-) buttons. For areas that require tighter adjustments, only (+) and (-) buttons are available.

K—Tabs: Select to change to different section topics.

kd34109,1664465900369-19-27FEB23

Compatible Universal Displays

G5 CommandCenter may be configured to run with the following John Deere universal displays connected at the corner post.

- GreenStar 3 2630 Display
- 4640 Universal Display
- 4240 Universal Display (7R and 8R Series Tractors only)
- G5 Universal Display
- G5^{Plus} Universal Display

kd34109,1664465919701-19-29SEP22

Power Display On and Off

G5 CommandCenter displays turn on and off with the tractor key switch.


- **Warm boot** occurs when the CommandCenter display has been on within the last 24 hours. The

display rests in hibernation state during the 24-hour or less time period that it has been off. When turned back on, the display powers up quickly (approximately 10 seconds).

- **Cold boot** occurs if the display has not been operated for 24 hours or more, or if the unswitched power has been disconnected. During this period, the display shuts down completely to conserve battery power. The next power-up takes approximately 60 seconds.

NOTE: After turning off the engine, avoid turning the key switch back on until the display screen has gone black.

- **Hard reset** is required when the display is unresponsive for more than a few minutes under normal operating conditions.

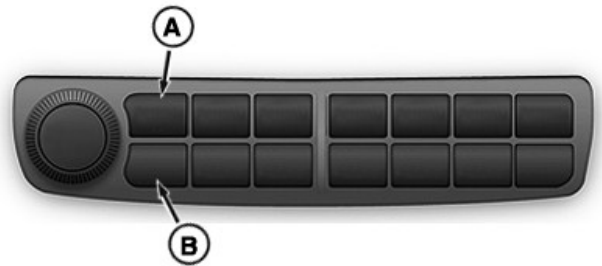

RXA0148512—UN—25JUN15

Navigation Bar

Perform a hard reset by simultaneously pressing the left-most upper and lower buttons (A and B) on the navigation bar for 5 seconds. If the display does not reset, pull fuse nine from the load center and replace it after 5 seconds. For more information on load center fuses, see Load Center—Cab in Service—Electrical section of this Operator's Manual. If the problem persists, see your John Deere dealer.

kd34109,1664465962070-19-29SEP22


Change Pages and Values

Various methods are provided to allow selection and modification of CommandCenter pages and values.



RXA0181011—UN—22JAN21

- **A—Section Tab:** Select to change to a different section topic.
- **B—Icons:** Select to open an application.

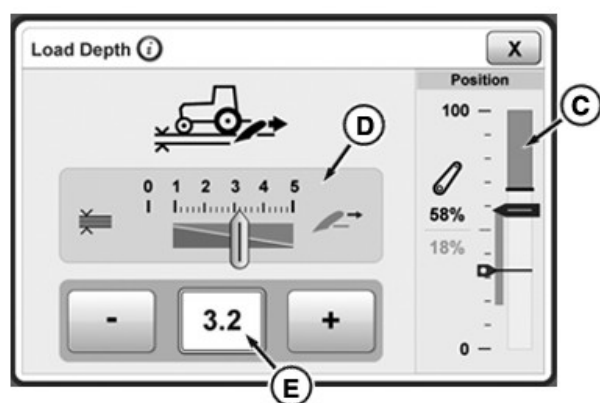

RXA0130123—UN—23APR13

- **C—Bar Graph:** Shows setting information using the filled portion of the bar.
- **D—Slider Bar:** Shows the setting within the minimum and maximum value range.
- **E—Input Box:** Shows the set value. Select (+) to increase or (-) to decrease the value.

NOTE: When changing values using the adjustment dial, rotating the dial faster increases or decreases the value faster.

If a large range of values is available, a numeric keypad appears, allowing direct input of the desired value.

KT81203,00004A7-19-20JUN22

Factory and Service ADVISOR Installed Onscreen Help

Tractor Application Help Package with Service ADVISOR or Service ADVISOR Remote is installed at the factory for the following eight languages:

- | | |
|-----------|--------------|
| • Chinese | • Italian |
| • English | • Portuguese |
| • French | • Russian |
| • German | • Spanish |

G5 Operating System Help Package is installed for all languages at factory.

For instructions on how to install and update Onscreen Help packages, see the G5 CommandCenter Operator's Manual.

kd34109,1664465994053-19-29SEP22

Radar Calibration

CAUTION: Avoid injury. Perform calibration in safe and open area that is clear of objects and bystanders.

Perform radar calibration if:

- Radar speed and wheel/track speed are not equal when slip is not present.
- Radar device was installed/replaced.
- Tire size was changed.
- Ballast of tractor was changed.
- Speed source was changed.



RXA0147926—UN—13APR15

1. Select Menu.
2. Select Machine Settings tab.
3. Select Maintenance & Calibrations icon.
4. Select Calibrations tab.
5. Select Radar Calibration icon.
6. Drive unloaded tractor on hard, dry, and level surface at approximately 3.2 km/h (2.0 mph).



RXA0147580—UN—10MAR15

NOTE: Radar calibration can be canceled by selecting Cancel (B).

7. Select Start (A) to begin radar calibration process.



RXA0147581—UN—10MAR15

8. Select OK (C) to complete radar calibration.

If radar calibration is unsuccessful after three attempts, see your John Deere dealer.

KD34109,00004DE-19-22JUN22

Slip Calibration

CAUTION: Avoid injury. Perform calibration in safe and open area that is clear of objects and bystanders.

Perform slip calibration if:

- Radar calibration has been performed.
- Slip is displayed when slip should not be present.
- Ballast of tractor was changed.
- Speed source was changed.




RXA0147928—UN—13APR15

1. Select Menu.
2. Select Machine Settings tab.
3. Select Maintenance & Calibrations icon.
4. Select Calibrations tab.

NOTE: Tractor must be in motion for slip calibration icon to appear.


5. Select Slip Calibration icon.

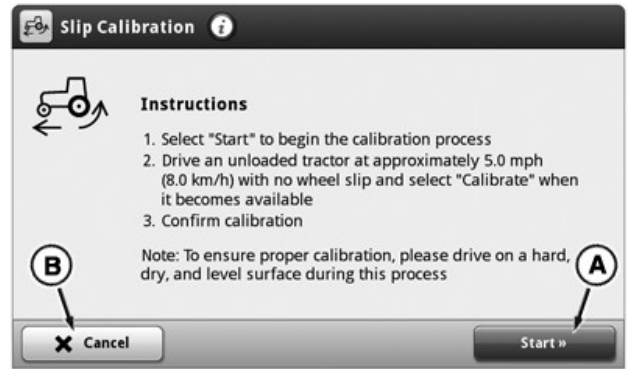

RXA0147582—UN—10MAR15

NOTE: Slip calibration can be canceled by selecting Cancel (B).

6. Select Start (A) to begin slip calibration process.
7. Drive unloaded tractor on hard, dry, and level surface at least 8 km/h (5 mph).

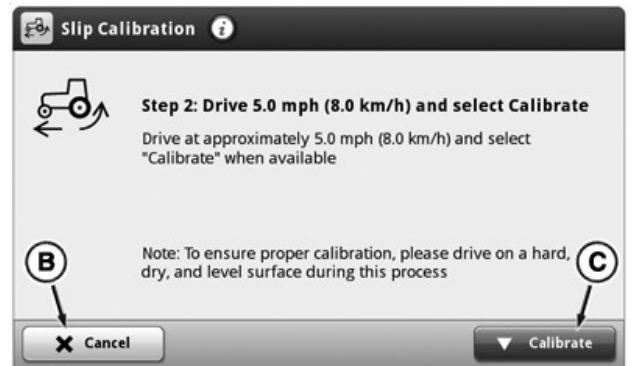

RXA0147583—UN—10MAR15

8. Select Calibrate (C).



RXA0147584—UN—10MAR15

9. Select OK (D) to complete slip calibration.

If slip calibration is unsuccessful after three attempts, see your John Deere dealer.

KT81203,000020F-19-22JUN22

Steering Settings—Access

Access Application through Display:



Menu

RXA0167075—UN—20MAR19

1. Menu



Machine Settings

RXA0167076—UN—20MAR19

2. Machine Settings tab



Steering

RXA0171926—UN—06NOV19


3. Steering

KD34109,0000571-19-08DEC21

Steering Settings

Steering application is used to access and adjust steering settings.

Items Accessible on Steering Main Page:

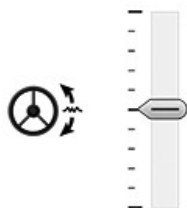

Resistance Status

RXA0174749—UN—05FEB20

Steering Wheel Resistance — select to adjust setting for force required to turn steering wheel. See Steering Settings—Steering Wheel Resistance in this Operator's Manual section.

KD34109,0000572-19-05FEB20

Steering Settings—Steering Wheel Resistance

Steering Wheel Resistance setting allows operator to adjust setting for force required to turn steering wheel.

Procedure to Modify:



Increase/Decrease Value

RXA0171921—UN—07NOV19

Select (+) to increase or (-) to decrease value.

- Maximum: 2
- Minimum: -2
- Increment: 0.1
- Default: 0

KD34109,0000573-19-25MAR20

Controls Setup



PC15326—UN—08JUL13

Controls Setup configures the integrated tractor joystick, CommandARM levers, 1—4 buttons, and third-party devices to control tractor or implement functions. ISO Aux implements configure to the tractor joystick or a third-party device.

Set up assignments:

1. Select Menu.
2. Select Applications tab.
3. Select Controls Setup application.
4. Select from the following tabs on the left-hand side of the page:

NOTE: Unlock the tractor joystick (if equipped) to activate default and custom (manually set) assignments. See CommandARM Joystick in CommandARM Controls section of this Operator's Manual.

- **CommandPRO Joystick:** Assign to control tractor and implement functions (example: rear hitch).

- **Integrated Tractor Joystick:** Assign to control tractor and implement functions (example: front hitch).
- **CommandARM Levers and 1—4 Buttons:** Assign to control tractor and implement functions (example: rear hitch).
- **Third-Party Devices:** Any mechanism, John Deere, or non-John Deere, attached to ISOBUS. Once attached, assign control to tractor and implement functions (example: trailer).
- **ISO Aux implements:** Assign implement (example: trailer) function to a specific button on the tractor joystick.

5. Select reconfigurable assignment module.

Depending on the selected source, the following combinations (assignments) are possible:

- **Integrated Tractor Joystick, CommandARM Levers, 1—4 buttons, and Third-Party Devices:** Input + Source + Function
- **ISO Aux Implements:** Function + Device + Input


Manage Assignments:



To edit assignments for the tractor joystick, CommandARM levers, or 1—4 buttons, select the desired reconfigurable assignment module. To remove an assignment, select the desired assigned module and then select Remove Assignment (A).

To edit assignments for third-party devices or ISO Aux implements, select edit (B) in the desired reconfigurable assignment module. To remove an assignment, select trash (C).

Activate Custom, ISO Aux, and Defaults:

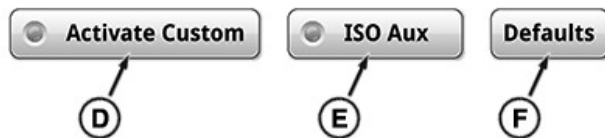

Select Activate Custom and ISO Aux buttons to enable custom assignments for ISO Aux implements

Activate Custom (D): Enables all customized assignments across all groups.

ISO Aux (E): Determines if messages from the tractor joystick are sent to the ISO Aux implement. Select to enable implement functions, select again to disable.

Functions are stored until the operator edits a corresponding assignment.


Defaults (F): Clears and restores any custom control assignments to factory default settings.

KT81203,00005B2-19-20JUN22

Install Video Display Camera


IMPORTANT: Avoid damage to the camera. Mount the camera securely to the equipment and in a location where the camera will not be pinched, crushed, kicked, or knocked off.

NOTE: Camera placement is limited to video camera cable length. Consider camera field of view when selecting the location.

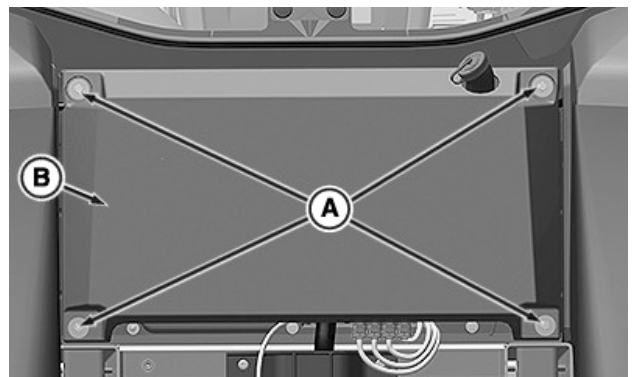

NOTE: Rear cab panel removal is not required to access the analog video connectors.

1. Remove the four cap screws (A).
2. Remove the rear cab panel (B).

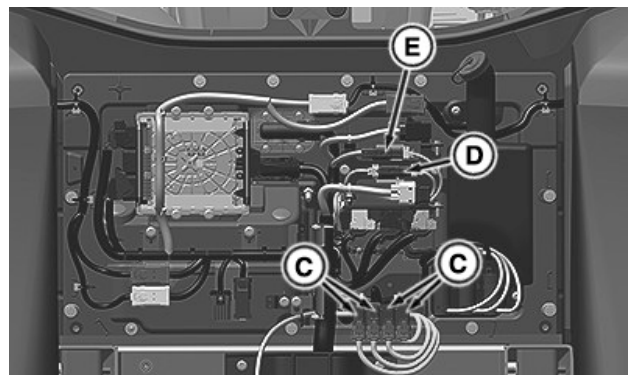

3. Locate the video connectors:


NOTE: The digital inputs will be occupied if the tractor is equipped with front and rear digital cameras.

- Analog (C)
- Rear digital (D)

- Front digital (E)


For information on how to adjust Video settings, see the G5 CommandCenter Operator's Manual.

KD34109,00004B4-19-10APR23

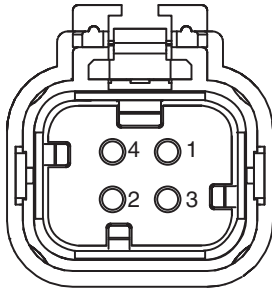

RXA0107925—UN—28MAY10

Analog Video Connector Pin Identification

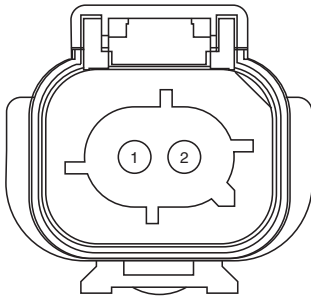

RXA0188906—UN—10APR23

Digital Video Connector Pin Identification

Analog	
Pin Number	Function
1	Power
2	Ground
3	Signal
4	Signal—Ground

Digital	
Pin Number	Function
1	Signal +
2	Signal -

4. Connect the camera cable into the 4-pin (analog) or 2-pin (digital) connector.

NOTE: For the camera to function after connecting it to the port, the key switch may need to be cycled.

5. Route the camera cable.
6. Mount the camera at the desired location.
7. Replace the rear cab panel.


Intelligent Total Equipment Control (iTEC)

CommandARM Control Functions

Intelligent Total Equipment Control, iTEC, allows multiple reoccurring tasks to be performed with touch of one button, up to four sequences. Sequences remain in memory until deleted or overwritten, even if electrical current is switched off. Each sequence can include up to 20 functions.

A sequence is a course of events from start of first function to completion of last function. Sequence can be started by pressing one of the sequence (1—4) buttons.

iTEC pages are accessed through G5^{Plus} CommandCenter. See additional information in this Operator's Manual section on how to set up and edit a sequence.

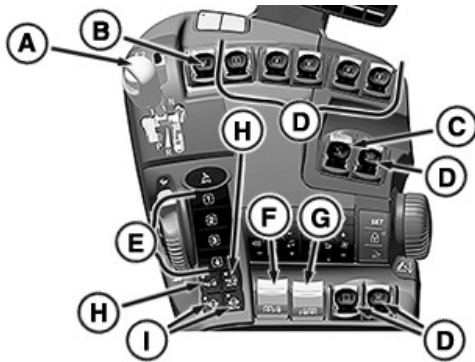

RXA0156096—UN—09DEC16

The following iTEC functionality chart describes item and function from CommandARM image.

NOTE: Some items are only available if machine is equipped with the associated option.

iTEC Functionality		
	Component	Functions
A	IVT -AutoPowr, EVT-eAutoPowr, and 16-Speed PowerShift	Change Set Speed Forward
	e18 and e23 Transmission	Upshift or Downshift in forward gear
B	Rear Hitch	Raise Detent, Lower Detent, and Fast Lower Detent
C	Front Hitch	Raise, Lower, Float, and Cancel
D	SCVs	Extend, Retract, Float, and Cancel
E	1—4 Buttons ^a	Sequence Set 1, 2, 3, or 4
F	Front PTO	On/Off
G	Rear PTO	On/Off
H	MFWD	On/Off/Auto
I	Differential Lock (7R, 8RW, 8RX, and 9RW)	On/Off/Auto
	Differential Lock (9RX)	Auto

^aButtons are reconfigurable and must be assigned to iTEC to run sequence sets.

KT81203,000093C-19-28FEB23

iTEC Station Description (EU 1322/2014)

CAUTION: Do not operate front loaders in conjunction with Intelligent Total Equipment Control (iTEC) to avoid sudden movements and possible accidents.

A sequence is defined as the start of the first recorded function to completion of last recorded function. Example of two sequences would be, one sequence made up of a series of functions, operations and distances used at start of field and a second sequence used at a water way in the center of the field. Each program can include up to 20 functions. The programs remain in the memory until they are deleted or overwritten, even if the electrical current is switched off.

KT81203,00004FB-19-15JUN22

CommandCenter Pages Descriptions and Functions

CAUTION: Avoid unwanted movement and possible accidents. Do not operate front loaders in conjunction with Intelligent Total Equipment Control (iTEC).

iTEC Main Page



RXA0168452—UN—30MAY19

Use shortcut button or follow alternative path:

1.




RXA0145566—UN—01OCT14

Select **Menu**.

2. Select **Machine Settings** tab.

3. Select **iTEC Icon**.

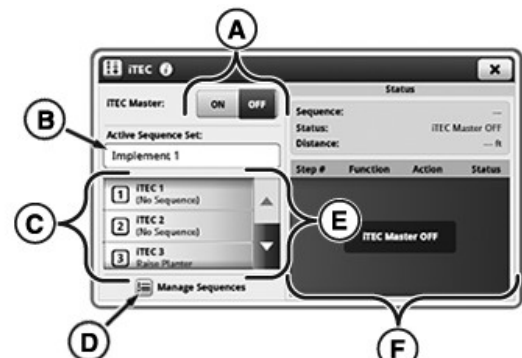


RXA0158043—UN—02MAR17

• **A — iTEC Master Toggle:** Toggle iTEC ON/OFF.

- **B — Active Assignment Set Button:** Select or create an assignment set.
- **C — Assignments List:** List of sequences that can be assigned to 1—4 buttons.
- **D — Manage Sequences Button:** Edit sequence and assign buttons.
- **E — Scroll Bar:** Scroll up or down.
- **F — Status List:** Shows status of each iTEC sequence step as sequence progresses.

KT81203,00004D7-19-11APR23

Status Area

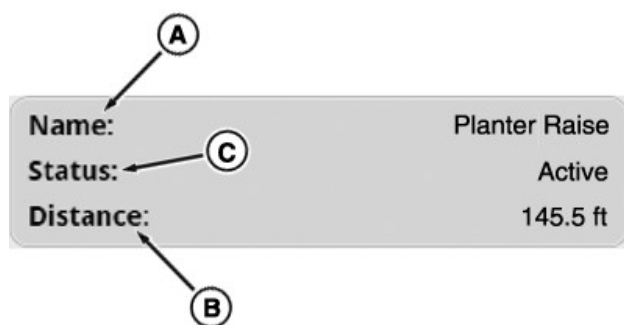

RXA0131243—UN—08MAR13

- **A—Name:** Name of sequence that is currently running.
- **B—Distance:** Displays accumulated distance while iTEC sequence is running.
- **C—Status:** Indicator of current iTEC status.
 - **Off** - No sequence execution possible.
 - **Ready** - Waiting for iTEC button to which a sequence is assigned to be pressed.
 - **Active** - iTEC sequence execution active.
 - **RPM Limit** - Engine speed is out of range.¹
 - **Park** - Transmission indicates that park lock is engaged.²
 - **Operator Presence** - No operator presence, no iTEC execution allowed. Operator returns to seat.¹
 - **Wheel Speed Low** - Wheel speed < 0.5 km/h (0.3 MPH), execution is paused.
 - **Complete** - Sequence successfully completed.
 - **Aborted** - Sequence execution aborted by operator or active abort condition.
 - **Error** - One or more sequence steps did not execute.

KT81203,00004D8-19-11APR23

¹ Sequences pauses or cannot start if this condition exists. Correct condition to resume sequence.


² Sequence pauses or cannot start if this condition exists. Correct condition to resume sequence.

All Sequence Page



RXA0129723—UN—06MAR13

Select **Manage Sequences** button on iTEC main page.

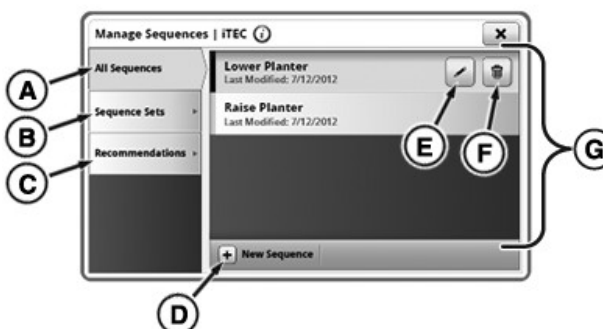

RXA0158044—UN—02MAR17

- **A—All Sequences Tab:** View available, delete saved, edit saved, or add new sequences.
- **B—Sequence Sets Tab:** View assigned sequences or give sequence assignment.
- **C—Recommendations (AutoLearn):** View and edit learned sequences.
- **D—New Sequence Button:** Manually program new sequence.
- **E—Edit Button:** Edit saved sequence.
- **F—Trash Button:** Deleted saved sequence.
- **G—Sequence List:** List of saved sequences.

DB71512,000013B-19-22JUN22

Add New Sequence

NOTE: For complete list of functions available, see CommandCenter Pages Descriptions and Functions in this Operators Manual section.

From iTEC main page, follow steps listed below:

1.




RXA0158059—UN—02MAR17

Select **Manage Sequences** button.

2. Select **All Sequences** tab.
3. Select **New Sequence** button.
4. Select **Add Step** button.

NOTE: Select Cancel button (F) to exit editing process without saving changes.


5.

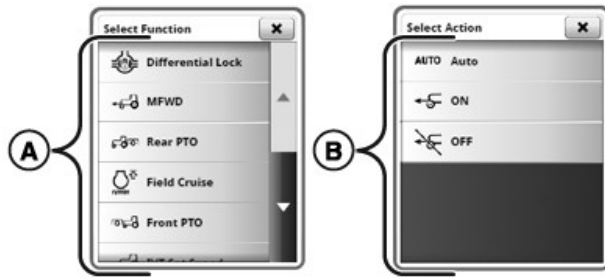

RXA0158057—UN—02MAR17

Select from list of functions (A).


6. Select from list of actions (B).
- 7.

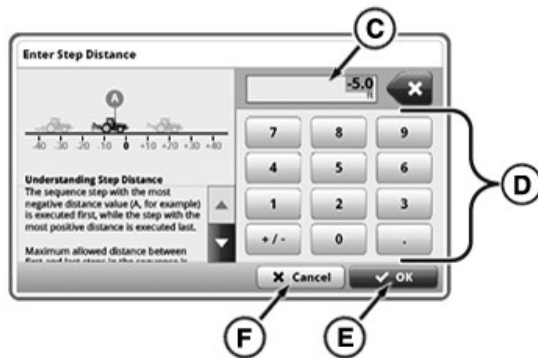

RXA0158047—UN—02MAR17

On Step Distance page, use keypad (D) to enter distance into step distance box (C).

8. Select OK Button (E).
9. Repeat steps 4-8 to add steps to sequence.
10. Press **Next** button to continue.
- 11.

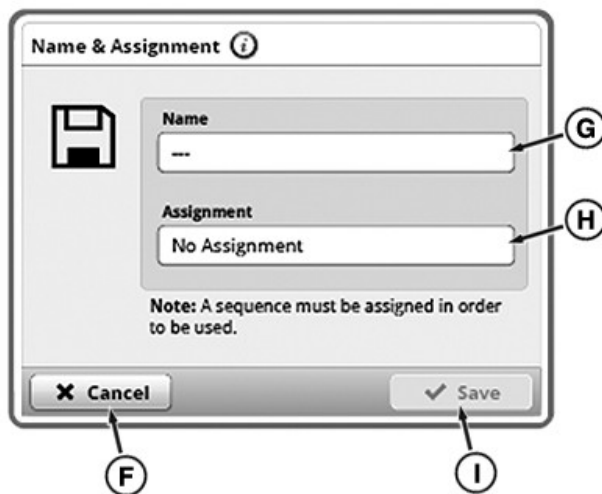

RXA0158048—UN—02MAR17

Select Sequence Name box (G). Type name of sequence. Select **Save/OK button** when complete.

NOTE: A sequence must be assigned in order to be used.


12. Select Sequence Assignment box (H). Select assignment, if desired, and select **Save/OK button** when complete.
13. Select **Save button (I)** to save sequence.

KT81203,00004D9-19-20JUN22

Sequence Step Status



RXA0131170—UN—05MAR13

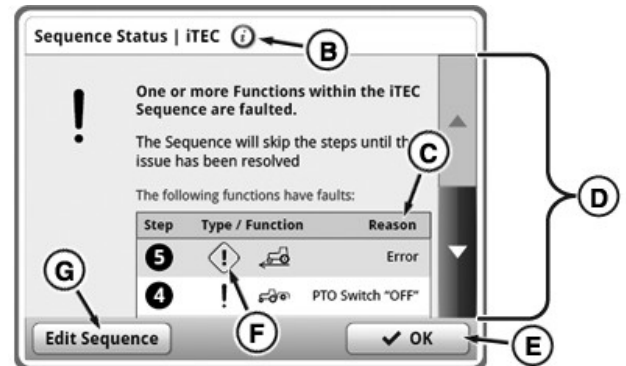

RXA0131609—UN—25JUL13

NOTE: Press Information Button (B) on any iTEC page to access a general status page. General status page will list all functions that are part of the sequences of current selected implement.

Whenever execution of a sequence step is not possible or is interrupted, iTEC system informs operator about new issue by displaying Information Alert (A) or Fault Alert (F) next to the sequence or sequence step. Press **Alert Symbol** next to the sequence (in assignment area or sequence assignment tab) to access the sequence status page to read steps with errors. Use scroll bars (D) to scroll up and down list. Select edit sequence button (G) if you want to edit a sequence. Press **Alert Symbol** next to a sequence step (while in EDIT) for information about the issue just for that step. Both views will show a short reason (C) for issue. Press OK button (E) to exit.

KT81203,00004DA-19-20JUN22


Edit or Remove Sequence

From iTEC main page:



RXA0129723—UN—06MAR13

1. Select **Manage Sequences** button.

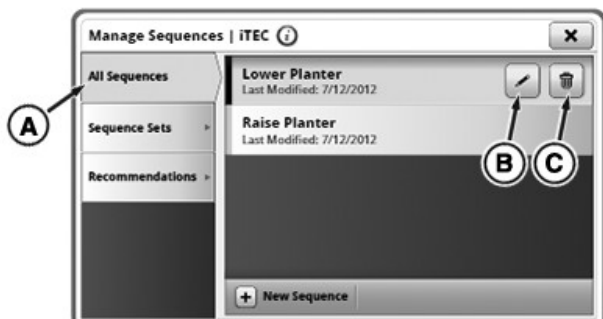


RXA0158049—UN—02MAR17

2. Select All Sequences tab (A).

3. Select desired sequence.


NOTE: Trash button (C) removes sequence or step within sequence.

4. To update sequence steps, select Edit button (B).

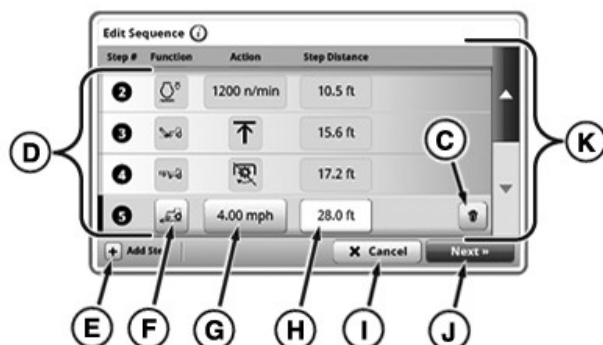

RXA0158050—UN—02MAR17

5. Select desired step to edit from sequence step list (D). If needed, use scroll bar (K) to locate step.

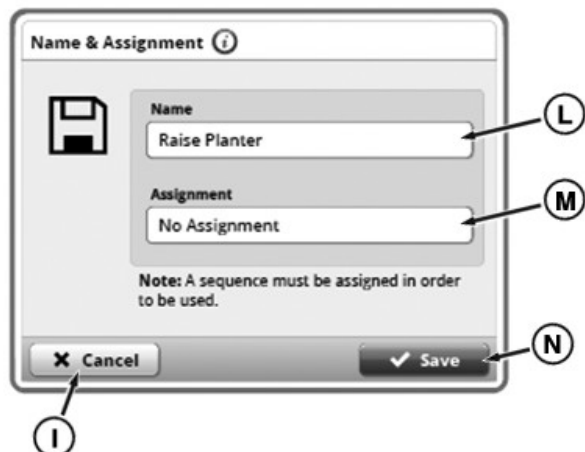

RXA0158051—UN—02MAR17

NOTE: To exit editing process without saving changes, select Cancel button (I).

6. To edit step, select add new step (E), function (F), or action (G) buttons or use distance input box (H).

7. Select Next button (J).

8. If needed, edit sequence name (L) or sequence assignment (M).

9. Select Save button (N).

KT81203,00004DB-19-20JUN22


Sequence Sets Page

From iTEC main page, use following steps:



RXA0129723—UN—06MAR13


1. Select **Manage Sequences** button.

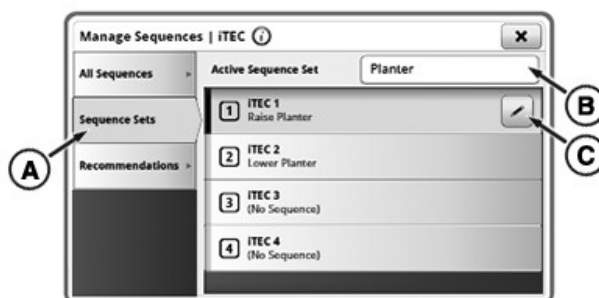


RXA0158311—UN—15MAR17

2. Select **Sequence Sets** tab (A).

3. If needed, select Active Sequence Set (B) and follow steps 4-6. If not, skip to step 7.

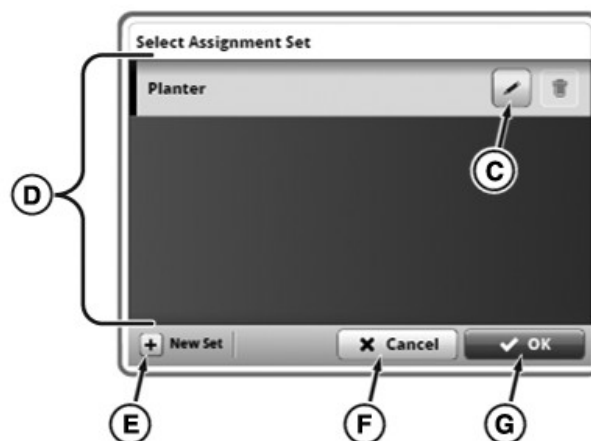

RXA0158312—UN—15MAR17

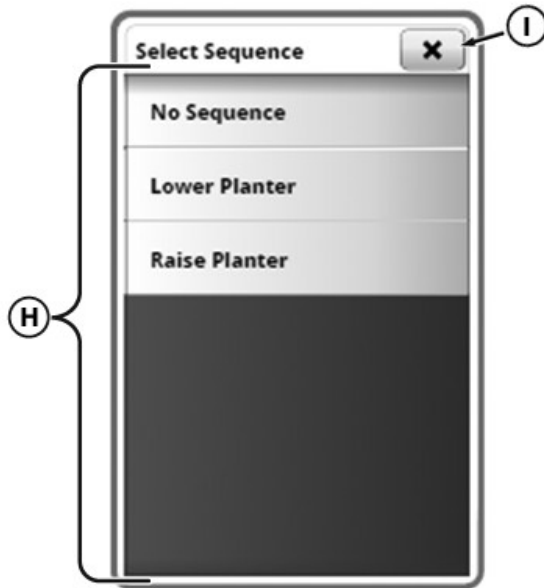

RXA0158313—UN—15MAR17

NOTE: To exit page without saving changes, select Cancel (F) or Close (I) button.

4. Select sequence set from Sequence Set list (D).
5. If needed, select Edit (C) or New Set (E) button.
6. Select OK button (G).
7. Select desired iTEC button to assign.
8. Select Edit button (C).
9. Select sequence from Sequence list (H).

KT81203,00004DD-19-20JUN22


Perform Sequence

iTEC sequence execution requires that certain tractor controls are operated in a particular way. Sequence will not execute with tractor in PARK position. Transmission shift lever must be in forward position when executing set speeds, gears, or automatic gear shift. Tractor ground speed must be at least 0.5 km/h (0.31 mph).

Before performing sequence using SCV functions, relevant SCV levers must be in neutral position.

Abort current sequence at any time by pressing same assigned iTEC sequence button used for starting sequence. Currently active commanded functions will be canceled (example: hitch (if equipped) motion or SCV flow will stop if previously initiated as part of sequence).

iTEC Indicator is illuminated when active. For indicator location, see Corner Post Display in Corner Post Display section of this Operator's Manual.

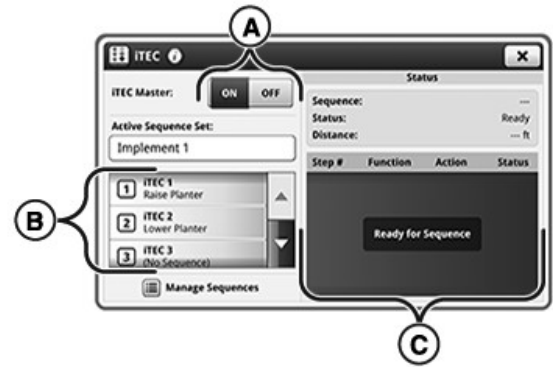

RXA0173766—UN—13JAN20

During sequence execution, a function can be actuated manually at any time without execution of sequence being interrupted. Functions that are actuated manually are ignored by iTEC for the rest of sequence. Relevant alert icon for this function appears in Status area (C).

1. Turn iTEC Master toggle (A) to ON position.
2. Select iTEC sequence button assigned to desired sequence (B).
3. Sequence steps appear in Status area (C) and show progression of steps.

KT81203,00004DF-19-20JUN22

Recommendations (AutoLearn)

When AutoLearn is ON, the system learns every action the machine completes in the background. When the same patterns, actions, or steps are recognized, AutoLearn creates a sequence. AutoLearn then recommends assignment to an iTEC button.


Sequences can be deleted when no longer needed. When a sequence is deleted, all button assignments clear and sequence is no longer available for use.

From iTEC main page, use following steps:



RXA0129723—UN—06MAR13

1. Select Manage Sequences.

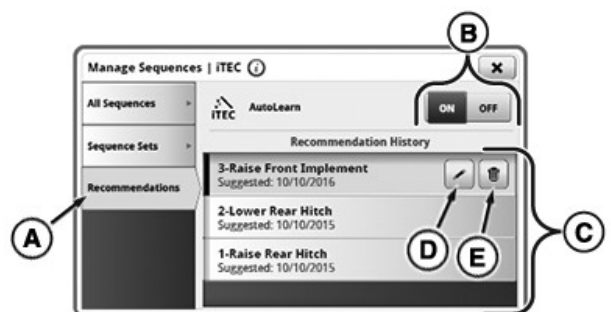


RXA0158056—UN—02MAR17

NOTE: AutoLearn is ON by default. To turn AutoLearn OFF, use AutoLearn ON/OFF toggle (B).

2. Select Recommendations (AutoLearn) tab (A).
3. Review Recommendation History (C).
4. To edit or assign recommended sequence, select edit (D). To remove sequence from list, select trash (E).

KT81203,00004E0-19-20JUN22

iTEC Functions—Efficiency Manager

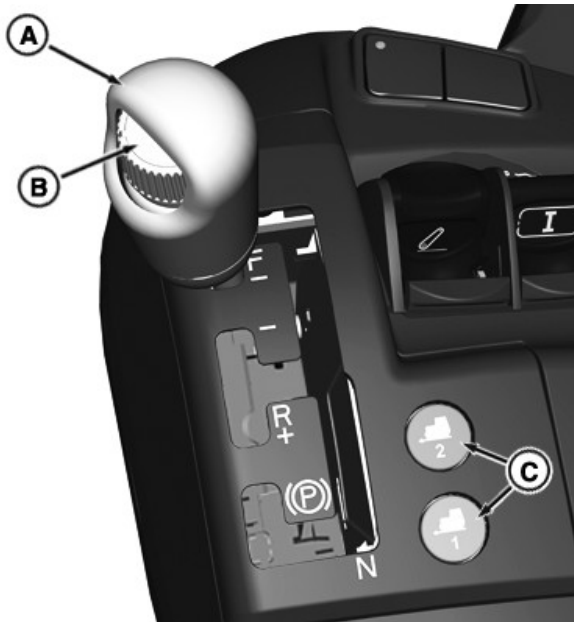

RXA0139446—UN—17MAR14

Efficiency Manager Set Speed Buttons (C): The current forward set speed can be changed up or down with the set speed adjusting wheel (B) on shift knob (A). Transmission changes will be executed at the normal rate once the set speed has been changed.

The minimum set speed that can be saved is 0.8 km/h (0.5 mph). Changing the set speed or shifting during execution of a sequence will not cause iTEC to abort, but set speed changes will not be executed for the remainder of the sequence.

When a set speed is changed by an iTEC sequence, transmission will react as if the operator changed set speed, shifting up or down as a result.

KT81203,00004E2-19-17JUN22

Tractor-Implement Automation (TIA)

TIA—General Information

CAUTION: Although phrases "transfer control" and "disengage control" are terms commonly used with TIA equipment, at NO time is implement in total control of an operation. Operator ALWAYS has the ability to override TIA implement. It is operator's responsibility to make sure that implement operation does not damage equipment, or pose danger of injury or death to operator or others close by.

Do not operate TIA when driving on public roads or when other persons are close by.

For ISO-compliant tractors, TIA-compatible implements have the ability to control certain individual tractor functions. See your implement Operator's Manual or contact your John Deere dealer with any questions regarding TIA-compatible implements.

KD34109,0000901-19-06MAY22

Activate TIA Equipment

Response Codes, Text Descriptions, and Corrective Actions		
Common Response Codes	Text Displayed	Corrective Action
0	Code Accepted	None Required
4	Implement Not Available to Deactivate	Implement already deactivated
5	Implement Already Activated	None Required, implement should work as expected
6 and 11	Space Unavailable for Activation	Contact your dealer for assistance
17	Demonstration Activation Replaced With Permanent Activation	None Required


NOTE: To obtain tractor serial number, see *Product Identification Number in Identification Numbers* section of this Operator's Manual.

An activation code is required to allow TIA to function. Contact your John Deere dealer with tractor serial number and implement make, model, and serial number. Dealer obtains activation code through John Deere StellarSupport.



RXA0166970—UN—08MAR19

1. Select Menu.
2. Select System tab.
3. Select Software Manager icon.

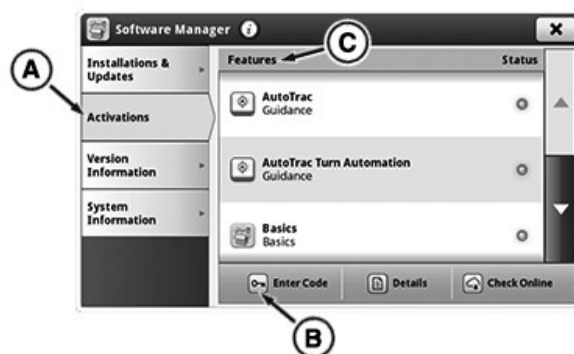

RXA0166931—UN—08MAR19

4. Select Activations tab (A).
5. When Activations page displays, press Enter Code (B). Keyboard appears.

NOTE: Some tractor automation activation page keyboard characters are grayed out and are not used in activation codes. If provided activation code includes any characters that are grayed out on tractor automation activation page keyboard, request dealers reconfirm activation code.

6. Using keyboard, enter activation code, then select OK.
7. If activation code is entered correctly, confirmation code appears in the enter activation overlay and message is displayed. Code Accepted indicates that activation is complete.
8. If message other than Code Accepted appears, see Response Codes, Text Descriptions, and Corrective Actions table. If message not listed appears, check and reenter code. If problem persists, contact your John Deere dealer.

Up to 20 implement names can be viewed on Activations page at any given time. When a new entry shows up in Features list (C), that entry is labeled Unknown Implement.

KD34109,0000902-19-23JUN22

Operate TIA

IMPORTANT: For TIA to function correctly, the tractor and implements must meet various requirements. See requirements information in this Operator's Manual section and the implement Operator's Manual sections.

1. Connect TIA equipment to tractor using ISO connection. See Right-Hand Front Corner Post in Accessories section of this Operator's Manual.
2. Select AutoTrac Resume (AUTO) button on CommandARM. For button location, see CommandARM Controls—Left Side in

CommandARM Controls section of this Operator's Manual.

3. Follow implement Operator's Manual instructions to operate implement.

KD34109,0000903-19-23JUN22

PTO Requirements [Ag]

Before transferring control to implement, prepare implement as indicated in implement Operator's Manual. Transfer control using AutoTrac resume button as described in implement Operator's Manual.

Following conditions must be met before transferring control to implement:

- Operator in seat.
- No PTO faults present.
- PTO remote control off.

NOTE: Implement cannot engage PTO when tractor is stopped unless it is authorized to do so. However, implement can disengage PTO at any time including when tractor is stopped.

While operating and depending on PTO system capabilities, implement has the ability to engage/disengage PTO or adjust PTO speed.

To disengage control, turn PTO switch off.

KD34109,000090F-19-08JUN22

SCV Requirements

Before transferring control to implement, prepare implement as indicated in implement Operator's Manual. Transfer control using AutoTrac resume button as described in implement Operator's Manual.

Following conditions must be met before transferring control to implement:

- Operator in seat.
- No SCV faults present.
- SCV control levers (if assigned) in neutral position.
- Unlock all assigned SCV controls.

NOTE: Set maximum SCV flow limit which cannot be exceeded by implement.

NOTE: Implement cannot adjust SCV flow when tractor is stopped unless it is authorized to do so. However, implement can stop SCV flow at any time including when tractor is stopped.

While operating, implement has ability to:

- Control SCVs during operations.

- Change SCV flow rate up to set limit.

To disengage control, perform any of the following:

- Actuate specific SCV lever.
- Lock all assigned SCV controls.
- Actuate remote control switch on fender.
- Remove inputs assigned to SCVs.

KD34109,0000905-19-23JUN22

PowerShift Transmission Requirements

NOTE: These requirements also apply to the e23 transmission.

Before transferring control to implement, prepare implement as indicated in implement Operator's Manual. Transfer control using AutoTrac resume button as presented in the implement Operator's Manual.

NOTE: The implement cannot exceed ground speed set by the operator.

Following conditions must be met before transferring control to implement:

- Operator in seat.
- No PowerShift transmission faults present.
- Shift lever in forward.

NOTE: When transferring control to the implement, Efficiency Manager mode will engage.

Speed may always be reduced.

Set speed limit may be increased within 2 seconds after engaging travel speed auto mode. Current travel speed can be limited by other processes (e.g. iTEC). This limit might be observed; however, the limit will not be considered as an intervention by operator.

To disengage control using the shift lever:

- During driving: Shift up or down manually.
- Increasing the speed will end the auto mode. The implement has all information to inform the operator that this intervention will end the travel speed auto mode. See implement Operator's Manual.

KD34109,0000908-19-23JUN22

AutoTrac Guidance Requirements

Before transferring control to implement, prepare implement as indicated in implement Operator's Manual. Transfer control using AutoTrac resume button as presented in implement Operator's Manual.

Following guidelines must be met before transferring control to implement.

- Operator in seat.
- Steering system functional.
- AutoTrac is off.
- Steering wheel stationary.
- Vehicle speed below maximum automated speed.
- Transmission not in PARK.

While operating, implement has ability to automatically steer tractor.

To disengage control:

- Turn steering wheel.
- Place tractor in PARK.

KD34109,0000909-19-23JUN22

Rear Hitch Requirements [Ag]

Before transferring control to implement, prepare implement as indicated in implement Operator's Manual. Transfer control using AutoTrac resume button as presented in implement Operator's Manual.

Implement can automatically control hitch depth.

Set raise limit using CommandCenter.

IMPORTANT: Implement cannot exceed limit.

Following guidelines must be met before transferring control to implement:

- Operator in seat.
- No hitch faults present.
- Hitch control lever in neutral position.
- Hitch unlocked.

NOTE: On a tractor that is standing still, only the implements authorized by John Deere can control the hitch depth.

To disengage control, perform any of the following:

- Move hitch control lever.
- Lock hitch.
- Activate fender-mounted hitch switch (if equipped).

KD34109,000090E-19-08JUN22

Drivetrain

Drivetrain Overview

Tractor drivetrain consists of:

- Transmission: e18 PowerShift
- Front Axle: Suspended HydraCushion
- Differential: Differential, differential lock, final drives, and axles
- Brakes: Front and rear
- Mechanical, electronic, and hydraulic control systems

KD34109,000023D-19-23JUN22

adjust for the best possible comfort based on travel speed, surface characteristics, implement weight, implement usage, and braking activity.

NOTE: *AUTO mode is recommended during transport. However, if the suspension lowers to an unacceptable level or moves excessively with heavy front implements installed, the suspension can be placed in MAX mode (recommended for front loader work).*



MAX

RXA0174226—UN—28JAN20

Suspension Settings—Access

Access Application through Display:



Menu

RXA0167075—UN—20MAR19

1. Menu



Machine Settings

RXA0167076—UN—20MAR19

2. Machine Settings tab



Suspension

RXA0174230—UN—28JAN20

3. Suspension

KD34109,0000590-19-08DEC21

MAX — select to set the suspension to maximum firmness. When travel speed exceeds 30 km/h (18 mph), the MAX setting is deactivated. When travel speed drops below 20 km/h (12 mph) again, the MAX setting is reactivated.



Manual

RXA0174225—UN—27JAN20

Manual — select to manually adjust the suspension to fit field conditions. See Suspension Settings—Manual in this Operator's Manual section.

Run Page Modules

Add modules for this application to run pages using Layout Manager. See the G5 CommandCenter Operator's Manual.

Example:



Axle Suspension

RXA0174227—UN—27JAN20

Suspension Settings

The Suspension application is used to access and adjust Front Axle Suspension settings.

Items Accessible on Suspension Main Page:



AUTO

RXA0174224—UN—27JAN20

AUTO — select to allow the suspension to automatically

NOTE: *Different modules may be available for your application.*

Axle Suspension — quick access to front axle suspension settings.

Shortcut Keys

Add shortcut keys for this application to the shortcut bar using Layout Manager. See the G5 CommandCenter Operator's Manual.

Example:



AUTO ON

RXA0174228—UN—27JAN20

NOTE: Different shortcut keys may be available for your application.

Axle Suspension — quick access to toggle between AUTO and MAX settings.

KD34109,0000591-19-28FEB23

Suspension Settings—Manual

The Manual setting allows the operator to adjust the chassis height manually. The setting is overridden when travel speed exceeds 5 km/h (3 mph). When overridden, the system returns to the previously selected AUTO or MAX mode.



Manual

RXA0174225—UN—27JAN20

Select to access the Manual Setting page.



Increase

RXA0174229—UN—27JAN20

Select to increase the chassis height.



Decrease

RXA0174223—UN—27JAN20

Select to decrease the chassis height.



Current Setting

RXA0174222—UN—27JAN20

The current setting is shown on the slider bar.

KD34109,0000592-19-26MAY20

Differential Lock

Differential lock latches wheels/tracks on the same axle together to provide the most traction in slippery working conditions. When one wheel/track begins to slip, select one of two operating modes.

IMPORTANT: Damage to differential could occur if differential lock is engaged after wheels/tracks begin to slip. Engage before slip occurs.

NOTE: On tractors with front and rear differential locks, front axle differential lock engages when rear differential lock engages.

Differential Lock Operating Modes:

Manual Lock — engages when differential lock button or floor switch (if equipped) is pressed. See CommandARM Controls—Left Side in CommandARM Controls section or Differential Lock Switch in Front Console section of this Operator's Manual. Indicators on the CommandARM button and corner post display are illuminated.

AUTO Differential Lock — engages when AUTO differential lock button is pressed. See CommandARM Controls—Left Side in CommandARM Controls section of this Operator's Manual. Indicators on the CommandARM button and corner post display are illuminated. In AUTO mode, differential lock automatically:

- Disengages when wheel/track speeds are above 23 km/h (14 mph), brake pedal is pressed, or steering angle is greater than selected value. For steering angle settings, see Transmission Advanced Settings in Transmission—General Information section of this Operator's Manual.
- Engages when wheel/track speed falls below 19 km/h (12 mph), steering angle is below selected value, and when the brake pedal is released. For steering angle settings, see Transmission Advanced Settings in Transmission—General Information section of this Operator's Manual.

Alternate Braking — braking mode engages when wheel/track speed is above 5 km/h (3.1 mph) and the brake pedal is pressed. Both front and rear differential locks disengage when wheel/track speed is 5 km/h (3 mph)—45 km/h (28 mph) and steering angle is greater than the braking mode steering threshold. Rear differential lock disengages and front differential lock remains engaged if any of the following occur in braking mode:

- Wheel/track speed falls below 3 km/h (2 mph)

- Wheel/track speed exceeds 47 km/h (29 mph)
- Wheel/track speed is 5 km/h (3 mph)—45 km/h (28 mph) and steering angle is less than the braking mode steering threshold

Once the brake is released:

- If differential lock was in manual mode before pressing the brake pedal, manual mode is disengaged.
- If differential lock was in AUTO mode before pressing the brake pedal, AUTO mode resumes.

KD34109,00005E6-19-30MAY23

Operate Suspension

Front Axle Suspension provides suspension for the front end of the tractor using a hydropneumatic self-leveling system. The system can operate simultaneously with, or independently from, Load Depth control and hitch dampening.

Suspended front axle engages whenever tractor travel speed exceeds 0.5 km/h (0.3 mph). Control is delayed after the tractor begins moving. The suspension is active any time the tractor is not in park.

Front Axle Suspension can be set to one of three settings. See Suspension Settings in this Operator's Manual section.

CAUTION: Avoid possible injury. Always make sure that the transmission is in **PARK** when working near the front axle suspension.

Start-Up Mode

During tractor start-up:

- The suspension does not move until the transmission is placed in either forward or reverse gear.
- The suspension flexes when the transmission shift lever is placed in NEUTRAL or any forward or reverse gear.
- If the tractor has settled, the suspension may rise about 25 mm (1 in), seeking to center.
- Leveling is completed when the tractor wheel speed is above 0.5 km/h (0.3 mph).

Restricted Mode (Locked)

The suspension goes into restricted mode when:

- The operator activates the hitch raise/lower switch.
- The transmission shift lever is placed in PARK, unless the chassis height is adjusted manually. See Suspension Settings—Manual in this Operator's Manual section.
- The wheel speed is less than 0.5 km/h (0.3 mph).
- Correcting for conditions that are not level.

- The operator applies both brake pedals (if equipped with dual brake pedals) or the brake pedal (if equipped with single brake pedal), unless the chassis height is adjusted manually. See Suspension Settings—Manual in this Operator's Manual section.

Implements

IMPORTANT: Prevent possible damage. With front axle suspension, check for adequate clearance when attaching front-mounted implements.

- When the hitch is raised or lowered with load sense front weight changes, control units limit the suspension response.
- To adjust the suspension toward midpoint, depress the clutch and move the transmission shift lever into gear for 4 seconds, then back to NEUTRAL. Repeat the process until the tractor is level (useful when attaching and detaching implements).

Parking Tractor

IMPORTANT: Prevent possible damage. Do not park the tractor with equipment or items under the front end.

When the tractor is parked, the front end can settle. Keep the front end of the tractor away from equipment or other items.

Cold-Weather Operation

Use normal cold-weather procedures. Front axle suspension may require extra time to function correctly. The system may not operate if it has not centered during the first 80 seconds of operation. Several restarts may be required. If the system still does not start, contact your John Deere dealer.

KD34109,000058F-19-04APR22

Drivetrain Protection

NOTE: When the tractor is operated under a heavy load and low engine rpm, the transmission may default to NEUTRAL. PARK engages once the wheel speed drops below 1.75 km/h (1.0 mph) for vehicle protection.

To engage the transmission, move the PowerShift transmission lever to PARK, reduce the load, and then shift back into desired operating gear.

A TIP Diagnostic Trouble Code (DTC) will be stored and displayed when default to PARK condition occurs.

Drivetrain protection system is gear-sensitive and is not apparent in most situations. It does not affect load starting and only affects operations in gears with

maximum operating speeds below 7.1 km/h (4.4 mph). Full engine horsepower, plus 10 percent power bulge is available in all other gears. With proper ballast, the tractor is traction limited not power limited, at slow ground speeds.

Electronic engine controls provide protection from drivetrain overloading. Engine horsepower is automatically reduced to protect the drivetrain components when:

- Air Filter Restriction Warning DTC is activated (CCU 000107.00). Engine performance is reduced. Service engine air filter immediately. See Engine Primary and Secondary Air Filters in Service—Change section of this Operator's Manual.
- Fuel filters become plugged resulting in a loss of power due to a reduction in delivered fuel. Service engine fuel filter immediately. See Fuel Filters in Service—Change section of this Operator's Manual.
- See your John Deere dealer.

Seeding Hydraulic Intelligent Power Management (IPM)

The swashplate angle sensor determines the hydraulic

power being consumed by the implement to enable IPM.

Power increase is only provided when required by the system.

Adjust the transmission settings for IPM maximum efficiency. Suggested settings may increase shift occurrences, but allows the engine to stay in the desired boosted power range.

1. Select the transmission custom mode page. See e18 Transmission Settings—Custom in e18 PowerShift Transmission section of this Operator's Manual.
2. Select the Engine Speed Droop PTO ON module.
3. Adjust the droop percentage to 15%.
4. Select the Engine Speed Droop PTO OFF module.
5. Adjust the droop percentage to 15%.

IPM is available as a factory- or dealer-installed option. See your John Deere dealer.

Gear	Maximum Engine Power Available hp (kW)				
	9R 540	9R 590		9R 640	
		Without IPM	With Hydraulic IPM	Without IPM	With Hydraulic IPM
1	540 (397)	540 (403)	590 (440)	538 (401)	614 (458)
2	540 (397)	540 (403)	590 (440)	564 (421)	627 (468)
3	540 (397)	564 (421)	602 (449)	590 (440)	640 (477)
4	540 (397)	590 (440)	615 (459)	614 (458)	652 (486)
5	540 (397)	590 (440)	615 (459)	640 (477)	665 (496)
6	540 (397)	590 (440)	615 (459)	640 (477)	665 (496)
7	540 (397)	590 (440)	615 (459)	640 (471)	665 (496)

TO84419,00000C1-19-11JUL22

Brakes

Trailer Brake System Settings—Access

Access Application through Display:



Menu

RXA0167075—UN—20MAR19

1. Menu



Machine Settings

RXA0167076—UN—20MAR19

2. Machine Settings tab



Trailer Brake System

RXA0177626—UN—28APR20

3. Trailer Brake System

KD34109,00005EF-19-08DEC21

NOTE: Some items only display if machine is equipped with the associated option. If the trailer brake adjustability settings do not display and assistance is needed to improve tractor-trailer compatibility, see your John Deere dealer.

Trailer Brake Gain Items:

3



Gain Value and Status

RXA0177620—UN—28APR20

Gain — select to adjust the aggressiveness of the trailer brakes. See Trailer Brake System Settings—Brake Gain in this Operator's Manual section.

Trailer Pre-Brake Items:

+5



Pre-Brake Value and Status

RXA0177621—UN—28APR20

Pre-Brake — select to adjust the trailer brake initiation timing. See Trailer Brake System Settings—Pre-Brake Offset in this Operator's Manual section.

Trailer Brake Test Controls and Settings Items:

Trailer Brake Test Controls

RXA0177627—UN—28APR20

Trailer Brake Test Controls



Trailer Brake System Example

RXA0177625—UN—28APR20

Items Accessible on the Trailer Brake System Main Page:



Advanced Settings

RXA0167071—UN—21MAR19

Advanced Settings — access further adjustments and less common settings. See Trailer Brake System Settings—Advanced in this Operator's Manual section.

KD34109,00005F0-19-13MAY20


Trailer Brake System Settings—Brake Gain

The Brake Gain adjustment allows the operator to adjust the braking aggressiveness to match the trailer requirements.

Modify When:

- The trailer is slow to stop.
- The trailer wheels lock up when the brakes are applied.

Procedure to Modify:

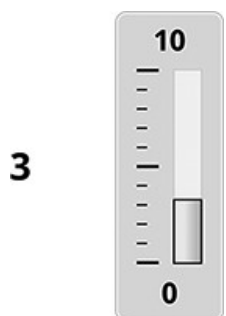

RXA0177620—UN—28APR20

Gain Value and Status

1. Select the Gain value.



RXA0177616—UN—28APR20

Increase/Decrease Value

2. Select (+) to increase or (-) to decrease the value. The value is shown in the display box.
 - Maximum: 10
 - Minimum: 0
 - Increment: 1



Close

RXA0167129—UN—25MAR19


3. Select to close.

KD34109,00005F1-19-13MAY20

Trailer Brake System Settings—Pre-Brake Offset

Pre-Brake Offset allows the operator to change the timing of the trailer brake initiation. The trailer brake initiation may need to be adjusted to prevent the trailer from pushing the tractor forward (example: when connecting the trailer to the tractor).

Procedure to Modify:

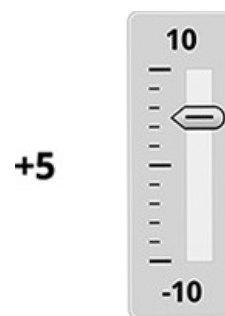

RXA0177621—UN—28APR20

Pre-Brake Value and Status

1. Select the Pre-Brake value.



RXA0177622—UN—28APR20

Increase/Decrease Value

2. Select (+) to increase or (-) to decrease the value. The value is shown in the display box.
 - Maximum: 10
 - Minimum: -10
 - Increment: 1



Close

RXA0167129—UN—25MAR19

3. Select to close.

KD34109,00005F2-19-12APR22

Trailer Brake System Settings—Trailer Brake Test

Use the Trailer Brake Test to confirm that the tractor park brake will hold both the tractor and the trailer. This condition is necessary when the tractor is parked and the trailer brakes are released. The test overrides the default park state and forces the trailer brakes to release.

NOTE: Available on tractors equipped with dual-line hydraulic trailer brakes.

Test When:

- Verifying park brake performance.
- Attaching a different trailer.

The tractor must be in PARK and the trailer brakes must be engaged to perform the trailer brake test. If these conditions are not met, the Release Trailer Brakes key is grayed out. The statuses of these conditions are displayed on the page.

Prerequisite — one of the following statuses is displayed next to Machine must be in park:



Check Mark

RXA0177617—UN—28APR20

- The check mark indicates that the machine is in PARK.



Fault

RXA0177619—UN—28APR20

- The fault icon indicates that the machine is not in PARK.

Brake Control — one of the following statuses is displayed regarding the trailer brake:

- (---) is displayed when the trailer brake is not engaged.
- Brakes Engaged is displayed when the trailer brake is engaged.

- Brakes Released is displayed when the Release Trailer Brakes key is held.
- Fault Present and the fault icon are displayed when a fault is present in the brake control.

Procedure to Modify:

1. Place the tractor in PARK.

Trailer Brake Test Controls

RXA0177627—UN—28APR20

Trailer Brake Test Controls

2. Select Trailer Brake Test Controls.

Release Trailer Brakes

RXA0177623—UN—28APR20

Release Trailer Brakes

3. Select and hold Release Trailer Brakes long enough to ensure that the tractor and trailer do not move.

Done

RXA0177618—UN—28APR20

Done

4. Press Done to close.

KD34109,00005F3-19-12MAY20

Trailer Brake System Settings—Advanced

Advanced settings allow you to access further adjustments and less common settings.

Items Accessible on Advanced Settings Page:

Reset

Reset

RXA0177624—UN—28APR20

Reset to Default — select Reset to return the trailer brake settings to factory default values. When selected, a page displays to verify the selection. Select OK to continue or Cancel to return to the previous page without resetting the values.

KD34109,00005F4-19-28APR20


Brake Use

CAUTION: Avoid possible personal injury. Reduce speed if towed load weighs more than tractor or transporting loads under adverse conditions. Avoid hard braking applications, see implement manual and Transport Section.

IMPORTANT: Avoid unnecessary wear on brakes. DO NOT rest foot on brake pedal during tractor operation.

NOTE: Brake life can be extended when stopping large loads by using a combination of engine motoring and service brake torque to slow the vehicle. This can be achieved by downshifting and then using service brakes to further slow vehicle and bring engine speed to idle.

Test brakes with engine stopped to be sure manual brake system is functioning, see Service—Check section of this Operator's Manual.

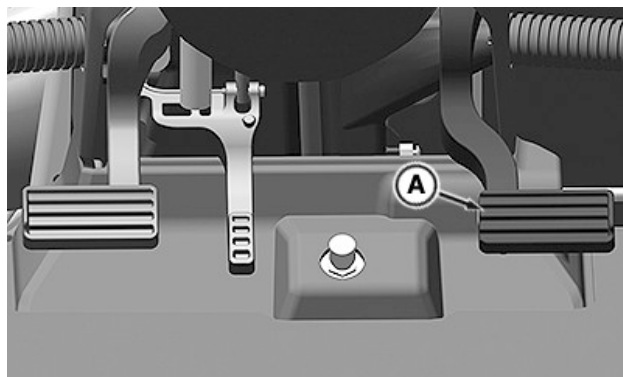

RXA0188911—UN—17APR23

Press brake pedal (A) to stop tractor while disengaging clutch.

Maintain at least 1800 engine rpm during aggressive braking events to ensure adequate cooling oil flow is directed to vehicle brakes. Do not over speed engine as it may cause damage to engine or transmission components.

TO84419,00000C9-19-14APR23

Trailer Brakes Regulation (EAEU-compliant Tractors Only)

Tractor is equipped with a braking system control for hydraulic or pneumatic system of brakes. According to the agreement with the customer the tractor may be sold without a trailer brake system.

CAUTION: Avoid loss of control. Always observe maximum permissible mass and speeds.

Tractor without a trailer brake system used for towing of trailers or implements on public roads with towed load not to exceed:

- 50% total permissible mass of tractor and speed no greater than 40 km/h (24 mph).
- Total permissible mass of the tractor at speeds no greater than 10 km/h (6 mph).

Tractor may also be used in conjunction with hitch-mounted implements for pushing, transportation, or actuation.

EC82310,00007DA-19-15APR19

Hydraulic Trailer Brakes (If Equipped)


CAUTION: Avoid possible injury from losing control of tractor when operating on downhill slopes. Tractor wheels can lock and skid on steep or slippery downhill slopes.

IMPORTANT: Operating tractor with three scrapers requires tractor and all scraper pans be equipped with hydraulic trailer brakes. See in the Transport section of this Operator's Manual:

- Towed Loads.
- Transport with Ballast.

IMPORTANT: Recommendations to reduce brake wear:

- Make sure that the pressure hose is connected.
- Select same gear for both downhill and uphill driving.
- Check hydraulic trailer brake regularly for proper operation.

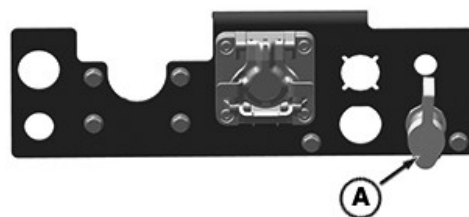

RXA0180505—UN—23NOV20

Remove cap from trailer brake coupler (A). Ensure that the hose coupler is clean before connecting to the trailer brake coupler.

To operate the hydraulic trailer brake, depress the brake pedal. The braking effect depends on pressure applied to the brake pedals.

TO84419,00000CA-19-23NOV20

Transmission—General Information

Transmission Settings—Access Advanced

Access Through Display:



RXA0167075—UN—20MAR19

Menu

1. Menu



RXA0167076—UN—20MAR19

Machine Settings

2. Machine Settings tab



RXA0167077—UN—20MAR19

Transmission

3. Transmission



RXA0167071—UN—21MAR19

Advanced Settings

4. Advanced Settings

Access Through Navigation Bar:



RXA0167078—UN—20MAR19

Transmission

1. Press transmission button on navigation bar below display.



RXA0167071—UN—21MAR19

Advanced Settings

2. Select advanced settings.

KD34109,00004B5-19-19MAY20

Transmission Settings—Advanced

Advanced Settings allows you to access further adjustments and less common settings.

NOTE: Some items only display if machine is equipped with the associated option.

Items Accessible on Advanced Settings Page:



RXA0167133—UN—21MAR19

Selection Box

True Ground Speed Input — allows the choice of Radar or GPS as the ground speed source. Touch the selection box to display the selection list. If the speed source is changed, perform radar calibration, then slip calibration. For information on calibrations, see Radar Calibrations and Slip Calibrations in CommandCenter section of this Operator's Manual.



RXA0167134—UN—22MAR19

OFF/LOW/MED/HIGH

NOTE: IVT and EVT without CommandPRO joystick and e23 only.

AutoClutch Sensitivity — select OFF to disable or select the level of sensitivity for AutoClutch. If set to OFF and the key is cycled, the setting reverts to the last LOW, MED, or HIGH setting.

NOTE: The OFF selection is only available when the brake pedals are not applied.

Sensitivity levels:

- LOW - recommended for driving in extremely hilly terrain with implements (drawn or attached), particularly if driving conditions are slippery.
- MED - recommended for driving in moderately hilly terrain with implements (drawn or attached).
- HIGH - recommended for driving without an implement or with an implement in flat terrain.



RXA0167133—UN—21MAR19

Selection Box

Start Gears — choose which gear the Transmission starts in. Touch the selection box next to the desired setting to be adjusted. A gear list displays. Select the desired gear from the list.

Options displayed depend on the Transmission:



Forward Start Gear
RXA0172259—UN—18NOV19

- Some transmissions have a setting for a forward start gear.



Reverse Start Gear
RXA0172260—UN—18NOV19

- Some transmissions have a setting for a reverse start gear.



Multiple Start Gears
RXA0172261—UN—18NOV19

- Some transmissions have settings for multiple forward start gears.



Selection Box
RXA0167136—UN—22MAR19

Reverse/Forward Ratio — select the ratio for reverse and forward Set Speeds. Reverse Set Speed will automatically set to the forward Set Speed times the selected setting. For example, if Fx0.3 is selected, reverse Set Speed will be 30% of what forward Set Speed is set to. If set to Independent, reverse and forward Set Speeds function independent of each other and are set separately. Regardless of the ratio, maximum reverse speed is 20 km/h (12 mph) for IVT for 7 and 8 Series Tractors.



ON/OFF
RXA0167187—UN—22MAR19

Backup Alarm (If Equipped) — select ON to enable or OFF to disable the alarm that sounds when the tractor is in reverse. See Backup Alarm in this Operator's Manual section.



AUTO MFWD Toggle
RXA0167137—UN—22MAR19

NOTE: Machines configured with mechanical front-wheel drive only.

AUTO MFWD — MFWD disengages to enable a tighter turning radius or to reduce ground disturbance in the area of the turn. Select the desired steering angle to disengage MFWD or disable by selecting OFF. Disabling the steering angle leaves Auto MFWD with the speed dependency only. See Mechanical Front-Wheel Drive (MFWD) in Drivetrain section of this Operator's Manual.



AUTO Diff Lock Example
RXA0167138—UN—22MAR19

NOTE: Machines configured with differential lock only. Options displayed depend on the machine.

AUTO Diff Lock — higher disengage steering angles require the operator to turn the steering wheel further before differential lock disengages. Use in high slip field conditions that require large steering corrections to maintain the desired path. Differential lock remains engaged while making steering corrections across the field but automatically disengages on headland turns. Select the desired steering angle to disengage differential lock.

- Moderate disengage steering angles are useful in loader situations. Differential lock remains engaged when entering a pile, but quickly disengages while turning.
- Lower disengage steering angles allow differential lock to disengage sooner (less movement of the steering wheel), which is useful in high-traction conditions (example: paved surface). Differential lock remains engaged during straight-line work, while minimizing tractor jerk when disengaged or re-engaged during turns.

See Differential Lock in Drivetrain section of this Operator's Manual.



7.0
mph

Forward Speed Limit
RXA0167139—UN—21MAR19



3.0
mph

Reverse Speed Limit
RXA0167140—UN—21MAR19

NOTE: Machines equipped with CommandPRO joystick only.

Speed Limits — adjust the maximum allowed speed in both forward and reverse directions. See CommandPRO Transmission Settings—Speed Limits in

IVT-AutoPowr Transmission with CommandPRO Joystick section of this Operator's Manual.




This tractor is equipped with Large Square Baler Ride Control.

RXA0176726—UN—07APR20

Ride Control

Ride Control — displays to indicate that the machine is equipped with Large Square Baler (LSB) Ride Control. For more information on LSB Ride Control, see Large Square Baler (LSB) Ride Control in Drivetrain section of this Operator's Manual.

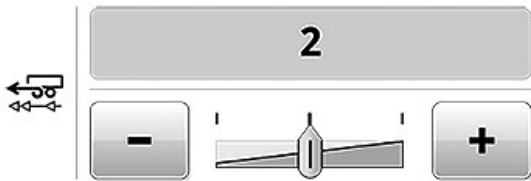

RXA0178631—UN—10JUL20

Implement Traction Assist Aggressiveness

Implement Traction Assist Aggressiveness — select (+) to increase or (-) to decrease the aggressiveness. Higher aggressiveness targets less wheel slip.

NOTE: EVT only.

KD34109,00004AB-19-04MAY23

Warm-Up Transmission-Hydraulic System


IMPORTANT: Avoid machine damage. Do not operate tractor under load until transmission-hydraulic system has warmed up. Tractor-hydraulic warm-up procedure is recommended when temperature is at or below -5°C (23°F).



RXA0188522—UN—06FEB23


1. Install jumper hose (A) into SCV I couplers.
2. Place transmission lever in PARK position.
3. Turn key switch to start position.
4. Press SCV shortcut button on navigation bar.
5. Select SCV I module.

6. Set detent Time to C (continuous). See SCV Settings—Time in Selective Control Valves section of this Operator's Manual.
7. Set detent Flow to 8.00 or above. See SCV Settings—Flow in Selective Control Valves section of this Operator's Manual.
8. Select SCV II module and repeat steps 6 and 7.

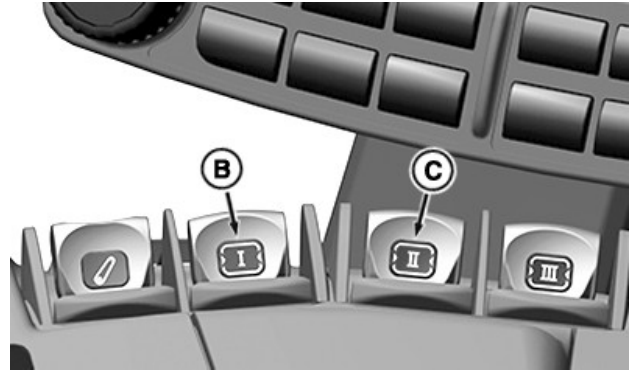


RXA0166860—UN—06MAR19

9. Pull SCV I (B) and SCV II (C) levers to extend detent. See SCV Control Lever Adjustments in Selective Control Valves section of this Operator's Manual.
10. Operate engine at 1400 rpm.
11. Monitor Hydraulic Oil Temperature until it reaches 38°C (100°F).



RXA0126813—UN—12JUN12

- a. Select Menu.
- b. Select Applications tab.
- c. Select Machine Monitor icon.

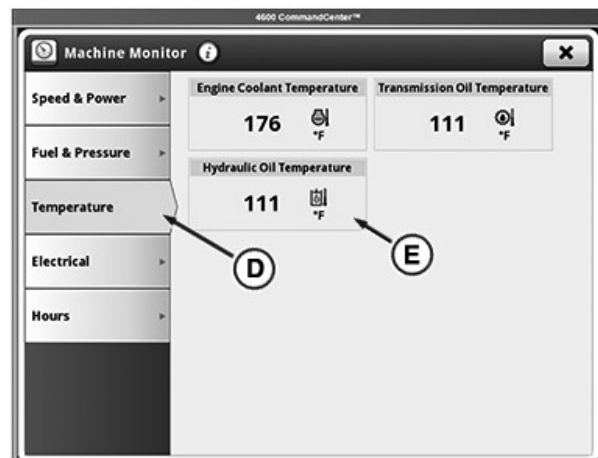

RXA0181012—UN—22JAN21

- d. Select Temperature tab (D).

- e. Select Hydraulic Oil Temperature reading (E).
12. Return SCV levers I and II to neutral position.
13. Disconnect jumper hose and return to normal operation.

KT81203,0000252-19-08FEB23

Backup Alarm

The backup alarm is located on rear of machine. It is standard on scraper machines and is available as a factory or field installed option on agricultural machines. Backup alarm emits an audible sound to alert anyone nearby when key switch is on and machine is in reverse gear. For information on how to enable/disable alarm, see Transmission Advanced Settings in this Operator's Manual section.

Adjust Volume



RXA0171844—UN—31OCT19

Volume can be adjusted using switch (A) on back of alarm.

Volume settings:

- High (left-hand position)
- Low (middle position)
- Medium (right-hand position)

KD34109,000056F-19-25MAR20

e18 PowerShift Transmission

Operate Transmission—e18

CAUTION: Avoid possible injury from losing control of tractor while operating on a downhill slope. Observe following precautions:

- Avoid depressing the clutch pedal or shifting to NEUTRAL at high speeds while the tractor is rolling downhill.
- In overspeed condition, the clutch may not re-engage when the pedal is released; use the brakes to slow down the tractor.
- Adjust Set Speed to a safe downhill operating speed.
- Do not make major speed reductions with right-hand reverser.

IMPORTANT: Prevent transmission or clutch damage:

- Avoid depressing the clutch pedal or shifting to NEUTRAL at high speeds while the tractor is rolling downhill.
- In overspeed condition, a diagnostic trouble code (DTC) appears and the clutch may not re-engage when the pedal is released; use the brakes to slow down the tractor. For more information on DTCs, see Troubleshooting—Diagnostic Trouble Codes (DTC) section of this Operator's Manual.
- Never attempt to start tractor by towing or pushing.
- Shift lever can be moved to PARK position at any time. However, the park brake will not engage until the ground speed is below 1.75 km/h (1.0 mph).
- Avoid excessive ballast.
- Avoid continuous operation under full throttle and full load conditions below 1800 rpm.
- Fully depress the clutch pedal to completely disengage the clutch.

NOTE: When machine load is causing below idle speed:

- Transmission can default to NEUTRAL to protect the power train.
- Park brake engages when the wheel speed drops below 1.75 km/h (1.0 mph).
- Diagnostic trouble code displays.

To re-engage transmission, move lever to PARK, reduce load, and shift into desired operating gear.

NOTE: Operator presence sensor prevents initiation of movement with operator out of seat. See Operator Presence Sensor in Seats section of this Operator's Manual.



RXA0171366—UN—10OCT19

Speed Adjustment Wheel

Speed Adjustment Wheel — turn wheel clockwise to increase or counterclockwise to decrease speed.



RXA0171324—UN—10OCT19

Right-Hand Reverser

NOTE: The engine will start with the shift lever in any position. However, the tractor will not move until the lever is moved into and out of NEUTRAL or PARK.

Right-Hand Reverser — lever on CommandARM used to shift transmission. For information on shifting, see Shift Transmission—e18 in this Operator's Manual section.

With right-hand reverser:

- Transmission can be shifted into forward or reverse without use of the clutch pedal.
- Clutch pedal is used when selecting forward or reverse for more precise movement (such as connecting implements).
- Gear information displays on the corner post display. See Corner Post Display in Corner Post Display section of this Operator's Manual.
- Bump lever (move and release) to increase (+) or decrease (-) forward and reverse gears.

KD34109.000055F-19-15JUL22

Shift Transmission—e18

IMPORTANT: Avoid damage to park brake. Repeated engagement of park brake while machine is moving may damage the park brake. Shift lever can be moved to PARK position at any time. However, park brake will not engage until ground speed is below 1.75 km/h (1.0 mph).

Command Gears:

NOTE: Optimum engine speed is 1800—2200 rpm in full load conditions. Using higher gear and lower engine speed for light load operation saves fuel and reduces wear.

Each time transmission is placed in forward or reverse, transmission starts in commanded gear when clutch pedal is released. Commanded gear displays on corner post display. Commanded gear temporarily changes to the last gear used when shuttling between forward and reverse or shifting from gear to NEUTRAL.

Startup commanded gear defaults are 7F and 2R. To change startup gears, see Transmission Advanced Settings in Transmission—General Information section of this Operator's Manual.

Manually Preselect Gears:

- Forward — depress clutch pedal, put reverser lever in forward position, and bump gear up or down until desired command gear (between F1 and F13) displays.
- Reverse — depress clutch pedal, put reverser lever in reverse position, and bump gear up or down until desired command gear (between R1 and R5) displays.

Cold Weather Starting:

When temperature is -10°C (14°F) or lower, it can take up to 1 minute to release the park brake and shift transmission lever in gear (with operator in the seat). Several shifts between PARK and NEUTRAL can be required to release park brake in extremely cold conditions.

When temperature is above -10°C (14°F), it can take up to 3 seconds to release park brake with operator in seat.

When reverser lever is moved to NEUTRAL, corner post display shows N for 3 seconds. If park brake does not release, N changes back to P. Move reverser lever back to PARK, then back to NEUTRAL until N displays for more than 3 seconds.

Transmission will not shift above F13 until normal operating temperature has been reached. Delayed shift, slow hydraulic operation, hard steering, and limited engine rpm can also be noticeable until operating temperature is obtained.

Transport Shift:

When tractor is in light load condition, transmission can shift faster by rapidly bumping lever until desired transport speed is reached. To reach transport speed quickly from a stop, depress clutch and bump lever to desired gear. When clutch pedal is released, transmission shifts directly to selected gear.

Shuttle Shift (Direction Change):

Move reverser lever between forward and reverse positions to modulate directly to opposite direction of travel without clutching or braking. Shuttle shift occurs between last commanded forward and reverse gears.

Ground Speed Matching:

CAUTION: Avoid possible accident and injury from loss of vehicle control. Never allow machine to coast downhill.

NOTE: Custom and Full AUTO modes only.

If clutch pedal is released while machine is traveling above default startup gear speed, transmission automatically shifts gears to match speed. However, if clutch pedal is released while machine is traveling below default startup gear speed, transmission will stay at startup gear, even if machine stops.

Right-Hand Reverser Positions:

RXA0171316—UN—10OCT19

PARK Position

PARK — park brake is applied when lever is placed in position next to P.



RXA0171315—UN—10OCT19

NEUTRAL Position

NEUTRAL — park brake releases when lever is placed anywhere in right-hand gate.



RXA0171317—UN—10OCT19

Reverse Position

Reverse — machine moves in reverse when placed in gate labeled with an R.



RXA0171314—UN—10OCT19

Forward Position

Forward — machine moves forward when placed in gate labeled with an F.

KD34109,0000560-19-20JUN22

Engine throttle should be fully forward for maximum rpm:

- To reach Set Speeds.
- In high load applications.

Shift decisions are based on load conditions, throttle command, and operator settings. However, transmission may shift gears if hand throttle or speed control pedal are adjusted.

NOTE: Efficiency Manager Set Speeds can be programmed in iTEC application. See Intelligent Total Equipment Control (iTEC) section of this Operator's Manual.



RXA0171325—UN—10OCT19

Set Speed 1 Button

Set Speed 1 Button — select to activate Set Speed one. Select again to disengage.



RXA0171326—UN—10OCT19

Set Speed 2 Button

Set Speed 2 Button — select to activate Set Speed two. Select again to disengage.



RXA0171366—UN—10OCT19

Speed Adjustment Wheel

Speed Adjustment Wheel — while Set Speed is active, turn wheel clockwise to increase or counterclockwise to decrease setting.

In Full AUTO and Custom Modes:

- It is recommended that the hand throttle is placed in full forward position at all times.
- On corner post display, Set Speed value and automatic shifting indicator always display. However, Set Speed number displays only when Set Speed is active. See Corner Post Display in Corner Post Display section of this Operator's Manual.
- Bumping right-hand reverser increases Set Speed value. However, Set Speed disengages, and adjusted speed is not stored.

e18 Set Speeds and Efficiency Manager

Efficiency Manager:

- Controls transmission gearshift and engine speed to maintain desired ground speed (Set Speed).
- Will not shift gears if clutch pedal is partially depressed.
- Selects startup gear and may reduce engine speed if clutch pedal is fully depressed and machine is stationary.
- Selects startup gear speed if clutch pedal is fully depressed and machine is moving below startup gear speed.
- Selects a gear and engine speed to match ground speed if clutch pedal is fully depressed and machine is moving above startup gear speed.
- Selects startup gear when shifting from NEUTRAL or PARK to gear.
- Is always running when in Full AUTO and Custom modes.
- Runs in Manual mode when Set Speed buttons are active.

In Manual Mode:

- On corner post display, automatic shifting indicator and Set Speed information display only when Set Speeds are active. See Corner Post Display in Corner Post Display section of this Operator's Manual.
- Bumping right-hand reverser or drive lever disengages Set Speed.

KD34109,0000615-19-23JUN22

e18 Transmission Settings—Access

Access Application through Display:

1.



Menu

RXA0167075—UN—20MAR19

Menu

2.



Machine Settings

RXA0167076—UN—20MAR19

Machine Settings tab

3.



Transmission

RXA0167077—UN—20MAR19

Transmission

Access Application through Navigation Bar:



Transmission

RXA0167078—UN—20MAR19

Press transmission button on navigation bar below display.

KD34109,0000562-19-29JUN22

e18 Transmission Settings

Transmission application is used to display transmission information and adjust settings.

NOTE: Some items only display if machine is equipped with the associated option.



RXA0171369—UN—17OCT19

Transmission

Items Accessible on e18 Transmission Main Page:



RXA0171377—UN—14OCT19

Transmission Mode

Mode — select desired transmission mode. See e18 Transmission Settings—Mode in this Operator's Manual section.



RXA0171389—UN—11OCT19

Custom Settings

Custom Settings — adjust engine settings for PTO, hitch, and SCV. See e18 Transmission Settings—Custom in this Operator's Manual section.




RXA0171378—UN—10OCT19


ECO

NOTE: Only available in Custom mode.


Performance — select ECO to enable/disable reduced fuel consumption for light loads. Indicator is illuminated orange when enabled. For ECO button information, see CommandARM Controls—Left Side in CommandARM Controls section of this Operator's Manual.

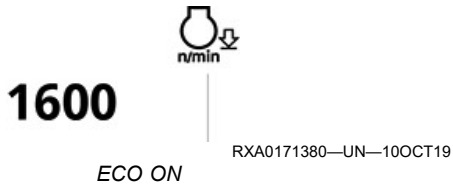


ECO ON — adjust Minimum Engine Speed setting when ECO is enabled. See e18 Transmission Settings—ECO in this Operator's Manual section.

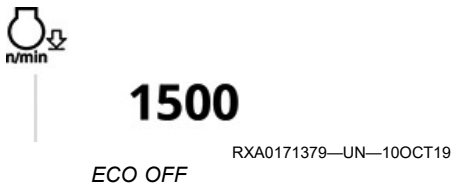

ECO OFF — adjust Minimum Engine Speed setting when ECO is disabled. See e18 Transmission Settings—ECO in this Operator's Manual section.

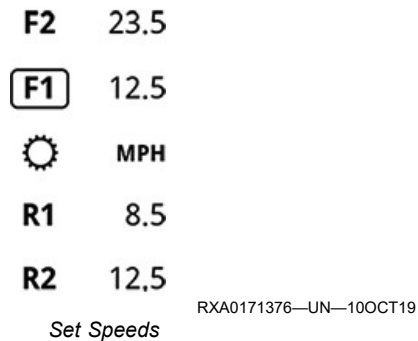

Set Speeds — displays current forward and reverse Set Speeds. A box displays around active Set Speed. See e18 Set Speeds and Efficiency Manager in this Operator's Manual section.




Forward Max Speed — adjust setting for maximum speed in forward gear. See e18 Transmission Settings—Max Speeds in this Operator's Manual section.



Reverse Max Speed — adjust setting for maximum speed in reverse gear. See e18 Transmission Settings—Max Speeds in this Operator's Manual section.



Forward Start Gear — toggle between selected forward start gears 1 or 2. Gears are selected in Advanced Settings.

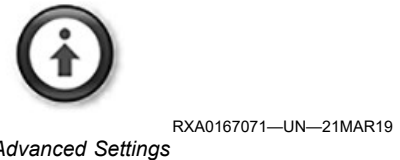


Advanced Settings — access further adjustments and less common settings. See Transmission Advanced Settings in Transmission—General Information section of this Operator's Manual.

Run Page Modules

Add modules for this application to run pages using Layout Manager. See the G5 CommandCenter Operator's Manual.

Example:

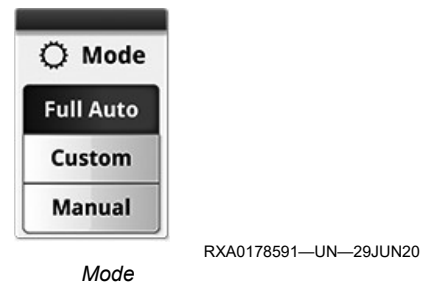

NOTE: Different modules may be available for your application.

Mode — quick access to adjust the Transmission Mode.

Shortcut Keys

Add shortcut keys for this application to the shortcut bar using Layout Manager. See the G5 CommandCenter Operator's Manual.

Example:



NOTE: Different shortcut keys may be available for your application.

Backup Alarm — quick access to enable/disable the Backup Alarm.

KD34109,0000616-19-28FEB23

e18 Transmission Settings—Mode



Full AUTO

RXA0171357—UN—10OCT19

Full AUTO Mode

Full AUTO — adjusts Minimum Engine Speed automatically to maximize fuel economy under light loads. Load Anticipation responds to operation of rear hitch, SCVs, and PTOs. Engine speed Droop is maintained at maximum tractor power.



Custom

RXA0171356—UN—10OCT19

Custom Mode

Custom — customize settings for engine speed Droop, Minimum Engine Speed, and Load Anticipation reaction. See e18 Transmission Settings—Custom in this Operator's Manual section.



Manual

RXA0171358—UN—10OCT19

Manual Mode

Manual — all fuel economy and load control functions are manual.

KD34109,0000564-19-20JUN22

e18 Transmission Settings—Custom

Custom Settings are only available when transmission mode is set to Custom. See e18 Transmission Settings—Mode in this Operator's Manual section. Settings allow for increased efficiency depending on current operation.

NOTE: Some items only display if machine is equipped with the associated option.

Procedure to modify:

RXA0167122—UN—25MAR19
PTO OnRXA0167123—UN—25MAR19
PTO Off

Droop — percentage of maximum engine rpm change

before transmission shifts down. See e18 Transmission Settings—Droop in this Operator's Manual section.



PTO ON/OFF

RXA0167125—UN—21MAR19

Load Anticipation (PTO) — when enabled and PTO is in use, engine speed increases to obtain the desired PTO speed. Select ON to enable or OFF to disable.



Hitch ON/OFF

RXA0167126—UN—21MAR19

Load Anticipation (Hitch) — when enabled and hitch is lowered, engine speed increases as needed to reduce ground speed fluctuations. Select ON to enable or OFF to disable.



SCV ON/OFF

RXA0167127—UN—21MAR19

Load Anticipation (SCV) — when enabled, engages if flow rate is 25% or greater and/or SCV is set to continuous time detent. Engine speed increases as needed to reduce ground speed fluctuations or to provide desired hydraulic flow. Select ON to enable or OFF to disable.



Close

RXA0167129—UN—25MAR19

Select to close.

KD34109,0000565-19-23JUN22

e18 Transmission Settings—Droop

Adjust percentage of engine rpm drop before transmission downshifts. Lower percentage causes transmission downshifts earlier and to shift more. Higher percentage causes transmission downshifts later and to shift less.

NOTE: PTO On adjustments do not affect transmission operation for machines without PTO.

PTO On — use when operating PTO driven equipment to maintain a consistent rpm. Selection results in reduced rpm change before a transmission downshift.

PTO Off — use for implements that do not require a

consistent rpm range, such as pulling ground engaging equipment.

Procedure to Modify:

1. Select desired setting icon:



PTO On

RXA0167122—UN—25MAR19

- a. PTO On



PTO Off

RXA0167123—UN—25MAR19

- b. PTO Off



Increase/Decrease Value

RXA0167165—UN—21MAR19

2. Select (+) to increase or (-) to decrease value.



Close

RXA0167129—UN—25MAR19

3. Select to close.

KD34109,0000566-19-20JUN22


e18 Transmission Settings—ECO

ECO ON — adjust Minimum Engine Speed setting when ECO is enabled.

ECO OFF — adjust Minimum Engine Speed setting when ECO is disabled.

Procedure to Modify:

1. Select desired setting:

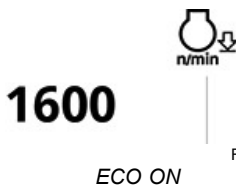

ECO ON

RXA0171380—UN—10OCT19

- a. ECO ON



1500

ECO OFF

RXA0171379—UN—10OCT19

- b. ECO OFF



Increase/Decrease Value

RXA0171328—UN—10OCT19

2. Select (+) to increase or (-) to decrease value.



Close

RXA0167129—UN—25MAR19

3. Select to close.

KD34109,0000567-19-20JUN22

e18 Transmission Settings—Max Speeds

Adjust settings for maximum speed in forward and reverse gears. Set Speed setting cannot exceed this setting and will automatically adjust accordingly.

Procedure to Modify:

1. Select desired setting icon:



Forward Max Speed

RXA0171384—UN—10OCT19

- a. Forward Max Speed



Reverse Max Speed

RXA0171385—UN—10OCT19

- b. Reverse Max Speed



RXA0171354—UN—10OCT19

Increase/Decrease Value

2. Select (+) to increase or (-) to decrease value.



RXA0167129—UN—25MAR19

Close

3. Select to close.

KD34109,0000568-19-20JUN22

PTO—General Information [Ag]

PTO Settings—Access

Access Application through Display:



Menu

RXA0167075—UN—20MAR19

1. Menu



Machine Settings

RXA0167076—UN—20MAR19

2. Machine Settings



PTO

RXA0167685—UN—30APR19

3. PTO

Access Application through Navigation Bar:



PTO

RXA0167686—UN—30APR19


Press PTO button on navigation bar below display.

KD34109,00004BE-19-08DEC21

PTO Settings

The PTO application is used to access and adjust PTO settings.

NOTE: Some items only display if machine is equipped with the associated option.

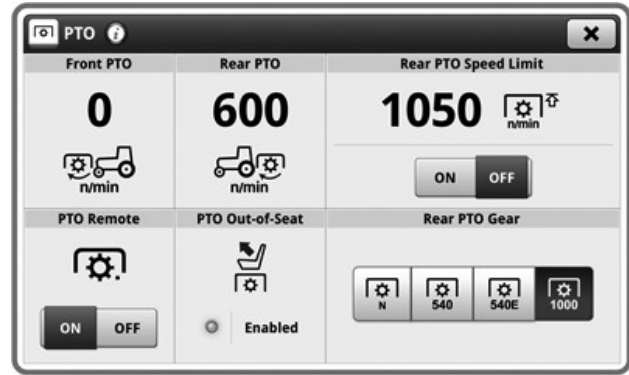

RXA0187232—UN—27JUN22

PTO Example

Items Accessible on PTO Main Page:



Front PTO

RXA0167687—UN—30APR19

Front PTO (If Equipped) — view current speed of front PTO. Operate PTO using front PTO lever and correct engine speed. See Operate PTOs in this Operator's Manual section.



Rear PTO

RXA0167688—UN—30APR19

Rear PTO — view current speed of rear PTO. Operate PTO using rear PTO lever and correct engine speed. See Operate PTOs in this Operator's Manual section.



PTO Out-of-Seat - Enabled

RXA0187302—UN—28JUN22

PTO Out-of-Seat — indicates when the operator can be out of the seat and maintain PTO engagement. See PTO Settings—PTO Out-of-Seat in this Operator's Manual section.



RXA0187405—UN—27JUN22

PTO Remote — select ON to enable or OFF to disable external PTO switches (if equipped). See External PTO Switches (If Equipped) in this Operator's Manual section.



RXA0167689—UN—30APR19

Rear PTO Speed Limit

Rear PTO Speed Limit — adjust speed of rear PTO at maximum throttle. See PTO Settings—Rear PTO Speed Limit in this Operator's Manual section.

NOTE: 7R Tractors with IVT: If the PTO is in use and PTO Speed Limit is ON, the tractor decelerates slower during shuttle shift to maintain the PTO speed. To avoid slower deceleration, set PTO Speed Limit to OFF.



RXA0167628—UN—26APR19

ON/OFF

Rear PTO Speed Limit Toggle — select ON to enable or OFF to disable Rear PTO Speed Limit setting.



RXA0167690—UN—30APR19

Rear PTO Gear Example

IMPORTANT: Incorrect PTO speed could result in severe damage to implement. Before engaging PTO, make sure that selected PTO gear is correct for attached implement.

NOTE: Gears displayed vary by machine.

Rear PTO Gear — select rear PTO gear for current operation.



RXA0167071—UN—21MAR19

Advanced Settings

Advanced Settings — access further adjustments and

less common settings. See PTO Settings—Advanced in this Operator's Manual section.

Run Page Modules

Add modules for this application to run pages using Layout Manager. See the G5 CommandCenter Operator's Manual.

Example:



RXA0167691—UN—30APR19

ON/OFF

NOTE: Different modules may be available for your application.

PTO Remote — quick access to enable/disable external PTO switches.

Shortcut Keys

Add shortcut keys for this application to the shortcut bar using Layout Manager. See the G5 CommandCenter Operator's Manual.

Example:



RXA0167692—UN—30APR19

ON

NOTE: Different shortcut keys may be available for your application.

PTO Gear — quick access to enable/disable PTO gear.

kd34109,1665684230147-19-18APR23

PTO Settings—Advanced

Advanced settings allows you to access further adjustments and less common settings.

Items Accessible on Advanced Settings Page:



RXA0167700—UN—30APR19

Engagement Rate Selection Box


PTO Engagement Rate — select Rear or Front (if equipped) PTO Engagement Rate selection box to adjust rate at which PTO engages. See PTO Settings—Engagement Rate in this Operator's Manual section.

KD34109,00004C1-19-27AUG19

PTO Settings—Engagement Rate

PTO Engagement Rate page allows you to adjust the rate at which the PTO engages.

Procedure to Modify:

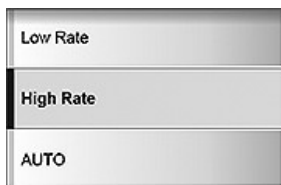

RXA0167693—UN—30APR19

Engagement Rate List

Select best rate for current operation.

- Low Rate is used when gradual PTO start-up is required or if AUTO engagement is too aggressive or inconsistent.
- High Rate is used for applications where PTO clutch engagement must be aggressive.

IMPORTANT: Avoid power train damage. If operator is experiencing problems with PTO clutch engagement in AUTO setting, change setting to High Rate.

- AUTO is used for most implements and is factory setting in CommandCenter. This setting provides software logic to determine engagement rate for PTO clutch, based on PTO speed sensor feedback. If PTO does not turn fast enough during initial PTO clutch engagement, engagement rate is automatically increased to avoid clutch slip and PTO shutdown.



RXA0167694—UN—30APR19

OK

Select OK to exit and save changes.



RXA0167695—UN—30APR19

Cancel

Select Cancel to exit without saving changes.

KD34109,00004C0-19-20JUN22

PTO Settings—Rear PTO Speed Limit

Rear PTO Speed Limit allows you to adjust speed of rear PTO at maximum throttle. When enabled, engine speed is also limited in relation to PTO speed. If max engine speed is also enabled, lower limit applies.

NOTE: Only available on machines equipped with an electronic shift PTO.

Procedure to Modify:



RXA0167699—UN—30APR19

Adjust Rear PTO Speed Limit

Select (+) to increase or (-) to decrease setting. Value is shown in display box.



RXA0167687—UN—30APR19

Front PTO Speed

View current front PTO speed (if equipped).



RXA0167688—UN—30APR19

Rear PTO Speed

View current rear PTO speed.



RXA0167129—UN—25MAR19

Close

Select to close.

KD34109,00004C2-19-10JUN22

PTO Settings—PTO Out-of-Seat

PTO Out-of-Seat allows PTO engagement while out of the seat. When the operator leaves the seat, a page displays to enable out-of-seat operation (an audible warning sounds and a service alert indicator on the corner post display flashes). The page also displays when the PTO is engaged for the first time after starting the engine (with or without leaving the seat).

If the page is ignored, the PTO will automatically

disengage after 7 seconds. A page does not display if PTO Out-of-Seat is already enabled. The operator can also select PTO Remote ON/OFF to enable PTO Out-of-Seat on the PTO main page.

Procedure to Modify:




Select Enable PTO Out-of-Seat to maintain PTO engagement while out of the seat.




Select close to allow the PTO to disengage when the operator is out of the seat.

Status Indicators:

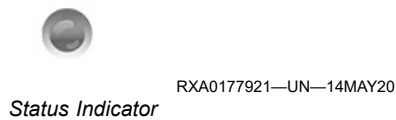


- **Green Indicator** — the indicator is illuminated green when PTO Out-of-Seat is enabled.
- **Gray Indicator** — the indicator is not illuminated and appears gray when PTO Out-of-Seat is OFF.

Enabled



Enabled Indicator — the indicator displays when PTO Out-of-Seat is enabled.


OFF



OFF Indicator — the indicator displays when PTO Out-of-Seat is OFF.

KD34109,00004C3-19-18APR23


Operating Instructions (EU 1322/2014)

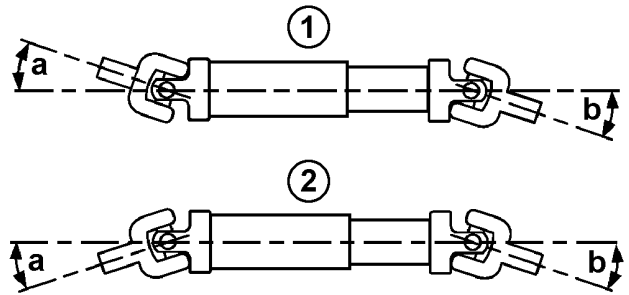

LX1049749

LX1049749—UN—21MAY10

Articulation on drive shaft

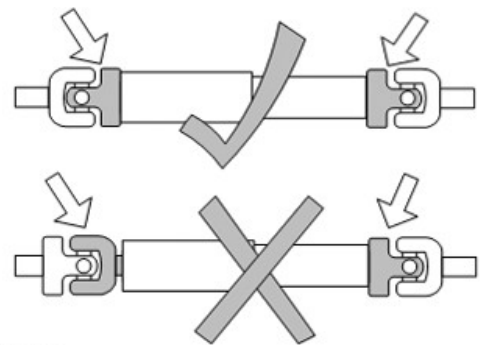

LX1049900

LX1049900—UN—22FEB11

Align forks correctly

- 1—Z-shaped layout
- 2—W-shaped layout

Angles (a) and (b) at universal joints should be equal at both ends of drive shaft.

In applications where this does not occur (e.g. sharp turns with PTO engaged), it is recommended to use a continuous-velocity drive shaft.

NOTE: Two schematic drawings do not show any guards on drive shaft. A guard is mandatory when using drive shafts.

IMPORTANT: Only operating conditions described in Operator's Manuals of various implements are permitted. This applies to maximum permissible angle of articulation, to use of freewheel clutches and overload clutches, and to prescribed amount of overlap when shaped pipes are pushed together.

IMPORTANT: Before using a PTO-driven implement, take action to ensure that drive shaft is lubricated regularly. Comply with instructions in Operator's Manual provided by manufacturer.

IMPORTANT: On multi-component, telescopic drive shafts, yokes at each end must be aligned as shown. Yokes at each end must NOT be at 90° to one another (see arrows in illustration on right-hand side).

GH15097,00007F0-19-08JUN22

Operate PTOs

PTOs are engaged using CommandARM PTO control levers. See CommandARM PTO Control Lever in CommandARM Controls section of this Operator's Manual. Once engaged for use with the machine in motion, use the correct engine speed listed in Select Correct Engine Speed in this Operator's Manual section.

CAUTION: Avoid personal injury. Stop engine and PTO driveline before adjustment or connections are made, or before cleaning PTO-driven equipment. Always disengage PTO when not in use.

IMPORTANT: Avoid PTO clutch damage. If operating PTO with excessive load, PTO automatically disengages. Wait 15 seconds before attempting to re-engage. If a problem occurs during re-engagement, try decreasing PTO speed.

If PTO disengages during start-up in cold-weather operation, wait 5 minutes before re-engaging.

NOTE: Rear PTO automatically disengages if:

- PTO speed is less than 100 rpm for more than 1 second.
- Engine speed drops below 500 rpm to prevent engine from stalling.


Front PTO (if equipped) automatically disengages if:

- 7R and 8R Tractors: Clutch slip is greater than 40% for more than 1 second.
- 8R Tractors: Clutch slip is greater than 10% for more than 45 seconds.
- 7R and 8R Tractors: Engine speed drops below 500 rpm to prevent engine from stalling.

For information on corner post display indicators, see Corner Post Display in Corner Post Display section of this Operator's Manual.

NOTE: If the engine is stopped while the PTO is running, the PTO will not operate when the engine is restarted. The lever must be re-engaged to operate the PTO.

Lever Adjustments:

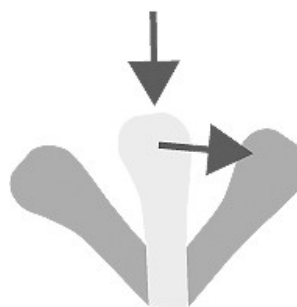

Engage PTO

RXA0167697—UN—30APR19

Push lever down and forward to engage PTO. Lever will return to center.



Disengage PTO

RXA0167696—UN—30APR19

Pull lever back to disengage PTO. Lever will return to center.

Outside of Cab Operation :

To operate the PTO outside of the cab using external PTO switches (if equipped), wheel/track speed must be less than 0.5 km/h (0.3 mph). See External PTO Switches in this Operator's Manual section.

KD34109,00004C4-19-20JUN22

External PTO Switches

External PTO switches (if equipped) allow you to operate PTOs from outside the cab. Front PTO external switches are on the front of the machine. Rear PTO external switches are on the rear of the machine.

Procedure to Modify:



RXA0187405—UN—27JUN22

1. Select ON to enable remote PTO switches on PTO main page (an audible warning sounds and hazard warning lights flash).

NOTE: PTO Remote will also turn ON automatically, when pressing and releasing any external PTO remote switch.

2.



RXA0167698—UN—30APR19

Remote PTO Switch

Press and hold remote PTO switch. PTO starts slowly.

NOTE: If equipped with front and rear PTO and only one PTO is started with the remote PTO switch, hazard warning sound/lights continue. Enabling external PTO switches enables both front and rear PTO and the system recognizes that one of the PTOs has not started.

- If held for at least 4 seconds, hazard warning sound/lights turn off and PTO continues to operate.
- If released within 4 seconds, PTO slowly stops and hazard warning sound/lights continue.

To turn off PTO, press remote PTO switch (an audible warning sounds and hazard warning lights flash) or pull back PTO control lever inside cab.

To return PTO control lever back to normal function, disable remote PTO.

KD34109,00004C5-19-28JUN22

Select Correct Engine Speed


PTO			Engine Speed ^a rpm
Speed rpm	Shaft Diameter mm (in)	Spline	
1000	45 (1-3/4)	20	1895

^aTachometer displays current engine speed. See Corner Post Display in Corner Post Display section of this Operator's Manual.

KD34109,00005EA-19-20APR20


Rear PTO [Ag]

Use PTO Shield (If Equipped)

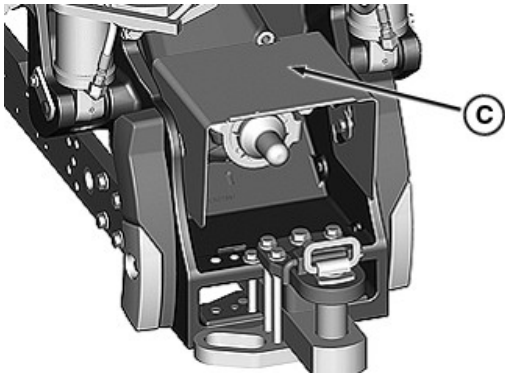

RXA0142441—UN—11JUN14
PTO Shield (Standard Position)


CAUTION: Avoid possible injury. Tractor PTO shield should be in place at all times except for special applications as directed in the implement Operator's Manual. Do not use the shield as a step.

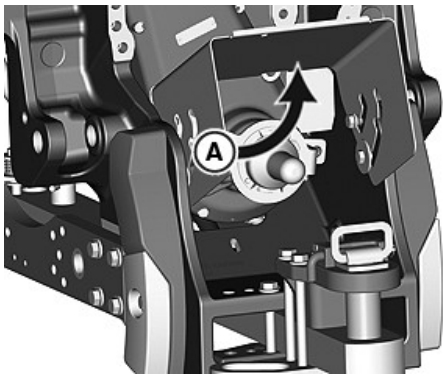

RXA0142439—UN—11JUN14

PTO shield can be tipped up in the raised position (A) to provide clearance while connecting the PTO shaft.

CAUTION: Avoid possible injury. Do not operate PTO with the shield in the raised position.

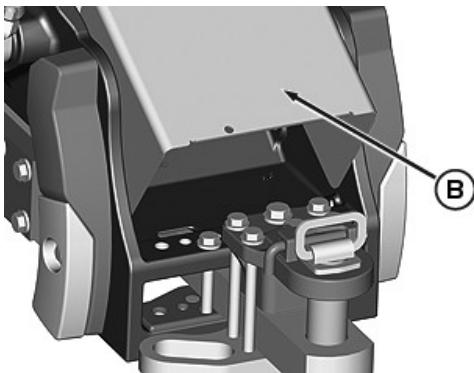

RXA0142440—UN—11JUN14

PTO shield can be lowered (B) to improve the drawbar visibility when the drawbar is being used without the PTO.

GH15097,0000648-19-17AUG22

Attach PTO-Driven Implement [Ag]




TS1644—UN—22AUG95

CAUTION: Entanglement in rotating driveline can cause serious injury or death.

Keep PTO shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. STOP ENGINE and be sure that PTO driveline is stopped before making adjustments, connections, or cleaning PTO-driven equipment.

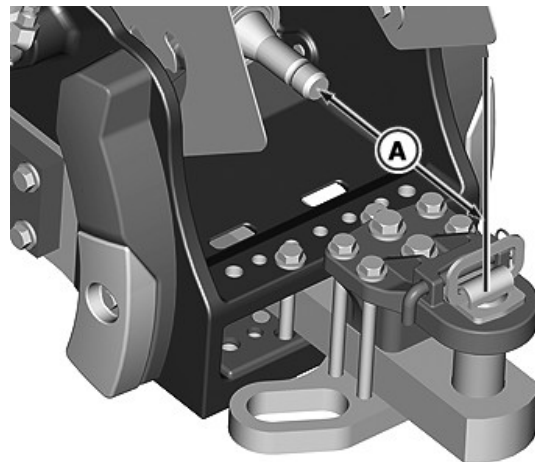

RXA0142225—UN—09JUN14

PTO Shaft	PTO Shaft End to Hitch Pin Hole Center (A) mm (in)
1000 rpm - 20 Splines ^a	508 (20)

^a45 mm (1-3/4 in) Shaft Diameter.

1. Lock the drawbar in the center position.
2. Remove the clevis assembly.
3. Attach the implement to the drawbar before connecting the PTO driveline. If the implement will be connected to the quick-hitch, be sure that the drawbar will not interfere.
4. Connect the drive line to the PTO shaft. Turn the shaft slightly by hand to line up splines. Be sure the yoke is in the correct position and firmly locked.

5. Move the PTO shield into position for the PTO shaft size being used.

WTEFIAT,000001F-19-17AUG22

Rear Hitch [Ag]

Hitch Lift Capacities

IMPORTANT: Avoid equipment damage. Never exceed axle and tire load capacities.

Rear Hitch Sustained Lift Capacity ^a kg (lb)						
Model		9RW				
		390	440	490	540	590
Hitch Category	4N/3	Optional			—	
	4N/4	Optional				
Lift Cylinder Diameter mm	100	6804 (15000)				
	110	9072 (20000)				

^aLift capacity per OECD CODE 2 measured 610 mm (24 in) behind the coupling points.

KD34109,00006DE-19-08OCT21

Rear Hitch Settings—Access

Access Application through Display:



Menu

RXA0167075—UN—20MAR19

1. Menu



Machine Settings

RXA0167076—UN—20MAR19

2. Machine Settings tab



Rear Hitch

RXA0169204—UN—26JUN19

3. Rear Hitch

Access Application through Navigation Bar:



Rear Hitch

RXA0169205—UN—26JUN19


Press rear hitch button on navigation bar below display.

KD34109,00004EE-19-08DEC21

Rear Hitch Settings

Rear Hitch application is used to access and adjust rear hitch settings.

NOTE: Some items only display if machine is equipped with the associated option.

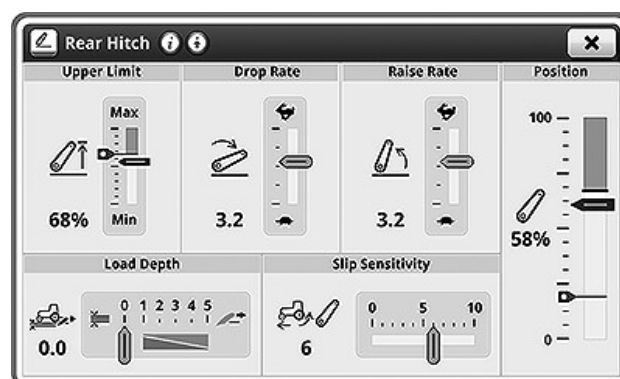

RXA0169346—UN—27JUN19

Rear Hitch Example


Items Accessible on Rear Hitch Main Page:



Upper Limit

RXA0169206—UN—25JUN19

Upper Limit — upper set point that cannot be exceeded unless using external switches. See Rear Hitch Settings—Upper Limit in this Operator's Manual section.

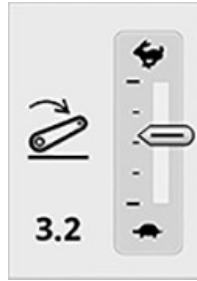

RXA0169207—UN—25JUN19

Drop Rate

Drop Rate — speed at which the rear hitch is lowered. See Rear Hitch Settings—Drop Rate in this Operator's Manual section.



RXA0169208—UN—25JUN19

Raise Rate

Raise Rate — speed at which the rear hitch is raised. See Rear Hitch Settings—Raise Rate in this Operator's Manual section.



RXA0169209—UN—26JUN19

Load Depth

Load Depth — sensitivity to changing terrain or soil conditions. See Rear Hitch Settings—Load Depth in this Operator's Manual section.




RXA0169210—UN—26JUN19

Slip Sensitivity

NOTE: Only available if equipped with radar and Load Depth is set to draft control mode.

Slip Sensitivity — how much the hitch reacts to wheel slip. See Rear Hitch Settings—Slip Sensitivity in this Operator's Manual section.

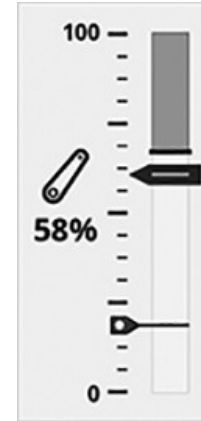

RXA0169211—UN—25JUN19

Position

Position — displays information for current rear hitch settings. See Rear Hitch Settings—Position in this Operator's Manual section. For hitch position adjustments, see Hitch Control Lever Adjustments in this Operator's Manual section.



RXA0167071—UN—21MAR19


Advanced Settings

Advanced Settings — access further adjustments and less common settings. See Rear Hitch Settings—Advanced in this Operator's Manual section.

Run Page Modules

Add modules for this application to run pages using Layout Manager. See the G5 CommandCenter Operator's Manual.

Example:

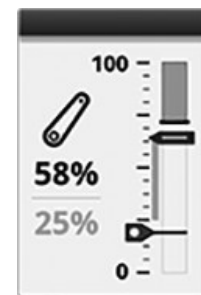

RXA0169212—UN—25JUN19

Position

NOTE: Different modules may be available for your application.

Position — quick access to position module.

KD34109,00004EF-19-28FEB23

Rear Hitch Settings—Upper Limit

Upper Limit page allows you to adjust Upper Limit setting and view current hitch settings. Rear hitch will only move above Upper Limit setting using external switches.

NOTE: Fully down position is 0% and fully raised position is 100%.

Procedure to Modify:



RXA0169139—UN—25JUN19

Adjust Upper Limit

Select (+) to increase or (-) to decrease Upper Limit set point. Value is shown in display box.



RXA0169140—UN—25JUN19

Position Indicator

Indicates current position of rear hitch on slider.



RXA0169141—UN—25JUN19

Upper Limit Indicator

Indicates position of Upper Limit on slider.



RXA0167129—UN—25MAR19

Close

Select to close.

Alternative Method to Modify:

Upper Limit Hitch Dial (If Equipped) — dial on CommandARM to adjust Upper Limit setting. A drop-down will display on CommandCenter to view adjustment. See CommandARM Hitch Controls in CommandARM Controls section of this Operator's Manual.

KD34109.00004F0-19-20JUN22

Rear Hitch Settings—Drop Rate

Drop Rate page allows you to adjust the speed at which the rear hitch is dropped and view current hitch settings.

CAUTION: Avoid injury or machine damage. Do not lower implement too quickly. Fully lowering implement should take at least 2 seconds.

Procedure to Modify:



RXA0169142—UN—25JUN19

Adjust Drop Rate

Select (+) to increase or (-) to decrease Drop Rate. Value is shown in display box.



RXA0169143—UN—25JUN19

Drop Rate Indicator

Indicates setting on slider.



RXA0167129—UN—25MAR19

Close

Select to close.

Alternative Method to Modify:

Drop Rate Hitch Dial (If Equipped) — dial on CommandARM to adjust Drop Rate setting. A drop-down will display on CommandCenter to view adjustment. See CommandARM Hitch Controls in CommandARM Controls section of this Operator's Manual.

KD34109.00004F1-19-20JUN22

Rear Hitch Settings—Raise Rate

Raise Rate page allows you to adjust the speed at which the rear hitch is raised and view current hitch settings.

Procedure to Modify:



Adjust Raise Rate

RXA0169142—UN—25JUN19

Select (+) to increase or (-) to decrease Raise Rate. Value is shown in display box.



Raise Rate Indicator

RXA0169143—UN—25JUN19

Indicates setting on slider.



Close

RXA0167129—UN—25MAR19

Select to close.

KD34109,00004F2-19-29OCT19

Rear Hitch Settings—Load Depth

Load Depth control (draft response) allows control of movement of hitch while working. The higher the value, the larger the range of movement (more draft response). The lower the value, the smaller the range of movement (less draft response). Correct adjustment provides better control of implement depth and operating efficiency.

Procedure to Modify:



Adjust Load Depth

RXA0169213—UN—26JUN19

Select (+) to increase or (-) to decrease Load Depth setting. Value is shown in display box.

- For position control only, set Load Depth to 0.0. See Rear Hitch Settings—Position Control in this Operator's Manual section.
- Higher settings are used for draft control. See Rear Hitch Settings—Draft Control in this Operator's Manual section.



Load Depth Indicator

RXA0169214—UN—26JUN19

Indicates setting on slider.



Close

RXA0167129—UN—25MAR19

Select to close.

Alternative Method to Modify:

Load Depth Hitch Dial (If Equipped) — dial on CommandARM to adjust Load Depth setting. A drop-down will display on CommandCenter to view adjustment. See CommandARM Hitch Controls in CommandARM Controls section of this Operator's Manual.

KD34109,00004F3-19-20JUN22

Rear Hitch Settings—Slip Sensitivity

Slip Sensitivity page allows you to adjust how much the hitch reacts to wheel slip. The higher the setting, the more the hitch reacts. Slip Sensitivity setting only adjusts hitch up and takes priority over draft control setting, which adjusts hitch down. See Rear Hitch Settings—Draft Control in this Operator's Manual section. After wheel slip goes below slip setting, hitch will resume normal draft control. Appropriate setting depends on implement type, soil conditions, and tractor setup.

NOTE: Only available if equipped with radar and Load Depth is set to draft control mode.

Procedure to Modify:



Adjust Slip Sensitivity

RXA0169215—UN—26JUN19

Select (+) to increase or (-) to decrease setting. Value is shown in display box.



Slip Sensitivity Indicator

RXA0169214—UN—26JUN19

Indicates setting on slider.



Close

RXA0167129—UN—25MAR19


Select to close.

KD34109,00004F4-19-29OCT19

Rear Hitch Settings—Position

Position allows you to view current rear hitch information.


Items Accessible on Position Module:

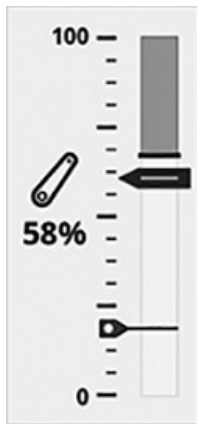

Position

RXA0169211—UN—25JUN19

Position Example — items may change based on status.

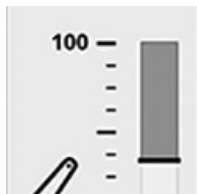

Upper Limit Setting

RXA0169222—UN—25JUN19

Upper Limit Setting — line indicates position of upper limit. Shaded area at the top indicates amount out of range (above upper limit).



Hitch Depth Indicator

RXA0169223—UN—26JUN19

Hitch Depth Indicator — indicates stored operating depth. See Hitch Depth Set Point in this Operator's Manual section.




Position Indicator

RXA0169140—UN—25JUN19

Position Indicator — indicates current position of rear hitch on slider. Use hitch control lever or adjustment dial to adjust hitch position. See Hitch Control Lever Adjustments in this Operator's Manual section.


Rear Hitch Position Statuses:

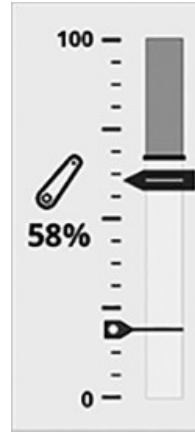

At Rest

RXA0169224—UN—25JUN19

Hitch at rest.

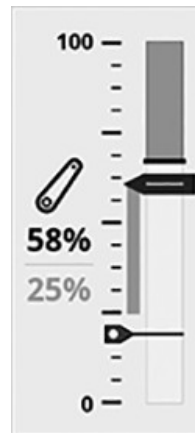

Commanded to Position

RXA0169225—UN—25JUN19

Hitch commanded to 25% position. Green value is commanded position and green line indicates distance between current hitch position and commanded position.



Float

RXA0169226—UN—25JUN19

Hitch set to float position. Icon displays above current hitch position value.



Float Unavailable

RXA0169227—UN—25JUN19

Float unavailable. Icon displays above current hitch position value.



Locked

RXA0169149—UN—25JUN19

Hitch locked. Icon displays below current hitch position value. See CommandARM Hitch Controls in CommandARM Controls section of this Operator's Manual.



Lock Damping

RXA0169228—UN—25JUN19


Lock damping enabled. Icon displays below current hitch position value.



Return to Lower Set Point Unavailable

RXA0169229—UN—25JUN19

Return to lower set point unavailable. Icon displays below current hitch position value.




Fast Lower

RXA0169230—UN—25JUN19

Hitch set to fast lower. Icon displays below current hitch position value.

KD34109,00004F6-19-20JUN22

Rear Hitch Settings—Position Control

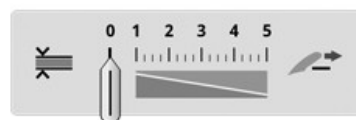

RXA0163992—UN—18JUL18

Use position control to operate non-ground engaging implements and implements that fully rest on gauge wheels to control depth. Set Load Depth to 0 for position control.

KD34109,00004F7-19-29OCT19

Rear Hitch Settings—Draft Control

Draft control helps to maintain operating depth of non-floating tillage equipment in rolling terrain. Draft control also helps if tractor altitude/pitch and rear wheel sinkage force implement deeper than desired. Higher Load Depth values respond better to rolling terrain but are more sensitive to soil density variation. Lower values stay more consistent with field soil changes but are less responsive to hills. Ideal setting depends on implement type and field conditions.

While in draft control mode, hitch can move above and below setting based on soil type and/or terrain. If setting is causing implement to go lower than desired, set to 1 and increase Slip Sensitivity.



Control or change operating depth by pressing resume button or performing lower detent with control lever. See CommandARM Hitch Controls in CommandARM Controls section of this Operator's Manual.

Examples of Load Depth Settings:




RXA0163993—UN—18JUL18

If soil varies, high value causes more depth variation.

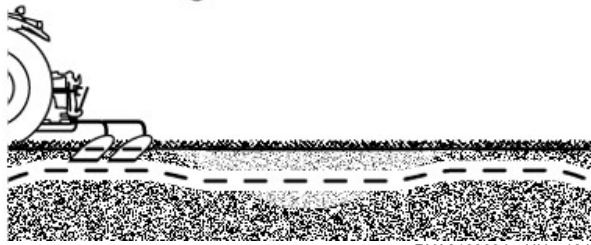

If soil varies, middle value causes less depth variation.


RXA0163994—UN—18JUL18

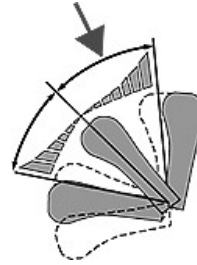

Raise Proportionally

RXA0169216—UN—26JUN19


Raise Proportionally — moving lever within this range will raise hitch. Rate of movement depends on how far lever is from center position.

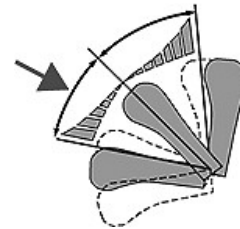

Lower Proportionally

RXA0169217—UN—26JUN19


Lower Proportionally — moving lever within this range will lower hitch. Rate of movement depends on how far lever is from center position.

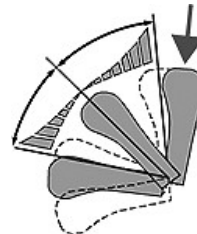

Raise Detent

RXA0169218—UN—26JUN19

Raise Detent — moving lever to this position and releasing will raise hitch to Upper Limit set point.

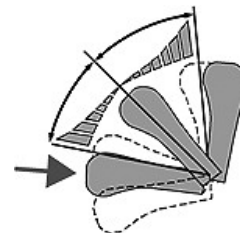

Lower Detent

RXA0169219—UN—26JUN19


NOTE: If machine is moving during this operation, hitch will also raise to lower set point.

Lower Detent — moving lever to this position and releasing will lower hitch to hitch depth set point. See Hitch Depth Set Point in this Operator's Manual section.



In rolling terrain, low value causes more depth variation.

RXA0163995—UN—18JUL18



In rolling terrain, high value causes less depth variation.


RXA0163996—UN—18JUL18

KD34109,00004F8-19-20JUN22

Hitch Control Lever Adjustments

Hitch control levers on the CommandARM allow you to adjust the hitch position. Levers will not raise hitch above upper limit.

Hitch Control Lever Adjustments:

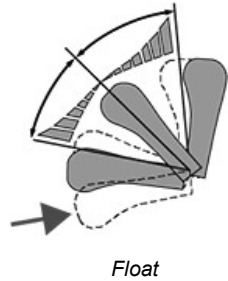

RXA0169220—UN—26JUN19

Float — moving lever to this position allows hitch to move freely and is useful when detaching implement. See Float Operation in this Operator's Manual section.

Alternative Method to Modify:

Hitch Depth Adjust Dial — dial on CommandARM to raise and lower hitch. Dial will not raise hitch above Upper Limit. See CommandARM Hitch Controls in CommandARM Controls section of this Operator's Manual.

KD34109,00004F9-19-20JUN22

Hitch Depth Set Point

Hitch depth set point (lower set point) is a frequently used operating depth that can be set and recalled. Controls used to adjust setting are found on CommandARM.

Procedure to Modify:

1. Move hitch to desired position using hitch control lever or adjustment dial. See Hitch Control Lever Adjustments in this Operator's Manual section.



SET

RXA0168026—UN—17MAY19

2. Select SET button to store set point.



Resume

RXA0168028—UN—17MAY19

NOTE: If hitch is below set point, resume will only engage if the tractor is moving.

3. Select resume button when wanting to return to set point position. Lower detent on control lever can also be used to recall set point.

KD34109,00004FA-19-20JUN22

Float Operation

Implements that fully rest on the depth gauge wheels for depth control require the hitch to float and follow the ground contour.


Put the hitch control lever in the float position. For more information on the hitch control lever, see CommandARM Hitch Controls in the CommandARM Controls section of this Operator's Manual. Lift links can be adjusted for the lateral float. See Adjust Lateral Float in this Operator's Manual section.

Forced Float

When the hitch is commanded to the lower set point but is unable to reach it, the hitch enters forced float mode. While in this mode, the hitch acts as though the control lever is in the float position. If the hitch reaches the lower set point while in forced float mode, the hitch returns to the mode that the lever is set to.

TS36762,00001DB-19-20JUN22

Rear Hitch Components

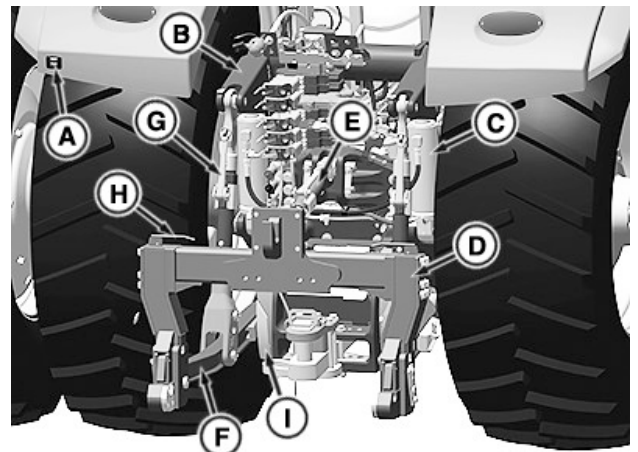

RXA0188513—UN—06FEB23

Rear Hitch Components


- A—External Hitch Switch (if equipped) (2 used)
- B—Lift Arm
- C—Lift Cylinder
- D—Quick-Hitch
- E—Center Link
- F—Draft Link
- G—Lift Link
- H—Quick-Hitch Handle
- I—Sway Block (if equipped)

All the components except the center link and quick-hitch are on the left-hand and the right-hand sides.

TO84419,0000118-19-02FEB23

External Hitch Switches

CAUTION: Prevent injury or tractor damage. Be sure that the transmission is in the **PARK** position before using the remote raise and lower switches. Stay clear of interference points when using the remote raise and lower switches.

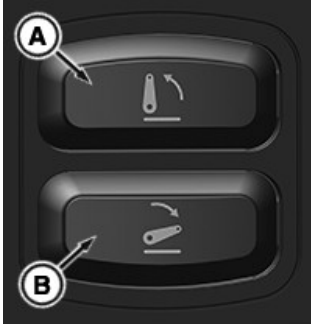

RXA0183164—UN—12MAY21

NOTE: The hitch control lever cannot be used simultaneously with the remote raise and lower switches.

External hitch switches (if equipped) allow hitch operation from outside the cab. Front external hitch switches are on the front of the machine. Rear external hitch switches are on the rear of the machine. Press and hold the remote switches to raise (A) or lower (B) the hitch. The hitch initially moves at slow speed when using the remote switches. However, the longer the switch is pressed the faster the hitch moves.


GH15097,00007EA-19-25JUN21

Hitch Manual Lowering

CAUTION: Avoid injury or death. Do not disconnect any hitch sensors, solenoids, or connectors from the hitch control valve while the engine is operating or the key switch is **ON**. Unexpected hitch movement may occur. Stay clear of the hitch area when starting the engine or manually lowering the hitch.

NOTE: The hitch cannot be raised manually. Both hydraulic and electrical power are required to raise the hitch.

Hitch manual lowering is possible when hydraulic pressure and/or electrical power is not available.

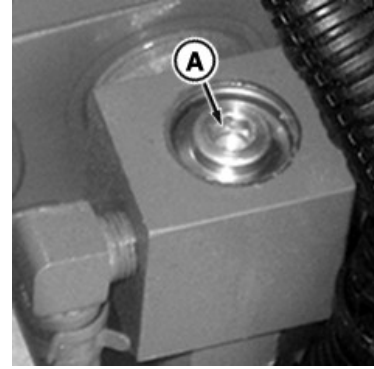


RXA0184070—UN—14JUN21

1. Remove the plug to access the manual lowering valve (A).
2. Turn the valve counterclockwise slowly to lower the hitch until the desired rate of drop is achieved.
3. Turn the valve clockwise and install the plug after the hitch has been lowered.

BH38674,0000BE4-19-28JUN21


Adjust Sway Blocks

IMPORTANT: Avoid equipment damage. Prevent interference of the draft links with the tires. Be sure that distance between the tires is at least 1168 mm (46 in) with equal distance from the middle of the tractor. If the distance between the tires must be less than 1168 mm (46 in), the sway is limited. See **Wheel, Tire, and Tread Guidelines** in **Wheels and Tires** section of this **Operator's Manual**.

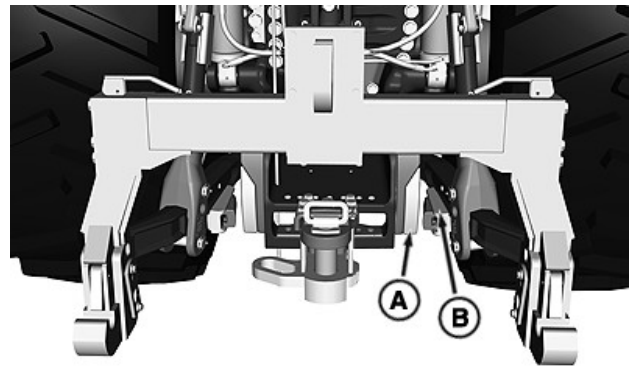

RXA0185724—UN—11OCT21

1. Install the sway blocks (A) with the thick end toward the frame to minimize side sway of the hitch.

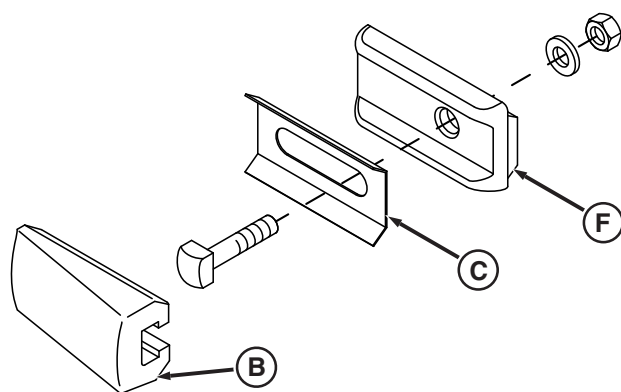

RXA0090041—UN—04AUG06

2. Adjust the bumper block (B) by loosening the lock nut and sliding forward or rearward to limit the amount of sway.
3. Tighten the attaching bolts to 230 N·m (170 lb·ft).
4. Remove sway blocks from both sides of the tractor to allow side sway when the hitch is lowered. Side sway is prevented when hitch is raised.
5. Install the sway blocks with the tapered sides outward from the frame.
6. If the hitch sway cannot be removed by adjusting the bumper block, install shims (C) as necessary between the bumper block and the spacer (F). Shims can be purchased from your John Deere dealer.


TO84419,0000119-19-11OCT21

Attach Implement to Quick-Hitch



CAUTION: Avoid injury or machine damage:

- Put the transmission in the **PARK** position and check the full range of the hitch motion for interference, binding, and PTO separation whenever an implement is attached.
- Make sure that the implement is correctly attached. Incorrect attachment can allow the implement to be pulled over the tractor wheel and onto the operator's station.
- Do not stand between the tractor and implement.

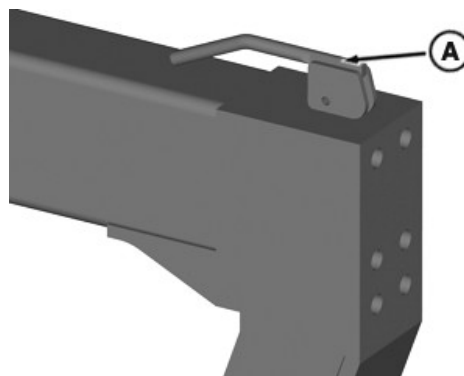

RXA0184116—UN—14JUN21


1. Pull up on the coupler latch handles (A).
2. Extend the hitch control lever until the quick-hitch hooks are lower than the implement hitch pins. For more information on the hitch control lever, see CommandARM Hitch Controls in the CommandARM Controls section of this Operator's Manual.
3. Back up the tractor to the implement.
4. Raise the hitch enough to engage the implement pins into the hooks.
5. Push the coupler latch handles down to lock the implement to the quick-hitch.
6. Connect the hydraulic hoses and the electrical connections.

IMPORTANT: Check for implement interference. Drawbar removal may be necessary.

7. Slowly retract the hitch control lever to raise the implement. Lower the implement to ground and adjust the upper height limit control if necessary.

TO84419,000011A-19-23JUN22

Detach Implement from Quick-Hitch

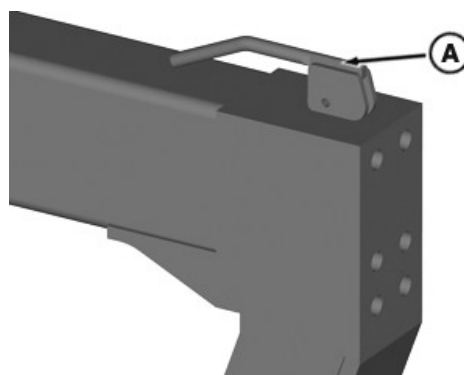

RXA0184116—UN—14JUN21

1. Raise both latch handles (A) with the implement raised.
2. Disconnect the hydraulic hoses and the electrical connections.
3. Lower the implement to the ground. Continue


lowering the quick-hitch until the hook clears the implement hitch pins.

4. Carefully drive the tractor away from the implement.

TO84419,000011B-19-09SEP21

Adjust Implement Level

1. Adjust the center link to level the implement front-to-rear:

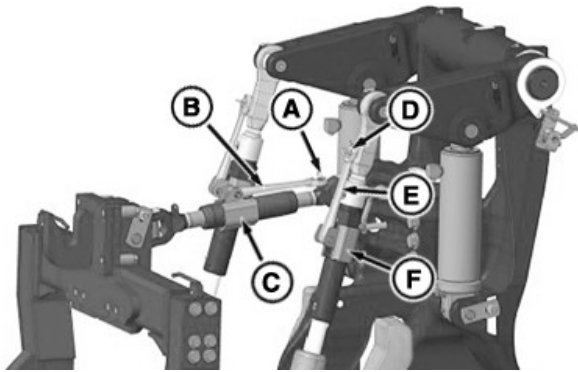


RXA0180511—UN—24NOV20

- a. Remove the lock ring (A).
 - b. Disengage the adjustment handle (B).
 - c. Slide the adjustment sleeve over the adjustment lock and use the handle to rotate the body of the center link (C) to adjust the length of the center link.
 - d. Measure between the centers of attaching pins. The adjustment range is 726.0—881.0 mm (28.6—34.7 in).
 - e. Engage the adjustment handle to lock it down.
 - f. Install the lock ring to hold the center link in position.
2. Adjust the left-hand and right-hand lift links to level the implement side-to-side:
 - a. Remove the lock ring (D).
 - b. Disengage the adjustment handle (E).
 - c. Slide the adjustment sleeve over the adjustment lock and use the handle to rotate the body of the lift link (F) to adjust the length of the lift link.
 - d. Measure between the centers of the attaching pins. The adjustment range is 1110.0—1270.0 mm (43.7—50.0 in).
 - e. Engage the adjustment handle to lock it down.
 - f. Install the lock ring to hold the center link in position.

RW29387,000061E-19-17JUN21

Adjust Lateral Float

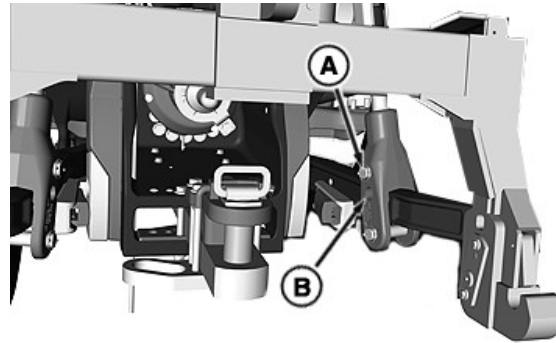

RXA0141373—UN—16JUN14

Place the lateral float pins in the upper holes (A) to hold the implement rigid.


Put the lateral float pins in the lower holes (B) of the draft arms for the float position. The draft links raise slightly as the implement follows the ground surface.

RW29387,000061F-19-08OCT21

Hitch Conversion—Category 4N/4/3 Convertible Quick-Hitch

Quick-hitch is convertible to Category 4, 4N, or 3. Use Category 4 whenever possible, especially for heavy loads. Greater width gives more strength.

NOTE: See your John Deere dealer for the Category 3 hook required for the Category 3 configuration.

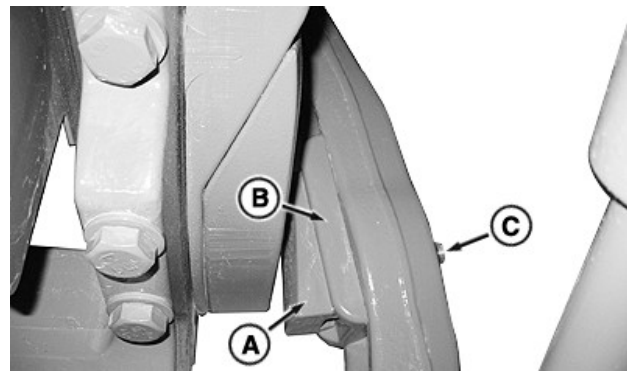

RXA0164019—UN—20JUL18

1. Adjust the bumper (A) and spacer (B) placement for the desired configuration:
 - Category 4: bumper and spacer on the inside of the hitch arm
 - Category 3/4N: bumper on the inside of the hitch arm and the spacer on the outside of the hitch arm

To adjust the bumper and the spacer:


- a. Remove the cap screw and nut (C).
- b. Position the spacer on the inside or the outside

of the hitch arm to achieve the desired configuration.

- c. Position the bumper on the inside of the hitch arm.
- d. Install the cap screw and nut. Tighten to 230 N·m (170 lb·ft).
- e. Repeat the procedure on the opposite side.
- f. Cycle the hitch switch to ensure that there is no interference between the hitch and the sway blocks.


CAUTION: Avoid injury. Use proper lifting device when converting the coupler.

2. Support the center of the quick-hitch.

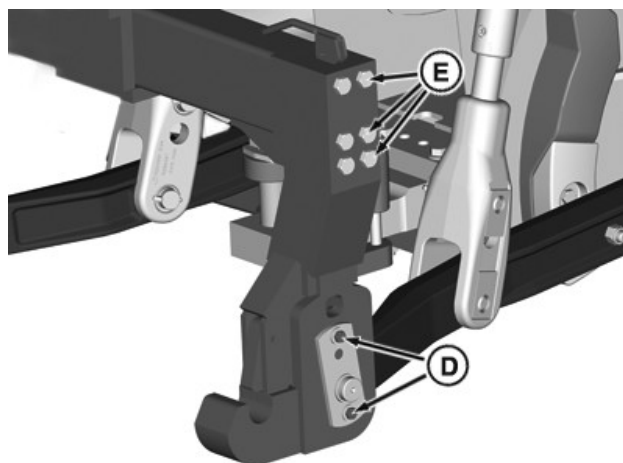

RXA0184146—UN—21JUN21

3. Remove the pin retaining bolts (D) and the pins from the draft link.
4. Remove the side member cap screws (E).

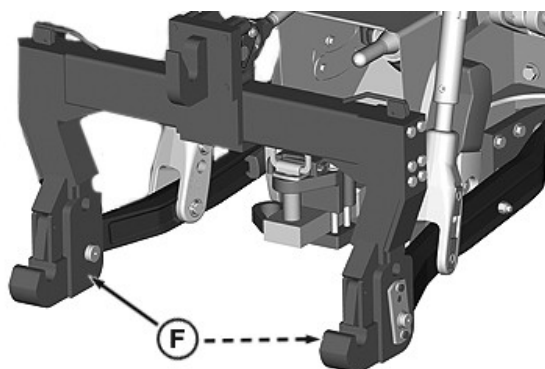


RXA0184147—UN—22JUN21

Quick-Hitch Shown in Category 4N Configuration

5. Swap the quick-hitch side members (F) to configure as wide (Category 4) or narrow (Category 4N). Tighten the cap screws to 490 N·m (360 lb·ft).


IMPORTANT: Before removing the roll pin, keep pressure under the lower coupler hook to hold the lock rod in place.

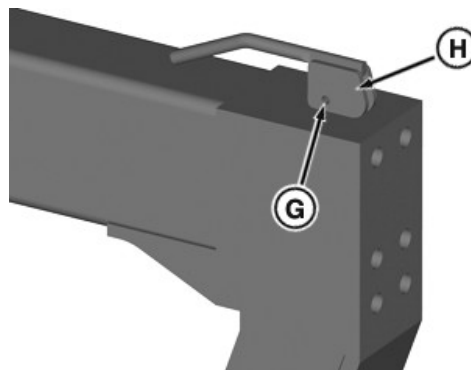

RXA0184177—UN—22JUN21

6. Flip the latch handle around by removing the roll pin (G).
7. Turn the coupler latch handle inward (H) and reinstall the roll pin.
8. Flip handle down in the lock position.

NOTE: See your John Deere dealer for Category 3 hook required for the Category 3 configuration.

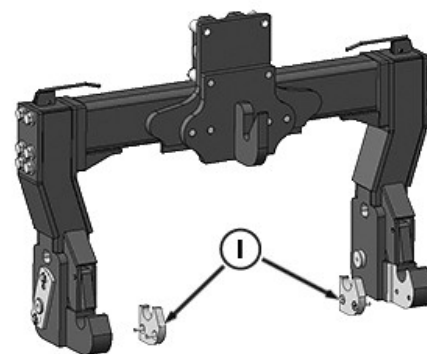

RXA0184178—UN—22JUN21

Quick-Hitch with Category 3 Hook Shown

9. Category 3 conversion only: remove the shims (I). Replace the shims when converting from Category 3 to Category 4N/4.


RW29387,0000620-19-17MAY23

Convert Category 4N/3 Convertible Quick-Hitch Lower Hooks

CAUTION: Avoid injury. Use proper lifting device when converting the coupler. A second person is recommended to align the components during the conversion.

IMPORTANT: If the Category 4N lower hooks are to be used on Category 3 implements, bushings are needed over the Category 3 pins. Bushings can be purchased through your John Deere dealer.

Lower hooks are not marked for left-hand or right-hand side. Do not move the lower hooks from one side to the other.

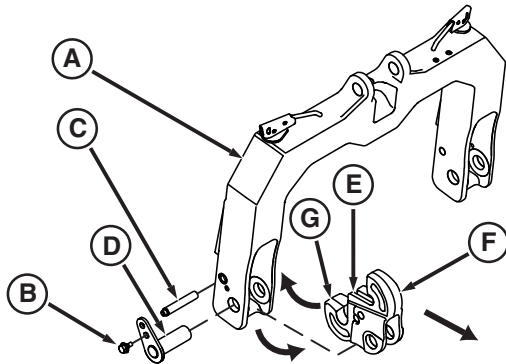

RXA0091394—UN—07NOV06

1. Support the quick-hitch frame (A).
2. Remove the cap screw (B).
3. Remove the retainer (C), then the pin (D).

NOTE: Because the lower hook (E) has a Category 3 hook (F) on one end and a Category 4N hook (G) on the opposite end, it is used for both Category 3 and 4N simply by turning it end for end.


4. Remove the lower hook by rotating it down and to the rear of the coupler, then sliding it out at the front of the coupler.
5. Install the lower hook with the desired end facing rearward. Using a reverse motion of removal, rotate it up and in.
6. Install the pin, retainer, and cap screw. Tighten to 100 N·m (74 lb·ft).

BH38674,0000BEC-19-14SEP21

Convert Category 4N/3 Convertible Quick-Hitch Upper Hook


CAUTION: Avoid injury. Use proper lifting device when converting the coupler. A second person is recommended to align the components during the conversion.

IMPORTANT: It is recommended to use Category 4 upper hook if the implement setup allows. The Category 3 upper hook may be overloaded with very high draft loads.

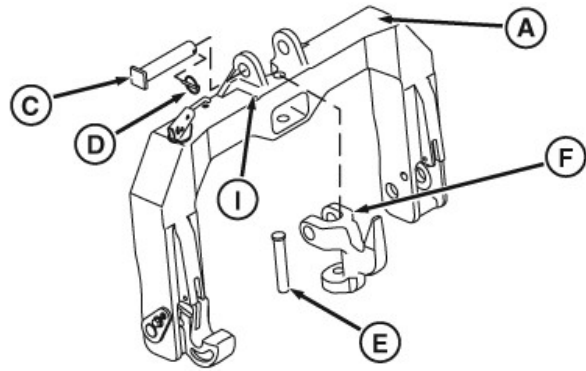


RXA0142708—UN—17JUN14

1. Support the quick-hitch frame (A).

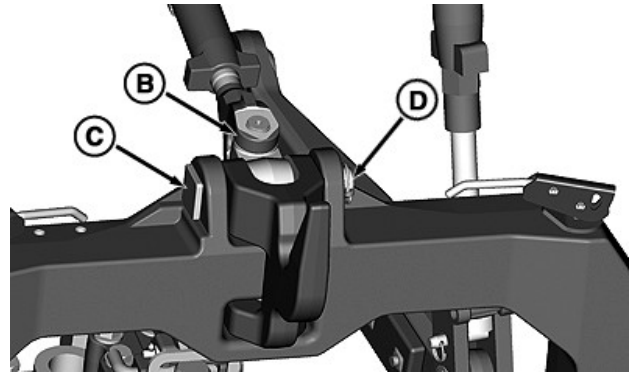

RXA0142706—UN—17JUN14

2. Remove the quick-lock pin (D) and pin (C) to release the center link (B).
3. Remove the pin (E) and the upper hook (F).

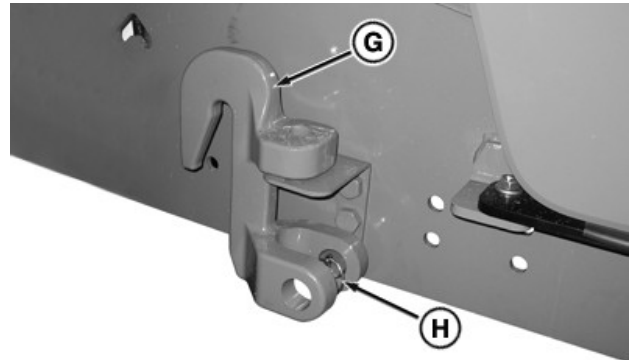

RXA0147950—UN—29APR15

4. Remove pin (H) to remove the stored upper hook (G).

NOTE: Pin (C) must be installed left to right. Shoulder (I) will keep retaining the pin (B) from being installed if the pin (C) is installed incorrectly.

5. Place the upper hook (F) in the storage location.
6. Install the upper hook (G) on the quick-hitch.

GH15097,000092F-19-21SEP21


Rear Hitch [Ag]

Drawbar Load Limitations [Ag]

For information using scraper drawbars, see Scraper Applications [Ag] in this Operator's Manual section.

IMPORTANT: Avoid tractor and attachments damage. Heavy implements, rough terrain, and speed can place excessive strain on the drawbar.

Never exceed maximum static vertical load limit or the drawbar and PTO position limitations.

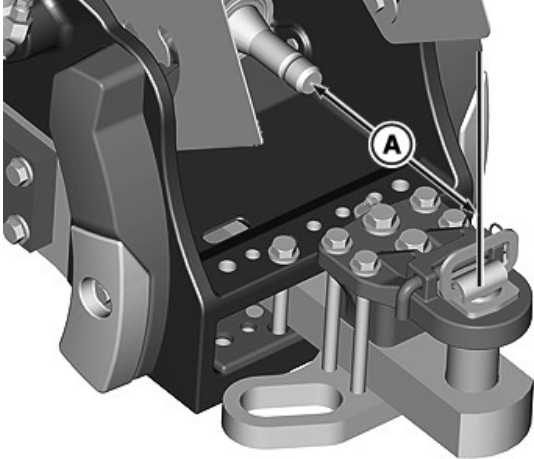

RXA0179941—UN—24SEP20

Drawbar Load Limits Based on Drawbar Position and Length				
Drawbar		End of PTO Shaft to Drawbar Pin Hole Distance (A) mm (in)	Drawbar Load Limits	
Category	Position		Vertical Load kg (lb)	Towed Mass kg (lb) ^a
4 ^{bc}	Short	358 (14)	2470 (5450) ^d	24000 (52910)
	Regular (PTO)	508 (20)	2270 (5000)	
4 ^{bc} and Reinforcement Kit	Short	358 (14)	4900 (11000) ^d	
	Regular (PTO)	508 (20)	4080 (9000)	
4 Heavy-Duty ^{bc}	Short	358 (14)	4900 (11000) ^d	
	Regular (PTO)	508 (20)	4080 (9000)	
5 ^{ef}	Short	358 (14)	5440 (12000) ^d	26000 (57320)
	Regular (PTO)	508 (20)	4080 (9000)	

^aMechanical Towing Couplings certified per 2015/208 - Annex XXXIV.

^b51 mm (2 in) diameter pin.

^cCategory 4 drawbar is not available on tractors with engine power greater than 470 hp (300 PTO kW) per ISO 6489-3.

^d3000 kg (6614 lb) applies to EU, EAEU, CIS, Georgia, and Ukraine tractors only. Mechanical Towing Couplings certified per 2015/208 - Annex XXXIV.


^e70 mm (2.75 in) diameter pin.

^fIf equipped with Category 4 conversion pin, pin diameter is 51 mm (2 in).

EC82310,0000A25-19-20JUN23

Scraper Applications [Ag]

IMPORTANT: Avoid tractor damage. This tractor is designed solely for use in agricultural or similar operations. The warranty period is limited to 90 days if heavy-duty land-leveling use exceeds 150 hours per year. For more information and exceptions, see Agricultural Heavy-Duty Land Leveling Package [Ag] in Specifications section of this Operator's Manual.

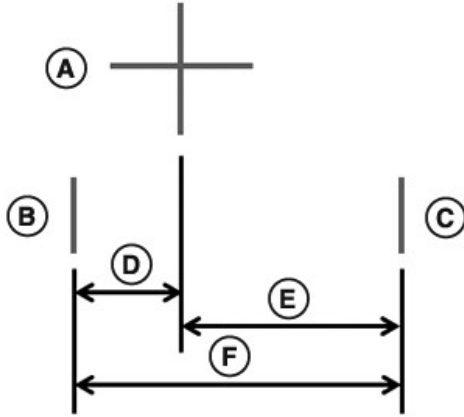

RXA0179306—UN—21AUG20

A—Rear Axle Center Line
B—Front Drawbar Pin Center Line
C—Rear Drawbar Pin Center Line
D—Front Drawbar Pin Distance in Front of Rear Axle
E—Vertical Load Distance Behind Rear Axle
F—Drawbar Length

Maximum Vertical Load kg (lb)	Maximum Vertical Load Distance Behind Rear Axle (E) mm (in)	Front Drawbar Pin Distance in Front of Rear Axle (D) mm (in)
8359 (18500)	980 (38.6)	426 (16.8)

For load and distance measurement procedures, see Calculate Static Vertical Drawbar Load and Calculate Vertical Drawbar Load Distance Behind Rear Axle in this Operator's Manual section.


EC82310,0000F1A-19-03MAR22

Scraper Applications [Scraper]

IMPORTANT: Avoid tractor damage. Never exceed the maximum drawbar vertical load.

See your John Deere dealer if the:

- Drawbar is not John Deere approved.
- Drawbar vertical load or distance behind the rear axle exceeds the following table values.

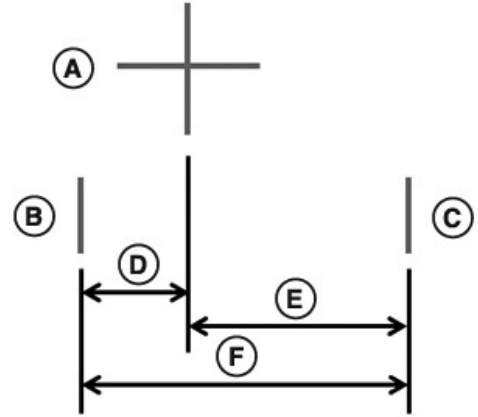

RXA0179306—UN—21AUG20

A—Rear Axle Center Line
B—Front Drawbar Pin Center Line
C—Rear Drawbar Pin Center Line
D—Front Drawbar Pin Distance in Front of Rear Axle
E—Vertical Load Distance Behind Rear Axle
F—Drawbar Length

Maximum Vertical Load kg (lb)	Maximum Vertical Load Distance Behind Rear Axle (E) mm (in)	Front Drawbar Pin Distance in Front of Rear Axle (D) mm (in)
12020 (26500)	482 (19.0)	426 (16.8)

For load and distance measurement procedures, see Calculate Static Vertical Drawbar Load and Calculate Vertical Drawbar Load Distance Behind Rear Axle in this Operator's Manual section.

WTEFIAT,000003C-19-15FEB22


Calculate Static Vertical Drawbar Load

For the static vertical drawbar load:


1. Measure and record the front and rear axle weights of the tractor without the implement connected.
2. Add the front and rear axle weights together for the total bare tractor weight.
3. Measure and record the front and rear axle weights of the tractor with the loaded implement connected.
4. Add the front and rear axle weights together for the total loaded tractor weight.
5. Subtract the total bare tractor weight (step 2) from the total loaded tractor weight (step 4).

KD34109,0000610-19-17NOV21

Calculate Vertical Drawbar Load Distance Behind Rear Axle

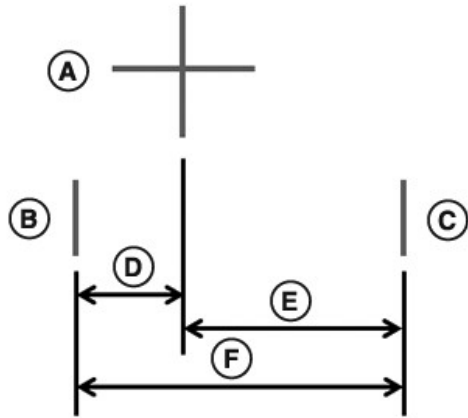

RXA0179306—UN—21AUG20

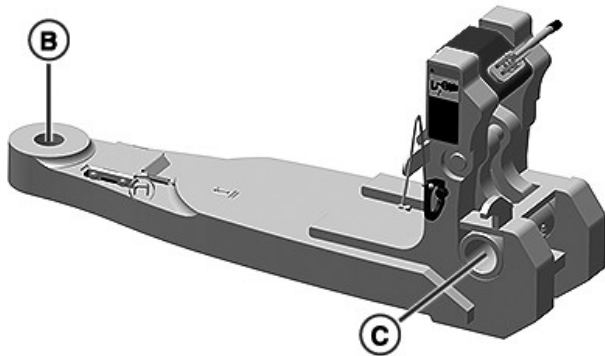

RXA0179874—UN—23SEP20

For vertical drawbar load distance behind the rear axle (E):

1. Measure the length of the drawbar (F) from the front drawbar pin center line (B) to the rear drawbar pin center line (C).
2. Determine the rear axle center line (A). Subtract the front drawbar pin distance in front of the rear axle (D) from the drawbar length (F). For the front drawbar pin distance in front of the rear axle (D), see the table in Scraper Applications [Ag] or Scraper Applications [Scraper] in this Operator's Manual section.

NOTE: If the front drawbar pin distance in front of the rear axle value provided is negative, subtracting a negative will provide a distance longer than the measured drawbar length.

KD34109,0000611-19-22FEB22

Category 5 Heavy-Duty Drawbar Support Load Limitations [Ag]

IMPORTANT: Heavy-duty drawbar support must be used when maximum static vertical load exceeds 2043 kg (4500 lb).


Drive slowly when moving heavy draft loads.

For maximum vertical static drawbar loads, see Drawbar Load Limitations [Ag] s in this Operator's Manual section.

AK08008,00006B8-19-23FEB22

Adjust Drawbar [Ag]


IMPORTANT: Drawbar must be positioned, as instructed in Attach PTO-Driven Implement in PTO, Hitch, and Drawbar section of this Operator's Manual, for PTO-driven implement.

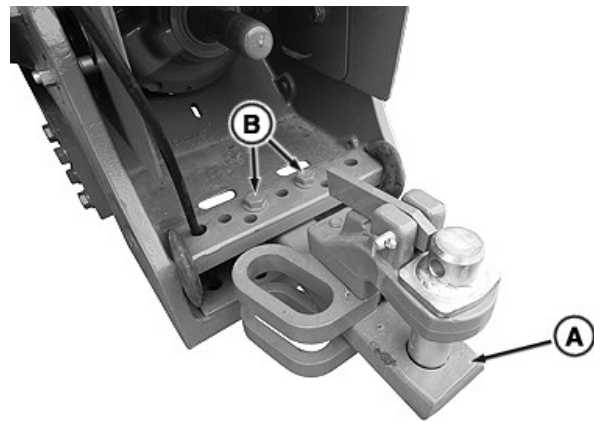

RXA0186159—UN—29NOV21

Adjust Drawbar Length:

1. Loosen the drawbar locking bolts (B).

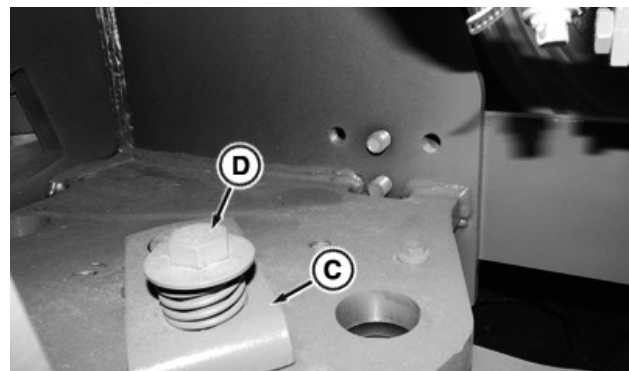

RXA0186160—UN—29NOV21

2. Remove the front pivot pin retainer cap screws, washers, and spacers (D). Remove the pivot pin retainer (C).
3. Slide the drawbar (A) to the desired position.
4. Install the pivot pin retainer, spacers, washers, and cap screws. Tighten the cap screws to 435 N·m (322 lb·ft).
5. Install and tighten the drawbar locking bolts to 435 N·m (322 lb·ft).


Adjust Drawbar Side-to-Side:

1. Remove the drawbar locking bolts.
2. Slide the drawbar to the desired position.
3. Install a locking bolt against each side of the drawbar.
Tighten to 435 N·m (322 lb·ft).

GH15097,0000640-19-16FEB22

Install Drawbar or Quick-Attach in Short Drawbar Support [Scraper]

Use the scraper drawbar when the scraper tongue weight exceeds the design specifications of agricultural tractor drawbar. The scraper drawbar is shorter, which minimizes the weight transfer to the rear axle. Follow scraper recommendations for the drawbar installation.

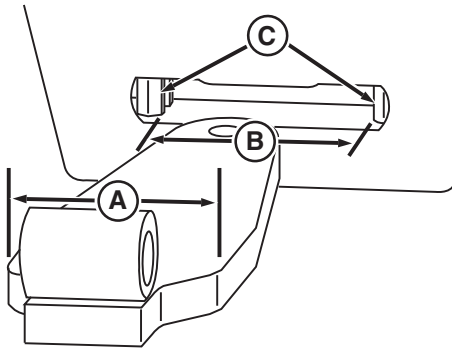


RXA0064878—UN—23JAN03

IMPORTANT: Adjust the hex bushings (C) when installing the scraper drawbar.


NOTE: All four (4) locking bolts should be kept clean to maintain maximum torque.

1. Loosen the drawbar locking bolts and bushings, underside of support.
2. Measure the width of the drawbar area (A) resting on the drawbar support.
3. Rotate the bushings so that the distance (B) between bushings is as close to the drawbar width as possible.

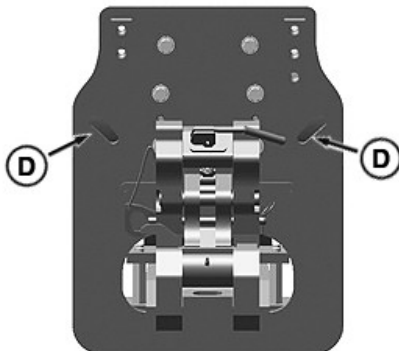

RXA0142716—UN—21JUL14

Scraper Drawbar Support

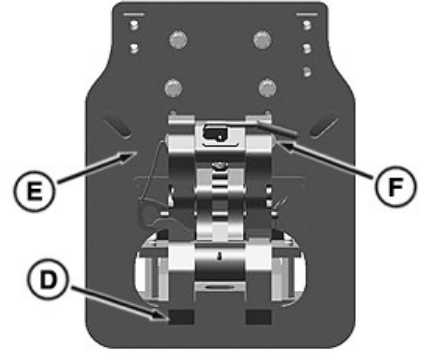

RXA0148253—UN—29MAY15

Quick-Attach Drawbar

4. Slide the short drawbar or the quick-attach drawbar (D) into support.
5. Install the front drawbar pin.
6. Tighten the drawbar locking bolts to 430 N·m (320 lb·ft).
7. Remove the locking pin (E) and lift the handle (F) to operate the quick-attach drawbar.

IMPORTANT: Recheck locking bolt torque specification.

8. Check and retighten the drawbar support bolts after the first 10, 50, and 100 hours of scraper operation.


WTEFIAT,0000040-19-16FEB22

Short Scraper Drawbar Conversion [Scraper]

Scraper drawbar support is designed to accept a larger drawbar and can be converted for use with a smaller scraper drawbar. Follow the scraper recommendations for the drawbar installation.




RXA0082032—UN—05JUL05

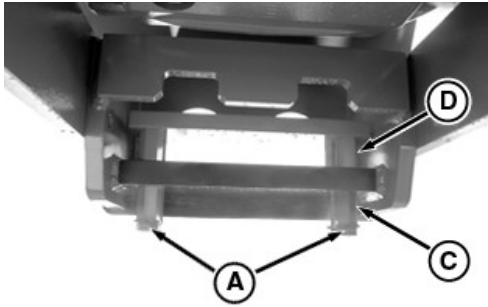

RXA0082012—UN—05JUL05
Smaller Scraper Drawbar Support Setup

IMPORTANT: Adjust the hex bushings (C) when installing the scraper drawbar.

NOTE: All four locking bolts must be kept clean to maintain maximum torque.

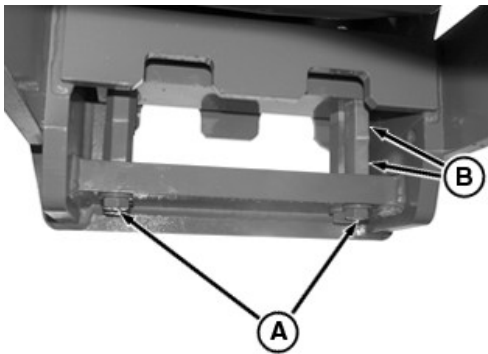

RXA0082010—UN—05JUL05
Larger Scraper Drawbar Support Setup

1. Loosen and remove the drawbar support cap screws (A) and bushings (B).
2. Place the lower bushings on the cap screws with lock washers.
3. Reinstall the cap screws with lower bushings and upper bushings (D) to the drawbar support.
4. Measure the width of the drawbar area with the drawbar resting on the drawbar support.
5. Rotate the bushings so the distance between bushings is as close to the drawbar width as possible.
6. Slide the drawbar into support.
7. Install the front drawbar pin.
8. Tighten the drawbar locking bolts to 430 N·m (320 lb·ft).

IMPORTANT: Recheck locking bolt torque specification.


9. Check and retighten the drawbar support bolts after the first 10, 50, and 100 hours of scraper operation.

WTEFIAT,000004A-19-16FEB22

Long Drawbar Support Load Limitations [Scraper]

IMPORTANT: If the tractor drawbar was installed, certain heavy equipment can place excessive strain on the drawbar. Speed and rough ground increases strain on the drawbar. Use the heavy-duty drawbar support if the vertical load exceeds 2043 kg (4500 lb).

Drive slowly when moving heavy draft loads.

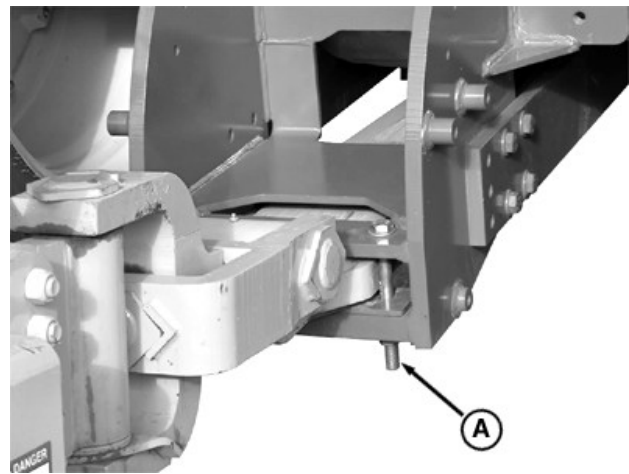

RXA0066212—UN—13MAR03

Tighten the drawbar shims and locking bolts (A) to 850 N·m (627 lb·ft).

For scraper drawbar load limitations, see Scraper Applications [Scraper] in this Operator's Manual section.


WTEFIAT,0000055-19-21FEB22

Tow Cable

IMPORTANT: Avoid possible tractor damage:


- **Correctly use the tow cable by pulling from the front of the tractor in a straight forward direction.**
- **Keep the cable tight to limit cable side movement and interference with the right front wheel/track.**
- **Do not use the tow cable to hook the tractors in tandem to pull the draft load.**
- **Pulling the tractor with the loaded equipment can cause excessive strain on the drawbar support and is greatly increased by the speed and rough ground conditions.**
- **Inspect the tow cable and/or drawbar pin for wear and replace when necessary.**

- When not in use, attach the tow cable to the storage bracket and keep tight.

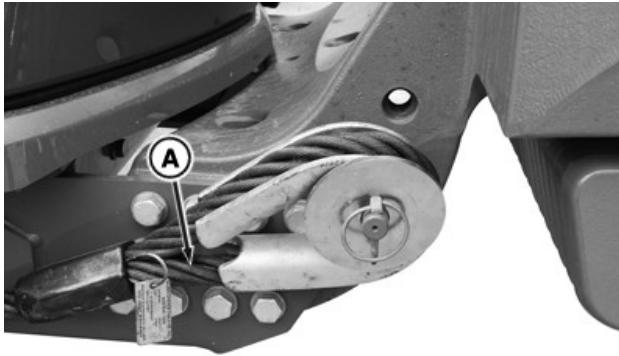

RXA0142715—UN—24JUN14

Use the tow cable (A) to pull the tractor or tractor with scraper from soft or wet soil conditions.

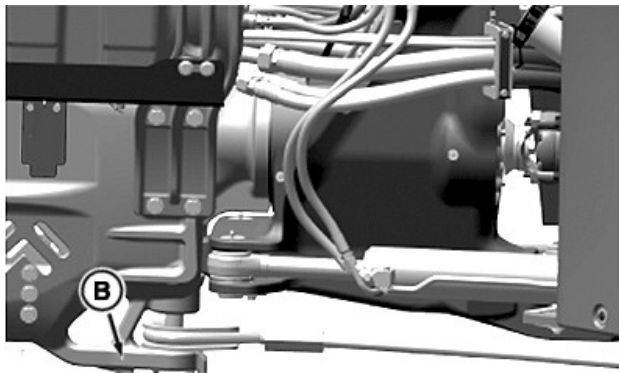


RXA0185286—UN—31AUG21

Attach the tow cable to the tow cable pin (B).

WTEFIAT,0000059-19-03JUL23

Install Clevis Assembly—Category 4 Drawbar [Ag]

IMPORTANT: Avoid equipment damage: correctly attach the clevis assembly.

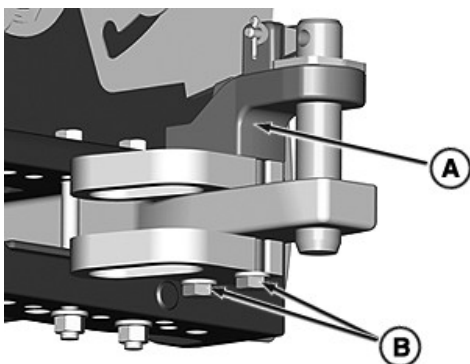

RXA0141898—UN—05JUN14


1. Attach the clevis assembly (A) on top of the drawbar.

2. Tighten the two cap screws (B) to 750 N·m (553 lb·ft).

AK08008,00004F2-19-09MAY22

Install Clevis Assembly—Category 4 Heavy-Duty Drawbar [Ag]

IMPORTANT: Avoid equipment damage. Attach the clevis assembly correctly.

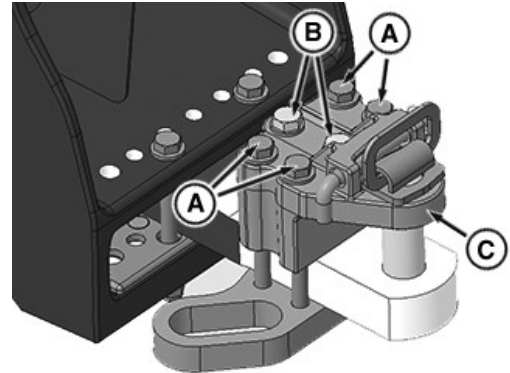


RXA0175888—UN—05MAR20

1. Attach the clevis assembly (C) to top of the drawbar.
2. Tighten the two center M22 cap screws (B) to 750 N·m (553 lb·ft).
3. Tighten the four outer M20 cap screws (A) to 610 N·m (450 lb·ft).

KD34109,00005C1-19-09MAY22

Install Clevis Assembly—Category 5 Drawbar [Ag]

IMPORTANT: Avoid equipment damage: correctly attach the clevis assembly.

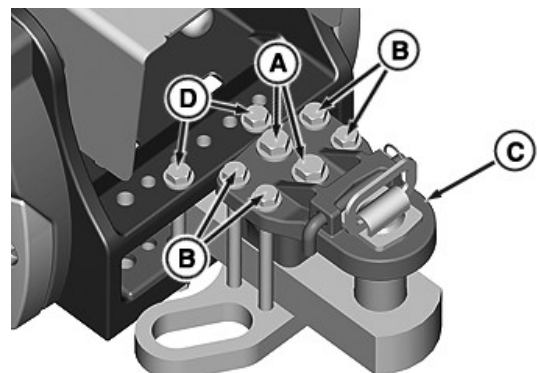

RXA0176518—UN—18MAR20


1. Attach the clevis assembly (C) to the top of the drawbar.
2. Tighten the two center M24 cap screws (A) to 750 N·m (553 lb·ft).

3. Tighten the four outer M20 cap screws (B) to 610 N·m (450 lb·ft).
4. Tighten the two M20 cap screws (D) to 610 N·m (450 lb·ft).

AK08008,00004F4-19-09MAY22


Clevis Assembly Use [Ag]

IMPORTANT: When the PTO shaft may cause interference, remove the clevis assembly.

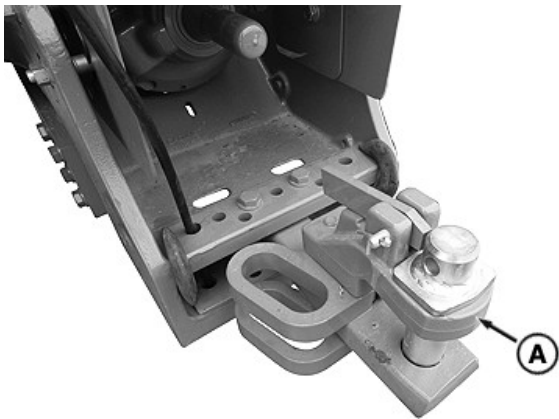


RXA0141866—UN—13JUN14

Category 4

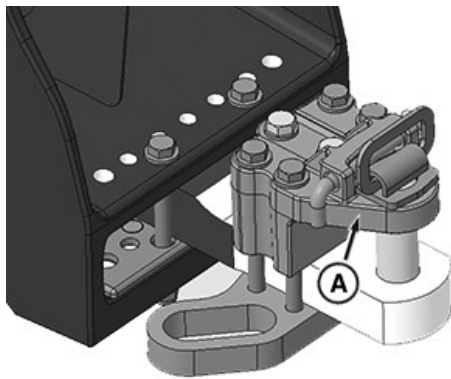

RXA0175889—UN—05MAR20

Category 4 Heavy-Duty

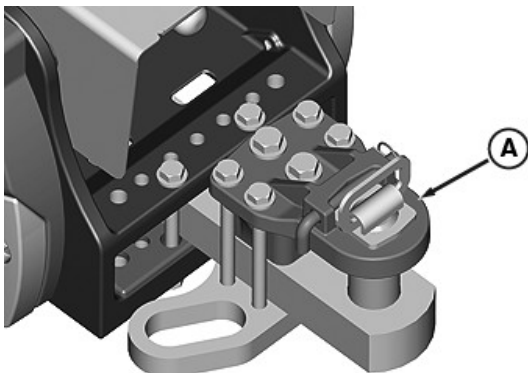

RXA0111485—UN—27OCT10

Category 5


Clevis assembly (A) must be attached *only* to the top of the drawbar.

If the towed implement also has a clevis assembly, insert the pin only through the tractor drawbar. **DO NOT** insert the pin through all four members.

AK08008,00004F3-19-17FEB22

Use Correct Drawbar Pin—Category 5 to 4 [Ag]



IMPORTANT: Use Category 5 drawbar pin for implements that produce drawbar loads requiring more than 348 kW (467 hp) engine power level rating or 300 kW (400 hp) PTO power level rating for the proper operation. Contact the implement manufacturer for information on how to properly convert the implement to accept Category 5 drawbar pin.

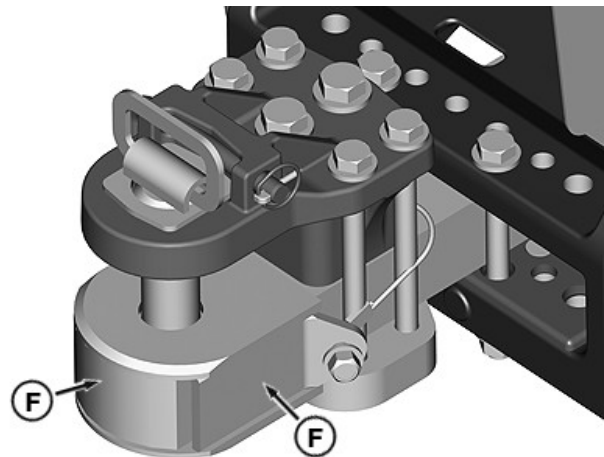

RXA0141903—UN—05JUN14

See your John Deere dealer to purchase an Adapter Kit (F) for tractors equipped with a Category 5 drawbar when attaching to implements equipped with a Category 4 hitch link, if approved by the implement manufacturer.

Use Category 5 drawbar pin furnished with the tractor to attach implements that have a Category 5 hitch link. See the table for dimensions. Consult the implement Operator's Manual or manufacturer to determine the proper size of the drawbar pin for the implement attaching system. Operating the tractor and implements with a drawbar category combination, which is improperly sized for implement power, requirements could result in premature wear or failure of the hitch components.

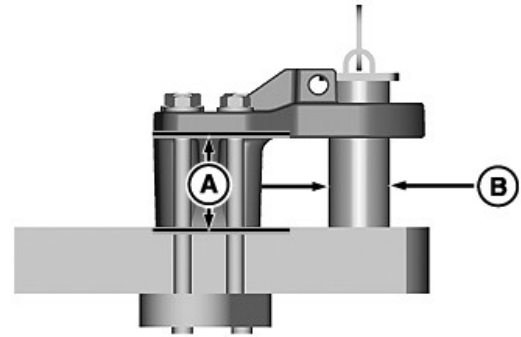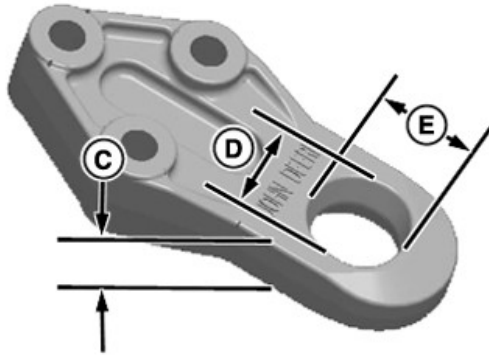

RXA0160175—UN—10JUL17

Category	Hitch Link Dimensions mm (in)				
	Tractor Drawbar		Implement Hitch Link		
	Hitch Pin Diameter (B)	Drawbar Opening Height (A)	Slot Length (E)	Slot Width (D) (Minimum)	Link Thickness (C)
4	50 (1.97)	90 (3.54)	55 — 70 (2.17 — 2.75)	55 (2.17)	50 (1.97)
5	70 (2.76)	100 (3.94)	73 — 85 (2.87 — 3.35)	73 (2.87)	60 (2.36)

AK08008,00004F6-19-09MAY22


Hydraulics—General Information

Hydraulic System Overview

Hydraulics system provides lubrication, power and control to many tractor subsystems. Transmission, steering, brakes, and hitch [Ag] are covered in other sections of this Operator's Manual. The next several sections deal with selective control valves, including adjustment, function, and connections as well as special control systems.

TS36762,00002C7-19-23APR18

Hydraulic Option Connector

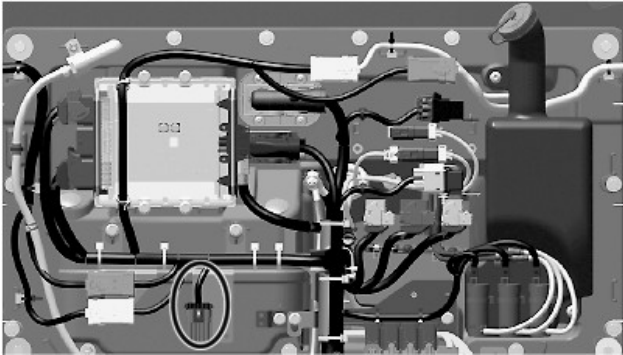

RXA0187221—UN—08JUN22

Hydraulic option connector is located in the cab rear panel of the tractor and is required when using the SCV automation and feature mode functions. To access the hydraulic option connector, see Remove Cab Rear Panel in Service—General Information section of this Operator's Manual.

When making the initial connection to this connector or to the implement harness connection interface, the key must be in the OFF position.

Use the hydraulic option connector with John Deere applications such as:

- TouchSet Depth Control, see TouchSet Depth Control Settings and Adjustments in TouchSet Depth Control section of this Operator's Manual.
- Laser Scraper Control, see Laser Scraper—Scrapers Equipped with Scraper Control Unit in Laser Scraper section of this Operator's Manual.
- AutoLoad, see Machine Settings Overview in CommandCenter section of this Operator's Manual.

Hydraulic Option Connector Reset Procedure:

If a Diagnostic Trouble Code (DTC) occurs or the automation feature does not function, perform the hydraulic option connector reset procedure:

1. Shut off the engine and allow the CommandCenter to shut down completely.
2. Disconnect the implement harness from the implement connector, or disconnect the hydraulic option connector.

3. Start the tractor and allow the CommandCenter to start completely.
4. Shut off the engine and allow the CommandCenter to shut down completely.
5. Reconnect the implement harness to the implement connector.
6. Start the engine and allow the CommandCenter to start completely.
7. Operate the implement. If a DTC continues to appear or the implement fails to respond to commands, see your John Deere dealer.

WTEFIAT,0000076-19-12JUL22

Selective Control Valves

SCV Settings—Access

Access Application through Display:



Menu

RXA0167075—UN—20MAR19

1. Menu



Machine Settings

RXA0167076—UN—20MAR19

2. Machine Settings tab



SCV

RXA0173516—UN—03JAN20

3. SCV

Access Application through Navigation Bar:



SCV

RXA0173515—UN—03JAN20


Press SCV button on navigation bar below display.

KD34109,000057C-19-08DEC21

SCV Settings

SCV application is used to access and adjust SCV modes and settings for equipped SCVs.

NOTE: Display will depend on current mode of SCV and number of SCVs available.

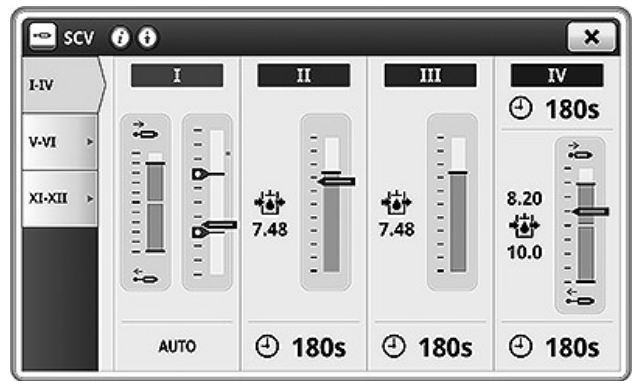

RXA0178901—UN—23JUL20

SCV Example


Items Accessible on SCV Main Page:



SCV Tab Example

RXA0173519—UN—06JAN20


SCV Tabs — tabs display when there are more than four SCVs. Only available SCVs display.

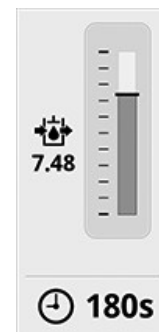

RXA0173523—UN—02JAN20

Standard Mode Example

Standard Mode — set one detent time value and one detent flow value for both extend and retract. See SCV Settings—Standard Mode in this Operator's Manual section.

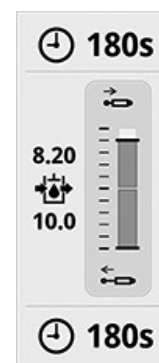


RXA0173504—UN—03JAN20

Independent Mode Example

Independent Mode — set different detent time and flow

values for extend and retract. See SCV Settings—Independent Mode in this Operator's Manual section.

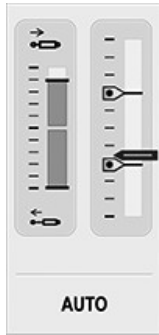

Feature Mode Example

RXA0173490—UN—02JAN20

Feature Mode — detent time is controlled by implement. To enable, connect implement using optional connector before turning on vehicle. See SCV Settings—Feature Mode in this Operator's Manual section.



Hydraulic Flow Indicator

RXA0173500—UN—03JAN20

Hydraulic Flow Indicator — indicates current flow and displays when SCV is selected, active, and oil is flowing.



Advanced Settings

RXA0167071—UN—21MAR19

Advanced Settings — access further adjustments and less common settings. See SCV Settings—Advanced in this Operator's Manual section.

Operate SCVs:



SCV I Lever

RXA0173518—UN—06JAN20

SCV Control Lever Adjustments — SCV levers on the CommandARM are used to adjust SCV flow. See SCV Control Lever Adjustments in this Operator's Manual section.

Other SCV Statuses:



Flow Active Example

RXA0173494—UN—02JAN20

Flow Active — indicator will move with flow level. Fill area between 0 point and indicator displays yellow.



Time Active Example

RXA0173525—UN—02JAN20

Time Active — yellow box displays during time adjustment and when it is active.



Float

RXA0173768—UN—13JAN20

Float — cylinder is free to extend or retract, letting implement follow ground contour.



Float Disabled

RXA0173492—UN—02JAN20

Float Disabled — if lever is in float position at engine start-up, float function will be disabled until lever is cycled to neutral.



Locked

RXA0173506—UN—03JAN20

Locked — SCV is locked.



AUTO

RXA0173483—UN—02JAN20

AUTO — AUTO mode is enabled and active.



AUTO Disabled

RXA0173484—UN—02JAN20

AUTO Disabled — AUTO mode is ON but not active.

Run Page Modules

Add modules for this application to run pages using

Layout Manager. See the G5 CommandCenter Operator's Manual.

NOTE: SCV assignment for module can be changed if accessing settings this way. See SCV Settings—Assignment in this Operator's Manual section.

Example:



Standard Mode

RXA0173524—UN—02JAN20

NOTE: Different modules may be available for your application.


Standard Mode — quick access to standard mode module.

kd34109,1665684982962-19-04MAY23

SCV Settings—Standard Mode

Set one detent time value and one detent flow value for both extend and retract.

Items Accessible in Standard Mode:

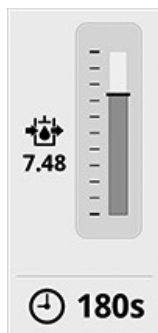

Standard Mode Example

RXA0173523—UN—02JAN20

Standard Mode Example — items may change based on status.



Time Tab

RXA0173530—UN—02JAN20

Time — select to adjust detent time value for extend and retract. See SCV Settings—Time Adjustment in this Operator's Manual section.



Flow Tab

RXA0173503—UN—03JAN20


Flow — select to adjust detent flow value for extend and retract. See SCV Settings—Flow Adjustment in this Operator's Manual section.

KD34109,000057E-19-09JAN20

SCV Settings—Independent Mode

Set different detent time and flow values for extend and retract. Enable independent mode in advanced settings. See SCV Settings—Advanced in this Operator's Manual section.

Items Accessible in Independent Mode:

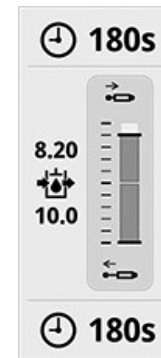

Independent Mode Example

RXA0173504—UN—03JAN20

Independent Mode Example — items may change based on status.



Time Retract Tab

RXA0173529—UN—02JAN20

Time Retract — select to adjust detent time retract value. See SCV Settings—Time Adjustment in this Operator's Manual section.



Flow Retract Tab

RXA0173502—UN—03JAN20

Flow Retract — select to adjust detent flow retract value. See SCV Settings—Flow Adjustment in this Operator's Manual section.



RXA0173501—UN—03JAN20

Flow Extend Tab

Flow Extend — select to adjust detent flow extend value. See SCV Settings—Flow Adjustment in this Operator's Manual section.



RXA0173528—UN—02JAN20

Time Extend Tab

Time Extend — select to adjust detent time extend value. See SCV Settings—Time Adjustment in this Operator's Manual section.

KD34109,000057F-19-10JAN20



RXA0173527—UN—02JAN20

Time Tab Example

Time — controlled by implement and will be grayed out since no adjustments can be made.



RXA0173503—UN—03JAN20

Flow Tab Example

Flow — select to adjust detent flow value for extend and retract. See SCV Settings—Flow Adjustment in this Operator's Manual section.



RXA0173485—UN—02JAN20


Automation Tab

SCV Settings—Feature Mode

NOTE: If hydraulic option connector is equipped, see Hydraulic Option Connector in Hydraulics—General Information section of this Operator's Manual.

Feature mode allows the implement to control the application. To enable, connect a feature mode compatible implement using the hydraulic option connector before turning on the vehicle. When connected through ISOBUS or an implement connector, SCVs automatically enter feature mode and a page displays with the feature options.

Items Accessible in Feature Mode:

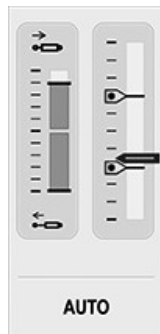

RXA0173490—UN—02JAN20

Feature Mode Example

Feature Mode Example — items may change based on status.

NOTE: Tab appearance and quantity will vary since feature mode is used in combination with standard and independent modes.

NOTE: Not available for AutoLoad.

Automation — enable/disable feature mode. See SCV Settings—Automation in this Operator's Manual section.

KD34109,0000580-19-04MAY23

SCV Settings—Flow Adjustment

Adjust amount of SCV flow based on demand. For information on approximate SCV flow output settings and available pump flow, see Total SCV Flow in this Operator's Manual section.

Procedure to Modify:




RXA0173495—UN—02JAN20

Adjust Flow

NOTE: Flow adjustment is from 0.04 to 10. Selecting (+) increases flow in increments of 0.04 and (++) increases flow in increments of 1.00. Selecting (-) or (--) decreases flow by the same increments.

Select (+/++) to increase or (-/--) to decrease flow. Value is shown in display box.

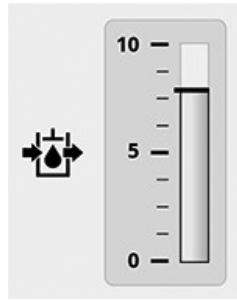

Flow Gauge

RXA0173499—UN—03JAN20

Flow setting also displays on flow gauge.



Close

RXA0167129—UN—25MAR19

Select to close.

Items Accessible for TouchSet Depth Control:



RXA0173522—UN—06JAN20
Set Upper Point



RXA0173521—UN—06JAN20
Set Point Indicator

Upper Set Point — select upper SET key to set a frequently used height that can be recalled. Set point is displayed by upper yellow indicator.



RXA0173520—UN—06JAN20
Set Lower Point



RXA0173521—UN—06JAN20
Set Point Indicator

Lower Set Point — select lower SET key to set a frequently used depth that can be recalled. Set point is displayed by lower yellow indicator.



Position Indicator

RXA0173500—UN—03JAN20

Position Indicator — displays current implement position.

KD34109.0000582-19-20JUN22

SCV Settings—Time Adjustment

Adjust amount of time operation of attached implement will run.

Procedure to Modify:



Adjust Time

RXA0173526—UN—02JAN20

NOTE: Time adjustment is from 0 seconds to C for continuous flow. Time increases by 1 second increments up to 10 seconds, then in 2 second increments up to 20, then 5 second increments up to 30, then 10 second increments up to 60, then 30 second increments up to 120, then by 60 second increments up to C.

Select (+) to increase or (-) to decrease time. Value is shown in display box.



Time Setting

RXA0173525—UN—02JAN20

Time setting also displays under flow gauge. A yellow box displays around the time while adjustment is taking place.



Close

RXA0167129—UN—25MAR19

Select to close.

KD34109.0000583-19-06FEB20

SCV Settings—Advanced

Advanced settings allow you to access further adjustments and less common settings.

NOTE: Some items only display if machine is equipped with the associated options.


Items Accessible on Advanced Settings Page:



RXA0173517—UN—03JAN20

SCV Independent Mode Example

SCV Independent Mode — turn independent mode ON or OFF for each SCV. See SCV Settings—Activating Independent Mode in this Operator's Manual section.

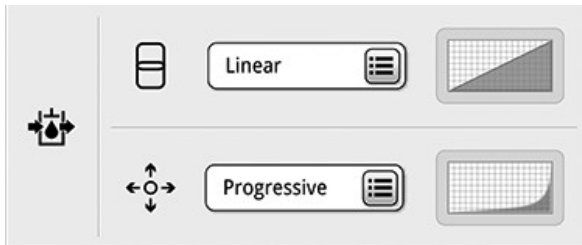

RXA0173496—UN—02JAN20

Flow Adjustment Sensitivity

Flow Adjustment Sensitivity — select the desired flow response curve for the SCV control lever and joystick. See SCV Settings—Flow Adjustment Sensitivity in this Operator's Manual section.



RXA0167187—UN—22MAR19

ON/OFF

Loader Mode — prevents unwanted loader movement by ignoring the SCV flow and time settings. Select ON to enable or OFF to disable.



RXA0167187—UN—22MAR19

ON/OFF

Flow Sharing — reduces flow to non-critical functions, ensuring priority flow to critical functions. Select ON to enable or OFF to disable. See Flow Sharing in this Operator's Manual section.

KD34109,0000587-19-03FEB20

SCV Settings—Activating Independent Mode

Allows you to set different detent time and flow values for extend and retract. Independent mode is enabled/disabled for each SCV separately.

NOTE: Only the SCVs that are available will display.

Procedure to Modify:



RXA0167187—UN—22MAR19

ON/OFF

Independent Mode — select ON to enable or OFF to disable.

KD34109,0000581-19-04MAY23

SCV Settings—Automation

NOTE: If hydraulic option connector is equipped, see Hydraulic Option Connector in Hydraulics—General Information section of this Operator's Manual.

Automation allows you to enable/disable the SCV adjustments in feature mode. When disabled, SCV displays adjustments for either standard mode or independent mode, whichever the SCV is set to.

Procedure to Modify:



RXA0167187—UN—22MAR19

ON/OFF

Auto Mode — select ON to enable or OFF to disable.

KD34109,0000584-19-04MAY23

SCV Settings—Assignment

Reassign an SCV run page module to a different SCV.

NOTE: Only accessible from run page module.

Procedure to Modify:



RXA0173514—UN—03JAN20

SCV Assignment Tab

1. Select SCV Assignment tab.



Assigned SCV Box

RXA0173512—UN—03JAN20

2. Select Assigned SCV box.



SCV List

RXA0173513—UN—03JAN20

3. Select desired SCV from list.



Close

RXA0167129—UN—25MAR19

4. Select to close.

KD34109,0000585-19-14JAN20

SCV Settings—Flow Adjustment Sensitivity

Procedure to Modify:



SCV Control Lever Adjustment



Joystick Adjustment

1. Select the box to set the desired response curve for the SCV control lever or the joystick.

2. Select one of the following response curves:



Linear

RXA0173505—UN—03JAN20

- **Linear** — the flow rate of the SCV corresponds to the distance traveled by the SCV control lever/ joystick lever.



Progressive

RXA0173509—UN—03JAN20

- **Progressive** — initially, the flow rate of the SCV is

less than that traveled by the SCV control lever/ joystick lever (giving a more sensitive start to the movement).



Combination

RXA0173487—UN—02JAN20

- **Combination** — an intermediate stage between linear and progressive.



OK

RXA0173508—UN—03JAN20

Select OK to exit and save changes.



Cancel

RXA0173486—UN—02JAN20

Select Cancel to exit without saving changes.

KD34109,0000588-19-03FEB20

SCV Control Lever Adjustments


CAUTION: Avoid personal injury or machine damage:

- Ensure that hoses are not reversed. If hoses are reversed, cylinder extends when it should retract.
- To prevent unintentional implement movement, shut off engine, move SCV control levers to neutral position, and press SCV lock button before attaching implement. For lock button identification, see **CommandARM Controls—Left Side in CommandARM Controls** section of this Operator's Manual.
- **SCV does not disengage when operator leaves seat. For more information, see Operator Presence Sensor in Seats** section of this Operator's Manual.

SCV control levers on the CommandARM allow you to make adjustments to the SCV flow. For more information on SCV levers, see **CommandARM SCV Control Levers** in **CommandARM Controls** section of this Operator's Manual.

NOTE: SCV control levers can be reconfigured to control tractor functions and implements. See **Controls Setup in CommandCenter** section of this Operator's Manual.

SCV Control Lever Adjustments:

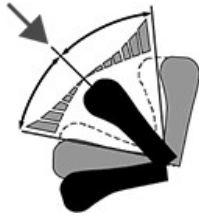


Neutral

RXA0173507—UN—03JAN20

NOTE: SCV control lever should be in neutral position at tractor start-up.


Neutral — flow continues until timed detent expires. If no timed detent is commanded, flow is turned off.

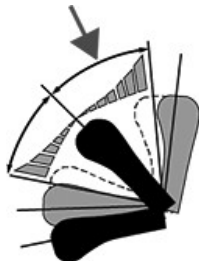

Extend

RXA0173488—UN—02JAN20


Extend — operator controlled variable flow to extend cylinder. Oil flows at a rate that varies depending on how far lever is moved. Slowest oil flow is when lever is closest to neutral position. Lever is returned to neutral position when released.

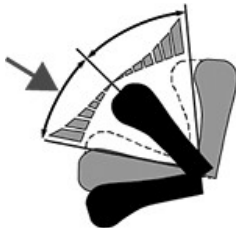

Retract

RXA0173510—UN—03JAN20

Retract — operator-controlled variable flow to retract cylinder. Oil flows at a rate that varies depending on how far lever is moved. Slowest oil flow is when lever is closest to neutral position. Lever is returned to neutral position when released.

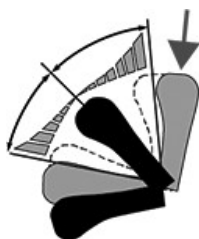

Extend Detent

RXA0173489—UN—02JAN20

Extend Detent — timed flow to extend cylinder based on time and flow detent settings. Lever returns to neutral position, but flow continues at flow detent setting rate until detent time setting has elapsed.



Retract Detent

RXA0173511—UN—03JAN20

Retract Detent — timed flow to retract cylinder based on time and flow detent settings. Lever returns to neutral position, but flow continues at flow detent setting rate until detent time setting has elapsed.



Float

RXA0173491—UN—02JAN20

NOTE: If lever is in float position at engine start-up, float function will be disabled until lever is cycled to neutral.

To relieve hydraulic pressure in implement, move lever to float position while engine is running.

Float — SCV opens to allow free flow of oil from head-to-rod end of implement hydraulic cylinder, allowing implement to follow ground contour. Lever and SCV remain in float position until lever is manually returned to neutral. Cycle cylinder fully in both directions after being used in float position to ensure that cylinder is filled with oil. Float can be used to allow hydraulic cylinders to coast when shutting down implement.

KD34109,0000589-19-20JUN22

Total SCV Flow

1. Check flow setting for each function independently. For correct motor flow settings, refer to the implement Operator's Manual.

The following may cause pump to operate at high pressure:

- Down-pressure systems (drills, air seeders, disks) — can be considered to be zero flow demand after completion of raise or lower cycle. For more information, see implement connection examples

in Hydraulic Connections section of this Operator's Manual.

- Auxiliary flow control valves (vacuum flow control) — open the implement flow control valve and adjust tractor flow rate to desired setting. For more information, see implement connection examples in Hydraulic Connections section of this Operator's Manual.
 - Cylinder functions where line or orifice restrictions control flow — adjust the tractor flow control to point where function speed begins to decrease.
 - Auxiliary control valves (implement stack valves, row guidance) — adjust the tractor flow control to lowest setting that results in correct operation.
2. Determine total flow demand by adding flow requirements for each SCV using settings determined in Step 1. Include hitch and power beyond flow requirements if applicable (refer to SCV flow chart for settings based on approximate flow output).
 3. Determine if flow demand exceeds available pump flow (refer to SCV pump flow chart for approximate available pump flow).

If flow demand:

- Is less than available pump flow but has performance concern, see your John Deere dealer.
- Exceeds pump flow:
 - Increase engine rpm if possible.
 - Decrease flow setting on noncritical functions.
 - Convert implement open center valves to closed center operation, if equipped.

NOTE: Flow measurements made without steering or hitch being used.

Pump Flow (Approximate) ^a L/min (gal/min)		
Engine rpm	Pump	
	85 cc	85 cc + 85 cc
1000	100.9 (27)	201.8 (53)
1500	151.4 (40)	302.8 (80)
2000	201.8 (53)	403.7 (106)
2100	211.9 (56)	423.9 (112)

^aTypical flows were taken from new tractors. Component wear may cause slightly lower values. More than one SCV is needed to achieve full flow at each rpm listed.

Power Beyond Maximum Flow	
Coupler	L/min (gal/min)
1/2-Inch	132 (35)
3/4-Inch	211.9 (56)

SCV Flow (Approximate) ^a L/min (gal/min)		
SCV Flow Settings	Standard-Flow SCV 1/2-Inch Coupler ^b	High-Flow SCV 3/4-Inch Coupler ^c
0.04 ^d	—	—
1.0	1.9 (0.5) ^e	1.1 (0.3)
2.0	6.1 (1.6)	7.2 (1.9)
3.0	13.6 (3.6)	15.6 (4.1)
4.0	20.4 (5.4)	25.8 (6.8)
5.0	28.0 (7.4)	37.3 (9.9)
6.0	40.9 (10.8)	50.9 (13.4)
7.0	62.1 (16.4)	78.3 (20.7)
8.0	81.4 (21.5)	105.2 (27.8)
9.0	107.1 (28.3)	131.0 (34.6)
10.0	132.0 (35.0)	171.0 (45.2)

^aAt 2000 rpm and 454 kg (1000 lb) of load at point-of-use.

^b85 cc pump.

^c85 cc and 85 cc pumps.

^dMinimum flow setting.

^eObserved under no load.

Hitch Cylinder Diameter mm	Hitch Flow [Ag] L/min (gal/min)
90/100	71 (18.7)
120/120	88 (23.2)

KD34109,0000586-19-03JUL23

Flow Sharing

To maintain productivity, hydraulic flow sharing reduces flow to non-critical SCV functions, ensuring priority flow to critical SCV functions. To enable or disable flow sharing, see SCV Settings—Advanced in this Operator's Manual section.

NOTE: Continuous setting receives priority over timed detent. If all SCVs are set to C (continuous) and requested flow is exceeded, flow is equally reduced to all SCVs to ensure that all functions are still active.

For Maximum Performance:

- Properly connect SCVs and implement according to implement Operator's Manual.
- If implement Operator's Manual is unavailable, refer to appropriate hydraulic connection example in Hydraulic Connections section of this Operator's Manual. On agricultural tractors equipped with high-flow hydraulics, SCVs can be supplied by different pumps. For more information, see Connecting Implements to High-Flow Hydraulic SCVs [AG] in Hydraulic Connections section of this Operator's Manual.
- Make sure SCV flow settings match flow

requirements for function. For more information, see Total SCV Flow in this Operator's Manual section.

- Setting detent time (recommendation in implement Operator's Manual) slightly longer than needed is preferred. However, setting time much longer than necessary or to C (continuous) could result in activation of flow sharing and excess fuel burn.

If implement functions operate slower than expected, perform flow sharing diagnostic procedure.

Flow Sharing Diagnostic Procedure:

1. Check all connections for proper hookup. Whenever possible, connect return connections to SCV return ports or power beyond return port.
2. For every SCV set to C (continuous) flow, adjust the flow rate to be the lowest rate possible for optimal implement operation. Not all functions require continuous flow, and timed SCVs set too long can lead to flow sharing if they overlap with continuous flow SCVs.
3. Hydraulic flow is engine speed dependent. If a function is slow, increase engine rpm to increase flow.
4. Adjust flow first and then timed detent SCVs (as necessary from observation) to provide proper implement function.
5. On high-flow hydraulic system equipped tractors, try to balance hydraulic loading between the two circuits.
6. If implement functions remain slow, see your John Deere dealer.

KD34109,000057B-19-08JUN22

Hydraulic Connections

Connect/Disconnect Hydraulic Hoses

CAUTION: Escaping fluid under pressure can penetrate the skin causing serious injury.

To avoid injury, always:

- Protect the hands and body from high-pressure fluids.
- Inspect hydraulic hoses periodically for damage (at least once per year).

Signs of wear or damage include, but are not limited to, leakage, kinking, cuts, cracks, abrasion, blisters, corrosion, and exposed wire braid.

Replace worn or damaged hose assemblies immediately with John Deere approved replacement parts.

- Tighten all connections before applying pressure.
- Ensure that all connected lines are as straight as possible.
- Search for leaks with a piece of cardboard.
- Relieve pressure from the hydraulic system before disconnecting a hydraulic line or other lines.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene can result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available in English from the Deere & Company Medical Department in Moline, Illinois, U.S.A., by calling 1-800-822-8262 or +1 309-748-5636.


Unintentional implement movement can cause injury. To avoid injury, before attaching or detaching hydraulic hoses, always engage:

- SCV lock button. See CommandARM Controls—Left Side in the CommandARM Controls section of this Operator's Manual.
- Joystick lock (if equipped). See Operate SCVs with CommandARM Joystick in the Selective Control Valves section of this Operator's Manual.

IMPORTANT: Dirt, dust, or other foreign material can damage the hydraulic system. Avoid damage to the hydraulic system and thoroughly clean the hydraulic hoses, hose ends, and SCVs before connecting an implement.

Steam cleaning or using a high-pressure washer in the area around the SCV connections and electronics can damage equipment. Keep a minimum distance of 200 mm (8 in) between the pressure washer nozzle and hydraulic connections for any pressure washer exceeding 6895 kPa (69 bar) (1000 psi).

SCV Coupler Component Identification and Location

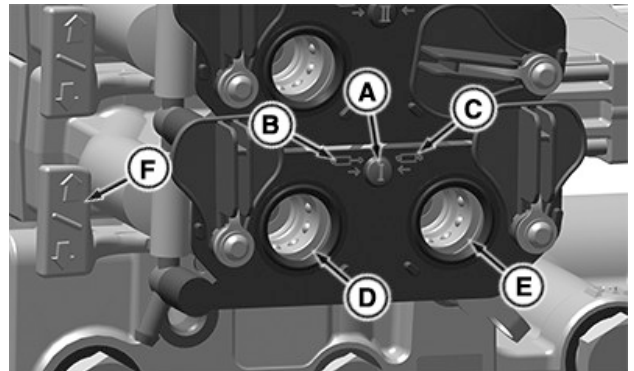

RXA0188461—UN—25JAN23

NOTE: Remote cylinder couplers are designated I through VI (A), where I is the bottom coupler.

Verify that the remote hydraulic hoses are connected to the correct SCV couplers to ensure desired system control operation.

Connect Hydraulic Hoses

1. Lock out the SCV controls inside the cab.
2. Before connecting the hydraulic hoses, determine:
 - a. If the symbols on the coupler identification plate indicating cylinder movement (B) or (C) match the desired cylinder travel direction.
 - b. The desired SCV connection based on whether the implement uses single-acting or double-acting cylinders:
 - For single-acting cylinders, use the extend coupler (D).
 - For double-acting cylinders, use the extend (D) and retract (E) couplers.
3. To connect the hydraulic hose to the SCV:
 - a. Clean the dust covers/caps.
 - b. Rotate up or remove the dust covers to expose the SCV couplers.
 - c. Push forward the hydraulic coupler sleeve (if equipped).
 - d. Move the SCV hose connect lever (F):
 - Push the lever to connect to the retract coupler.

- Pull the lever to connect to the extend coupler.
- e. Push the hydraulic hose firmly into the SCV coupler.
- f. Pull the hydraulic coupler sleeve (if equipped) backward to lock the house coupler into the receptacle.

Disconnect Hydraulic Hoses

From inside the cab:

1. Start the tractor.
2. Use the appropriate SCV lever to lower the implement to the ground.
3. Relieve the hydraulic pressure in hoses by moving the SCV control lever or joystick (if equipped) to the float position for a few seconds.
4. Lock out the SCV controls.
5. Shut off the tractor.

From outside the cab:

1. Move the SCV hose connect lever (F) slowly to relieve any pressure buildup of trapped oil:
 - Push the lever to disconnect from the retract coupler.
 - Pull the lever to disconnect from the extend coupler.
2. Remove the hoses from the SCV couplers.
3. Clean the SCV coupler area.
4. Rotate down or replace the dust covers to protect the SCV couplers.

EC82310,0000EF3-19-26JAN23

Implements Requiring Large Volumes of Hydraulic Oil

IMPORTANT: Avoid damage to the hydraulic system:

- **Never add hydraulic oil to the reservoir with the engine running. Doing so can cause the hydraulic reservoir to overflow.**
- **Do not overfill the hydraulic reservoir.**

1. Cycle all of the implement cylinders after starting the tractor.
2. Lower the implement to the ground to return most of the oil to the reservoir.
3. Check the hydraulic oil level at the hydraulic oil sight gauge. See Hydraulic System Oil Level in the Service—Check section of this Operator's Manual.

4. Recheck the oil level when the implement is removed.
5. Add or remove hydraulic oil as necessary. If the oil must be drained, see Hydraulic System Oil and Filters in the Service—Change section of this Operator's Manual.

EC82310,0000EF4-19-08FEB23


Use Load Sense Hydraulic System—Power Beyond

Power beyond is used as a pressure/flow source for auxiliary functions equipped with independent flow control valves. Use power beyond when:

- Tractor SCV control is not needed.
- No other SCV outlet is available.


Power beyond functions require a load sense signal to regulate pump pressure; a load sense hydraulic line is used for that purpose. Certain equipment can require modification. See your John Deere dealer.

Component Identification

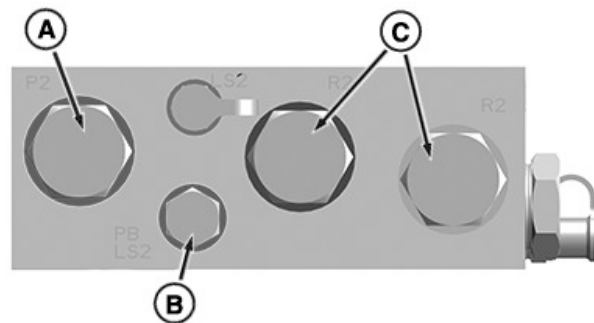

RXA0188462—UN—25JAN23
Power Beyond Ports—Mid/Upper (if equipped)

- A—Pressure Port
B—Load Sense Port
C—Return Port (motor return) (2 used)

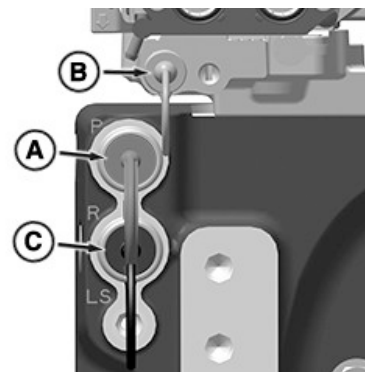


RXA0188463—UN—25JAN23
Power Beyond Coupler—Hitch Casting

- A—Pressure Coupler
- B—Load Sense Coupler
- C—Return Coupler (motor return)

Example 1

NOTE: Example 1 is the preferred practice.

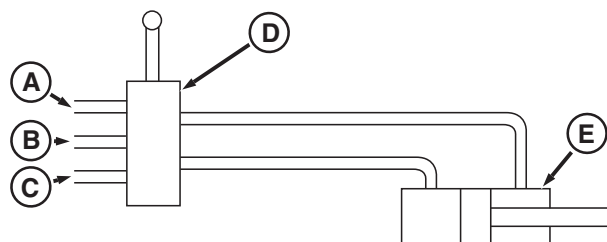


RXA0177994—UN—20MAY20

- A—Pressure Coupler
- B—Load Sense Coupler
- C—Return Coupler (motor return)
- D—Control Valve
- E—Cylinder

Control valves with load sense provide a load sense signal to the hydraulic system and can be operated manually or by solenoids.

Example 2

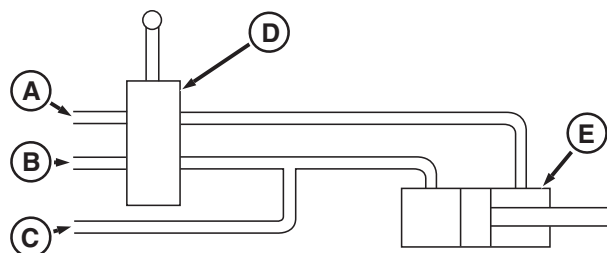


RXA0177995—UN—20MAY20

- A—Pressure Coupler
- B—Load Sense Coupler
- C—Return Coupler (motor return)
- D—Control Valve
- E—Cylinder

IMPORTANT: The circuit allows cylinder leak-down through the load sense line (C). If leakage is not acceptable for operation, use Example 3.

The control valve directs oil into the extend or retract circuits. Connect the load sense line to the circuit that requires pressure. An example is a trailer lift cylinder with a load that is supported by mechanical stops in the full down position. Load sense signals the pump when increased pressure is needed. Pressure remains low when the load is supported by mechanical stops.

Example 3

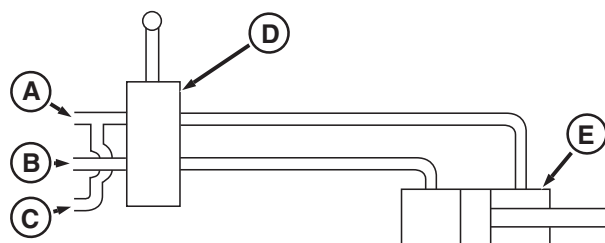


RXA0177996—UN—20MAY20

- A—Pressure Coupler
- B—Load Sense Coupler
- C—Return Coupler (motor return)
- D—Control Valve
- E—Cylinder

IMPORTANT: The system will maintain a maximum pressure of 20000 kPa (200 bar) (2900 psi) as long as power beyond hoses are connected.

The control valve directs oil into the extend or retract circuits (either requiring high pressure). Connect the load sense line to the pressure line before the control valve. An example is a folding implement, where pressure is needed to extend or retract the cylinders.

Example 4

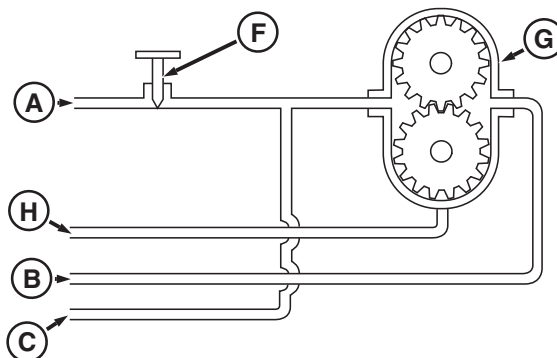

RXA0138270—UN—17JAN14

- A—Pressure Line
- B—Return Line
- C—Load Sense Line
- F—Pressure-Compensated Flow Valve
- G—Hydraulic Motor
- H—Motor Case Drain (sump line)

NOTE: The motor speed can fluctuate when other functions cause system pressure change. Minimize fluctuations by installing a pressure-compensated flow control valve.

For Ag high flow, it is recommended that the hydraulic motor is connected to the top SCVs (85 cc high-flow pump).

High-flow scraper hydraulics is not recommended for motor application.

The pressure-compensated flow control valve is used to

regulate hydraulic motor speed. Connect the load sense line to the pressure line after the control valve.


EC82310,0000EF5-19-24MAR23

Component Identification and Location [Ag]

SCVs are color coded for easier identification. Hose identification kits are available through your John Deere dealer.

SCV Numbers and Corresponding Colors	
SCV	
Number	Color
I	Green
II	Blue
III	Brown
IV	Black
V	Violet
VI	Gray


Standard Flow Hydraulics

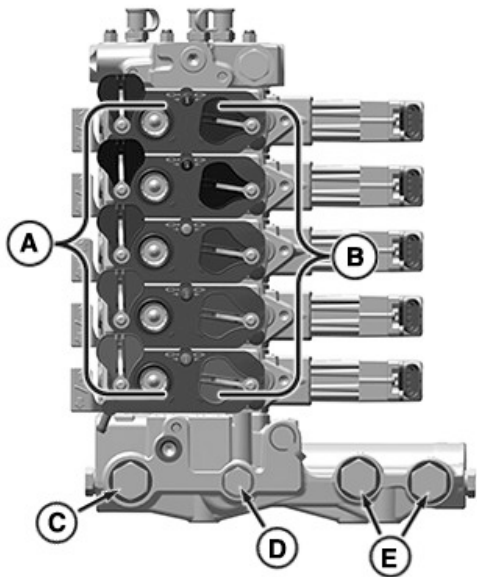

RXA0188464—UN—25JAN23

Standard Flow—Power Beyond in Upper Location


- A—Extend Coupler (5 used)
- B—Retract Coupler (5 used)
- C—Power Beyond Pressure Port
- D—Power Beyond Load Sense Port
- E—Power Beyond Return Port (motor return) (2 used)

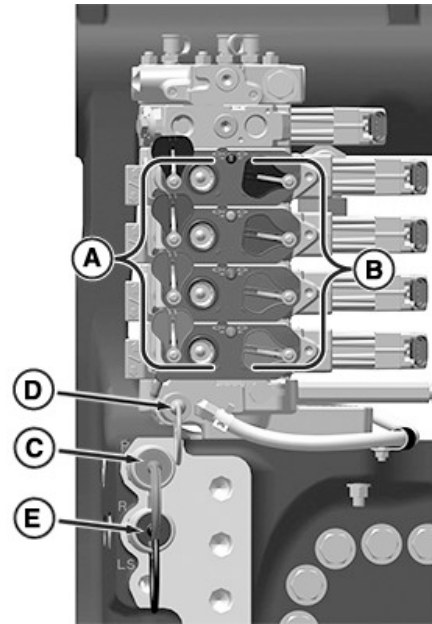

RXA0188465—UN—25JAN23

Standard Flow—Power Beyond in Hitch Casting

- A—Extend Coupler (4 used)
- B—Retract Coupler (4 used)
- C—Power Beyond Pressure Coupler
- D—Power Beyond Load Sense Coupler
- E—Power Beyond Return Coupler (motor return)

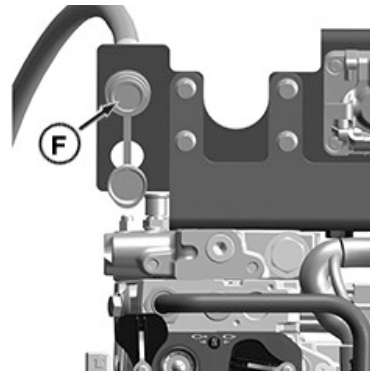

RXA0188466—UN—25JAN23

- F—Sump Coupler (motor case drain)

High-Flow Hydraulics

IMPORTANT: Avoid hydraulic and cooling system overheating. Ensure that the implement is correctly connected to the hydraulic system.


Recommended setup for high-flow agriculture applications:

- Connect the hydraulic motor supply to secondary pump SCVs.
- Connect the hydraulic motor return coupler to a secondary pump power beyond return coupler connection.

It is not recommended to connect scraper hydraulic systems to high-flow SCVs.


NOTE: Field installation kits are available for:

- 1/2-inch and 3/4-inch power beyond couplers.
- 1/2-inch and 3/4-inch SCV couplers/housings.

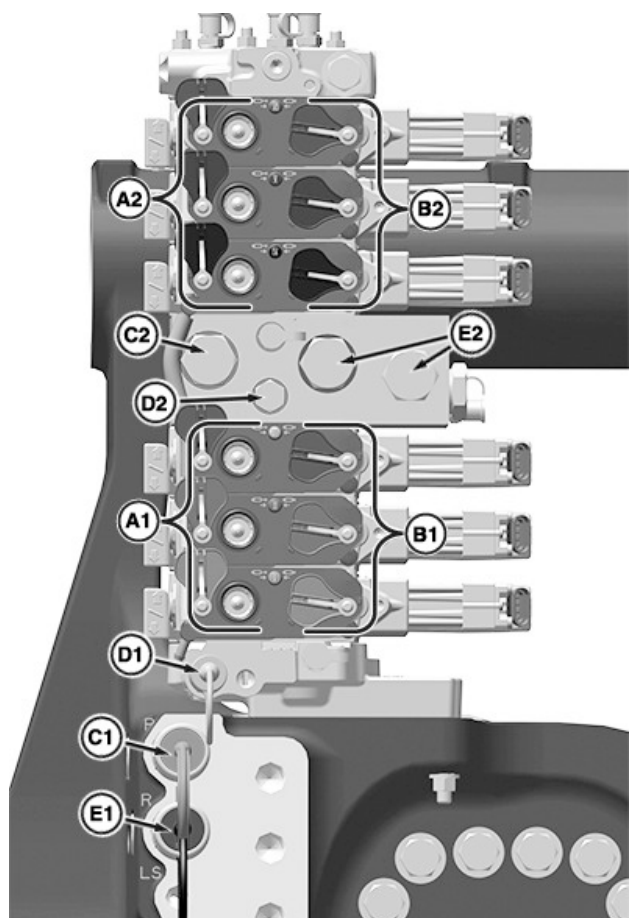

RXA0188467—UN—25JAN23

- A1—Extend Coupler (primary hydraulic pump) (3 used)
 A2—Extend Coupler (secondary hydraulic pump) (3 used)
 B1—Retract Coupler (primary hydraulic pump) (3 used)
 B2—Retract Coupler (secondary hydraulic pump) (3 used)
 C1—Power Beyond Pressure Coupler (primary hydraulic pump)
 C2—Power Beyond Pressure Port (secondary hydraulic pump)
 D1—Power Beyond Load Sense Coupler (primary hydraulic pump)
 D2—Power Beyond Load Sense Port (secondary hydraulic pump)
 E1—Power Beyond Return Coupler (motor return) (primary hydraulic pump)
 E2—Power Beyond Return Port (motor return) (secondary hydraulic pump) (2 used)

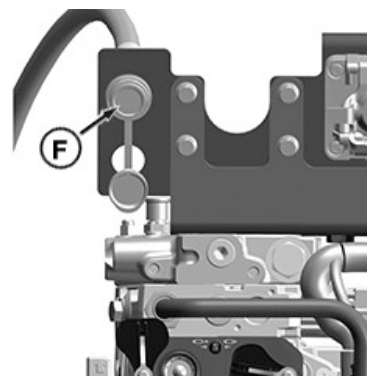

RXA0188466—UN—25JAN23

F—Sump Coupler (motor case drain)

For high-flow hydraulic systems with:

NOTE: All SCVs can be equipped with Intelligent Power Management (IPM). If an air seeder is connected to SCVs IV—VI, follow the guidelines found in the air seeder Operator's Manual (example: John Deere 1870 or 1895 Air Seeder). See Drivetrain Protection in the Drivetrain section of this Operator's Manual.

- Five SCVs:
 - I—III are supplied by the primary pump.
 - IV—V are supplied by the secondary pump. These SCVs are recommended for orbital motor use.
- Six SCVs:
 - I—III are supplied by the primary pump.
 - IV—VI are supplied by the secondary pump. These SCVs are recommended for orbital motor or air seeder use.

Primary Hydraulic Pump SCVs

The primary hydraulic pump supplies SCVs I—III. The primary pump is recommended for high-pressure and low-flow functions, such as air seeders, large cylinders, and active downforce systems.

Secondary Hydraulic Pump SCVs

The secondary hydraulic pump supplies SCVs IV—VI. The secondary hydraulic pump is recommended for low-pressure and high-flow functions. Most hydraulic motors use 19—26.5 L/min (5—7 gal/min) per motor and a pressure of around 9997 kPa (100 bar) (1450 psi) to operate.


The secondary hydraulic pump can operate hydraulic motors such as air seeders, sprayers, and vacuum planters. Using the secondary hydraulic pump when operating hydraulic motors:

- Can improve fuel economy, reduce power loss, and reduce heating of hydraulic oil.
- Reduces hydraulic system interactions with features such as steering, brakes, raise, lower, and active downforce.

The secondary hydraulic pump can also provide high pressure to the same functions as the primary hydraulic pump, however:

- The benefits of the improved fuel economy and reduced power loss disappear.
- There is an increased chance of system interactions with hydraulic motors being on the same pump as other hydraulic functions. This typically means increased vacuum level or blower motor speed fluctuations.
- More heat can be generated under some conditions, which increases the load on the cooling system.


Connecting Implements to Air Seeder Special High-Flow Hydraulics SCVs

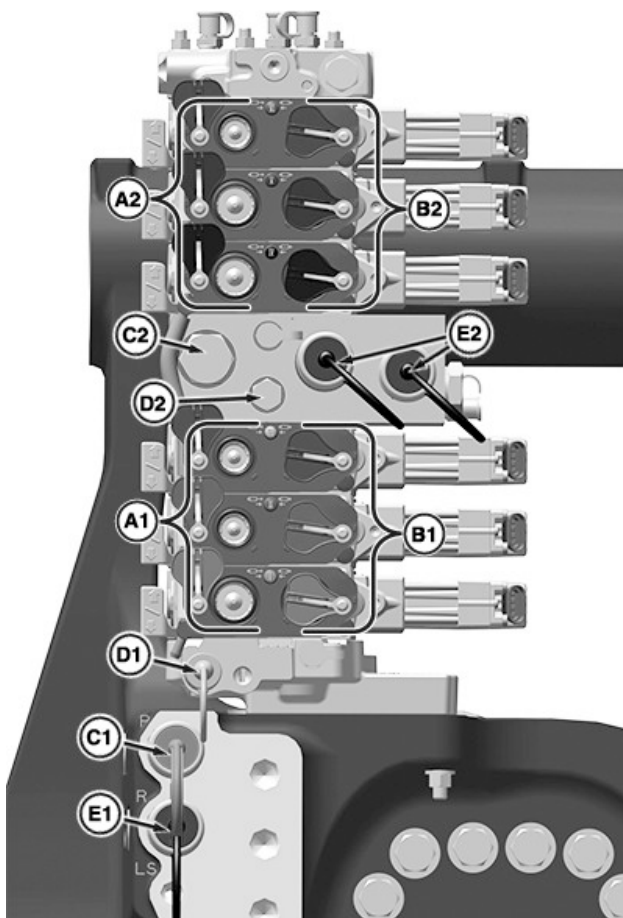

- RXA0188468—UN—25JAN23
- A1—Extend Coupler (primary hydraulic pump) (3 used)
 - A2—Extend Coupler (secondary hydraulic pump) (3 used)
 - B1—Retract Coupler (primary hydraulic pump) (3 used)
 - B2—Retract Coupler (secondary hydraulic pump) (3 used)
 - C1—Power Beyond Pressure Coupler (primary hydraulic pump)
 - C2—Power Beyond Pressure Port (secondary hydraulic pump)
 - D1—Power Beyond Load Sense Coupler (primary hydraulic pump)
 - D2—Power Beyond Load Sense Port (secondary hydraulic pump)
 - E1—Power Beyond Return Coupler (motor return) (primary hydraulic pump)
 - E2—Power Beyond Return Coupler (motor return) (secondary hydraulic pump) (2 used)

NOTE: SCV flow for:

- I, IV, and V is 180 L/min (48 gal/min) with 3/4-inch couplers.
- II, III, and VI is 140 L/min (37 gal/min) with 1/2-inch couplers.

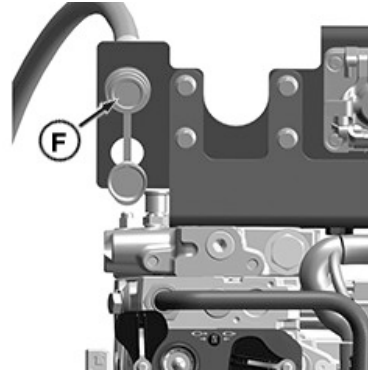

RXA0188468—UN—25JAN23

F—Sump Coupler (motor case drain)


EC82310,0000EF7-19-24MAR23

Use Hydraulic Spray Pumps [Ag]

IMPORTANT: Moving the SCV control lever to neutral will cause the motor to stop abruptly and may damage the seals. Always move the SCV lever to the float position to allow the motor to coast to a stop.


NOTE: The preferred method of connection is to connect the hydraulic motor to the high-flow pump.

1. Follow the recommendations provided by the spray pump manufacturer for pump model selection, setup, and operation.
2. Select the smallest displacement motor recommended for multiple hydraulic function operation. The smaller displacement reduces the total hydraulic flow demand and improves overall system performance.
3. Determine which SCV to use:
 - a. III, IV, or V for a standard hydraulic system.
 - b. III or IV for a high-flow hydraulic system with a hitch.
 - c. IV or V for a high-flow hydraulic system without a hitch.

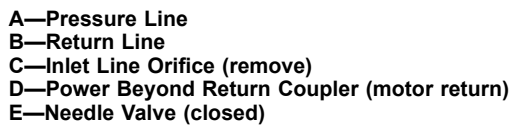

6. Move the SCV lever forward to the retract detent position.
7. Adjust the hydraulic flow rate to the guidelines of the pump manufacturer.
8. Shut off the spray pump by moving the SCV control lever to the float position (full forward and down).

EC82310,0000EF6-19-24MAR23

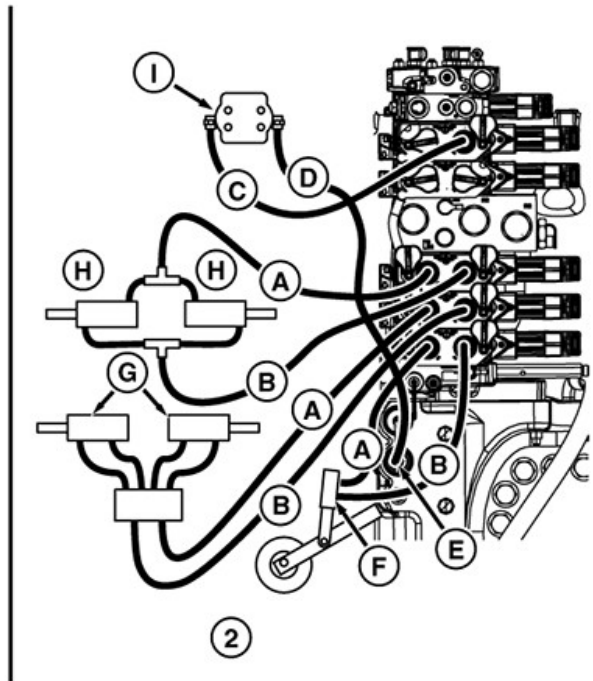

E—Power Beyond Return Coupler (motor return)
F—Raise/Lower Cylinder
G—Marker Cylinder (2 used)
H—Folding Cylinder (2 used)
I—Hydraulic Motor

special return hose tip with a check valve is required. The special hose tip prevents high-

pressure oil from moving back toward the motor and possibly damaging the seals.

- Moving the SCV control lever to neutral will cause the motor to stop abruptly and may damage the seals. Always move the SCV lever to the float position to allow the motor to coast to a stop.



In this application:

- The hydraulic return coupler is routed to the power beyond return port.
- The hydraulic motor receives pressure oil from the SCV retract port.

EC82310,0000EF8-19-08FEB23

NOTE: The preferred method of connection is to connect the hydraulic motor to the high-flow pump.

Implement Connection Example [Ag]: Planter with Vacuum Motor and Return Line to SCV Using Motor Return Tip

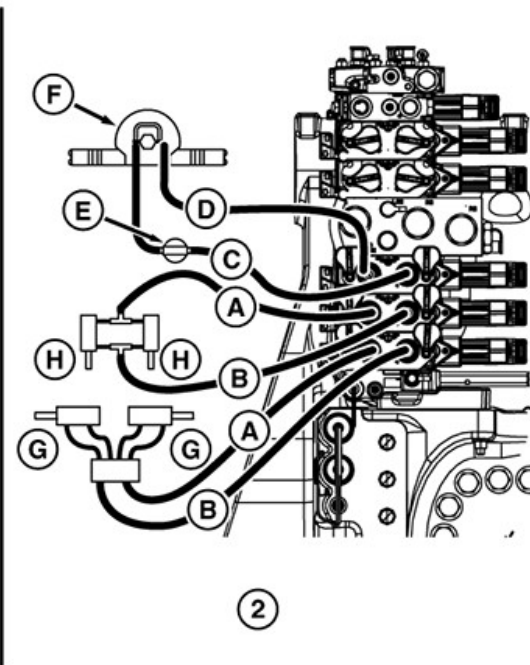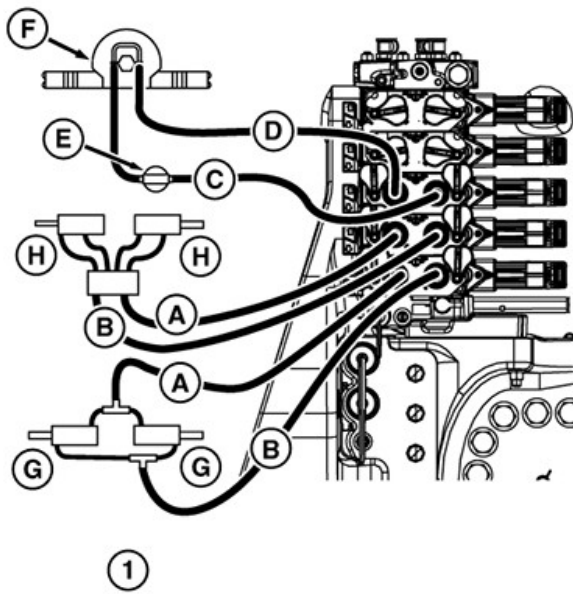

1—Standard Flow
2—High Flow
A—Extend Coupler Line
B—Retract Coupler Line
C—Pressure Line

D—Return Line
E—Flow Control Valve
F—Vacuum Motor
G—Marker Cylinder (2 used)
H—Folding Cylinder (2 used)

RXA0188470—UN—08FEB23

IMPORTANT: If the ambient air temperature is high, hydraulic oil can overheat when the hydraulic pump operates at maximum pressure. Adjust the flow control valve as needed.

Avoid seal damage:

- When motor return oil is routed to an SCV, a special return hose tip with a check valve is required. The special hose tip prevents high-pressure oil from moving back toward the motor and possibly damaging the seals.
- Moving the SCV control lever to neutral will cause the motor to stop abruptly and may

damage the seals. Always move the SCV lever to the float position to allow the motor to coast to a stop.

NOTE: The preferred method of connection is to connect the hydraulic motor to the high-flow pump.


In this application:

- A vacuum motor (similar to a planter blower) receives the pressure oil from the SCV retract coupler.
- If using a SCV to control the flow to the vacuum motor, use the SCV panel for standard-flow or high-flow hydraulics. If the planter is equipped with a flow

control valve on the vacuum motor, it needs to be in the wide-open position.

EC82310,0000EFB-19-08FEB23

Implement Connection Example [Ag]: Planter with Vacuum Motor and Return Line to Motor Return—With Hitch and Implement Lift Assist

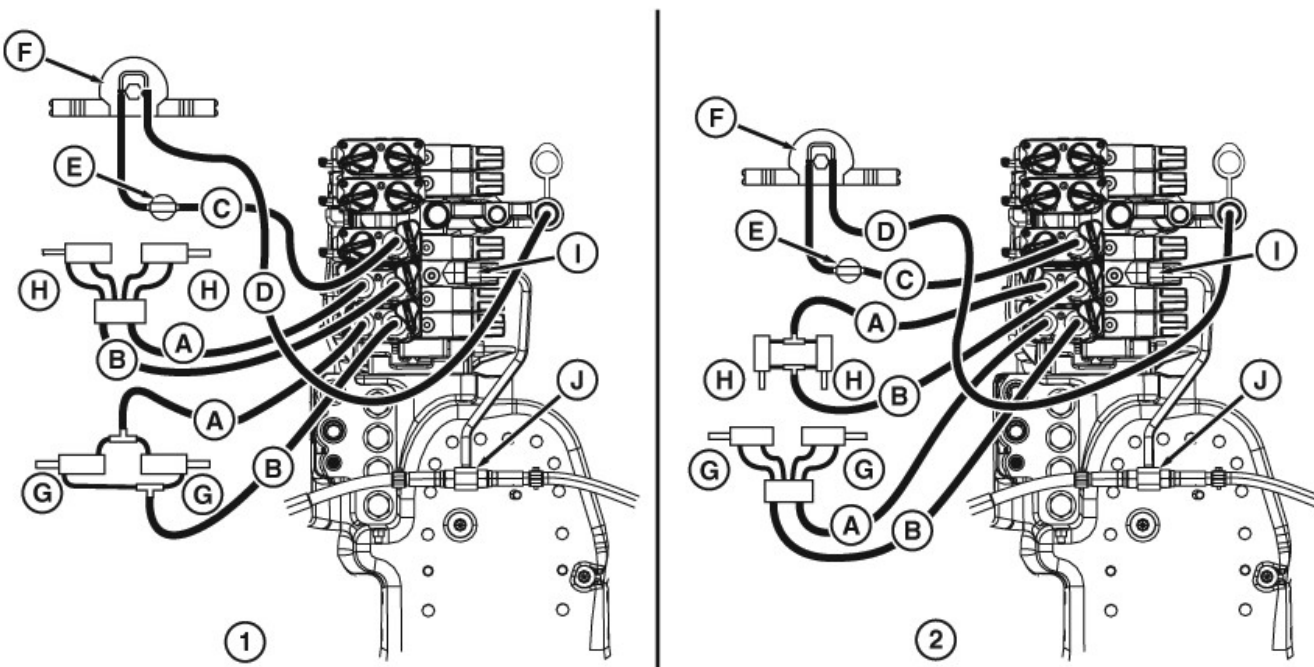

RXA0185977—UN—10NOV21


- 1—Standard Flow
2—High Flow
A—Extend Coupler Line
B—Retract Coupler Line
C—Pressure Line
D—Return Line (power beyond return coupler—motor return)

- E—Flow Control Valve
F—Vacuum Motor
G—Marker Cylinder (2 used)
H—Folding Cylinder (2 used)
I—Implement Lift Assist
J—T-Fitting and Hydraulic Hose

- Flow control valve controls the flow with standard-flow hydraulics.
- Valve is used to control the oil flow with high-flow hydraulics.

Avoid damage to the hydraulic system seals due to the incorrect positioning of the SCV levers after the hydraulic motor is shutoff:

- Always move the SCV lever to the float position, which allows the motor to coast to a stop.
- Never move the SCV lever to the neutral position as this action can cause the motor to stop abruptly.

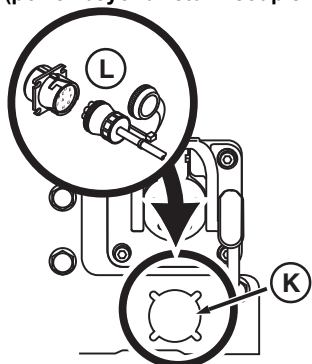

RXA0178005—UN—20MAY20

- K—9-Pin Implement Connector
L—9-Pin Connector for TouchSet Depth Control

IMPORTANT: Avoid damage to the hydraulic oil. If the ambient air temperature is high, hydraulic oil can overheat when the hydraulic pump operates at the maximum pressure.

Avoid damage to the hydraulic system seals due to high-pressure hydraulic return oil moving back toward the motor through the SCV connection. The installation of a special return hose tip with a check valve is required.

NOTE: Connecting the hydraulic motor to the secondary high-flow pump is the preferred method of connection.


In this application, the:

- Vacuum motor receives pressure oil from the SCV retract coupler.
- Flow control valve is:
 - Set in a wide-open position.
 - Controlled by the tractor panel.
- Return oil is routed to the Power-Beyond return port.
- Return hose can be connected directly to the left-hand side of coupler three. For:
 - Standard-flow hydraulics equipped with a special return hose tip.

- High-flow hydraulics equipped with a special planter return hose tip.
- Implement lift assist cylinders are connected to the hitch-lowering valve using a T-fitting and a hydraulic hose.
 - The hitch lever controls the implement lift assist cylinders when activating the hitch valve.
 - SCV I is used to control both the hitch valve and the implement lift assist.
 - The 9-pin implement connector harness contains a loop circuit that disables the tractor hitch control unit when it is connected to the 9-pin connector for TouchSet depth control that is wired into the tractor main electrical harness.

EC82310,0000EFE-19-04NOV22


Implement Connection Example [Ag]: Pressure Control Valve Applications—Less Hitch (Grain Drills or Air Seeders with Constant Down-Pressure System)

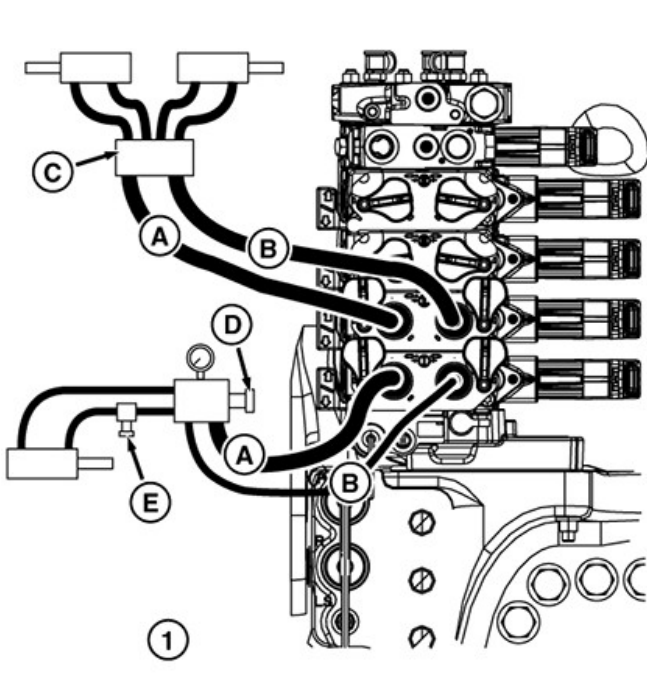

- 1—Standard Flow
2—High Flow
A—Extend Coupler Line
B—Retract Coupler Line
C—Selector Valve

IMPORTANT: Using more than one implement requiring the use of active downforce can damage the hydraulic system due to overheated hydraulic oil when:

- The ambient air temperature is high.

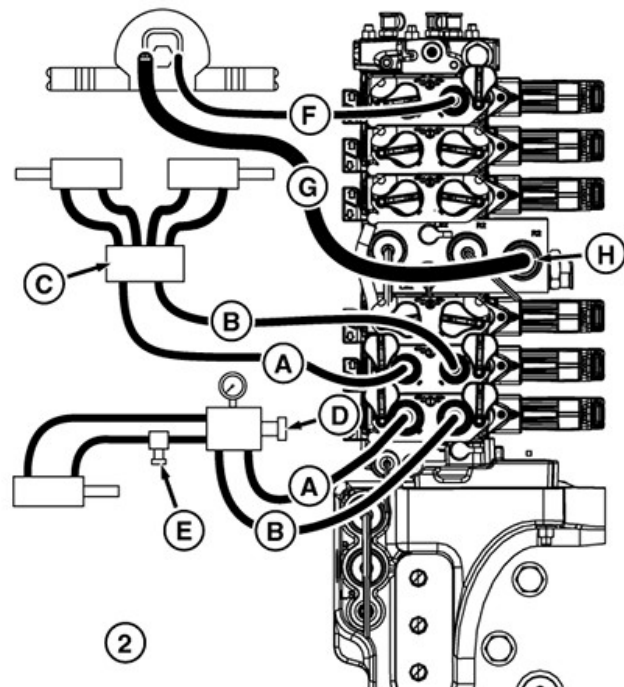

- D—Pressure Control Valve
E—Transport Lock Valve
F—Pressure Line
G—Return Line (power beyond return coupler—motor return)
H—Special Hose Tip

- The hydraulic pump is set to operate at maximum pressure.

If the ambient air temperature is high, do not use more than one implement at any given time.

Avoid seal damage:

- When motor return oil is routed to an SCV, a

RXA0188472—UN—31JAN23

special return hose tip with a check valve is required. The special hose tip prevents high-pressure oil from moving back toward the motor and possibly damaging the seals.

- Moving the SCV control lever to neutral will cause the motor to stop abruptly and may damage the seals. Always move the SCV lever to the float position to allow the motor to coast to a stop.


NOTE: The preferred method of connection is to connect the hydraulic motor to the high-flow pump.

In this application:

- The vacuum motor receives pressure oil from the retract port of the SCV.
- When using implements requiring active downforce, set the flow control to continuous and move the SCV lever to the detent position to set the hydraulic pump to operate at maximum pressure.

EC82310,0000F01-19-24MAR23

Implement Connection Example—High-Flow Hydraulics [Ag]: Implement Control Valves—Less Hitch

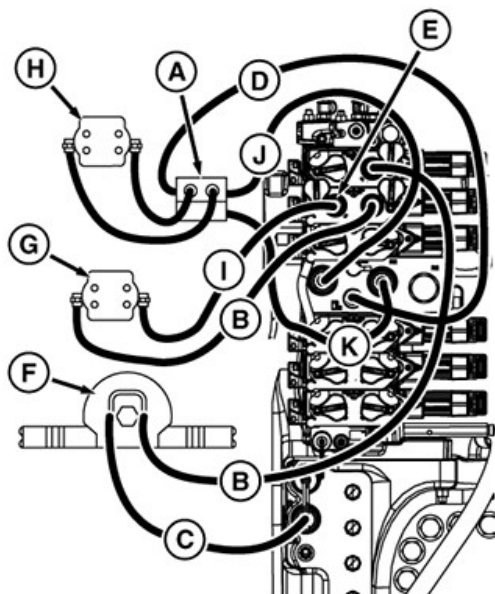

RXA0188473—UN—26JAN23

A—Variable Rate Drive (power beyond pressure coupler)
B—Pressure Line
C—Return Line (power beyond return coupler—motor return)
D—Power Beyond Load Sense Line

E—Return Hose Tip
F—Vacuum Motor
G—Hydraulic Motor
H—Hydraulic Motor
I—Return Line
J—Power Beyond Pressure Line
K—Power Beyond Return Line

IMPORTANT: Avoid seal damage:

- When motor return oil is routed to an SCV, a special return hose tip with a check valve is required. The special hose tip prevents high-pressure oil from moving back toward the motor and possibly damaging the seals.
- Moving the SCV control lever to neutral will cause the motor to stop abruptly and may damage the seals. Always move the SCV lever to the float position to allow the motor to coast to a stop.

NOTE: The preferred method of connection is to connect the hydraulic motor to the high-flow pump.

In this application:

- The secondary hydraulic pump operates the hydraulic and vacuum motor.
- Return oil is routed to the high-flow power beyond return port. If the return hose is equipped with a special return hose tip, it can be connected directly to the left-hand side of the coupler.
- The hydraulic motor (G) receives pressure oil from the retract port of the SCV. Since the return oil is routed to the extend port of the SCV, a special return hose tip is required.
- The hydraulic motor (H) receives pressure oil from the power beyond port. Return oil is routed to the power beyond return port.


EC82310,0000F06-19-08FEB23

Component Identification and Location [Scraper]

SCV covers are color coded for easy identification.

SCV Numbers and Corresponding Colors	
SCV	
Number	Color
I	Green
II	Blue
III	Brown
IV	Black
V	Violet
VI	Gray


Standard-Flow Hydraulics

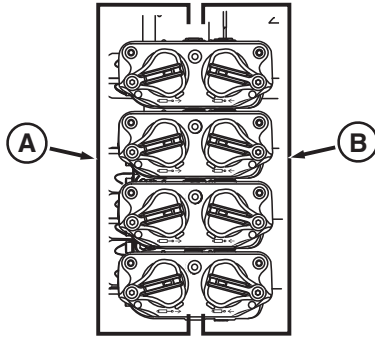

RXA0179031—UN—11AUG20

A—Extend Port (4 used)
B—Retract Port (4 used)

High-Flow Hydraulics (Premium)

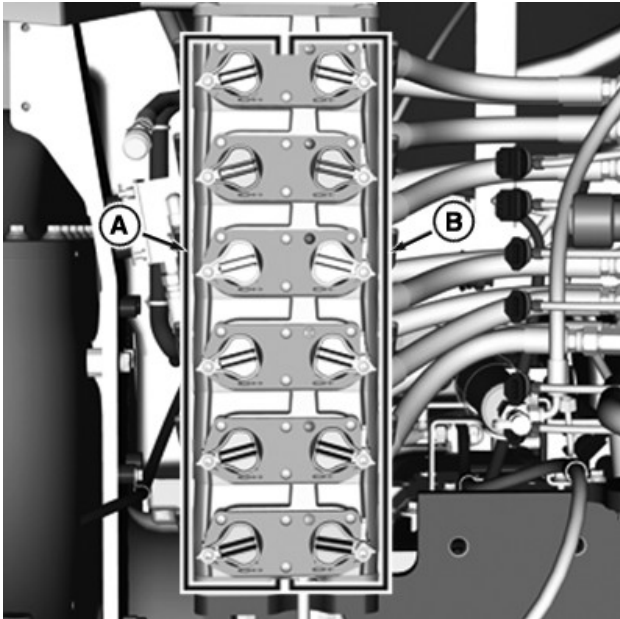


RXA0178008—UN—20MAY20

A—Extend Port (6 used)
B—Retract Port (6 used)

Both the primary hydraulic pump and the secondary hydraulic pump supply hydraulic oil to all six SCVs.

Features	SCV Coupler Option
	Premium
3/4-Inch Connection	Yes
Float	Yes
Couple/Decouple Under Pressure	Yes
Breakaway Capability	Yes

Select SCV Coupler

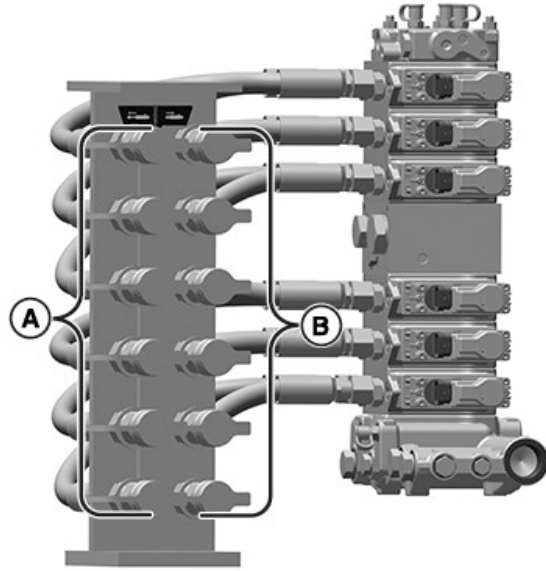

RXA0188474—UN—26JAN23

A—Extend Port (6 used)
B—Retract Port (6 used)

Features	SCV Coupler Option
	Select
3/4-Inch Connection	Yes
Float	Yes
Couple/Decouple Under Pressure	No
Breakaway Capability	No

EC82310,0000F07-19-20MAR23

Scraper Hydraulic Hose Tips [Scraper]

The table shows recommended John Deere scraper hydraulic hose tips for hoses with flat face O-ring seal connectors and couplers with O-ring boss ports.


Size			Part Number	
Hydraulic Hose		SCV Coupler mm (in)	Hose Tip	Hose-to-Coupler Adapter
Dash Number	Inner Diameter mm (in)			
-8	12.5 (0.50)	12 (0.5)	AR94522 ^a	38H1161
-12	19 (0.75)		AN233013	38H1163
		19 (0.75)	AT117365 ^b	

^aStandard [Ag] coupler

^bHigh-flow coupler

EC82310,0000F08-19-24MAR23

Implement Connection Example [Scraper]: Pulling 1, 2, and 3 Scrapers

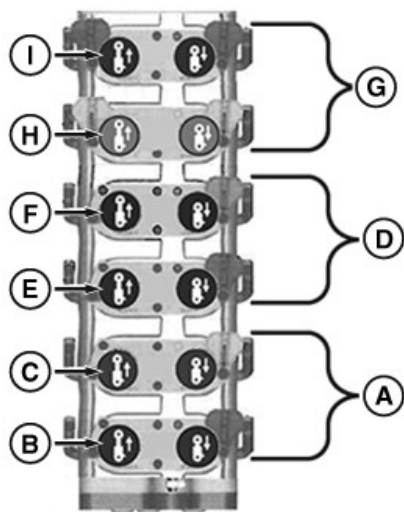

RXA0178010—UN—20MAY20

Pull Scraper Connection Examples

- A—Scraper 1
- B—SCV 1 (lift cylinder) (2 used)
- C—SCV 2 (gate/dump cylinder) (2 used)
- D—Scraper 2
- E—SCV 3 (lift cylinder) (2 used)
- F—SCV 4 (gate/dump cylinder) (2 used)
- G—Scraper 3
- H—SCV 5 (lift cylinder) (2 used)
- I—SCV 6 (gate/dump cylinder) (2 used)

EC82310,0000F09-19-04NOV22

TouchSet Depth Control

TouchSet Depth Control Settings and Adjustments

CAUTION: Avoid personal injury or death. Do not attempt to install depth control sensors on implements not intended for this system. See implement Operator's Manual.

While engine is running, moving the implement control unit, sensor, connectors, or linkages can result in unexpected movement. Stay clear of implement when starting engine.

TouchSet depth control allows a frequently used height and depth to be set and easily recalled. To use TouchSet depth control, SCV I must be properly connected and set to feature mode.

For more information on:

- Proper connection, see Attach Implement and Control System in this 's Manual section.
- Feature mode, see SCV Settings—Feature Mode in Selective Control Valves section of this 's Manual.
- Height and depth settings, see SCV Settings—Flow Adjustment in Selective Control Valves section of this Operator's Manual.

SCV lever adjustments:

- To move implement to upper or lower set point, briefly hold SCV lever in extend detent or retract detent position.
- To adjust implement position up or down by a fixed amount, tap SCV lever into extend or retract position.

For more information on SCV lever positions, see SCV Control Lever Adjustments in Selective Control Valves section of this Operator's Manual.

KD34109,000058D-19-20JUN22

Connect/Disconnect the Implement Position Connector

CAUTION: Prevent possible personal injury. To prevent implement movement, before connecting/disconnecting implements, always:

- 1.Shut off the engine.
- 2.Move the SCV lever to the neutral position.
- 3.Lock out the SCV controls.

IMPORTANT: Always shut off the engine before connecting or disconnecting the implement position connector. Connecting or disconnecting the implement position connector with the engine running can cause:

- The implement not to respond to commands.

- Diagnostic Trouble Codes (DTC) to appear.


If a DTC appears or the implement fails to respond to commands, reset the implement position connector. See Reset the Implement Position Connector.

Connect the Implement Position Connector

1. Position the rear of the tractor at the front of the implement.
2. Shut off the engine.

CAUTION: Prevent personal injury and equipment damage. Always set the hitch pin into the locked position.

3. Attach the implement to the drawbar.
4. Connect the implement hydraulic hoses. See Connect/Disconnect Hydraulic Hoses in the Hydraulic Connections section of this Operator's Manual.

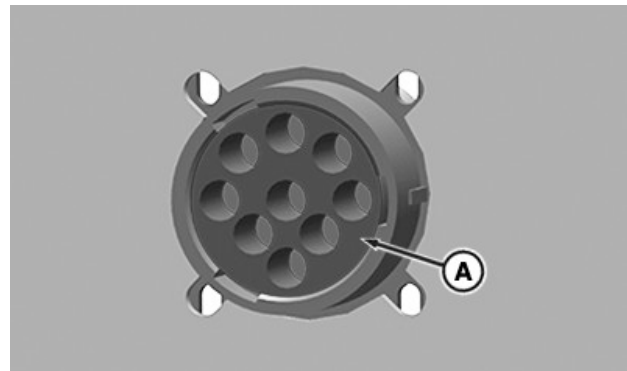

RXA0188984—UN—01JUN23
Tractor Wiring Harness Connector (A) is on a Bracket to the Right of the SCV Stack

5. Install the implement position connector to the tractor wiring harness connector.

Disconnect the Implement Position Connector

1. Shut off the engine.
2. Uninstall the implement position connector from the tractor wiring harness connector.
3. Disconnect the implement hydraulic hoses.
4. Detach the implement from the drawbar.

Reset the Implement Position Connector

To reset the implement connection:

1. Shut off the engine and allow the CommandCenter to shut down completely.
2. Disconnect the implement harness from the implement connector.
3. Start the tractor and allow the CommandCenter to start completely.

4. Shut off the engine and allow the CommandCenter to shut down completely.
5. Connect the implement harness to the implement connector.
6. Start the engine and allow the CommandCenter to start completely.
7. Operate the implement. If a DTC appears or the implement fails to respond to commands, see your John Deere dealer.

TS36762,0000202-19-16JUN23

Laser Scraper Control [Ag]

Laser Scraper—Scrapers Equipped with Scraper Control Unit

 **CAUTION:** Avoid personal injury or death. While engine is running, moving the scraper control unit, connectors, or linkages can result in unexpected movement. Stay clear of implement when starting engine.

NOTE: The system is used primarily in areas requiring an automated laser guidance system for scraper applications.

Automatic scraper control system allows raising, lowering, and setting the depth for the implement electronically without leaving the cab.

Setup

1. Connect implement to tractor using SCV I, III, or V.
2. Set connected SCV to AUTO. See SCV Settings—Feature Mode in Selective Control Valves section of this Operator's Manual.
3. Set flow for connected SCV. See SCV Settings—Flow Adjustment in Selective Control Valves section of this Operator's Manual.


Activation

To activate automatic scraper control system, briefly move corresponding SCV lever to extend detent or retract detent position. For more information on SCV lever positions, see SCV Control Lever Adjustments in Selective Control Valves section of this Operator's Manual.

KD34109,000058E-19-10NOV20

Scraper Information [Scraper]

Scraper Operation Cycle

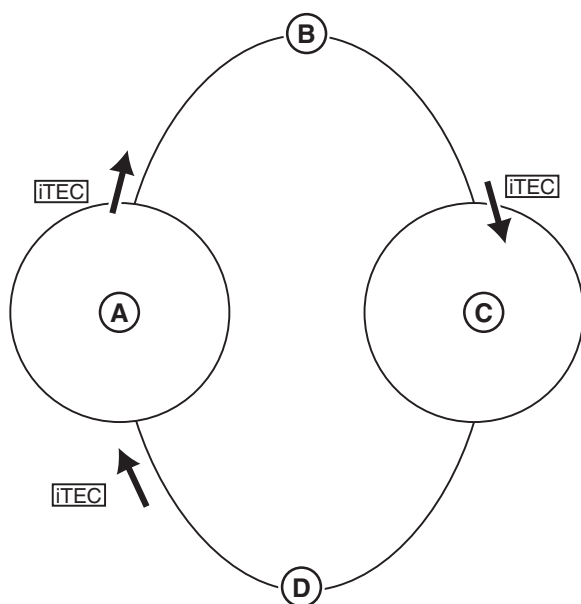

RXA0187404—UN—24JUN22
Scraper Cycle Diagram

A—Dig Area
B—Transport—Loaded
C—Dump Area
D—Transport—Unloaded

IMPORTANT: Operating the tractor with three scrapers requires the tractor and all scraper pans be equipped with hydraulic trailer brakes. See Towed Loads and Transport with Ballast in the Transport Section of this Operator's Manual.

Never exceed:

- Maximum tractor ballast of 24500 kg (54000 lb) with 65% on the front axle.
- 10206 kg (22500 lb) maximum scraper tongue load with short scraper drawbar.
- 8391 kg (18500 lb) maximum for scraper tractors with regular long scraper (Ag) drawbar support.

Towed Scrapers

Scraper Tractor Application Guidelines	
Trailer Brakes	Maximum Towed Load
Without	1.5 times tractor weight ^a
With	4.5 times tractor weight.

^aLimited to 32 km/h (20 mph) without trailer brakes

Follow manufacturer's Scraper Operation Recommendations and instruction in attaching and using scraper:

NOTE: Following these operating guidelines could result in extended tractor and scraper life as well as increased production.

- Limit depth of cut to maintain a loading speed no greater than:
 - 6.3 km/h (3.9 mph) with a group 48 size tire at 1900 RPM.¹
 - 5.9 km/h (3.6 mph) with a group 47 size tire at 1900 RPM.¹

For maximum power performance operate in 5th forward gear.
- Maintain minimum engine rpm of 1850 or higher in the cut.
- Ballast tractor correctly to maintain optimum slip of 8-12%.
- Shallow cuts at higher speeds will extend drivetrain life and increase overall productivity.
- Use iTEC (Intelligent Total Equipment Control) to combine downshifts/upshifts, raise/lower scrapers or other functions when returning to dig area or to/from transport part of cycle. (See Intelligent Total Equipment Control (iTEC) Section.)
- Drawbar height should be set so scraper cutting edge hits the ground before the scraper bottom. See Scraper Operator's Manual.
- Load downhill and/or towards the fill area when conditions allow.
- Set scraper(s) on ground before top loading.
- Activate differential lock before loading, disengage before turning.
- Use of differential lock should be limited to tough and wet areas or during the cut.
- Do not downshift below grounds speeds of:
 - 6.3 km/h (3.9 mph) with a group 48 size tire at 1900 RPM.¹
 - 5.9 km/h (3.6 mph) with a group 47 size tire at 1900 RPM.¹
- Reduce speed, and shift down before descending a hill.
- When possible load in 6th gear or above and target 1900-2150 rpm.
- Minimize all steering input during scraper loading.
- Avoid high speed dynamic maneuvers especially when loaded. (Sudden turns, transitions from slopes to flat surfaces, or heavy or sudden braking maneuvers.)
- Do not load in a turn.
- Do not turn tires or tracks into the tongue of the scraper.
- Maintain a smooth haul road and fill area.
- See operators manual for operating/service instructions and AutoLoad setup if equipped.

¹ These values vary depending upon the tractor configuration.

Efficiency Manager Recommendations

NOTE: Using AutoLoad will exit Efficiency Manager.

- Use Transmission Efficiency Manager for transport.
- Use both Efficiency Manager speed settings for transport. One speed setting at transport speed and the other at digging speed. Use the second Efficiency Manager speed setting to downshift tractor and bring ground speed closer to dig speed before switching to manual mode.

Example:

- Use set speed 2 for transport, set speed 1 for approaching loading and unloading area.
- Disengage efficiency manager before entering the cut.

RD47322,00000EB-19-24JUN22

Weight Transfer Limits

IMPORTANT: Do not exceed 10206 kg (22500 lb) maximum scraper tongue load transfer to short scraper drawbar and 8391 kg (18500 lb) maximum scraper tongue load transfer to long scraper drawbar. Excess weight transferred to tractor may cause structural or drivetrain damage.

When pulling a direct mounted scraper a portion of scraper and payload weight will be transferred to tractor. This additional weight on tractor can significantly improve productivity during the load cycle, especially when pulling two scrapers in tandem. After first scraper is loaded, tractor will have more pulling capability and will be able to load second bowl much faster, resulting in significantly reduced cycle times.

RD47322,00000EC-19-07JAN19

Scraper/Tractor Attachment

IMPORTANT: Failure to observe operating limits and follow proper operating procedures may reduce life of tractor and cause premature chassis, drivetrain and track system failures.

Proper machine operation is important to extend life of tracks, drivetrain and undercarriage, avoid downtime, and maximize operating efficiency.

Tongue Height

Height of scraper tongue determines angle of cutting edge relative to ground. If tongue is too low, bottom of scraper bowl will drag in cut. If tongue is too high, scraper will be difficult to control in cut. Optimum height for tongue is 46 to 53 cm (18 to 21 in) from ground.

Adjust tongue up or down through assemblies of hitch and yoke. When operating in soft conditions raising tongue height may improve ground clearance during transport. Tongue of rear scraper should be set at same height as front. See scraper Operator's Manual.

Drawbar Height

Drawbar height should be set so scraper cutting edge hits the ground before scraper bottom. See scraper Operator's Manual.

RD47322,00000ED-19-08JUN22

Loading Techniques

Loading Methods


There are three common loading techniques.

- Pull Loading - tractor pulling scraper(s) is preferred loading method. Generally the most economical method for loading scrapers.
- Push Loading - uses separate vehicle to push scraper. Only push load a scraper which is designed to be push loaded (i.e. ejector models). It is critical that push vehicle speed not exceed pull tractor speed or track overrun and slippage on drive wheels can result.

IMPORTANT: To prevent excessive shock loading into tractor through drawbar and hydraulic system during loading sequence when top loading, always lower scraper to ground before beginning loading cycle.

- Top Loading (i.e. excavator) - uses scraper as a haul unit loaded by an excavator.

Working Cycle Automation

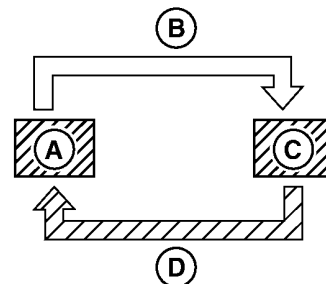

RXA0119628—UN—09AUG11

Working Cycle Automation

- A— Dig Area
- B— Loaded Transport
- C— Dump Area
- D— Unloaded Transport


Use iTEC (Intelligent Total Equipment Control) to combine downshifts and upshifts, raise or lower

scrapers or automate other functions when returning to dig area (A) or entering loaded (B) or unloaded transport (D) parts of cycle. See Intelligent Total Equipment Control (ITEC) section of this Operator's Manual.

Use Efficiency Manager for transport portions of cycle, not during loading operations. See e18 Set Speeds and Efficiency Manager in e18 PowerShift Transmission section of this Operator's Manual.

Limit depth of cut to maintain a loading speed higher than 7.1 km/h (4.4 mph)

Loading Sequence

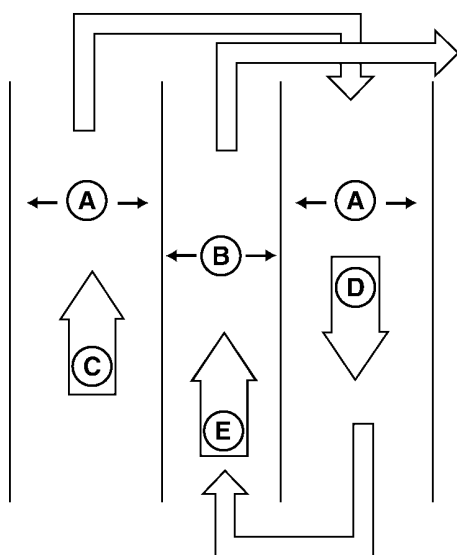

RXA0119629—UN—09AUG11

A—Scraper Width
B—Less Than Scraper Width
C—First Cut
D—Second Cut
E—Third Cut

After making first cut (C), make second cut (D) parallel to first at a distance from first cut that is less than scraper width (B). On third pass (E) pick up material between first two cuts.

When loading a direct mounted scraper in tandem with another scraper it is most efficient to load front scraper bowl first.

RD47322,00000EE-19-14APR23

Connect AutoLoad Harness

IMPORTANT: Always shut off the engine before connecting or disconnecting the AutoLoad harness. Connecting or disconnecting the AutoLoad harness with the engine running can cause:

- The scraper pan to not respond to Autoload commands.

- Diagnostic Trouble Codes (DTC) to appear.

If a DTC appears or the AutoLoad harness fails to respond to commands, reset the harness. See Reset the AutoLoad Harness.

1. Shut off the engine.



RXA0179346—UN—24AUG20

AutoLoad Harness Connector Outlet is Above the SCV Stack

2. Connect the AutoLoad harness from the scraper to the tractor AutoLoad harness connector outlet (A).
3. Refer to the Scraper Operation label for proper scraper operation or Scraper Operation Cycle in this Operator's Manual section.

Reset the AutoLoad Harness

To reset the harness connection:

1. Shut off the engine and allow the CommandCenter to shut down completely.
2. Disconnect the AutoLoad harness from the connector outlet.
3. Start the tractor and allow the CommandCenter to start completely.
4. Shut off the engine and allow the CommandCenter to shut down completely.
5. Connect the AutoLoad to the connector outlet.
6. Start the engine and allow the CommandCenter to start completely.
7. Operate the scraper pan. If a DTC appears or the AutoLoad fails to respond to commands, see your John Deere dealer.

AK08008,0000B3C-19-23JUN22

AutoLoad Settings—Access

Access Application through Display:



Menu

RXA0167075—UN—20MAR19

1. Menu



Machine Settings

RXA0167076—UN—20MAR19

2. Machine Settings tab



AutoLoad

RXA0180073—UN—09OCT20

3. AutoLoad

Access Application through Navigation Bar:



AutoLoad

RXA0168458—UN—30MAY19

Press AutoLoad button on navigation bar below display.

KD34109,000063A-19-23JUN22

AutoLoad Settings

The AutoLoad application is used to access and adjust AutoLoad settings. AutoLoad only functions in tractor gears 5—13.

NOTE: If a window shade appears saying that the SCV function stalled and to increase the flow rate, verify that the tractor is in one of the required gears (5—13).

When an AutoLoad scraper is connected to the tractor, the SCV page displays with the connected SCV (I, III, and/or V) in feature mode. For more information, see SCV Settings in Selective Control Valves section of this Operator's Manual. For the best reading accuracy, perform the drawbar sensor calibration annually. For the

calibration procedure, see Drawbar Sensor Calibration in Service—Check section of this Operator's Manual.

NOTE: Some items only display if the machine is equipped with the associated option.



RXA0180074—UN—09OCT20

AutoLoad Example

Items Accessible on AutoLoad Main Page:



Status Indicator

RXA0177921—UN—14MAY20

NOTE: A module is displayed for each attached AutoLoad compatible scraper.

Scraper Position Status Indicator — view the status of the scraper position relative to the set points. See AutoLoad Settings—Scraper Status in this Operator's Manual section.



Initial Draft

RXA0180085—UN—09OCT20

NOTE: A module is displayed for each attached AutoLoad compatible scraper.

Initial Draft — view and adjust the current initial draft setting. See AutoLoad Settings—Initial Draft in this Operator's Manual section.



RXA0180092—UN—09OCT20

Scraper Position

NOTE: A module is displayed for each attached AutoLoad compatible scraper.

Scraper Position — view and adjust the current scraper position and set points. See AutoLoad Settings—Scraper Position in this Operator's Manual section.



RXA0180075—UN—09OCT20

Average Draft

Average Draft — view and adjust the current average draft setting. See AutoLoad Settings—Average Draft in this Operator's Manual section.



RXA0180071—UN—09OCT20

Load Count

NOTE: After the counter reaches the maximum value (9999 loads), the count resets to zero.

Load Count — view and manually adjust the number of scraper loads hauled. To enable/disable automatic load counting, see AutoLoad Settings—Advanced in this Operator's Manual section.



RXA0180090—UN—09OCT20

Reset Load Count

Reset Load Count — reset the load count to zero. A page will display to verify the selection.



RXA0180094—UN—09OCT20
SCVs Unlocked



RXA0180093—UN—09OCT20
SCVs Locked

Status — view the SCVs locked or unlocked status.



RXA0167071—UN—21MAR19

Advanced Settings

Advanced Settings — access further adjustments and less common settings. See AutoLoad Settings—Advanced in this Operator's Manual section.

Run Page Modules

Add modules for this application to run pages using Layout Manager. See the G5 CommandCenter Operator's Manual.

Example:



RXA0180089—UN—09OCT20

Position

NOTE: Different modules may be available for your application.

Position — quick access to position module.

kd34109,1665685510737-19-13OCT22

AutoLoad Settings—Scraper Status

The status indicator shows the current position of the scraper relative to the set points. The color of the indicator will change depending on the current status (phase of the digging process) of the AutoLoad system.

Status Indicators:



RXA0177921—UN—14MAY20

Status Indicator

- **Black Indicator** — the indicator is illuminated black when the scraper is in the Transport position.
- **Gray Indicator** — the indicator is not illuminated and appears gray when a Fault is detected.
- **Green Indicator** — the indicator is illuminated green when the scraper is in the Entering the cut position.
- **Blue Indicator** — the indicator is illuminated blue when the scraper is in the Loading position.
- **Orange Indicator** — the indicator is illuminated orange when the scraper is in the Ready position.

KD34109,000063C-19-23JUN22

AutoLoad Settings—Initial Draft

The Initial Draft setting is means by which the operator can tune the work load of the system when entering the cut. The setting affects roughly the first half of the cut.

NOTE: A module is displayed for each attached AutoLoad compatible scraper.

Procedure to Modify:



RXA0180084—UN—09OCT20
Increase



RXA0180078—UN—09OCT20
Decrease

Select (+/++) to increase or (-/-) to decrease the setting. Use (++) and (- -) to increase or decrease the value at a higher rate than (+) and (-).



Value

RXA0180098—UN—09OCT20

The value is shown in the display box which is highlighted while being adjusted.



Indicator

RXA0169143—UN—25JUN19

The indicator shows the current setting. The closer to the maximum setting (250), the more aggressive (heavier) the cut will be. The closer to the minimum setting (0), the less aggressive (lighter) the cut will be.

KD34109,000063D-19-23JUN22

AutoLoad Settings—Scraper Position

The Scraper Position page shows the current position of

the scraper and allows adjustments to the scraper set points.

NOTE: A module is displayed for each attached AutoLoad compatible scraper.

Procedure to Modify:



RXA0180095—UN—09OCT20

Set Point Indicators

Set Point Indicators — small yellow indicators that represent the three scraper position set points. All three positions must be set for AutoLoad to operate.

- Transport (upper)
- Ready (lower)
- Loading (ground level)



RXA0180097—UN—09OCT20

Set Upper Limit

Transport — the desired position for scraper transport. After the scraper is moved to the desired position, select the set upper limit key. The corresponding SCV lever can be moved to extend detent to move the scraper to the transport position. If the scraper is above the set position when the lever is moved, the scraper will not move. For more information on SCV control lever adjustments, see SCV Control Lever Adjustments in Selective Control Valves section of this Operator's Manual section.



RXA0180086—UN—09OCT20

Set Lower Limit

Ready — the desired dumping position for the scraper. After the scraper is moved to the desired position, select the set lower limit key. The corresponding SCV lever can be moved to retract detent to move the scraper to the ready position. If the scraper is below the set position when the lever is moved, the scraper will not move. For more information on SCV control lever

adjustments, see SCV Control Lever Adjustments in Selective Control Valves section of this Operator's Manual section.



Set Ground Level
RXA0180082—UN—09OCT20

NOTE: John Deere recommends that the drop center blades are lowered to penetrate the ground. Lowering drop center blades allows the outer blades to touch the ground when setting ground level loading (entering the cut) position.

Loading — the desired position for the scraper to enter the cut. After the scraper is moved to the desired position, select the set ground level key.



Scraper Position Indicator
RXA0169140—UN—25JUN19

Position Indicator — indicates the current position of the scraper.

KD34109,000063E-19-23JUN22

AutoLoad Settings—Average Draft

The Average Draft setting is means by which the operator can tune the work load of the system after fully entering the cut. The setting affects roughly the last half of the cut. The setting is the same for all scrapers and only set in one location.

Procedure to Modify:



Decrease
RXA0180077—UN—09OCT20



Increase
RXA0180083—UN—09OCT20

Select (+/++) to increase or (-/- -) to decrease the setting. Use (++) and (- -) to increase or decrease the value at a higher rate than (+) and (-).



Input Box
RXA0180098—UN—09OCT20

The value is shown in the display box which is highlighted while being adjusted.



Indicator
RXA0169143—UN—25JUN19

The indicator shows the current setting. The closer to the maximum setting (250), the more aggressive (heavier) the cut will be. The closer to the minimum setting (0), the less aggressive (lighter) the cut will be.

KD34109,000063F-19-23JUN22

AutoLoad Settings—Advanced

Advanced Settings allows you to access further adjustments and less common settings.

Items Accessible on Advanced Settings Page:



Setup Wizard
RXA0180096—UN—09OCT20

AutoLoad Setup — the Setup Wizard takes you through the steps to set up the AutoLoad scraper positions.



Auto Dimensions



Manual Dimensions

Auto/Manual Dimensions
RXA0180091—UN—09OCT20

Scraper Dimensions — set dimensions using the scraper model or by entering them manually. See AutoLoad Settings—Scraper Dimensions in this Operator's Manual section.



ON/OFF
RXA0167187—UN—22MAR19

NOTE: AutoLoad will increment the load count each time the automated cut is deactivated, either by manually taking over scraper control or by detenting to the upper set position. If the automated cut is stopped and restarted, the load count increments twice. The load count needs to be manually corrected, if desired. AutoLoad counts each individual scraper load, not the number of cycles.

Load Count — select ON to enable or OFF to disable automatic load counting.

KD34109,0000640-19-23JUN22

AutoLoad Settings—Scraper Dimensions

Set up scraper dimensions manually or by model.

Procedure to Modify:

To set up by selecting model:



Auto Dimensions

RXA0180072—UN—09OCT20

Auto Dimensions

1. Select Auto Dimensions.



RXA0180076—UN—09OCT20

Model Selection Box

2. Select the model selection box.



RXA0180088—UN—09OCT20

Model List

3. Select the model from the list.

To set up by entering dimensions:

NOTE: Scraper dimensions can only be entered if the tractor, drawbar, and scraper are equipped with AutoLoad components.




Manual Dimensions

RXA0180087—UN—09OCT20

Manual Dimensions

1. Select Manual Dimensions.

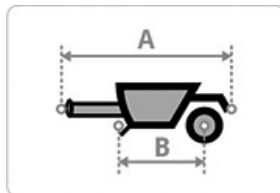

RXA0180081—UN—09OCT20

Dimension Reference

A

22 ft

RXA0180079—UN—09OCT20

Dimension A

2. Select input box A to enter the scraper length dimension. A number pad will display to enter the dimension.

B

13 ft

RXA0180080—UN—09OCT20

Dimension B

3. Select input box B to enter the blade-to-axle dimension. A number pad will display to enter the dimension.

John Deere Scraper Dimension Chart		
Scraper Model	Scraper Tongue Pin to Rear Pin Length (A)	Scraper Blade to Rear Axle Length (B)
	ft	
1510C	24.3	8.3
1510DC	24.3	8.3
1512C	23.3	7.6
1810C	27.0	9.3
1810DC	27.0	9.3
1812C	24.3	8.3
1812DC	24.3	8.3
1814C	24.6	7.6
1814DC	24.6	7.6
2112C	29.2	9.6
2112DC	29.2	9.6
1512E	27.7	7.8
1612DE	27.7	7.8
1810E	29.2	9.3
2010DE	29.2	9.3
2010DE Two Tire	31.2	10.5
1814E	26.3	7.8
2014DE	26.3	7.8
2112E	31.6	9.8
2412DE	32.8	9.8
2412DE Two Tire	33.9	10.5


KD34109,0000641-19-23JUN22

- Dimension A (scraper length) is the distance between the scraper front tongue pin and the rear pin connecting a tandem scraper.
- Dimension B (blade-to-axle) is the distance from the shallowest cutting blade tip to the rear axle.

Wheels and Tires—General Information

Determine Tire Load Capacity

CAUTION: Never exceed tire load capacity or permissible axle loads. See Tire Load Index section in this Operator's Manual for more information on permissible max load.

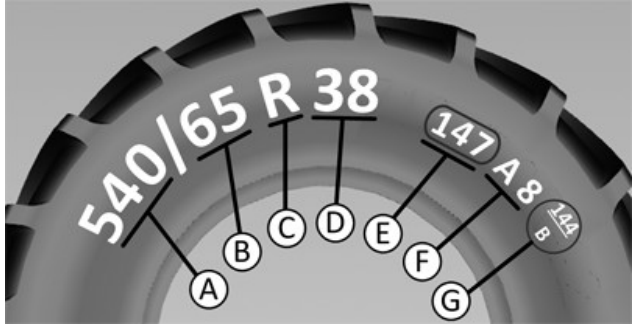

LX299192—UN—18NOV16

Example of Manufacturers' Information on Tire Sidewall

- A—Tire Width: Width in millimeters
- B—Aspect Ratio: Ratio of tire height to tire width
- C—Type: "R" = radial; "—" = cross-ply (example: 18.4-38)
- D—Rim Diameter: Diameter in inches
- E—Load Index (LI): Maximum permissible load capacity per tire, in relation to speed index (F)
- F—Speed Index: Maximum permissible ground speed at which (E) applies
- G—LI/Speed Index: Tire load capacity at alternative permitted ground speed

Additional Information That Can Be Displayed on the Sidewall

- **Direction of rotation** - Icon (usually an arrow or group of arrows) indicating tire rotation direction.
- **Maximum load and pressure information** - Maximum load a tire is permitted to carry under specified pressure and operating conditions. See Recommended Pressures charts in Wheels, Tires, and Treads section of this Operator's Manual.
- **Safety warnings** - Important information provided by tire manufacturer.

Tire Load Capacity at a Specific Ground Speed

Load capacity (LI) (E) at maximum permissible ground speed (F) is found on the tire sidewall.

Information listed as (G) indicate that the tire is approved for alternative ground speed and maximum permissible load capacity.

Speed Index (G)	Maximum Permissible Ground Speed km/h (mph)
A6	30 (19)
A8	40 (25)
B	50 (30)
D	65 (40)

Example: a tire sidewall indicating 540/65R38 147A8 (144/B) allows two load and speed index options.

540/65R38 147A8 (144/B)		
Maximum	Tire Load and Speed Index	
	Option 1	Option 2
	147A8	144/B
Load Capacity Per Tire kg (lb)	3075 (6780)	2800 (6175)
Permissible Ground Speed km/h (mph)	40 (25)	50 (30)

Local laws and regulations can restrict travel speeds to figures lower than the travel speeds quoted here.

EC82310,0000400-19-15MAR21

Tire Group Sizes

NOTE: If tire group change is desired, see your John Deere dealer.

Section Width	RCI Group Size	
	47	48
480 [Ag]	480/80R46	480/80R50 IF480/80R50
520 [Ag]	520/85R42	520/85R46
620	620/70R42	620/70R46
650	—	650/85R38 VF650/85R38
710	710/70R38 IF710/70R38	710/70R42 IF710/70R42 VF710/70R42
800 [Ag]	—	800/70R38 VF800/70R38 LSW800/55R46

TO84419,0000139-19-27JUN22

Change Tire Size

IMPORTANT: Before changing size of tire, see **Select Tire Combinations in Wheels and Tires—General Information** section of this Operator's Manual.

See your John Deere dealer to recalibrate for tire size.

Perform wheel slip calibration (see Slip Calibrations in CommandCenter section of this Operator's Manual).

RW29387,0000629-19-23JUN22

Use Correct Tire Combinations

CAUTION: Prevent possible injury. High-speed transport with outer duals removed can cause loss of steering control and reduce vehicle stability. Reduce speed immediately if loss of steering control occurs.

If outer duals must be removed, adjust wheels to wider tread and travel at slow speeds.

[Ag] Do not operate with single wheels except if equipped with 800/70R38, VF800/70R38, OR LSW800/55R46 tires.

[Scraper] Never operate with single wheels and tires.

IMPORTANT: Avoid excessive drivetrain wear or possible reduction in performance. Do not mix worn and new tires, bias and radial, or tires of different diameters. Do not use R2 tires in combination with R1.

TO84419,0000141-19-13JUN22

Tire Load Index

IMPORTANT: Tire load capacity can exceed allowable axle loading. Ballast tractor according to engine power and weight split guidelines. For more information, see Performance Ballasting section of this Operator's Manual.

IMPORTANT: Tractors equipped with duals or triples should be limited to whichever is lower: 179 LI or what is identified on the tire sidewall.

IMPORTANT: Avoid tractor damage. Never exceed the maximum ballast weight when operating with heavy draft loads. See Performance Ballasting section of this Operator's Manual.

Tire industry uses a number called "load index" to define load rating of a tire. This chart lists, for a given load index, maximum amount of weight that can be supported by each tire at manufacturer's maximum rated pressure.

Load carrying capacity per tire is reduced for tractors equipped with duals and triple.

Load Index	Maximum Load per Tire ^a			Load Index	Maximum Load per Tire ^a		
	Singles kg (lb)	Duals kg (lb)	Triples [Ag] kg (lb)		Singles kg (lb)	Duals kg (lb)	Triples [Ag] kg (lb)
137	2300 (5071)	2024 (4462)	1886 (4158)	164	5000 (11023)	4400 (9700)	4100 (9039)
138	2360 (5203)	2077 (4579)	1935 (4266)	165	5150 (11354)	4532 (9991)	4223 (9310)
139	2430 (5357)	2138 (4714)	1993 (4393)	166	5300 (11684)	4664 (10282)	4346 (9581)
140	2500 (5512)	2200 (4850)	2050 (4519)	167	5450 (12015)	4796 (10573)	4469 (9852)
141	2575 (5677)	2266 (4996)	2112 (4655)	168	5600 (12346)	4928 (10864)	4592 (10124)
142	2650 (5842)	2332 (5141)	2173 (4791)	169	5800 (12787)	5104 (11252)	4756 (10485)
143	2725 (6008)	2398 (5287)	2235 (4926)	170	6000 (13228)	5280 (11640)	4920 (10847)
144	2800 (6173)	2464 (5432)	2296 (5062)	171	6150 (13558)	5412 (11931)	5043 (11118)
145	2900 (6393)	2552 (5626)	2378 (5243)	172	6300 (13889)	5544 (12222)	5166 (11389)
146	3000 (6614)	2640 (5820)	2460 (5423)	173	6500 (14330)	5720 (12610)	5330 (11751)
147	3075 (6779)	2706 (5966)	2522 (5559)	174	6700 (14771)	5896 (12998)	5494 (12112)
148	3150 (6945)	2772 (6111)	2583 (5695)	175	6900 (15212)	6072 (13386)	5658 (12474)
149	3250 (7165)	2860 (6305)	2665 (5875)	176	7100 (15653)	6248 (13774)	5822 (12835)
150	3350 (7385)	2948 (6499)	2747 (6056)	177	7300 (16094)	6424 (14162)	5986 (13197)
151	3450 (7606)	3036 (6693)	2829 (6237)	178	7500 (16535)	6600 (14550)	6150 (13558)
152	3550 (7826)	3124 (6887)	2911 (6418)	179	7750 (17086)	6820 (15036)	6355 (14010)
153	3650 (8047)	3212 (7081)	2993 (6598)	180	8000 (17637)	6820 (15036)	6355 (14010)
154	3750 (8267)	3300 (7275)	3075 (6779)	181	8250 (18188)	6820 (15036)	6355 (14010)
155	3875 (8543)	3410 (7518)	3178 (7005)	182	8500 (18739)	6820 (15036)	6355 (14010)
156	4000 (8818)	3520 (7760)	3280 (7231)	183	8750 (19290)	6820 (15036)	6355 (14010)
157	4125 (9094)	3630 (8003)	3383 (7457)	184	9000 (19841)	6820 (15036)	6355 (14010)
158	4250 (9370)	3740 (8245)	3485 (7683)	185	9250 (20393)	6820 (15036)	6355 (14010)
159	4375 (9645)	3850 (8488)	3588 (7909)	186	9500 (20944)	6820 (15036)	6355 (14010)
160	4500 (9921)	3960 (8730)	3690 (8135)	187	9750 (21495)	6820 (15036)	6355 (14010)
161	4625 (10196)	4070 (8973)	3793 (8361)	188	10000 (22046)	6820 (15036)	6355 (14010)
162	4750 (10472)	4180 (9215)	3895 (8587)	189	10300 (22707)	6820 (15036)	6355 (14010)
163	4875 (10748)	4290 (9458)	3998 (8813)	190	10600 (23369)	6820 (15036)	6355 (14010)

^aAt manufacturer's maximum rated pressure.

Tire Inflation Pressure Guidelines

Check tire inflation pressure *at least* every two weeks, while tires are cool using an accurate dial or stick-type gauge having 10 kPa (0.1 bar) (1 psi) graduations.

NOTE: Use a special air-water gauge and measure with valve stem at bottom if tires contain liquid ballast.

Checking inflation pressures of inner wheels is much easier, if valve stems of inner and outer tires are aligned at time outer wheel is installed.

Correctly inflated radial tires show a deflection of sidewall. This is normal and does not harm tire.

Inflation pressures less than 80 kPa (0.8 bar) (12 psi) should be monitored frequently because of increased risk of low pressure air leaks.

NOTE: Bead slip can be experienced in high-traction conditions, with single tire usage. Increasing inflation pressure will help but will reduce traction.

Maximum tire pressure is specified on tire sidewall.

Determine correct tire pressure by weighing tractor using following procedure:

- Front axle weight with implement lowered
- Rear axle weight with implement raised

Set tire inflation pressures according to weight measured. *Ballasting and tire inflation pressure may need to be adjusted when operating conditions change.* Use inflation tire charts on following pages.

NOTE: If tractor is equipped with front-mounted implement, raise implement when determining front axle weight and lower implement when determining rear axle weight. If tractor is equipped with both a front and rear-mounted implement, raise both implements.

IMPORTANT: Inflation pressures exceeding heavy ballast guidelines of 76 kg/kW (125 lb/hp) are not recommended. Tractor efficiency will be decreased. Use larger dual or triple wheels.

Managing Tire Inflation Pressures

IMPORTANT: Integral implements transfer significant weight to rear axle. Include this added weight when determining correct inflation pressures. (See Performance Ballasting section in this Operator's Manual.)

Tractors operating on steep side slopes or furrow plowing should increase rear tire pressures 30 kPa (0.3 bar) (4 psi) above values listed for base pressures 80 kPa (0.8 bar) (12 psi) and above to compensate for lateral weight transfer, however, never exceed maximum tire pressure as specified on tire sidewall. For base pressures below 80 kPa (0.8 bar) (12 psi), pressure should be increased by 30 percent.


NOTE: All tires on an axle must have same inflation pressure.

[Ag] Tractors with heavy hitch-mounted implements require increased rear tire inflation pressures to carry increased weight during transport.

TO84419,000013A-19-25JUL18

Wheels and Tires

Wheel, Tire, and Tread Guidelines

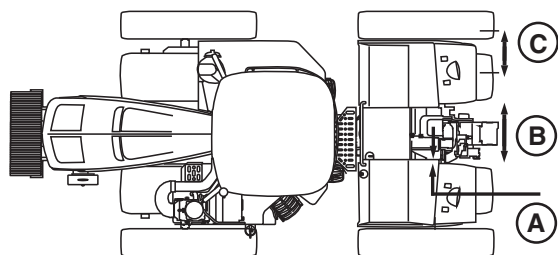

RXA0160097—UN—06JUL17

IMPORTANT: Tires must have at least 25 mm (1 in) clearance (A) with fenders. Clearance (B) between tires must be at least 1041 mm (41 in), with tires equal distance from center line.

[Ag] Clearance between tires must be at least 1179 mm (46.4 in) for Category 4 hitch, 1041 mm (41 in) for Category 4N, and 1047 mm (41.2 in) for Category 3 hitch, when no side sway is permitted on mounted implements. With sway allowed, check tire clearance before using equipment.

[Ag] Shims further reduce hitch side sway. Lengthening lift links to maximum length provides more clearance for "row cropping" at 762 mm (30 in) treads. See your John Deere dealer.

Extremely wide wheel spacings provide higher loads for axle bearings and shafts. Try to minimize overall tread width.

For agricultural land leveling operations, never use tires wider than 710 mm. Maximum outer tread spacing is 3690.6 mm (145.3 in). See Agricultural Heavy-Duty Land Leveling Package [Ag] in Specifications section of this Operator's Manual.

Maximum Mean Tread Width by Implement Type		
Implement Type	Maximum Mean Tread Width mm (in)	
	[Ag]	[Scraper]
Hitch-Mounted	2800 (110)	—
Towed	3130 (123)	2800 (110)

Tire Centerline		
Tire Section mm (in)	Minimum Spacing mm (in)	
	[Ag]	[Scraper]
480 (18.9)	626 (24.6)	—
520 (20.5)	670 (26.4)	—
620 (24.5)	801 (31.5)	801 (31.5)

Tire Centerline		
Tire Section mm (in)	Minimum Spacing mm (in)	
	[Ag]	[Scraper]
650 (25.5)	825 (31.5)	825 (31.5)
710 (28.8)	890 (35.0)	890 (35.0)
800 (30.5)	1008 (39.7)	—

EC82310,00005FB-19-10APR23

Tread Settings

IMPORTANT: Use of clamp-on dual wheels is not allowed. A separate hub is required for each dual or triple tire.

For agricultural land leveling operations, never use tires wider than 710 mm. Maximum outer tread spacing is 3690.6 mm (145.3 in). See Agricultural Heavy-Duty Land Leveling Package [Ag] in Specifications section of this Operator's Manual.

NOTE: See Wheel, Tire, and Tread Guidelines in this section of this Operator's Manual.

Tread width is measured between center of tires. Approximate tread ranges for each tire size and configuration are shown in the following charts.

Tread Width—Single Wheels

[Ag]		
Tire Size	Tire Range Minimum—Maximum mm (in)	
	Inner	
800/70R38	1921—2630 (75.6—103.5)	
LSW800/55R46		

Tread Width—Dual Wheels

[Ag]		
Tire Size	Tire Range Minimum—Maximum mm (in)	
	Inner	Outer
480/80R46 ^a	1576 ^b —1910 (62.1—75.2)	2968—3348 (116.9—131.8)
480/80R50 ^a		
520/85R42 ^a	1616—2063 (63.6—81.2)	2987—3450 (117.6—135.8)
520/85R46 ^a		
620/70R42 ^a	1734—2063 (68.3—81.2)	3336—3615 (134.1—142.3)
620/70R46 ^a		
650/85R38 ^a	1756—1966 (69.2—77.4)	3406—3648 (134.1—143.6)
710/70R38 ^a	1832—1844 (72.1—72.6)	3612—3624 (142.2—142.7)

Wheels and Tires

[Ag]		
Tire Size	Tire Range Minimum—Maximum mm (in)	
	Inner	Outer
710/70R42 ^a	1832—1911 (72.1—75.2)	3612—3691 (142.2—145.3)
800/70R38 ^a	1921—2188 (75.6—86.0)	3937—4077 (155.0—160.5)
LSW800/ 55R46 ^a	1921—2188 (75.6—86.0)	3937—4077 (155.0—160.5)

^aCast/Steel.

^bFor tractors without HydraCushion suspension the minimum can be 1530mm (60in).

[Scraper]		
Tire Size	Tire Range (Minimum-Maximum) mm (in)	
	Inner	Outer
620/70R42 ^a	1734-2063 (68.3-81.2)	3336-3615 (131.4-142.3)
620/70R46 ^a		
650/85R38 ^a	1756-1966 (69.2-77.4)	3406-3648 (134.1-143.6)
710/70R38 ^a	1832-1844 (72.1-72.6)	3612-3624 (142.2-142.7)
710/70R42 ^a	1832-1911 (72.1-75.2)	3612-3691 (142.2-145.3)

^aCast/Steel.

Tread Width—Triple Wheels

Additional spacings can be obtained by slight adjustment of inner and dual wheels.

[Ag]			
Tire Size	Tread Width mm (in)		
	Inner	Dual	Triple
480/80R46 ^a	1500 (59.0)	2828 (111.3)	4090 (161.0)
520/85R42	1616 (63.6)	2987 (117.6)	4374 (172.2)
480/80R50	1576 ^b (62.1)	2828 (111.3)	4090 (161.0)
520/85R46	1616 (63.6)	2978 (117.2)	4356 (171.5)

^a480/80R46 triples are not compatible with HydraCushion suspension system.

^bFor tractors without HydraCushion suspension the minimum can be 1543 mm (60.8 in).

TO84419,0000144-19-27JUN22

Dual Tire Use

IMPORTANT: Installation of dual tires wider than 800 mm (31.5 in) can cause damage to the axles from overloading.


Never use clamp-on dual wheels. Each dual or triple tire requires a separate hub.

For agricultural land leveling operations, never use tires larger than 710 mm. Maximum outer tread spacing is 3690.6 mm (145.3 in). See Agricultural Heavy-Duty Land Leveling Package [Ag] in Specifications section of this Operator's Manual.

Installation of dual tires wider than 800 mm (31.5 in) is not recommended unless certain precautions are followed. See your John Deere dealer for recommendations.

TO84419,0000142-19-07MAR22

Triple Wheels [Ag]

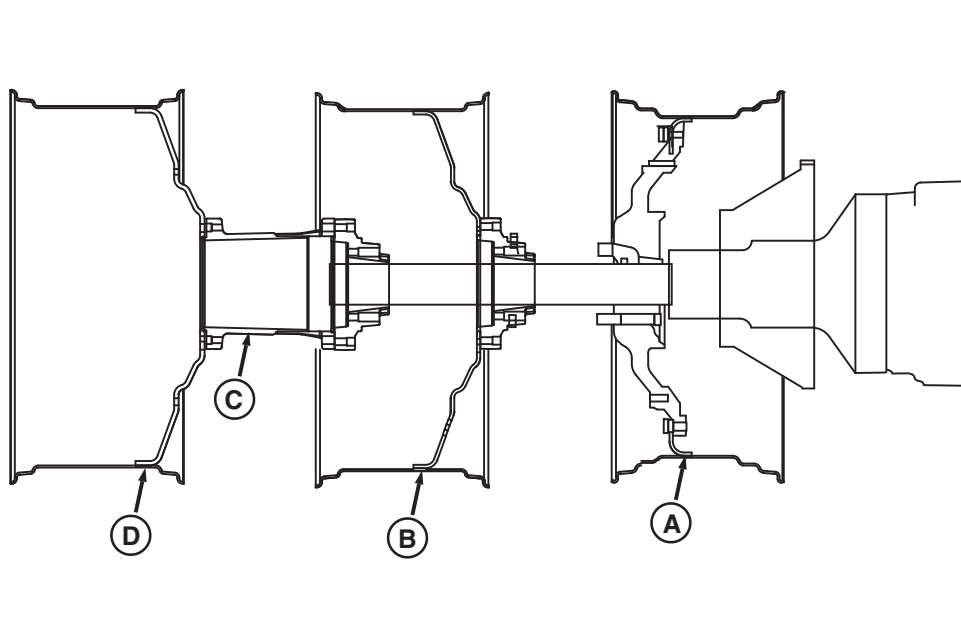


Standard Wheel Hubs

RXA0161140—UN—24OCT17

A—Inner Wheel
B—Dual Wheel

C—Hub Extension
D—Outer Wheel

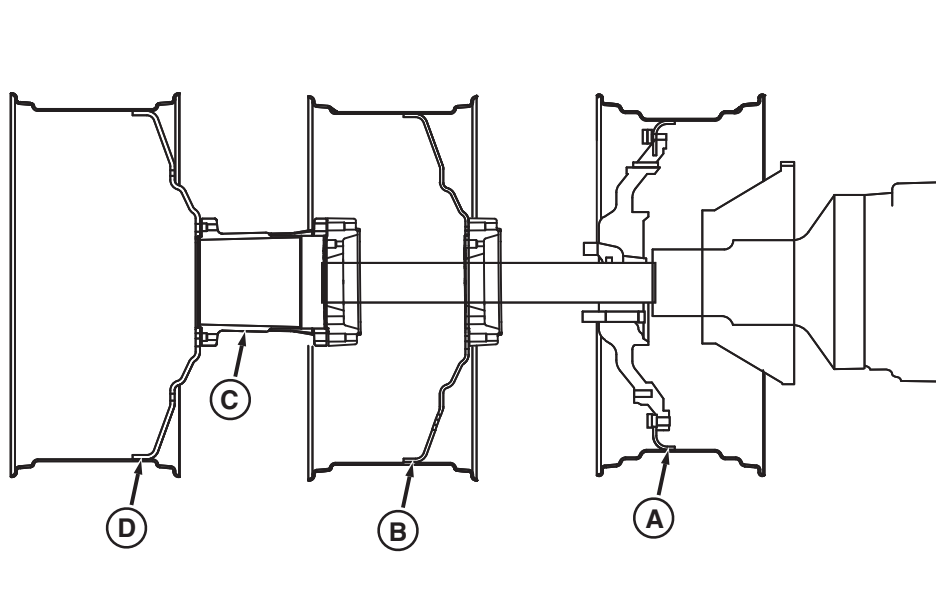

Heavy-Duty Wheel Hubs

RXA0161141—UN—24OCT17


A—Inner Wheel
B—Dual Wheel

C—Hub Extension
D—Outer Wheel

See following pages for instructions on installing wheel hardware and torque specifications.

TO84419,0000146-19-28APR22

Triple Wheels (Heavy Duty Wheel Hubs)

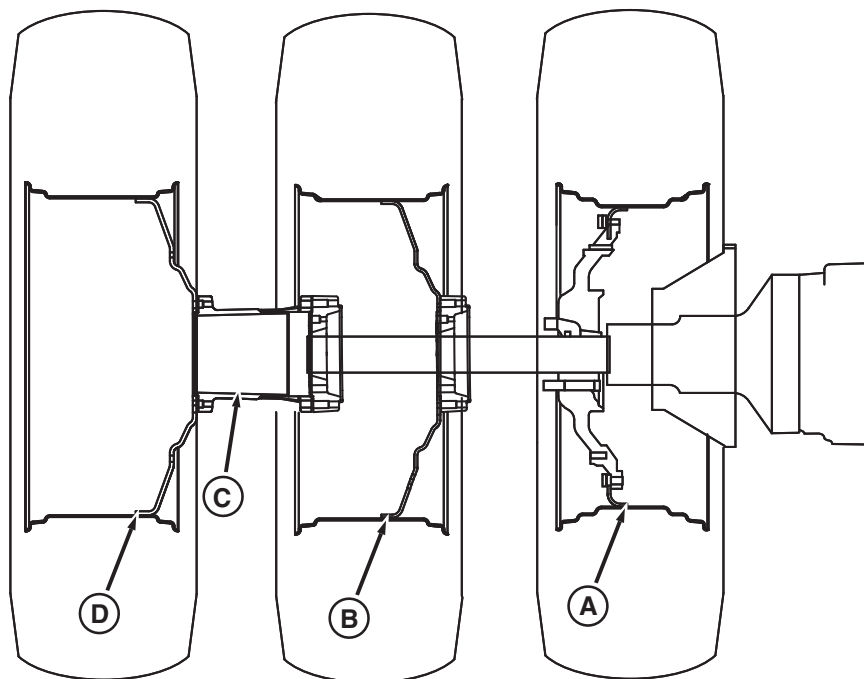

Triple Wheels (Heavy Duty Wheel Hubs)

RXA0073454—UN—13FEB04

A—Inner Wheel
B—Dual Wheel


C—Hub Extension
D—Outer Wheel

See following pages for instructions on installing wheel hardware and torque specifications.

TO84419,0000147-19-15JUN12

Install Wheel Rim to Drive (Inner) Wheel Hub

CAUTION: Avoid personal injury and equipment damage. Completely follow torque sequence and procedure. Never operate tractor with loose wheel bolts. Wheel bolts are critical and require retightening.

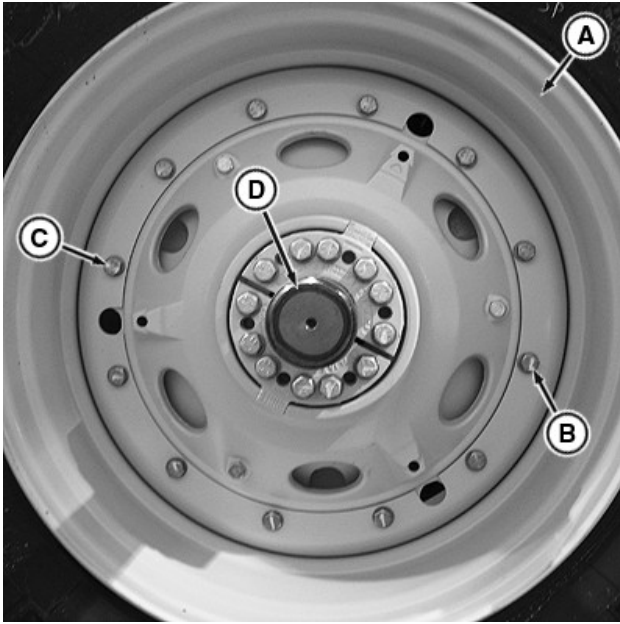

RXA0110877—UN—22SEP10


NOTE: For improved centering, wheel rim (A) has one tight-fit (B) hole and one slot-fit hole (C) hole is 180° from the tight-fit hole.

Ensure the wheel retaining snap ring (D) is properly seated in the axle groove.

1. Install and hand-tighten bolt in tight-fit hole.
2. Install and hand-tighten bolt in slot-fit hole.
3. Install and hand-tighten remaining bolts.
4. Tighten all bolts to 610 N·m (450 lb·ft).
5. Drive tractor 100 meters (100 yd) and retighten bolts.
6. Tighten bolts after working 3 hours, 10 hours, and daily for first week of operation and every 500 hours thereafter.

NOTE: For continual heavy draft load operation, like scrapers, tighten every two hours during the first week of operation.

TO84419,0000148-19-04NOV20

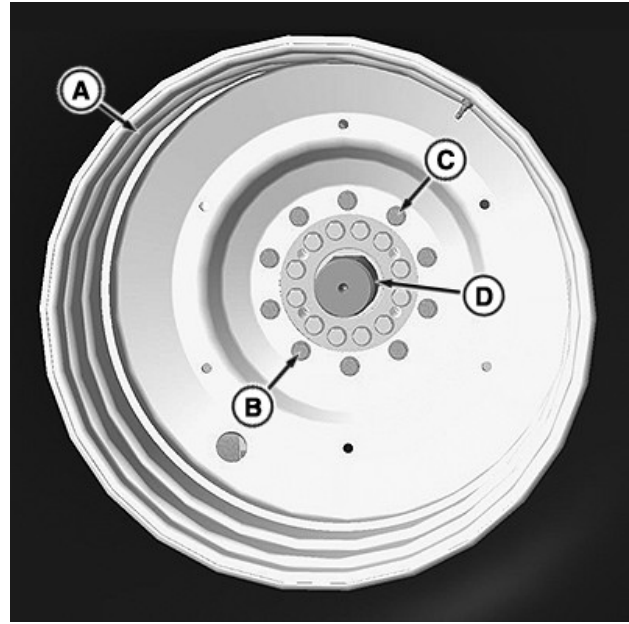

RXA0180504—UN—20NOV20

NOTE: For improved centering, wheel rim (A) has one tight-fit (B) hole and one slot-fit hole (C) hole is 180° from the tight-fit hole.

Ensure the wheel retaining snap ring (D) is properly seated in the axle groove.

1. Install and hand-tighten bolt in tight-fit hole.
2. Install and hand-tighten bolt in slot-fit hole.
3. Install and hand-tighten remaining bolts.
4. Tighten all bolts to 725 N·m (540 lb·ft).
5. Drive tractor 100 meters (100 yd) and retighten bolts.
6. Tighten bolts after working 3 hours, 10 hours, and daily for first week of operation and every 500 hours thereafter.

NOTE: For continual heavy draft load operation, like scrapers, tighten every two hours during the first week of operation.

EC82310,0000F56-19-19NOV20

Install Wheel Rim to Dual Wheel Hub

CAUTION: Avoid personal injury and equipment damage. Completely follow torque sequence and procedure. Never operate tractor with loose wheel bolts. Wheel bolts are critical and require retightening.

Wheel Weight Holding Wrench—JDG10958



RXA0100328—UN—03FEB09
JDG10958 Wheel Weight Holding Wrench



RXA0100329—UN—03FEB09
Outer Wheel Weight



RXA0100330—UN—03FEB09
Inner Wheel Weight

JDG10958 Holding Wrench (A) can be used when multiple inner and outer wheel weights are stacked on tractor wheel.

Holding Wrench is designed to hold M20 wheel weight cap screws in limited access areas while tightening cap screws to 610 N·m (450 lb·ft).

Wrench is available from your John Deere Dealer.

TO84419,000014A-19-29JUN17

Adjust and Tighten—Drive (Inner) Wheel Hubs


CAUTION: Avoid personal injury. Never run the engine with transmission in gear when adjusting wheels. Wheels on the ground could pull supported wheels off jackstands.

Never operate tractor with a loose rim, wheel or hub.

IMPORTANT: Carefully follow procedure. Failure to do so could damage the sleeve or the cast wheel.

Clean any paint, grease, film, rust or debris from axle shafts, cap screws, and threads prior to positioning and installing wheel sleeves and cast wheel. Never apply any lubricant to cap screws, threads, wheel or axle.

1. Raise the tractor on level ground and support tractor with jackstands.

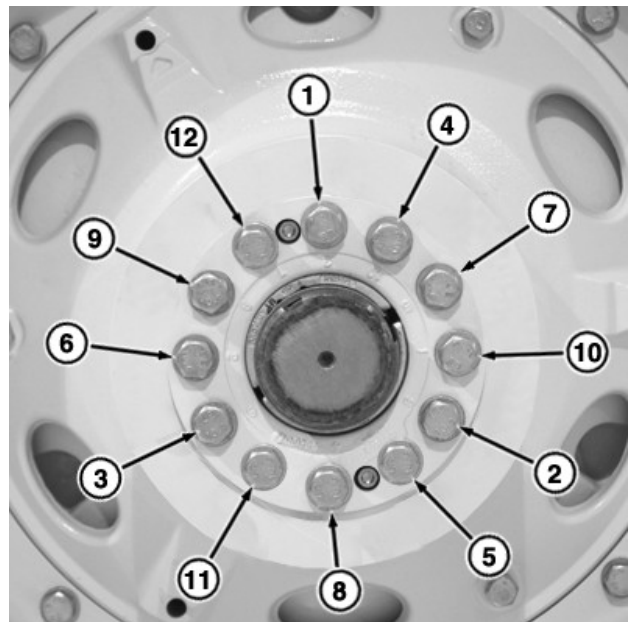

RXA0090157—UN—08AUG06
Torque sequence: Double-taper heavy-duty drive wheel hub assembly



RXA0178134—UN—28MAY20

Torque sequence: Double-flat heavy-duty drive wheel hub assembly

2. Loosen (without removing) sleeve bolts (1-12) just enough to move wheel.

IMPORTANT: Do not loosen or remove the hex-head screws as this could damage the wheel or cause the wheel to jam during installation.

CAUTION: Use a hoist, wheel dolly or proper lifting equipment to safely slide and adjust wheels on axles and avoid possibility of personal injury.

Failure to follow torquing sequence and procedure will result in damage to wheel sleeves and may result in personal injury. Wheel bolt torques are critical and require repeated tightening.

3. Move wheel to desired position.
4. Tighten bolts (1-12) in numerical order to 410 N·m (300 lb·ft). Make sure wheel is perpendicular to axle.
5. Tighten bolts (1-12) in numerical order to 610 N·m (450 lb·ft).

IMPORTANT: Some sleeve bolts may loosen as the sleeve is tightened. Repeat the numbered order torquing pattern until all sleeve bolts maintain the proper torque. Failure to follow procedure could result in damage to equipment and may result in personal injury.

6. Drive tractor unloaded in a large figure-8 pattern a minimum of four times and tighten bolts in numerical order until bolts maintain final torque of 610 N·m (450 lb·ft).

IMPORTANT: Keep wheel sleeve cap screws tightened to specification. If tractor is operated with loose wheel sleeves or under-torqued cap screws it may be necessary to replace sleeves and cast wheels.

7. Tighten bolts after working 3 hours, 10 hours, and daily for the first week of operation or until the bolts do not move when re-torquing, and every 500 hours thereafter.

NOTE: Continue to check torque a minimum of weekly if used for normal scraper operations.

AK08008,0000548-19-04NOV20

Adjust and Tighten—Dual Wheel Hubs

CAUTION: Avoid personal injury. Never run the engine with transmission in gear when adjusting wheels. Wheels on the ground could pull supported wheels off jackstands.

Never operate tractor with a loose rim, wheel, or hub.


IMPORTANT: Tractors are equipped with 12 bolt heavy-duty wheels and 12 bolt hubs. Numbers indicating proper torquing sequence are cast into wheel hub.

Carefully follow procedure. Failure to do so could lead to wheel hub damage.

Clean any paint, grease, film, rust or debris from axle shafts prior to positioning and installing wheel hubs and sleeves. Never apply any lubricant to cap screws or threads.


NOTE: Adjusting tool is not compatible with heavy-duty wheel hub.

1. Raise the tractor on level ground and support tractor with jackstands.

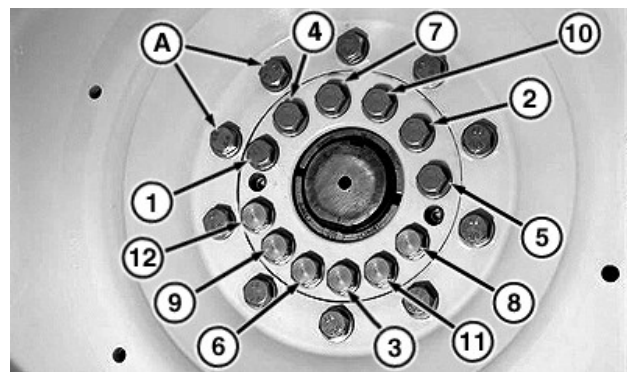

RXA0093173—UN—27MAR07

Torque sequence: Double-taper heavy-duty dual wheel hub assembly

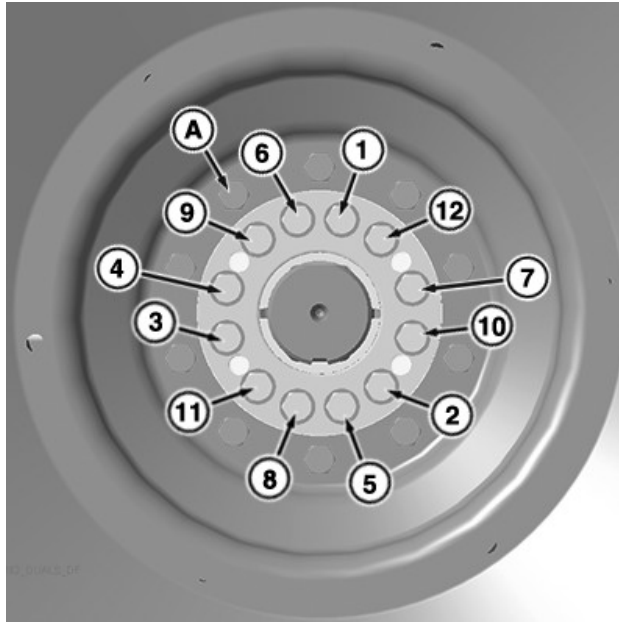

RXA0178135—UN—28MAY20
Torque sequence: Double-flat heavy-duty dual wheel hub assembly

6. Using a star-shaped pattern, tighten all wheel to hub cap screws (A) to 610 N·m (450 lb·ft) as needed to maintain torque.

IMPORTANT: Repeat torquing pattern until **ALL** bolts maintain the proper torque. Failure to follow procedure could result in damage to equipment and may result in personal injury.

7. Drive tractor a minimum of 100 meters (110 yd) and tighten bolts in numerical order until bolts maintain torque of 610 N·m (450 lb·ft).

IMPORTANT: If tractor is operated with wheel sleeve loose for 4-5 hours, it is necessary to replace sleeves.

8. Tighten again at 3 hours, 10 hours, and daily for the first week of operation and every 500 hours thereafter.

NOTE: Continue to check torque a minimum of weekly if used for normal scraper operations.

AK08008.0000549-19-17JUN22

2. Loosen (without removing) sleeve bolts (1-12) just enough to move wheel.

IMPORTANT: Do not loosen or remove the two hex-head screws. Doing so could result in wheel jamming or damage.

3. Move wheel to desired position.
4. Tighten bolts (1-12) in numerical order until bolts maintain torque of 405 N·m (300 lb·ft). Make sure wheel is perpendicular to axle.
5. Tighten bolts (1-12) in numerical order until bolts maintain torque of 610 N·m (450 lb·ft).

Recommended Inflation Pressures—Group 47

NOTE: These tables assume the tractor is being operated in normal Ag applications. Applications that require high torque (example: scraper use) or extensive road transport may require higher inflation pressures. Please consult the tire manufacturer for more specific information.

Group	47					
Size	480/80R46		520/85R42			
Load Index	158		157		162	
Speed Rating	A8 / B		A8 / B		A8 / B	
	Dual	Triple	Dual	Triple	Dual	Triple
Axle Load kg (lb)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)
3855 (8500)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)
4082 (9000)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)
4308 (9500)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)
4535 (10000)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)
4762 (10500)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)
4989 (11000)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)

Wheels and Tires

Group	47					
Size	480/80R46		520/85R42			
Load Index	158		157		162	
Speed Rating	A8 / B		A8 / B		A8 / B	
	Dual	Triple	Dual	Triple	Dual	Triple
Axle Load kg (lb)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)
5215 (11500)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)
5442 (12000)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)
5669 (12500)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)
5900 (13000)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)
6120 (13500)	48 (0.5)(7)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)
6350 (14000)	48 (0.5)(7)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)
6580 (14500)	55 (0.6)(8)	41 (0.4)(6)	48 (0.5)(7)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)
6800 (15000)	62 (0.6)(9)	41 (0.4)(6)	48 (0.5)(7)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)
7030 (15500)	62 (0.6)(9)	41 (0.4)(6)	55 (0.6)(8)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)
7260 (16000)	69 (0.7)(10)	41 (0.4)(6)	55 (0.6)(8)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)
7480 (16500)	69 (0.7)(10)	41 (0.4)(6)	62 (0.6)(9)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)
7720 (17000)	76 (0.8)(11)	41 (0.4)(6)	62 (0.6)(9)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)
7950 (17500)	83 (0.8)(12)	41 (0.4)(6)	69 (0.7)(10)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)
8170 (18000)	83 (0.8)(12)	41 (0.4)(6)	69 (0.7)(10)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)
8400 (18500)	90 (0.9)(13)	48 (0.5)(7)	76 (0.8)(11)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)
8630 (19000)	90 (0.9)(13)	48 (0.5)(7)	76 (0.8)(11)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)
8850 (19500)	97 (1.0)(14)	55 (0.6)(8)	83 (0.8)(12)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)
9080 (20000)	103 (1.0)(15)	55 (0.6)(8)	90 (0.9)(13)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)
9530 (21000)	110 (1.1)(16)	55 (0.6)(8)	90 (0.9)(13)	48 (0.5)(7)	83 (0.8)(12)	83 (0.8)(12)
9990 (22000)	110 (1.1)(16)	62 (0.6)(9)	97 (1.0)(14)	55 (0.6)(8)	83 (0.8)(12)	83 (0.8)(12)
10440 (23000)	117 (1.2)(17)	69 (0.7)(10)	103 (1.0)(15)	62 (0.6)(9)	83 (0.8)(12)	83 (0.8)(12)
10900 (24000)	124 (1.2)(18)	76 (0.8)(11)	110 (1.1)(16)	62 (0.6)(9)	90 (0.9)(13)	83 (0.8)(12)
11350 (25000)	131 (1.3)(19)	83 (0.8)(12)	117 (1.2)(17)	69 (0.7)(10)	103 (1.0)(15)	83 (0.8)(12)
11800 (26000)	138 (1.4)(20)	90 (0.9)(13)	117 (1.2)(17)	76 (0.8)(11)	110 (1.1)(16)	83 (0.8)(12)
12260 (27000)	152 (1.5)(22)	97 (1.0)(14)	124 (1.2)(18)	83 (0.8)(12)	117 (1.2)(17)	83 (0.8)(12)
12701 (28000)	159 (1.6)(23)	103 (1.0)(15)	131 (1.3)(19)	90 (0.9)(13)	124 (1.2)(18)	83 (0.8)(12)

Wheels and Tires

Group	47					
Size	480/80R46		520/85R42			
Load Index	158		157		162	
Speed Rating	A8 / B		A8 / B		A8 / B	
	Dual	Triple	Dual	Triple	Dual	Triple
Axle Load kg (lb)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)
13154 (29000)	165 (1.7)(24)	110 (1.1)(16)	138 (1.4)(20)	90 (0.9)(13)	131 (1.3)(19)	83 (0.8)(12)
13608 (30000)	179 (1.8)(26)	110 (1.1)(16)	145 (1.4)(21)	97 (1.0)(14)	145 (1.4)(21)	83 (0.8)(12)
14061 (31000)	200 (2.0)(29)	117 (1.2)(17)	152 (1.5)(22)	103 (1.0)(15)	152 (1.5)(22)	83 (0.8)(12)
14515 (32000)	214 (2.1)(31)	117 (1.2)(17)	159 (1.6)(23)	103 (1.0)(15)	165 (1.7)(24)	83 (0.8)(12)
14969 (33000)	234 (2.3)(34)	124 (1.2)(18)	—	110 (1.1)(16)	179 (1.8)(26)	90 (0.9)(13)
15422 (34000)	—	131 (1.3)(19)	—	110 (1.1)(16)	193 (1.9)(28)	97 (1.0)(14)
15873 (35000)	—	138 (1.4)(20)	—	117 (1.2)(17)	200 (2.0)(29)	103 (1.0)(15)
16326 (36000)	—	138 (1.4)(20)	—	117 (1.2)(17)	228 (2.3)(33)	110 (1.1)(16)
16780 (37000)	—	145 (1.4)(21)	—	124 (1.2)(18)	—	110 (1.1)(16)
17233 (38000)	—	152 (1.5)(22)	—	131 (1.3)(19)	—	117 (1.2)(17)
17687 (39000)	—	159 (1.6)(23)	—	131 (1.3)(19)	—	124 (1.2)(18)
18140 (40000)	—	165 (1.7)(24)	—	138 (1.4)(20)	—	131 (1.3)(19)
18594 (41000)	—	179 (1.8)(26)	—	145 (1.4)(21)	—	138 (1.4)(20)
19047 (42000)	—	186 (1.9)(27)	—	152 (1.5)(22)	—	145 (1.4)(21)
19501 (43000)	—	200 (2.0)(29)	—	152 (1.5)(22)	—	152 (1.5)(22)
19954 (44000)	—	214 (2.1)(31)	—	159 (1.6)(23)	—	159 (1.6)(23)
20408 (45000)	—	221 (2.2)(32)	—	—	—	165 (1.7)(24)
20861 (46000)	—	234 (2.3)(34)	—	—	—	179 (1.8)(26)
21315 (47000)	—	241 (2.4)(35)	—	—	—	186 (1.9)(27)
21768 (48000)	—	—	—	—	—	193 (1.9)(28)
22222 (49000)	—	—	—	—	—	200 (2.0)(29)
22675 (50000)	—	—	—	—	—	221 (2.2)(32)
23129 (51000)	—	—	—	—	—	234 (2.3)(34)

Wheels and Tires

Group	47				
Size	620/70R42		710/70R38		IF710/70R38
Load Index	160	166	166	171	178
Speed Rating	A8	A8 / B	A8 / D	A8 / B	A8
	Dual	Dual	Dual	Dual	Dual
Axle Load kg (lb)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)
3855 (8500)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
4082 (9000)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
4308 (9500)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
4535 (10000)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
4762 (10500)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
4989 (11000)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
5215 (11500)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
5442 (12000)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
5669 (12500)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
5900 (13000)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
6120 (13500)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
6350 (14000)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
6580 (14500)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
6800 (15000)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
7030 (15500)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
7260 (16000)	48 (0.5)(7)	48 (0.5)(7)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
7480 (16500)	48 (0.5)(7)	48 (0.5)(7)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
7720 (17000)	55 (0.6)(8)	55 (0.6)(8)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
7950 (17500)	55 (0.6)(8)	55 (0.6)(8)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
8170 (18000)	62 (0.6)(9)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
8400 (18500)	62 (0.6)(9)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
8630 (19000)	69 (0.7)(10)	69 (0.7)(10)	48 (0.5)(7)	41 (0.4)(6)	48 (0.5)(7)
8850 (19500)	69 (0.7)(10)	69 (0.7)(10)	48 (0.5)(7)	41 (0.4)(6)	48 (0.5)(7)
9080 (20000)	69 (0.7)(10)	69 (0.7)(10)	48 (0.5)(7)	41 (0.4)(6)	48 (0.5)(7)
9530 (21000)	76 (0.8)(11)	76 (0.8)(11)	55 (0.6)(8)	48 (0.5)(7)	48 (0.5)(7)
9990 (22000)	83 (0.8)(12)	83 (0.8)(12)	62 (0.6)(9)	48 (0.5)(7)	55 (0.6)(8)

Wheels and Tires

Group	47				
Size	620/70R42		710/70R38		IF710/70R38
Load Index	160	166	166	171	178
Speed Rating	A8	A8 / B	A8 / D	A8 / B	A8
	Dual	Dual	Dual	Dual	Dual
Axle Load kg (lb)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)
10440 (23000)	90 (0.9)(13)	90 (0.9)(13)	69 (0.7)(10)	55 (0.6)(8)	55 (0.6)(8)
10900 (24000)	97 (1.0)(14)	97 (1.0)(14)	76 (0.8)(11)	62 (0.6)(9)	55 (0.6)(8)
11350 (25000)	103 (1.0)(15)	103 (1.0)(15)	83 (0.8)(12)	69 (0.7)(10)	62 (0.6)(9)
11800 (26000)	110 (1.1)(16)	110 (1.1)(16)	83 (0.8)(12)	69 (0.7)(10)	62 (0.6)(9)
12260 (27000)	117 (1.2)(17)	117 (1.2)(17)	90 (0.9)(13)	76 (0.8)(11)	69 (0.7)(10)
12701 (28000)	117 (1.2)(17)	117 (1.2)(17)	97 (1.0)(14)	83 (0.8)(12)	69 (0.7)(10)
13154 (29000)	124 (1.2)(18)	124 (1.2)(18)	103 (1.0)(15)	90 (0.9)(13)	76 (0.8)(11)
13608 (30000)	131 (1.3)(19)	131 (1.3)(19)	103 (1.0)(15)	90 (0.9)(13)	83 (0.8)(12)
14061 (31000)	138 (1.4)(20)	138 (1.4)(20)	110 (1.1)(16)	97 (1.0)(14)	90 (0.9)(13)
14515 (32000)	138 (1.4)(20)	138 (1.4)(20)	110 (1.1)(16)	97 (1.0)(14)	90 (0.9)(13)
14969 (33000)	152 (1.5)(22)	152 (1.5)(22)	117 (1.2)(17)	103 (1.0)(15)	97 (1.0)(14)
15422 (34000)	159 (1.6)(23)	159 (1.6)(23)	124 (1.2)(18)	110 (1.1)(16)	97 (1.0)(14)
15873 (35000)	—	165 (1.7)(24)	124 (1.2)(18)	110 (1.1)(16)	103 (1.0)(15)
16326 (36000)	—	172 (1.7)(25)	131 (1.3)(19)	117 (1.2)(17)	110 (1.1)(16)
16780 (37000)	—	186 (1.9)(27)	138 (1.4)(20)	117 (1.2)(17)	110 (1.1)(16)
17233 (38000)	—	193 (1.9)(28)	145 (1.4)(21)	124 (1.2)(18)	110 (1.1)(16)
17687 (39000)	—	207 (2.1)(30)	152 (1.5)(22)	131 (1.3)(19)	117 (1.2)(17)
18140 (40000)	—	228 (2.3)(33)	152 (1.5)(22)	138 (1.4)(20)	117 (1.2)(17)
18594 (41000)	—	241 (2.4)(35)	159 (1.6)(23)	138 (1.4)(20)	124 (1.2)(18)
19047 (42000)	—	—	—	145 (1.4)(21)	131 (1.3)(19)
19501 (43000)	—	—	—	152 (1.5)(22)	131 (1.3)(19)
19954 (44000)	—	—	—	159 (1.6)(23)	138 (1.4)(20)
20408 (45000)	—	—	—	159 (1.6)(23)	138 (1.4)(20)
20861 (46000)	—	—	—	172 (1.7)(25)	145 (1.4)(21)
21315 (47000)	—	—	—	186 (1.9)(27)	152 (1.5)(22)
21768 (48000)	—	—	—	193 (1.9)(28)	159 (1.6)(23)

Wheels and Tires

Group	47				
Size	620/70R42		710/70R38		IF710/70R38
Load Index	160	166	166	171	178
Speed Rating	A8	A8 / B	A8 / D	A8 / B	A8
	Dual	Dual	Dual	Dual	Dual
Axle Load kg (lb)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)
22222 (49000)	—	—	—	207 (2.1)(30)	165 (1.7)(24)
22675 (50000)	—	—	—	221 (2.2)(32)	172 (1.7)(25)
23129 (51000)	—	—	—	228 (2.3)(33)	172 (1.7)(25)
23582 (52000)	—	—	—	241 (2.4)(35)	179 (1.8)(26)
24036 (53000)	—	—	—	—	193 (1.9)(28)
24489 (54000)	—	—	—	—	207 (2.1)(30)
24943 (55000)	—	—	—	—	214 (2.1)(31)
25396 (56000)	—	—	—	—	228 (2.3)(33)
25850 (57000)	—	—	—	—	234 (2.3)(34)
26303 (58000)	—	—	—	—	241 (2.4)(35)

TO84419,000013B-19-16JUN22

Recommended Inflation Pressures—Group 48

NOTE: These tables assume the tractor is being operated in normal Ag applications. Applications that require high torque (example: scraper use) or extensive road transport may require higher inflation pressures. Please consult the tire manufacturer for more specific information.

Group	48								
Size	480/80R50		IF480/80R50		520/85R46		620/70R46	650/85R38	VF650/85R38
Load Index	159		166		158		167	173	182
Speed Rating	A8		A8		A8		A8	A8 / B / D	D
	Dual	Triple	Dual	Triple	Dual	Triple	Dual	Dual	Dual
Axle Load kg (lb)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)
3855 (8500)	62 (0.6)(9)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
4082 (9000)	62 (0.6)(9)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
4308 (9500)	62 (0.6)(9)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)

Wheels and Tires

Group	48								
Size	480/80R50		IF480/80R50		520/85R46		620/70R46	650/85R38	VF650/85R38
Load Index	159		166		158		167	173	182
Speed Rating	A8		A8		A8		A8	A8 / B / D	D
	Dual	Triple	Dual	Triple	Dual	Triple	Dual	Dual	Dual
Axle Load kg (lb)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)
4535 (10000)	62 (0.6)(9)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
4762 (10500)	62 (0.6)(9)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
4989 (11000)	62 (0.6)(9)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
5215 (11500)	62 (0.6)(9)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
5442 (12000)	62 (0.6)(9)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
5670 (12500)	62 (0.6)(9)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
5900 (13000)	62 (0.6)(9)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
6120 (13500)	62 (0.6)(9)	62 (0.6)(9)	48 (0.5)(7)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
6350 (14000)	62 (0.6)(9)	62 (0.6)(9)	48 (0.5)(7)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
6580 (14500)	62 (0.6)(9)	62 (0.6)(9)	48 (0.5)(7)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
6800 (15000)	62 (0.6)(9)	62 (0.6)(9)	48 (0.5)(7)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
7030 (15500)	62 (0.6)(9)	62 (0.6)(9)	55 (0.6)(8)	41 (0.4)(6)	48 (0.5)(7)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
7260 (16000)	69 (0.7)(10)	62 (0.6)(9)	55 (0.6)(8)	41 (0.4)(6)	48 (0.5)(7)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)
7480 (16500)	69 (0.7)(10)	62 (0.6)(9)	55 (0.6)(8)	41 (0.4)(6)	55 (0.6)(8)	41 (0.4)(6)	48 (0.5)(7)	41 (0.4)(6)	41 (0.4)(6)
7720 (17000)	76 (0.8)(11)	62 (0.6)(9)	62 (0.6)(9)	41 (0.4)(6)	62 (0.6)(9)	41 (0.4)(6)	48 (0.5)(7)	41 (0.4)(6)	41 (0.4)(6)
7950 (17500)	76 (0.8)(11)	62 (0.6)(9)	62 (0.6)(9)	41 (0.4)(6)	62 (0.6)(9)	41 (0.4)(6)	48 (0.5)(7)	41 (0.4)(6)	41 (0.4)(6)
8170 (18000)	83 (0.8)(12)	62 (0.6)(9)	62 (0.6)(9)	41 (0.4)(6)	69 (0.7)(10)	41 (0.4)(6)	55 (0.6)(8)	41 (0.4)(6)	41 (0.4)(6)
8400 (18500)	90 (0.9)(13)	62 (0.6)(9)	62 (0.6)(9)	41 (0.4)(6)	69 (0.7)(10)	41 (0.4)(6)	55 (0.6)(8)	41 (0.4)(6)	41 (0.4)(6)
8630 (19000)	90 (0.9)(13)	62 (0.6)(9)	69 (0.7)(10)	41 (0.4)(6)	76 (0.8)(11)	41 (0.4)(6)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)
8850 (19500)	97 (1.0)(14)	62 (0.6)(9)	69 (0.7)(10)	41 (0.4)(6)	76 (0.8)(11)	41 (0.4)(6)	62 (0.6)(9)	48 (0.5)(7)	41 (0.4)(6)
9080 (20000)	97 (1.0)(14)	62 (0.6)(9)	69 (0.7)(10)	41 (0.4)(6)	76 (0.8)(11)	41 (0.4)(6)	69 (0.7)(10)	48 (0.5)(7)	41 (0.4)(6)
9530 (21000)	103 (1.0)(15)	62 (0.6)(9)	76 (0.8)(11)	41 (0.4)(6)	83 (0.8)(12)	41 (0.4)(6)	69 (0.7)(10)	55 (0.6)(8)	41 (0.4)(6)
9990 (22000)	110 (1.1)(16)	62 (0.6)(9)	83 (0.8)(12)	41 (0.4)(6)	90 (0.9)(13)	48 (0.5)(7)	76 (0.8)(11)	62 (0.6)(9)	41 (0.4)(6)
10440 (23000)	117 (1.2)(17)	69 (0.7)(10)	90 (0.9)(13)	48 (0.5)(7)	103 (1.0)(15)	55 (0.6)(8)	83 (0.8)(12)	62 (0.6)(9)	41 (0.4)(6)
10900 (24000)	124 (1.2)(18)	76 (0.8)(11)	97 (1.0)(14)	55 (0.6)(8)	110 (1.1)(16)	62 (0.6)(9)	90 (0.9)(13)	69 (0.7)(10)	41 (0.4)(6)

Wheels and Tires

Group	48								
Size	480/80R50		IF480/80R50		520/85R46		620/70R46	650/85R38	VF650/85R38
Load Index	159		166		158		167	173	182
Speed Rating	A8		A8		A8		A8	A8 / B / D	D
	Dual	Triple	Dual	Triple	Dual	Triple	Dual	Dual	Dual
Axle Load kg (lb)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)
11350 (25000)	131 (1.3)(19)	83 (0.8)(12)	103 (1.0)(15)	55 (0.6)(8)	110 (1.1)(16)	69 (0.7)(10)	97 (1.0)(14)	76 (0.8)(11)	41 (0.4)(6)
11800 (26000)	138 (1.4)(20)	90 (0.9)(13)	110 (1.1)(16)	62 (0.6)(9)	117 (1.2)(17)	69 (0.7)(10)	103 (1.0)(15)	76 (0.8)(11)	41 (0.4)(6)
12260 (27000)	145 (1.4)(21)	97 (1.0)(14)	117 (1.2)(17)	62 (0.6)(9)	124 (1.2)(18)	76 (0.8)(11)	110 (1.1)(16)	83 (0.8)(12)	41 (0.4)(6)
12710 (28000)	152 (1.5)(22)	97 (1.0)(14)	117 (1.2)(17)	69 (0.7)(10)	131 (1.3)(19)	76 (0.8)(11)	110 (1.1)(16)	90 (0.9)(13)	48 (0.5)(7)
13170 (29000)	159 (1.6)(23)	103 (1.0)(15)	124 (1.2)(18)	76 (0.8)(11)	138 (1.4)(20)	83 (0.8)(12)	117 (1.2)(17)	97 (1.0)(14)	48 (0.5)(7)
13605 (30000)	179 (1.8)(26)	110 (1.1)(16)	131 (1.3)(19)	76 (0.8)(11)	138 (1.4)(20)	90 (0.9)(13)	117 (1.2)(17)	103 (1.0)(15)	48 (0.5)(7)
14060 (31000)	193 (1.9)(28)	110 (1.1)(16)	138 (1.4)(20)	83 (0.8)(12)	—	97 (1.0)(14)	124 (1.2)(18)	110 (1.1)(16)	55 (0.6)(8)
14510 (32000)	207 (2.1)(30)	117 (1.2)(17)	138 (1.4)(20)	90 (0.9)(13)	—	97 (1.0)(14)	138 (1.4)(20)	110 (1.1)(16)	62 (0.6)(9)
14970 (33000)	228 (2.3)(33)	117 (1.2)(17)	152 (1.5)(22)	90 (0.9)(13)	—	103 (1.0)(15)	145 (1.4)(21)	117 (1.2)(17)	69 (0.7)(10)
15420 (34000)	—	124 (1.2)(18)	159 (1.6)(23)	97 (1.0)(14)	—	110 (1.1)(16)	145 (1.4)(21)	117 (1.2)(17)	69 (0.7)(10)
15875 (35000)	—	131 (1.3)(19)	165 (1.7)(24)	103 (1.0)(15)	—	110 (1.1)(16)	152 (1.5)(22)	124 (1.2)(18)	69 (0.7)(10)
16326 (36000)	—	138 (1.4)(20)	172 (1.7)(25)	103 (1.0)(15)	—	117 (1.2)(17)	159 (1.6)(23)	124 (1.2)(18)	76 (0.8)(11)
16780 (37000)	—	138 (1.4)(20)	186 (1.9)(27)	110 (1.1)(16)	—	117 (1.2)(17)	165 (1.7)(24)	131 (1.3)(19)	83 (0.8)(12)
17233 (38000)	—	145 (1.4)(21)	207 (2.1)(30)	110 (1.1)(16)	—	124 (1.2)(18)	172 (1.7)(25)	138 (1.4)(20)	90 (0.9)(13)
17687 (39000)	—	152 (1.5)(22)	221 (2.2)(32)	117 (1.2)(17)	—	131 (1.3)(19)	186 (1.9)(27)	145 (1.4)(21)	90 (0.9)(13)
18140 (40000)	—	159 (1.6)(23)	228 (2.3)(33)	117 (1.2)(17)	—	131 (1.3)(19)	200 (2.0)(29)	152 (1.5)(22)	90 (0.9)(13)
18594 (41000)	—	165 (1.7)(24)	241 (2.4)(35)	124 (1.2)(18)	—	138 (1.4)(20)	221 (2.2)(32)	152 (1.5)(22)	97 (1.0)(14)
19047 (42000)	—	179 (1.8)(26)	—	131 (1.3)(19)	—	138 (1.4)(20)	241 (2.4)(35)	159 (1.6)(23)	97 (1.0)(14)
19501 (43000)	—	193 (1.9)(28)	—	131 (1.3)(19)	—	—	—	165 (1.7)(24)	103 (1.0)(15)
19954 (44000)	—	200 (2.0)(29)	—	138 (1.4)(20)	—	—	—	172 (1.7)(25)	110 (1.1)(16)
20408 (45000)	—	207 (2.1)(30)	—	138 (1.4)(20)	—	—	—	179 (1.8)(26)	110 (1.1)(16)
20861 (46000)	—	221 (2.2)(32)	—	145 (1.4)(21)	—	—	—	200 (2.0)(29)	110 (1.1)(16)
21315 (47000)	—	234 (2.3)(34)	—	152 (1.5)(22)	—	—	—	207 (2.1)(30)	117 (1.2)(17)
21768 (48000)	—	—	—	152 (1.5)(22)	—	—	—	221 (2.2)(32)	117 (1.2)(17)
22222 (49000)	—	—	—	159 (1.6)(23)	—	—	—	228 (2.3)(33)	117 (1.2)(17)

Wheels and Tires

Group	48								
Size	480/80R50		IF480/80R50		520/85R46		620/70R46	650/85R38	VF650/85R38
Load Index	159		166		158		167	173	182
Speed Rating	A8		A8		A8		A8	A8 / B / D	D
	Dual	Triple	Dual	Triple	Dual	Triple	Dual	Dual	Dual
Axle Load kg (lb)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)
22675 (50000)	—	—	—	159 (1.6)(23)	—	—	—	241 (2.4)(35)	124 (1.2)(18)
23129 (51000)	—	—	—	—	—	—	—	—	131 (1.3)(19)
23583 (52000)	—	—	—	—	—	—	—	—	138 (1.4)(20)
24036 (53000)	—	—	—	—	—	—	—	—	138 (1.4)(20)
24490 (54000)	—	—	—	—	—	—	—	—	138 (1.4)(20)
24943 (55000)	—	—	—	—	—	—	—	—	145 (1.4)(21)
25397 (56000)	—	—	—	—	—	—	—	—	152 (1.5)(22)
25850 (57000)	—	—	—	—	—	—	—	—	152 (1.5)(22)
26304 (58000)	—	—	—	—	—	—	—	—	159 (1.6)(23)
26757 (59000)	—	—	—	—	—	—	—	—	159 (1.6)(23)
27216 (60000)	—	—	—	—	—	—	—	—	—

Group	48					
Size	710/70R42		IF710/70R42	VF710/70R42		
Load Index	168	173	179	179	182	184
Speed Rating	B / D	A8 / B / D	B / D	D	D	D
	Dual	Dual	Dual	Dual	Dual	Dual
Axle Load kg (lb)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)
5670 (12500)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)
5896 (13000)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)
6123 (13500)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)
6350 (14000)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)
6577 (14500)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)
6803 (15000)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)
7030 (15500)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)
7257 (16000)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)

Wheels and Tires

Group	48					
Size	710/70R42		IF710/70R42	VF710/70R42		
Load Index	168	173	179	179	182	184
Speed Rating	B / D	A8 / B / D	B / D	D	D	D
	Dual	Dual	Dual	Dual	Dual	Dual
Axle Load kg (lb)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)
7484 (16500)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)
7711 (17000)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)
7937 (17500)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)
8164 (18000)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)
8391 (18500)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)
8618 (19000)	41 (0.4)(6)	41 (0.4)(6)	41 (0.4)(6)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)
8845 (19500)	48 (0.5)(7)	48 (0.5)(7)	48 (0.5)(7)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)
9072 (20000)	48 (0.5)(7)	48 (0.5)(7)	48 (0.5)(7)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)
9525 (21000)	55 (0.6)(8)	55 (0.6)(8)	48 (0.5)(7)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)
9979 (22000)	62 (0.6)(9)	62 (0.6)(9)	48 (0.5)(7)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)
10432 (23000)	62 (0.6)(9)	62 (0.6)(9)	55 (0.6)(8)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)
10886 (24000)	69 (0.7)(10)	69 (0.7)(10)	55 (0.6)(8)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)
11340 (25000)	76 (0.8)(11)	76 (0.8)(11)	55 (0.6)(8)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)
11793 (26000)	76 (0.8)(11)	76 (0.8)(11)	62 (0.6)(9)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)
12247 (27000)	83 (0.8)(12)	83 (0.8)(12)	62 (0.6)(9)	62 (0.6)(9)	41 (0.4)(6)	41 (0.4)(6)
12700 (28000)	90 (0.9)(13)	90 (0.9)(13)	69 (0.7)(10)	62 (0.6)(9)	48 (0.5)(7)	48 (0.5)(7)
13154 (29000)	97 (1.0)(14)	97 (1.0)(14)	69 (0.7)(10)	62 (0.6)(9)	48 (0.5)(7)	48 (0.5)(7)
13607 (30000)	103 (1.0)(15)	103 (1.0)(15)	76 (0.8)(11)	62 (0.6)(9)	48 (0.5)(7)	55 (0.6)(8)
14061 (31000)	110 (1.1)(16)	110 (1.1)(16)	83 (0.8)(12)	62 (0.6)(9)	55 (0.6)(8)	55 (0.6)(8)
14514 (32000)	110 (1.1)(16)	110 (1.1)(16)	83 (0.8)(12)	62 (0.6)(9)	62 (0.6)(9)	62 (0.6)(9)
14968 (33000)	117 (1.2)(17)	117 (1.2)(17)	90 (0.9)(13)	69 (0.7)(10)	69 (0.7)(10)	69 (0.7)(10)
15422 (34000)	117 (1.2)(17)	117 (1.2)(17)	90 (0.9)(13)	69 (0.7)(10)	69 (0.7)(10)	69 (0.7)(10)
15875 (35000)	124 (1.2)(18)	124 (1.2)(18)	97 (1.0)(14)	76 (0.8)(11)	69 (0.7)(10)	76 (0.8)(11)
16326 (36000)	124 (1.2)(18)	124 (1.2)(18)	97 (1.0)(14)	76 (0.8)(11)	76 (0.8)(11)	76 (0.8)(11)
16780 (37000)	131 (1.3)(19)	131 (1.3)(19)	103 (1.0)(15)	76 (0.8)(11)	76 (0.8)(11)	83 (0.8)(12)
17233 (38000)	138 (1.4)(20)	138 (1.4)(20)	110 (1.1)(16)	83 (0.8)(12)	83 (0.8)(12)	83 (0.8)(12)

Wheels and Tires

Group	48					
Size	710/70R42		IF710/70R42	VF710/70R42		
Load Index	168	173	179	179	182	184
Speed Rating	B / D	A8 / B / D	B / D	D	D	D
	Dual	Dual	Dual	Dual	Dual	Dual
Axle Load kg (lb)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)
17687 (39000)	145 (1.4)(21)	145 (1.4)(21)	110 (1.1)(16)	83 (0.8)(12)	90 (0.9)(13)	90 (0.9)(13)
18140 (40000)	145 (1.4)(21)	145 (1.4)(21)	117 (1.2)(17)	90 (0.9)(13)	90 (0.9)(13)	90 (0.9)(13)
18594 (41000)	152 (1.5)(22)	152 (1.5)(22)	117 (1.2)(17)	97 (1.0)(13)	90 (0.9)(13)	97 (1.0)(14)
19047 (42000)	159 (1.6)(23)	159 (1.6)(23)	117 (1.2)(17)	97 (1.0)(13)	97 (1.0)(14)	103 (1.0)(15)
19501 (43000)	159 (1.6)(23)	159 (1.6)(23)	124 (1.2)(18)	103 (1.0)(15)	103 (1.0)(15)	103 (1.0)(15)
19954 (44000)	—	172 (1.7)(25)	131 (1.3)(19)	103 (1.0)(15)	103 (1.0)(15)	110 (1.1)(16)
20408 (45000)	—	179 (1.8)(26)	131 (1.3)(19)	110 (1.1)(16)	110 (1.1)(16)	110 (1.1)(16)
20861 (46000)	—	193 (1.9)(28)	138 (1.4)(20)	110 (1.1)(16)	110 (1.1)(16)	110 (1.1)(16)
21315 (47000)	—	200 (2.0)(29)	145 (1.4)(21)	117 (1.2)(17)	117 (1.2)(17)	117 (1.2)(17)
21768 (48000)	—	207 (2.1)(30)	145 (1.4)(21)	117 (1.2)(17)	117 (1.2)(17)	117 (1.2)(17)
22222 (49000)	—	221 (2.2)(32)	152 (1.5)(22)	124 (1.2)(18)	117 (1.2)(17)	124 (1.2)(18)
22675 (50000)	—	241 (2.4)(35)	152 (1.5)(22)	124 (1.2)(18)	124 (1.2)(18)	124 (1.2)(18)
23129 (51000)	—	—	159 (1.6)(23)	131 (1.3)(19)	131 (1.3)(19)	124 (1.2)(18)
23582 (52000)	—	—	165 (1.7)(24)	131 (1.3)(19)	131 (1.3)(19)	131 (1.3)(19)
24036 (53000)	—	—	172 (1.7)(25)	138 (1.4)(20)	138 (1.4)(20)	131 (1.3)(19)
24489 (54000)	—	—	186 (1.9)(27)	138 (1.4)(20)	138 (1.4)(20)	138 (1.4)(20)
24943 (55000)	—	—	193 (1.9)(28)	145 (1.4)(21)	145 (1.4)(21)	138 (1.4)(20)
25396 (56000)	—	—	207 (2.1)(30)	145 (1.4)(21)	145 (1.4)(21)	145 (1.4)(21)
25850 (57000)	—	—	214 (2.1)(31)	152 (1.5)(22)	152 (1.5)(22)	152 (1.5)(22)
26303 (58000)	—	—	228 (2.3)(33)	159 (1.6)(23)	159 (1.6)(23)	152 (1.5)(22)
26757 (59000)	—	—	234 (2.3)(34)	159 (1.6)(23)	159 (1.6)(23)	159 (1.6)(23)
27216 (60000)	—	—	241 (2.4)(35)	—	—	159 (1.6)(23)

Wheels and Tires

Group	48							
Size	LSW800/55R46		800/70R38		VF800/70R38			
Load Index	178		173		184		187	
Speed Rating	D		A8 / B / D		D	D	D	D
	Single	Dual	Single	Dual	Single	Dual	Single	Dual
Axle Load kg (lb)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)
5670 (12500)	83 (0.8)(12)	41 (0.4)(6)	62 (0.6)(9)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)	83 (0.8)(12)	41 (0.4)(6)
5896 (13000)	83 (0.8)(12)	41 (0.4)(6)	62 (0.6)(9)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)	83 (0.8)(12)	41 (0.4)(6)
6123 (13500)	83 (0.8)(12)	41 (0.4)(6)	62 (0.6)(9)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)	83 (0.8)(12)	41 (0.4)(6)
6350 (14000)	83 (0.8)(12)	41 (0.4)(6)	62 (0.6)(9)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)	83 (0.8)(12)	41 (0.4)(6)
6577 (14500)	83 (0.8)(12)	41 (0.4)(6)	62 (0.6)(9)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)	83 (0.8)(12)	41 (0.4)(6)
6803 (15000)	83 (0.8)(12)	41 (0.4)(6)	62 (0.6)(9)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)	83 (0.8)(12)	41 (0.4)(6)
7030 (15500)	83 (0.8)(12)	41 (0.4)(6)	69 (0.7)(10)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)	83 (0.8)(12)	41 (0.4)(6)
7257 (16000)	83 (0.8)(12)	41 (0.4)(6)	69 (0.7)(10)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)	83 (0.8)(12)	41 (0.4)(6)
7484 (16500)	83 (0.8)(12)	41 (0.4)(6)	76 (0.8)(11)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)	83 (0.8)(12)	41 (0.4)(6)
7711 (17000)	83 (0.8)(12)	41 (0.4)(6)	76 (0.8)(11)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)	83 (0.8)(12)	41 (0.4)(6)
7937 (17500)	83 (0.8)(12)	41 (0.4)(6)	83 (0.8)(12)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)	83 (0.8)(12)	41 (0.4)(6)
8164 (18000)	83 (0.8)(12)	41 (0.4)(6)	83 (0.8)(12)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)	83 (0.8)(12)	41 (0.4)(6)
8391 (18500)	83 (0.8)(12)	41 (0.4)(6)	90 (0.9)(13)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)	83 (0.8)(12)	41 (0.4)(6)
8618 (19000)	83 (0.8)(12)	41 (0.4)(6)	97 (1.0)(14)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)	83 (0.8)(12)	41 (0.4)(6)
8845 (19500)	83 (0.8)(12)	41 (0.4)(6)	97 (1.0)(14)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)	83 (0.8)(12)	41 (0.4)(6)
9072 (20000)	83 (0.8)(12)	41 (0.4)(6)	103 (1.0)(15)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)	83 (0.8)(12)	41 (0.4)(6)
9525 (21000)	83 (0.8)(12)	41 (0.4)(6)	110 (1.1)(16)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)	83 (0.8)(12)	41 (0.4)(6)
9979 (22000)	90 (0.9)(13)	41 (0.4)(6)	117 (1.2)(17)	41 (0.4)(6)	83 (0.8)(12)	83 (0.8)(12)	83 (0.8)(12)	41 (0.4)(6)
10432 (23000)	97 (1.0)(14)	41 (0.4)(6)	117 (1.2)(17)	48 (0.5)(7)	83 (0.8)(12)	83 (0.8)(12)	83 (0.8)(12)	41 (0.4)(6)
10886 (24000)	103 (1.0)(15)	41 (0.4)(6)	124 (1.2)(18)	55 (0.6)(8)	83 (0.8)(12)	83 (0.8)(12)	83 (0.8)(12)	41 (0.4)(6)
11340 (25000)	110 (1.1)(16)	41 (0.4)(6)	138 (1.4)(20)	55 (0.6)(8)	83 (0.8)(12)	83 (0.8)(12)	83 (0.8)(12)	41 (0.4)(6)
11793 (26000)	117 (1.2)(17)	41 (0.4)(6)	145 (1.4)(21)	62 (0.6)(9)	90 (0.9)(13)	83 (0.8)(12)	90 (0.9)(13)	41 (0.4)(6)
12247 (27000)	117 (1.2)(17)	48 (0.5)(7)	152 (1.5)(22)	69 (0.7)(10)	97 (1.0)(14)	83 (0.8)(12)	90 (0.9)(13)	41 (0.4)(6)
12700 (28000)	124 (1.2)(18)	48 (0.5)(7)	159 (1.6)(23)	69 (0.7)(10)	97 (1.0)(14)	83 (0.8)(12)	97 (1.0)(14)	41 (0.4)(6)
13154 (29000)	138 (1.4)(20)	55 (0.6)(8)	—	76 (0.8)(11)	103 (1.0)(15)	83 (0.8)(12)	103 (1.0)(15)	41 (0.4)(6)
13607 (30000)	145 (1.4)(21)	55 (0.6)(8)	—	76 (0.8)(11)	110 (1.1)(16)	83 (0.8)(12)	110 (1.1)(16)	41 (0.4)(6)

Wheels and Tires

Group	48							
Size	LSW800/55R46		800/70R38		VF800/70R38			
Load Index	178		173		184		187	
Speed Rating	D		A8 / B / D		D	D	D	D
	Single	Dual	Single	Dual	Single	Dual	Single	Dual
Axle Load kg (lb)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)
14061 (31000)	152 (1.5)(22)	62 (0.6)(9)	—	83 (0.8)(12)	117 (1.2)(17)	83 (0.8)(12)	117 (1.2)(17)	41 (0.4)(6)
14514 (32000)	159 (1.6)(23)	62 (0.6)(9)	—	83 (0.8)(12)	124 (1.2)(18)	83 (0.8)(12)	117 (1.2)(17)	41 (0.4)(6)
14968 (33000)	159 (1.6)(23)	69 (0.7)(10)	—	90 (0.9)(13)	124 (1.2)(18)	83 (0.8)(12)	124 (1.2)(18)	48 (0.5)(7)
15422 (34000)	—	76 (0.8)(11)	—	97 (1.0)(14)	131 (1.3)(19)	83 (0.8)(12)	131 (1.3)(19)	48 (0.5)(7)
15875 (35000)	—	76 (0.8)(11)	—	103 (1.0)(15)	138 (1.4)(20)	83 (0.8)(12)	138 (1.4)(20)	48 (0.5)(7)
16326 (36000)	—	83 (0.8)(12)	—	110 (1.1)(16)	145 (1.4)(21)	83 (0.8)(12)	138 (1.4)(20)	55 (0.6)(8)
16780 (37000)	—	90 (0.9)(13)	—	110 (1.1)(16)	145 (1.4)(21)	83 (0.8)(12)	145 (1.4)(21)	62 (0.6)(9)
17233 (38000)	—	90 (0.9)(13)	—	110 (1.1)(16)	152 (1.5)(22)	83 (0.8)(12)	159 (1.6)(23)	69 (0.7)(10)
17687 (39000)	—	97 (1.0)(14)	—	117 (1.2)(17)	159 (1.6)(23)	83 (0.8)(12)	159 (1.6)(23)	69 (0.7)(10)
18140 (40000)	—	97 (1.0)(14)	—	117 (1.2)(17)	—	83 (0.8)(12)	165 (1.7)(24)	69 (0.7)(10)
18594 (41000)	—	103 (1.0)(15)	—	117 (1.2)(17)	—	83 (0.8)(12)	179 (1.8)(26)	69 (0.7)(10)
19047 (42000)	—	103 (1.0)(15)	—	124 (1.2)(18)	—	83 (0.8)(12)	193 (1.9)(28)	76 (0.8)(11)
19501 (43000)	—	110 (1.1)(16)	—	131 (1.3)(19)	—	83 (0.8)(12)	—	76 (0.8)(11)
19954 (44000)	—	110 (1.1)(16)	—	138 (1.4)(20)	—	83 (0.8)(12)	—	83 (0.8)(12)
20408 (45000)	—	110 (1.1)(16)	—	138 (1.4)(20)	—	83 (0.8)(12)	—	83 (0.8)(12)
20861 (46000)	—	117 (1.2)(17)	—	145 (1.4)(21)	—	90 (0.9)(13)	—	90 (0.9)(13)
21315 (47000)	—	117 (1.2)(17)	—	152 (1.5)(22)	—	90 (0.9)(13)	—	90 (0.9)(13)
21768 (48000)	—	124 (1.2)(18)	—	152 (1.5)(22)	—	97 (1.0)(14)	—	90 (0.9)(13)
22222 (49000)	—	124 (1.2)(18)	—	159 (1.6)(23)	—	97 (1.0)(14)	—	97 (1.0)(14)
22675 (50000)	—	131 (1.3)(19)	—	159 (1.6)(23)	—	103 (1.0)(15)	—	103 (1.0)(15)
23129 (51000)	—	138 (1.4)(20)	—	—	—	103 (1.0)(15)	—	103 (1.0)(15)
23582 (52000)	—	138 (1.4)(20)	—	—	—	110 (1.1)(16)	—	110 (1.1)(16)
24036 (53000)	—	145 (1.4)(21)	—	—	—	110 (1.1)(16)	—	110 (1.1)(16)
24489 (54000)	—	145 (1.4)(21)	—	—	—	110 (1.1)(16)	—	110 (1.1)(16)
24943 (55000)	—	152 (1.5)(22)	—	—	—	110 (1.1)(16)	—	117 (1.2)(17)
25396 (56000)	—	152 (1.5)(22)	—	—	—	117 (1.2)(17)	—	117 (1.2)(17)

Wheels and Tires

Group	48							
Size	LSW800/55R46		800/70R38		VF800/70R38			
Load Index	178		173		184		187	
Speed Rating	D		A8 / B / D		D	D	D	D
	Single	Dual	Single	Dual	Single	Dual	Single	Dual
Axle Load kg (lb)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)	kPa (bar)(psi)
25850 (57000)	—	159 (1.6)(23)	—	—	—	117 (1.2)(17)	—	117 (1.2)(17)
26303 (58000)	—	159 (1.6)(23)	—	—	—	117 (1.2)(17)	—	124 (1.2)(18)

TO84419,000013D-19-27JUN22

Seats

Adjust Air Seat



Air Seat

RXA0167353—UN—03APR19

NOTE: Select, premium, or ultimate indicates the comfort and convenience package the feature is included with if not included with all.



Armrest Height Control

RXA0167320—UN—03APR19

Left-Hand Armrest Height — turn adjustment knob counterclockwise to loosen. Move armrest up or down to desired position and tighten by turning knob clockwise.



Armrest Inclination Control

RXA0167321—UN—03APR19

Left-Hand Armrest Inclination — turn adjustment knob to adjust incline angle of armrest.



Swivel Lockout Control

RXA0167322—UN—03APR19

Seat Swivel — place lever in up position to allow seat to swivel. Place in down position (shown) to lock out seat


from swiveling. Seat can be locked out in several positions.



RXA0167344—UN—03APR19

Fore/Aft Attenuation Lockout Control

Fore/Aft Attenuation — place lever in forward position (shown) to allow movement. Place lever in rear position to lock out movement. Seat must be in center position to lock.

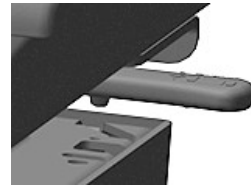

RXA0167345—UN—03APR19

Left/Right Attenuation Lockout Control

Left/Right Attenuation — place lever in forward position (shown) to allow movement. Place lever in rear position to lock out movement. Seat must be in center position to lock.



RXA0167343—UN—03APR19

Ride Firmness Control

Ride Firmness — move lever to one of three levels of ride firmness:


- Most firm (forward position)
- Medium firmness (center position)
- Least firm (rear position)



RXA0167326—UN—03APR19

Seat Height Control


Seat Height — push up (up arrow shown) to raise seat or down (down arrow shown) to lower seat.

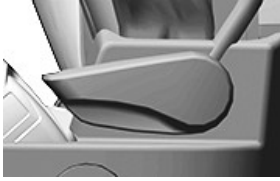

RXA0167340—UN—03APR19

Backrest Angle Control - Select

Backrest Angle (Select) — pull lever up and adjust angle. Release lever when desired angle is reached. Backrest locks into nearest detent.

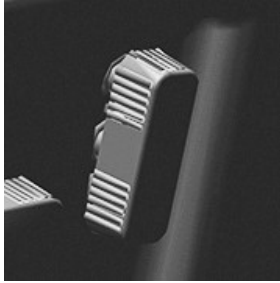

RXA0167327—UN—03APR19

Backrest Angle Control - Premium and Ultimate

Backrest Angle (Premium and Ultimate) — push control in the same direction as desired for backrest to move.



RXA0167341—UN—03APR19

Fore/Aft Position Control - Select


Fore/Aft Seat Position (Select) — pull up on bar and adjust position. Release bar when desired position is reached. Seat locks into nearest detent.



RXA0167328—UN—03APR19

Fore/Aft Position Control - Premium and Ultimate

Fore/Aft Seat Position (Premium and Ultimate) — push control in the same direction as desired for seat to move.

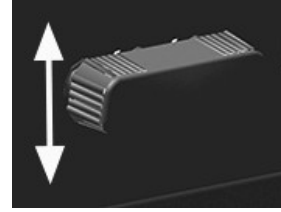

RXA0167329—UN—03APR19

Cushion Tilt Control - Premium and Ultimate

Cushion Tilt (Premium and Ultimate) — push front of control in the same direction as desired for front of cushion to move.



RXA0167342—UN—03APR19

Lumbar Adjustment Control - Select

Lumbar Adjustment (Select) — move lever to adjust amount of lumbar support. Continue to move lever until desired amount of support is reached.



RXA0167330—UN—03APR19

Lumbar Height Control - Premium

Lumbar Height (Premium) — push up (up arrow) to raise lumbar support or down (down arrow) to lower lumbar support.



RXA0167331—UN—03APR19

Lumbar Height Control - Ultimate

Lumbar Height (Ultimate) — push up (top control) to raise lumbar support or down (bottom control) to lower lumbar support.



RXA0167332—UN—03APR19

Lumbar Extension Control - Premium

Lumbar Extension (Premium) — push add (+) or remove (-) to adjust amount of air in lumbar support.



RXA0167333—UN—03APR19

Lumbar Extension Control - Ultimate

Lumbar Extension (Ultimate) — push add (right-hand control) or remove (left-hand control) to adjust amount of air in lumbar support.



RXA0167334—UN—03APR19

Cushion Length Control - Premium and Ultimate

Cushion Length (Premium and Ultimate) — push increase (top) or decrease (bottom) to adjust cushion length.



RXA0167335—UN—03APR19

Back Bolsters Control - Ultimate

Back Bolsters (Ultimate) — push add (+) or remove (-) to adjust amount of air in backrest bolsters.



RXA0167337—UN—03APR19

Massage Control - Ultimate

Massage (Ultimate) — push down (1) to select massage pattern one or up (2) to select massage pattern two. Press the selected pattern again to turn off massaging. Massage feature times out after 10 minutes.



RXA0173802—UN—14JAN20

Vent/Heat Control - Ultimate

Vent/Heat (Ultimate) — push left (blue icon) to select vent or right (red icon) to select heat.



RXA0173801—UN—14JAN20

Vent/Heat Intensity Control - Ultimate

Vent/Heat Intensity (Ultimate) — select one of three settings:

- High (top)
- Off (center)
- Low (bottom)

KD34109,00004B0-19-09DEC20

Adjust ActiveSeat II



RXA0167319—UN—04APR19

ActiveSeat II

NOTE: Premium or ultimate indicates the comfort and convenience package the feature is included with if not included with both.



RXA0167320—UN—03APR19

Armrest Height Control

Left-Hand Armrest Height — turn adjustment knob counterclockwise to loosen. Move armrest up or down to desired position and tighten by turning knob clockwise.



RXA0167321—UN—03APR19

Armrest Incline Control

Left-Hand Armrest Inclination — turn adjustment knob to adjust incline angle of armrest.



RXA0167322—UN—03APR19

Swivel Lockout Control

Seat Swivel — place lever in up position to allow seat to swivel. Place in down position (shown) to lock out seat from swiveling. Seat can be locked out in several positions.



RXA0169491—UN—02JUL19

Lateral Attenuation Lockout Control

Lateral Attenuation — rotate lever forward until parallel with the floor (lever will tighten) to lockout lateral movement. Rotate lever rearward until parallel with the floor (lever will tighten) to unlock and allow lateral movement.



RXA0167325—UN—03APR19

Ride Firmness Control

Ride Firmness — select one of three levels of ride firmness:


- Most firm (+)
- Medium firmness (center position)
- Least firm (-)



RXA0167326—UN—03APR19

Seat Height Control


Seat Height — push up (up arrow shown) to raise seat or down (down arrow shown) to lower seat.

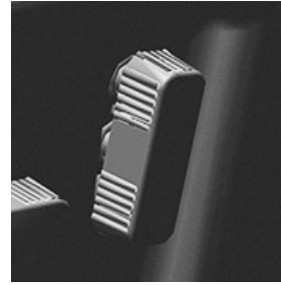

RXA0167327—UN—03APR19

Backrest Angle Control


Backrest Angle — push control in the same direction as desired for backrest to move.

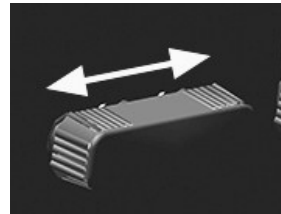

RXA0167328—UN—03APR19

Fore/Aft Position Control

Fore/Aft Seat Position — push control in the same direction as desired for seat to move.

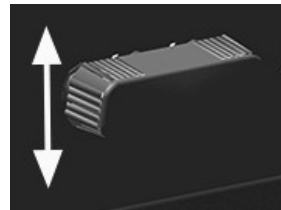

RXA0167329—UN—03APR19

Cushion Tilt Control

Cushion Tilt — push front of control in the same direction as desired for front of cushion to move.



RXA0167330—UN—03APR19

Lumbar Height Control - Premium

Lumbar Height (Premium) — push up (up arrow) to raise lumbar support or down (down arrow) to lower lumbar support.



RXA0167331—UN—03APR19

Lumbar Height Control - Ultimate

Lumbar Height (Ultimate) — push up (top control) to raise lumbar support or down (bottom control) to lower lumbar support.



RXA0167332—UN—03APR19

Lumbar Extension Control - Premium

Lumbar Extension (Premium) — push add (+) or remove (-) to adjust amount of air in lumbar support.



RXA0167333—UN—03APR19

Lumbar Extension Control - Ultimate

Lumbar Extension (Ultimate) — push add (right-hand control) or remove (left-hand control) to adjust amount of air in lumbar support.



RXA0167334—UN—03APR19

Cushion Length Control

Cushion Length — push increase (top) or decrease (bottom) to adjust cushion length.



RXA0167335—UN—03APR19

Back Bolsters Control - Ultimate

Back Bolsters (Ultimate) — push add (+) or remove (-) to adjust amount of air in backrest bolsters.



RXA0167337—UN—03APR19

Massage Control - Ultimate

Massage (Ultimate) — push down (1) to select massage pattern one or up (2) to select massage pattern two. Press the selected pattern again to turn off massaging. Massage feature times out after 10 minutes.



RXA0173802—UN—14JAN20

Vent/Heat Control - Ultimate

Vent/Heat (Ultimate) — push left (blue icon) to select vent or right (red icon) to select heat.



RXA0173801—UN—14JAN20

Vent/Heat Intensity Control - Ultimate

Vent/Heat Intensity (Ultimate) — select one of three settings:

- High (top)
- Off (center)
- Low (bottom)

KD34109,00004B1-19-21JUN22

Operator Presence Sensor

CAUTION: Avoid injury. SCV does not automatically disengage when system senses that operator is out of seat.

If operator leaves seat, an audible warning sounds for 5 seconds when:

- Brake and clutch pedals are not depressed, and machine is stopped in NEUTRAL or speed is zero. Machine goes into PARK after 7 seconds.
- PTO is engaged. If Auto Disengage is ignored, PTO automatically disengages after 7 seconds. For more information on Auto Disengage, see PTO Settings—Auto Disengage in PTO—General Information section of this Operator's Manual.

- SCV lever is in detent flow position.

TS36762,000023D-19-19APR21

Adjust Instructional Seat

⚠ CAUTION: Keep all other riders off tractor and equipment to avoid injury. Instructional seat is provided only for training operators or diagnosing machine problems. Always wear seat belt.



RXA0167301—UN—02APR19

Instructional Seat



RXA0167302—UN—02APR19

Backrest Down

Seat Backrest — push backrest forward to use as a writing surface.



RXA0167303—UN—02APR19

Cushion Up

Seat Cushion — push seat cushion up to allow more room for entering and exiting cab.

KT81203,000058D-19-02APR19

Mirrors

Adjust Mirrors

NOTE: Some items are only available if machine is equipped with the associated option.



RXA0173907—UN—15JAN20
Mirror Example — Dual Mirror

Manual Mirror — push mirror edges to adjust angle. Mirrors with one mirror and the bottom mirror on dual mirrors are adjusted manually.



RXA0167461—UN—12APR19
Manual Telescoping Lock Lever

Manual Telescoping — pull lock lever down to allow adjustment. Slide mirror arm to desired position. Push lock lever back up to lock into desired position.



RXA0168462—UN—31MAY19
Electric Mirror Controls Example


Electric mirror controls are next to radio.



RXA0167462—UN—12APR19
Select Left/Right Mirror

Select Mirror — select left-hand arrow to allow adjustments to left-hand electric mirror. Select right-


hand arrow to allow adjustments to right-hand electric mirror.

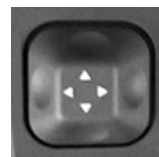

RXA0167463—UN—12APR19
Electric Mirror Adjustment

NOTE: Mirror angle controls are on right-hand side.

Electric Mirror — after selecting mirror to be adjusted, select arrows to adjust mirror angle in corresponding direction. The top mirror on a dual mirror is an electric adjustment.

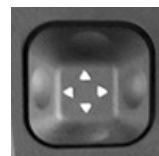

RXA0167463—UN—12APR19
Electric Telescoping Adjustment

NOTE: Telescoping controls are on left-hand side.

Electric Telescoping — after selecting mirror to be adjusted, select left-hand arrow to extend or right-hand arrow to retract mirror arm.



RXA0167464—UN—12APR19
Heat Adjustment


Heated Mirror — push up to turn on or down to turn off mirror heat. Icon is illuminated when heat is on.

KD34109,00004B2-19-16JAN20

Lights

Light Identification (Version A)

Version A does not have the larger Extremity Lights or Registration Plate Lights. Version B has these lights.

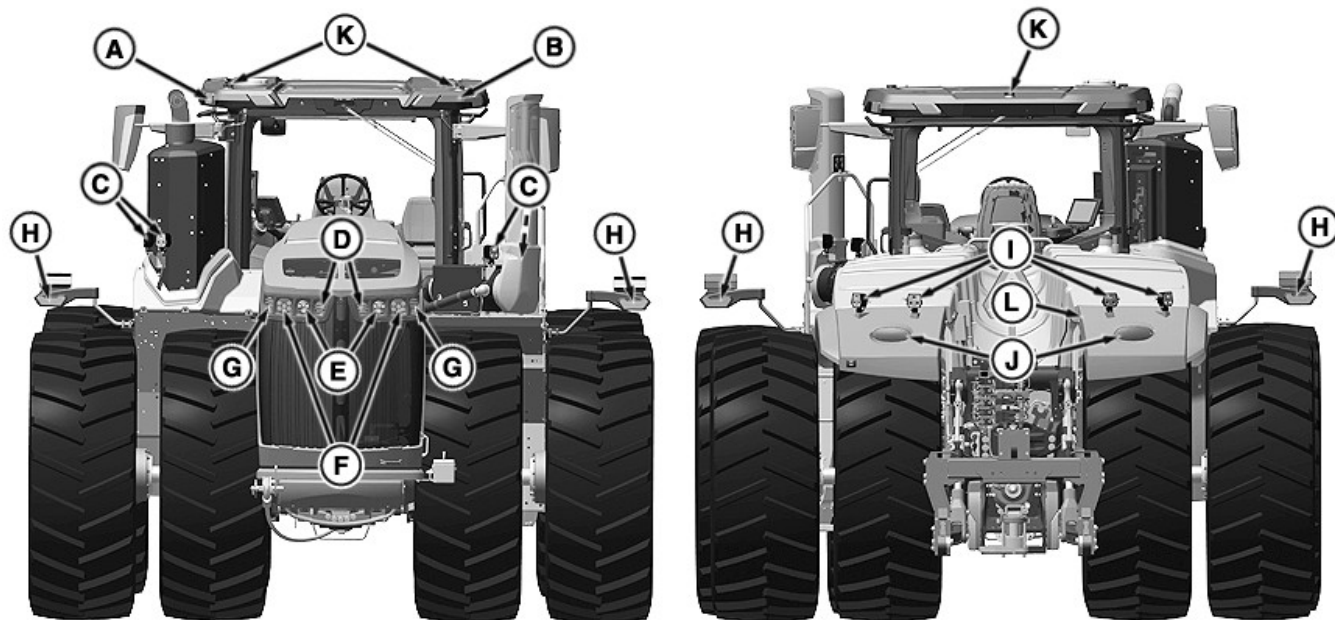

RXA0184066—UN—03SEP21


A—Roof Worklight (8 used)
B—Hazard Warning Light (4 used)
C—Front Mid Body Worklight (if equipped) (2 or 4 used)
D—Headlight Front Worklight (2 used)
E—Headlight Low Beam—Road (2 used)
F—Headlight High Beam—Road (2 used)

G—Headlight Corner Worklight (2 used)
H—Extremity Warning Light (4 used)
I—Rear Fender Worklight (4 used)
J—Fender Tail Light (2 used)
K—Beacon Light (3 used)
L—Rear Auxiliary Worklight (if equipped)

RW29387,000010B-19-24JUL23

Light Identification (Version B)

Version A does not have the larger Extremity Lights or Registration Plate Lights. Version B has these lights.

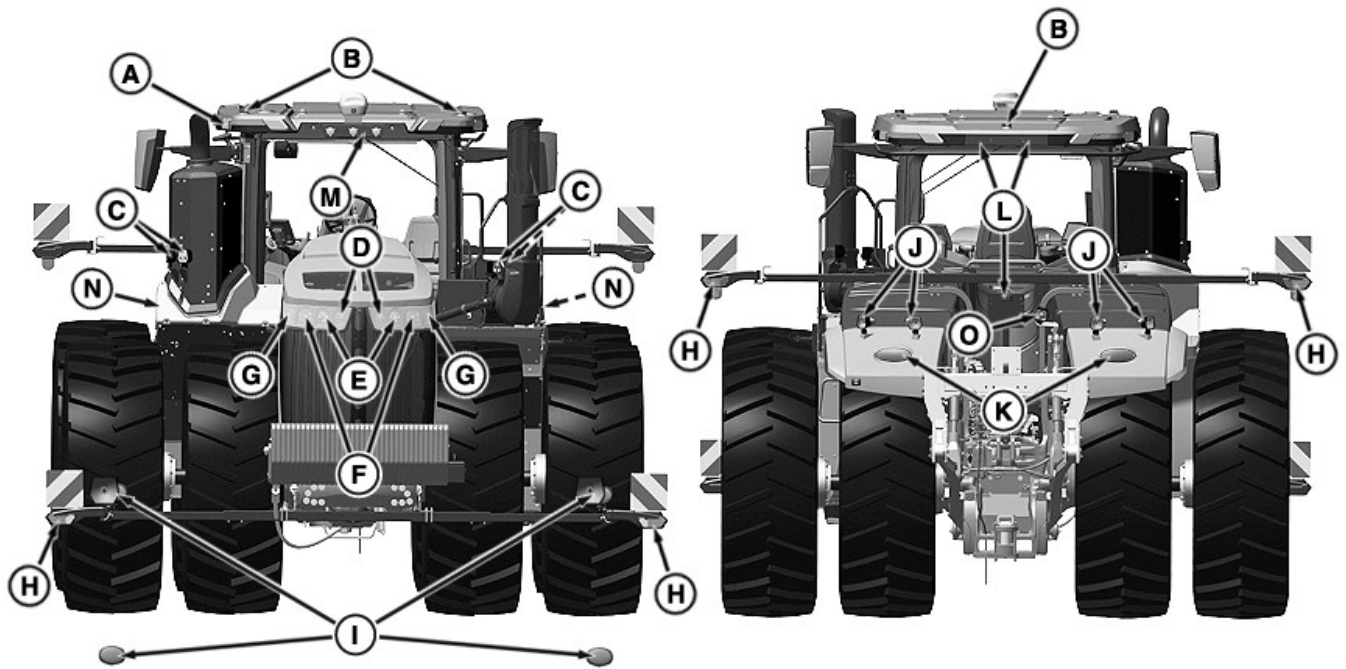

A—Roof Worklight (8 used)
 B—Beacon Light (3 used)
 C—Front Mid-Body Worklight (if equipped) (2 or 4 used)
 D—Headlight Front Worklight (2 used)
 E—Headlight Front Worklight (2 used)
 F—Headlight High Beam—Road (2 used)
 G—Headlight Corner Worklight (2 used)
 H—Extremity Warning Light (4 used)

I—Auxiliary Drive Light (if equipped) (2 used)
 J—Rear Fender Worklight (4 used)
 K—Fender Tail Light (2 used)
 L—Registration Plate Light (if equipped) (1 or 2 used)
 M—Trailer Light (if equipped) (3 used)
 N—Side Marker Light (if equipped) (2 used)
 O—Rear Auxiliary Worklight (if equipped)

RXA0187406—UN—28JUN22

RW29387,000010A-19-24JUL23

Lights Settings—Access

Access Application through Display:



Menu

RXA0167075—UN—20MAR19

1. Menu



Machine Settings

RXA0167076—UN—20MAR19

2. Machine Settings tab



Lights

RXA0168488—UN—05JUN19

3. Lights

Access Application through Navigation Bar:



Lights

RXA0168455—UN—05JUN19

Press lights button on navigation bar below display.

KD34109,00004D2-19-22JUN22

Lights Settings

Lights application allows you to access light preset

configurations. To adjust settings for presets, select corresponding tab. For lights specific to your machine, see Light Identification in this Operator's Manual section. For lighting controls, see Operate Lights in Front Console section of this Operator's Manual.

NOTE: *Worklights are configurable. Road lights are not configurable.*

Items Accessible on Lights Main Page:

NOTE: *Some items only display if machine is equipped with the associated option.*



RXA0168489—UN—31MAY19

Worklights Preset 1

Worklights Preset 1 — easily turn on a group of frequently used lights. See Lights Settings—Worklights Presets in this Operator's Manual section.



RXA0168490—UN—31MAY19

Worklights Preset 2

Worklights Preset 2 — easily turn on a group of frequently used lights. See Lights Settings—Worklights Presets in this Operator's Manual section.



RXA0168491—UN—31MAY19

Hood/Belt Line Lights

Hood/Belt Line Lights — toggle between hood and belt line lights when lights are in road mode. See Lights Settings—Hood/Belt Line Lights in this Operator's Manual section.



RXA0168492—UN—31MAY19

Highlighted Tab

Highlighted Tab — indicates which tab is selected.



RXA0168493—UN—31MAY19

Light with Fault

Light with Fault — exclamation point indicates that light is in error. Example: light bulb is burnt out.



RXA0167071—UN—21MAR19

Advanced Settings

Advanced Settings — access further adjustments and less common settings. See Lights Settings—Advanced in this Operator's Manual section.

Implement Light Connection:

7-Pin Outlet — connect implement lights to tractor. See 7-Pin Outlet in this Operator's Manual section.

Run Page Modules

Add modules for this application to run pages using Layout Manager. See the G5 CommandCenter Operator's Manual.

Example:



RXA0168494—UN—31MAY19

Road Lights

NOTE: *Different modules may be available for your application.*

Road Lights — quickly toggle between hood and belt line light groups.

Shortcut Keys

Add shortcut keys for this application to the shortcut bar using Layout Manager. See the G5 CommandCenter Operator's Manual.

Example:



RXA0168495—UN—31MAY19

Road Lights

NOTE: *Different shortcut keys may be available for your application.*

Road Lights — quickly toggle between hood and belt line light groups.

kd34109,1665686045943-19-13OCT22

Lights Settings—Worklights Presets

Customize light presets for specific customer needs.

Procedure to Modify:

1. Select desired tab:



Worklights Preset 1

RXA0168489—UN—31MAY19

- a. Worklights preset 1.



Worklights Preset 2

RXA0168490—UN—31MAY19

- b. Worklights preset 2.



Linked

RXA0168546—UN—31MAY19

- Select Link on toggle to link paired left-hand and right-hand lights for simultaneous on and off operation on all tabs.



Unlinked

RXA0168547—UN—31MAY19

- Select Unlink on toggle to allow paired left-hand and right-hand lights individual on and off operation on all tabs.



Light

RXA0168548—UN—31MAY19



Light Pair

RXA0168549—UN—31MAY19



Trailer Light

RXA0168550—UN—31MAY19

2. Select desired light, light pair, and/or trailer light keys for lights you want illuminated.



Highlighted Key

RXA0168551—UN—31MAY19

NOTE: Key is highlighted when selected.

KD34109,00004D4-19-30AUG22

Lights Settings—Hood/Belt Line Lights

Hood/belt line lights tab allows you to toggle between hood and belt line lights when lights are in road mode.

Procedure to Modify:



Hood Lights Enabled

RXA0168552—UN—31MAY19

Select to enable hood lights.



Belt Line Lights Enabled

RXA0168553—UN—31MAY19

Select to enable belt line lights.

KD34109,00004D5-19-22JUN22

Lights Settings—Advanced

Advanced settings allows you to access further adjustments and less common settings.

Items Accessible on Advanced Settings Page:




Check Box - Enabled

RXA0168554—UN—31MAY19

Machine Entrance/Exit Lighting — select to illuminate convenience lights upon entrance and exit of machine. Box will display with a check mark when enabled. For

convenience light locations, see Light Identification in this Operator's Manual section.



Selection Box

RXA0168555—UN—31MAY19

Engine Off Delayed Lighting — lighting remains on for a specified duration after engine is turned off. Select box to display a list of exit lighting durations to choose from. List also contains OFF to disable exit lighting.



ON/OFF

RXA0167628—UN—26APR19

Daytime Running Lights — lighting to increase visibility during the day while machine is turned on or in motion. Select ON to enable or OFF to disable.

TS36762.000024C-19-29JUN22

Hazard and Extremity Lights

CAUTION: Avoid injury or death caused by a collision with another vehicle. Always:

- Use road lights, extremity lights, and turn signals when operating tractor on a road or highway at night or during the day.
- Follow local laws and regulations for all equipment lighting and marking.
- Comply with all traffic regulations.

Extremity lights alert other vehicles of the tractor's extended width. If the tractor width changes, refer to local laws and regulations to ensure that the tractor remains in compliance.

NOTE: Depending on region and installed equipment, amber hazard lights can cease to operate as indicator lights when the Hazard Switch is activated.

Push hazard lights button to activate flashing hazard and extremity lights.

- For the hazard lights button location, see CommandARM Climate, Radio, and Lighting Controls in CommandARM section of this Operator's Manual.
- For hazard and extremity lights locations, see Light Identification in this section of this Operator's Manual. Hazard and extremity indicator lights include:
 - Front and rear roof lights.
 - Rear fender lights (equipped with an amber lens).

- Belt line lights.

IMPORTANT: To avoid damage, extremity lights can be retracted when parking tractor in a storage building.

Extremity lights. Extremity lights are lit when these functions are active:

- Hazard flashers.
- Turn indicators.
- Position lamps.

TS36762.0000250-19-21JUN22

Beacon Light

Three beacon lights are on the top of the cab:

- Two beacon lights at each front corner.
- One beacon light at the center rear.

For exact location, see Light Identification in this section of this Operator's Manual.

Push beacon light button to activate rotary beacon light. For beacon light button location, see CommandARM Climate, Radio, and Lighting Controls in CommandARM section of this Operator's Manual.

TS36762.0000251-19-21JUN22

7-Pin Outlet (Version A Lighting)


CAUTION: Avoid accidents. Always use auxiliary light on towed implement when tractor rear signals and other lights are obscured.

7-pin outlet allows operator to connect implement lights to the tractor.

Contact your John Deere dealer for:

- Matching 7-pin plug.
- Methods to connect tractor light switch with 7-pin connector accessory wires.

Outlet Diagram and Terminal Functions Chart

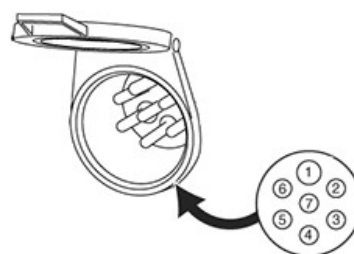

Outlet Diagram

RXA0168557—UN—31MAY19

Lights

Terminal Numbers	Function	
	Rear Connection	Front Connection
1	Ground	
2	Flood (Implement Lights)	
3	Left Turn Signal	
4	Brake Lights	Not Used
5	Right Turn Signal	
6	Tail Light	
7	Accessory	Not Used

KD34109,00004DA-19-27AUG19

7-Pin Outlet (Version B Lighting)


CAUTION: Avoid accidents. Always use auxiliary light on towed implement when tractor rear signals and other lights are obscured.

7-pin outlet allows operator to connect implement lights to the tractor.

Contact your John Deere dealer for:

- Matching 7-pin plug.
- Methods to connect tractor light switch with 7-pin connector accessory wires.

Outlet Diagram and Terminal Functions Chart

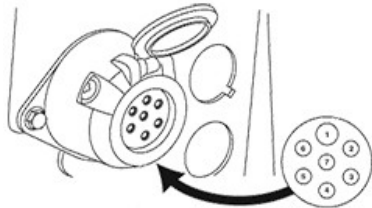

RXA0168556—UN—31MAY19

Outlet Diagram

NOTE: Accessory fuse F11 is removed. Some trailers use this connection for fog lights. This can be enabled by inserting a 30 A fuse into F11.

Terminal Numbers	Function	
	Rear Connection	Front Connection
1	Left Turn Signal ^a	
2	Accessory	
3	Ground	
4	Right Turn Signal ^b	
5	Right Tail Lights ^c	
6	Brake Lights ^d	Not Used

Terminal Numbers	Function	
	Rear Connection	Front Connection
7	Left Tail Lights ^e	

^aIncludes left extremity light.

^bIncludes right extremity light.

^cIncludes right front clearance and right extremity clearance lights.

^dIncludes cab.

^eIncludes license plate, left front clearance, and left extremity clearance lights.

KD34109,00004DB-19-27AUG19

Trailer Lighting

CAUTION: To prevent possible accident, always operate trailering lights when traveling on highway or public roads while towing an implement or trailer.



RXA0177584—UN—24APR20

Use control next to radio to turn on trailering lights, see Operate Lights in Front Console section of this Operator's Manual.

KT81203,00005AF-19-24APR20


Accessories

Right-Hand Side Console



RXA0188748—UN—07MAR23
Right-Hand Side Console Example

NOTE: Some items are only available if machine is equipped with the associated option.

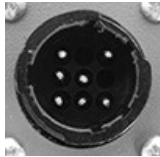


RXA0169821—UN—02AUG19
ISO 11783 Connector

ISO 11783 Connector — use to connect ISO 11783 compliant components.



RXA0188747—UN—07MAR23
Implement Ethernet Connector

Implement Ethernet Connector — use to connect components for high-speed communication between the tractor and compatible implements.

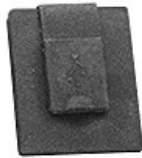

RXA0167979—UN—17MAY19
CommandCenter USB Input

CommandCenter USB Input — use to transfer data and reprogram CommandCenter. Input does not charge devices.



RXA0169780—UN—30JUL19
12 V Accessory Outlets

12 V Accessory Outlet — use to connect auxiliary equipment.



Outlet Pins

RXA0167982—UN—17MAY19

Outlet pins provide the following:

- Ground - pictured at top
- Unswitched battery power - pictured bottom left
- Switched power (key) - pictured bottom right



RXA0167983—UN—17MAY19
Radio AUX and USB Inputs

NOTE: AUX and USB inputs are only available if a radio is equipped.

Radio AUX and USB Inputs — use to connect AUX and USB devices to radio. Provides 500 mA output current for charging USB devices.



RXA0167984—UN—17MAY19

Diagnostic Connector (Dealer Use Only) — used for dealer diagnostics.

KD34109,000052C-19-03APR23

CommandARM Storage



RXA0183536—UN—02JUN21
CommandArm Storage Accessories



RXA0167981—UN—17MAY19
12 V Accessory Outlet

12 V Accessory Outlet — use to connect auxiliary equipment.

KD34109,000052D-19-21JUN22



RXA0167989—UN—17MAY19

ISO 11786 Connector

ISO 11786 Connector — use to connect implements to receive radar or GPS speed signal.


Right-Hand Front Corner Post



RXA0188982—UN—11JUL23

Right-Hand Front Corner Post Example

NOTE: Some items are only available if machine is equipped with the associated option.

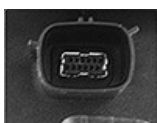

RXA0167986—UN—17MAY19

Display Connector

Display Connector — use to connect a universal display.



RXA0167987—UN—17MAY19

Ethernet Connector


Ethernet Connector — use to connect an Ethernet cable.



RXA0167988—UN—17MAY19

GreenStar Display Connector

GreenStar Display Connector — use to connect GreenStar Display.

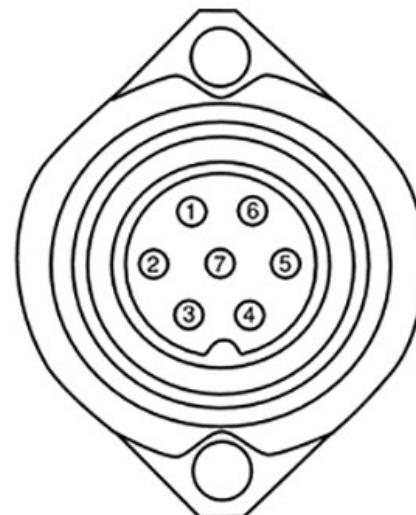

RXA0169832—UN—05AUG19

ISO 11786 Outlet Diagram

Terminal Numbers	Function
1	True Ground Speed
2	Buffered Wheel Speed
3	—
4	—
5	—
6	Implement Switch
7	Ground

KD34109,000052E-19-26MAY23

Left-Hand Rear Corner Post



RXA0167975—UN—17MAY19

Left-Hand Rear Corner Post Example

NOTE: Some items are only available if machine is equipped with the associated option.



RXA0167981—UN—17MAY19
12 V Accessory Outlet

12 V Accessory Outlet — use to connect auxiliary equipment.



RXA0167990—UN—17MAY19
AC Outlets

AC (Alternating Current) Outlet — use to power devices with AC connections. One of two outlet types displayed will be equipped on machine, 120 V (pictured left) or 230 V (pictured right).

KD34109,000052F-19-09AUG19

Right-Hand Rear Corner Post




RXA0188426—UN—10JAN23
Right-Hand Rear Corner Post Example

NOTE: Some items are only available if machine is equipped with the associated option.



RXA0188427—UN—10JAN23
USB-C Charging Ports

USB-C Charging Ports — use to charge devices with USB-C cable. Provides charging capability of up to 3 A (18 watt) for the top port and up to 3 A (36 watt) for the bottom port.

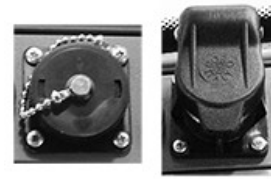

RXA0167980—UN—17MAY19
12 V Accessory Outlets

12 V Accessory Outlet — use to connect auxiliary equipment.



RXA0167982—UN—17MAY19
Outlet Pins

Outlet pins provide the following:

- Ground - pictured at top
- Unswitched battery power - pictured bottom left
- Switched power (key) - pictured bottom right

KD34109,0000530-19-17JAN23

Refrigerator and Cool/Storage Box



RXA0167977—UN—17MAY19
Refrigerator and Cool/Storage Box Example

NOTE: Some items are only available if machine is equipped with the associated option.

Cool/Storage Box Items:



RXA0167991—UN—17MAY19
Vent

Vent — open vent to allow storage contents to match temperature being delivered through HVAC system.

Refrigerator Items:



Power

RXA0167992—UN—17MAY19

Power — press to turn on cooling. Press again to turn off.



Power/Troubleshooting Indicator

RXA0167993—UN—17MAY19

Power/Troubleshooting Indicator — indicates the system status. If the indicator shows a:

- Solid green light, the refrigerator is on.
- Flashing or solid red light, the refrigerator is off, and an operational fault has occurred. See your John Deere dealer.



Cold Setting

RXA0167994—UN—17MAY19

Cold Setting — press button to select cold setting. Each press moves to next setting. Indicator for selected setting is illuminated. The larger the indicator, the colder the setting is.

KD34109,0000531-19-28SEP21

Sunshade



Sunshade

RXA0169822—UN—02AUG19

Pull-down sunshade reduces glare when operating in bright sunlight. The pull-down sunshade allows operator flexibility in amount of window coverage.

KD34109,0000532-19-02AUG19

Storage Compartments



9RW and 9RX Fender Storage

RXA0177578—UN—23APR20



9RT Fender Storage

RXA0167996—UN—17MAY19

Fender Storage — storage compartment inside cab under passenger/instructional seat.



Overhead Storage

RXA0167997—UN—17MAY19

Overhead Storage — storage compartment on inside roof of cab.



Operator's Manual Storage

RXA0167998—UN—17MAY19

Operator's Manual Storage — compartment on right-hand side of passenger/instructional seat to store Operator's Manual.

KD34109,00005EB-19-04MAY20

Monitor Bracket Mounts



Monitor Bracket Mount Example

RXA0167999—UN—17MAY19

Mount implement monitors using brackets and M10 cap screws. See your John Deere dealer for brackets.

Mounting Locations:


- Front right-hand corner post (two mounts)
- Rear right-hand corner post (two mounts)
- Rear left-hand corner post (one mount) if emergency hammer is not equipped

KD34109,0000534-19-30JUL19

Emergency Exit

If cab door is blocked in an emergency situation, removable rear cab window provides large exit path.

CAUTION: Avoid injury from broken glass. Before using hammer, cover eyes, face, and uncovered skin. Use emergency exit only when cab door is blocked.

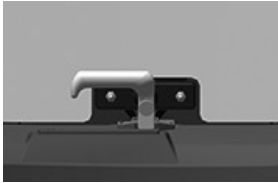

RXA0168000—UN—17MAY19

Rear Window Lever

Rear Window Lever — lift lever and push out glass to exit.



RXA0168001—UN—17MAY19

Emergency Hammer

Emergency Hammer (If Equipped) — use hammer to break window if exits are blocked.

KD34109,00005EC-19-23JUL20

Install Business Band/Citizens Band (CB) Antenna and/or Radio

Custom CB or business band radio installation requires special tools and skills to tune antenna for lowest possible voltage standing wave ratio (VSWR). Qualified professional should be employed or consulted before attempting installation. Contact your John Deere dealer for recommendations. Included specifications are useful to installer.

CAUTION: Avoid personal injury. Never mount business band radio antenna to rear of cab. Never route antenna cable near harness for electrical system controllers or operator controls. Failure to follow these precautions could expose operator to radio frequency energy levels higher than recommended by American National Standards Institute (ANSI) and/or could cause undesirable performance of electronically controlled systems.

Disconnect battery ground cable before any electrical repair.

NOTE: Do not mount microphones or accessories to bottom of radio bezel.

Business band radios are specially licensed radios in the US and Canada that operate in the UHF/VHF frequency bands.

Specifications for Factory Installed Radio Installation Kit:

- Roof Antenna Mount: NMO type.
- Cable Specifications: Cable length is 3.35 m (11 ft) from antenna mount to PL-259 radio connector. RG-58/U cable has 50 ohms intrinsic impedance.
- Roof Ground Plane: Grounded large antenna counterpoise foil under green cab roof allows installation of either 1/4 or 1/2 wave antenna.
- CB Antenna: Normal CB antenna can be attached to factory installed NMO antenna mount through use of an appropriate adapter. Special CB antenna already equipped with NMO base may alternatively be used.

Procedure to Install:



RXA0168002—UN—17MAY19

Radio Bezel

1. Remove radio bezel by pulling.




RXA0169831—UN—05AUG19

Antenna and Power Cables

2. Release antenna and power cables from bracket.

Power cable wire identification:

- A - Switched power (key) - red
- B - Ground - black
- C - Unswitched power - red

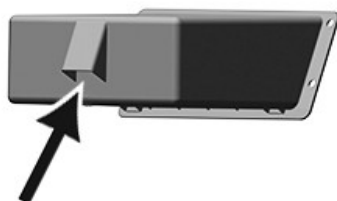

RXA0168004—UN—17MAY19


Hole for Connectors

3. Route cables through hole in back of compartment.
4. Connect cables to radio.
5. Place radio in compartment.
6. Replace radio bezel.

KD34109,0000536-19-16DEC19


Mount StarFire Receiver

Mount StarFire Receiver to machine using mounting kit and following procedure. To order kit, see your John Deere dealer.

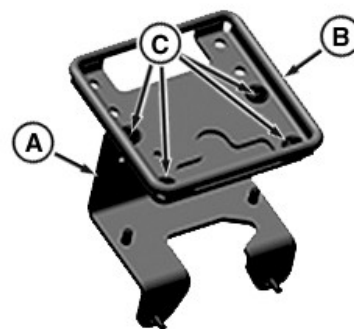

RXA0167843—UN—08MAY19

1. Attach bracket (A) to bracket (B) using cap screws (C).

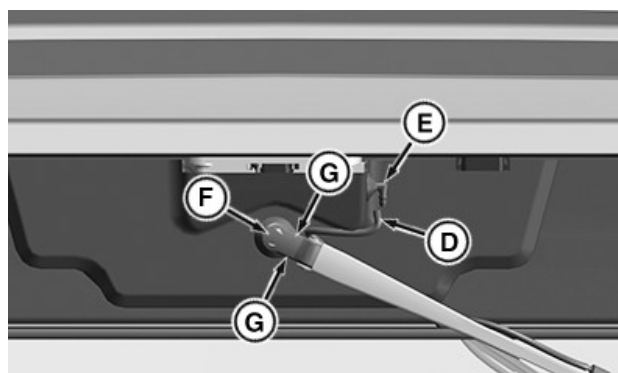


RXA0167897—UN—10MAY19

2. Disconnect front washer fluid hose (D) from fitting (E).
3. Pull tabs (G) apart to remove cover (F).
4. Remove nut from wiper motor shaft.
5. Remove wiper.



RXA0167898—UN—13MAY19

6. Remove cap screws (H).
7. Remove cover (I).

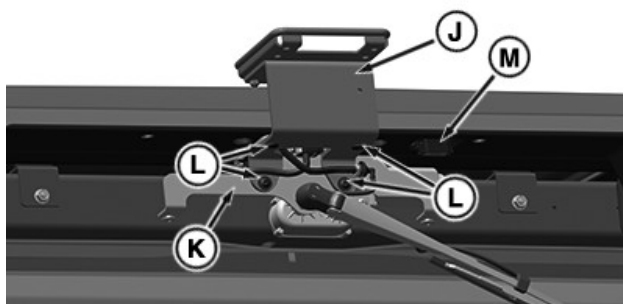

RXA0167845—UN—05AUG19

8. Attach StarFire bracket (J) to front wiper support (K) using cap screws (L).
9. Complete steps 2—7 in reverse to reassemble.
10. Mount receiver to bracket.

NOTE: If StarFire Integrated Receiver is equipped, it does not function when external StarFire Receiver is connected.


11. Connect receiver to connector (M).

KD34109,00004C8-19-21JUN22

Mount RTK (Real-Time Kinematic) Radio

NOTE: If machine was ordered with RTK radio, mounting bracket and radio are installed from factory. Radio must be removed from bracket to drill antenna hole. Reinstall radio and install antenna (located in cab) using information from the following procedure.


Mount RTK radio to machine using mounting kit and following procedure. To order kit, see your John Deere dealer.

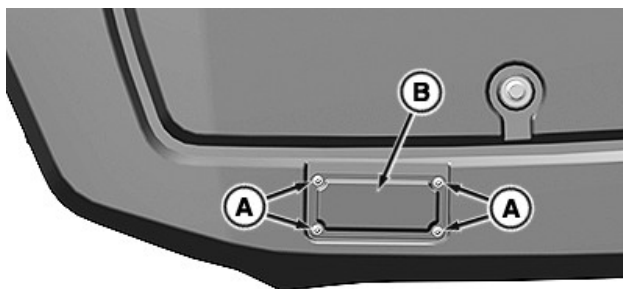

RXA0167853—UN—09MAY19


Right-Hand Side Roof

1. Remove cap screws (A) and cover (B).

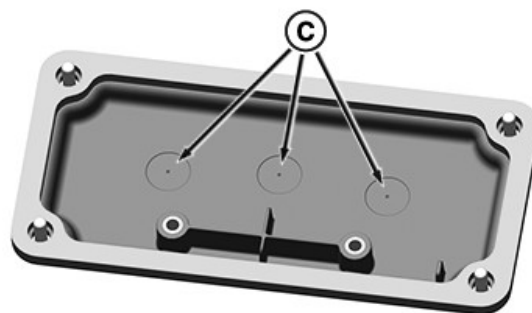


RXA0167854—UN—09MAY19

2. Drill a 31.8 mm (1.25 inch) hole at marker (C) corresponding to antenna location for your radio.

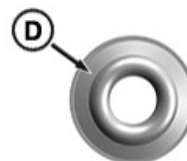


RXA0167855—UN—09MAY19

3. Attach grommet (D) to drilled hole.

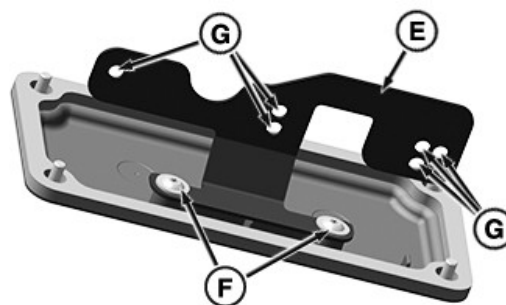

RXA0167856—UN—09MAY19

4. Attach bracket (E) to cover using cap screws (F).
5. Attach radio to bracket using holes (G).

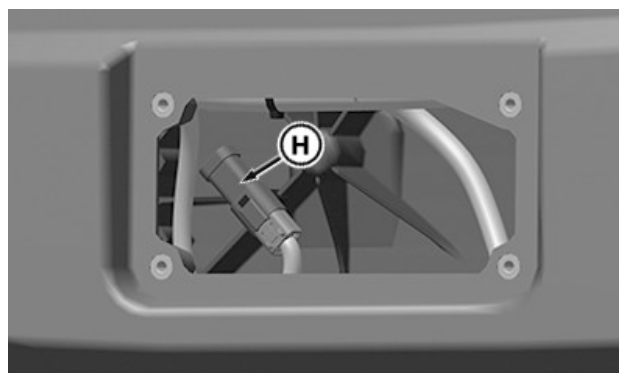


RXA0167857—UN—10MAY19

6. Connect radio to connector (H).
7. Reattach cover.
8. Attach antenna.

KD34109,00004C9-19-29APR21

Implement Connector

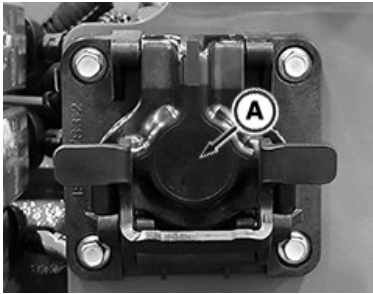


RXA0169781—UN—30JUL19

Implement connector (A) is on the rear of the tractor above the SCV stack.

KD34109,00005ED-19-29APR20

Implement Ethernet Connector

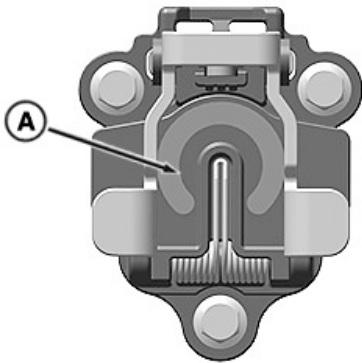


RXA0188727—UN—03MAR23

The implement Ethernet connector (A) (if equipped) enables high-speed communication between the tractor and compatible implements. The connector is located on the rear implement bracket next to the SCV stack.

kd34109,1677792589673-19-11JUL23

RS232 Serial Communication Connection

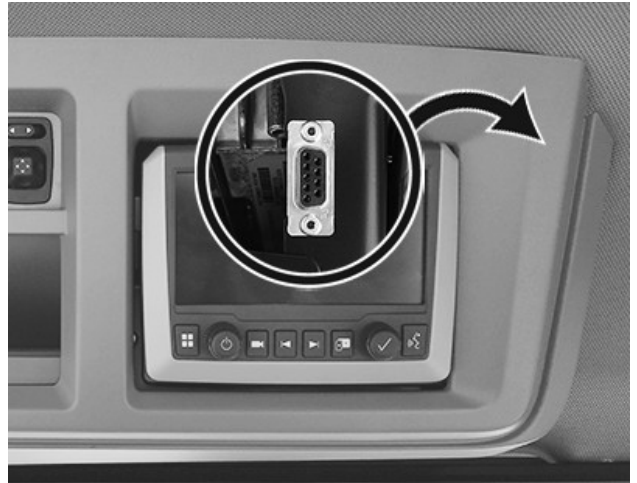

RXA0169820—UN—02AUG19

RS232 Serial Communication Connection

Connection provides NMEA0183 GPS data and is located behind upper right-hand side of radio bezel.

KD34109,0000538-19-02AUG19

AutoLoad Harness Connector [Scraper]



RXA0177640—UN—29APR20

AutoLoad harness connector (A) is on the rear of the tractor above the SCV stack.

KD34109,00005F5-19-23JUN22

Chain Box



RXA0177579—UN—23APR20

9RT Tractors

If the tractor is not equipped with a PTO and is equipped with a category 5 drawbar, a rear chain box is also equipped.

KD34109,00005EE-19-23APR20



RXA0177580—UN—23APR20

9RW and 9RX Tractors

A chain box is equipped on the left-hand platform of the tractor.



RXA0177581—UN—23APR20

Rear Chain Box

HVAC

HVAC Settings—Access

Access Application through Display:



Menu

RXA0167075—UN—20MAR19

1. Menu



Machine Settings

RXA0167076—UN—20MAR19

2. Machine Settings tab



HVAC

RXA0167626—UN—26APR19

3. HVAC

Access Application through Navigation Bar:



HVAC


RXA0167627—UN—26APR19

Press HVAC button on navigation bar below display.

KD34109,00004B7-19-08DEC21

HVAC Settings

HVAC application is used to adjust the temperature, fan speed, and air flow mode inside the cab.

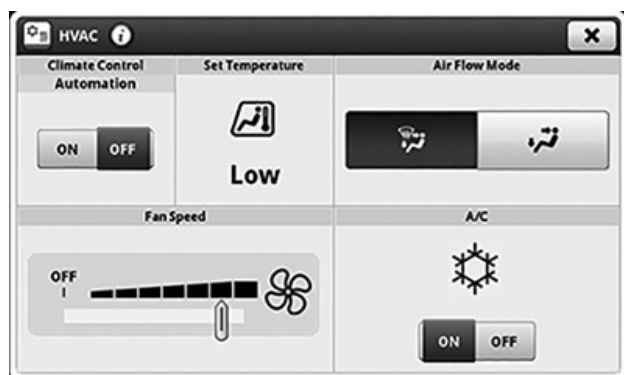

RXA0169839—UN—06AUG19

HVAC Example

Items Accessible on HVAC Main Page:



ON/OFF

RXA0167628—UN—26APR19

Climate Control Automation — enable or disable automatic control of Fan Speed, Air Flow Mode, and A/C. See HVAC Settings—Climate Control Automation in this Operator's Manual section.



75° F

Set Temperature

RXA0167629—UN—26APR19

Set Temperature — set desired temperature inside cab. See HVAC Settings—Set Temperature in this Operator's Manual section.



Air Flow Mode

RXA0167630—UN—26APR19

Air Flow Mode — adjust distribution of air flow inside cab. See HVAC Settings—Air Flow Mode in this Operator's Manual section.



Fan Speed

RXA0167631—UN—26APR19

Fan Speed — control fan speed inside cab. See HVAC Settings—Fan Speed in this Operator's Manual section.



A/C

RXA0167632—UN—26APR19

Air Conditioning (A/C) — enable or disable air conditioning. See HVAC Settings—Air Conditioning in this Operator's Manual section.

Run Page Modules

Add modules for this application to run pages using Layout Manager. See the G5 CommandCenter Operator's Manual.

Example:



A/C

RXA0167633—UN—26APR19

NOTE: Different modules may be available for your application.

A/C — toggle gives you direct access to enable/disable the A/C.

Shortcut Keys

Add shortcut keys for this application to the shortcut bar using Layout Manager. See the G5 CommandCenter Operator's Manual.

Example:



ON

RXA0167634—UN—26APR19

NOTE: Different shortcut keys may be available for your application.

A/C — quick access to turn air conditioning ON and OFF.

kd34109,1665686496991-19-13OCT22

HVAC Settings—Climate Control Automation

Climate Control Automation automatically controls Fan Speed, Air Flow Mode, and A/C based on Set Temperature.

When enabled, the following conditions apply:

- Changing Set Temperature does not disable AUTO mode.
- Selecting Fan Speed, Air Flow Mode, or A/C overrides and disables AUTO mode.
- Pressing Fan Speed or Air Flow Mode buttons on CommandARM overrides and disables AUTO mode.



ON/OFF

RXA0167628—UN—26APR19

Select ON to enable or OFF to disable.

KD34109,00004B9-19-21JUN22

HVAC Settings—Set Temperature

Use Set Temperature to select a desired cab temperature.

Procedure to Modify:



75° F

Set Temperature

RXA0167629—UN—26APR19

1. Select Set Temperature module to display Set Temperature page.



Adjust Set Temperature

RXA0167639—UN—26APR19

2. Select (+) to increase or (-) to decrease value.



Close

RXA0167129—UN—25MAR19

3. Select to close.

Alternate Procedure to Modify:

Temperature Button — button on CommandARM to

adjust temperature. See CommandARM Climate, Radio, and Lighting Controls in CommandARM Controls section of this Operator's Manual.

KD34109,00004BA-19-21JUN22

HVAC Settings—Air Flow Mode

Air Flow Mode is used to adjust distribution of air flow inside the cab.

NOTE: Air conditioning automatically turns on when defrost air flow mode is selected.

Procedure to Modify:



Air Flow Mode

RXA0167630—UN—26APR19

Select desired air flow mode on toggle bar.



AUTO

RXA0169349—UN—28JUN19

If Climate Control Automation is enabled, toggle bar changes to AUTO. If selected, Climate Control Automation is overridden and disabled.



Defrost/Operator/Floor

RXA0167636—UN—26APR19

Defrost, Operator, and Floor — directs air flow at operator and floor, and defrosts the windshield.



Operator/Floor

RXA0167637—UN—26APR19

Operator and Floor — directs air flow at operator and floor.

Alternate Procedure to Modify:

Air Flow Mode Button — button on CommandARM to select mode of air flow. See CommandARM Climate, Radio, and Lighting Controls in CommandARM Controls section of this Operator's Manual.

KD34109,00004BB-19-21JUN22

HVAC Settings—Fan Speed

Fan Speed page allows control of the fan speed inside the cab.

Procedure to Modify:



Fan Speed

RXA0167641—UN—26APR19

1. Select Fan Speed module to display Fan Speed page.



Adjust Fan Speed

RXA0167642—UN—26APR19

2. Select (-) to decrease or (+) to increase speed setting.



Close

RXA0167129—UN—25MAR19

3. Select to close.



AUTO

RXA0167643—UN—26APR19

If Climate Control Automation is enabled, setting display changes to AUTO. If selected, Climate Control Automation is overridden and disabled.

Alternate Procedure to Modify:

Fan Speed Button — button on CommandARM to adjust fan speed. See CommandARM Climate, Radio, and Lighting Controls in CommandARM Controls section of this Operator's Manual.

KD34109,00004BC-19-21JUN22

HVAC Settings—Air Conditioning

IMPORTANT: To avoid possible compressor damage, turn air conditioning OFF if system is not cooling properly.

NOTE: Air conditioning turns ON when defrost air flow mode is selected.

Procedure to Modify:



ON/OFF

RXA0167628—UN—26APR19

Select ON to enable or OFF to disable air conditioning.

AUTO

AUTO

RXA0167645—UN—26APR19

If Climate Control Automation is enabled, toggle bar changes to AUTO. If selected, Climate Control Automation is overridden and disabled.

KD34109,00004BD-19-18OCT19

Performance Ballasting

General Ballasting Information

This section covers maximum weights, proper setup, and ballast limitations.

Adjust ballast to allow 8—12% slippage when operating. Field tests show that maximum available horsepower occurs in this range.

Major Considerations

Proper ballast configuration is required to ensure proper:

- Weight distribution for braking and steering authority.
- Traction to pull a high draft load efficiently.
- Total weight and static balance for a given implement type (towed, integral, or semi-integral). Always reevaluate the ballast configuration when changing from one implement or attachment to another.

Effects of an improper ballast configuration:

Too Little Ballast	Too Much Ballast
Excessive slip	Soil compaction
Power transfer loss	Power loss
Tread wear	Increased load
Fuel waste	
Reduced productivity	

Ballast Limitations

IMPORTANT: Exceeding Maximum Ballast Weight (MBW) can void the warranty due to “overload” conditions. The maximum ballast weight (MBW) for:

- Ag tractors 590 and 640 horsepower is 30390 kg (67000 lb).
- 30390 kg (67000 lb) maximum ballast cannot be achieved on 590 and 640 horsepower tractors equipped with triple tires.
- Ag tractors 390, 440, 490, and 540 horsepower is 28123 (62000 lb).
- Scraper tractors is 24500 kg (54000 lb).

To extend drive-train life never operate the tractor with continuous full-power loads below 7.1 km/h (4.4 mph). With any transmission, ground speed can slow briefly in hard-pull situations, but recover to faster speeds during normal operations.

MBW is the vehicle weight and any added ballast at which the tractor power transmission system is qualified for operation under full draft load for extended periods of time. MBW:

- Does not include the vertical load induced by hitch or drawbar-mounted implements.

- Includes fluids at the maximum level (fuel, DEF, and hydraulic oil) and operator.

Adherence to MBW ensures satisfactory power-train life and minimal ground compaction. Increases in the vehicle weight, while decreasing speed results in higher torque through the power train components (such as gears/shafts/bearings/clutches). If ballast limitations are not followed and the vehicle is operated at slow speeds, premature failure of the power train can occur.

Ballast is limited to the lowest capacity of either the tire or the tractor. Never exceed the carrying capacity of each tire. If more weight is needed, consider installing larger tires. See Tire Load Index in the Wheels and Tires —General Information section of this Operator’s Manual.

If the vehicle weight exceeds the MBW due to mounted commodity tanks or other attachments, draft load shall be limited to the MBW-equivalent draft to ensure long term damage to the drivetrain of the vehicle does not occur. Care shall be taken to not operate the vehicle in such a manner that a single tire/track section loses contact with the ground or permanent damage to the vehicle structure may occur.

EC82310,0000F70-19-27JUN22

General Guidelines

IMPORTANT: Avoid damage to the tractor. Never exceed the maximum ballast weight when operating with heavy draft loads. The maximum ballast weight (MBW) for:

- Ag tractors 590 and 640 horsepower is 30390 kg (67000 lb).
- 30390 kg (67000 lb) maximum ballast cannot be achieved on 590 and 640 horsepower tractors equipped with triple tires.
- Ag tractors 390, 440, 490, and 540 horsepower is 28123 (62000 lb).
- Scraper tractors is 24500 kg (54000 lb).

Tractor Weight Based on Engine Power

A guide to ballasting tractors is to use engine horsepower combined with necessary ballast for a particular job—light, medium, or heavy. Start the process with the lightest ballast that can handle the job. Then add ballast as necessary to get the performance desired.

NOTE: Correct weight split must be maintained when adding or removing ballast. Cast weight is preferred to obtain the best tractive performance.

More or less weight is necessary when different travel speeds are used. Higher speeds do not require as much

weight. Final indication of correct ballast is slip measured in the field.

NOTE: Use radar or GPS to monitor slip. Checking slip is manually possible, but only shows slip in the area of the field where the check is performed. See *Measuring Slip* in this Operator's Manual section.

The correct tractor weight to efficiently deliver power to the ground for draft applications depends on travel speed. Consult table for recommended weight based on expected travel speed and drawbar/hitch load.

Recommended Travel Speeds	
Implement Draft	Ground Speed km/h (mph)
Light	8.7 (5.4) and faster
Medium	7.2—8.7 (4.5—5.4)
Heavy	7.2 (4.5) and slower

Light Implement—44 kg/PS (99 lb/hp)

Examples: Drawn planters, air seeders, and PTO-operated equipment that place small vertical loads on the drawbar.

Medium Implement—48 kg/PS (107 lb/hp)

Examples: Implements that place a larger vertical load on the drawbar such as disks, chisel plows, and field cultivators.

Heavy Implement—52 kg/PS (117 lb/hp)

Examples: Implements that place large vertical loads on the hitch or the drawbar such as rippers or hitch-mounted planters.

Engine		[Ag] Implement		
PS (hp ISO)	hp	Light	Medium	Heavy
		44 kg/PS (99 lb/hp)	48 kg/PS (107 lb/hp)	52 kg/PS (117 lb/hp)
		Ballast Weight kg (lb)		
390	385	17160 (38082)	18720 (41159)	20280 (45006)
440	434	19360 (42964)	21120 (46436)	22880 (50776)
490	483	21560 (47846)	23520 (51713)	25480 (56546)
540	533	23760 (52729)	25920 (56990)	28123 (62000) ^a
590	582	25960 (57611)	28320 (62266)	30390 (67000) ^b
640	631	28160 (62493)	30390 (67000) ^b	30390 (67000) ^b

^a[Ag: 390-540] Maximum Ballast Weight (MBW) 28123 kg (62000 lb)

^b[Ag: 590-640] Maximum Ballast Weight (MBW) 30390 kg (67000 lb)

Engine		[Scraper] Implement		
PS (hp ISO)	hp	Light	Medium	Heavy
		44 kg/PS (99 lb/hp)	48 kg/PS (107 lb/hp)	52 kg/PS (117 lb/hp)
		Ballast Weight kg (lb)		
490	483	21560 (47846)	23520 (51713)	24500 (54000) ^a
540	533	23760 (52729)	24500 (54000) ^a	24500 (54000) ^a
590	582	24500 (54000) ^a	24500 (54000) ^a	24500 (54000) ^a
640	631	24500 (54000) ^a	24500 (54000) ^a	24500 (54000) ^a

^a[Scraper] Maximum Ballast Weight (MBW) 24500 kg (54000 lb)

EC82310,0000F6F-19-15JUL22

General Weight Split Guidelines

IMPORTANT: Avoid damage to the tractor. Never exceed:

- The maximum ballast weight when operating with heavy draft loads. The maximum ballast weight (MBW) for:
 - Ag tractors 590 and 640 horsepower is 30390 kg (67000 lb).
 - Ag tractors 390, 440, 490, and 540 horsepower is 28123 (62000 lb).
 - Scraper tractors is 24500 kg (54000 lb).
- The tire carrying capacities when using high percentages per axle. See Tire Load Index in the *Wheels and Tires—General Information* section of this Operator's Manual.

The weight split varies depending on the application. Increase front axle weight to insure steering authority when using a heavy drawbar load or hitch-mounted implements.

Weight split requirements are based on the type of implement or attachment being used. Maintaining sufficient weight on the front and the rear axles to provide steering authority under both field and transport conditions is a primary consideration. Other factors as indicated in following tables must also be considered.

Recommended Weight Splits

Implement	[Ag]	
	Weight Split ^a %	
	Front	Rear
Towed	51—55	49—45
Hitch-Mounted	55—60	45—40
High Load Transfer	65—70	35—30

^aUse 60—65 weight split on the front when operating with a heavy draft implement causing extreme weight transfer from front to rear.

[Scraper]		
Implement	Weight Split ^a %	
	Front	Rear
Towed Implement and Dolly-Wheel Scrapers	51—55	49—45
High Load Transfer Implement (Scrapers without Dolly-Wheel)	65—70	35—30

^aUse 60—65 weight split on the front when operating with a heavy draft implement causing extreme weight transfer from front to rear.

EC82310,0000F6E-19-27JUN22

Ballast Options

IMPORTANT: Avoid damage to the tractor. Never exceed the maximum ballast weight when operating with heavy draft loads. The maximum ballast weight (MBW) for:

- Ag tractors 590 and 640 horsepower is 30390 kg (67000 lb).

- 30390 kg (67000 lb) maximum ballast cannot be achieved on 590 and 640 horsepower tractors equipped with triple tires.
- Ag tractors 390, 440, 490, and 540 horsepower is 28123 (62000 lb).
- Scraper tractors is 24500 kg (54000 lb).

Quick-Tatch Suitcase Weights

Quik-Tatch weights weigh 43 kg (95 lb) each. Up to:

- 36 weights can be installed on the front weight support. These combinations are limited by tractor options.
- [Ag] 18 weights can be installed on the rear weight frame. Tractors with a rear PTO can install up to 13 weights.

Wheel Weights—Rear Wheels

Rear wheel weights must be installed with appropriate starter weights. Certain configurations are not available. See Rear Wheel Weight Use in this section of this Operator's Manual.

Weight Adjustment


Ballast			Weight Adjustment kg (lb)	
Location	Type	Weight kg (lb)	Front	Rear
Front	Standard Weight Support	436 (961)	+661 (+1457)	-225 (-496)
	Quick-Tatch Suitcase Weights	43 (95)	+72 (+159)	-29 (-64)
	Wheel Weights	620 (1367)	+620 (+1367)	0 (0)
		70 (154)	+70 (+154)	0 (0)
		900 (1985)	+900 (+1985)	0 (0)
		550 (1213) 900 (1985)	+1450 (+3197)	0 (0)
		72 (159)	+72 (+159)	0 (0)
		205 (452)	+205 (+452)	0 (0)
Rear	Quick-Tatch Suitcase Weights	43 (95)	-30 (-66)	+73 (+161)
	PTO	408 (899)	-25 (-55)	+433 (+955)
	Hitch	1094 (2412)	-203 (-448)	+1297 (+2859)
	Wheel Weights	620 (1367)	0 (0)	+620 (1367)
		70 (154)	0 (0)	+70 (+154)
		900 (1984)	0 (0)	+900 (+1984)
		550 (1213) 900 (1984)	0 (0)	+1450 (+3197)
		72 (159)	0 (0)	+72 (+159)
		205 (452)	0 (0)	+205 (+452)

EC82310,0000F6D-19-27JUN22

Measure Slip

IMPORTANT: Slip measurement requires an implement attached to tractor. Manual measurement also requires an assistant. Avoid physical injury. Ensure that the assistant is clear of tractor and implement during procedure.

NOTE: Tractors equipped with an optional radar unit or GPS can automatically determine the percentage of slip. Radar and GPS must be calibrated correctly. (See the CommandCenter section in this Operator's Manual).

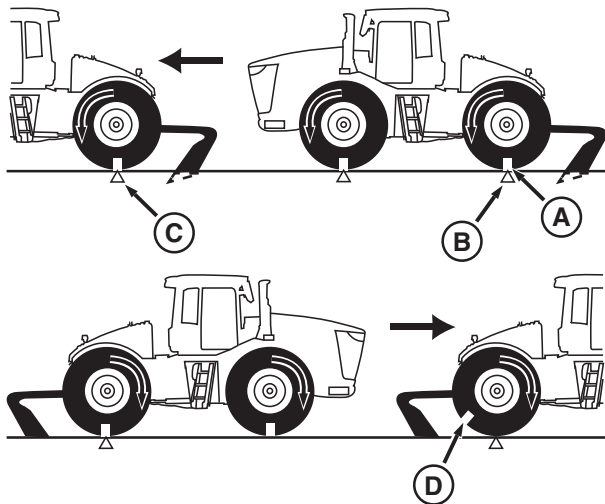

RXA0180492—UN—19NOV20

1. Mark a location on the tire (A).
2. Mark a starting point on the ground (B) with the tractor moving and the implement lowered in the ground.
3. Follow the tractor and mark the ground (C) again where the marked tire completes ten full revolutions.
4. Repeat procedure with implement raised at the same working speed. Count the revolutions (D) between the same two marks.
5. Use the second count and the chart to determine the slip.

NOTE: 8—12% is ideal for wheel tractors.

6. Adjust ballast or the load to give the correct slippage.

NOTE: Available horsepower is greatly reduced when the slip drops below the minimum percent.

Wheel Revolutions (Step 4)	% Slip	Action
10	0	Remove Ballast
9-1/2	5	Remove Ballast
9	10	Correct Ballast

Wheel Revolutions (Step 4)	% Slip	Action
8-1/2	15	Add Ballast
8	20	Add Ballast
7-1/2	25	Add Ballast
7	30	Add Ballast


EC82310,0000F6C-19-23JUN22

Quik-Tatch Weight Use

Front Frame Weight

Standard Front Weight Support


No more than 36 Quik-Tatch weights can be installed on the tractor standard front weight support.

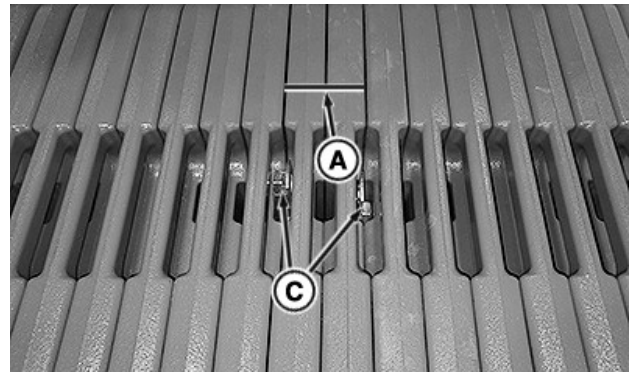

RXA0173127—UN—10DEC19

Front Weight Support (A) and (C)

1. Install Quik-Tatch weights balanced on each side of the center point. The first two weights must be installed as a pair (A).
2. To install:
 - Two to six weights:

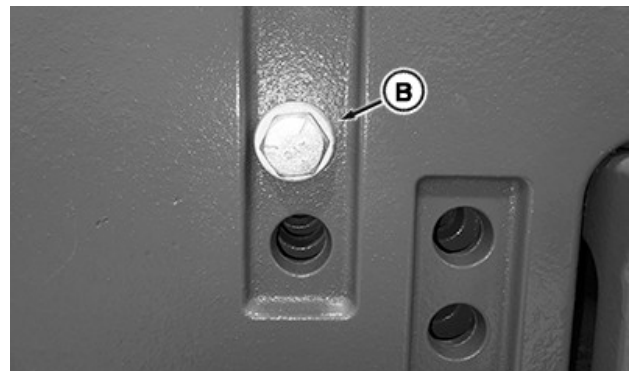


RXA0173128—UN—10DEC19

Front Weight Support (B)

- a. Insert one retaining bolt (B) through the hole in one side of the weights and secure the bolt with a nut on the other side of the weights.
 - b. Tighten the bolt to 230 N·m (170 lb·ft).
- Eight or more weights:


- Insert and position two retainers (C) between the weights. Position one retainer with the threaded hole pointing upward, and position one retainer with the threaded hole pointing downward.
 - Run two retaining bolts (B) through the holes at both sides of the weights, threading each bolt into the threaded hole on the retainer.
 - Tighten the bolts to 230 N·m (170 lb·ft).
- Retighten the retaining bolts after 10 hours of use.

Rear Frame Weight

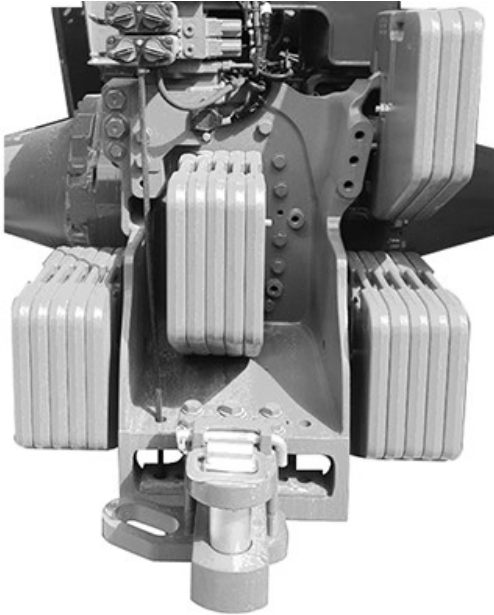

RXA0152658—UN—07SEP16

Maximum Ballast Configuration Without PTO and Hitch

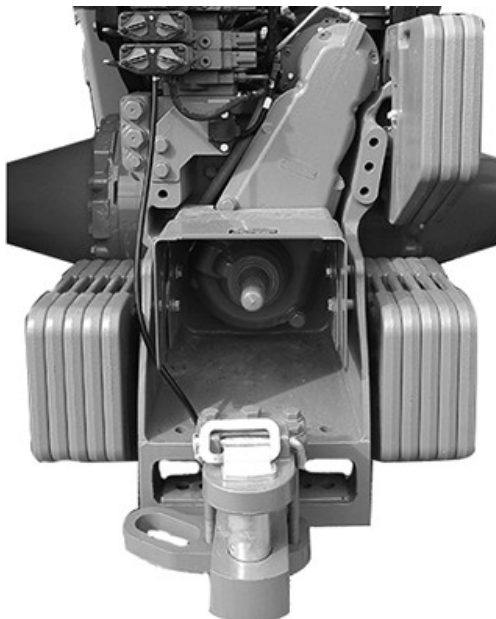

RXA0153814—UN—07SEP16

Maximum Ballast Configuration With PTO

Rear weight support affects both axles due to the weight transfer effect.

Additional ballast not allowed if tractor equipped with hitch, or hitch and PTO.

Equipment configuration determines maximum quantity of Quik-Tatch weights. A maximum of 18, 43 kg (95 lb) Quik-Tatch weights can be added to rear of tractor as long as the MBW is not exceeded.

Install Quik-Tatch Weights

To install five or fewer weights:

- Position the weight on the bracket.
- Install the retaining bolts through the hole.
- Tighten the bolts to 230 N·m (170 lb·ft).
- Retighten the retaining bolts after 10 hours of use.

EC82310,0000F6B-19-23JUN22

Rear Wheel Weight Use

CAUTION: Avoid injury when installing the wheel weights. Use appropriate lifting devices for the installation or have the job performed by your John Deere dealer.

IMPORTANT: Avoid damage to the tractor and the wheel components.

- Maintain a 25 mm (1 in) minimum clearance between the inside wheel weights and the tractor components.
- Not all tread settings are possible when adding wheel weights.

Wheel Weight Types

Wheel Weight kg (lb)	Wheel Weight Type and Wheel Weight Location	
	Cast Drive	Steel Wheel
	Inside	Outside (Outermost Wheel)
620 (1367)	Yes	—
70 (154) ^a	—	Yes ^{bc}
550 (1213)	—	Yes ^{bde}
900 (1984)	—	Yes ^{bd}
72 (159) ^f	Yes	Yes ^f
205 (452)	Yes	Yes ^g

^aStarter weight for the 550 kg (1213 lb), and 900 kg (1984 lb) weight.

^bRequires 42-, 44-, 46-, or 50-inch diameter rim. Not compatible with other rim sizes.

^cStarter weight for the 550 kg (1213 lb) and 900 kg (1984 lb) weight.

^dMust be mounted to 70 kg (154 lb) starter weight.

^eRequires a 900 kg (1984 lb) weight on the outside.

^fStarter weight for the 205 kg (452 lb) weight.


^gMust be mounted to 72 kg (159 lb) starter weight.

Rear Wheel Weight Installation

To install the rear wheel weights on:

- Single drive wheels, see Rear Wheel Weight Installation—Single Drive Wheel in this section of this Operator's Manual.
- Dual drive wheels, see Rear Wheel Weight Installation—Dual Drive Wheels in this section of this Operator's Manual.

Using Cast Hub Wheel Weights

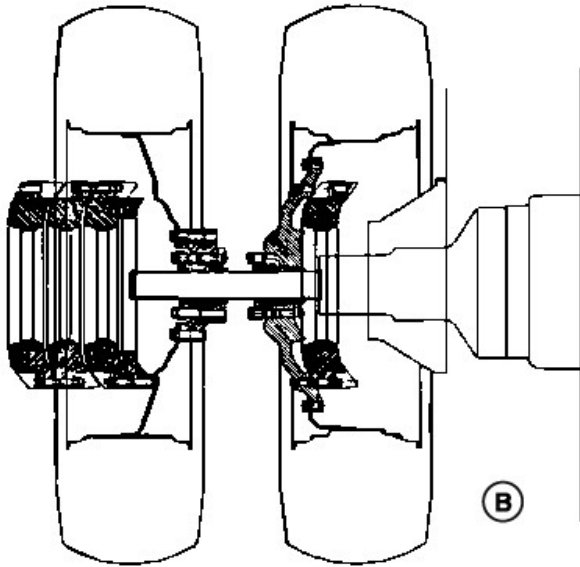

RXA0160099—UN—06JUL17

CAUTION: When installing weights, use appropriate equipment or see your John Deere Dealer.

IMPORTANT: Inside wheel weight must have at least 25 mm (1 in) clearance between weight and tractor components. Do NOT stack more than 690 kg (1520 lb) of weights together—three 205 kg (452 lb) weights and one 72 kg (159 lb) weight.

Cast iron weights of 72 kg (159 lb), 205 kg (452 lb), or 625 kg (1378 lb) are available for cast or steel wheels. Weights can be installed on inside or outside of the wheel when not equipped with duals. Also, 625 kg (1378 lb) cast weights are available to be installed on the inside of the cast wheel. Use diagrams showing placement of weights or see your John Deere dealer.

Install weights on wheel. Tighten M16 bolts to 310 N·m (230 lb·ft) or M20 bolts to 610 N·m (450 lb·ft).

For additional weights, install bolts in previous weight. Rotate alternate weight to align bolts with weight holes.

Tighten bolts and then retighten after driving approximately 100 m (109 yd).

Retighten bolts after working 3 hours, 10 hours, and 250 hours.

EC82310,0000F6A-19-27AUG21

Rear Wheel Weight Installation—Dual Drive Wheels

Install a 72 kg (159 lb) Starter Weight with the 205 kg (452 lb) Wheel Weight


CAUTION: Avoid injury when installing weights as they are heavy. Use appropriate lifting devices for installation or have the work performed by your John Deere dealer.

IMPORTANT: Avoid damage to the tractor and wheel components.

- After installation, tighten the wheel weight bolts every 3 hours and 10 hours (daily) for the first week of operation or until bolts do not move when tightened.
- Never:
 - Install more than three 205 kg (452 lb) wheel weights.
 - Install 550 kg (1213 lb) and 900 kg (1984 lb) outer wheel weights with triples.

1. Install the 72 kg (154 lb) starter weight on the wheel. Tighten the wheel weight bolts to 610 N·m (450 lb·ft).

2.

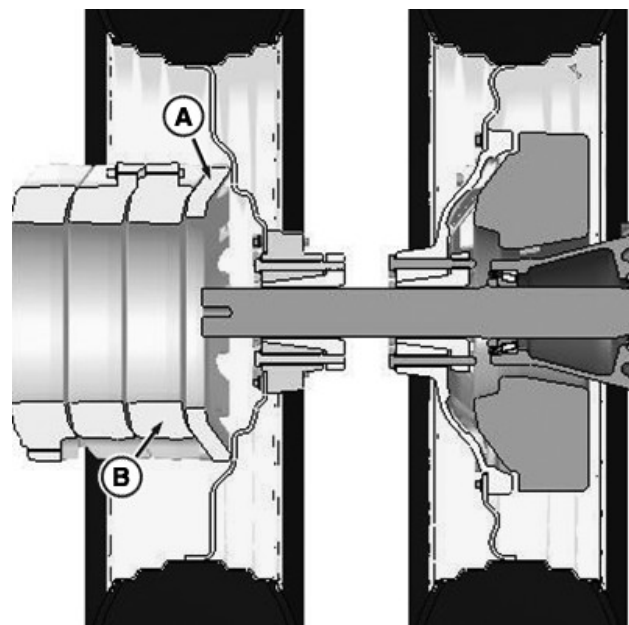

RXA0173132—UN—10DEC19

Install the wheel weight (A). For additional weights:

- Install the bolts in the previous weight.

- b. Rotate alternate weights (B) to align bolts with weight holes.

Tighten the wheel weight bolts to 610 N•m (450 lb•ft).

3. Drive the tractor 100 m (100 yd) and retighten the outer cap screws.
4. Repeat the steps for the wheel on the opposite side of the tractor.

Install a 70 kg (154 lb) Starter Weight with the 900 kg (1984 lb) Wheel Weight.


⚠ CAUTION: Avoid injury when installing weights as they are heavy.

- Use appropriate lifting devices for installation or have the work performed by your John Deere dealer.
- Install the wheel weights with the wheel on the tractor.

IMPORTANT: Avoid damage to the tractor and wheel components.

- After installation, tighten the wheel weight bolts every 3 hours and 10 hours (daily) for the first week of operation or until bolts do not move when tightened.
- If the outer wheel weight is removed, retighten the inside cap screws 610 N•m (450 lb•ft).
- Never install these weights on tractors equipped with triple wheels.
- The 900 kg (1984 lb) and 70 kg (154 lb) outer rear wheel weights can be installed on the dual steel wheels of a tractor equipped with 42-, 44-, 46-, or 50-inch rims.

1.

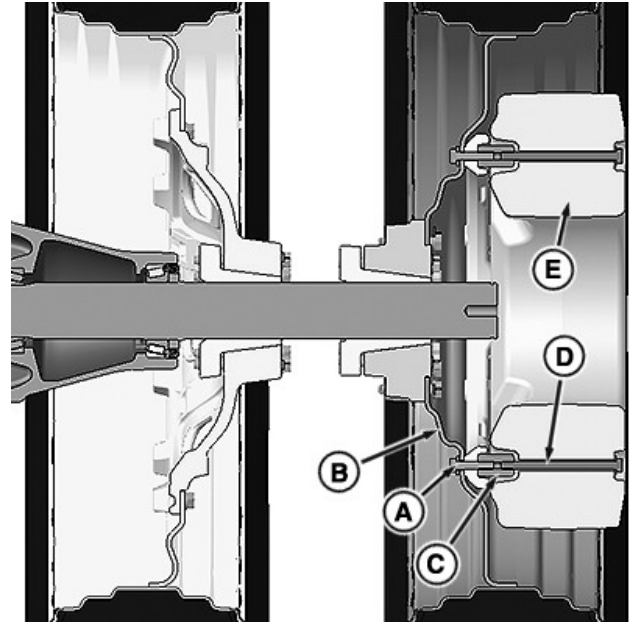

Insert the M20 x 80 bolts (A) through the washers on the inside of wheel (B).

2. Attach the 70 kg (154 lb) starter weight to the wheel using six cap screws and six nuts (C). Tighten the cap screws to 610 N•m (450 lb•ft).
3. Insert bolt (D) through washers and outer weight (E) to engage with nut (C). Tighten the cap screws to 610 N•m (450 lb•ft). For the 900 kg (1984 lb) weight, use the M20 x 245 bolts.
4. Drive the tractor 100 m (100 yd) and retighten the outer cap screws.
5. Repeat the steps for the wheel on the opposite side of the tractor.

Install a 70 kg (154 lb) Starter Weight with the 550 kg (1213 lb) and 900 kg (1984 lb) Wheel Weights

⚠ CAUTION: Avoid injury when installing weights as they are heavy.


- Use appropriate lifting devices for installation or have the work performed by your John Deere dealer.
- Install the wheel weights with the wheel on the tractor.

IMPORTANT: Avoid damage to the tractor and wheel components.

- After installation, tighten the wheel weight bolts every 3 hours and 10 hours (daily) for the first week of operation or until bolts do not move when tightened.
- If the outer wheel weight is removed, retighten the inside cap screws 610 N•m (450 lb•ft).


- Never install these weights on tractors equipped with triple wheels.
- The 550 kg (1213 lb), 900 kg (1984 lb), and 70 kg (154 lb) outer rear wheel weights can be installed on the dual steel wheels of a tractor equipped with 42-, 44-, 46-, or 50-inch rims.

1.

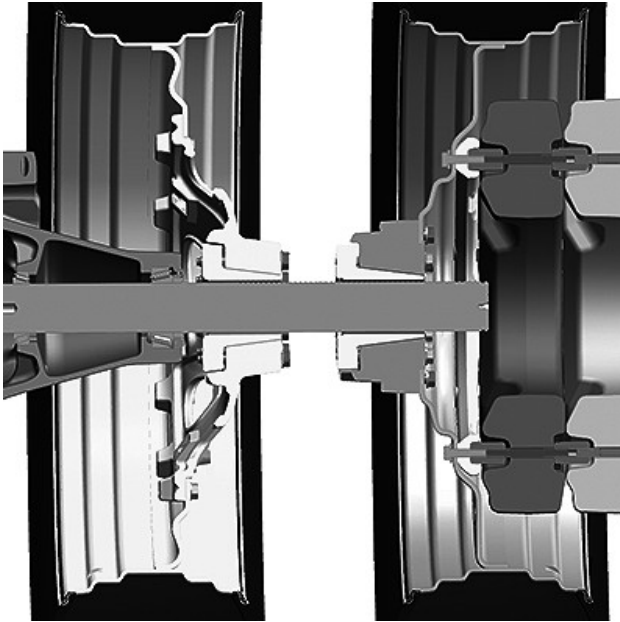

RXA0173134—UN—10DEC19

Wheel Weight Picture 1

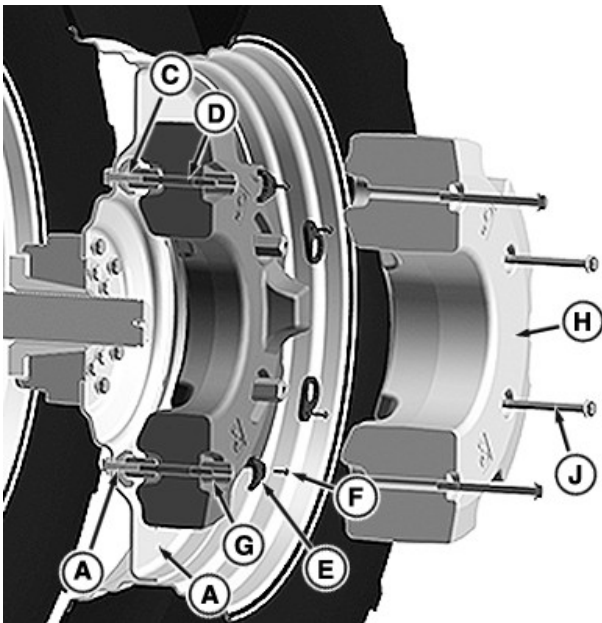

RXA0173135—UN—10DEC19

Wheel Weight Picture 2

Insert the M20 x 80 bolts (A) through the washers on the inside of wheel (B).

2. Attach the 70 kg (154 lb) starter weight to the wheel

using six cap screws and six nuts (C). Tighten the cap screws to 610 N•m (450 lb•ft).

3. Insert M20 x 181 stud (D) and thread into nut (C) until bottomed out.
4. Install 550 kg (1213 lb) weight onto starter weight using six nuts (C). Tighten the nuts to 610 N•m (450 lb•ft).
5. Install six retainer plates (E) using six button-head screws (F). Tighten the button-head screw to 25 N•m (18 lb•ft).
6. Install 900 kg (1984 lb) weight onto the 550 kg (1213 lb) weight using six M20 x 245 cap screws and six washers. Tighten the cap screws to 610 N•m (450 lb•ft).
7. Drive the tractor 100 m (100 yd) and retighten the outer cap screws.
8. Repeat the steps for the wheel on the opposite side of the tractor.

EC82310,0000F69-19-08JUN22

Control Power Hop

Power hop is a condition where tractor bounces at field working speeds under 16 km/h (10 mph). Power hop occurs when tractors pulling towed implements at medium to high draft loads in loose, dry soil on top of a firm base, and/or when climbing hills. As a result, the tractor cannot maintain pull due to either loss of traction, rough ride, or both.

Adjust inflation pressures *only* after following the performance guidelines (recommended weight split, correct ballast, and correct inflation pressures):

1. A) Increase **FRONT** tire pressure by 41—55 kPa (0.4—0.6 bar) (6—8 psi) in 2 psi increments over rated pressure for axle load. Follow steps 2 and 3.
B) If power hop persists, reduce front tire pressure to rated pressure. Then raise **REAR** tire inflation pressure by 41-55 kPa (0.4-0.6 bar) (6-8 psi) in 2 psi increments above rated pressure for axle load. Follow steps 2, 3, and 4.

NOTE: Raising front or rear inflation pressure depends on weight splits, operating conditions (steep slopes), or travel speeds. Raising rear tire pressure is recommended when operating on steep slopes and operating speeds above 8.8 km/h (5.5 mph).

Tires on one of two axles **must** remain at rated pressure.

Ballast tractor so no more than 55 percent of total tractor weight is on front, for best power hop control.

2. Remove any liquid ballast and replace with the cast weight equivalent, if power hop remains a problem.

3. Liquid ballast has a stiffening effect that causes a rough ride. If liquid ballast is used in rear tires, *all tires on axle must be filled to the same level* which must not exceed 40% fill.

IMPORTANT: Do not use liquid ballast in scraper REAR tires, unless used with dolly wheels.

4. If power hop remains a problem, see your John Deere dealer.

NOTE: Recommendations to control power hop for tractors used in tillage application where the front weight split desired is 55%. For scraper use without dolly wheels, tractor requires 65—75% front weight split. Tire pressure adjustments must account for tractor load, as well as scraper added drawbar load.

EC82310,0000F68-19-18NOV20

Implement Guidelines [Ag]

IMPORTANT: Under scraper or severe applications, tighten wheel bolts every 2 hours until all cap screws remain at 610 N·m (450 lb·ft).

Front-Mounted Implements

Front frame reinforcement is recommended whenever tractor has front-mounted dozer blades or spray tanks, is used in scraper applications, or is equipped with front frame ballast.

Reinforcement attaches to the underside of the front axle and to outside of the front frame behind the front axle. See your John Deere dealer for parts and assistance.

Towed Scrapers

Follow manufacturers instruction in attaching and using scraper.

Non-Approved Uses

- **Spray Tanks** - Mounted forward of the grille screen.
- **Spray Tanks** - Unbalanced.
- **Scrapers** - Without proper tractor/scraper drawbar and frame/axle supports (9R: 490, 540, 590, and 640).
- **Front Hitches** - Are not approved.
- **Tiling Plows** - Are not approved.
- **Fully Mounted Hitch Implements** - Center of gravity greater than 609 mm (24 in) beyond hitch points.
- **Fully Mounted Hitch Implements** - Total weight exceeds 6350 kg (14000 lb)—Category 4 (Without additional implement mounted lift assist).
- **Fully Mounted Hitch Implements** - Total weight

exceeds 6123 kg (13500 lb)—Category 3 (Without additional implement mounted lift assist).

- **9R: 490, 540, 590, and 640 with Category 3 Hitch** - Deep ripping/plowing applications using full horsepower (Use Category 4 hitch).
- **Extreme Draft Loads** - Requiring two tractors hooked in tandem.
- **Tow Hooks** - Adding tow hooks is not an option.

EC82310,0000F66-19-18NOV20

Implement and Scraper Size Guidelines [Scraper]

IMPORTANT: Operating tractor with three scrapers requires tractor be equipped with hydraulic trailer brakes. Reference Towed Loads and Transport with Ballast in Transport section of this Operator's Manual.

Under scraper or severe applications, tighten wheel bolts every 2 HOURS until all cap screws turn less than 1/4 turn. Then recheck torque daily until caps screws turn less than 1/8 turn and remain at 600 N·m (445 lb·ft). Single 76 x 50 B32 tires refer to Wheels, Tires, and Treads section of this Operator's Manual for proper torque procedure.

Towed Scrapers

Follow manufacturers instruction in attaching and using scraper.

Scraper Size	Hydraulic Trailer Brakes	
	Without	With
21 Yard	1	2
18 Yard and Smaller	2	3
Mixed Capacity/ Maximum Total	36 Yards	54 Yards

Front-Mounted Implements: Non-Approved Uses

- **Scrapers** - Without proper tractor/scraper drawbar and frame/axle supports.
- **Tiling Plows** - Are not approved.
- **Extreme Draft Loads** - Requiring two tractors hooked in tandem.
- **Tow Hooks** - Adding tow hooks is not an option.

EC82310,0000F67-19-18NOV20

Calculate Tractor Ballast Package

CAUTION: Avoid physical injury or equipment damage due to improper ballast or tire pressure. Never:

- Operate the tractor if the ballast package causes instability or unsafe conditions.
- Exceed maximum axle load capacity.
- Exceed maximum rated tire pressure imprinted on the tire sidewall.

Tractor efficiency and service life are increased when the:

- Tractor is correctly ballasted for the work task.
- Weight is split appropriately between the front and rear of the tractor.
- Tires are inflated correctly.

Examples show correct method of integrating data from tables and information from this Operator's Manual section to determine best possible working ballast for individual tractors and operations.

Example 1

Step 1: Tractor Configuration

1A—Show tractor options.

Model	9R 540
Hitch	No
PTO	Yes
Fuel Fill	Full
Engine PS (hp)	540 (533)

1B—Show tread options.

Tires
800/70R38 - Duals

1C—List ballast options.

Axle		Front	Rear
Ballast Weights	Weight Support	Yes	—
	Quik-Tatch Suitcase Weights	—	
	Wheel kg (lb)	—	620 (1367) 1 pair

Step 2: Calculate Total Tractor Weight

Find and show:

- Unballasted tractor weight. See Unballasted Tractor Weight in this section of this Operator's manual.
- Ballast weights. See Ballast Options in this section of this Operator's Manual.
- Add or subtract the front and rear axle weights to find the adjusted tractor weight for each axle.
- Add the front and rear adjusted tractor weights to calculate the total tractor weight.

Axle		Front kg (lb)	Rear kg (lb)
Unballasted Tractor Weight		12385 (27309)	9316 (20542)
Ballast Weights	Weight Support	661 (1458)	-225 (-496)
	Quik-Tatch Suitcase Weights	—	—
	Wheel	—	620 (1367)
Tractor Weight	Adjusted	13046 (28766) ^a	9711 (21413) ^a
	Total	22757 (50179)	

^aWeigh axle for actual load.

Step 3: Results

3A—Calculate weight split.

- Front axle: Divide the front axle weight by total tractor weight to find the weight split, then multiply the result by 100.
- Rear axle: Subtract the front axle result from 100.

See General Weight Split Guidelines in this section of this Operator's Manual for ideal weight split.

Axle	Front	Rear
Weight Split %	57	43

3B—Calculate power to weight ratio. Divide the total tractor weight by Engine PS to find the weight to power ratio. See General Guidelines in this section of this Operator's Manual for listings of Engine PS by model.

Ballast Ratio (kg/PS (lb/hp))	42 (94)
-------------------------------	---------

3C—Find recommended implement draft and travel speed with Engine power to weight ratio as calculated in Step 3B. See General Guidelines for Tractor Weight Based on Engine Power in this section of this Operator's Manual.

Recommended	Implement Draft	Light
	Travel Speed km/h (mph)	8.7 (5.4) and faster

3D—Determine recommended tire inflation pressures.

- For implements that place light load on drawbar (such as planter or air seeder) use front and rear tire sizes and axle weights to find required inflation pressures. See Recommended Pressure charts in Front and Rear Wheels, Tires, and Treads sections of this Operator's Manual.
- For implements that generate high weight transfer add approximately 50 kPa (0.5 bar) (7 psi) to rear tires, but never exceed maximum rated pressure as imprinted on sidewall. With aid of an assistant, visually check tire deflection when tractor is pulling

hard in field to confirm that tires are not under-inflated with these pressures.

- For trailers, tankers, or any heavy implement, rear inflation pressures must be increased substantially to support extra weight at transport speeds. Exact amount depends on load. It is typically more than double the base amount. With implement raised, weigh rear axle of loaded tractor on a platform scale, then find the required inflation pressures. Never exceed tire rating for maximum load or inflation pressure.

Example 2

Step 1: Tractor Configuration

1A—Show tractor options.

Model	9R 590
Hitch	No
PTO	Yes
Fuel Fill	Full
Engine PS (hp)	590 (581)

1B—Show tread options.

Tires
800/70R38 - Duals

1C—List ballast options.

Axle		Front	Rear
Ballast Weights	Weight Support	Yes	13
	Quik-Tatch Suitcase Weights	36	13
	Wheel kg (lb)	620	620 (1367) 1 pair

Step 2: Calculate Total Tractor Weight

Find and show:

- Unballasted tractor weight. See Unballasted Tractor Weight in this section of this Operator's Manual.
- Ballast weights. See Ballast Options in this section of this Operator's Manual.
- Add or subtract the front and rear axle weights to find the adjusted tractor weight for each axle.
- Add the front and rear adjusted tractor weights to calculate the total tractor weight.

Axle		Front kg (lb)	Rear kg (lb)
Unballasted Tractor Weight		12385 (27309)	9316 (20542)
Ballast Weights	Weight Support	661 (1458)	-225 (-496)
	Quik-Tatch	2202 (4855)	-95 (-209)

Axle		Front kg (lb)	Rear kg (lb)
	Suitcase Weights		
	Wheel	620 (1367)	620 (1367)
Tractor Weight	Adjusted	15868 (34989) ^a	9616 (21203) ^a
	Total	25484 (56192)	

^aWeigh axle for actual load.

Step 3: Results

3A—Calculate weight split.

- Front axle: Divide the front axle weight by the total tractor weight to find the weight split, then multiply the result by 100.
- Rear axle: Subtract the front axle result from 100.

See General Weight Split Guidelines in this section of this Operator's Manual for ideal weight split.

Axle	Front	Rear
Weight Split %	62	38

3B—Calculate power to weight ratio. Divide the total tractor weight by Engine PS to find the weight to power ratio. See General Guidelines in this section of this Operator's Manual for listings of Engine PS by model.

Ballast Ratio (kg/PS (lb/hp))	43 (97)
-------------------------------	---------

3C—Find recommended implement draft and travel speed with Engine power to weight ratio as calculated in Step 3B. See General Guidelines for Tractor Weight Based on Engine Power in this section of this Operator's Manual.

Recommended	Implement Draft	Light
	Travel Speed km/h (mph)	8.7 (5.4) and faster

3D—Determine recommended tire inflation pressures.

- For implements that place light load on drawbar (such as planter or air seeder) use front and rear tire sizes and axle weights to find required inflation pressures. See Recommended Pressure charts in Front and Rear Wheels, Tires, and Treads sections of this Operator's Manual.
- For implements that generate high weight transfer add approximately 50 kPa (0.5 bar) (7 psi) to rear tires, but never exceed maximum rated pressure as imprinted on sidewall. With aid of an assistant, visually check tire deflection when tractor is pulling hard in field to confirm that tires are not under-inflated with these pressures.
- For trailers, tankers, or any heavy implement, rear inflation pressures must be increased substantially to support extra weight at transport speeds. Exact

amount depends on load. It is typically more than double the base amount. With implement raised, weigh rear axle of loaded tractor on a platform scale, then find the required inflation pressures. Never exceed tire rating for maximum load or inflation pressure.

JL41210,0000AD0-19-12JUN23


Liquid Ballast Use

CAUTION: Avoid possible injury. Installing liquid ballast requires special equipment and training. See your John Deere Dealer or a tire service store.

IMPORTANT: Liquid ballast is not preferred. Liquid weight greatly increases tire stiffness at lower operating pressures, and greatly reduces ride performance. If liquid ballast is used, maximum liquid fill of 40 percent is recommended for better tractor performance.

- Use of alcohol as liquid ballast is not recommended.
- In areas where freezing is not a problem and water is used as a ballast, multiply weight shown in table by 0.8.
- In areas where freezing is a problem use calcium chloride to prevent water from freezing. A mixture of 3.5 lb per gallon (0.42 kg per liter) of calcium chloride will not freeze solid above -50°F (-45°C).

IMPORTANT: A maximum liquid fill of 40 percent is recommended for better tractor performance.

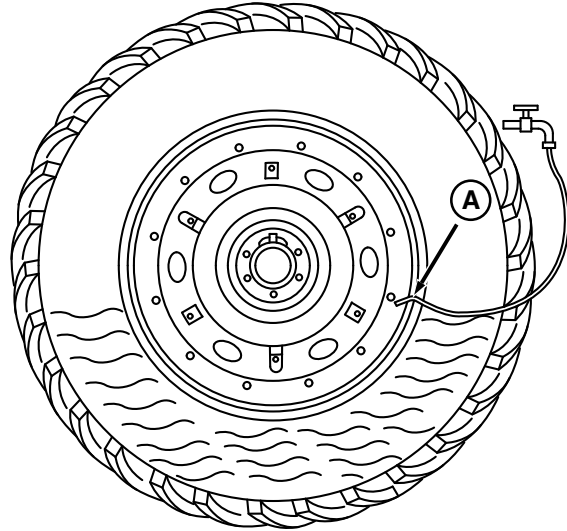

RW71542—UN—05SEP00

Position valve (A) at 4 o'clock position to fill to 40% full. Position valve at 12 o'clock (top) position to fill to 75% full. 75% fill is the maximum allowed. Make sure that all tires on the same axle have the same amount of liquid fill.

With liquid fill the volume of air creating pressure is low, so it is essential to regularly check the tire pressure. Check tire pressure at least once a month.

[Ag]

Tire Size	Liquid Weight per Tire kg (lb)	
	40% Fill	75% Fill
480/80R46	274 (604)	548 (1208)
480/80R50 IF480/80R50	288 (635)	575 (1268)
520/85R42	325 (717)	655 (1444)
520/85R46	351 (774)	703 (1550)
620/70R42	390 (859)	779 (1717)
620/70R46	422 (929)	843 (1858)
650/85R38 VF650/85R38	561 (1237)	597 (1316)
710/70R38 IF710/70R38	462 (1019)	924 (2037)
710/70R42 IF710/70R42 VF710/70R42	523 (1154)	1047 (2308)
800/70R38 VF800/70R38	650 (1433)	1270 (2800)
LSW800/55R46	514 (1130)	1027 (2260)

[Scraper]

Tire Size	Liquid Weight per Tire kg (lb)
-----------	-----------------------------------

Tire Size	Liquid Weight per Tire kg (lb)	
	40% Fill	75% Fill
	40% Fill	75% Fill
620/70R42	390 (859)	779 (1716)
620/70R46	422 (929)	843 (1858)
650/85R38 VF650/85R38	561 (1237)	597 (1316)
710/70R38 IF710/70R38	465 (1024)	929 (2048)
710/70R42 IF710/70R42	523 (1154)	1047 (2308)

Unballasted Tractor Weight Chart

NOTE: Unballasted weights are calculated by averaging and are figured based on tractor with a full tank of fuel. Each tractor will be different. Have your tractor weighed for exact weight splits.

EC82310.0000F62-19-27JUN22

Group 47

480/80R46 - Duals - Cast/Steel					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	11440 (25221)	11237 (24773)	11415 (25166)	11212 (24718)
	Rear	7913 (17445)	9210 (20305)	8346 (18400)	9643 (21259)
	Total	19353 (42666)	20447 (45078)	19761 (43566)	20855 (45977)
Weight Split (%)		59 / 41	55 / 45	58 / 42	54 / 46

480/80R46 - Triples - Cast/Steel/Steel					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	10712 (23616)	N/A	10687 (23561)	N/A
	Rear	8800 (19401)	N/A	9233 (20355)	N/A
	Total	19513 (43019)	N/A	19921 (43918)	N/A
Weight Split (%)		55 / 45	N/A	54 / 46	N/A

520/85R42 - Duals - Cast/Steel					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	11485 (25320)	11281 (24870)	11460 (25265)	11256 (24815)
	Rear	7958 (17544)	9255 (20404)	8391 (18499)	9688 (21358)
	Total	19442 (42862)	20536 (45274)	19850 (43762)	20944 (46174)
Weight Split (%)		59 / 41	55 / 45	58 / 42	54 / 46

520/85R42 - Triples - Cast/Steel/Steel					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	12965 (28583)	N/A	12940 (28528)	N/A
	Rear	9438 (20807)	N/A	9871 (21762)	N/A
	Total	22402 (49388)	N/A	22810 (50287)	N/A
Weight Split (%)		58 / 42	N/A	57 / 43	N/A

Performance Ballasting

620/70R42 - Duals - Cast/Steel					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	11876 (26182)	11673 (25735)	11851 (26127)	11648 (25679)
	Rear	8350 (18409)	9646 (21266)	8783 (19363)	10079 (22220)
	Total	20226 (44591)	21320 (47003)	20634 (45490)	21728 (47902)
Weight Split (%)		59 / 41	55 / 45	57 / 43	54 / 46

620/70R42 - Duals - Cast/Steel - Scraper					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	11947 (26339)	N/A	N/A	N/A
	Rear	8478 (18691)	N/A	N/A	N/A
	Total	20425 (45029)	N/A	N/A	N/A
Weight Split (%)		58 / 42	N/A	N/A	N/A

710/70R38 - Duals - Cast/Steel					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	11993 (26440)	11790 (25993)	11968 (26385)	11765 (25937)
	Rear	8466 (18664)	9763 (21524)	8899 (19619)	10196 (22478)
	Total	20459 (45104)	21553 (47516)	20867 (46004)	21961 (48416)
Weight Split (%)		59 / 41	55 / 45	57 / 43	54 / 46

710/70R38 - Duals - Cast/Steel - Scraper					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	12064 (26597)	N/A	N/A	N/A
	Rear	8595 (18949)	N/A	N/A	N/A
	Total	20658 (45543)	N/A	N/A	N/A
Weight Split (%)		58 / 42	N/A	N/A	N/A

IF710/70R38 - Duals - Cast/Steel					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	12098 (26672)	11895 (26224)	12073 (26616)	11870 (26169)
	Rear	8571 (18896)	9868 (21755)	9004 (19850)	10301 (22710)
	Total	20670 (45570)	21763 (47979)	21078 (46469)	22171 (48879)
Weight Split (%)		59 / 41	55 / 45	57 / 43	54 / 46

IF710/70R38 - Duals - Cast/Steel - Scraper					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	12169 (26828)	N/A	N/A	N/A
	Rear	8700 (19180)	N/A	N/A	N/A
	Total	20869 (46008)	N/A	N/A	N/A
Weight Split (%)		58 / 42	N/A	N/A	N/A

Group 48

480/80R50 - Duals - Cast/Steel					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	11569 (25505)	11366 (25058)	11544 (25450)	11341 (25003)
	Rear	8043 (17732)	9339 (20589)	8476 (18686)	9773 (21546)
	Total	19612 (43237)	20706 (45649)	20020 (44137)	21114 (46548)
Weight Split (%)		59 / 41	55 / 45	58 / 42	54 / 46

480/80R50 - Triples - Cast/Steel/Steel					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	11969 (26387)	N/A	11944 (26332)	N/A
	Rear	9429 (20787)	N/A	9862 (21742)	N/A
	Total	21398 (47175)	N/A	21806 (48074)	N/A
Weight Split (%)		56 / 44	N/A	55 / 45	N/A

IF480/80R50 - Duals - Cast/Steel					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	11739 (25880)	11536 (25433)	11714 (25825)	11511 (25377)
	Rear	8212 (18104)	9509 (20964)	8645 (19059)	9942 (21918)
	Total	19951 (43984)	21044 (46394)	20359 (44884)	21452 (47294)
Weight Split (%)		59 / 41	55 / 45	58 / 42	54 / 46

IF480/80R50 - Triples - Cast/Steel/Steel					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	13244 (29198)	N/A	13219 (29143)	N/A
	Rear	9716 (21420)	N/A	10149 (22375)	N/A
	Total	22960 (50618)	N/A	23368 (51518)	N/A
Weight Split (%)		58 / 42	N/A	57 / 43	N/A

520/85R46 - Duals - Cast/Steel					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	11584 (25538)	11381 (25091)	11559 (25483)	11356 (25036)
	Rear	8057 (17763)	9354 (20622)	8490 (18717)	9787 (21577)
	Total	19641 (43301)	20735 (45713)	20049 (44200)	21143 (46612)
Weight Split (%)		59 / 41	55 / 45	58 / 42	54 / 46

520/85R46 - Triples - Cast/Steel/Steel					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	11534 (25428)	N/A	11509 (25373)	N/A
	Rear	9362 (20640)	N/A	9795 (21594)	N/A
	Total	20896 (46068)	N/A	21304 (46967)	N/A
Weight Split (%)		55 / 45	N/A	54 / 46	N/A

Performance Ballasting

620/70R46 - Duals - Cast/Steel					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	11876 (26182)	11672 (25732)	11850 (26125)	11647 (25677)
	Rear	8349 (18406)	9645 (21264)	8782 (19361)	10079 (22220)
	Total	20224 (44586)	21318 (46998)	20632 (45486)	21726 (47898)
Weight Split (%)		59 / 41	55 / 45	57 / 43	54 / 46

620/70R46 - Duals - Cast/Steel - Scraper					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	11946 (26336)	N/A	N/A	N/A
	Rear	8477 (18689)	N/A	N/A	N/A
	Total	20423 (45025)	N/A	N/A	N/A
Weight Split (%)		58 / 42	N/A	N/A	N/A

650/85R38 - Duals - Cast/Steel					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	12187 (26868)	11984 (26420)	12162 (26813)	11959 (26365)
	Rear	8660 (19092)	9957 (21951)	9093 (20047)	10390 (22906)
	Total	20847 (45960)	21941 (48372)	21255 (46859)	22349 (49271)
Weight Split (%)		58 / 42	55 / 45	57 / 43	54 / 46

650/85R38 - Duals - Cast/Steel - Scraper					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	12258 (27024)	N/A	N/A	N/A
	Rear	8789 (19376)	N/A	N/A	N/A
	Total	21047 (46401)	N/A	N/A	N/A
Weight Split (%)		58 / 42	N/A	N/A	N/A

VF650/85R38 - Duals - Cast/Steel					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	12201 (26899)	11998 (26451)	12176 (26843)	11973 (26396)
	Rear	8674 (19123)	9971 (21982)	9107 (20077)	10404 (22937)
	Total	20876 (46024)	21970 (48436)	21284 (46923)	22378 (49335)
Weight Split (%)		58 / 42	55 / 45	57 / 43	54 / 46

710/70R42 - Duals - Cast/Steel					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	12388 (27311)	12185 (26863)	12363 (27256)	12160 (26808)
	Rear	8861 (19535)	10158 (22395)	9294 (20490)	10591 (23349)
	Total	21249 (46846)	22343 (49258)	21657 (47746)	22751 (50157)
Weight Split (%)		58 / 42	55 / 45	57 / 43	53 / 47

Performance Ballasting

710/70R42 - Duals - Cast/Steel - Scraper					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	12459 (27467)	N/A	N/A	N/A
	Rear	8990 (19820)	N/A	N/A	N/A
	Total	21448 (47285)	N/A	N/A	N/A
Weight Split (%)		58 / 42	N/A	N/A	N/A

IF710/70R42 - Duals - Cast/Steel					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	12563 (27697)	12360 (27249)	12538 (27642)	12335 (27194)
	Rear	9036 (19921)	10333 (22780)	9469 (20876)	10766 (23735)
	Total	21599 (47618)	22693 (50030)	22007 (48517)	23101 (50929)
Weight Split (%)		58 / 42	54 / 46	57 / 43	53 / 47

IF710/70R42 - Duals - Cast/Steel - Scraper					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	12634 (27853)	N/A	N/A	N/A
	Rear	9165 (20205)	N/A	N/A	N/A
	Total	21799 (48059)	N/A	N/A	N/A
Weight Split (%)		58 / 42	N/A	N/A	N/A

VF710/70R42 - Duals - Cast/Steel					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	12395 (27326)	12192 (26879)	12370 (27271)	12167 (26824)
	Rear	8868 (19551)	10165 (22410)	9301 (20505)	10598 (23365)
	Total	21263 (46877)	22357 (49289)	21671 (47776)	22765 (50188)
Weight Split (%)		58 / 42	55 / 45	57 / 43	53 / 47

800/70R38 - Singles - Cast					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	10957 (24156)	10754 (23709)	10932 (24101)	10728 (23651)
	Rear	7430 (16380)	8727 (19240)	7863 (17335)	9160 (20194)
	Total	18387 (40536)	19480 (42946)	18795 (41436)	19888 (43846)
Weight Split (%)		60 / 40	55 / 45	58 / 42	54 / 46

800/70R38 - Duals - Cast/Steel					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	12410 (27359)	N/A	12385 (27304)	N/A
	Rear	8883 (19584)	N/A	9316 (20538)	N/A
	Total	21293 (46943)	N/A	21701 (47843)	N/A
Weight Split (%)		58 / 42	N/A	57 / 43	N/A

Performance Ballasting

IF800/70R38 - Singles - Cast					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	11179 (24645)	10976 (24198)	11154 (24590)	10951 (24143)
	Rear	7652 (16870)	8949 (19729)	8085 (17824)	9382 (20684)
	Total	18832 (41517)	19925 (43927)	19240 (42417)	20333 (44827)
Weight Split (%)		59 / 41	55 / 45	58 / 42	54 / 46

IF800/70R38 - Duals - Cast/Steel					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	12883 (28402)	N/A	12858 (28347)	N/A
	Rear	9356 (20626)	N/A	9789 (21581)	N/A
	Total	22239 (49029)	N/A	22647 (49928)	N/A
Weight Split (%)		58 / 42	N/A	57 / 43	N/A

VF800/70R38 - Singles - Cast					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	10960 (24163)	10757 (23715)	10935 (24108)	10732 (23660)
	Rear	7434 (16389)	8731 (19249)	7867 (17344)	9164 (20203)
	Total	18394 (40552)	19488 (42964)	18802 (41451)	19896 (43863)
Weight Split (%)		60 / 40	55 / 45	58 / 42	54 / 46

VF800/70R38 - Duals - Cast/Steel					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	12445 (27437)	N/A	12420 (27381)	N/A
	Rear	8918 (19661)	N/A	9351 (20615)	N/A
	Total	21364 (47100)	N/A	21772 (47999)	N/A
Weight Split (%)		58 / 42	N/A	57 / 43	N/A

LSW800/55R46 - Singles - Cast					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	11092 (24454)	10889 (24006)	11067 (24399)	10864 (23951)
	Rear	7566 (16680)	8863 (19540)	7999 (17635)	9296 (20494)
	Total	18658 (41134)	19752 (43546)	19066 (42033)	20160 (44445)
Weight Split (%)		59 / 41	55 / 45	58 / 42	54 / 46

LSW800/55R46 - Duals - Cast/Steel					
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	12702 (28003)	N/A	12677 (27948)	N/A
	Rear	9175 (20227)	N/A	9608 (21182)	N/A
	Total	21878 (48233)	N/A	22286 (49132)	N/A
Weight Split (%)		58 / 42	N/A	57 / 43	N/A

JL41210,0000ACD-19-12JUN23

Transport

Driving Tractor on Roads



CAUTION: Avoid personal injury or death from losing control of tractor. When driving tractor on roads:

- Wear Seat belts.
- Reduce speed when driving on icy, wet, or graveled surfaces.
- Ballast tractor correctly (See Performance Ballasting section in this Operator's Manual).
- Prevent wheels from locking and skidding on tractors transporting heavy loads.
- Avoid holes, ditches, sharp turns, hillsides and obstructions which may cause tractor to roll over.
- Frequently check for traffic from rear, especially in turns, and use turn signal lights.
- Always operate flashing lights when traveling on a highway or public roads, except where prohibited by law.

Lights—Use headlights and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

Brakes—Tap brake pedal to ensure differential lock is NOT engaged. Avoid hard application of brakes.

Remote Cylinders—Position transport lock switch(es) to eliminate possibility of lowering an implement during transport by inadvertently bumping extend/retract lever (s). (See procedure in Six Position SCV Control Levers in Selective Control Valves section of this Operator's Manual.)

[Ag] Rear Hitch—Position or lock hitch in transport position to eliminate possibility of lowering an implement during transport by inadvertently bumping control lever. (See procedure in Hitch section of this Operator's Manual.)

T084419,0000151-19-26APR18

Towed Mass

Trailer/implement brake system determine maximum permissible towable mass and maximum speed. There may be legal limits in force that restrict maximum towed mass and/or travel speeds to figures lower than those quoted here.

Trailer/Implement Brake System		Maximum Permissible		
		Model	Towed Mass kg (lb)	Speed km/h (mph)
Unbraked			3500 (7716)	25 (16)
Independently-Braked		9R: 390, 440, 490, 540, 590, and 640	5000 (11023)	
Inertia-Braked			8000 (17635)	
Hydraulic	Single-Line	9R 390	24000 (52911)	
		9R: 440, 490, 540, 590, and 640	26000 (57320)	40 (25)
	Dual-Line	9R 390	24000 (52911)	
		9R: 440, 490, 540, 590, and 640	26000 (57320)	

EC82310,0000538-19-11JUL23

Towed Loads and Transport with Ballast

CAUTION: Avoid possible injury from losing control while towing a load. Stopping distance increases on slopes and with increased speed and weight of towed loads.

Tractor wheels/tracks may lock and skid on slippery downhill slopes on tractors equipped with IVT/AutoPowr or EVT/eAutoPowr transmissions. See Operate Transmission—IVT in IVT/AutoPowr Transmission section of this Operator's Manual.

Never exceed the maximum transport speed for the implement. Before transporting a towed implement, refer to implement Operator's Manual and implement decals to determine maximum transport speed. This tractor is capable of operating at transport speeds which exceed the maximum allowable transport speed for most towed implements. For John Deere implements, use the implement codes found in the implement Operator's Manual. For non-John Deere implements, see Implement and Tractor Codes in Performance Ballasting section of this Operator's Manual. Failure to adhere to the maximum transport speed for the implement or to have correct ballast can result in:

- Loss of control of tractor/implement combination.
- Reduced or no ability to stop during braking.
- Implement tire failure.
- Damage to implement structure or components.

When towing equipment without brakes:

- Do not transport at speeds greater than 25 km/h (16 mph).
- Towed device must weigh less than 1.5 times the ballasted tractor weight.

When towing equipment with brakes:

- If the manufacturer does not specify a maximum transport speed, do not transport at speeds above 40 km/h (25 mph).
- When transporting at speeds up to 40 km/h (25 mph), the fully loaded implement must weigh less than 4.5 times the tractor weight.
- When transporting at speeds between 40 km/h (25 mph)—50 km/h (31 mph), the fully loaded implement must weigh less than 3 times the tractor weight.

The tractor must be heavy and powerful enough with adequate braking power for the towed load. Add ballast to the tractor or lighten the implement load.

Drive slowly enough to maintain safe control. Be alert for skids. Shift to a lower gear for hillsides, rough ground, and sharp turns, especially when transporting heavy equipment.

Never operate the tractor with the transmission in the NEUTRAL position or with the clutch disengaged.

TS36762,000026E-19-18APR23

Transport Rear Mounted Implements with Ballast

CAUTION: Avoid possible injury when transporting heavy rear-mounted implements.

Drive slowly over rough ground, regardless of how much ballast used.


Add weight if needed for stability. Add enough ballast to maintain steering control.

TO84419,0000154-19-04NOV15

Safety Chain Use

CAUTION: Avoid possible accident and injury by using safety chain on drawn equipment. Use safety chain with strength rating equal to or greater than gross weight of equipment. Provide only enough slack in chain to permit turning.

IMPORTANT: Never use safety chain for towing. Damage to tractor, implement, and drawbar may result. Safety chain is provided for transport only.

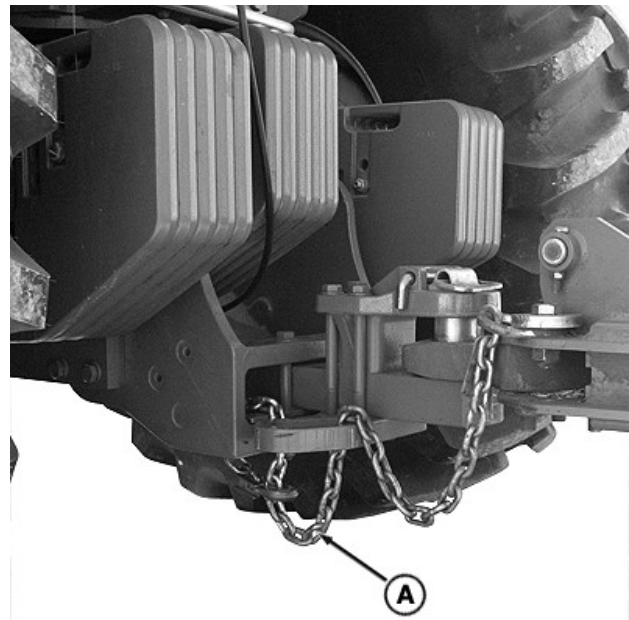

RXA0119965—UN—30AUG11


Route safety chain (A) through loop and attach to the drawbar support.

TO84419,0000155-19-26APR18

Tow Points



RXA0180443—UN—13NOV20

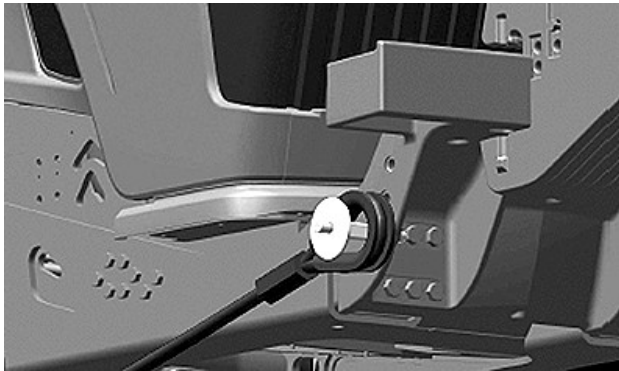

RXA0180444—UN—13NOV20

CAUTION: Avoid physical injury or equipment damage. Only use tow points shown to maneuver and tow the tractor on hard-surfaced roads only.

Before towing the tractor on hard-surfaced roads with the tow points:

- Cable needs to be removed from the storage position before use.
- Remove any trailers or mounted implements.
- Never use a tow-rope; always use an approved towbar.

To free a mired tractor, see Freeing a Mired Tractor in this Owner's Manual section

Tow points are integrated into the front end of the tractor to allow the tractor to be maneuvered and towed on hard-surfaced roads.

EC82310,0000F60-19-08JAN21

IMPORTANT: Avoid tractor damage:


- Before transporting the tractor, install the steering locks on the hydraulic cylinders using the install steering locks procedure. Before resuming tractor operation, remove the steering locks.
- Only haul a disabled tractor on a flat bed carrier.
- Transport regulations vary. Contact local transportation officials for local transportation requirements.

Drive Tractor onto Carrier

CAUTION: A second person is required to guide the driver onto the flat bed carrier. Make sure the tractor is centered on the carrier and watch for potential hazards that may cause injury but are not apparent to the driver.

1. Steer the tractor straight ahead.
2. Stop the tractor.
3. Place the transmission into PARK.
4. Shut off the engine.
5. Remove the key.

Install Steering Locks

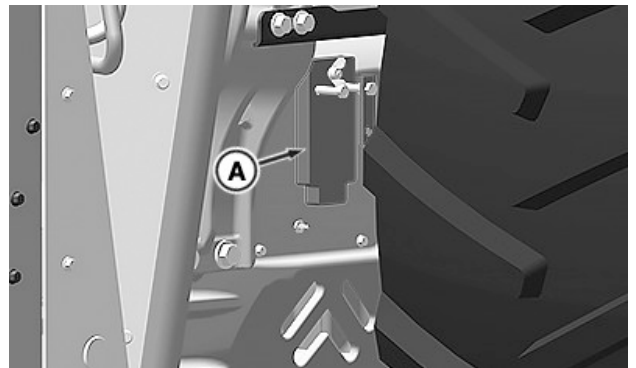

RXA0188670—UN—23FEB23


Steering Lock Stored (left-hand side)

1. Remove the steering lock (A) from the storage location.

Carrier Transport

CAUTION: Avoid injury:

- Drive carefully.
- Shift the transmission lever into PARK, stop the engine, and remove the key before working in hinge areas.

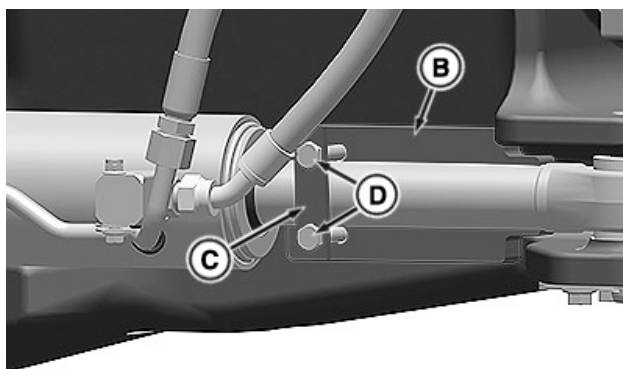


RXA0188672—UN—23FEB23
Steering Lock Installed (left-hand side)

2. Install the steering lock (B) behind the cylinder.
3. Secure the steering lock with the retaining plate (C) and cap screws (D).
4. Tighten the cap screws.
5. Repeat the procedure on the other side of the tractor.

HydraCushion Suspension System (If Equipped)

CAUTION: Avoid accident and/or injury. Stay clear of moving suspension components when releasing hydraulic pressure from solenoid valves.

IMPORTANT: When transporting a 9R Series tractor on a trailer, hydraulic pressure must be released from the HydraCushion suspension system to facilitate proper tie-down stability.

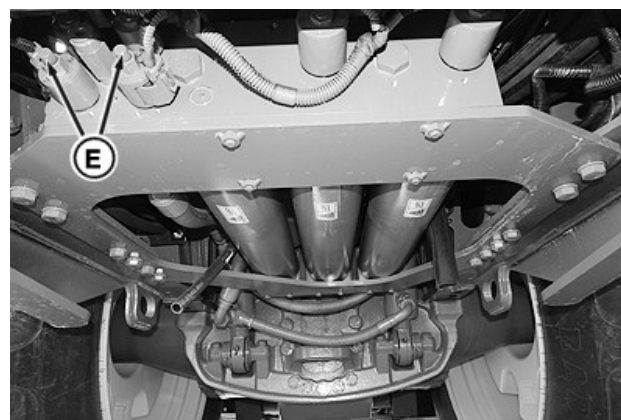

RXA0160220—UN—17JUL17
Hydraulic Solenoid Valves (located under front frame)

Before tractor tie-down:

Verify that the tractor is in the PARK position. Push in and turn the hydraulic solenoid valve knobs (E) counterclockwise until the knobs pop out. This releases hydraulic pressure from the HydraCushion suspension system.

Before driving the tractor:


Verify that the tractor is in the PARK position. Push in and turn the hydraulic solenoid valve knobs (E) clockwise until the knobs pop out. This allows the HydraCushion suspension system to pressurize and refill with hydraulic oil.

NOTE: For HydraCushion Suspension System operating instructions, see Operate HydraCushion Front Axle Suspension (If Equipped) in Drivetrain section of this Operator's Manual.

Tractor Tie-Down Locations


CAUTION: Avoid accident and/or injury. Use tie-down devices to secure the tractor to the carrier.

IMPORTANT: Avoid equipment damage. Never use the front weight support as a tie-down location.

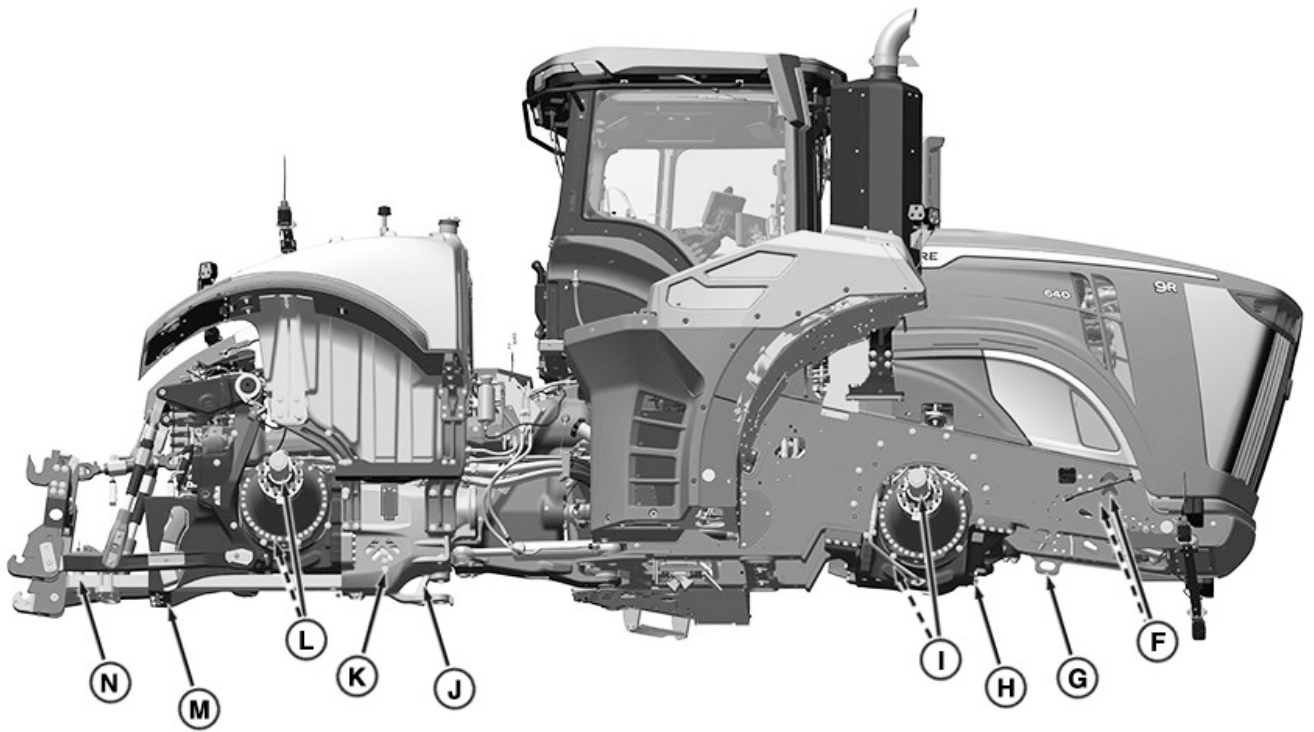


[Ag]

RXA0188680—UN—27FEB23

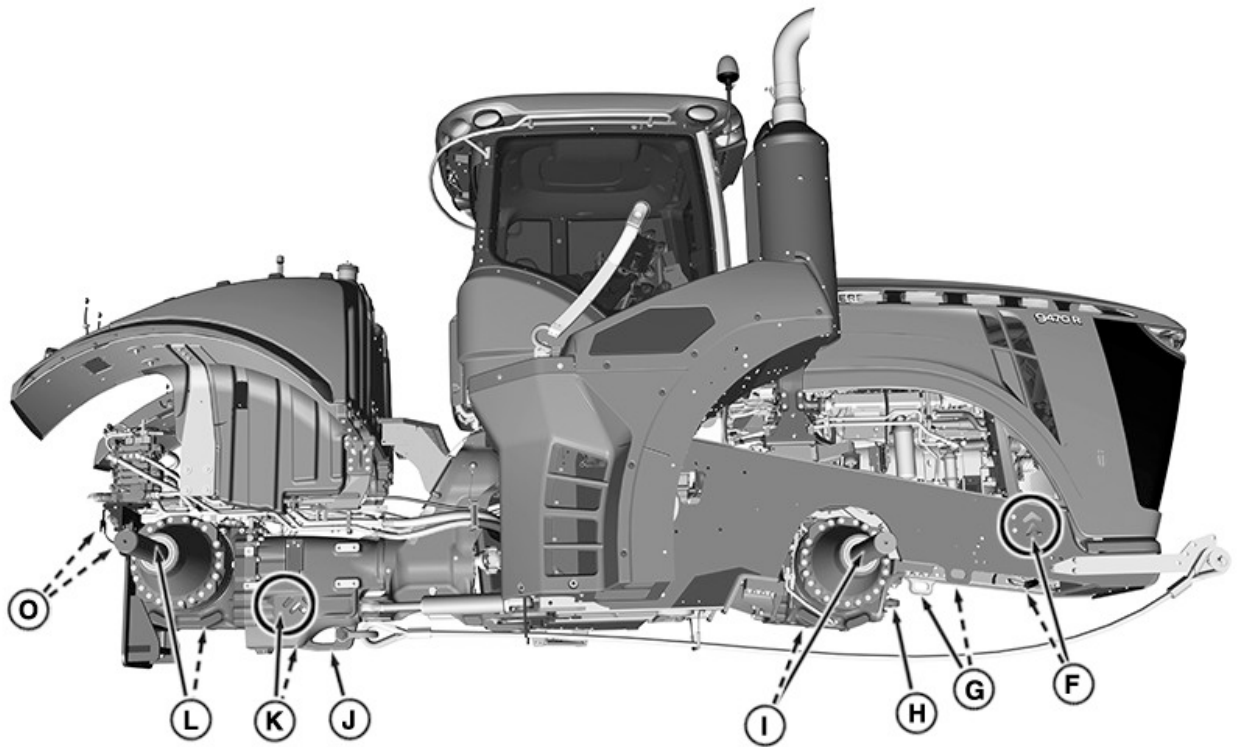


[Scraper]

RXA0188653—UN—27FEB23

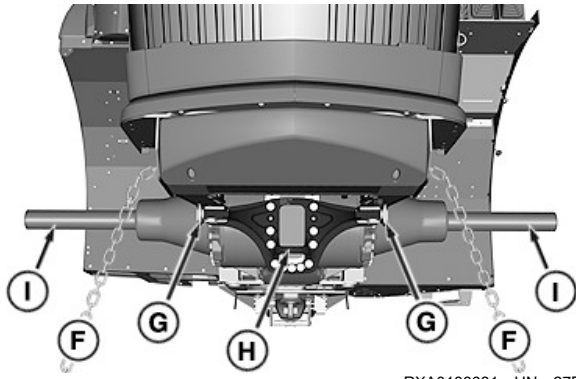


RXA0188681—UN—27FEB23

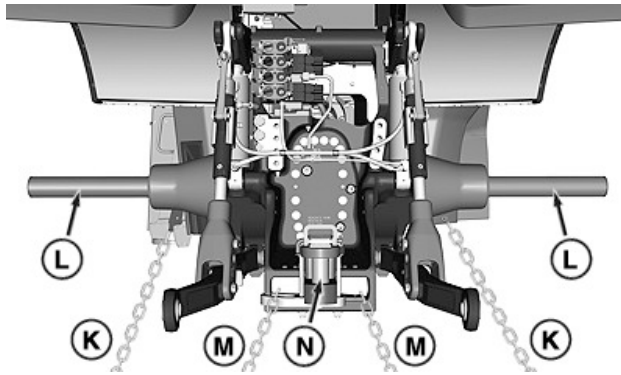

RXA0188682—UN—27FEB23

[Ag]

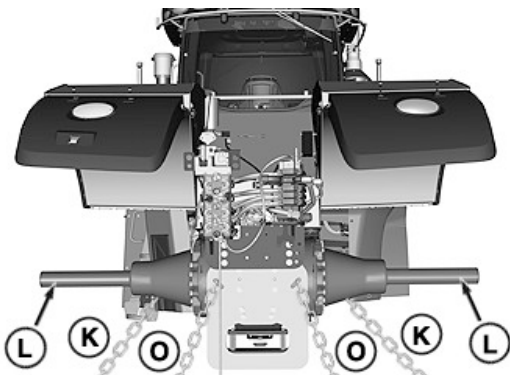

RXA0188652—UN—27FEB23

[Scraper]



RXA0186368—UN—12JAN22


Tie-Down Label (if equipped)

- Front frame T-hook slots (F)
- Front frame tie-down loops (G)
- Front axle tie-down loop (H)
- Front axles (I)
- Rear frame tie-down loop (J)
- Rear frame T-hook slots (K)
- Rear axles (L)
- Rear drawbar support [Ag] (M)
- Rear drawbar pin [Ag] (N)
- Rear drawbar support [Scraper] (O)

Carrier Tie-Down

Transport a disabled tractor on a flat bed carrier.

1. Place the tractor into the PARK position.

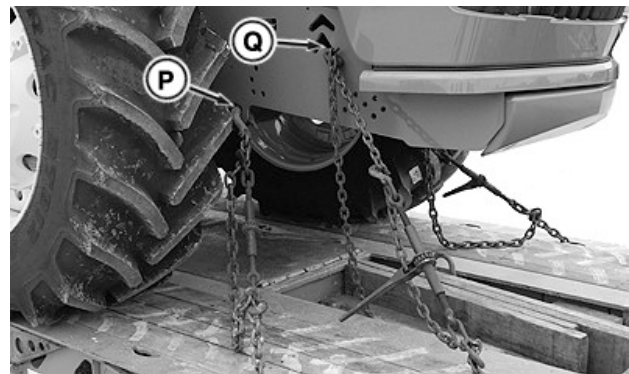

RXA0188655—UN—27FEB23


2. Attach chains to the front tie-down loops (P) and T-hook slots (Q) on the right-hand and left-hand sides of the tractor. Tension the chains forward and down to the carrier frame.



RXA0188656—UN—27FEB23

3. Attach chains to the rear tie-down loops (R) on the right-hand and left-hand sides of the tractor. Tension the chains forward and down to the carrier frame.


Attach tie-down devices securely to:

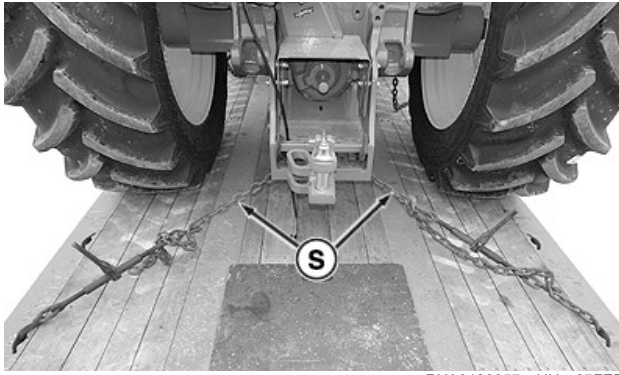

RXA0188657—UN—27FEB23

NOTE: Use a rubber or protective material to prevent paint damage to the drawbar support.

4. Attach chains to each side of the rear drawbar support (S) to secure the tractor to the carrier.
5. Fold left-hand and right-hand side mirrors forward.
6. Fold left-hand and right-hand extremity lights forward (if equipped).

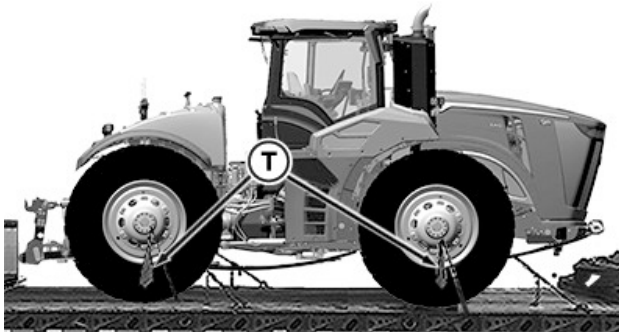

RXA0188658—UN—27FEB23

7. Attach over-dimension flags (T) to the axles.
8. After traveling a short distance, check load shift to ensure tie-downs are secure.

IMPORTANT: Avoid tractor damage. Before unloading the tractor, remove the steering locks and place them in the storage locations.

kd34109,1677253184226-19-24MAR23

Tow Mode—Engine Will Start

IMPORTANT: Avoid damage to transmission and hydraulic systems:

- Operate engine above 1250 rpm (provides adequate system lubrication).
- Verify all pressure indicator lights are off.
- Never tow machine faster than 8 km/h (5 mph) for a maximum distance of 8 km (5 miles).

1. Verify hydraulic oil reservoir level is within normal operation range. See Hydraulic System Oil Level in Service—Check section of this Operator's Manual.
2. Attach tow bar to drawbar.
3. With transmission in PARK, start machine.
4. Operate engine above 1250 rpm.
5. Place shift lever in NEUTRAL.
6. Steer and brake machine while being towed.
7. After towing is complete, place shift lever in PARK.

RX32825,000018A-19-02SEP21

Tow Mode—Engine Will Not Start

CAUTION: Avoid injury. If hydraulic oil temperature is less than -10°C (14°F), backup pump will not turn on and brakes or steering will not function. If machine still must be moved, contact your John Deere dealer.

IMPORTANT: Avoid machine damage:

- Never attempt to start machine by towing.
- Never tow machine faster than 8 km/h (5 mph) for a maximum distance of 8 km (5 miles).
- Never tow machine without releasing park brake.
- Never operate or tow machine with a filter restriction code. If lube or filter STOP or Warning code displays, change appropriate filter. See Service—Change section of this Operator's Manual.

NOTE: Special tools are required to release park brake. See your John Deere dealer.



RXA0169804—UN—01AUG19

Located near Left-Hand Rear Fender

1. Ensure hydraulic oil reservoir level in sight gauge is between FULL COLD (A) and MIN COLD (B) marks. If level is below MIN COLD mark, remove cap (C) and add hydraulic oil.

2. Attach tow bar to drawbar.

IMPORTANT: If machine has no electrical power, a 100 Amp electrical source must be connected. See Battery Booster or Charger in Engine Operation section of this Operator's Manual.

3. Open load center next to operator seat. See Access Load Center Fuses in Service—Electrical section of this Operator's Manual.
4. Remove fuse 32 and install in fuse 22 location.
5. Remove 10 Amp spare fuse and install in fuse 21 location.
6. Install appropriate park brake release hand pump kit components.
7. Turn key switch to on position.
8. Follow kit instructions to manually release spring-applied park brake.
9. Enable backup steering in Diagnostic Addresses on Controller Diagnostics tab. See Diagnostic Center in CommandCenter section of this Operator's Manual.
10. Select correct control unit:
 - TSB – two-track machines
 - XSB – wheel and four-track machines equipped with ACS (ActiveCommand Steering)
 - XSC – wheel and four-track machines equipped with AutoTrac

NOTE: When Back Up Mode is enabled, turning steering wheel activates backup pump.

11. Go to address 025 and select Back Up Mode ON.
12. Press Accept.
13. Go to PTP 055 to monitor park brake pressure.
14. Pump power pack to displayed target value of 1800 kPa (18 bar) (261 psi).
15. Press X to close diagnostic windows.
16. Place shift lever in NEUTRAL and verify on corner post display.
17. Steer and brake machine while being towed.
18. After towing is complete, place shift lever in PARK.
19. Cycle key switch on and off to return address 025 to Back Up Mode Off.
20. Return all removed fuses to original locations.

RX32825,0000189-19-29AUG22

Freeing a Mired Tractor

CAUTION: Freeing a mired tractor can involve safety hazards. Avoid physical injury, tractor damage, or property damage:

- Verify that the tractor surroundings are clear

of people and other hazards before attempting to free a mired tractor.

- A tow chain or tow bar could fail and recoil from a stretched condition.
- A mired tractor could tip rearward.
- The towing machine could overturn.

IMPORTANT: H-casting is not to be used for stuck tractor retrieval.

IMPORTANT: Avoid tractor damage or property damage:

- **Never:**
 - Use the front weight support as a tow point or to push other tractors or implements.
 - Use the front suspended axle to tow the tractor.
 - Attempt to start the tractor by towing.
 - Attempt to clear excess soil material by driving the tractor after the mired tractor is freed.
 - Use H-hook attached to the tow cable (If Equipped)
- **Always:**
 - Have an operator steer and brake the mired tractor. If possible, maintain a minimum of 1250 engine rpm to provide power for lubrication, steering, and brakes.
 - Tow the tractor in as straight a line as possible. Pulling at an angle causes heavy side loads and can damage the suspended axle or frame.
 - Stop immediately if the tracks are spinning and begin to dig below the surface level of soil. Track damage can occur due to material ingestion between the track and drive system components.
 - Remove excess material from the undercarriage and drive system components of the freed tractor before driving the tractor under its own power.

To Free a Mired Tractor

1. Unhitch and move any towed implements.
2. Attach a tow chain or tow bar to the mired tractor. If the mired tractor is to be pulled:
 - Forward: Use the tow cable (preferred if equipped with a tow cable) or attach at the tow point.
 - Rearward: Attach at the drawbar (preferred if not equipped with a tow cable).
3. Pull the mired tractor.

EC82310,0000B46-19-26AUG21

Fuel, Lubricants, and Coolant—General Information

Determine Tractor Engine Type

IMPORTANT: To determine tractor engine type, see **Engine Serial Number in Identification Numbers section of this Operator's Manual.**

Correct engine oil specification and oil change interval is determined by a number of factors. One important consideration is type of engine aftertreatment installed. To determine engine type, see Engine Serial Number in Identification Numbers section of this Operator's Manual.

RX32825,0001798-19-14DEC16

Minimizing the Effect of Cold Weather on Diesel Engines

John Deere diesel engines are designed to operate effectively in cold weather.

However, for effective starting and cold-weather operation, a little extra care is necessary. The following information outlines steps that can minimize the effect that cold weather may have on starting and operation of your engine. See your John Deere dealer for additional information and local availability of cold-weather aids.

Use Winter Grade Fuel

When temperatures fall below 0°C (32°F), winter grade fuel (No. 1-D in North America) is best suited for cold-weather operation. Winter grade fuel has a lower cloud point and a lower pour point.

Cloud point is the temperature at which wax begins to form in the fuel. This wax causes fuel filters to plug.

Pour point is the lowest temperature at which movement of the fuel is observed.

NOTE: On average, winter grade diesel fuel has a lower Btu (heat content) rating. Using winter grade fuel may reduce power and fuel efficiency, but should not cause any other engine performance effects. Check the grade of fuel being used before troubleshooting for low-power complaints in cold-weather operation.

Air Intake Heater

An air intake heater is an available option for some engines to aid cold weather starting.

Ether

An ether port on the intake is available to aid cold weather starting.



CAUTION: Ether is highly flammable. Do not use ether when starting an engine equipped with glow plugs or an air intake heater.

Coolant Heater

An engine block heater (coolant heater) is an available option to aid cold weather starting.

Seasonal Viscosity Oil and Proper Coolant Concentration

Use seasonal grade viscosity engine oil based on the expected air temperature range between oil changes and a proper concentration of low silicate antifreeze as recommended. (See DIESEL ENGINE OIL and ENGINE COOLANT requirements in this section.)

Diesel Fuel Cold Flow Additive

Use John Deere Fuel-Protect Diesel Fuel Conditioner (winter formula), which contains anti-gel chemistry, or equivalent fuel conditioner to treat non-winter grade fuel (No. 2-D in North America) during the cold-weather season. This generally extends operability to about 10° C (18°F) below the fuel cloud point. For operability at even lower temperatures, use winter grade fuel.

IMPORTANT: Treat fuel when outside temperature drops below 0°C (32°F). For best results, use with untreated fuel. Follow all recommended instructions on label.

Biodiesel

When operating with biodiesel blends, wax formation can occur at warmer temperatures. Begin using John Deere Fuel-Protect Diesel Fuel Conditioner (winter formula) or equivalent at 5°C (41°F) to treat biodiesel fuels during the cold-weather season. Use B5 or lower blends at temperatures below 0°C (32°F). Use only winter grade petroleum diesel fuel at temperatures below -10°C (14°F).

Winterfronts

Use of fabric, cardboard, or solid winterfronts is not recommended with any John Deere engine. Their use can result in excessive engine coolant, oil, and charge air temperatures. This can lead to reduced engine life, loss of power and poor fuel economy. Winterfronts may also put abnormal stress on fan and fan drive components potentially causing premature failures.

If winterfronts are used, they should never totally close off the grill frontal area. Approximately 25% area in the center of the grill should remain open at all times. At no time should the air blockage device be applied directly to the radiator core.

Radiator Shutters

If equipped with a thermostatically controlled radiator shutter system, this system should be regulated in such a way that the shutters are completely open by the time the coolant reaches 93°C (200°F) to prevent excessive intake manifold temperatures. Manually controlled systems are not recommended.

If air-to-air aftercooling is used, the shutters must be

completely open by the time the intake manifold air temperature reaches the maximum allowable temperature out of the charge air cooler.

For more information, see your John Deere dealer.

DX,FUEL10-19-13JAN18

Oil Filters

Filtration of oils is critically important for proper operation and lubrication. John Deere brand oil filters have been designed and produced specifically for John Deere applications.

John Deere filters adhere to engineering specifications for quality of the filter media, filter efficiency rating, strength of the bond between the filter media and the element end cap, fatigue life of the canister (if applicable), and pressure capability of the filter seal. Non-John Deere branded oil filters might not meet these key John Deere specifications.

Always change oil filters regularly as specified in this manual.

DX,FILT1-19-11APR11

Fuel

Diesel Fuel

Consult your local fuel distributor for properties of the diesel fuel available in your area.

In general, diesel fuels are blended to satisfy the low temperature requirements of the geographical area in which they are marketed.

Diesel fuels specified to EN 590 or ASTM D975 are recommended. Renewable diesel fuel produced by hydrotreating animal fats and vegetable oils is basically identical to petroleum diesel fuel. Renewable diesel that meets EN 590, ASTM D975, or EN 15940 is acceptable for use at all percentage mixture levels.

Required Fuel Properties

In all cases, the fuel shall meet the following properties:

Cetane number of 40 minimum. Cetane number greater than 47 is preferred, especially for temperatures below -20°C (-4°F) or elevations above 1675 m (5500 ft.).

Cloud Point should be below the expected lowest ambient temperature or **Cold Filter Plugging Point** (CFPP) should be a maximum 10°C (18°F) below the fuel cloud point.

Fuel lubricity should pass a maximum scar diameter of 0.52 mm as measured by ASTM D6079 or ISO 12156-1. A maximum scar diameter of 0.45 mm is preferred.

Diesel fuel quality and sulfur content must comply with all existing emissions regulations for the area in which the engine operates. DO NOT use diesel fuel with sulfur content greater than 10 000 mg/kg (10 000 ppm).

Materials such as copper, lead, zinc, tin, brass and bronze should be avoided in fuel handling, distribution and storage equipment as these metals can catalyze fuel oxidation reactions which can lead to fuel system deposits and plugged fuel filters.

E-Diesel fuel

DO NOT use E-Diesel (Diesel fuel and ethanol blend). Use of E-Diesel fuel in any John Deere machine may void the machine warranty.

 **CAUTION: Avoid severe injury or death due to the fire and explosion risk from using E-Diesel fuel.**

Sulfur Content for Interim Tier 4, Final Tier 4, Stage III B, Stage IV, and Stage V Engines Above 560 kW

- Use ONLY diesel fuel with a maximum of 500 mg/kg (500 ppm) sulfur content.

Sulfur Content for Interim Tier 4, Final Tier 4, Stage III B, Stage IV Engines, and Stage V Engines

- Use ONLY ultra low sulfur diesel (ULSD) fuel with a maximum of 15 mg/kg (15 ppm) sulfur content.

Sulfur Content for Tier 3 and Stage III A Engines

- Use of diesel fuel with sulfur content less than 1000 mg/kg (1000 ppm) is RECOMMENDED.
- Use of diesel fuel with sulfur content 1000—2000 mg/kg (1000—2000 ppm) REDUCES the oil and filter change interval.
- BEFORE using diesel fuel with sulfur content greater than 2000 mg/kg (2000 ppm), contact your John Deere dealer.

Sulfur Content for Tier 2 and Stage II Engines

- Use of diesel fuel with sulfur content less than 2000 mg/kg (2000 ppm) is RECOMMENDED.
- Use of diesel fuel with sulfur content 2000—5000 mg/kg (2000—5000 ppm) REDUCES the oil and filter change interval.¹
- BEFORE using diesel fuel with sulfur content greater than 5000 mg/kg (5000 ppm), contact your John Deere dealer.

Sulfur Content for Other Engines

- Use of diesel fuel with sulfur content less than 5000 mg/kg (5000 ppm) is RECOMMENDED.
- Use of diesel fuel with sulfur content greater than 5000 mg/kg (5000 ppm) REDUCES the oil and filter change interval.

IMPORTANT: Do not mix used diesel engine oil or any other type of lubricating oil with diesel fuel.

Improper fuel additive usage may cause damage on fuel injection equipment of diesel engines.

DX,FUEL1-19-01NOV22

Supplemental Diesel Fuel Additives

Diesel fuel can be the source of performance or other operational problems for many reasons. Some causes include poor lubricity, contaminants, low cetane number, and a variety of properties that cause fuel system deposits. These and others are referenced in other sections of this Operator's Manual.

To optimize engine performance and reliability, closely follow recommendations on fuel quality, storage, and handling, which are found elsewhere in this Operator's Manual.

To further aid in maintaining performance and reliability of the engine's fuel system, John Deere has developed a family of fuel additive products for most global markets. The primary products include Fuel-Protect Diesel Fuel Conditioner (full feature conditioner in winter

¹ See DX,ENOIL12,OEM, DX,ENOIL12,T2,STD, or DX,ENOIL12,T2,EXT for more information on Engine Oil and Filter Service Intervals.

and summer formulas) and Fuel-Protect Keep Clean (fuel injector deposit removal and prevention). Availability of these and other products varies by market. See your local John Deere dealer for availability and additional information about fuel additives that might be right for your needs.

DX,FUEL13-19-07FEB14

Biodiesel Fuel

Biodiesel fuel is comprised of monoalkyl esters of long chain fatty acids derived from vegetable oils or animal fats. Biodiesel blends are biodiesel mixed with petroleum diesel fuel on a volume basis.

Before using fuel containing biodiesel, review the Biodiesel Use Requirements and Recommendations in this Operator's Manual.

Environmental laws and regulations can encourage or prohibit the use of biofuels. Operators should consult with appropriate governmental authorities prior to using biofuels.

John Deere Stage V Engines Operating in the European Union

Where the engine is to be operated within the Union on diesel or non-road gas-oil, a fuel with a FAME content not greater than 8% volume/volume (B8) shall be used.

John Deere Engines with Exhaust Filter Except Stage V Engines Operating in the European Union

Biodiesel blends up to B20 can be used ONLY if the biodiesel (100% biodiesel or B100) meets ASTM D6751, EN 14214, or equivalent specification. Expect a 2% reduction in power and a 3% reduction in fuel economy when using B20.

Biodiesel concentrations above B20 can harm the engine's emission control systems and should not be used. Risks include, but are not limited to, more frequent stationary regeneration, soot accumulation, and increased intervals for ash removal.

John Deere Fuel conditioners or equivalent, which contain detergent and dispersant additives, are required when using biodiesel blends from B10 to B20, and are recommended when using lower biodiesel blends.

John Deere Engines Without Exhaust Filter

Biodiesel blends up to B20 can be used ONLY if the biodiesel (100% biodiesel or B100) meets ASTM D6751, EN 14214, or equivalent specification. Expect a 2% reduction in power and a 3% reduction in fuel economy when using B20.

These John Deere engines can operate on biodiesel blends above B20 (up to 100% biodiesel). Operate at levels above B20 ONLY if the biodiesel is permitted by law and meets the EN 14214 specification (primarily available in Europe). Engines operating on biodiesel

blends above B20 might not fully comply with or be permitted by all applicable emissions regulations. Expect up to a 12% reduction in power and an 18% reduction in fuel economy when using 100% biodiesel.

John Deere fuel conditioners or equivalent, which contain detergent and dispersant additives, are required when using biodiesel blends from B10 to B100, and are recommended when using lower biodiesel blends.

Biodiesel Use Requirements and Recommendations

The petroleum diesel portion of all biodiesel blends must meet the requirements of ASTM D975 (US) or EN 590 (EU) commercial standard.

Biodiesel users in the U.S. are strongly encouraged to purchase biodiesel blends from a BQ-9000 Certified Marketer and sourced from a BQ-9000 Accredited Producer (as certified by the National Biodiesel Board). Certified Marketers and Accredited Producers can be found at the following website: <http://www.bq9000.org>.

Biodiesel contains residual ash. Ash levels exceeding the maximums allowed in either ASTM D6751 or EN14214 can result in more rapid ash loading and require more frequent cleaning of the Exhaust Filter (if present).

The fuel filter can require more frequent replacement when using biodiesel fuel, particularly if switching from diesel. Check engine oil level daily prior to starting engine. A rising oil level can indicate fuel dilution of the engine oil. Biodiesel blends up to B20 must be used within 90 days of the date of biodiesel manufacture. Biodiesel blends above B20 must be used within 45 days from the date of biodiesel manufacture.

When using biodiesel blends up to B20, the following must be considered:

- Cold-weather flow degradation
- Stability and storage issues (moisture absorption, microbial growth)
- Possible filter restriction and plugging (usually a problem when first switching to biodiesel on used engines)
- Possible fuel leakage through seals and hoses (primarily an issue with older engines)
- Possible reduction of service life of engine components

Request a certificate of analysis from your fuel distributor to ensure that the fuel is compliant with the specifications provided in this Operator's Manual.

Consult your John Deere dealer for John Deere fuel products to improve storage and performance with biodiesel fuels.

The following must also be considered if using biodiesel blends above B20:

- Possible coking or blocked injector nozzles, resulting

in power loss and engine misfire if John Deere fuel additives and conditioners or equivalent containing detergent/dispersants are not used

- Possible crankcase oil dilution (requiring more frequent oil changes)
- Possible lacquering or seizure of internal components
- Possible formation of sludge and sediments
- Possible thermal oxidation of fuel at elevated temperatures
- Possible compatibility issues with other materials (including copper, lead, zinc, tin, brass, and bronze) used in fuel handling, distribution, and storage equipment
- Possible reduction in water separator efficiency
- Possible damage to paint if exposed to biodiesel
- Possible corrosion of fuel injection equipment
- Possible elastomeric seal and gasket material degradation (primarily an issue with older engines)
- Possible high acid levels within fuel system
- Because biodiesel blends above B20 contain more ash, using blends above B20 can result in more rapid ash loading and require more frequent cleaning of the Exhaust Filter (if present)

IMPORTANT: Raw pressed vegetable oils are NOT acceptable for use as fuel in any concentration in John Deere engines. Their use could cause engine failure.

EC82310,0000953-19-03FEB22

Lubricity of Diesel Fuel

Most diesel fuels manufactured in the United States, Canada, and the European Union have adequate lubricity to ensure proper operation and durability of fuel injection system components. However, diesel fuels manufactured in some areas of the world may lack the necessary lubricity.

IMPORTANT: Make sure the diesel fuel used in your machine demonstrates good lubricity characteristics.

Fuel lubricity should pass a maximum scar diameter of 0.52 mm as measured by ASTM D6079 or ISO 12156-1. A maximum scar diameter of 0.45 mm is preferred.

If fuel of low or unknown lubricity is used, add John Deere Fuel-Protect Diesel Fuel Conditioner (or equivalent) at the specified concentration.

Lubricity of BioDiesel Fuel

Fuel lubricity can improve significantly with BioDiesel

blends up to B20 (20% BioDiesel). Further increase in lubricity is limited for BioDiesel blends greater than B20.

DX,FUEL5-19-07FEB14

Handling and Storing Diesel Fuel

⚠ CAUTION: Reduce the risk of fire. Handle fuel carefully. DO NOT fill the fuel tank when engine is running. DO NOT smoke while you fill the fuel tank or service the fuel system.

Fill the fuel tank at the end of each day's operation to prevent water condensation and freezing during cold weather.

Keep all storage tanks as full as practical to minimize condensation.

Ensure that all fuel tank caps and covers are installed properly to prevent moisture from entering. Monitor water content of the fuel regularly.

When using biodiesel fuel, the fuel filter may require more frequent replacement due to premature plugging.

Check engine oil level daily prior to starting engine. A rising oil level may indicate fuel dilution of the engine oil.

IMPORTANT: The fuel tank is vented through the filler cap. If a new filler cap is required, always replace it with an original vented cap.

When fuel is stored for an extended period or if there is a slow turnover of fuel, add a fuel conditioner to stabilize the fuel. Keeping the free water drained and treating the bulk fuel storage tank quarterly with a maintenance dose of a biocide will prevent microbial growth. Contact your fuel supplier or John Deere dealer for recommendations.

DX,FUEL4-19-13JAN18

Fill Fuel Tank




TS202—UN—23AUG88

CAUTION: Avoid possible personal injury or fire:

- Fuel is highly flammable, handle it with care.
- Do not refuel while smoking or when near open flame or sparks.
- Stop engine when refueling.
- Clean up spilled fuel.
- Fill fuel tank outdoors.
- Keep machine clean of accumulated trash, grease, and debris.

IMPORTANT: Prevent damage to tractor fuel injection system, emissions system, and other components. Never put Diesel Exhaust Fluid (DEF) into fuel tank or fuel system. If DEF is introduced into the fuel tank, see your John Deere dealer.

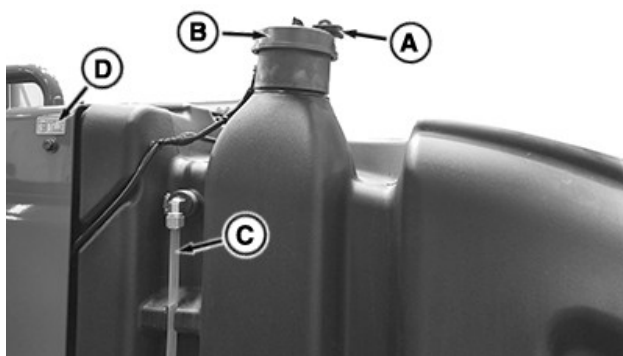

RXA0162570—UN—21MAR18

IMPORTANT: Prevent damage to engine and emissions system components. If tractor is equipped with Final Tier 4/Stage V engine, use only ultra low sulfur fuel as prescribed by decal (D). Tractors with other emissions specifications may use other fuels. See Diesel Fuel in this Operator's Manual section.


To determine which engine your tractor is equipped with, see Engine Serial Number in Identification Numbers section of this Operator's Manual.

NOTE: Final Tier 4/Stage V engine equipped tractors require DEF to operate. It is suggested that DEF tank is filled each time tractor is refueled. See Fill DEF Tank - FT4/Stage V Engine in Diesel Exhaust Fluid (DEF) section of this Operator's Manual.

IMPORTANT: Each fuel tank is vented through filter at top of each tank. See Fuel Tank Vent Filters in Service—Change section of this Operator's Manual.

NOTE: When digital display fuel gauge flashes, approximately 20 to 25 gallons of fuel remains.

Approximately 132 L (35 gal) of fuel remains when the fuel level is at the bottom of sight tube (C).

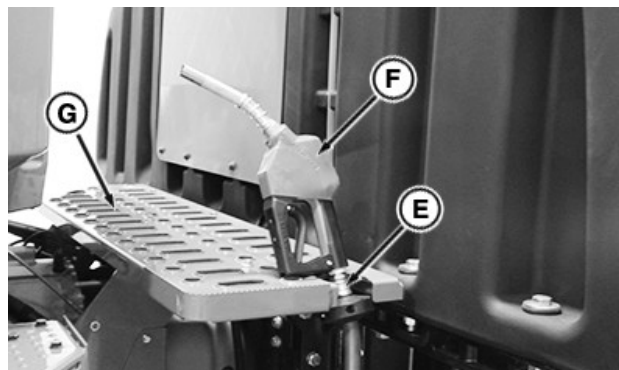

RXA0162581—UN—23MAR18

1. Place fuel nozzle (F) in fuel nozzle holder (E) before climbing steps.
2. Stand on platform (G).
3. Raise fuel cap lock lever (A) and rotate fuel cap (B) counterclockwise.
4. Remove fuel cap and fill fuel tanks. Filling fuel tanks at end of each day prevents condensation in tank.
5. Place fuel nozzle back in fuel nozzle holder and replace and lock cap before climbing down from platform.

TO84419,000015E-19-21APR21

Testing Diesel Fuel

A fuel analysis program can help to monitor the quality of diesel fuel. The fuel analysis can provide critical data such as calculated cetane index, fuel type, sulfur content, water content, appearance, suitability for cold weather operations, bacteria, cloud point, acid number, particulate contamination, and whether the fuel meets ASTM D975 or equivalent specification.

Contact your John Deere dealer for more information on diesel fuel analysis.

DX,FUEL6-19-13JAN18

Fuel Filters

The importance of fuel filtration cannot be overemphasized with modern fuel systems. The combination of increasingly restrictive emission regulations and more efficient engines requires fuel system to operate at much higher pressures. Higher pressures can only be achieved using fuel injection components with very close tolerances. These close manufacturing tolerances have significantly reduced capacities for debris and water.

John Deere brand fuel filters have been designed and produced specifically for John Deere engines.

To protect the engine from debris and water, always change engine fuel filters as specified in this manual.

DX,FILT2-19-14APR11

Diesel Exhaust Fluid (DEF)

Diesel Exhaust Fluid (DEF) — Use in Selective Catalytic Reduction (SCR) Equipped Engines

In order to maintain the emissions performance of the engine, it is essential to use and refill DEF in accordance with the specification.

Diesel exhaust fluid (DEF) is a high purity liquid that is injected into the exhaust system of engines equipped with selective catalytic reduction (SCR) systems. Maintaining the purity of DEF is important to avoid malfunctions in the SCR system. Engines requiring DEF shall use a product that meets the requirements for aqueous urea solution 32 (AUS 32) according to ISO 22241-1.

The use of John Deere Diesel Exhaust Fluid is recommended. John Deere Diesel Exhaust Fluid is available at your John Deere dealer in a variety of package sizes to suit your operational needs.

If John Deere Diesel Exhaust Fluid is not available, use DEF that is certified by the American Petroleum Institute (API) Diesel Exhaust Fluid Certification Program or by the AdBlue Diesel Exhaust Fluid Certification Program. Look for the API certification symbol or the AdBlue name on the container.



RG30211—UN—08MAR18

In some cases, DEF is referred to by one or more of these names:

- Urea
- Aqueous Urea Solution 32
- AUS 32
- AdBlue
- NOx Reduction Agent
- Catalyst Solution

DX,DEF(T)-19-08APR22

Storing Diesel Exhaust Fluid (DEF)

CAUTION: Avoid contact with eyes. In case of contact, immediately flush eyes with large amounts of water for a minimum of 15 minutes. Reference the Materials Safety Data Sheet (MSDS) for additional information.

Do not ingest DEF. In the event DEF is ingested, contact a physician immediately. Reference the Materials Safety Data Sheet (MSDS) for additional information.

IMPORTANT: It is unlawful to tamper with or remove any component of the aftertreatment system. Do not use DEF that does not meet the required specifications or operate the engine with no DEF.

Never attempt to create DEF by mixing agricultural grade urea with water. Agricultural grade urea does not meet the necessary specifications and can damage the aftertreatment system.

Do not add any chemicals or additives to DEF in an effort to prevent freezing. Any chemicals or additives added to DEF can damage the aftertreatment system.

Never add water or any other fluid in place of, or in addition to DEF. Operating with a modified DEF or using an unapproved DEF can damage the aftertreatment system.

Storage information provided below is for reference and is to be used as a guideline only.

It is preferred to store DEF out of extreme ambient temperatures. DEF freezes at -11°C (12°F). Exposure to temperatures greater than 30°C (86°F) can degrade DEF over time. Do not store DEF in direct sunlight.

Dedicated DEF storage containers must be sealed between uses to prevent evaporation and contamination. Containers made of polyethylene, polypropylene, or stainless steel are recommended to transport and store DEF.

Ideal conditions for storage of DEF are:

- Store at temperatures between -5°C and 30°C (23°F and 86°F)
- Store in dedicated containers sealed to avoid contamination and evaporation

Under these conditions, DEF is expected to remain useable for a minimum of 18 months. Storing DEF at higher temperatures can reduce its useful life by approximately 6 months for every 5°C (9°F) temperature above 30°C (86°F).

If unsure how long or under what conditions DEF has been stored, test DEF. See Testing Diesel Exhaust Fluid (DEF).

Long-term storage in the DEF tank (over 12 months) is not recommended. If long-term storage is necessary, test DEF prior to operating engine. See Testing Diesel Exhaust Fluid (DEF).

It is recommended to purchase DEF in quantities that will be consumed within 12 months.

DX,DEF,STORE-19-15JUL20

Refilling Diesel Exhaust Fluid (DEF) Tank



TS1731—UN—23AUG13

CAUTION: Avoid contact with eyes. In case of contact, immediately flush eyes with large amounts of water for a minimum of 15 minutes. Reference the Materials Safety Data Sheet (MSDS) for additional information.

Do not ingest DEF. In the event DEF is ingested, contact a physician immediately. Reference the Materials Safety Data Sheet (MSDS) for additional information.

IMPORTANT: Use only distilled water to rinse components that are used to deliver DEF. Tap water can contaminate DEF. If distilled water is not available, rinse with clean tap water, then thoroughly rinse with ample amounts of DEF.

If DEF is spilled or contacts any surface other than the storage tank, immediately clean the surface with clear water. DEF is corrosive to painted and unpainted metallic surfaces and can distort some plastic and rubber components.

If DEF is filled into engine fuel tank or other fluid compartment, do not operate engine until system is properly purged of DEF. Contact your John Deere dealer immediately to determine how to clean and purge the system.

Reasonable care should be taken when refilling the DEF tank. Ensure that the DEF tank cap area is free of debris before removing the cap. Seal containers of DEF between use to prevent contamination and evaporation.

Avoid splashing DEF and do not allow DEF to come into contact with skin, eyes, or mouth.

DEF is not harmful to handle, but DEF can be corrosive to materials such as steel, iron, zinc, nickel, copper, aluminum, and magnesium. Use suitable containers to transport and store DEF. Containers made of polyethylene, polypropylene, or stainless steel are recommended.

Avoid prolonged contact with skin. In case of accidental contact, wash skin immediately with soap and water.

Keep anything used to store or dispense DEF clean of dirt and dust. Wash and rinse containers or funnels thoroughly with distilled water to remove contaminants.

If an unapproved fluid, such as diesel fuel or coolant is added to the DEF tank, contact your John Deere dealer immediately to determine how to clean and purge the system.

If water has been added to the DEF tank, a tank cleaning is necessary. See Cleaning DEF Tank in this manual. After refilling the tank, check the DEF concentration. See Testing Diesel Exhaust Fluid (DEF).

The operator must maintain appropriate DEF levels at all times. Check the DEF level daily and refill the tank as needed. The filling port is identified by a blue colored cap embossed with the following DEF symbol.


DX,DEF,REFILL-19-15JUL20

Fill DEF Tank—Final Tier 4/Stage V Engine

CAUTION: DEF contains urea. Do not get the substance in eyes. In case of contact, immediately flush eyes with large amounts of water for a minimum of 15 minutes. Do not take internally. In event DEF is ingested, contact a physician immediately. Reference Materials Safety Data Sheet (MSDS) for additional information.

IMPORTANT: To determine tractor engine type, see Engine Serial Number in Identification Numbers section of this Operator's Manual.

Never put DEF in diesel fuel tank, or diesel fuel in DEF tank.

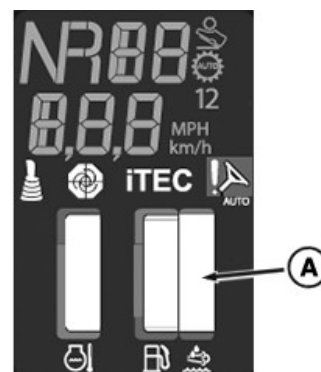

RXA0152790—UN—13JUL16

To avoid drastic changes in tractor performance, always keep DEF level above topmost red mark on corner post display (A). Monitor DEF level on cornerpost display and refill as necessary. Refill DEF tank every time tractor is refueled, see Diesel Exhaust Fluid (DEF) — Use in Selective Catalytic Reduction (SCR) Equipped Engines in this Operator's Manual section.

IMPORTANT: If DEF is spilled or contacts any surface other than the storage tank, immediately clean the surface with clear water. DEF is corrosive to painted and unpainted metallic surfaces and may distort some plastic and rubber components.

To fill DEF tank:

1. Before using containers, funnels, etc. to dispense DEF, wash and rinse items thoroughly with distilled water to remove contaminants.



RXA0167615—UN—23APR19

2. Wipe DEF tank filler cap (B), area around cap and filler neck to reduce chance of contaminating DEF.
3. Lift DEF tank cap latch lever and turn cap 90° counterclockwise.
4. Lift cap from filler neck.

IMPORTANT: Avoid overfilling DEF tank.

Completely filling DEF tank at lower temperatures can cause a blockage in filler neck. If temperatures are expected to reach below -11°C (12°F), do not fill DEF tank more than half way according to DEF level display on corner post. Observe temperature guidelines to assure ability to refill tank.

5. Using funnel, carefully fill DEF tank. DO NOT over fill DEF tank. Best final fill level is determined by ambient air temperature guide:
 - Ambient air temperature at or above -11°C (12°F): Completely fill tank.
 - Ambient air temperature below -11°C (12°F): Keep fill tank level below the filler neck. Although main portion of DEF tank is heated to keep DEF from freezing, filler neck is not heated. Fluid in neck may freeze, preventing refill DEF tank until fluid melts.
6. Replace and securely latch DEF tank cap. Cap can be locked with a padlock.
7. Carefully clean any spills, using clean (preferably distilled) water.

If an unapproved fluid, such as diesel fuel, or engine coolant is added to vehicle DEF tank, see Diesel

Exhaust Fluid (DEF) Tank in Service—Clean section of this Operator's Manual.

DB71512,0000071-19-21APR21

Testing Diesel Exhaust Fluid (DEF)

IMPORTANT: Using DEF with the correct concentration is critical to engine and aftertreatment system performance. Extended storage and other conditions can adversely alter the DEF concentration.

If DEF quality is questionable, draw a sample out of the DEF tank or storage tank into a clear container. DEF must be crystal clear with a light ammonia smell. If DEF appears cloudy, has a colored tint, or has a profound ammonia smell, it is likely not within specification. DEF in this condition should not be used. Drain tank, flush with distilled water and refill with new or good DEF. After refilling the tank, check the DEF concentration.

If the DEF passes the visual and smell test, check the DEF concentration with a handheld refractometer calibrated to measure DEF.

DEF concentration should be checked when the engine has been stored for extended periods, or if there is suspicion the engine or packaged DEF fluid has been contaminated with water.

Two approved tools are available through your John Deere dealer:

- JDG11594 Digital DEF Refractometer—A digital tool providing an easy to read concentration measurement
- JDG11684 DEF Refractometer—Low-cost alternative tool providing an analog reading

Follow instructions included with either tool to obtain the measurement.

The correct DEF concentration is 31.8—33.2% urea. If the DEF concentration is not within specification, drain the DEF tank, flush with distilled water and fill with new or good DEF. If packaged DEF is not within specification, dispose of DEF packages and replace with new or good DEF.

DX,DEF,TEST-19-13JUN13

Disposal of Diesel Exhaust Fluid (DEF)

Although there is little issue with minor spillage of DEF on the ground, large amounts of DEF should be contained. If large spills occur, contact local environmental authorities for assistance with clean-up.

If a substantial quantity of DEF is not within specification, contact the DEF supplier for assistance with disposal. Do not dump substantial quantities of

DEF onto the ground or send DEF to wastewater treatment facilities.

DX,DEF,DISPOSE-19-13JUN13

Engine Oil

Diesel Engine Oil Service Interval for Operation at High Altitude

To avoid excessive oil degradation and potential engine damage, reduce oil and filter service intervals to 50% of the original recommended values when operating engines at altitudes above **1675 m (5500 ft)**.

Oil analysis may allow longer service intervals.

Use only approved oil types.

Example of Original Hours	Corresponding High Altitude Hours
125	60
150	75
175	85
200	100
250	125
275	135
300	150
350	175
375	185
400	200
500	250

DX,ENOIL,SERV,HIALT-19-11NOV14

John Deere Break-In Plus Engine Oil — Interim Tier 4, Final Tier 4, Stage IIIB, Stage IV, and Stage V

New engines are filled at the factory with John Deere Break-In Plus Engine Oil. During the break-in period, add John Deere Break-In Plus Engine Oil, as needed to maintain the specified oil level.

Operate the engine under various conditions, particularly heavy loads with minimal idling, to help seat engine components properly.

During the initial operation of a new or rebuilt engine, change the oil and filter between a minimum of 100 hours and maximum equal to the interval specified for John Deere Plus-50 II oil.

After an engine overhaul, fill the engine with John Deere Break-In Plus Engine Oil.

If John Deere Break-In Plus Engine Oil is not available, use an SAE 10W-30 viscosity grade diesel engine oil meeting one of the following:

- API Service Category CK-4
- API Service Category CJ-4
- ACEA Oil Sequence E9
- ACEA Oil Sequence E6

If one of these oils is used during the initial operation of a new or rebuilt engine, change the oil and filter

between a minimum of 100 hours and a maximum of 250 hours.


IMPORTANT: Do not use any other engine oils during the initial break-in of a new or rebuilt engine.

John Deere Break-In Plus Engine Oil can be used for all John Deere diesel engines at all emission certification levels.

After the break-in period, use John Deere Plus-50 II or other diesel engine oil as recommended in this manual.

DX,ENOIL16(T)-19-05APR22

Diesel Engine Oil — Interim Tier 4, Final Tier 4, Stage IIIB, Stage IV, and Stage V

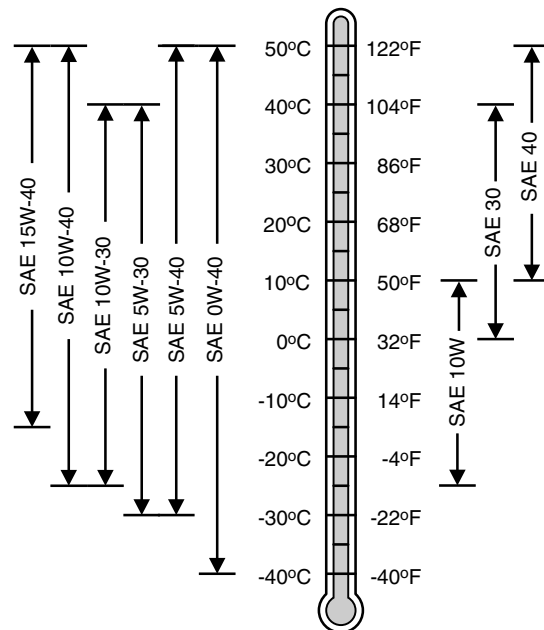

TS1743—UN—25APR19

Oil Viscosities for Air Temperature Ranges

Failure to follow applicable oil standards and drain intervals can result in severe engine damage that might not be covered under warranty. Warranties, including the emissions warranty, are not conditioned on the use of John Deere oils, parts, or service.

Use an oil viscosity based on the expected air temperature range during the period between oil changes.

John Deere Plus-50 II is the recommended engine oil.

Extended service intervals may apply when John Deere Plus-50 II engine oil is used. Refer to the engine oil drain interval table and consult your John Deere dealer for more information.

If John Deere Plus-50 II engine oil is not available,

engine oil meeting one or more of the following may be used:

- API Service Category CK-4
- API Service Category CJ-4
- ACEA Oil Sequence E9
- ACEA Oil Sequence E6

DO NOT use engine oil containing more than 1.0% sulfated ash, 0.12% phosphorus, or 0.4% sulfur.

Multi-viscosity diesel engine oils are preferred.

Diesel fuel quality and fuel sulfur content must comply with all existing emissions regulations for the area in which the engine operates.

IMPORTANT: Use only ultra low sulfur diesel (ULSD) fuel with a maximum sulfur content of 15 mg/kg (15 ppm).

DX,ENOIL14(T)-19-05APR22

Engine Oil and Filter Service Intervals — Interim Tier 4, Final Tier 4, Stage IIIB, Stage IV, and Stage V Engines

Failure to follow applicable oil standards and drain intervals can result in severe engine damage that might not be covered under warranty. Warranties, including the emissions warranty, are not conditioned on the use of John Deere oils, parts, or service.

Recommended oil and filter service intervals are based on a combination of oil pan capacity, type of engine oil and filter used, and sulfur content of the diesel fuel. Actual service intervals also depend on operation and maintenance practices.

Approved Oil Types:

- John Deere Plus-50 II
- "Other Oils" include API CK-4, API CJ-4, ACEA E9, and ACEA E6

Use oil analysis to evaluate the condition of the oil and to aid in the selection of the proper oil and filter service interval. Contact your John Deere dealer or other qualified service provider for more information on engine oil analysis.

Change the oil and oil filter at least once every 12 months even if the hours of operation are fewer than the otherwise recommended service interval.

Diesel fuel sulfur content affects engine oil and filter service intervals. Higher fuel sulfur levels reduce oil and filter service intervals.

IMPORTANT: Use of diesel fuel with sulfur content less than 15 mg/kg (15 ppm) is REQUIRED.

NOTE: The 500-hour extended oil and filter change interval is only allowed if all of the following conditions are met:

- Use of diesel fuel with sulfur content less than 15 mg/kg (15 ppm)
- Use of John Deere Plus-50 II oil
- Use of an approved John Deere oil filter

Engine operation at high altitude decreases oil change intervals. See Diesel Engine Oil Service Interval for Operation at High Altitude for additional information.


Engine Oil and Filter Service Intervals	
John Deere Plus-50 II	500 hours
Other Oils	250 hours
Oil analysis may extend the service interval of "Other Oils" to a maximum not to exceed the interval of Plus-50 II oils. Oil analysis means taking a series of oil samples at 50-hour increments beyond the normal service interval until either the data indicates the end of useful oil life or the maximum service interval of John Deere Plus-50 II oils is reached.	

IMPORTANT: To avoid engine damage:

- Reduce oil and filter service intervals by 50% when using biodiesel blends greater than B20
- Oil analysis may allow longer service intervals
- Use only approved oil types

DX,ENOIL15,IT4,120toMAX(T)-19-05APR22

Diesel Engine Oil — Tier 2 and Stage II

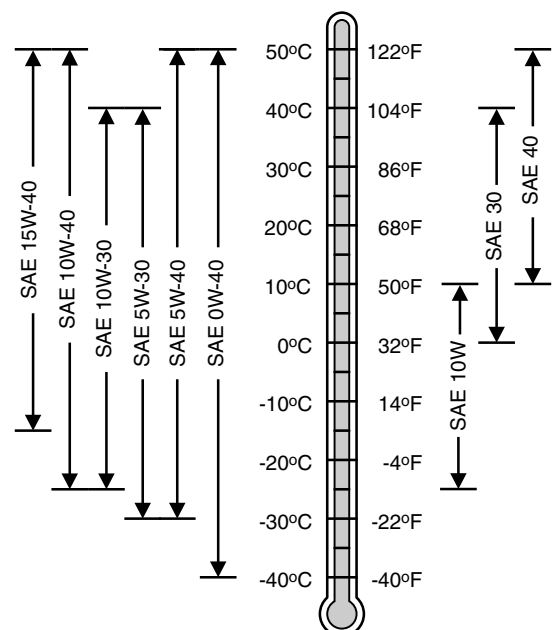

TS1743—UN—25APR19

Oil Viscosities for Air Temperature Ranges

Failure to follow applicable oil standards and drain intervals can result in severe engine damage that might not be covered under warranty. Warranties, including the emissions warranty, are not conditioned on the use of John Deere oils, parts, or service.

Use an oil viscosity based on the expected air temperature range during the period between oil changes.

John Deere Plus-50 II oil is preferred.

John Deere Plus-50 is also recommended.

John Deere Torq-Gard is also allowed.

Other oils may be used if they meet one or more of the following standards:

- API Service Category CK-4
- API Service Category CJ-4
- API Service Category CI-4 PLUS
- API Service Category CI-4
- API Service Category CH-4
- ACEA Oil Sequence E9
- ACEA Oil Sequence E7
- ACEA Oil Sequence E6
- ACEA Oil Sequence E5
- ACEA Oil Sequence E4

Multi-viscosity diesel engine oils are preferred.

Diesel fuel quality and fuel sulfur content must comply with all existing emissions regulations for the area in which the engine operates.

IMPORTANT: DO NOT use diesel fuel with sulfur content greater than 10 000 mg/kg (10 000 ppm).

DX,ENOIL7(T)-19-04APR22

Engine Oil and Filter Service Intervals — Tier 2 and Stage II Engines

Recommended oil and filter service intervals are based on a combination of oil pan capacity, type of engine oil and filter used, and sulfur content of diesel fuel. Actual service intervals also depend on operation and maintenance practices.

Approved Oil Types:

- “Plus-50 Oils” include John Deere Plus-50 II and John Deere Plus-50
- “Other Oils” include John Deere Torq-Gard, API CK-4, API CJ-4, API CI-4 PLUS, API CI-4, API CH-4, ACEA E9, ACEA E7, ACEA E6, ACEA E5, and ACEA E4

to aid in the selection of the proper oil and filter service interval. Contact your John Deere dealer or other qualified service provider for more information on engine oil analysis.

Change the oil and oil filter at least once every 12 months even if the hours of operation are fewer than the otherwise recommended service interval.

Diesel fuel sulfur content affects engine oil and filter service intervals.

- Use of diesel fuel with sulfur content less than 2000 mg/kg (2000 ppm) is **RECOMMENDED**
- Use of diesel fuel with sulfur content 2000—5000 mg/kg (2000—5000 ppm) **REDUCES** the oil and filter change interval
- **BEFORE** using diesel fuel with sulfur content greater than 5000 mg/kg (5000 ppm), contact your John Deere dealer or qualified service provider

NOTE: The 500-hour extended oil and filter change interval is only allowed if all of the following conditions are met:

- *Use of diesel fuel with sulfur content less than 2000 mg/kg (2000 ppm)*
- *Use of John Deere Plus-50 II or John Deere Plus-50 oil*
- *Use of an approved John Deere oil filter*

Engine Oil and Filter Service Intervals	
Fuel Sulfur	Less than 2000 mg/kg (2000 ppm)
Plus-50 Oils	500 hours
Other Oils	250 hours
Fuel Sulfur	2000—5000 mg/kg (2000—5000 ppm)
Plus-50 Oils	400 hours
Other Oils	150 hours
Fuel Sulfur	5000—10 000 mg/kg (5000—10 000 ppm)
Plus-50 Oils	250 hours (see John Deere dealer)
Other Oils	125 hours (see John Deere dealer)
Oil analysis may extend the service interval of “Other Oils”, to a maximum not to exceed the interval for Plus-50 Oils. Oil analysis means taking a series of oil samples at 50-hour increments beyond the normal service interval until either the data indicates the end of useful oil life or the maximum service interval of John Deere Plus-50 oils is reached.	


IMPORTANT: To avoid engine damage:

- **Reduce oil and filter service intervals by 50% when using biodiesel blends greater than B20**
- **Oil analysis may allow longer service intervals**
- **Use only approved oil types**

DX,ENOIL12,T2,EXT(T)-19-04APR22

Use oil analysis to evaluate the condition of the oil and

Diesel Engine Oil — Tier 3 and Stage IIIA

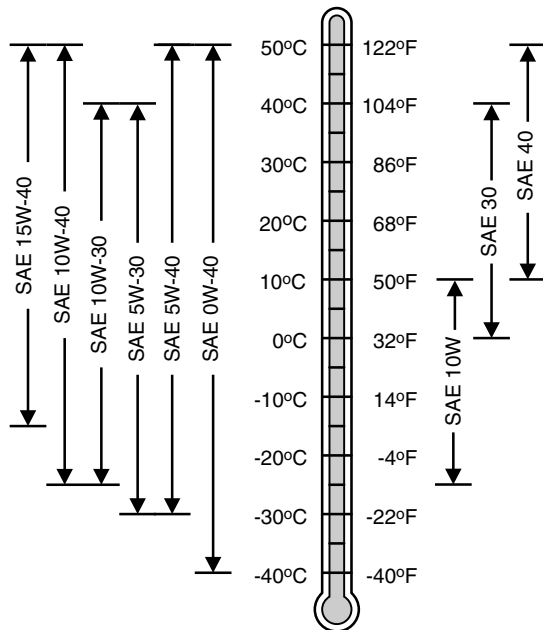

TS1743—UN—25APR19

Oil Viscosities for Air Temperature Ranges

Failure to follow applicable oil standards and drain intervals can result in severe engine damage that might not be covered under warranty. Warranties, including the emissions warranty, are not conditioned on the use of John Deere oils, parts, or service.

Use an oil viscosity based on the expected air temperature range during the period between oil changes.

John Deere Plus-50 II oil is preferred.

John Deere Plus-50 is also recommended.

John Deere Torq-Gard is also allowed.

Other oils may be used if they meet one or more of the following standards:

- API Service Category CK-4
- API Service Category CJ-4
- API Service Category CI-4 PLUS
- API Service Category CI-4
- ACEA Oil Sequence E9
- ACEA Oil Sequence E7
- ACEA Oil Sequence E6
- ACEA Oil Sequence E5
- ACEA Oil Sequence E4

Multi-viscosity diesel engine oils are preferred.

Diesel fuel quality and fuel sulfur content must comply with all existing emissions regulations for the area in which the engine operates.

IMPORTANT: DO NOT use diesel fuel with sulfur content greater than 10 000 mg/kg (10 000 ppm).

DX,ENOIL11(T)-19-04APR22

Engine Oil and Filter Service Intervals — Tier 3 and Stage III A — PowerTech Plus Engines

Recommended oil and filter service intervals are based on a combination of oil pan capacity, type of engine oil and filter used, and sulfur content of diesel fuel. Actual service intervals also depend on operation and maintenance practices.

Approved Oil Types:

- “Plus-50 Oils” include John Deere Plus-50 II and John Deere Plus-50
- “Other Oils” include John Deere Torq-Gard, API CK-4, API CJ-4, API CI-4 PLUS, API CI-4, ACEA E9, ACEA E7, ACEA E6, ACEA E5, and ACEA E4

Use oil analysis to evaluate the condition of the oil and to aid in the selection of the proper oil and filter service interval. Contact your John Deere dealer or other qualified service provider for more information on engine oil analysis.

Change the oil and oil filter at least once every 12 months even if the hours of operation are fewer than the otherwise recommended service interval.

Diesel fuel sulfur content affects engine oil and filter service intervals.

- Use of diesel fuel with sulfur content less than 2000 mg/kg (2000 ppm) is **RECOMMENDED**
- **BEFORE** using diesel fuel with sulfur content greater than 2000 mg/kg (2000 ppm), contact your John Deere dealer or qualified service provider
- **DO NOT** use diesel fuel with sulfur content greater than 10 000 mg/kg (10 000 ppm)

NOTE: The 500-hour extended oil and filter change interval is only allowed if all of the following conditions are met:

- Use of diesel fuel with sulfur content less than 2000 mg/kg (2000 ppm)
- Use of John Deere Plus-50 II or Plus-50 oil
- Use of an approved John Deere oil filter

Engine Oil and Filter Service Intervals	
Fuel Sulfur	Less than 2000 mg/kg (2000 ppm)
Plus-50 Oils	500 hours
Other Oils	250 hours
Fuel Sulfur	2000—10 000 mg/kg (2000—10 000 ppm)
Plus-50 Oils	Contact John Deere dealer

Engine Oil and Filter Service Intervals	
Other Oils	Contact John Deere dealer
Oil analysis may extend the service interval of "Other Oils", to a maximum not to exceed the interval of Plus-50 Oils. Oil analysis means taking a series of oil samples at 50-hour increments beyond the normal service interval until either the data indicates the end of useful oil life or the maximum service interval of John Deere Plus-50 oils is reached.	

IMPORTANT: To avoid engine damage:

- **Reduce oil and filter service intervals by 50% when using biodiesel blends greater than B20**
- **Oil analysis may allow longer service intervals**
- **Use only approved oil types**

DX,ENOIL13,T3,PTP,220toMAX(T)-19-08APR22

Engine Coolant

Diesel Engine Coolant (Engine with Wet Sleeve Cylinder Liners)

Failure to follow applicable coolant standards and drain intervals can result in severe engine damage that may not be covered under warranty. Warranties, including the emissions warranty, are not conditioned on the use of John Deere coolants, parts, or service.

Preferred Coolants

The following pre-mix engine coolants are preferred:

- John Deere Cool-Gard II
- John Deere Cool-Gard II PG

Cool-Gard II pre-mix coolant is available in several concentrations with different freeze protection limits as shown in the following table.

Cool-Gard II Pre-Mix	Freeze Protection Limit
Cool-Gard II 20/80	-9°C (16°F)
Cool-Gard II 30/70	-16°C (3°F)
Cool-Gard II 50/50	-37°C (-34°F)
Cool-Gard II 55/45	-45°C (-49°F)
Cool-Gard II PG 60/40	-49°C (-56°F)
Cool-Gard II 60/40	-52°C (-62°F)

Not all Cool-Gard II pre-mix products are available in all countries.

Use Cool-Gard II PG when a non-toxic coolant formulation is required.

Additional Recommended Coolants

The following engine coolant is also recommended:

- John Deere Cool-Gard II Concentrate in a 40—60% mixture of concentrate with quality water

IMPORTANT: When mixing coolant concentrate with water, do not use less than 40% or greater than 60% concentration of coolant. Less than 40% gives inadequate additives for corrosion protection. Greater than 60% can result in coolant gelation and cooling system problems.

Other Coolants

Other ethylene glycol or propylene glycol base coolants may be used if they meet the following specification:

- Pre-mix coolant meeting ASTM D6210 requirements
- Is formulated with a 2-ethylhexanoic acid (2-EHA) free additive package
- Coolant concentrate meeting ASTM D6210 requirements in a 40—60% mixture of concentrate with quality water

If coolant meeting one of these specifications is

unavailable, use coolant concentrate or pre-mix coolant that has a minimum of the following chemical and physical properties:

- Provides cylinder liner cavitation protection according to either the John Deere Cavitation Test Method or a fleet study run at or above 60% load capacity
- Is formulated with a nitrite-free additive package
- Is formulated with a 2-ethylhexanoic acid (2-EHA) free additive package
- Protects the cooling system metals (cast iron, aluminum alloys, and copper alloys such as brass) from corrosion

Water Quality

Water quality is important to the performance of the cooling system. Deionized or demineralized water is recommended for mixing with ethylene glycol and propylene glycol base engine coolant concentrate.

Coolant Drain Intervals

Drain and flush the cooling system and refill with fresh coolant at the indicated interval, which varies with the coolant used.

When Cool-Gard II or Cool-Gard II PG is used, the drain interval is 6 years or 6000 hours of operation.

If a coolant other than Cool-Gard II or Cool-Gard II PG is used, reduce the drain interval to 2 years or 2000 hours of operation.¹

IMPORTANT: Do not use cooling system sealing additives or antifreeze that contains sealing additives.

Do not mix ethylene glycol and propylene glycol base coolants.

Do not use coolants that contain nitrites.

DX,COOL3(T)-19-04APR22

John Deere Cool-Gard II Coolant Extender

Some coolant additives gradually deplete during engine operation. For Cool-Gard II pre-mix and Cool-Gard II Concentrate, replenish coolant additives between drain intervals by adding Cool-Gard II Coolant Extender.

Cool-Gard II Coolant Extender should not be added unless indicated by Cool-Gard II Test Strips. These test strips provide a simple, effective method to check the freeze point, additive levels, and pH of your engine coolant.

¹ Coolant analysis may extend the service interval of other "Coolants" to a maximum not to exceed the interval of Cool-Gard II coolants. Coolant analysis means taking a series of coolant samples at 1000 hour increments beyond the normal service interval until either the data indicate the end of useful coolant life or the maximum service interval of Cool-Gard II is reached.

Test the coolant solution at intervals of 12 months and whenever excessive coolant is lost through leaks or overheating.

IMPORTANT: Do not use Cool-Gard II Test Strips with Cool-Gard II PG.

Cool-Gard II Coolant Extender is a chemically matched additive system for use with all Cool-Gard II coolants. Cool-Gard II Coolant Extender is not intended for use with nitrite-containing coolants.

IMPORTANT: Do not add a supplemental coolant additive when the cooling system is drained and refilled with any of the following:

- John Deere Cool-Gard II
- John Deere Cool-Gard II PG

The use of non-recommended supplemental coolant additives can result in additive drop-out, gelation of the coolant, or corrosion of cooling system components.

Add the recommended concentration of Cool-Gard II Coolant Extender. DO NOT add more than the recommended amount.

DX,COOL16(T)-19-11APR22

Operating in Warm Temperature Climates

John Deere engines are designed to operate using recommended engine coolants.

Always use a recommended engine coolant, even when operating in geographical areas where freeze protection is not required.

IMPORTANT: Water may be used as coolant in emergency situations only.

Foaming, hot surface aluminum and iron corrosion, scaling, and cavitation occur when water is used as the coolant, even when coolant conditioners are added.

Drain cooling system and refill with recommended engine coolant as soon as possible.

DX,COOL6-19-17FEB20

Water Quality for Mixing with Coolant Concentrate

Engine coolants are a combination of three chemical components: ethylene glycol (EG) or propylene glycol (PG) antifreeze, inhibiting coolant additives, and quality water.

Water quality is important to the performance of the cooling system. Deionized or demineralized water is

recommended for mixing with ethylene glycol and propylene glycol base engine coolant concentrate.

All water used in the cooling system should meet the following minimum specifications for quality:

Chlorides	<40 mg/L
Sulfates	<100 mg/L
Total solids	<340 mg/L
Total dissolved hardness	<170 mg/L
pH	5.5—9.0

IMPORTANT: Do not use bottled drinking water because it often contains higher concentrations of total dissolved solids.

Freeze Protection

The relative concentrations of glycol and water in the engine coolant determine its freeze protection limit.

Ethylene Glycol	Freeze Protection Limit
40%	-24°C (-12°F)
50%	-37°C (-34°F)
60%	-52°C (-62°F)
Propylene Glycol	Freeze Protection Limit
40%	-21°C (-6°F)
50%	-33°C (-27°F)
60%	-49°C (-56°F)

DO NOT use a coolant-water mixture greater than 60% ethylene glycol or 60% propylene glycol.


DX,COOL19-19-13JAN18

Testing Coolant Freeze Point



TS1732—UN—04SEP13

SERVICEGARD Part Number 75240

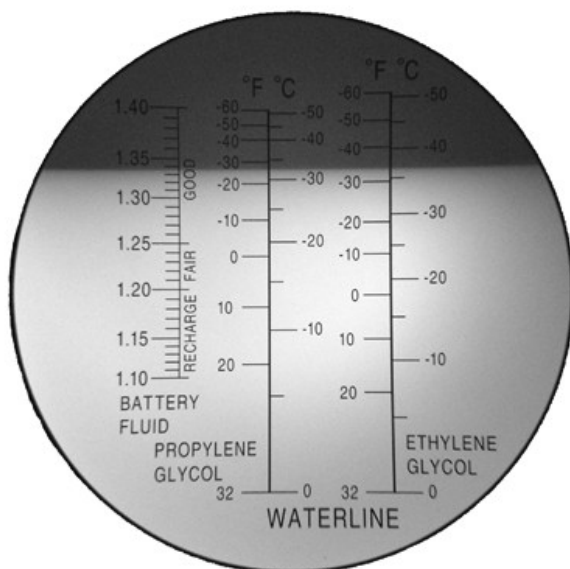

TS1733—UN—04SEP13
Image with a Drop of 50/50 Coolant Placed on the Refractometer Window

The use of a handheld coolant refractometer is the quickest, easiest, and most accurate method to determine the coolant freeze point. This method is more accurate than a test strip or a float-type hydrometer, which can produce poor results.


A coolant refractometer is available through your John Deere dealer under the SERVICEGARD tool program. Part number 75240 provides an economical solution for accurate freeze point determination in the field.

To use this tool:

1. Allow cooling system to cool to ambient temperatures.
2. Open radiator cap to expose coolant.
3. With the included dropper, collect a small coolant sample.
4. Open the lid of the refractometer, place one drop of coolant on the window, and close the lid.
5. Look through the eyepiece and focus as necessary.
6. Record the listed freeze point for the type of coolant (ethylene glycol coolant or propylene glycol) being tested.

DX.COOL.TEST(T)-19-04APR22

Disposing of Coolant

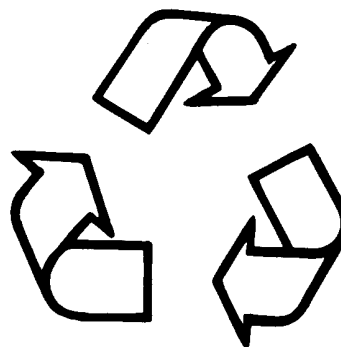

Recycle Waste

TS1133—UN—15APR13

Improperly disposing of engine coolant can threaten the environment and ecology.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.


Do not pour waste onto the ground, down a drain, or into any water source.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere engine distributor or servicing dealer.

RG.RG34710,7543-19-26APR18

Other Lubricants

Transmission and Hydraulic Oil

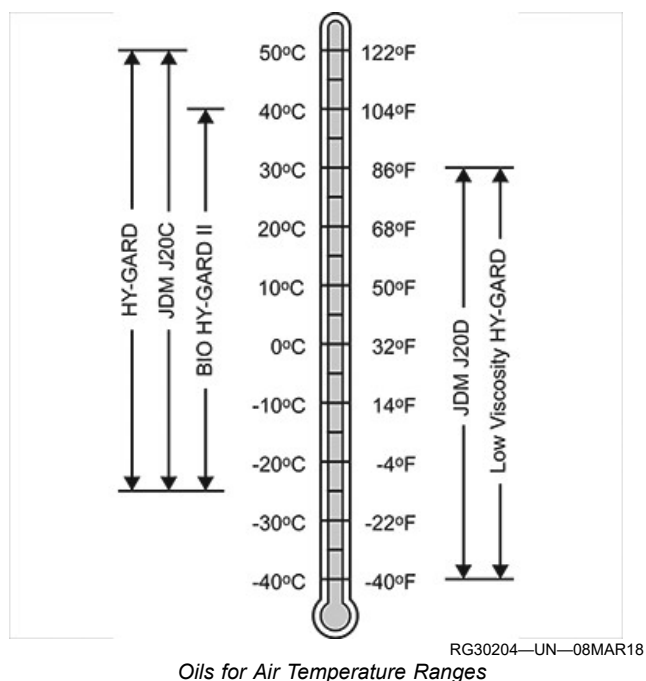

Oils for Air Temperature Ranges

Use an oil viscosity based on the expected air temperature range during the period between oil changes.

The following oils are preferred:

- John Deere Hy-Gard
- John Deere Low Viscosity Hy-Gard

Other oils can be used if they meet one of the following:

- John Deere Standard JDM J20C
- John Deere Standard JDM J20D

Use John Deere Bio Hy-Gard II oil when a biodegradable fluid is required.¹

DX,ANTI(T)-19-04APR22

Transmission and Hydraulic Oil Use

IMPORTANT: To ensure proper shift quality, an oil meeting Hy-Gard or JDM J20C specifications must be used.

Shift quality problems and/or drivetrain damage may occur if the Hy-Gard or JDM J20C specifications are not followed.


¹ Bio Hy-Gard II meets or exceeds the minimum biodegradability of 80% within 21 days according to CEC L-33-T-82 test method. Bio Hy-Gard II must not be mixed with mineral oils because doing this reduces the biodegradability and makes proper oil recycling impossible.

Tractor transmission/axle and hydraulic reservoir is factory filled with John Deere Hy-Gard JDM J20C oil.

EC82310,0000F57-19-29JUN22

Multipurpose Extreme Pressure (EP) Grease

IMPORTANT: For automated lubrication systems, different ambient air temperatures must be considered.

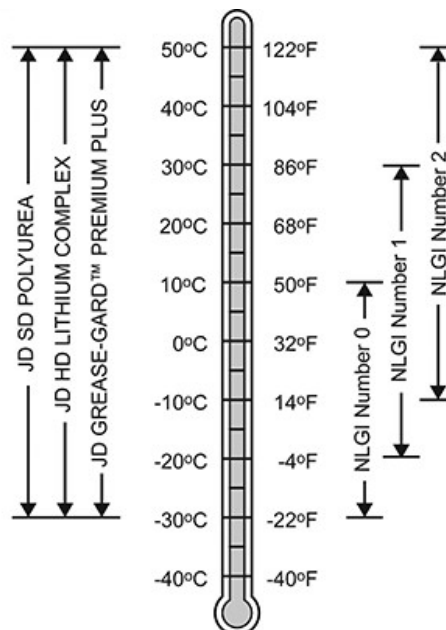

Greases for Air Temperature Ranges

Use grease based on NLGI consistency numbers and the expected air temperature range during the service interval.

John Deere SD Polyurea Grease is preferred.

The following greases are also recommended:

- John Deere HD Lithium Complex Grease
- John Deere Grease-Gard Premium Plus

Other greases may be used if they meet the following:

- NLGI Performance Classification GC-LB
- ISO-L-X-BDHB 2 or DIN KP 2 N-10 Lithium Complex, Non-Synthetic Base Oil (100 to 220 mm²/s @ 40°C)

IMPORTANT: Some types of thickeners, base oils, and additives used in greases are not compatible with others. Mixing greases should be avoided. Consult your grease supplier before mixing different types of grease.

DX,GREA1(T)-19-06APR22

Lubricant Storage

Your equipment can operate at top efficiency only when clean lubricants are used.

Use clean containers to handle all lubricants.

Store lubricants and containers in an area protected from dust, moisture, and other contamination. Store containers on their side to avoid water and dirt accumulation.

Make certain that all containers are properly marked to identify their contents.

Properly dispose of all old containers and any residual lubricant they may contain.

DX,LUBST-19-11APR11

Mixing of Lubricants

In general, avoid mixing different brands or types of oil. Oil manufacturers blend additives in their oils to meet certain specifications and performance requirements.

Mixing different oils can interfere with the proper functioning of these additives and degrade lubricant performance.

Consult your John Deere dealer to obtain specific information and recommendations.

DX,LUBMIX-19-18MAR96

Alternative and Synthetic Lubricants

Conditions in certain geographical areas may require lubricant recommendations different from those printed in this manual.

Some John Deere brand coolants and lubricants may not be available in your location.

Consult your John Deere dealer to obtain information and recommendations.

Synthetic lubricants may be used if they meet the performance requirements as shown in this manual.

The temperature limits and service intervals shown in this manual apply to John Deere branded fluids or fluids that have been tested and/or approved for use in John Deere equipment.

Re-refined base stock products may be used if the finished lubricant meets the performance requirements.

DX,ALTER-19-13JAN18

Service—General Information

Service Sections Overview

CAUTION: Avoid personal injury. After completing any service procedure, reinstall any shields or covers that have been removed and close and securely latch hood.

IMPORTANT: This publication is not a detailed service manual. Procedures shown cover routine maintenance and service. For more detailed service information, purchase a Technical Manual through your John Deere dealer.

Recommended service intervals are for average conditions. Service more often if tractor is operated under adverse conditions.

Service sections provide information on service processes and procedures.

Fuel, Lubrication, and Coolants Sections:

Information on approved fluids for operation and service. Also included are guides to selection of correct service intervals for such procedures as engine oil refill.

Break-In Service: Perform listed services during first 100 hours of operation.

Service—Record Charts: Charts are provided to:

- Determine what service tasks must be performed when.
- Record when services have been performed.

Service Procedure Sections: Various scheduled and unscheduled service procedures are organized by procedure type within six sections. Appropriate Service sections and task names are referenced in Service Record Charts (example: Change: Engine Oil and Filter). Electrical section includes all service information for lighting, fuses, and relays.

Troubleshooting Sections: Procedural troubleshooting is provided, as well as information on dealing with Diagnostic Trouble Codes (DTCs) that may display on the CommandCenter.

RX32825,00000A5-19-21JUN22

Service Tasks Performed As Required

IMPORTANT: Perform service tasks when instruments or tractor function indicates that they are required, even if at a time other than specified in Service Interval charts.

Occasionally, operating conditions may require a scheduled service to be performed sooner than indicated on Service Interval charts (for example, air

filters). When such a task is performed, record its completion in an As Required Service chart.

RX32825,00017C6-19-04JAN17

Identify Tractor Engine Emissions Status


IMPORTANT: To determine tractor engine type, see Engine Serial Number in Identification Number Section of this Operator's Manual.

Some service procedures differ depending upon emissions equipment with which tractor engine is equipped.

RX32825,0001764-19-14DEC16


Open Hood

CAUTION: Avoid injury. Close and latch hood securely before starting engine.

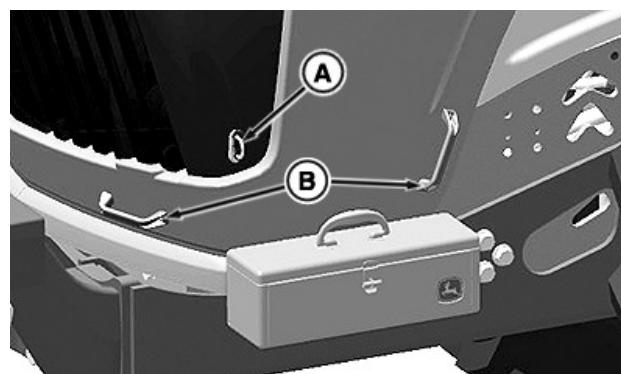

RXA0180112—UN—12OCT20

If Equipped

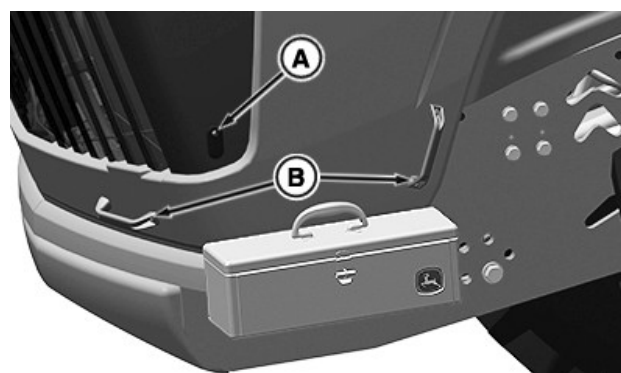


RXA0180141—UN—15OCT20

If Equipped

1. Pull hood release (A).
2. Using hood handles (B), raise hood

JL41210,0000A92-19-21APR21

Open Hood (If Equipped)

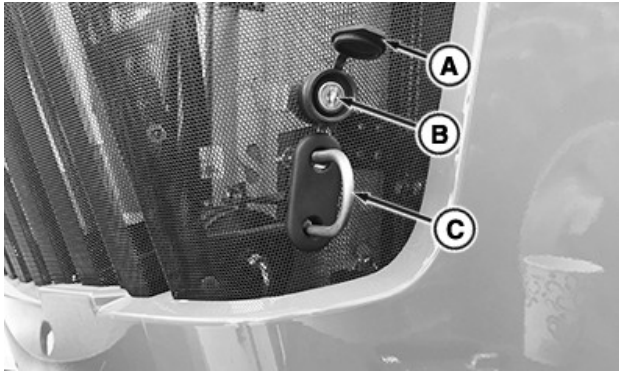

RXA0163079—UN—27APR18

1. Open cover (A) and insert key into lock (B).
2. Turn key clockwise to unlock hood latch (C).
3. Pull hood latch and lift hood to open.

CAUTION: Avoid injury. Close and latch hood securely before starting engine.


4. Close hood and turn key counterclockwise to lock hood latch.

BH38674,0000D20-19-27APR18

Remove Engine Access Panel

CAUTION: Avoid physical injury and equipment damage:

- Never start engine with shields removed or hood open.
- Always close and securely latch hood.

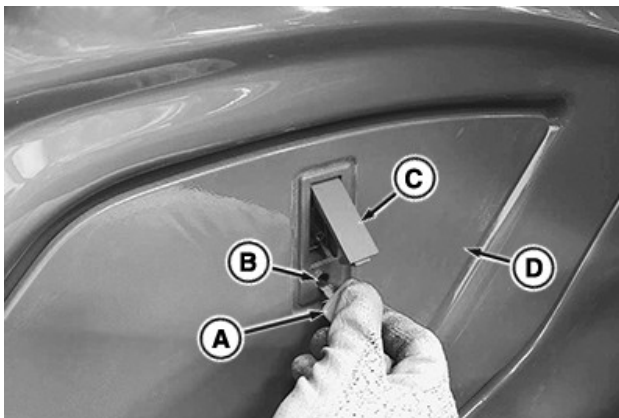

RXA0166820—UN—05MAR19

1. Insert key (A) into the panel lock (B).
2. Panel latch (C) opens.
3. Remove engine access panel (D).


BH38674,0000D1B-19-21APR21

Remove Front Engine Side Shield

CAUTION: Avoid physical injury and equipment damage:

- Never start engine with shields removed or hood open.
- Always close and securely latch hood.

1. Open hood. See Open Hood in this Operators Manual section.

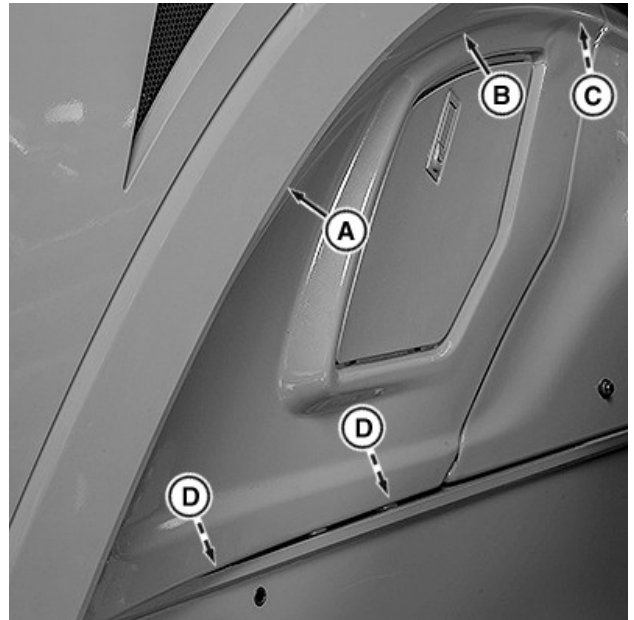

RXA0163065—UN—26APR18

2. Push latch (A).
3. Remove top of engine side shield (B) from magnet (C).
4. Lift engine side shield from alignment posts (D).


BH38674,0000D1C-19-22APR21

Remove Rear Engine Side Shield

CAUTION: Avoid physical injury and equipment damage:

- Never start engine with shields removed or hood open.
- Always close and securely latch hood.

1. Open hood. See Open Hood in this Operator's Manual section.
2. Remove front engine side shield. See Remove Front Engine Side Shield in the Operator's Manual section.

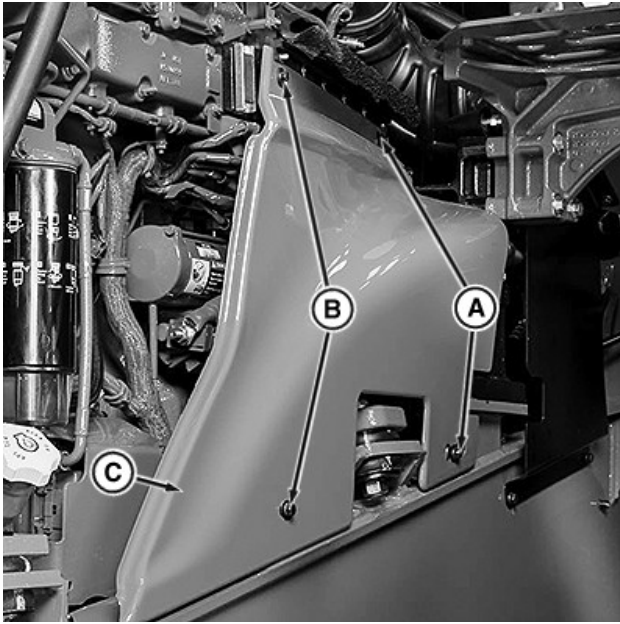


RXA0185233—UN—27AUG21

3. Remove cap screws (A) and (B).
4. Remove rear engine side shield (B).
5. When reinstalling rear engine side shield torque bolts (A) to 37 N·m (37 lb·ft) and (B) to 25 N·m (18 lb·ft).

BH38674,0000D1D-19-27AUG21

Remove Cab Rear Panel

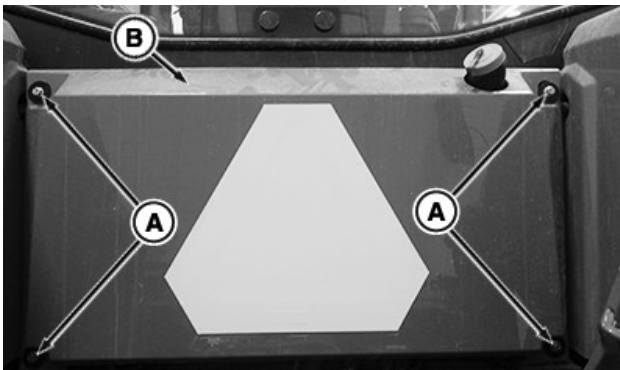


RXA0170334—UN—06SEP19

1. Remove the four rear cab panel screws (A).
2. Remove the cab rear panel (B).

EC82310,0000F61-19-21APR21

Access Battery Compartment


Open the Battery Compartment

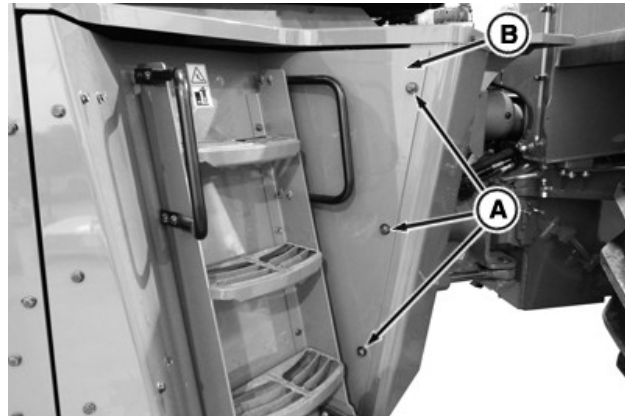

RXA0141965—UN—02JUN14

1. Remove three caps screws (A).
2. Swing open the battery compartment cover (B).

Close the Battery Compartment

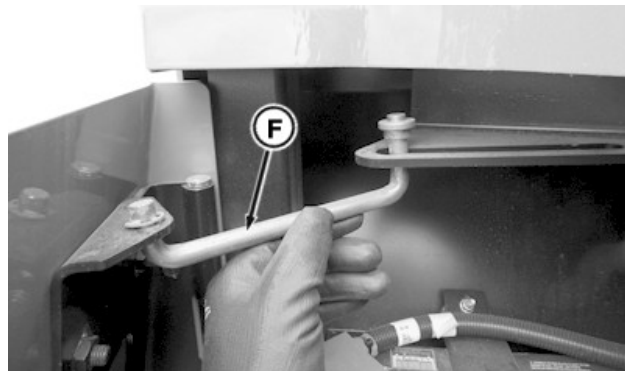


RXA0158218—UN—09MAR17

1. Lift up the battery panel latch (F).
2. Swing the battery compartment cover closed.
3. Reinstall the three cap screws and tighten the cap screws to 73 N·m (54 lb·ft).

EC82310,0000F5B-19-21APR21

Jack Up Tractor—Lifting Points and Support Stand Placement


Install Steering Locks

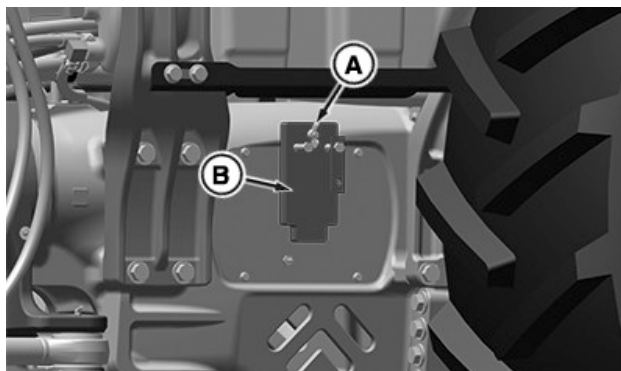

RXA0188394—UN—20DEC22

Steering Lock Stored (left-hand side)

1. Remove the wing nut (A) to remove the steering lock (B) from the storage location.

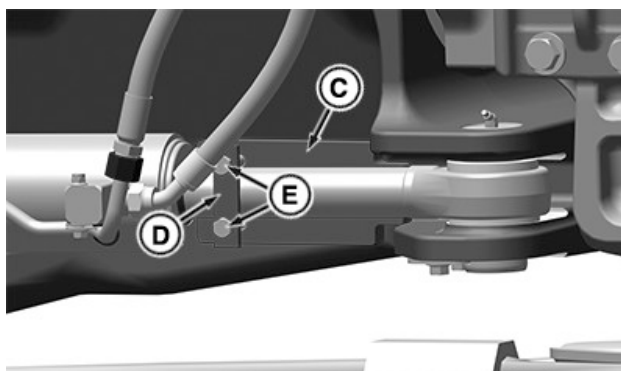

RXA0188395—UN—20DEC22

Steering Lock Installed (left-hand side)

2. Place the plate (C) behind the cylinder.
3. Place the strap (D) in front of the cylinder.
4. Secure the strap to the plate with the cap screws (E).
5. Repeat the procedure on the other side of the tractor.




CAUTION: Avoid injury:

- Use approved lifting equipment only.
- Install oscillation stops to prevent oscillation during axle removal.
- Jack up the tractor on firm and level ground only. Before doing any further work on the tractor, secure it using suitable support stands. The special John Deere tools shown can be used for this purpose. Support stands are available from your John Deere dealer.


Lifting Points

Recommended lifting points for jacking up the tractor. Use appropriate and suitable lifting devices.

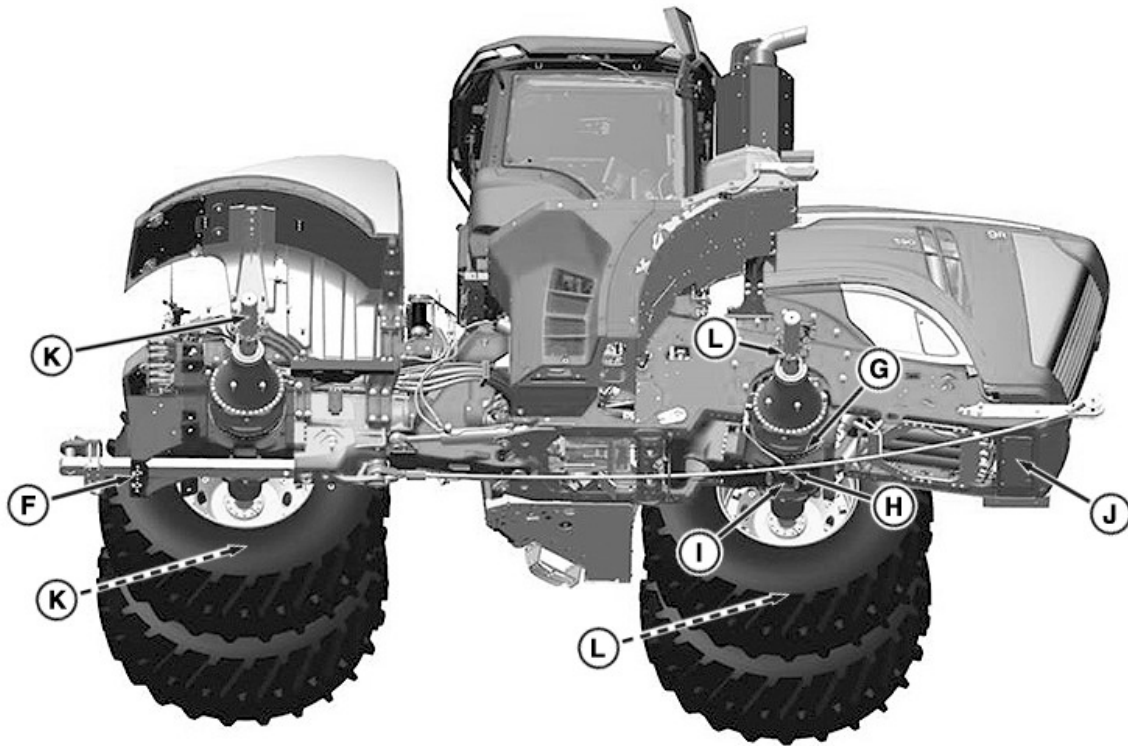

Lift Points (underside with [Ag] drawbar)


RXA0188396—UN—20DEC22

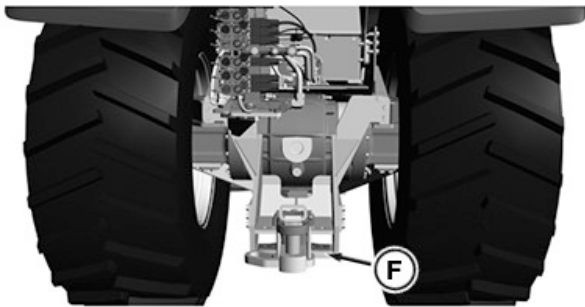

RXA0188397—UN—20DEC22
Lift Points (rear drawbar)



RXA0185735—UN—13OCT21
Lifting Points Label (If Equipped)

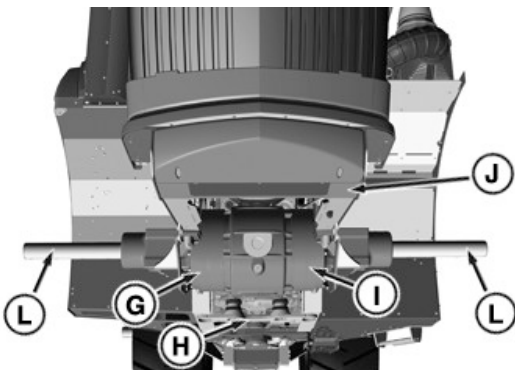

RXA0188398—UN—20DEC22
Lift Points (front)

F—Raise the rear of the tractor (example: to remove the rear wheels)

G—Raise the right-hand side of the front differential (example: to remove the right-hand front wheel)

H—Raise the center of the front differential housing

I—Raise the left-hand side of the front differential (example: to remove the left-hand front wheel)

⚠ CAUTION: Never attempt to lift the tractor using front weights, the front weight support, or the cooling package cleanout cover.

J—Raise the front end of the tractor under the frame

K—Rear axle support stand placement


L—Front axle support stand placement

Support Stand Placement


1. Disconnect the battery ground cable. See Service Batteries and Connectors in Service—Electrical section of this Operator's Manual.

CAUTION: Avoid injury. Always use appropriate equipment to install, change, or uninstall weights. If appropriate equipment is not available, have the job performed by your John Deere dealer.

2. Remove front weights.

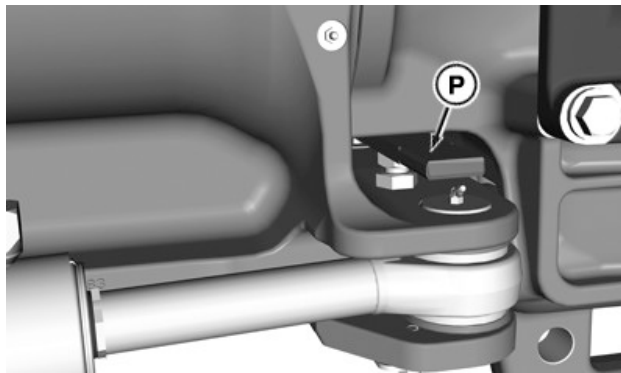


RXA0188399—UN—20DEC22

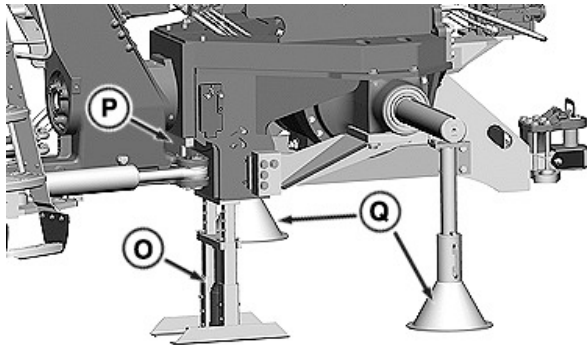

RXA0188401—UN—20DEC22

NOTE: The grease fitting may need to be removed to allow for tool access.

3. Install DFRW254—Gudgeon Oscillation Stops (P) to keep the frame from oscillating.

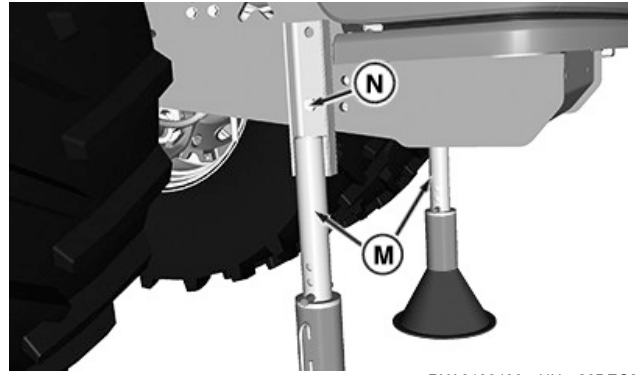


RXA0188400—UN—20DEC22

4. Attach JDG1277A support stands (M) to the front frame with the cap screws (N).
5. Install JT05725 universal support stand (O).
6. Remove the wheels and place JT07211 support stands (Q) under the axles.

EC82310,0000512-19-02MAY23

Service and Connect STC (Snap-to-Connect) Fittings

CAUTION: Do not disconnect STC (Snap-to-Connect) fitting when under pressure. Failure to relieve pressure before disconnecting fitting may result in personal injury, damage to equipment or both.

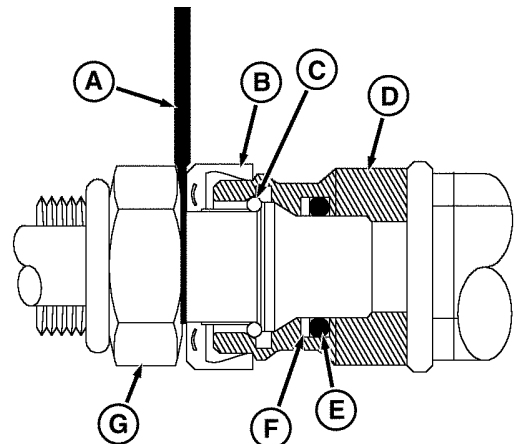

RXA0080095—UN—31MAR05

STC fittings are used on steel lines, hose connections and come in a variety of sizes. JDG1885 STC tool (A) is designed as a spacer to move release ring (B) inward which releases retaining ring (C). Purchase tool from your John Deere dealer.


IMPORTANT: Do not use tool to pry fittings apart. Prying with tool may damage fitting and tool.

NOTE: If retaining ring, back up ring (F) or O-ring (E) are damaged. See your John Deere dealer for replacement kit, and replace all three parts.

1. Insert correct STC tool between release ring and fitting.
2. Remove hose or line from connector.
3. Before connecting STC fitting and mating check surfaces for:
 - Nicks
 - Scratches
 - Flat spots
4. Check for wear or damage:
 - O-ring
 - Back up ring
 - Retaining ring
5. Check for contaminants:
 - Female end (D)
 - Male end (G)
6. Place release ring on male end fitting.
7. Push fitting halves together until a definite snap and solid stop is felt.
8. Pull back on hose to make sure that fitting halves are locked together.

RX32825,000175C-19-23JUN22

High-Pressure Washer Use

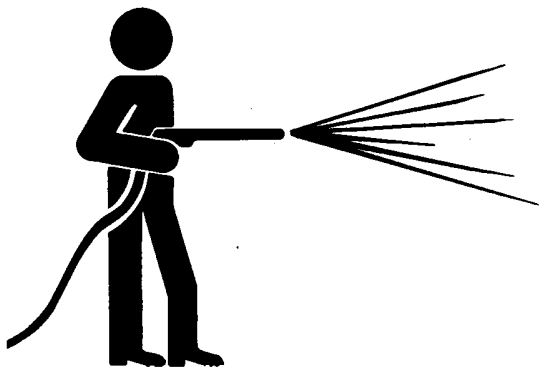

T6642EJ—UN—18OCT88

IMPORTANT: Avoid damage to components. Always use reduced pressure and spray at a 45—90° angle. Never spray pressurized water directly at:

- Electronic/electrical components and connectors.
- Bearings and hydraulic seals.
- Fuel injection pumps.
- Exhaust outlet.
- Engine air intake.
- Fluid tanks' fill openings and breathers.

- Any sensitive parts and components.

RX32825,000175D-19-18JUN19


Transmission Calibration

When to Calibrate

Transmission calibration is recommended when:

- A clutch solenoid or valve is replaced.
- Shift quality has degraded.
- Transmission filters are replaced.
- Transmission hydraulic fluid is changed.
- Transmission system control unit (PTP) is replaced.
- Transmission is removed for maintenance or replaced for any reason.

Check Oil Level and Warm-Up Procedure Before Calibration.

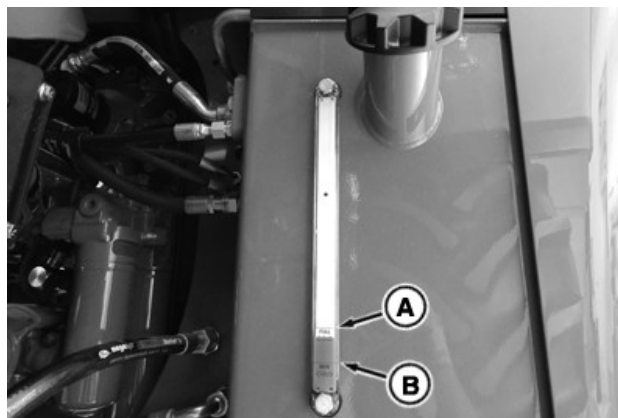

RXA0142195—UN—10JUN14

1. Check oil level sight gauge in hydraulic oil reservoir. Oil level should be between Full Cold (A) and Min. Cold (B) marks.

NOTE: Only calibrate transmission if shift characteristics change after transmission oil and filter change.

Do not perform oil check soon after transporting tractor in 15th or a higher gear.

IMPORTANT: Poor shift quality or transmission damage may occur if incorrect transmission-hydraulic oil is used, see **Transmission and Hydraulic Oil in Other Lubricants** section of this Operator's Manual.

2. Heat hydraulic oil, see Warm-Up Transmission-Hydraulic System in Transmission—General Information section of this Operator's Manual.
3. When oil is at 50°C (122°F), drive to a level surface.

NOTE: DO NOT depress brake pedal during this portion of oil warming procedure. If brake pedal is depressed, additional oil will flow to axles and result in inaccurate oil level reading.

- Shift transmission lever to PARK. Set engine speed at 1800 rpm and run for 5 minutes.

IMPORTANT: Do not operate tractor if oil level is below “Min Cold” mark (B) in sight gauge with engine off.

NOTE: Reduce engine speed to slow idle, shut engine OFF, and wait 5 minutes for oil to stabilize.

CAUTION: Perform transmission calibration with tractor in an open, outdoor area on flat ground. Do not permit others near tractor during procedure.

Verify park brake is functioning properly.

While calibrating, remain in the operator's seat. Depending on transmission-hydraulic oil temperature at start of procedure, calibration typically takes 12-15 minutes.

IMPORTANT: Serious damage to transmission may result if oil level is inadequate.

- Make sure Efficiency Manager is disabled.




RXA0142149—UN—10JUN14



RXA0142150—UN—10JUN14


- Press Menu (A) and System tab (B).

- Select Diagnostic Center icon (C).

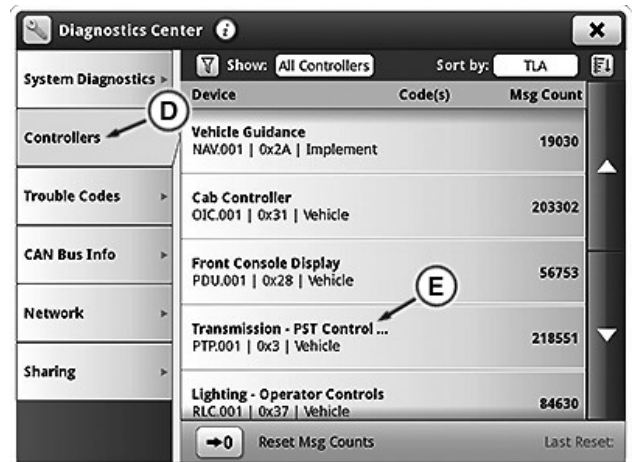

RXA0174962—UN—11FEB20


- Select Controllers tab (D).
- Select Transmission-PST Control (PTP.001) (E) from list.

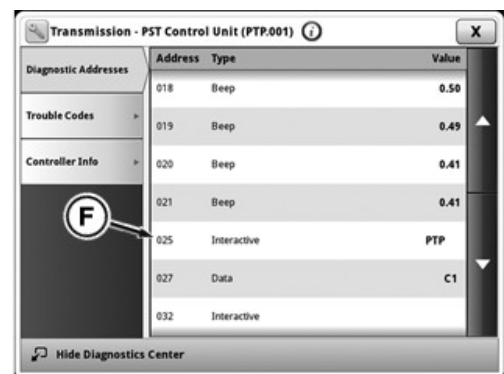

RXA0174963—UN—11FEB20

- Select Address 025 (F) in drop-down menu.


CAUTION: Leave shift lever in PARK. Placing shift lever in F or R results in tractor movement.

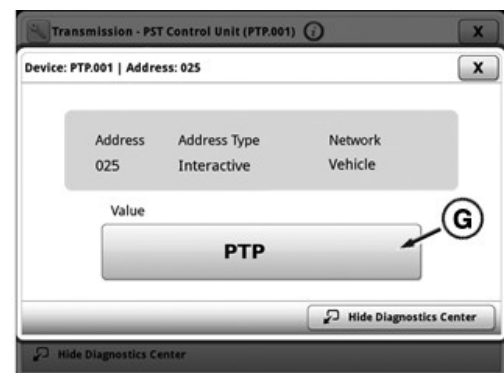

RXA0174964—UN—11FEB20

- PTP should appear on CommandCenter display. Press PTP (G).

IMPORTANT: Do not leave seat. Operator presence must be detected in this step to allow calibration to continue.

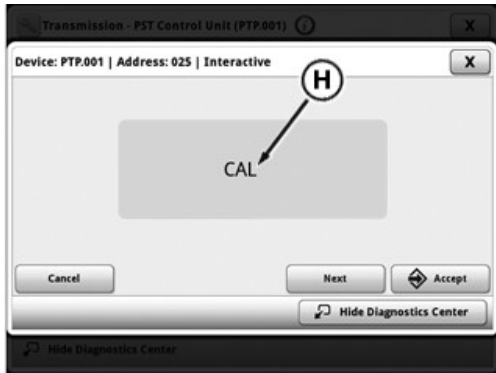

RXA0174965—UN—11FEB20


12. When CAL (H) appears on CommandCenter display, transmission calibration is ready to begin.
13. Adjust throttle to 1650 engine rpm.

CAUTION: If “P” is NOT displayed on corner post display, do not proceed with calibration. Leave shift lever in PARK. Lever movement to F position will result in unintended tractor movement. Return to Step 2.

14. Move shift lever to N position. P should be displayed on the corner post PDU display.
15. Move shift lever to F position to start calibration.
16. If CLD appears, transmission oil temperature has dropped to less than 50°C (122°F) PTP will halt calibration until temperature has increased sufficiently to allow calibration to restart. If oil temperature (available in PTP Address 33) is more than a few degrees below 50°C (122°F), manually heat oil.


NOTE: Once calibration begins, do not manually change throttle position, move shift lever, or depress clutch pedal. Calibration will be aborted.

NOTE: If calibration aborts due to a fault (for example: no engine or transmission activity is heard for a period of 30 seconds or longer), a three-letter fault message is displayed. Record code. Another calibration attempt may be made if desired, see Abort Transmission Calibration in this section of this Operator's Manual.

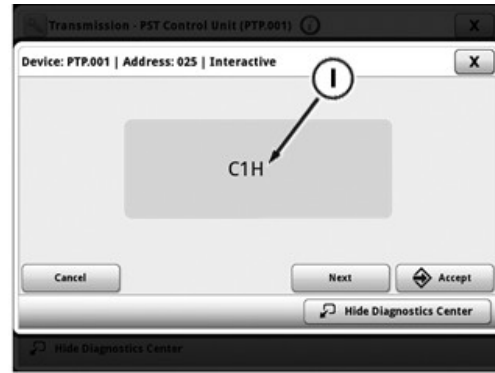

RXA0174966—UN—12FEB20

17. When calibration starts, C1H (I) appears. C1H indicates Clutch 1 Hold calibration is in progress. As calibration continues, clutch hold calculations for clutches C2, CR, CA, CB, CC, CL, CM, and CH follows. Display indicates which step is being performed during process.
18. When all nine clutch hold stage calibrations are complete, C1F displays as next phase of calibration begins. C1F indicates that Clutch 1 Fill time calibration is in progress. As calibration continues, clutch fill calculations for clutches C2, CR, CA, CB, CC, CM, and CH follows. Display indicates which step is being performed during process.

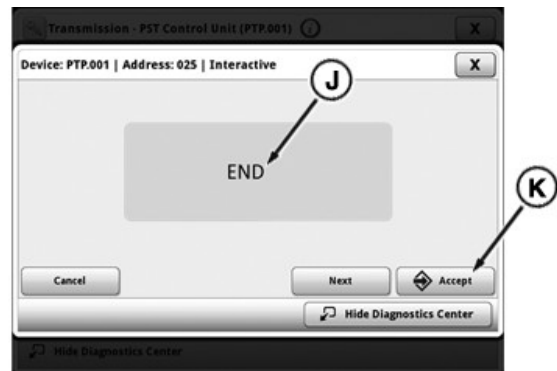

RXA0174967—UN—12FEB20

19. When END (J) appears, calibration is complete.

NOTE: Use correct calibration exit procedure to avoid generating unnecessary Diagnostic Trouble Codes (DTCs).

20. Move shift lever from F to PARK.
21. Throttle down.
22. Press Accept (K) to save and exit calibration.

NOTE: Display shows instructions for operator and malfunctions that have occurred. If a malfunction is displayed during calibration, new data is not stored.

23. Turn off the engine. PTP will store new calibration.

Calibration Fault	Meaning	Instruction
CLD	Transmission oil is below 50°C (122°F). Automatic warm-up is in progress.	No action required. Wait for automatic warm-up to warm oil to 50°C (122°F). Calibration begins automatically once temperature is reached.
OIL	Transmission oil temperature is below minimum temperature of 10°C (50°F) to begin automatic warm-up.	Manually heat hydraulic oil to 50°C (122°F), see manual Warm-up for Calibration at beginning of this section.
SPD	Engine speed is not within required range of 1600-1700 rpm to begin or continue calibration.	Set engine speed to 1650 rpm.
CLU	Clutch pedal is not UP or was depressed by operator during calibration.	Make sure that clutch pedal is fully UP, and do not depress during calibration.
NOP	Operator is not in seat when calibration is initiated.	Remain seated during transmission calibration.
FLT	Transmission oil filters are restricted.	Replace transmission filters. Retry calibration after filter replacement.

SV81855,0000256-19-12JUL22

Abort Transmission Calibration

PTP aborts calibration, and makes no changes to stored calibration values from last complete calibration if:

- Significant tractor motion is detected
- Address number is incremented or decremented by operator
- System detects problem during calibration
- Shift lever is moved out of gear
- Engine speed moves above or below calibration limits

If calibration aborts, transmission system reverts to last good calibration. If recalibration is still required, a new calibration procedure must be started. Calibration cannot be restarted from point at which it stopped.

SV81855,0000257-19-20JAN15

Do Not Modify Fuel System

IMPORTANT: Increasing horsepower, or altering any aspect of fuel and air delivery on emissions certified engines beyond factory rating, causes emission levels beyond what is approved by United States Environmental Protection Agency (EPA) or equivalent agency. Violations of regulations may result in substantial fines to persons or companies committing such violations.

Tractor warranty is void if power level is changed from factory specifications.

Do not attempt to service injection pump or fuel injectors yourself. Special training and special tools are required. See your John Deere dealer.

RX32825,000175E-19-01AUG17


Bleed Fuel System

If Diagnostic Trouble Code (DTC) indicates fuel system problem, and fuel system and filters are found to be correct - or if (even without a DTC present) tractor does not run correctly or fails to start, fuel injection system may need to be bled of air.

1. Turn key switch to run position. Electric fuel pump starts and bleeds air from the fuel system.
2. Allow pump to run for 30 seconds to 1 minute before attempting to restart engine. If the problem persists, see your John Deere dealer.

SV81855,00001F2-19-05MAR19

Identify Zinc-Flake Coated Fasteners

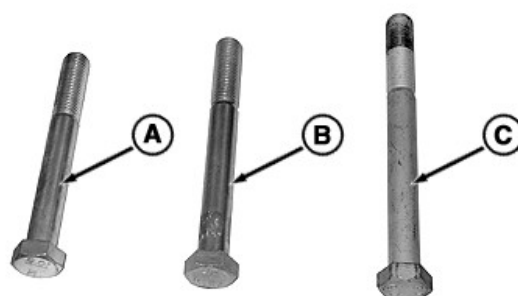

RXA0073812—UN—03MAR04

Standard cap screws (A) are of a reflective silver color.


Zinc Plated cap screws (B) are of a reflective bright silver or gold color.

Zinc-Flake Coated cap screws (C) are of a dull silver, gold, or black color.

NOTE: Zinc-Flake Coated fasteners are tightened to lubricated specifications, unless otherwise noted. See Torque Value Charts in this Operator's Manual section.

RX32825,0001761-19-31OCT22

Metric Bolt and Screw Torque Values

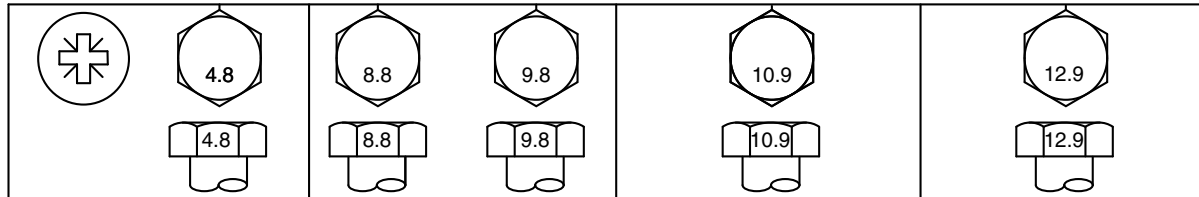


TS1742—UN—31MAY18

Bolt or Screw Size	Class 4.8				Class 8.8 or 9.8				Class 10.9				Class 12.9			
	Hex Head ^a		Flange Head ^b		Hex Head ^a		Flange Head ^b		Hex Head ^a		Flange Head ^b		Hex Head ^a		Flange Head ^b	
	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in
M6	3.6	31.9	3.9	34.5	6.7	59.3	7.3	64.6	9.8	86.7	10.8	95.6	11.5	102	12.6	112
									N·m	lb·ft	N·m	lb·ft	N·m	lb·ft	N·m	lb·ft
M8	8.6	76.1	9.4	83.2	16.2	143	17.6	156	23.8	17.6	25.9	19.1	27.8	20.5	30.3	22.3
			N·m	lb·ft	N·m	lb·ft	N·m	lb·ft								
M10	16.9	150	18.4	13.6	31.9	23.5	34.7	25.6	46.8	34.5	51	37.6	55	40.6	60	44.3
	N·m	lb·ft														
M12	—	—	—	—	55	40.6	61	45	81	59.7	89	65.6	95	70.1	105	77.4
M14	—	—	—	—	87	64.2	96	70.8	128	94.4	141	104	150	111	165	122
M16	—	—	—	—	135	99.6	149	110	198	146	219	162	232	171	257	190
M18	—	—	—	—	193	142	214	158	275	203	304	224	322	245	356	263
M20	—	—	—	—	272	201	301	222	387	285	428	316	453	334	501	370
M22	—	—	—	—	365	263	405	299	520	384	576	425	608	448	674	497
M24	—	—	—	—	468	345	518	382	666	491	738	544	780	575	864	637
M27	—	—	—	—	683	504	758	559	973	718	1080	797	1139	840	1263	932
M30	—	—	—	—	932	687	1029	759	1327	979	1466	1081	1553	1145	1715	1265
M33	—	—	—	—	1258	928	1398	1031	1788	1319	1986	1465	2092	1543	2324	1714
M36	—	—	—	—	1617	1193	1789	1319	2303	1699	2548	1879	2695	1988	2982	2199

The nominal torque values listed are for general use only with the assumed wrenching accuracy of 20%, such as a manual torque wrench. DO NOT use these values if a different torque value or tightening procedure is given for a specific application. For lock nuts, for stainless steel fasteners, or for nuts on U-bolts, see the tightening instructions for the specific application.

Replace fasteners with the same or higher property class. If higher property class fasteners are used, tighten these to the strength of the original.

- Make sure that fastener threads are clean.
- Apply a thin coat of Hy-Gard or equivalent oil under the head and on the threads of the fastener, as shown in the following image.
- Be conservative with the amount of oil to reduce the potential for hydraulic lockup in blind holes due to excessive oil.
- Properly start thread engagement.

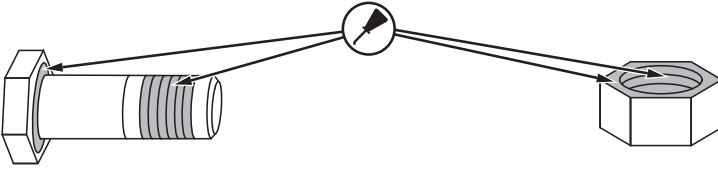
Bolt or Screw Size	Class 4.8		Class 8.8 or 9.8		Class 10.9		Class 12.9	
	Hex Head ^a	Flange Head ^b	Hex Head ^a	Flange Head ^b	Hex Head ^a	Flange Head ^b	Hex Head ^a	Flange Head ^b
								

TS1741—UN—22MAY18

^aHex head column values are valid for ISO 4014 and ISO 4017 hex head, ISO 4162 hex socket head, and ISO 4032 hex nuts.^bHex flange column values are valid for ASME B18.2.3.9M, ISO 4161, or EN 1665 hex flange products.

DX,TORQ2(T)-19-09MAY22

Unified Inch Bolt and Screw Torque Values

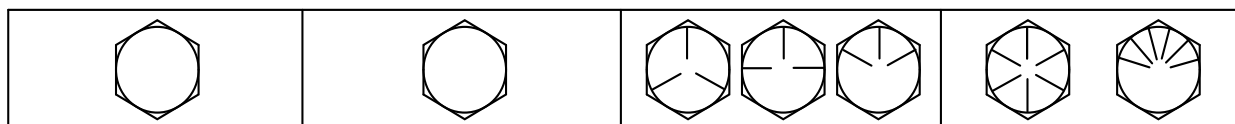

TS1671—UN—01MAY03


Bolt or Screw Size	SAE Grade 1 ^a				SAE Grade 2 ^b				SAE Grade 5, 5.1 or 5.2				SAE Grade 8 or 8.2			
	Hex Head ^c		Flange Head ^d		Hex Head ^c		Flange Head ^d		Hex Head ^c		Flange Head ^d		Hex Head ^c		Flange Head ^d	
	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in
1/4	3.1	27.3	3.2	28.4	5.1	45.5	5.3	47.3	7.9	70.2	8.3	73.1	11.2	99.2	11.6	103
													N·m	lb·ft	N·m	lb·ft
5/16	6.1	54.1	6.5	57.7	10.2	90.2	10.9	96.2	15.7	139	16.8	149	22.2	16.4	23.7	17.5
									N·m	lb·ft	N·m	lb·ft				
3/8	10.5	93.6	11.5	102	17.6	156	19.2	170	27.3	20.1	29.7	21.9	38.5	28.4	41.9	30.9
					N·m	lb·ft	N·m	lb·ft								
7/16	16.7	148	18.4	163	27.8	20.5	30.6	22.6	43	31.7	47.3	34.9	60.6	44.7	66.8	49.3
	N·m	lb·ft	N·m	lb·ft												
1/2	25.9	19.1	28.2	20.8	43.1	31.8	47	34.7	66.6	49.1	72.8	53.7	94	69.3	103	75.8
9/16	36.7	27.1	40.5	29.9	61.1	45.1	67.5	49.8	94.6	69.8	104	77	134	98.5	148	109
5/8	51	37.6	55.9	41.2	85	62.7	93.1	68.7	131	96.9	144	106	186	137	203	150
3/4	89.5	66	98	72.3	149	110	164	121	230	170	252	186	325	240	357	263
7/8	144	106	157	116	144	106	157	116	370	273	405	299	522	385	572	422
1	216	159	236	174	216	159	236	174	556	410	609	449	785	579	860	634
1-1/8	305	225	335	247	305	225	335	247	685	505	751	554	1110	819	1218	898
1-1/4	427	315	469	346	427	315	469	346	957	706	1051	775	1552	1145	1703	1256
1-3/8	564	416	618	456	564	416	618	456	1264	932	1386	1022	2050	1512	2248	1658
1-1/2	743	548	815	601	743	548	815	601	1665	1228	1826	1347	2699	1991	2962	2185

The nominal torque values listed are for general use only with the assumed wrenching accuracy of 20%, such as a manual torque wrench. DO NOT use these values if a different torque value or tightening procedure is given for a specific application. For lock nuts, for stainless steel fasteners, or for nuts on U-bolts, see the tightening instructions for the specific application.

Replace fasteners with the same or higher property class. If higher property class fasteners are used, tighten these to the strength of the original.

- Make sure that fastener threads are clean.
- Apply a thin coat of Hy-Gard or equivalent oil under the head and on the threads of the fastener, as shown in the following image.
- Be conservative with the amount of oil to reduce the potential for hydraulic lockup in blind holes due to excessive oil.
- Properly start thread engagement.

Service—General Information

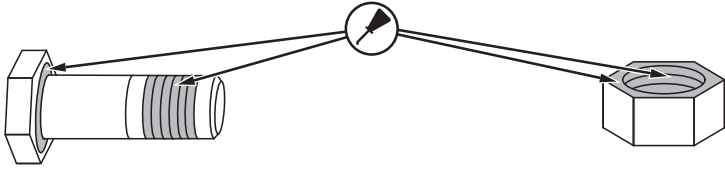Bolt or Screw Size	SAE Grade 1 ^a		SAE Grade 2 ^b		SAE Grade 5, 5.1 or 5.2		SAE Grade 8 or 8.2	
	Hex Head ^c	Flange Head ^d	Hex Head ^c	Flange Head ^d	Hex Head ^c	Flange Head ^d	Hex Head ^c	Flange Head ^d
								

TS1741—UN—22MAY18

^aGrade 1 applies for hex cap screws over 6 in (152 mm) long, and for all other types of bolts and screws of any length.

^bGrade 2 applies for hex cap screws (not hex bolts) up to 6 in (152 mm) long.

^cHex head column values are valid for ISO 4014 and ISO 4017 hex head, ISO 4162 hex socket head, and ISO 4032 hex nuts.

^dHex flange column values are valid for ASME B18.2.3.9M, ISO 4161, or EN 1665 hex flange products.

DX,TORQ1(T)-19-09MAY22

Service—Break-In (100 Hours or Less)

Perform Break-In Services

IMPORTANT: Initial break-in service interval of a new or rebuilt wet sleeve engine with John Deere Break-In Plus must last at least 100 hours to assure surface mating of rings and liners has had an opportunity to occur. The minimum interval of 100 hours applies to all new or rebuilt John Deere engines. Maximum service interval is the same as service interval recommended for your engine listed in Engine Oil and Filter Service Intervals for your engine. For subsequent oil changes, see Engine Oil and Filter Service Intervals for your engine in Engine Oil section of this Operator's Manual.

IMPORTANT: Avoid drivetrain damage. Operate tractor at low speeds (below 10 mph (16 km/h)) for first 6 hours. See Lower Drive Line Bearings in Service—Lubricate section of this Operator's Manual.

General Break-In

The engine is ready for normal operation. During first 100 hours of operation:

- Operate engine at heavy loads without reaching sustained maximum load.
- Avoid idling engine longer than 5 minutes. If engine idles longer than 5 minutes, stop engine.
- Closely observe coolant temperature during operation.
- Check engine air intake system hoses and clamps. See Service—Check section of this Operator's Manual.
- Check for fluid leaks.
- Tighten wheel, wheel weights, and axle bolts after 3 hours, after 10 hours, and daily for first week of operation. See Service—Tighten section of this Operator's Manual.

Daily or 10 Hours Service

Before performing normal daily or 10 hours services, see 10 Hour or Daily Service in Service—Record Charts section of this Operator's Manual.

For first 100 hours of tractor operation, also perform these additional services daily or every 10 hours:

- Drain water separator. See Water Separator in Service—Check section of this Operator's Manual.
- Check coolant level. See Service—Check section of this Operator's Manual.
- Lubricate hitch (if equipped) components. See Service—Lubricate section of this Operator's Manual.
- Inspect tires to make sure that there are no cuts or

punctures. See Tires in Service—Check section of this Operator's Manual.

After service is performed, reset appropriate service interval hours on display to zero. See Service Intervals in the CommandCenter section of this Operator's Manual.

After the break-in period, use John Deere Plus-50 II or other diesel engine oil as recommended in this Operator's Manual.

TO84419,00000A8-19-15JUN22

Service—Record Charts

Service Record Chart Overview

The service record chart is provided to:

- Record when services have been performed.
- Document additional service details as needed.

Suggested Documentation

- **Engine Oil and Filter Change:** Indicate which oil was used for refill and record date and hours of operation at each service.
- **As Required Service:** Record services and repairs that are performed at other than regular service intervals.
- **Yearly Service:** The listed service tasks are performed annually or at some multiple of years. Record service date and hours.

10-hour (Daily) and 50-hour Service Tasks

It is not recommended to record 10-hour (daily) and 50-hour service tasks on the service record chart. If desired, record the completion of these services in a separate notebook.

Service Interval Chart

Charts show which service tasks must be completed at what engine operating hours or years. If a service task indicates a year and an hourly interval, adhere to whichever interval occurs first. Perform service on items at multiples of the original requirement.

First word of each task title (For example: CHECK or LUBRICATE) directs the person performing service to the appropriate Service Procedure section in this Operator's Manual. Upon completion of a service task, verify that there are no additional tasks to perform at the same time.

Record service tasks when completed on the Service Record Chart found in this section of this Operator's Manual.

Use the engine hour meter display to determine when service must be performed. The hour meter operates whenever the engine is running and shows the accumulated hours of engine operation. Although the hour meter is factory set to 250 hours, it can be reset to any desired elapsed time. See Service Intervals in CommandCenter section of this Operator's Manual.

RX32825,0000022-19-05APR21

Service Task	Operating Hours or Interval											
	Year/s	As Re-quired	Daily or 10	50	250	500	1000	1500	3000	4000	5000	6000
CHECK engine oil level			•									
CHECK transmission-hydraulic and axle oil levels			•									
DRAIN fuel water separator			•									
CHECK tires				•								
LUBRICATE hinge pins			^a	•								
LUBRICATE steering pins			^a	•								
LUBRICATE heavy duty lift link pins [Ag] ^b				•								
LUBRICATE hose support bracket [Scraper]				•								
LUBRICATE lower drive line bearings			^a		•							
LUBRICATE rear hitch				^c	•							
CHECK secondary brake ^d					•							
CHECK transmission PARK system					•							
LUBRICATE heavy-duty gudgeon bearings					•							
LUBRICATE PTO drive shaft [Ag] ^d					•							
LUBRICATE HydraCushion front axle suspension ^d			^a			•						
CHANGE engine oil and filter ^e	1					•						
CHANGE fuel filters ^f						•						
CHANGE optional fuel water separator filter						•						
TIGHTEN wheel and wheel weight bolts						•						
TIGHTEN drawbar support cap screws						•						
CHECK engine air intake system						•						

Service—Record Charts

Service Task	Operating Hours or Interval											
	Year/s	As Re- quired	Daily or 10	50	250	500	1000	1500	3000	4000	5000	6000
CHECK water pump weep hole						•						
CLEAN dual beam radar sensor ^d							•					
CHECK engine coolant freeze point	1						•					
CHANGE cab recirculation air filter	1						•					
CHANGE cab fresh air filter	1						•					
CHANGE engine primary and secondary air filters	1						•					
CHANGE DEF dosing unit filter ^g	3							•				
CALIBRATE transmission								•				
CHANGE fuel tank vent filter								•				
CHANGE SCV pilot valve filter								•				
CHANGE hydraulic system oil and filters								•				
CHANGE transmission hydraulic vent filter								•				
CHECK auxiliary drive belt and drive belt tensioner								•				
CHECK axle end play ^h								•				
CHANGE DEF tank vent filter ^g								•				
CHANGE DEF in-line filter ^g	3								•			
CHANGE engine crankshaft damper ^h											•	
CHECK engine brake ^h											•	
CHANGE engine coolant ⁱ	6											•
CHECK Drawbar Sensor Calibration [Scraper] ^h	1											
CHECK HydraCushion suspended front axle accumulator charge pressure ^h	1											
ELECTRIC service batteries and connections	1											
CHECK seat belts	1											
CLEAN engine and exhaust area for debris		•										
CLEAN Implement Connector		•										

^aIf used in severe duty/scrapper applications or extremely wet conditions, lubricate daily or every 10 operating hours.

^bIf hitch is in use.

^cNormal lubrication is every 250 operating hours. If used daily, lubricate every 50 operating hours.

^dIf equipped.

^eService in accordance with information in appropriate Diesel Oil and Filter Service Intervals topic in Engine Oil section of this Operator's Manual. Record oil used in Service—Record Charts - Engine Oil and Filter.

^fChange every 500 operating hours or as indicated, whichever occurs first.

^gFinal Tier 4/Stage V engine

^hSee your John Deere dealer.

ⁱINITIAL change interval is 6 years or 6000 operating hours, provided cooling system is topped off using only John Deere Cool-Gard II and premix. SCHEDULED interval (2 years or 2000 operating hours) can be extended up to 6 years and 6000 operating hours, depending upon coolant being used. See Drain Intervals for Diesel Engine Coolant in Engine Coolant section of this Operator's Manual.

JL41210,0000A76-19-25JAN23

Service Record Chart

Record details of service intervals in the space provided. If more space is required, use a separate notebook.

Date	Hours	Notes

[illegible][illegible]

Service—Record Charts

[illegible][illegible]

EC82310,0000B12-19-05AUG20

Service—Clean

Cleaning Diesel Exhaust Fluid (DEF) Tank

CAUTION: Avoid contact with eyes. In case of contact, immediately flush eyes with large amounts of water for a minimum of 15 minutes. Reference the Materials Safety Data Sheet (MSDS) for additional information.

IMPORTANT: If DEF is spilled or contacts any surface other than the storage tank, immediately clean the surface with clear water. DEF is corrosive to painted and unpainted metallic surfaces and can distort some plastic and rubber components.

Spilled DEF, if left to dry or if only wiped away with a cloth, leaves a white residue. Improperly cleaned DEF spill can interfere with diagnosis of Selective Catalytic Reduction (SCR) system leakage problems.

If foreign material or fluid has been added to the DEF tank, drain the DEF tank, flush, and fill with new DEF.

If DEF quality is in question, pull a sample out of the DEF tank and place into a clear container. DEF should be crystal clear with a light ammonia smell. If DEF appears cloudy, has a colored tint, or has a profound ammonia smell, it is likely not within specification. DEF in this condition should not be used.

1. Remove drain plug (if equipped), and drain or siphon bad DEF from DEF tank.

NOTE: Cleaning can take place with DEF tank installed or removed.

2. Clean DEF tank with new DEF.

DEF must pass visual, smell, and concentration checks before running the engine. See Diesel Exhaust Fluid (DEF) – For Use In Selective Catalytic Reduction (SCR) Equipped Engines in the Fuels, Lubricants, and Coolants Section for more information.

3. Drain or siphon DEF tank.

NOTE: Repeat steps 2—3 until DEF tank has been cleaned.

4. **Early version:** Change DEF dosing unit filter and DEF tank header suction screen.

Later version: Change DEF dosing unit filter and DEF inline filter.

5. If removed, install DEF tank drain plug.

6. If removed, install DEF tank.

7. Fill DEF tank with new DEF.

8. Check DEF concentration with DEF refractometer, such as JDG11594 or JDG11684. The correct DEF

concentration is 31.8% — 33.2%. See your authorized dealer for more information.

9. If DEF is not within specification, does not appear clear, or does not have a slight ammonia smell, contact your authorized dealer.

DX,DEF,CLEANTANK-19-18SEP19

DEF Tank Filler Neck Filter


If DEF fill slows, clean tank filler neck filter.

1. Place transmission in Park and shut off engine.



RXA0167615—UN—23APR19

2. Open DEF tank cap (A).

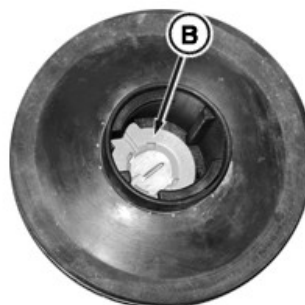

RXA0180368—UN—04NOV20

3. Turn filter retainer (B) counterclockwise until it unlocks, then pull straight out of DEF tank.



RXA0180369—UN—04NOV20

4. Clean filler neck filter (C) with warm water to remove any debris.

5. Install in reverse order.

SV81855,000027F-19-31AUG21

Tractor Exterior

IMPORTANT: Avoid damage to the engine, components, and tractor exterior.

- **Never direct liquid spray to the engine air intake area. If water is sprayed into the engine air intake, drain filter housing and allow housing and filter to dry before starting engine.**
- **For high-pressure washer use: always use reduced pressure and spray at a 45—90° angle. Never spray pressurized water directly at:**
 - Electronic/electrical components and connectors.
 - Bearings and hydraulic seals.
 - Fuel injection pumps.
 - Exhaust outlet.
 - Engine air intake.
 - Fluid tanks' fill openings and breathers.
 - Any sensitive parts and components.
- **Never use strong soaps, chemical detergents, or cleaning agents containing acids, caustics, or abrasives. It is best to use commercially available non-detergent car wash products which will not remove protective wax, and which may be applied to paint finish.**
- Wash tractor regularly, particularly if it has been exposed to herbicides, pesticides, road salt, or other chemical agents.
- Never wash the tractor in direct sunlight.
- Rinse all cleaning agents away promptly. Never allow them to dry on the painted surface.
- Waxing tractor occasionally is recommended to remove residue from and further protect paint finish. Never use waxes containing abrasive compounds.
- Inspect paint surface during washing or waxing for chips and scratches. Repaint any areas where paint has been damaged.

See your John Deere dealer for cleaners, waxes, and touch-up paints to help enhance paint finishes and which are compatible with your equipment.

RX32825,0001777-19-21APR21

Clean Display

IMPORTANT: Always clean display screen with power off. Cleaning screen while operating could result in unintended button selections.

To clean display, power down and wipe screen with a soft cloth sprayed with a non-ammonia based cleaner, such as John Deere glass or multipurpose cleaner.

DX,PC,CLEAN,DISP-19-21OCT16

Engine Cooling System


Turn engine off.



RXA0180466—UN—19NOV20

Clean grille screen (A) using a brush or compressed air.


Clean trash from engine compartment shields.

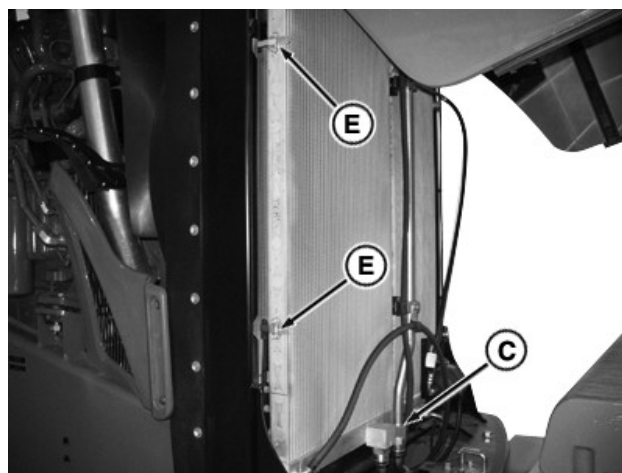

RXA0160457—UN—10AUG17

IMPORTANT: Use caution when oil cooler is opened. Rubber hose may contact air conditioner line when cooler is at a 30° angle and can cause damage to the lines if extended too far.

Release hood latch and raise hood.

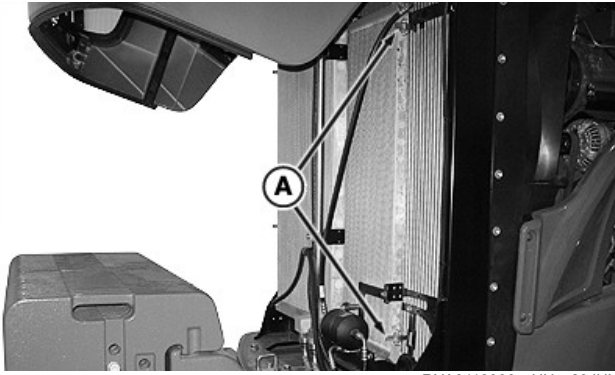

RXA0118336—UN—23JUN11

Release air conditioning condenser retaining clips (A) to swing condenser forward for better cleaning access.



RXA0118338—UN—23JUN11

Use compressed air to clean air conditioning condenser (B).



RXA0118333—UN—23JUN11

Release oil-fuel cooler retaining clips (E) to swing cooler (D) forward.

Use compressed air to clean radiator. Straighten any bent radiator fins.

Close air conditioning condenser and oil cooler and lock the retaining clips.

Gently lower hood and firmly close until hood latch is locked.

TO84419,000017F-19-03FEB22

Engine Cooling System

Turn off engine.




RXA0180466—UN—19NOV20


Clean grille screen (A) using a brush or compressed air.

Clean trash from engine compartment shields.

Release hood latch and raise hood.

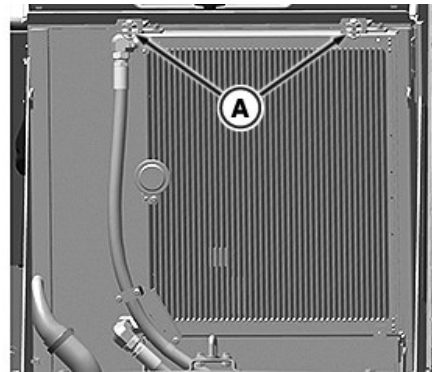


RXA0180111—UN—12OCT20

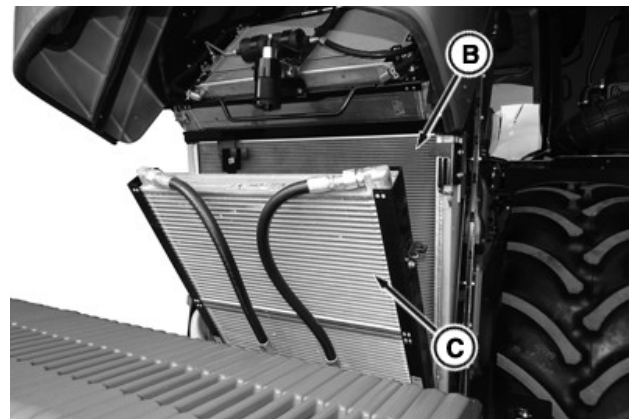

RXA0141760—UN—02JUN14

Release oil cooler (C) retaining pins (A) to lower oil cooler forward carefully for easier cleaning access.


Use compressed air to clean oil cooler and radiator (B).

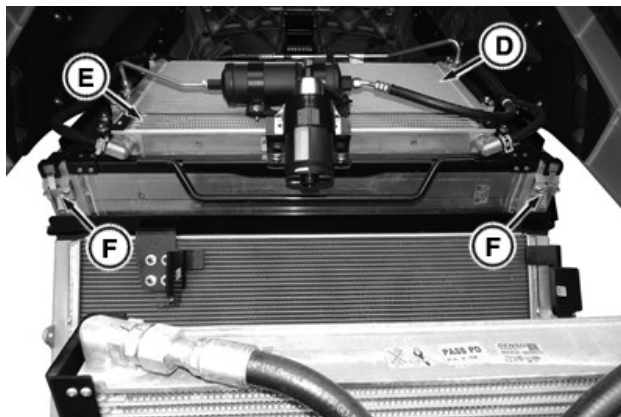

RXA0141818—UN—02JUN14

Release retaining pins (F) and lift air conditioning condenser (D) and fuel cooler (E) up for easier cleaning access.

Use compressed air to clean air conditioning condenser and fuel cooler.

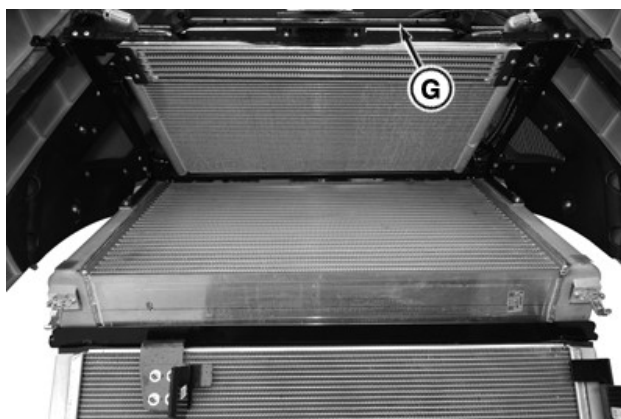

RXA0141819—UN—02JUN14

Close air conditioning condenser and oil-fuel cooler using handle (G). Pull air conditioning condenser and fuel cooler out to unlock and lower carefully. Lock retaining pins.

Lift oil cooler up and lock retaining pins.

Gently lower hood and firmly close until hood latch is locked.

SV81855,000028B-19-07FEB22


Dual Beam Radar Sensor

IMPORTANT: Inspect radar sensor horns for dirt or debris build up, which affects accuracy performance.

Avoid use of high-pressure washer nozzle pointed directly at radar.

Avoid damage to radar and wiring harness when using sharp tools to remove dirt or packed mud around radar.

1. Check radar sensor for damage.

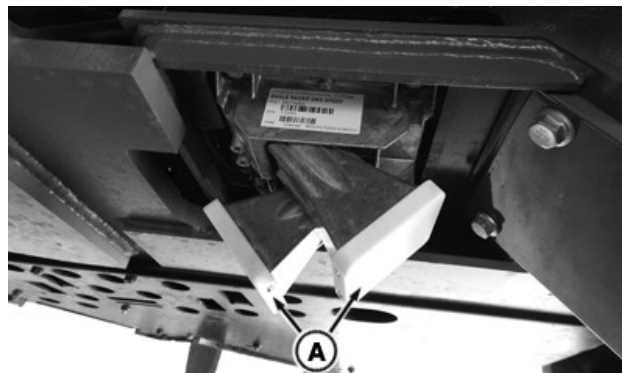

RXA0141826—UN—02JUN14


2. Clean radar sensor horns (A) with warm water and mild soap.

3. Dry with clean soft cloth.

RX32825,000064B-19-19JUL17

Optional Fuel Water Separator

1. Park machine on a flat, level surface.
2. Lower equipment to ground.
3. Shut off engine.

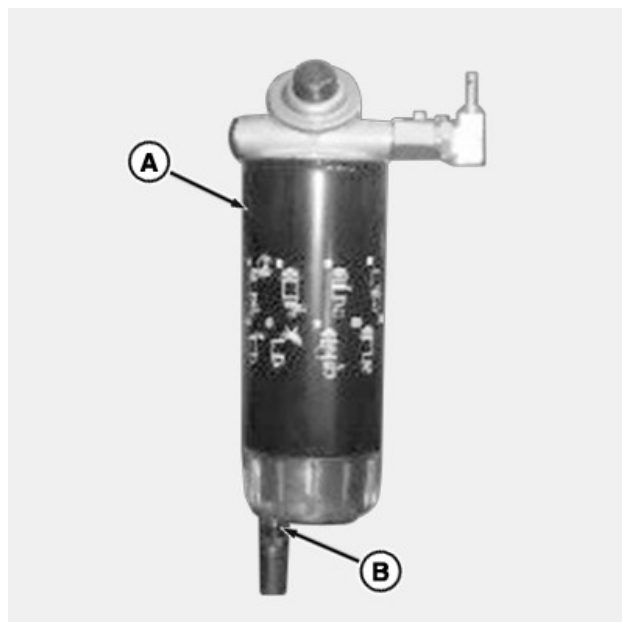

RXA0168512—UN—03JUN19

Priming button cap may differ

4. Thoroughly clean the exterior of the fuel filter and water separator assembly (A) and surrounding area.
5. Place a suitable container under the drain hose.
6. Open drain valve (B).
7. Allow water and sediment to drain into a suitable container.
8. Close drain valve.

9. Dispose of waste properly.
10. Bleed fuel system. See Bleed Fuel System in the Service—General Information section of this Operator's Manual.


EC82310,0000982-19-21APR21

Implement Connector

IMPORTANT: Inspect implement connector and implement ethernet connector (if equipped) as required for dirt or debris buildup. Service may be required more often in some operating conditions.


Avoid damage to implement connector. Do not use compressed air or pressurized water to clean implement connector.

1. Locate the implement connector. See Implement Connector or Implement Ethernet Connector in Accessories section of this Operator's Manual.

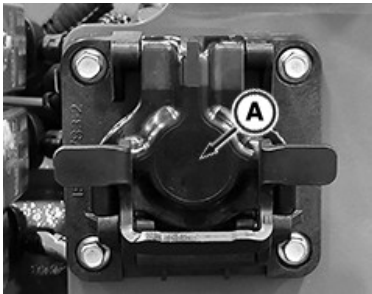

RXA0169781—UN—30JUL19

Implement Connector

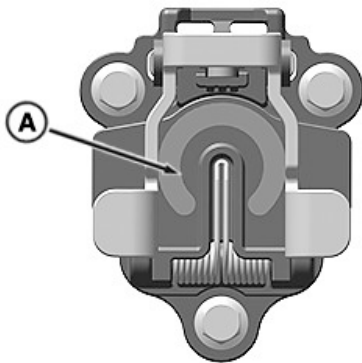

RXA0188727—UN—03MAR23

Implement Ethernet Connector

2. Open implement connector cover (A).
3. Clean implement connector with John Deere Electronic Contact Cleaner.


JL41210,0000ABB-19-23MAY23

Service—Check

Engine Coolant Level

Coolant level is monitored electrically. When coolant is low a diagnostic trouble code will appear on the CommandCenter.

1. Open hood. See Open Hood in the Service—General Information section of this Operator's Manual.

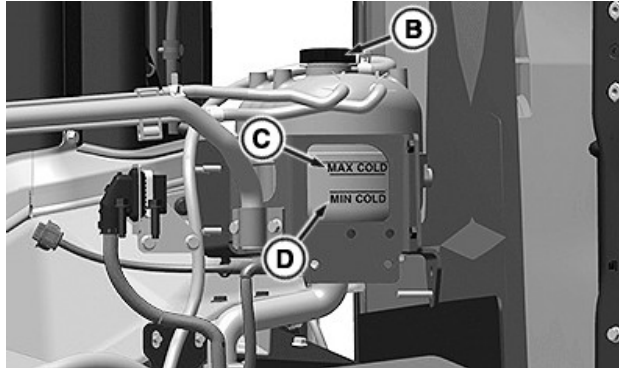

RXA0180388—UN—06NOV20

2. Check coolant level on side of deaeration tank. Level should be at or above MIN COLD line (D). If level is low, before adding coolant check for any signs of leakage. Repair if necessary.

IMPORTANT: Do not open deaeration tank cap (B) when engine is warm. Doing so will add air to coolant system.

NOTE: If coolant level is low, but there is no sign of an external leak, there may be an internal coolant leak. Contact your John Deere dealer.


3. Wait until engine is cool. Remove deaeration tank cap (B) and add coolant as specified in Engine Coolant section of this Operator's Manual. Do not fill above MAX COLD line (C). Reinstall deaeration tank cap.
4. Lower and secure hood.

SV81855,00001C6-19-03NOV22

Avoid personal injury. Do not remove fill cap when engine is hot. Stop engine and wait until engine has cooled.

IMPORTANT: Do not open deaeration tank cap when engine is warm. Doing so will add air to coolant system.

NOTE: Deaeration tank will not be full of coolant when cap is removed. When looking in tank, if coolant tank is at least half full, do not add additional coolant.

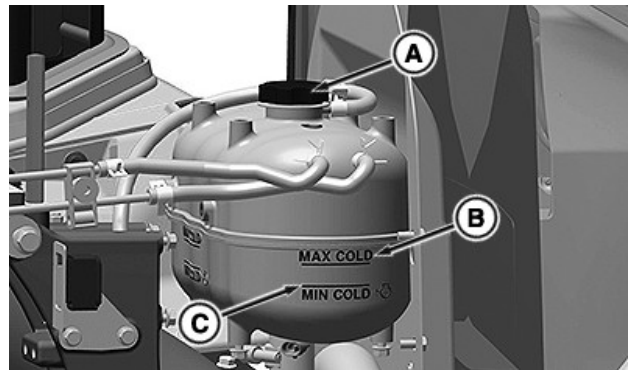

RXA0180467—UN—18NOV20

A—Cap
B—Max Cold Line
C—Min Cold Line

2. Slowly turn deaeration tank cap (A) to relieve pressure. Remove cap (B).
3. Test coolant. A more precise test device is available from your John Deere dealer, see Testing Coolant Freeze Point in Engine Coolant section of this Operator's Manual.
4. Visually inspect tank cap gasket for sealing effectiveness. No apparent scratches or leak paths should be seen. Replace cap if problem is observed.
5. Install deaeration tank cap and lower hood.

EC82310,0000F50-19-03NOV22

Engine Coolant Freeze Point


IMPORTANT: Test coolant system and add coolant conditioner every 1000 hours, or annually - whichever comes first.

1. Open hood. See Open Hood in the Service—General Information section of this Operator's Manual.

CAUTION: Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

Water Separator

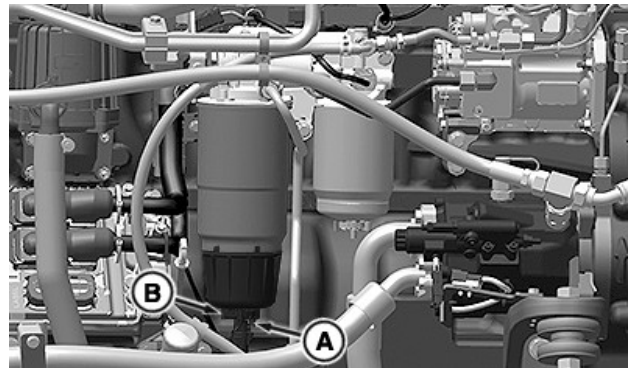

RXA0180389—UN—06NOV20


IMPORTANT: Water can damage fuel systems. If excessive water is found, draining fuel tanks may be required. See Fuel Tank Sump in this section of this Operator's Manual.

In addition to a Fuel Water Separator, water can also be drained from fuel system through fuel filters. Turn drain valve nut (A) to release water from fuel filters.

On some filters, tabs (B) are visible and will drop when drain valve nut is opened. Turn drain valve nut completely counterclockwise to drain water.

Optional Fuel/Water Separator

1. Shut off engine.

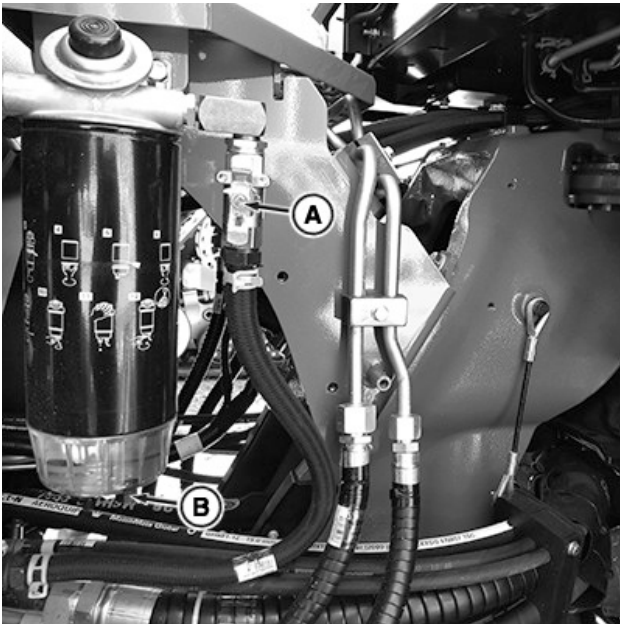

RXA0189038—UN—05JUL23

2. Close fuel shut-off valve (A).
3. Open drain valve (B) to release any water from fuel water separator.
4. Close drain valve and reopen fuel shut-off valve.

SV81855,0000289-19-05JUL23

Engine and Exhaust Compartments

IMPORTANT: Accumulated crop residue inside engine compartment can reduce engine and cooling system performance. If tractor has been operated in field conditions which might have caused debris accumulation, inspect and clean engine compartment as necessary.

Directing pressurized water at electronic/electrical components, connectors, bearings and hydraulic seals, fuel injection pump, engine air intake, or other sensitive parts and components may cause product malfunctions. Reduce pressure, and spray at a 45° to 90° angle. See Tractor Exterior in Service—Clean section of this Operator's Manual.


Directing pressurized air at electronic/electrical components or connectors, may cause buildup of static electricity and product malfunctions.

Never steam clean or pour cold water on an injection pump that is operating or hot. Pump could seize.

1. Shut off engine and allow time for engine to cool.
2. Remove front engine side shield. See Remove Front Engine Side Shield in Service—General Information section of this Operator's Manual.
3. Remove any crop or debris within engine and exhaust compartments, especially around turbocharger, exhaust manifold, and exhaust aftertreatment system.
4. Reinstall all engine side shields.
5. Close and securely latch hood.

TS36762,000012C-19-05APR21

Air Conditioning System

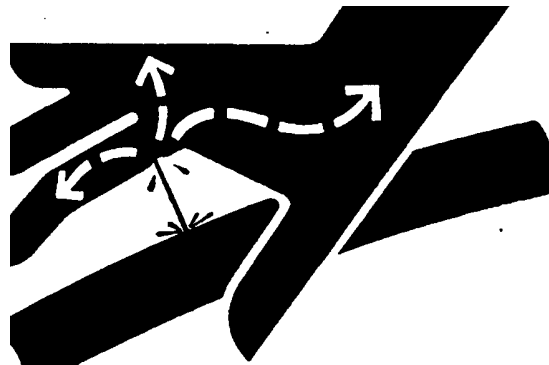

X9811—UN—23AUG88

CAUTION: Avoid possible injury. Improper servicing may cause refrigerant to penetrate eyes and skin or cause burns.

IMPORTANT: R-134a refrigerant must be used in air conditioning system. Service requires special equipment and procedures. See your John Deere dealer.

NOTE: Some oil seepage from compressor shaft seal is normal.

Perform following checks if air conditioning system does not cool, or cooling is intermittent:


- Confirm that system does not function correctly. Access HVAC page on CommandCenter. Set fan speed to highest setting and temperature to coldest setting. See HVAC Settings—Fan Speed in HVAC section of this Operator's Manual. Operate engine at 2000 rpm. Check air vents to confirm that cold air is not present.
- Inspect and clean cab air filters. Replace filters if necessary. See Cab Filters in Service—Change section of this Operator's Manual.
- Clean grille and radiator. See Engine Cooling System in Service—Clean section of this Operator's Manual.
- Check air vents for cold air flow.

If problems persist, see your John Deere dealer.

TS36762,000012D-19-21JUN22

Engine Water Pump Weep Hole

1. Remove front engine side shield, see Remove Front Engine Side Shield in Service—General Information section of this Operator's Manual.

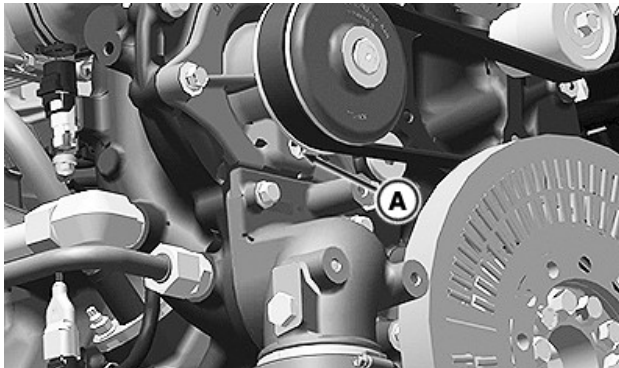

RXA0180468—UN—18NOV20

2. Inspect weep hole (A) on under side of water pump for oil or coolant leakage (indicates a damaged front seal). If leakage is detected, see your John Deere dealer.
3. Install front engine side shield, close and secure hood.


TO84419,00001CE-19-19APR22

Fuel Tank Sump

NOTE: Drain fuel tank sump if fuel filters are replaced frequently or water in the fuel tank. Service may be required more often under some conditions.

1. Place a catch pan under the drain tee.

IMPORTANT: Use wrench to hold drain fitting while opening or closing tee or damage to tank threads can occur.

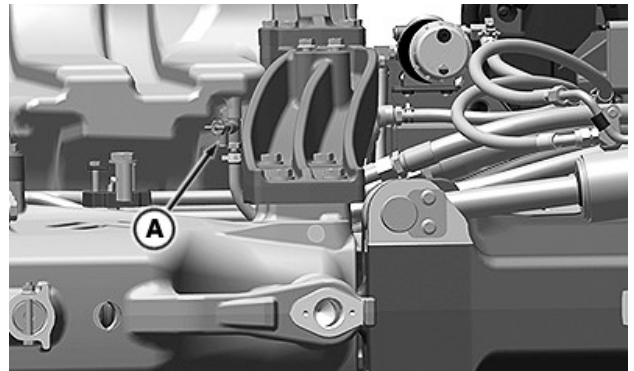

RXA0180463—UN—18NOV20


2. Turn drain tree (A) by hand. Drain fuel until clean, water free fuel appears.
3. Tighten drain tree by hand to close.

JL41210,0000A9F-19-23NOV20

Engine Oil Level


1. Park tractor on level ground.
2. Open engine access panel, see Open Engine Access Panel in Service—General Information section of this Operator's Manual.

NOTE: If the tractor has been parked on level ground for several hours or overnight, oil level must be checked before starting the engine for maximum reliability.

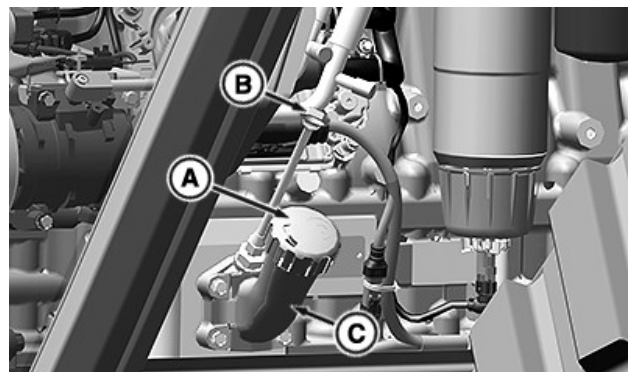

RXA0188273—UN—10OCT22

3. Remove dipstick (B) and check oil level with tractor on level ground.

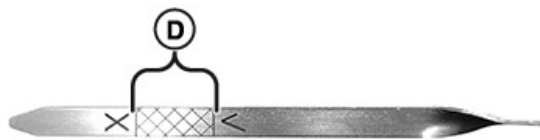

RXA0185140—UN—20AUG21

NOTE: Oil level on dipstick is considered FULL when oil is within crosshatched area (D).

4. Check oil level on dipstick. If oil must be added, preform the following actions:

- Remove fill cap (A).
- Add oil through fill tube (C).


NOTE: See Diesel Engine Oil in Engine Oil section of this Operator's Manual.

5. Tighten fill cap securely and close engine access panel.

RX32825,000062F-19-16NOV22

Hydraulic System Oil Level

IMPORTANT: Poor shift quality or transmission damage may occur if incorrect oil is used, see Transmission and Hydraulic Oil in Other Lubricants section of this Operator's Manual.

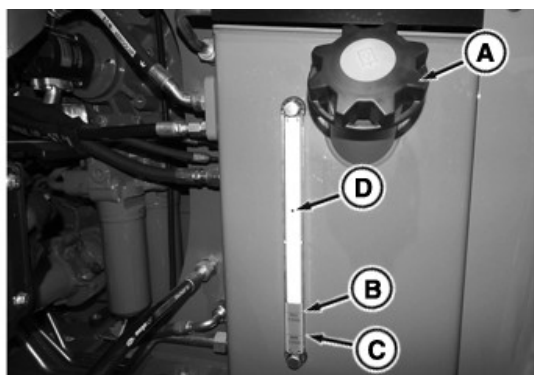

RXA0141848—UN—02JUN14

Do not operate tractor if oil level is at or below MIN COLD mark (C) in sight gauge with engine off.

If topping off oil in hydraulic reservoir, use sight gauge marks to estimate volume and add to transmission fill tube.

Hydraulic oil reservoir does not hold all system hydraulic oil capacity. Transmission and front and rear axles hold

additional system oil. If possible, check oil level prior to first start of day. Ambient temperature should be 7° C (45° F) or above.

For implements and applications requiring high volumes of oil transfer (example: large air seeders or pulling 3 scrapers), hydraulic reservoir can be filled up to high volume takeout oil mark (D). Additional capacity is 58.5 L (15.4 gal) above MIN COLD (C).

1. Check tractor and implement for leaks daily, before start-up.
2. Park tractor on level ground with implement fully lowered.
3. Place transmission shift lever in PARK.
4. Start engine and set engine speed set to 1200 rpm.
5. Run engine for five minutes.
6. Shut off engine and wait five minutes for oil level to stabilize.

IMPORTANT: Contaminated or overheated oil may cause damage to transmission-hydraulic system components. Oil which is:

- Milky or foamy may be contaminated with water. Change oil immediately.
- Discolored or smells burned may have been overheated. See your John Deere dealer.

7. Check hydraulic reservoir oil level using sight gauge located near the left-hand rear fender. Examine oil in sight gauge for milky or foamy appearance.

NOTE: As tractor and hydraulic system temperature increases, oil level will rise in reservoir.

Oil level in reservoir fluctuates depending upon volume of oil exchanged with an attached implement. If low oil level results in hydraulic pressure drop, a STOP engine light will come on.

8. Open hydraulic reservoir cap (A). Check for burned oil odor.
9. If reservoir oil level is between FULL COLD (B) and MIN COLD (C) marks, tractor can be used for normal operation. Volume difference between MIN COLD and FULL COLD marks is about 11.4 L (3 gal).
10. If reservoir oil level is below MIN COLD mark, ensure oil levels are equalized between reservoir, transmission, and axle compartments. Heat up transmission-hydraulic oil (see Warm-Up Transmission-Hydraulic System in Transmission—General Information section of this Operator's Manual) so oil temperature is > 50°C (125°F) and run tractor at 2100 rpm for five minutes. Stop engine and allow to settle for five minutes. Check hydraulic reservoir level. If still below MIN COLD mark, add oil to hydraulic oil reservoir. See Hydraulic System Oil

in Service—Change section of this Operator's Manual.

RX32825,000184B-19-29AUG22

If tractor does not hold with secondary brake engaged, see your John Deere dealer.

SV81855,00002CE-19-24JUN22

Tires

IMPORTANT: Keep tires at recommended pressure to insure maximum performance. See inflation pressure tables in Wheels and Tires section of this Operator's Manual.

Inspect tires for cuts or breaks and repair. Adjust and maintain tire pressure according to recommended pressure charts for optimum field performance. Check pressure of each tire at least once a week. If tires contain liquid ballast, use a special air-water gauge, and measure with valve stem positioned at bottom.

KD34109,0000250-19-08JUL21

Secondary Brake

1. Park tractor on incline. Incline should be steep enough to allow tractor to roll easily when tractor is placed in Neutral.



RXA0158486—UN—28MAR17

2. For e18, move transmission shift lever (A) to Neutral position.



RXA0143603—UN—23JUL14

3. Engage secondary brake (B).

Transmission PARK System

CAUTION: Avoid physical injury, tractor damage, or property damage:

- Verify that the tractor surroundings are clear of people before testing.
- If the transmission PARK system does not operate correctly, repair immediately. See your John Deere dealer.

1. Position the tractor on a 20—30% slope with the front of the tractor pointing down the slope.
2. Shift the transmission into PARK.

To verify the location of PARK on the transmission, see Shift Transmission in the appropriate Transmission section of this Operator's Manual.


3. If the tractor does not hold in a stationary position on an incline with the transmission in the PARK position, repair the transmission immediately. See your John Deere dealer.

EC82310,0000BA6-19-25NOV19

Engine Air Intake System—Tier 2/Stage II Engine

1. Open hood, see Open Hood in Service—General section of this Operator's Manual.
2. Remove front and rear engine side shield, see Remove Front Engine Side Shield and Remove Rear Engine Side Shield in Service—General Information section of this Operator's Manual.

IMPORTANT: Operating engine with loose air intake clamps may allow dust entry into system and damage to engine.

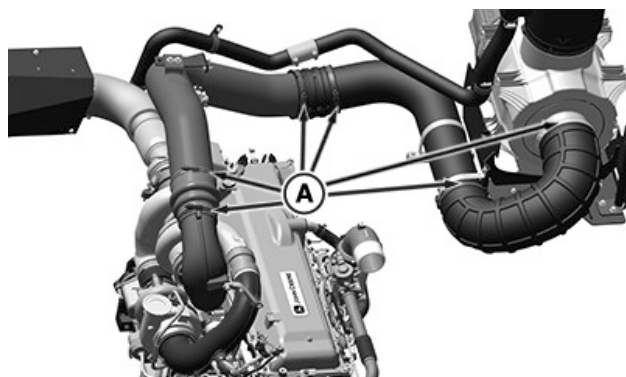

RXA0188968—UN—17MAY23


3. Check air intake system for loose clamps (A) or cap screws.
4. Tighten air intake system clamps to 10 N·m (7 lb·ft).

kd34109,1684164080564-19-30MAY23

Engine Air Intake System—Final Tier 4/ Stage V or Tier 3/Stage IIIa Engine


1. Open hood, see Open Hood in Service—General section of this Operator's Manual.
2. Remove front and rear engine side shield, see Remove Front Engine Side Shield and Remove Rear Engine Side Shield in Service—General Information section of this Operator's Manual.

IMPORTANT: Operating engine with loose air intake clamps may allow dust entry into system and damage to engine.

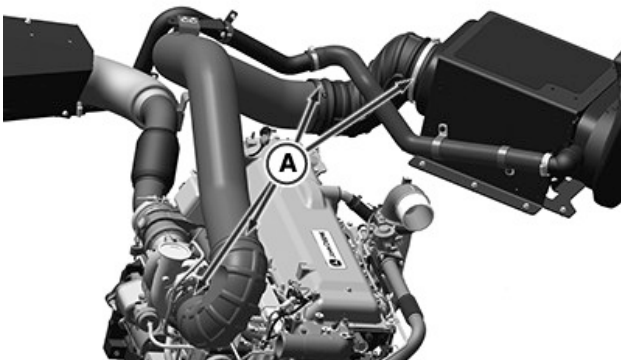

RXA0188966—UN—17MAY23

Single-Stage Turbo Engine

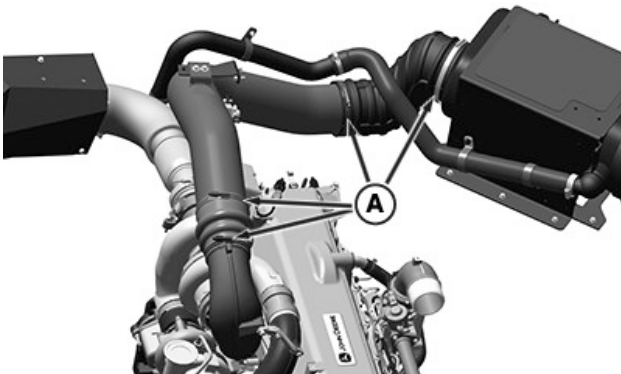


RXA0188967—UN—17MAY23

Dual-Stage Turbo Engine

3. Check air intake system for loose clamps (A) or cap screws.
4. Tighten air intake system clamps to 10 N·m (7 lb·ft).

SV81855,0000283-19-30MAY23

Seat Belts

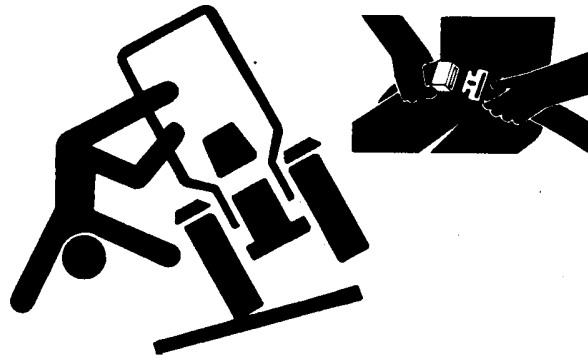

TS205—UN—23AUG88

CAUTION: If seat belt system, including mounting hardware, buckle, belt, or retractor shows any sign of damage such as cuts, fraying, extreme or unusual wear, discoloration or abrasion, the entire seat belt system should be replaced immediately. Replace the belt system only with replacement parts approved for your machine.



RXA0174320—UN—28JAN20

Inspect seat belts (A) and mounting hardware. If seat belts need to be replaced, see your John Deere dealer.

TS36762,0000146-19-28JAN20

HydraCushion Suspended Front Axle Accumulator Charge Pressure

IMPORTANT: Check HydraCushion suspended front axle accumulator charge pressure at 1500 hours or annually - whichever comes first.

See your John Deere dealer.

SV81855,00001C4-19-24JUN22


Engine Auxiliary Drive Belt and Drive Belt Tensioner

NOTE: Fan belt tensioner is only used on a Tier 2/Stage II or Tier 3/Stage IIIa engine.

Pulley or dust shield can be serviced separately from spring tensioner. Spring tensioner is serviced as an assembly.

For clarity, alternator and other components are not shown. Belt tensioner assembly remains on tractor during tests.

1. Remove front engine side shields. See Remove Front Engine Side Shields in Service—General Information section of this Operator's Manual.

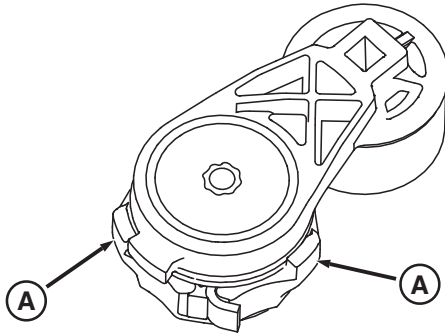


RXA0162898—UN—18APR18

2. Examine belt tensioner assembly. Replace tensioner if:
 - A spring stop (A) is cracked or missing.
 - Any part of tensioner assembly is cracked or broken.

If tensioner will not be replaced, go to step 3.

If tensioner must be replaced, replace, and then go to step 9.

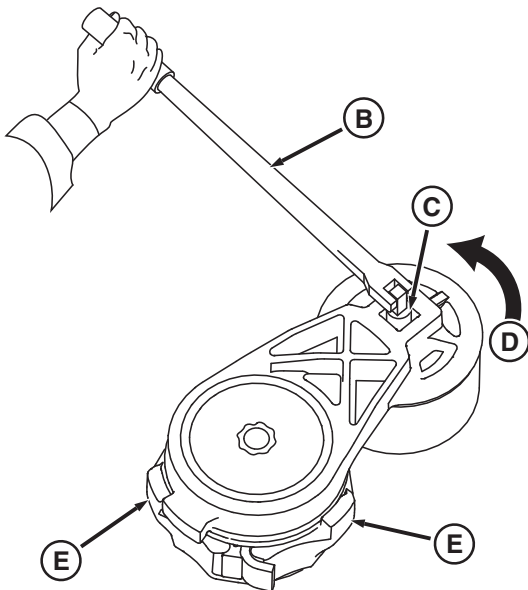


RXA0162899—UN—18APR18

3. With belt installed, insert 1/2 inch drive ratchet or breaker bar (B) into the square hole (C) on belt tensioner arm.

4. Twist tensioner arm (D) to reduce tension on belt. Twist as far as tensioner allows.
5. If belt is against free arm stops (E) replace belt. See step 13 for belt service procedure locations. After replacing belt, go to step 5.
6. With belt tension released, examine belt tracking (wear) mark on pulley. If tracking mark is 6.4 mm (1/4 inch) or more wider than belt, replace tensioner assembly. If tensioner assembly will:
 - Not be replaced, go to step 7.
 - Be replaced, replace and then go to step 9.
7. Remove belt. See step 14 for belt service procedure locations.

IMPORTANT: Do not pry between pulley and spring case.

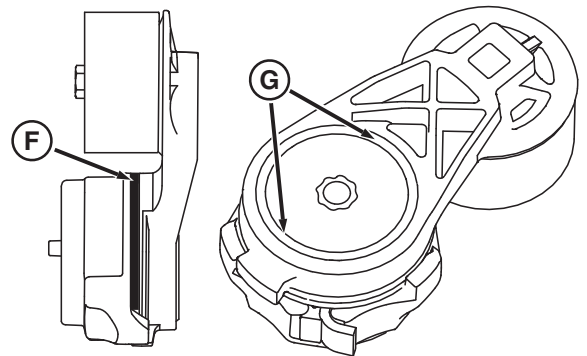

RXA0162900—UN—18APR18

8. Rotate tension arm slowly using 1/2 inch drive ratchet or breaker bar. Replace tensioner if:
 - Arm does not rotate smoothly between arm stops (E).
 - Metal to metal contact is present between arm and spring case (F) or arm and end cap (G).

If tensioner will not be replaced, go to step 9.

If tensioner must be replaced, replace, and then go to step 14.

9. If tensioner must be replaced, release tension on belt and remove belt (if not already done).
10. Remove tensioner pivot cap screw.
11. Replace tensioner assembly.
12. Apply thread lock and sealer Loctite 242 to pivot cap screw.
13. Install cap screw and tighten to 70 N·m (51 lb·ft) torque.
14. Install belt. Depending upon engine type, in Service—Change section of this Operator's Manual, see:
 - Fan Belt—Tier 2/Stage II or Tier 3/Stage IIIA Engine in this Operator's Manual section.

Engine Auxiliary Drive Belt

CAUTION: Never start engine without side shields installed and hood securely closed and latched.

15. Install front engine side shields.

16. Close and securely latch hood.

RX32825,000066F-19-24JUN22

Axle End Play

IMPORTANT: Excessive axle end play results from bearing wear or failure.

See your John Deere dealer.

RX32825,0000670-19-17JUL17

Engine Valve Clearance

NOTE: To confirm which engine your tractor is equipped with, see Engine Serial Number in Identification Numbers section of this Operator's Manual.

See your John Deere dealer.

TS36762,0000148-19-14DEC16

Front Driveshaft Health (FDH) Sensor System



RXA0162182—UN—15FEB18

FDH sensor system monitors front driveshaft for proper operation when rotating. If a problem occurs, sensor triggers a Stop Engine (A) or Service Alert (B) light, an audible warning, and causes a diagnostic code to be displayed on CommandCenter.

1. If Stop Engine warning occurs, stop tractor immediately in a safe location.

2. If Service Alert warning occurs, FDH system requires service and may be disabled. Service FDH system as soon as possible.

3. See your John Deere dealer to fully diagnose and repair problem indicated by code.


BH38674,0000CB8-19-24JUN22

Drawbar Sensor Calibration [Scraper]

NOTE: Tractors equipped with AutoLoad only.

Calibration requires a drawbar sensor calibration plug. See your John Deere dealer.


1. Fully load the scraper.
2. Raise the scraper above the ground level.
3. Stop the tractor.
4. Place transmission into PARK.
5. Turn off engine.

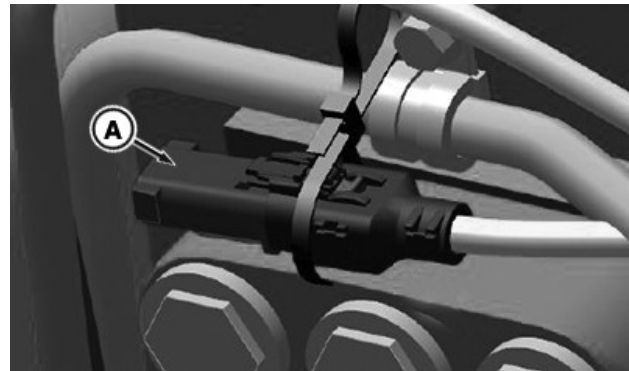

RXA0185235—UN—27AUG21

Draft Sensor Harness Connection

6. Remove the dust cover (A) from the draft sensor harness connection. The draft sensor harness connection is located to the left of the rear SCV stack.

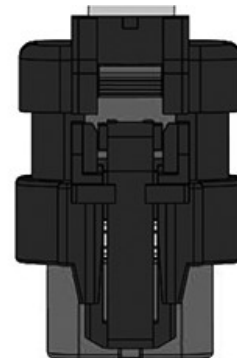

RXA0185234—UN—27AUG21

Draft Sensor Calibration Plug


7. Install the draft sensor calibration plug into the draft sensor harness connection.

8. Start engine and run for a minimum of 15 seconds.
9. Turn off engine. Sensor calibration is complete.
10. Remove and store the draft sensor calibration plug.
11. Replace the dust cover.

EC82310,00009A1-19-19OCT22

Drawbar Wear


CAUTION: Avoid equipment damage. Replace parts that have reached or exceeded their wear limit.

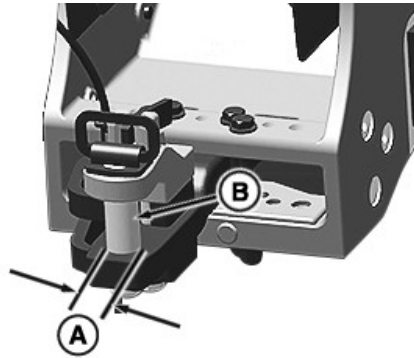

RXA0179145—UN—20AUG20

1. Check the diameter (A) of the pin (B).

Hitch Pin Specification		
Drawbar Category	Measurement mm (in)	
	Nominal Diameter	Wear Limit or Minimum Diameter
4	50.80 (1.50)	47.60 (1.87)
5	70.00 (2.75)	65.60 (2.58)

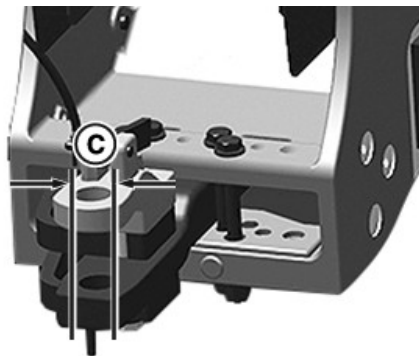

RXA0179146—UN—20AUG20

2. Check the diameter (C) at the top and bottom of the pin receiver hole.

Top and Bottom Receiver Hole Specification		
Drawbar Category	Nominal Diameter	
	Measurement ^a mm (in)	Wear Limit or Maximum

Top and Bottom Receiver Hole Specification		
Drawbar Category	Nominal Diameter	
	Measurement ^a mm (in)	Wear Limit or Maximum Permissible Diameter ^b
4	52.80 (2.07)	55.40 (2.18)
5	72.75 (2.86)	76.30 (3.00)

^aMeasured in the direction of travel.^bOval

EC82310,0000F7A-19-18JAN22

Engine Brake

See your John Deere dealer.

JL41210,0000A93-19-16OCT20

Service—Tighten


Wheel and Wheel Weight Bolts

CAUTION: Avoid the possibility of personal injury. Never operate tractor with loose wheel or wheel weight bolts. Failure to follow torquing procedure may result in personal injury. Wheel and wheel weight bolts are critical and require repeated torquing to assure secure tightness.

IMPORTANT: Failure to follow correct tightening procedure could result in equipment damage.

Retighten wheel and weight bolts after working 3 HOURS, 10 HOURS and DAILY during the first week of operation.

Check and torque all wheel and weight bolts on a regular or 500 Hour interval. See Wheels, Tires and Treads section of this Operator's Manual for bolt tightening procedure.

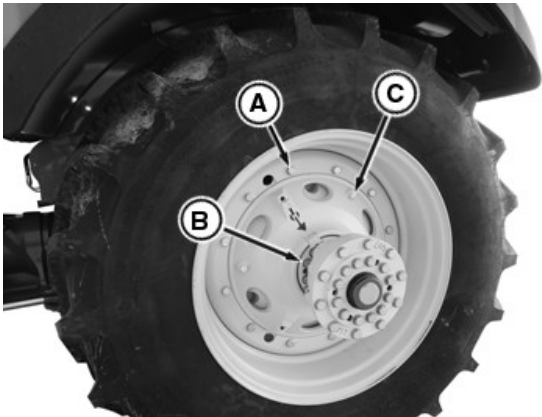

RXA0141936—UN—02JUN14

Tighten front and rear wheel bolts (A), hub bolts (B) and wheel weight bolts (C) .

SV81855,0000226-19-17JUL17

Use Wheel Tightening Stand



RXA0104284—UN—11AUG09


Wheel tightening stand (A) may be used to support the

torque wrench (B) when tightening cap screws at different heights.


See your John Deere dealer to order or for information on how to build your own.

RX32825,0001780-19-13OCT22

Use Wheel Torque Wrench Adapter

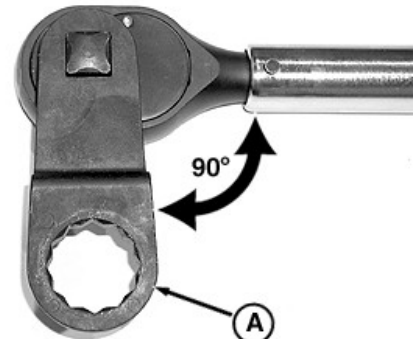


RXA0086802—UN—15FEB06

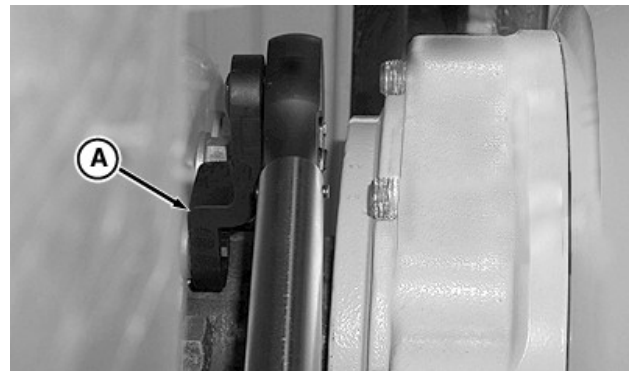


RXA0086804—UN—15FEB06

Install JDG679 Torque Wrench Adapter (A) [32 mm (3/4 in) drive] improves access to sleeve bolts on inner cast wheels with outside duals in place. JDG679 may be required for torquing wheel hardware for tractors equipped with John Deere CTIS. See your John Deere dealer.

Install adapter at **90° angle** from torque wrench shaft to assure correct torque specification of 610 N·m (450 lb·ft).

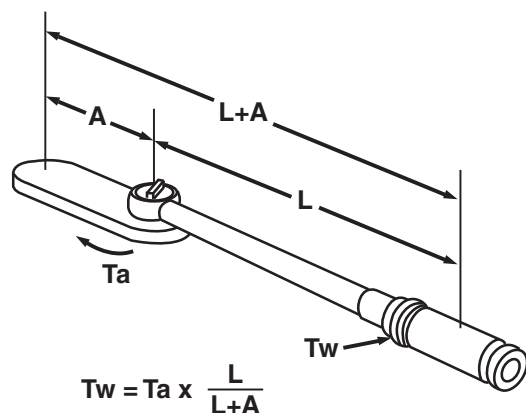

RXA0061214—UN—19JUN02

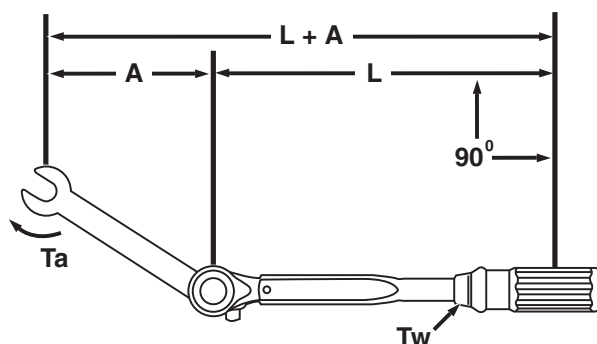

RXA0062101—UN—15AUG02


When unable to use adapter at 90° angle from torque wrench shaft, use formula to calculate correct torque wrench setting (Tw) to obtain desired final torque on bolts.

- Tw = Torque setting on torque wrench
- Ta = Torque actually being applied to bolt
- L = Length from point of force (center of the wrench handle) to center of head of torque wrench
- A = Application distance from center of torque wrench head to center of adapter [95 mm (3.75 in)]

Example: Torque wrench length = 0.91 m (36 in), wrench adapter = 0.1 m (4 in), Value Tw for torque wrench setting is 549 N·m (405 lb·ft).

RX32825,0001781-19-28JAN21

Drawbar Support and Cap Screws

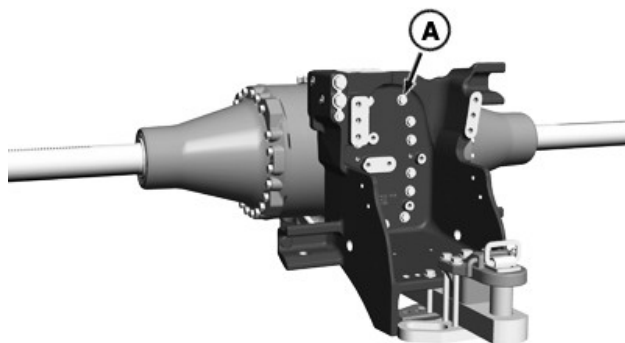

RXA0139208—UN—19FEB14

Inspect and tighten drawbar support cap screws (A) to 490 N·m (361 lb·ft).

RX32825,000064A-19-12MAR20


Service—Change

Fan Belt—Tier 2/Stage II or Tier 3/Stage IIIA Engine

IMPORTANT: Belt tension is controlled by an automatic belt tensioner. Tensioner does not require adjustment.

Removal of belt requires an assistant.


1. Remove front engine side shields, see Remove Front Engine Side Shields in Service—General Information section of this Operator's Manual.

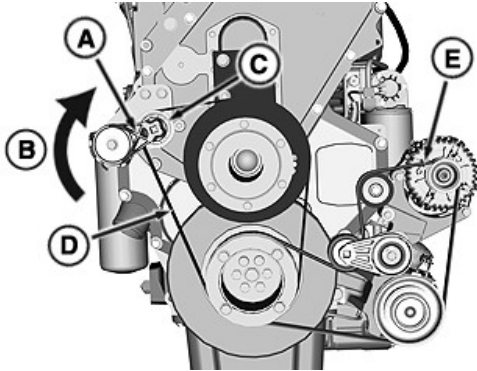

RXA0162895—UN—18APR18

2. Release tension on belt. Insert 1/2 in. drive ratchet or breaker bar inserted into square hole (A) on belt tensioner arm. Twist tensioner clockwise (B).

IMPORTANT: Continue to apply force to tensioner while removing belt.

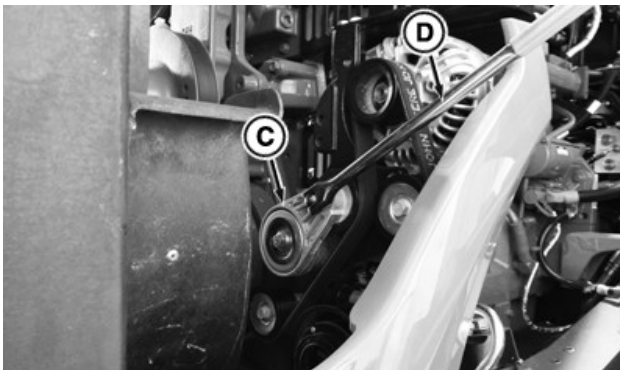

RXA0141836—UN—02JUN14

3. Have assistant remove belt from tensioner pulley (C).
4. Relax tension and completely remove belt.
5. Install new belt (D) on all pulleys except tensioner pulley. Drive belt layout diagram shows correct belt routing.
6. Using breaker bar, release tension on tensioner pulley and position belt over pulley.
7. Slowly relax force on breaker bar.
8. Check engine auxiliary drive belt (E) for wear or damage. Replace if necessary, see Engine Auxiliary Drive Belt in this Operator's Manual section.

CAUTION: Never start engine without side panels installed and hood securely closed and latched.

9. Install engine side shields.
10. Close and secure hood.


SV81855,0000016-19-10FEB22

Engine Auxiliary Drive Belt

1. Remove front engine side shield, see Remove Front Engine Side Shield in Service - General section of this Operator's Manual.

IMPORTANT: Keep tension off belt during removal.

NOTE: Removal and installation of fan belt requires an assistant.

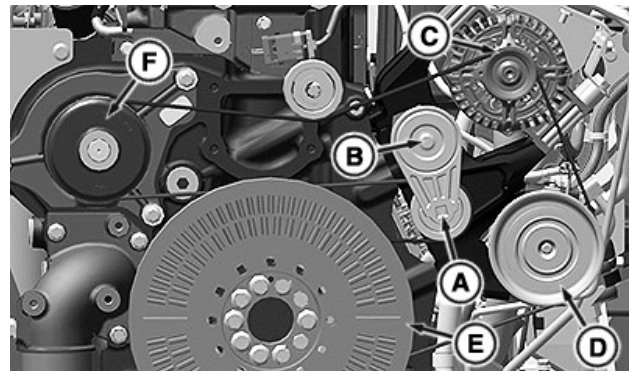

RXA0180387—UN—06NOV20

1/2 in Drive Socket Wrench

2. Insert 1/2 in drive socket wrench into square hole (A) on tensioner arm (B).
3. Push down on wrench handle to relieve tension on drive belt.
4. Have assistant remove auxiliary belt from alternator pulley (C).
5. Remove belt from idler air conditioner pulley (D), crankshaft pulley (E), and water pump (F).
6. Discard old belt.
7. Install new belt to water pump, crankshaft pulley, idler then air conditioner pulley.
8. Install belt on alternator pulley.
9. Remove 1/2 in drive socket wrench and restore tension on new belt.
10. Install front engine side shield and close hood.

BH38674,0000CC0-19-08FEB22


Engine Oil and Filter

IMPORTANT: Sulfur content should not exceed 0.10%. Sulfur content less than 0.10% is preferred. Refer to Fuel, Lubricants, and Coolant section for more information on oil change intervals.

NOTE: The initial break-in service interval of a new or rebuilt wet sleeve engine with Break-In Plus must go at least 100 hours to assure the surface mating of the rings and liners has had an opportunity to occur. The 100 hour minimum applies to all new or rebuilt engines. The maximum service interval is the same as the service interval recommendations listed in Engine Oil and Filter Service Intervals for your engine. To confirm which engine your tractor is equipped with, see Engine Serial Number in Identification Numbers section of this Operator's Manual.


For subsequent oil changes, see Engine Oil and Filter Service Intervals for your engine located in the Engine Oil section of this Operator's Manual.

1. Operate engine approximately 5 minutes to warm oil.
2. Stop engine.

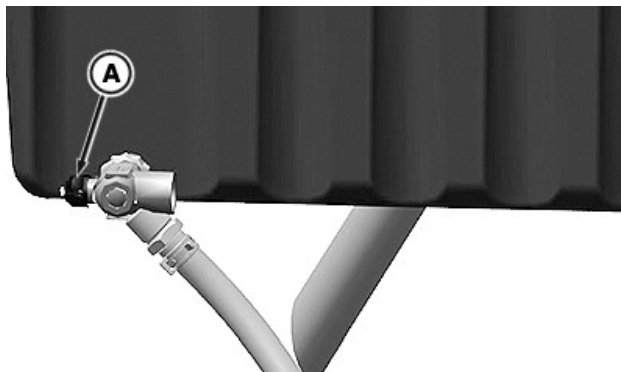

RXA0185138—UN—19AUG21

3. Turn crankcase drain fitting (A) to drain oil. Use enough containers for 75.7 L (20.0 gal) and direct flow with attached valve hose.
4. Tighten fitting after oil is completely drained.
5. Remove front engine side shield, see Remove Front Engine Side Shield in Service—General Information section of this Operator's Manual.

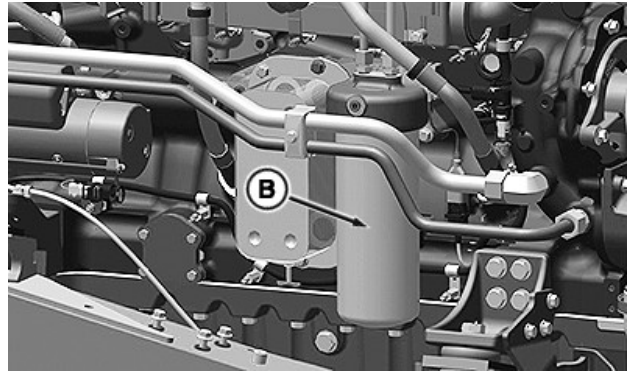

RXA0180469—UN—18NOV20


6. Remove filter (B) and remove old O-ring. Clean filter mounting surface with clean dry cloth.
7. Apply a thin film of oil to new O-ring and install new filter.
8. Hand-tighten filter element, then turn filter element 1/2 - 3/4 turn after gasket contact. Filter wrench is required. Do not overtighten.



RXA0185248—UN—30AUG21

9. Remove engine oil fill cap (C) and refill crankcase using fill tube. Use seasonal viscosity grade oil as specified in Engine Oil section of this Operator's Manual. For crankcase capacity, see Capacities in the Specifications section of this Operator's Manual.
10. Start and run engine for a two minutes. Then stop engine and check for oil leaks.

NOTE: Engine oil level indicator is a dipstick with a "crosshatched" area with a "safe" zone. Anywhere in the dipstick crosshatched safe zone is considered FULL.

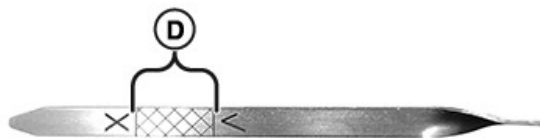

RXA0185140—UN—20AUG21

11. Recheck oil level with dipstick to ensure that level is in crosshatched (D) "safe" zone area.
12. Reinstall front engine side shield and close hood.

RX32825,0000648-19-08FEB22


Fuel Filters

1. Remove engine access panel, see Remove Engine Access Panel in Service—General section of this Operator's Manual.

IMPORTANT: Replace fuel filter elements anytime audible alarm sounds and diagnostic trouble codes indicate plugged fuel filters (low fuel pressure). If no alarm sounds, replace filters after 500 hours operation.

2. Thoroughly clean exterior of fuel filter/water separator assembly and surrounding area.

NOTE: It is recommended to install a 6 ft, 5/16 in fuel hose to the bottom of the fuel filters to aid with draining into a suitable container.

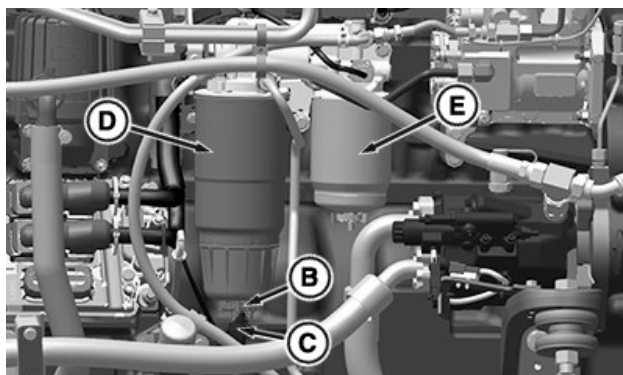


RXA0180430—UN—12NOV20

3. Drain water and contaminants from primary filter into suitable container by opening drain valve (A) on bottom of separator.
4. Dispose of drained material in accordance with local laws and ordinances.
5. Disconnect the water-in-fuel sensor connector (B) from primary filter.

6. Remove primary filter (C), secondary filter (D), and gaskets and discard.

IMPORTANT: DO NOT prefill either fuel filter with fuel.

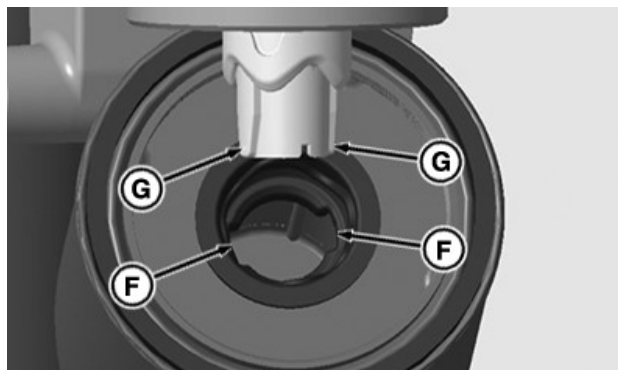

RXA0185335—UN—08SEP21

7. Lubricate gasket for primary fuel filter with fuel, and install canister onto base. Align fuel filter slots (F) on the fuel filter to the fuel filter header tabs (G) on the fuel filter header. Tighten 1/2 turn after packing contacts base.
8. Lubricate primary fuel filter water separator gasket with fuel and install onto filter canister. Tighten 1/2 of a full turn after gasket contacts the base.
9. Lubricate gasket for secondary fuel filter with fuel, and install filter onto base. Align fuel filter slots (F) on the fuel filter to the fuel filter header tabs (G) on the fuel filter header. Tighten 1/2 turn after packing contacts base.
10. Connect water-in-fuel separator sensor harness.
11. Install engine access panel.

IMPORTANT: To provide time to prefill fuel filters, key must be in run position for a total of 3 minutes. Turn key to run position for 60 seconds, three times. The priming pump only stays on for 60 seconds every key cycle. Fuel system is self-bleeding.


Do not try to start engine until after 3 minute time elapses or an air lock in the fuel system may occur.

12. Start engine and run high idle for 2 minutes.

RX32825,000064D-19-08FEB22

Optional Fuel Water Separator Filter Element (If Equipped)

1. Park machine on a flat, level surface.
2. Lower equipment to ground.
3. Shut off engine.

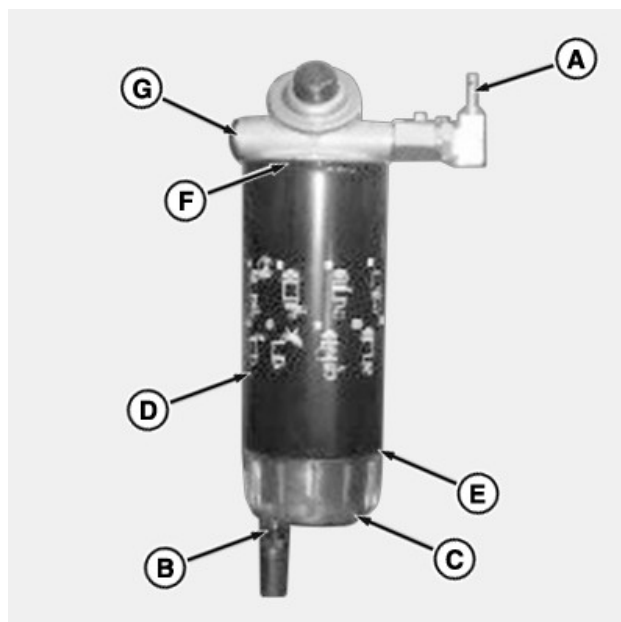

RXA0168513—UN—03JUN19


Priming button cap may differ

4. Close fuel shutoff valve (A).
 5. Thoroughly clean fuel filter assembly and surrounding area to prevent dirt and debris from entering the fuel system.
- CAUTION:** Fuel in filter is under high pressure. Open drain valve on bottom of the fuel filter housing to relieve pressure before removing filter.
- NOTE: Catch fluids with an approved container and dispose of according to employer and government guidelines.*
6. Connect a fuel drain line to the filter drain valve (B) on bottom of the filter housing.
 7. Open filter drain valve.
 8. Drain all fuel.
 9. Close drain valve.
 10. Remove and retain water separator bowl (C) from filter element.
 11. Remove and discard filter element (D).
 12. Clean water separator bowl with compressed air.
 13. Inspect filter housing and filter canister sealing surfaces. Clean as required.
 14. Place new seal (E) on the water separator bowl.
 15. Lubricate seal with clean diesel fuel.
 16. Install water separator bowl onto new filter element. Tighten water separator bowl 1/2 of a turn after seal contacts filter element.

17. Lubricate new filter element seal (F) with clean diesel fuel.
18. Install filter element assembly to the filter housing (G).
19. Tighten filter element 1/2—3/4 of a turn after seal contacts filter housing.
20. Open fuel shutoff valve.
21. Bleed fuel system. See Bleed Fuel System in the Service—General Information section of this Operator's Manual.

EC82310,0000983-19-12APR23

Fuel Tank Vent Filters

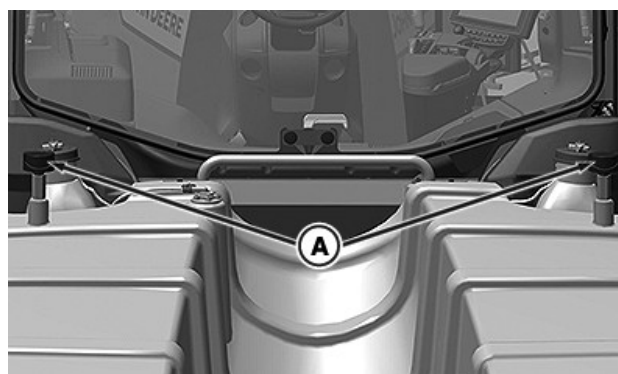

RXA0180431—UN—11NOV20

The fuel tank vent filters (A) are at the front top of the left-hand and right-hand fuel tanks.

1. Clean the area around the fuel tank vent filter before removing it.
2. Remove and replace the tank vent filter.
3. Repeat the procedure for the remaining fuel tank vent filter.

RW29387,00001A5-19-21APR21


Cab Filters

Cab Recirculation Air Filter

CAUTION: Avoid personal injury. The cab recirculation air filter is not designed to filter out harmful chemicals. Before using agricultural chemicals, review and adhere to all cautions and instructions located in the:

- Implement Operator's Manual.
- Chemical Material Safety Data Sheets (MSDS).


IMPORTANT: Avoid damage to the cab air recirculation system:

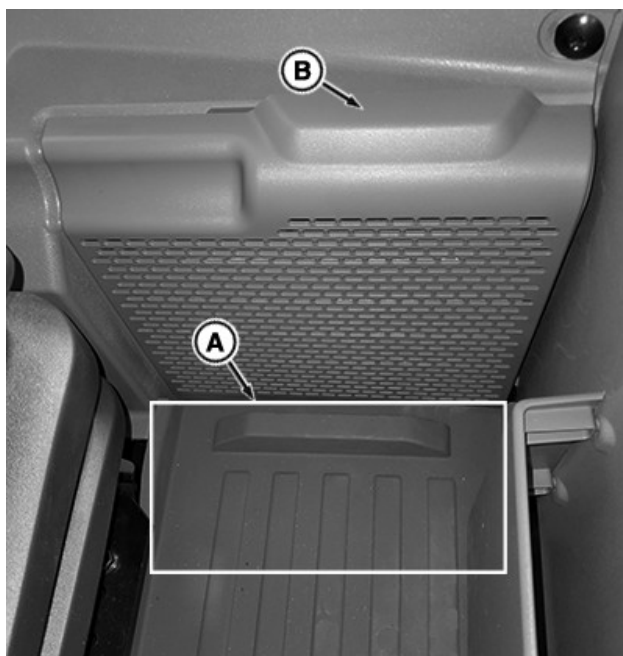

RXA0172354—UN—03DEC19

- The cab air recirculation system creates enough suction to pull lightweight material onto the cab recirculation air intake cover. Keep the area directly in front of the cab recirculation air intake (A) clear of lightweight material. Failure to do so can cause reduced HVAC performance.
- Replacement interval varies according to operating conditions. Normal service is 1000 hours or annually, whichever occurs first.

1. Switch off the HVAC fan.
2. Locate the cab recirculation air intake behind the operators seat on the lower left-hand side of the rear cab wall.
3. Remove the cab recirculation air intake cover by grasping handle (B) and pulling the intake cover forward and up.

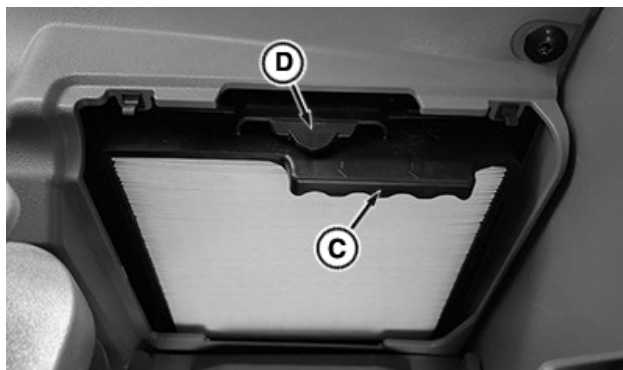

RXA0172355—UN—19NOV19

4. Remove the cab recirculation air filter by grasping the air filter handle (C) while pressing tab (D) and pull the air filter forward.
5. Insert a new cab recirculation air filter.

6. Replace the cab recirculation air intake cover.

Cab Fresh Air Filter

CAUTION: Cab air filters are not designed to filter out harmful chemicals. Follow instructions in implement Operator's Manual and those given by chemical manufacturer when using agricultural chemicals.


IMPORTANT: Replacement interval can vary according to operating conditions. Normal service is 1000 hours or annually, whichever occurs first.



RXA0099137—UN—19SEP08


1. Support cover (A).

NOTE: Filter cover latch has three positions; open, latched, and locked. Cover is not locked when in latched position.

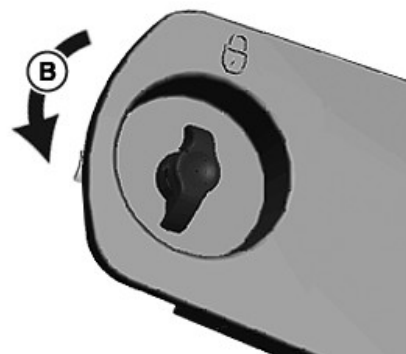


RXA0155037—UN—18OCT16

2. Turn knob fully counterclockwise (B) to unlatch cover.

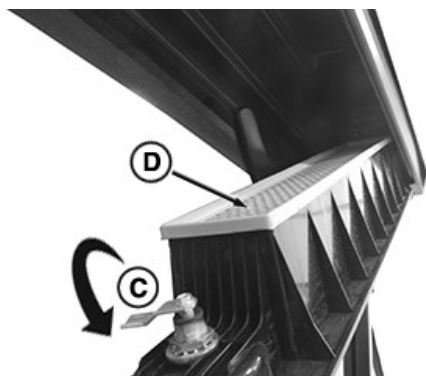

RXA0172403—UN—22NOV19

3. Swing down (C) cover.
4. Remove and discard old fresh air filter (D).
5. Wipe down inside and outside of filter cover with a clean cloth.
6. Install new filter.

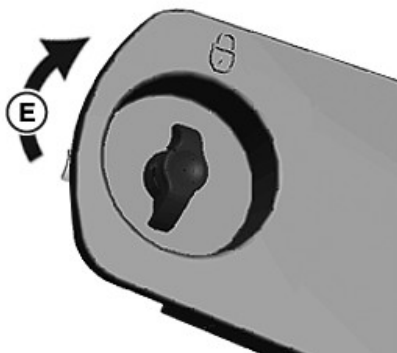

RXA0155035—UN—18OCT16

7. Close cover and turn knob fully clockwise (E) to securely lock latch.


TS36762,000014F-19-05MAY22

Engine Primary and Secondary Air Filters— Final Tier 4/Stage V or Tier 3/Stage IIIa Engine

IMPORTANT: When Engine Air Filter Restriction Warning is activated, engine performance is reduced. Service engine air filters immediately.


Service interval may vary due to operating conditions. Replace secondary air filter every second primary air filter change.

1. Inspect filters and intake seals. Replace filter if seal gap or damage is found.
2. Replace primary engine air filter if diagnostic trouble code remains on.

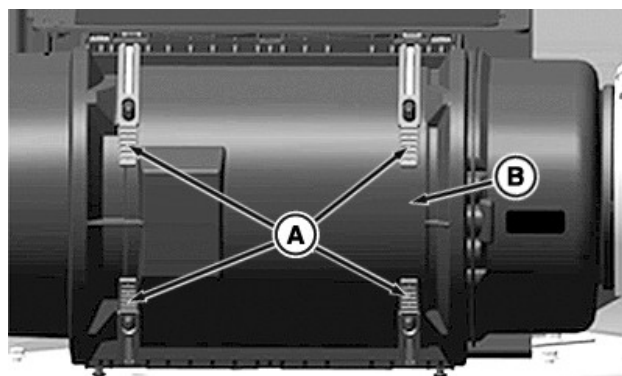

RXA0180370—UN—04NOV20

3. Unfasten straps (A) and remove air filter cover (B).

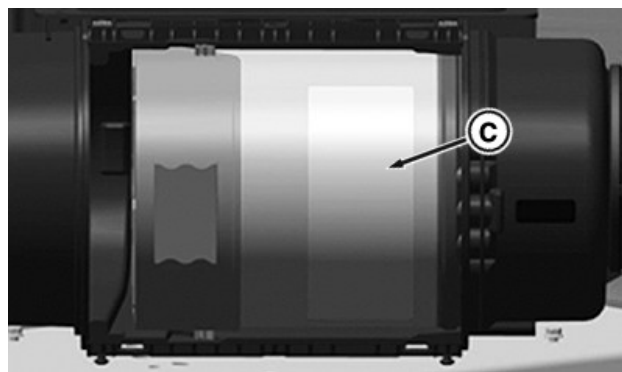

RXA0180371—UN—04NOV20


4. Remove primary filter (C) from filter housing.

IMPORTANT: Do not attempt to clean engine air filters.

5. Inspect filter for damage or waviness in pleats. Such conditions may indicate overuse or contact with water. Replace filter if problem is found.

IMPORTANT: Replace secondary filter every other primary filter change.

Install new secondary filter immediately to prevent dust from entering air intake system.

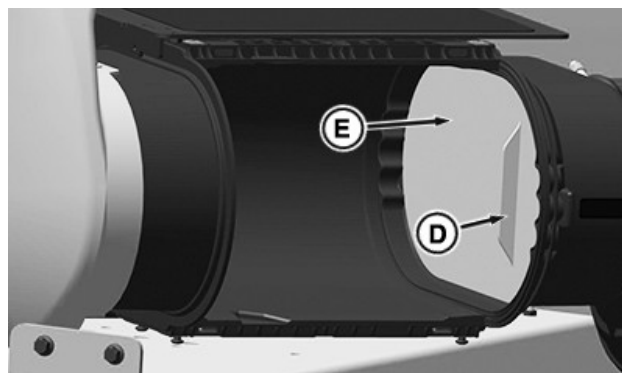

RXA0180372—UN—04NOV20

6. Pull on tab (D) to remove secondary filter (E).
7. Inspect filter for damage. Replace if necessary.

NOTE: A very small amount of dust coating interior surface of filter housing is not unusual. If larger debris or significant amount of dust or dirt is found, check filters, filter housing, and air intake system for leaks.



RXA0180373—UN—04NOV20

8. Clean debris and dirt from filter housing (F). Use cloth dampened with water.

IMPORTANT: Incorrect installation of secondary filter tab may result in engine damage.

9. Replace secondary air filter.
10. Push filter firmly back to properly seat in filter housing.
11. Install primary filter.
12. Install air filter cover and fasten cover straps.


kd34109,1688416018516-19-03JUL23

Engine Primary and Secondary Air Filters—Tier 2/Stage II Engine

IMPORTANT: When Engine Air Filter Restriction Warning DTC is activated, engine performance is reduced. Inspect engine air intake system and filters immediately. Follow procedure, replace filters only if damaged.


Service interval varies due to operating conditions. Replace secondary air filter every second primary air filter change.

1. Turn off engine.
2. Inspect air filter cover exterior for damage. Replace cover if seal gap or damage is found.

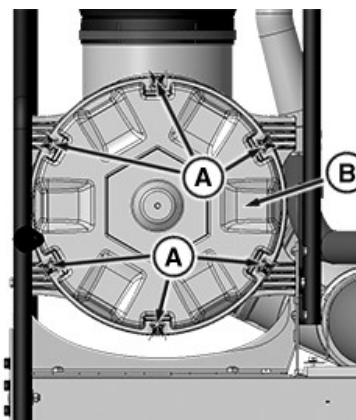

RXA0169023—UN—17JUN19

3. Unfasten clips (A).
4. Remove air filter cover (B).
5. Inspect air filter cover interior for damage. Replace cover if seal gap or damage is found.

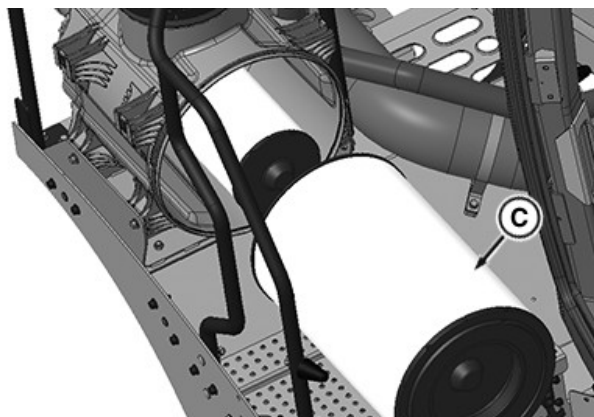

RXA0169024—UN—17JUN19


6. Grasp primary filter frame (C) and remove from housing.

IMPORTANT: Avoid engine damage. Always replace used filters with new filters. Never attempt to clean or reuse engine air filters.

7. Inspect primary filter for damage or waviness in pleats. Such conditions may indicate contact with water or overuse. See your John Deere dealer.

IMPORTANT: Avoid engine damage. Replace secondary filters every other primary filter change.


To prevent dust from entering the air intake system, install new secondary filters immediately.

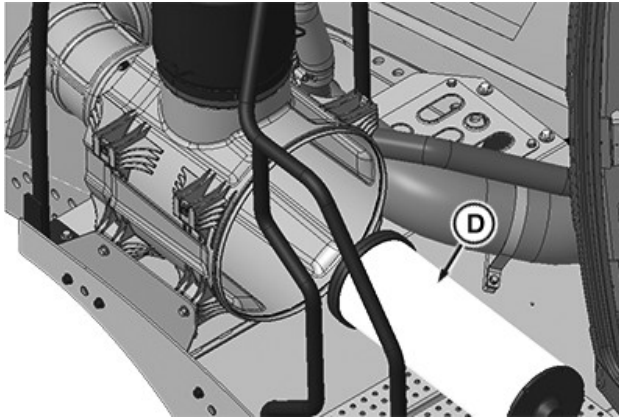

RXA0169025—UN—17JUN19

8. Grasp secondary filter (D) and remove from housing.
9. Inspect secondary filter for damage. Replace if necessary or if primary filter is being replaced for the second time.

NOTE: It is normal for a small amount of dust to coat the interior of the filter housing. If larger debris or significant amount of dust or dirt is found, check filters, filter housing, and air intake system for leaks.

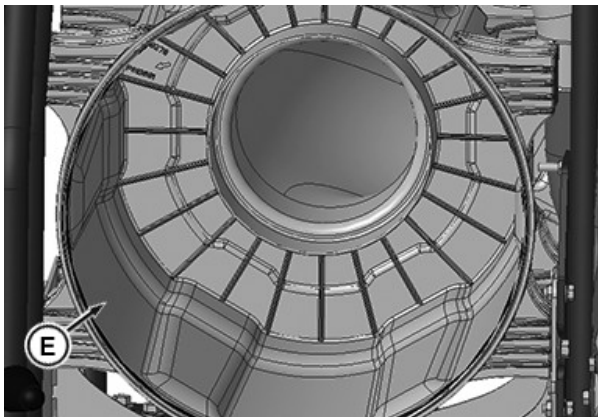

RXA0169026—UN—17JUN19


10. Clean debris and dirt from the filter housing (D). Use cloth dampened with water.

IMPORTANT: Avoid engine damage. Verify correct alignment of the secondary filter tab.

11. Replace secondary air filter if necessary.
12. Push filters firmly back into housing; ensure that filters are seated properly.
13. Install air filter cover and fasten cover clips.
14. Run engine.
15. If diagnostic trouble code appears, see your John Deere dealer.


JL41210,00009CD-19-03JUL23

SCV Pilot Valve Filter

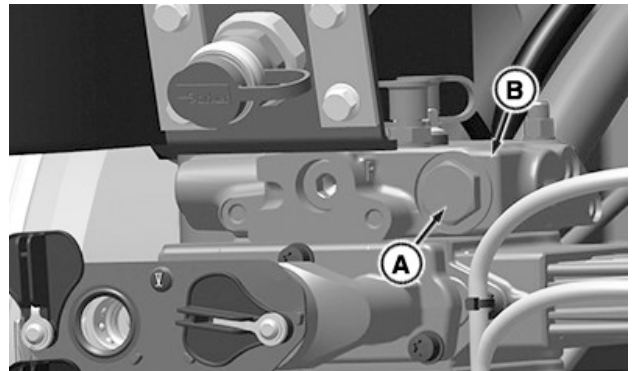

RXA0188366—UN—26OCT22

1. Use a socket to remove the 27mm hex plug (A) from SCV pilot filter housing (B).

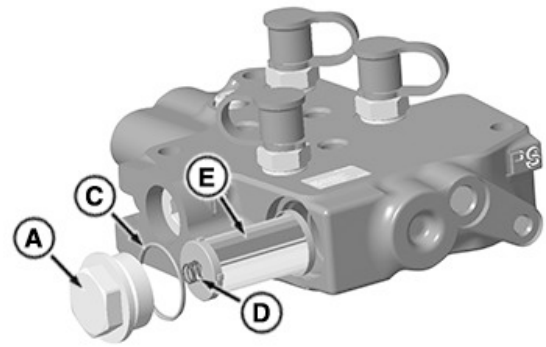

RXA0188365—UN—26OCT22

2. Remove O-ring (C), spring (D), and SCV pilot filter (E).
3. Install new O-ring, SCV pilot filter, and spring.
4. Install hex plug and torque to 145 N·m (107 lb·ft).

TS36762,0000157-19-31JAN23

Diesel Exhaust Fluid (DEF) Tank Vent Filter

CAUTION: Avoid possible personal injury. In case of DEF contact, immediately flush eyes with large amounts of water for a minimum of 15 minutes. Reference the Materials Safety Data Sheet (MSDS) for additional information. Do not ingest DEF. In the event DEF is ingested, contact a physician immediately. Reference the Materials Safety Data Sheet (MSDS) for additional information.

IMPORTANT: Avoid corrosion of vehicle parts or surfaces. If DEF is spilled or contacts any surface other than the storage tank, immediately clean the surface with clear water. DEF is corrosive to painted and unpainted metallic surfaces and can distort some plastic and rubber components. Spilled DEF, if left to dry or if only wiped away with a cloth, will leave a white residue. Improperly cleaned DEF spill may interfere with diagnosis of Selective Catalytic Reduction (SCR) system leakage problems.

Replace the DEF tank vent filter every 1500 hours of operation.



RXA0142031—UN—03JUN14

The DEF tank vent filter (C) is in the battery compartment, above the DEF dosing unit.

1. Open the battery compartment door. See Access Battery Compartment in the Service—General Information section of this Operator's Manual.
2. Remove and replace the DEF tank vent filter.

AK08008,000019D-19-21APR21

Access Diesel Exhaust Fluid (DEF) In-Line Filter

IMPORTANT: Avoid damage to the emissions system:

- Replace the in-line DEF filter every 3000 hours or every 3 years, whichever occurs first.
- Do not begin service on the DEF in-line filter until the light on the battery disconnect switch has gone out. See Battery Disconnect Switch in Engine Operation section of this Operator's Manual.



RXA0163952—UN—24JUL18

The DEF in-line filter (A) is inside the battery compartment.

1. Open the battery compartment door. See Access Battery Compartment in the Service—General Information section of this Operator's Manual.
2. To replace the DEF in-line filter, see Change Diesel Exhaust Fluid (DEF) In-Line Filter in this section of the Operator's Manual.

AK08008,00007DE-19-21APR21


Change Diesel Exhaust Fluid (DEF) In-Line Filter

⚠ CAUTION: Avoid possible personal injury. In case of DEF contact, immediately flush eyes with large amounts of water for a minimum of 15 minutes. Reference the Materials Safety Data Sheet (MSDS) for additional information. Do not ingest DEF. In the event DEF is ingested, contact a physician immediately. Reference the Materials Safety Data Sheet (MSDS) for additional information.

IMPORTANT: Avoid corrosion of vehicle parts or surfaces. If DEF is spilled or contacts any surface other than the storage tank, immediately clean the surface with clear water. DEF is corrosive to painted and unpainted metallic surfaces and can distort some plastic and rubber components. Spilled DEF, if left to dry or if only wiped away with a cloth, will leave a white residue. Improperly cleaned DEF spill may interfere with diagnosis of Selective Catalytic Reduction (SCR) system leakage problems.

NOTE: See your John Deere equipment technical manual or OEM manufacturer's technical manual for in-line DEF filter location.

IMPORTANT: Avoid system and filter damage. Ensure that DEF system is not frozen before changing filter. If system is frozen, operate engine until system has thawed completely.

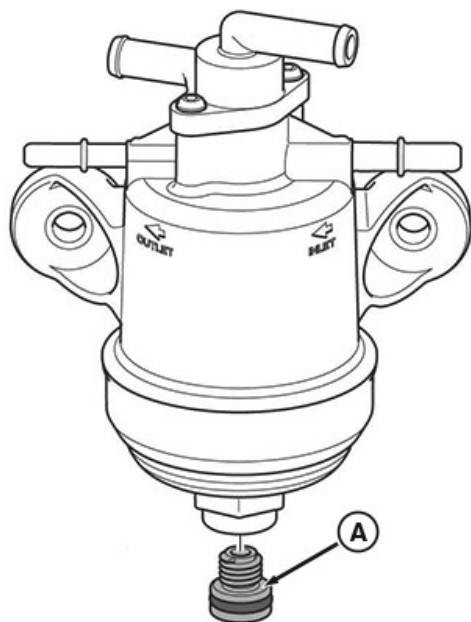

DEF Fluid Removal


RG30728—UN—08AUG18

A—Drain Plug with O-Ring

1. Remove drain plug with O-ring (A) and discard.

NOTE: Container must be DEF compatible and hold at least 300 mL (0.32 qt).

2. Drain DEF into a proper container.

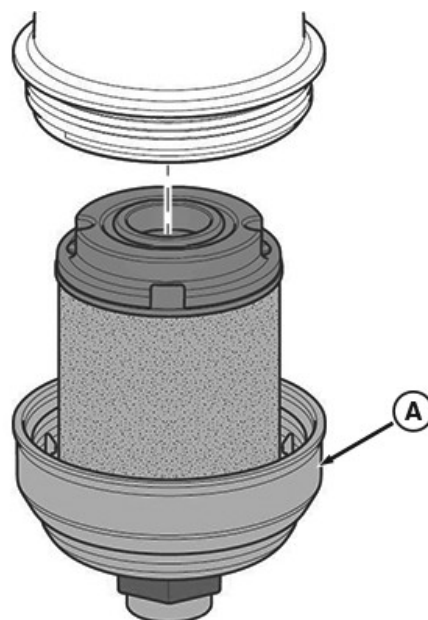


Filter Removal

RG30727—UN—08AUG18

A—Filter Housing

3. Rotate filter housing (A) counterclockwise and pull down.
4. Remove and discard filter from housing (A).

NOTE: If necessary, tap filter to loosen from filter housing (A).

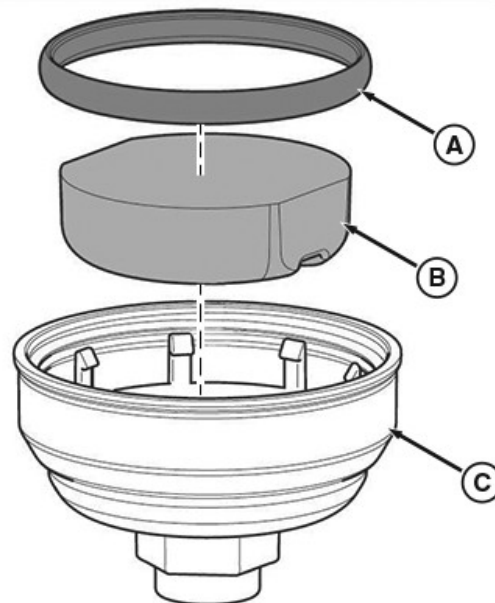

Filter Housing Components


RG30726—UN—08AUG18

- A—O-Ring**
B—Foam Compensation Element
C—Filter Housing

5. Remove and discard O-ring (A) and foam compensation element (B).

NOTE: Filter housing should be cleaned with clean DEF before installing new components to remove any sediment debris or contamination.


6. Install new O-ring (A) and foam compensation element (B) into filter housing (C).

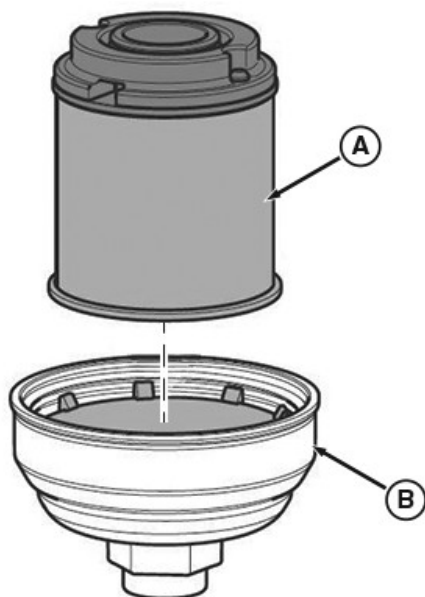

RG30725—UN—08AUG18
Filter Housing and Components Installation

A—Filter
B—Filter Housing

7. Install new filter (A) into filter housing (B).

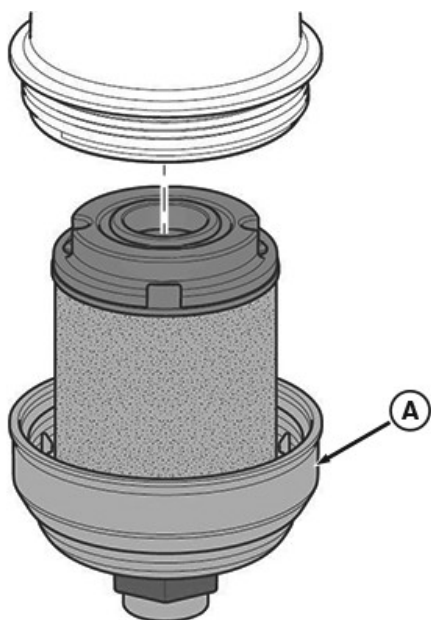


RG30727—UN—08AUG18
In-Line DEF Filter Housing Installation

A—Filter Housing

8. Install filter housing (A) with O-ring, foam compensation element, and filter element.
9. Rotate filter housing (A) clockwise and tighten to specification.

Specification

In-Line DEF Filter	
Housing—Torque.	25 N·m (221 lb·in)

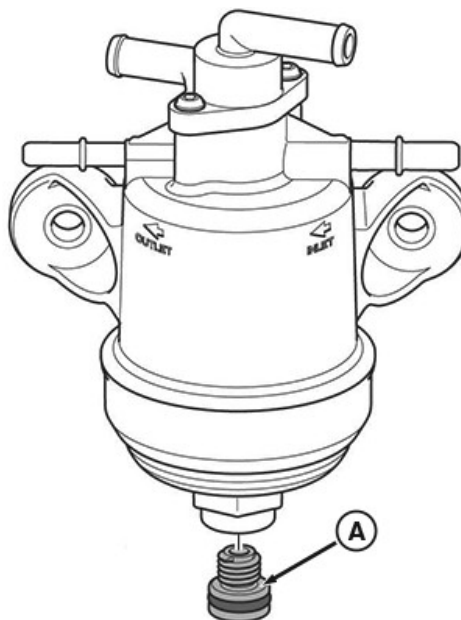

RG30728—UN—08AUG18
In-Line DEF Filter Drain Plug

A—Drain Plug with O-Ring

10. Install new drain plug with O-ring (A). Tighten to specification.

Specification

In-Line DEF Filter Drain	
Plug—Torque.	4 N·m (35 lb·in)


DX,DEF,CHANGE,INLINE,FILT-19-15APR20

Access Diesel Exhaust Fluid (DEF) Dosing Unit Filter

IMPORTANT: Avoid damage to the emissions system:

- Replace the DEF dosing unit filter every 1500 hours or every 3 years, whichever occurs first.
- Do not begin service on the DEF dosing unit filter until the light on the battery disconnect switch has gone out. See Battery Disconnect

Switch in Engine Operation section of this Operator's Manual.

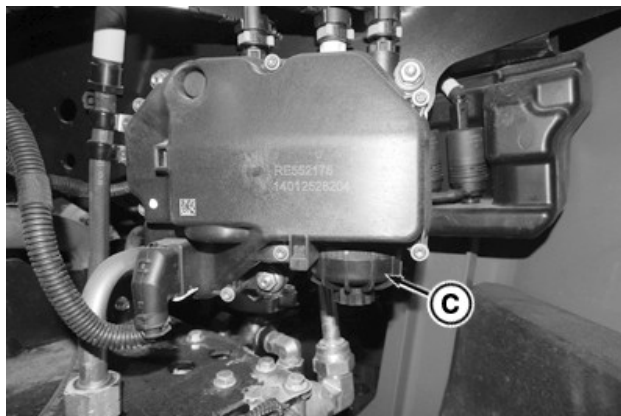


RXA0161214—UN—26OCT17
The DEF dosing unit filter (C) is in the battery compartment, at the bottom of the DEF dosing unit.

1. Open the battery compartment door. See Access Battery Compartment in the Service—General Information section of this Operator's Manual.
2. To replace the DEF dosing unit filter, see Change Diesel Exhaust Fluid (DEF) Dosing Unit Filter in this section of the Operator's Manual.

AK08008,00007E2-19-21APR21

Change Diesel Exhaust Fluid (DEF) Dosing Unit Filter

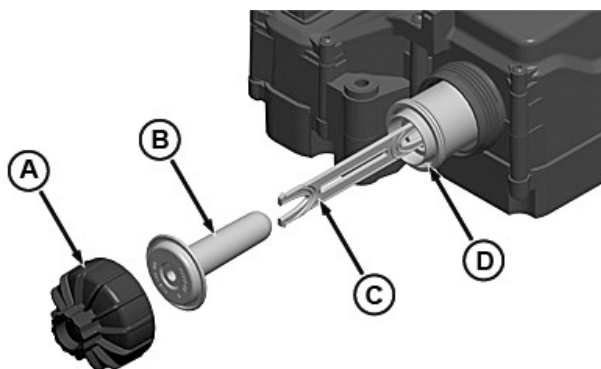

RG22534—UN—21MAR13
DEF Dosing Unit Filter

- A—DEF Dosing Unit Filter Cover
B—DEF Dosing Unit Filter Equalizing Element
C—DEF Dosing Unit Filter Tool (supplied with new filter)
D—DEF Dosing Unit Filter

CAUTION: Avoid contact with eyes. In case of contact, immediately flush eyes with large amounts of water for a minimum of 15 minutes. Reference the Materials Safety Data Sheet (MSDS) for additional information.

IMPORTANT: If DEF is spilled or contacts any surface other than the storage tank, immediately clean the surface with clear water. DEF is corrosive to painted and unpainted metallic surfaces and can distort some plastic and rubber components.

Spilled DEF, if left to dry or if only wiped away with a cloth, leaves a white residue. Improperly cleaned DEF spill can interfere with diagnosis of Selective Catalytic Reduction (SCR) system leakage problems.

NOTE: See your John Deere equipment technical manual or OEM manufacturer's technical manual for DEF dosing unit filter location.

IMPORTANT: Avoid system and filter damage. Ensure that DEF system is not frozen before changing filter. If system is frozen, operate engine until system has thawed completely.

1. Remove DEF dosing unit filter cover (A).
2. Remove and discard DEF dosing unit filter equalizing element (B).

NOTE: DEF dosing unit filter tool (C) is supplied with replacement filter.

3. Insert "Black" end of DEF dosing unit filter tool (C) into DEF dosing unit filter (D) until CLICK is felt or heard indicating DEF dosing unit filter tool is fully engaged.

NOTE: A tool such as a screwdriver can be inserted into DEF dosing unit filter tool slot to assist removal.

4. Pull DEF dosing unit filter tool and DEF dosing unit filter from DEF dosing unit. Discard DEF dosing unit filter and DEF dosing unit filter tool.
5. Clean DEF dosing unit threads and mating surfaces with distilled water.
6. Lubricate DEF filter O-rings with clean DEF. Carefully insert DEF dosing unit filter into DEF dosing unit.
7. Install new DEF dosing unit filter equalizing element into DEF dosing unit filter.
8. Install DEF dosing unit filter cover and tighten to specification.

Specification

DEF Dosing Unit Filter	
Cover—Torque	23 N·m (204 lb·in)

DX,DEF,CHANGE,FILT-19-31OCT19


Hydraulic System Oil and Filters

IMPORTANT: Prevent premature axle failure.
Carefully follow drain and fill procedure.

NOTE: Recalibrate transmission only if transmission shift characteristics change after transmission oil and filter change. See *Transmission Calibration* in *Service—General Information* section of this *Operator's Manual*.


Maximum transmission/hydraulic oil reservoir/axles volume is 233.5 L (61.7 gal), depending on option configuration. Select appropriately sized containers for draining oil.

1. Park tractor on level ground, place transmission in PARK and shut off engine. Allow oil to cool for few minutes.

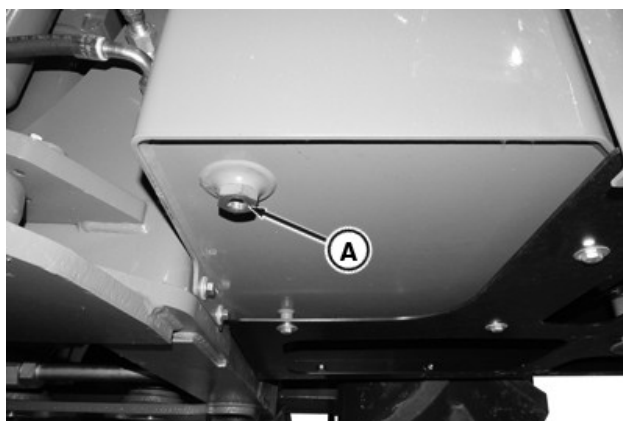


RXA0141856—UN—02JUN14

2. Remove hydraulic reservoir drain plug (A) in gudgeon area and direct oil into a catch oil container.

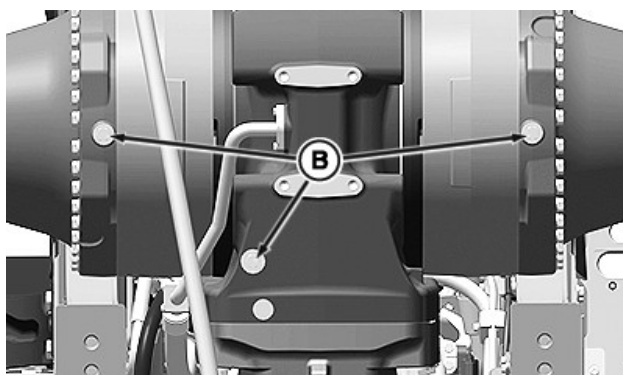


RXA0185143—UN—19AUG21

3. Remove three front axle plugs (B) to drain oil.

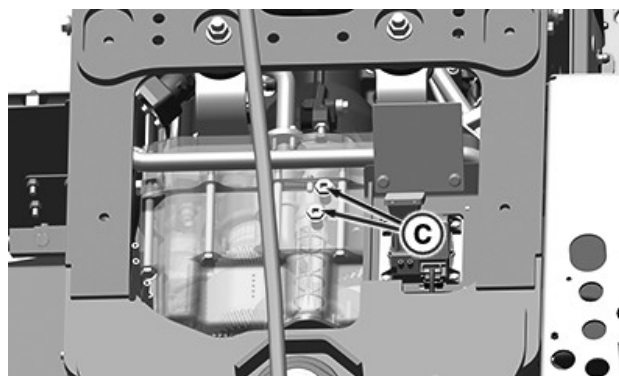


RXA0185144—UN—19AUG21

4. Remove two transmission plugs (C) to drain oil.

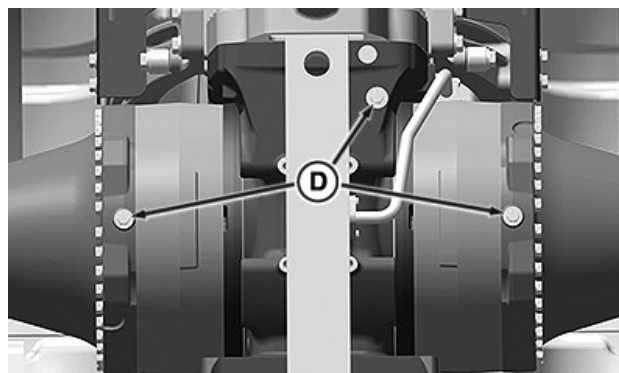

RXA0185145—UN—19AUG21


5. Remove three plugs (D) and drain rear axle oil.

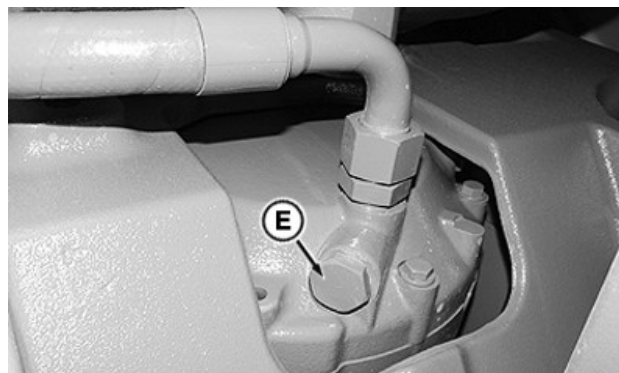

RXA0161062—UN—16OCT17

6. If PTO equipped, remove dropbox plug (E).
7. Reinstall reservoir drain plug.
8. Reinstall transmission drain plug and tighten to 70 N·m (52 lb·ft).
9. Reinstall all removed front and rear axle drain plugs. Tighten to 70 N·m (52 lb·ft).
10. If equipped, reinstall PTO dropbox drain plug and tighten to 70 N·m (52 lb·ft).


NOTE: Some parts in illustration have been removed to better show transmission suction screen.

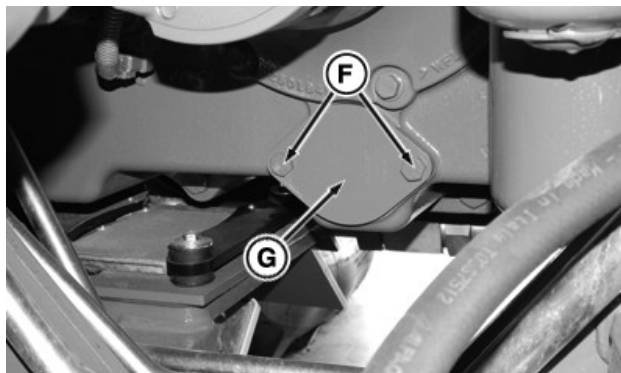

RXA0161063—UN—16OCT17


Transmission-Rear View

11. Remove suction screen cover cap screws (F) and remove cover (G) from rear of transmission.

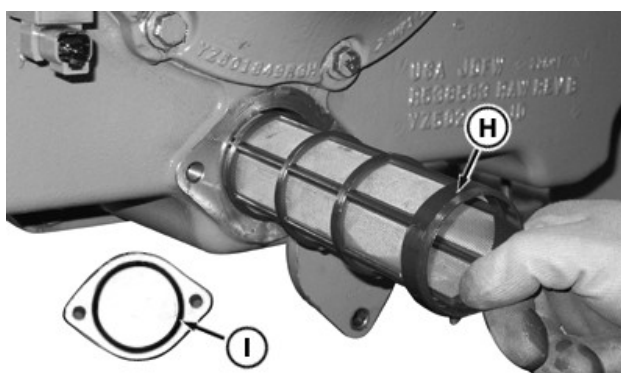

RXA0161064—UN—16OCT17


12. Remove suction screen (H) and clean with a solvent.
13. Remove and discard O-ring (I) on suction screen cover.
14. Inspect for debris in suction screen cavity using a flashlight or magnet.
15. Install new O-ring on cover.
16. Reinstall suction screen and cover. Tighten cap screws to 55 N·m (40 lb·ft).

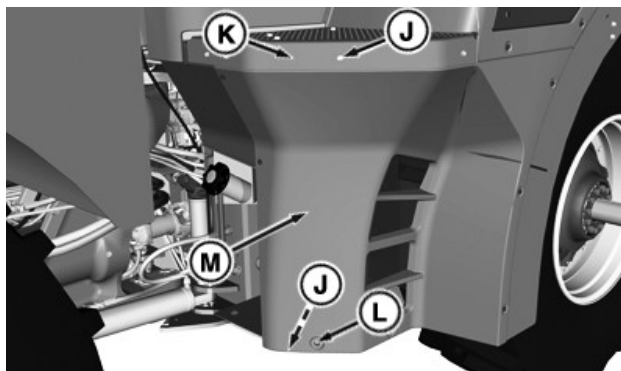

RXA0161065—UN—16OCT17


17. Remove platform cap screws (J) and remove platform step (K).

18. Remove panel cap screws (L) and remove lower shield panel (M).

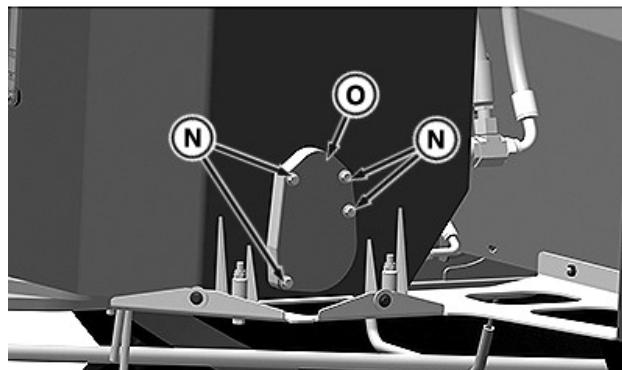

RXA0185158—UN—26AUG21

19. Remove screen cover cap screws (N) and both screen covers (O).

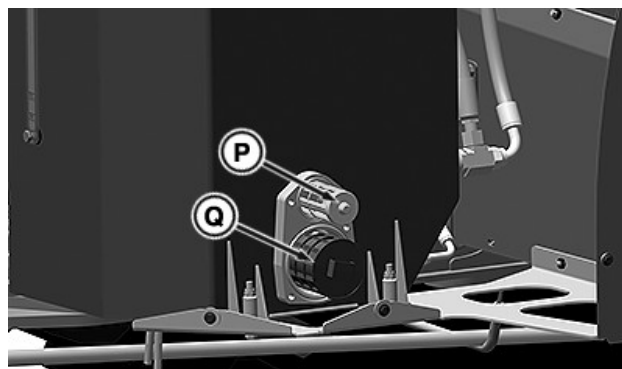

RXA0185159—UN—26AUG21

20. Remove axle lube suction screen (P) and clean with a solvent.
21. Remove charge pump suction screen (Q) and clean with a solvent.
22. Reinstall suction screens and covers. Tighten cap screws to 73 N·m (54 lb·ft).
23. Reinstall lower panel and tighten cap screws to 37 N·m (27 lb·ft).
24. Reinstall platform and tighten cap screws to 79 N·m (58 lb·ft).

NOTE: Approximately 1.9 L (2 qts) of oil is lost when changing filter. Size drain pan accordingly.



RXA0161068—UN—16OCT17

25. Remove transmission oil filters (R), at right-hand rear of transmission.
26. Lubricate new filter O-rings with hydraulic oil and install filters. Tighten one-half turn after O-rings contact filter housing base.

IMPORTANT: Replace hydraulic oil and axle oil filters every 1500 hours or when indicator illuminates.



RXA0161070—UN—16OCT17


27. Replace hydraulic oil filters (S), on left-hand side of gudgeon.
28. Replace axle oil filter (T), located next to hydraulic oil filters (S).
29. Lubricate hydraulic oil and axle oil filter O-rings with hydraulic oil and install on tractor. Tighten one half turn after O-ring contacts filter housing base.

NOTE: Hydraulic oil reservoir does not hold all system hydraulic oil. Transmission and front and rear axles also hold additional system oil.

If possible, check oil level prior to first start of day. Ambient temperature should be 7°C. (45°F) or above. Oil level in the reservoir fluctuates depending upon the volume of oil exchanged with an attached implement.

For applications or implements requiring high volumes of oil transfer (for example - large air seeders or pulling three scrapers), hydraulic reservoir can be filled up to High Volume Takeout Oil Mark 58.5 L (15.4 gal) above MIN COLD.


NOTE: For Transmission-Hydraulic Oil System Capacities (with Filters), see Capacities in Specifications section of this Operator's Manual.

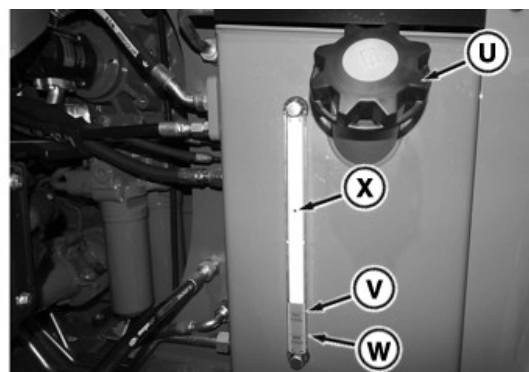

RXA0161071—UN—16OCT17

30. Remove hydraulic oil reservoir fill cap (U) and add hydraulic oil to the reservoir.
31. Reinstall and tighten hydraulic reservoir fill cap.

IMPORTANT: Fill transmission with prescribed quantity of oil to ensure lubrication of transmission lube pump at start-up.

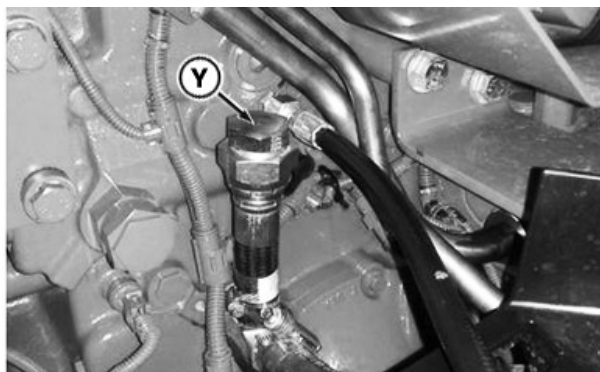

RXA0161072—UN—16OCT17

32. Prefill transmission with 37.9 L (10.0 gal) of transmission-hydraulic oil at fill tube (Y). See Transmission and Hydraulic Oil in Other Lubricants section of this Operator's Manual.
33. Start and run engine at 1200 rpm for 5 minutes.
34. Shut engine OFF and wait 5 minutes for oil level to stabilize.

NOTE: Confirm that oil level does not fall too low if tractor is to be used with implements with large hydraulic cylinders that remove large volumes of oil from the hydraulic system. Place implement in position that requires maximum amount of oil. Oil level should be near High Volume Takeout Oil Mark position on sight gauge.

35. Check to ensure transmission-hydraulic reservoir oil level is visible between Min Cold and Full Cold marks in the sight gauge. If oil level is visible between Min Cold and Full Cold, tractor can be used for normal operation. Oil level in reservoir rises as temperature increases. Replace the transmission-hydraulic oil reservoir vent filter. See Transmission-Hydraulic Vent Filter in this Operator's Manual section.

NOTE: Volume capacity between Min Cold mark and Full Cold mark is 11.4 L (3 gal).


36. If oil level is below Min Cold is sight gauge, add oil through reservoir cap.

IMPORTANT: Excess hydraulic oil can result in decreased engine power and decrease fuel economy.

37. If oil level is above Full Cold mark, remove enough oil to bring it down to Full Cold mark level.


Remove drain plug under hydraulic oil reservoir and direct oil into a container.

Transmission-Hydraulic Vent Filter

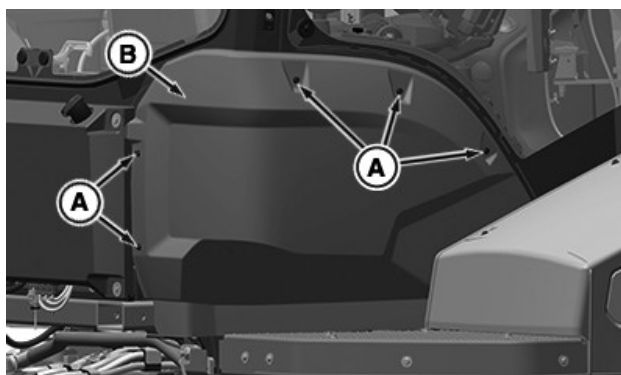

RXA0185252—UN—30AUG21

1. Remove right-hand rear cab panel retaining cap screws (A) and remove cab panel (B).

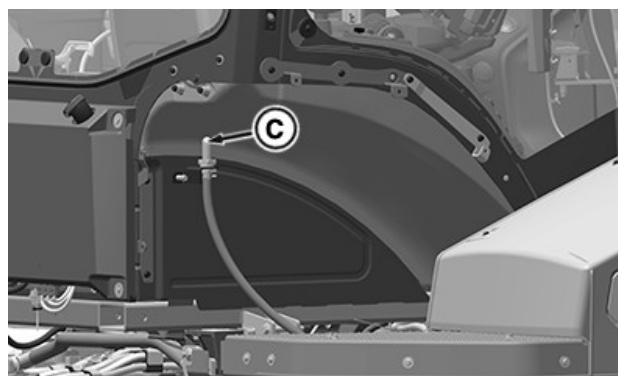

RXA0185253—UN—30AUG21

2. Release retaining hose clamps to remove vent filter (C) from hose.
3. Install new filter onto hose and secure with retaining hose clamps.

IMPORTANT: Do not over tighten retaining screws. Overtightening may result in damage to cab panels.

4. Reinstall cab panel and tighten retaining cap screws.

KD34109,00005C2-19-02SEP21

Engine Coolant

CAUTION: Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

IMPORTANT: READ ENTIRE PROCEDURE BEFORE BEGINNING. Special tools and other products are required to complete the procedure.

Replace the thermostat, thermostat gasket, and de-aeration tank cap whenever the system is flushed.

See your John Deere dealer for recommendations on cleaning solutions.

INITIAL change interval is 6 years or 6000 operating hours, provided cooling system is topped off using only John Deere Cool-Gard II and premix. SCHEDULED interval (2 years or 2000 operating hours) can be extended up to 6 years and 6000 operating hours, depending upon coolant being used. See Drain Intervals for Diesel Engine Coolant in Engine Coolant section of this Operator's Manual.

NOTE: When service is performed on cooling system, make sure to check coolant daily for the next three days of operation. The most effective way to check coolant level is when tractor engine is cool. If coolant is low, fill de-aeration tank to mark on tank.

1. Park the tractor.
2. Turn the key switch to OFF.
3. Allow the radiator to cool.
4. Open the hood. See Open Hood in the Service—General Information section of this Operator's Manual.
5. Remove the front and rear engine side shields. See Remove Front Engine Side Shield and Remove Rear Engine Side Shield in Service—General Information section of this Operator's Manual.


NOTE: To ensure that the fluids in the heating and air conditioning system are drained, maintain these settings throughout the entire procedure:

- Key switch in the RUN position.
- Temperature control set to the hottest setting.

6. Turn the key switch to RUN. See Key Switch in the Front Console section of this Operator's Manual.
7. Adjust the temperature control to the hottest setting. See CommandARM Climate, Radio, and Lighting Controls in the CommandARM Controls section of this Operator's Manual.
8. Remove the de-aeration tank cap.

CAUTION: Explosive release of fluids from pressurized cooling system can cause serious burns.


Shut off engine. Only remove cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

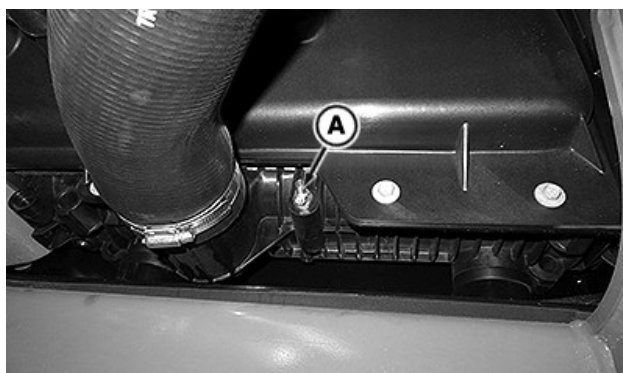

RXA0184960—UN—10AUG21


9. Place catch pan under radiator drain valve (A).
10. Open radiator drain valve and drain coolant into catch pan.

11. Place catch pan under engine drain valve.

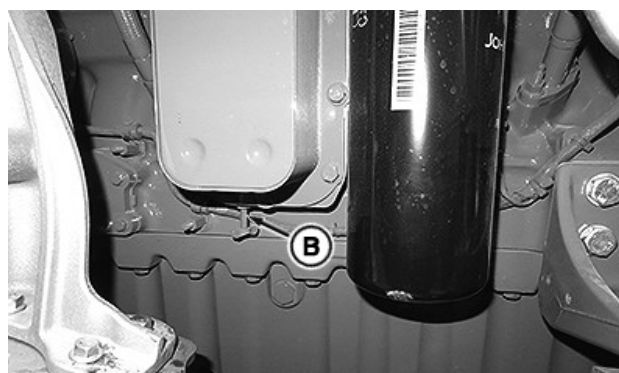


RXA0184961—UN—10AUG21

12. Open engine drain valve (B) and drain coolant into catch pan.
13. Allow radiator and engine to drain.

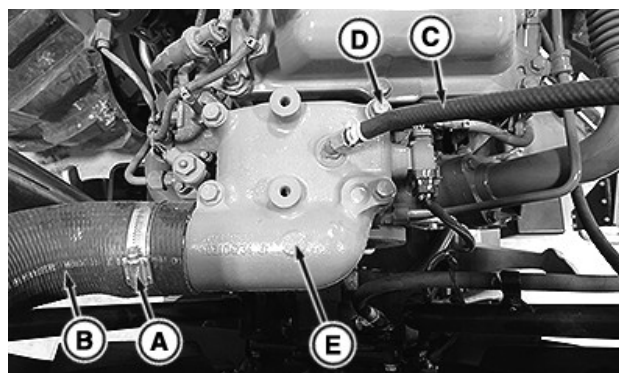


RXA0184962—UN—10AUG21

14. Remove clamp (A), radiator hose (B), and coolant return hose (C).
15. Remove cap screws (D) and thermostat housing (E).

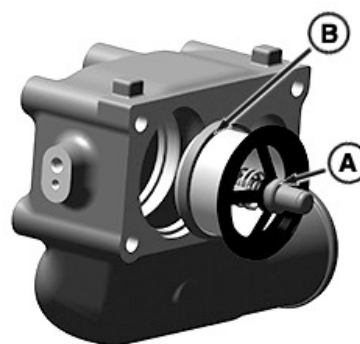

RXA0184963—UN—10AUG21

16. Remove thermostat (A) and seal (B).
17. Install new thermostat and seal.

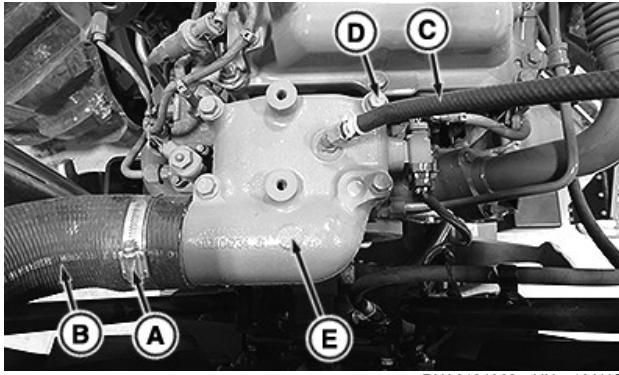

RXA0184962—UN—10AUG21

18. Install thermostat housing (E), cap screws (D). Tighten cap screws to 50 N·m (39 lb·ft)
19. Install coolant return hose (C), radiator hose (B), and clamp (A).
20. Close engine drain valve, and radiator drain valve.
21. Dispose of old coolant in accordance with local laws and ordinances.

IMPORTANT: Never pour cold water or coolant into hot engine.

NOTE: See your John Deere dealer for recommendations on cleaning solutions.

22. Fill high pressure coolant system at de-aeration tank with cooling system cleaning solution.
23. Install de-aeration cap and close hood.

CAUTION: Make sure hood is closed before starting engine.

24. Start engine and run at a minimum of 1500 rpm for 15 minutes.
25. Shut off engine and allow cleaning solution to cool.
26. Make sure that temperature control is turned to hottest setting, then turn key switch to Run position.

CAUTION: Explosive release of fluids from pressurized cooling system can cause serious burns.

Only remove cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

27. Open hood, remove de-aeration cap, put drain pans in place, then open radiator and engine drain valves.
28. Allow cooling system to completely drain.
29. Close engine drain valve, and radiator drain valve.
30. Dispose of cleaning solution in accordance with local laws and ordinances.

31. Fill high pressure coolant system at de-aeration tank with clean water.

IMPORTANT: Never pour cold water or coolant into hot engine.

32. Install de-aeration cap and close hood.

CAUTION: Make sure hood is closed before starting engine.

33. Start engine and run at a minimum of 1500 rpm for 15 minutes.
34. Shut off engine and allow water to cool.
35. Make sure that temperature control is turned to hottest setting, then turn key switch to Run position.

CAUTION: Explosive release of fluids from pressurized cooling system can cause serious burns.

Only remove cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

36. Open hood, remove de-aeration cap, put drain pans in place, then open radiator and engine drain valves.
37. Allow radiator to drain.
38. Close engine drain valve and radiator drain valve.
39. Dispose of drain clean water in accordance with local laws and ordinances.
40. Fill high pressure coolant system at de-aeration tank with new coolant solution. For cooling system capacity, see Capacities in Specifications section of this Operator's Manual.

CAUTION: Make sure hood is closed before starting engine.

IMPORTANT: Never pour cold water or coolant into hot engine.

NOTE: Coolant may seep out of the de-aeration tank overflow vent as air is purged from the coolant system.

Level may change when tractor is running or during the next few cycles.

It is highly recommended the cooling system is checked for leaks after draining, flushing and refilling to ensure tractor performance. Consult your John Deere Dealer for procedure and appropriate tools.

41. Install de-aeration cap, Install engine side shields,

close hood, start engine, and run for a minimum of 1500 rpm for 15 minutes.

SV81855,0000341-19-12JUL22

Engine Crankshaft Damper

See your John Deere dealer.

RX32825,0000676-19-08FEB22

Front Drive Shaft U-Joints

See your John Deere dealer.

KD34109,0000312-19-28MAR17


Service—Lubricate

Heavy Duty Lift Link Pins (Optional)

IMPORTANT: Prevent damage to hitch pins. Grease daily when hitch is in use.

specified in Fuel, Lubricants and Coolant section of this Operator's Manual.

TS36762,0000352-19-30AUG21

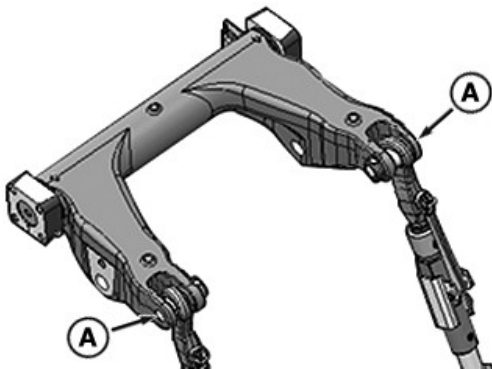

RXA0158577—UN—29MAR17

Lubricate hitch lift link pins (A). Use John Deere SD Polyurea grease or equivalent. See Grease in Other Lubricants section of this Operator's Manual.

RX32825,0000638-19-13JUL17

Steering Pins


CAUTION: Place tractor in PARK and remove key before working in hinge area.




RXA0141971—UN—02JUN14

Hinge Pins


CAUTION: Place tractor in PARK and remove key before working in hinge area.

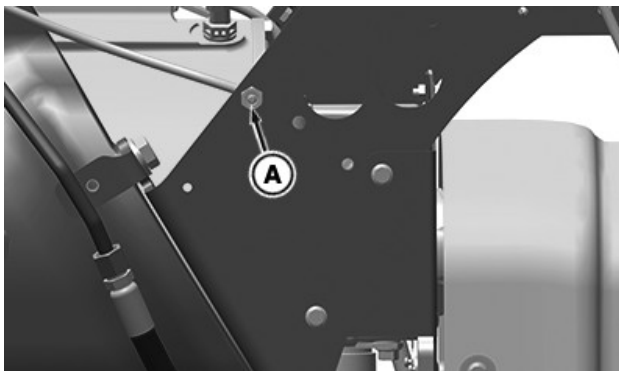

RXA0162410—UN—06MAR18

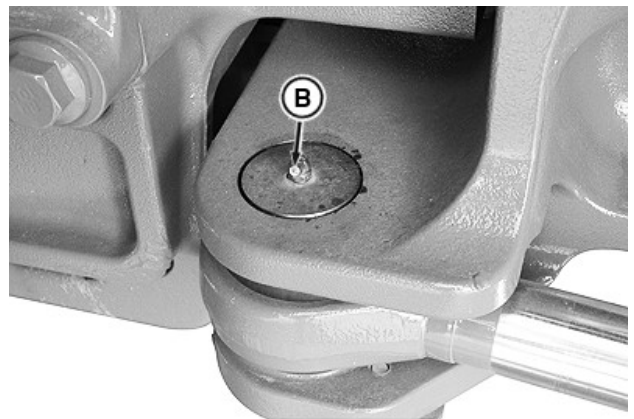

RXA0141972—UN—02JUN14

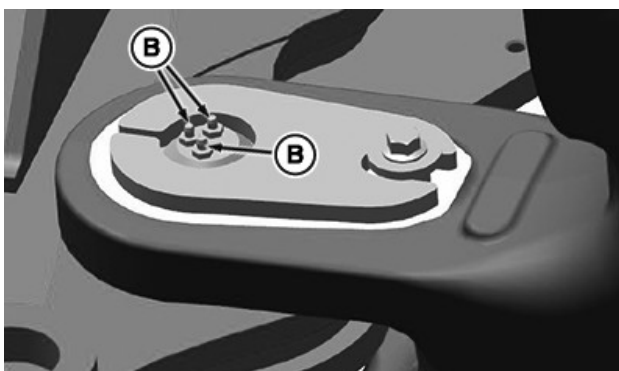


RXA0185249—UN—30AUG21

Lubricate upper (A) and lower hinge pins (B).

Use John Deere SD Polyurea grease or other grease as



RXA0141973—UN—02JUN14

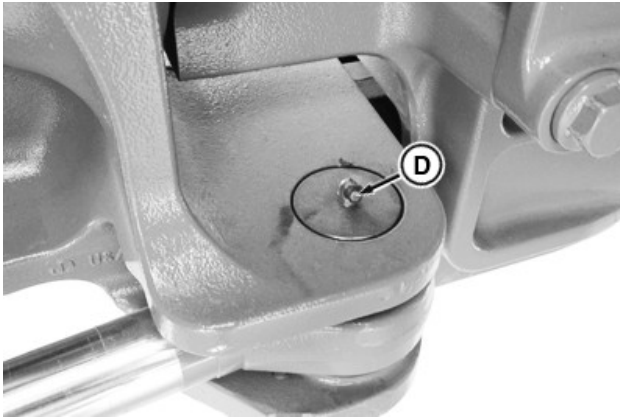


RXA0141974—UN—02JUN14


Lubricate right-hand front (A) and rear (B), left-hand front (C) and rear (D) steering pin bushings.

Use John Deere SD Polyurea grease or other grease as specified in Grease in Other Lubricants section of this Operator's Manual.

RX32825,000063A-19-13JUL17

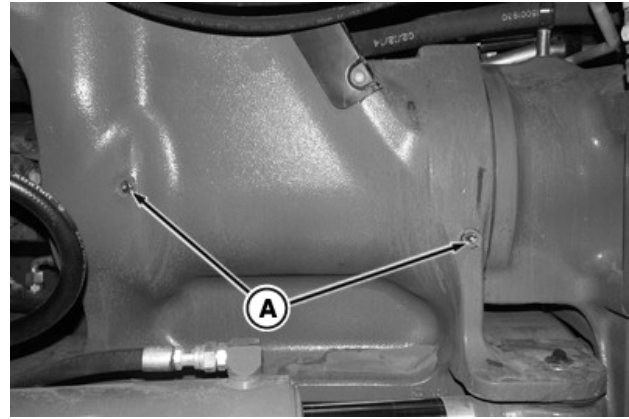

RXA0142539—UN—16JUN14

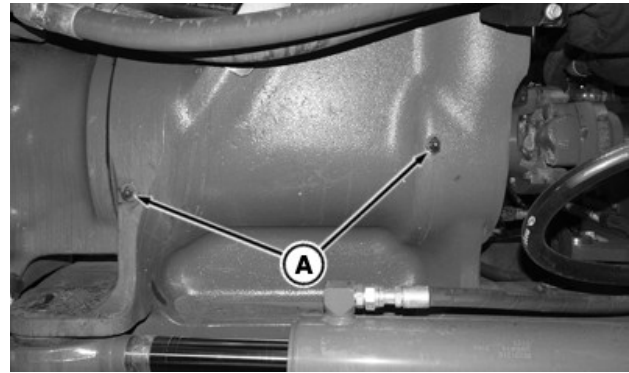


RXA0142540—UN—16JUN14

Lubricate heavy-duty gudgeon tapered roller bearing fittings (A) on both left-hand and right-hand side and on top of gudgeon. Apply approximately 40 pumps of grease to each fitting.

Use John Deere SD Polyurea grease or other grease as specified in Grease in Other Lubricants section of this Operator's Manual.

RX32825,0000641-19-03NOV22

PTO Drive Shaft

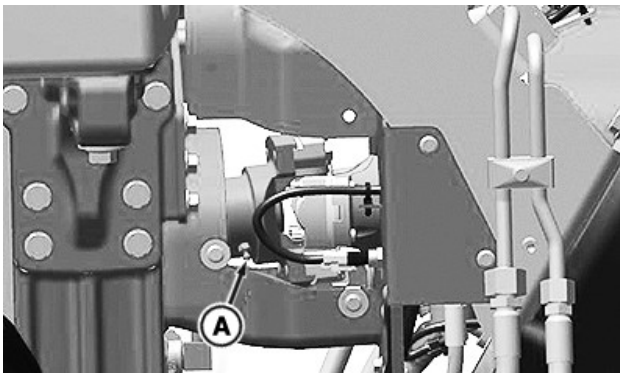

RXA0185281—UN—31AUG21

Lubricate rear PTO shaft fitting (A). Use John Deere SD Polyurea grease or other grease as specified in Grease in Other Lubricants section of this Operator's Manual.

RX32825,0000640-19-31AUG21

Heavy-Duty Gudgeon Bearings

IMPORTANT: Over-lubrication of bearings may result in damage to bearings, seals, and drive shaft.


Use only hand pump grease gun. other grease gun types fill grease cavity too quickly and displace bearing seal. Grease then may bypass bearing, leaving it improperly lubricated.

Lower Drive Line Bearings


IMPORTANT: Normal lubrication is every 250 operating hours. If used in extremely wet conditions, lubricate daily or every 10 operating hours.

IMPORTANT: Avoid drivetrain damage. Operate tractor at low speeds (below 10 mph (16 km/h)) for first 6 hours.

IMPORTANT: Use only hand pump grease gun. Other types of grease guns fill the grease cavity at greater speed. This can push retention seal out of position, allowing grease to enter gudgeon center cavity and leaving bearing improperly lubricated.

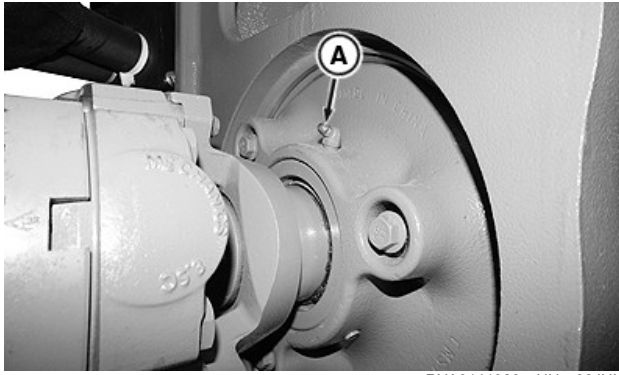

RXA0141923—UN—02JUN14

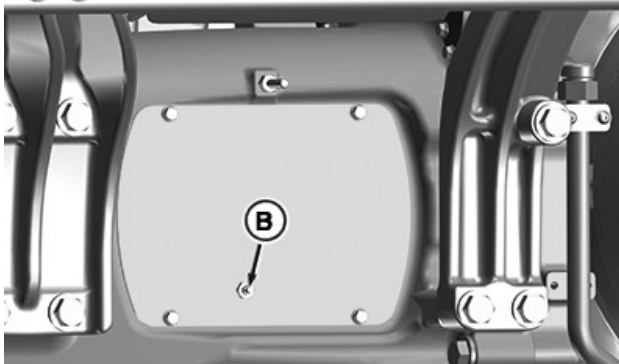

RXA0161215—UN—26OCT17


Lubricate front (A) and rear (B, if equipped) lower drive line bearing lubrication fittings.

Use John Deere SD Polyurea grease or other grease as specified in Grease in Other Lubricants section of this Operator's Manual.


RX32825.0000642-19-16FEB18

Rear Hitch

IMPORTANT: Normal service is every 250 hours. If used daily, service every 50 hours.

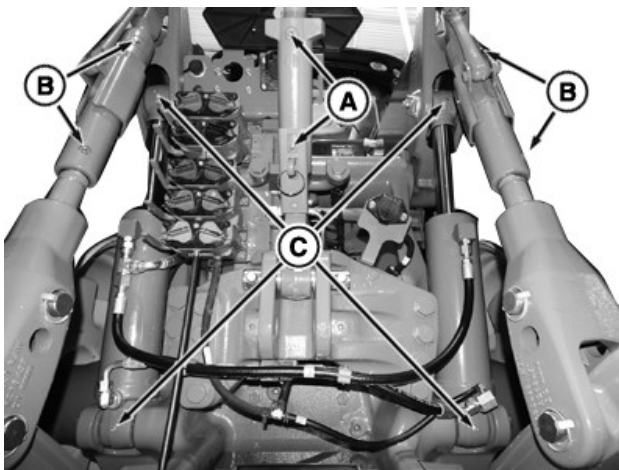

RXA0150422—UN—11NOV15

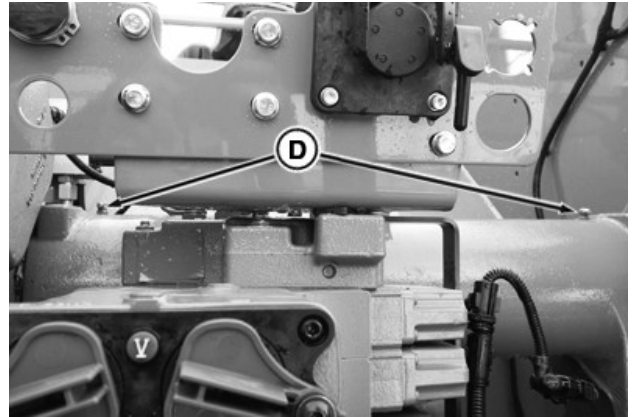


RXA0150423—UN—11NOV15

Lubricate center link (A), lift link (B), lift cylinders (C), and rockshaft (D) hitch fittings.


Use John Deere SD Polyurea grease or equivalent. See Grease in Other Lubricants section of this Operator's Manual.

RX32825.0000643-19-08NOV17

Lift Cylinders and Rockshaft

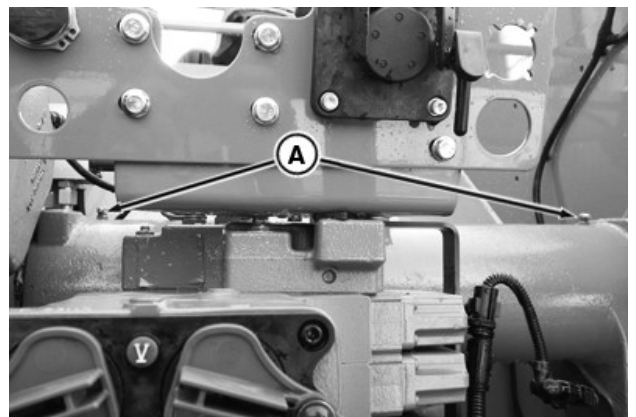

RXA0141976—UN—02JUN14

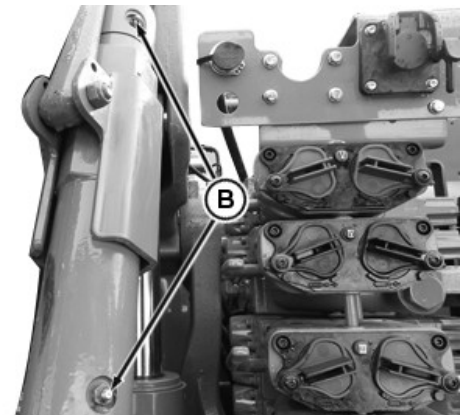

RXA0141977—UN—20JUN14

Rockshaft Assembly

Lubricate lift cylinder pin fittings (B) on both sides of tractor. Lubricate left-hand (A) and right-hand side

rockshaft fittings. See Grease in Other Lubricants section of this Operator's Manual for correct grease to use.

TO84419,0000199-19-13JUL17


HydraCushion Front Axle Suspension

Lubricate HydraCushion front axle suspension components. Use John Deere SD Polyurea grease or other grease as specified in Grease in Other Lubricants section of this Operator's Manual.




RXA0132813—UN—06JUN13


Access suspension cylinders at location (A) on both sides of tractor.

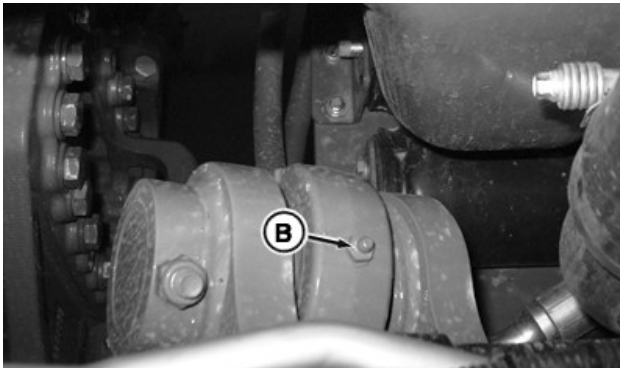

RXA0132818—UN—30MAY13

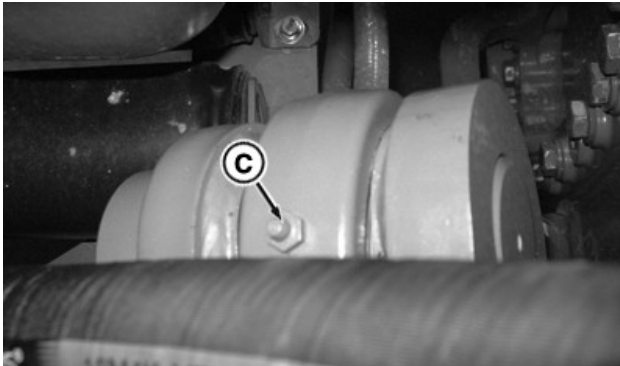


RXA0132820—UN—06JUN13

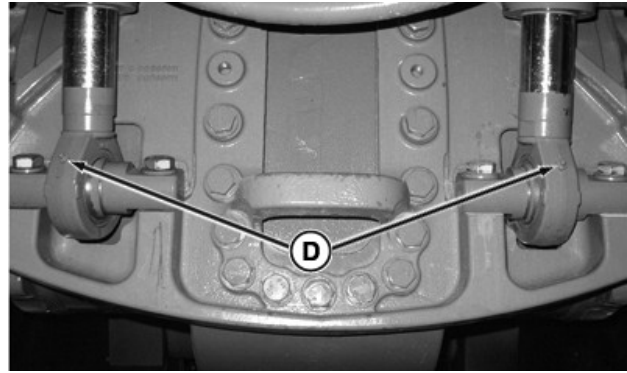

RXA0132821—UN—06JUN13

Lubricate upper right-hand (B), upper left-hand (C) and lower right-hand and left-hand fittings (D). Give each fitting approximately 10 pumps of grease.

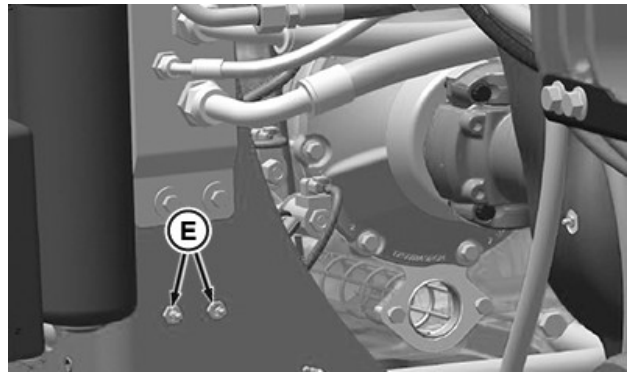

RXA0185250—UN—30AUG21

Lubricate front axle suspension remote fittings (E) located on left-hand side of gudgeon frame.

RW29387,000068B-19-24JUN22

Service—Electrical

Service—Electrical Overview

In addition to fuses and relays mounted in fuse panels (behind operator's seat), tractors are also equipped with solid state load centers located in two electronic control units.

These solid-state load centers replace fused relay circuits previously used. Their primary function is to control the majority of high current loads such as rear fender lights and horn. Load center circuitry monitors loads and voltages providing fast reaction time and ability to alert operator if a circuit overloads or if voltage is out of specification, i.e. open circuit (undercurrent) or short circuit (over-current).

If circuit is faulty and a diagnostic trouble code is generated, circuit will stay OFF and diagnostic trouble code will remain active until circuit is recycled by operator. If circuit or one of its components is turned back ON and problem is no longer present, system will function normally.

As an example, if a light circuit is determined to have an over-current condition, load center system will shut the circuit off. If operator turns light switch off and back on, and system senses zero amps when light controlled by the switch is off, system will turn system back on and normal operation will turn back on.

If total current load of load center exceeds a preset level, software will automatically shut down system, turning off one circuit at a time. Logic circuit will wait a few seconds between circuit shutdowns to determine if total controller current has fallen below preset level, or if additional circuits should be turned off.

Solid state circuits are rated for a fixed value. If additional electrical devices need to be added to tractor, it is recommend to use a power strip or convenience outlets in conjunction with an off/on switch. Splicing into a wire in the wrong location could cause circuit to overload and shut circuit down.

If extra implement lights and controls, such as switches are needed, contact your John Deere dealer. A dealer can provide information on correct method to tie in a light switch with one of accessory wires located in 7 pin terminal on back of tractor.

TS36762,000015E-19-25MAR21

Welding Near Electronic Control Units



TS953—UN—15MAY90

IMPORTANT: Do not jump-start engines with arc welding equipment. Currents and voltages are too high and may cause permanent damage.

1. Disconnect the negative (-) battery cable(s).
2. Disconnect the positive (+) battery cable(s).
3. Connect the positive and negative cables together. Do not attach to vehicle frame.
4. Clear or move any wiring harness sections away from welding area.
5. Connect welder ground close to welding point and away from control units.
6. After welding, reverse Steps 1—5.

DX,WW,ECU02-19-14AUG09


Keep Electronic Control Unit Connectors Clean

IMPORTANT: Do not open control unit and do not clean with a high-pressure spray. Moisture, dirt, and other contaminants may cause permanent damage.

1. Keep terminals clean and free of foreign debris. Moisture, dirt, and other contaminants may cause the terminals to erode over time and not make a good electrical connection.
2. If a connector is not in use, put on the proper dust cap or an appropriate seal to protect it from foreign debris and moisture.
3. Control units are not repairable.
4. Since control units are the components LEAST likely to fail, isolate failure before replacing by completing a diagnostic procedure. (See your John Deere dealer.)
5. The wiring harness terminals and connectors for electronic control units are repairable.

DX,WW,ECU04-19-11JUN09

Compressed Air Use

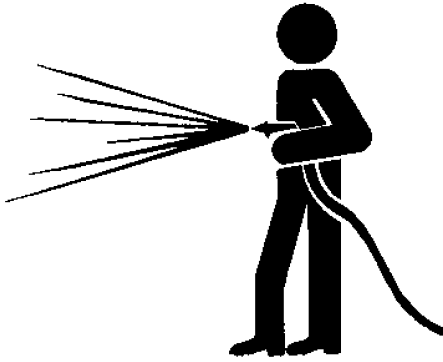


RW56455—UN—30JUN97

IMPORTANT: Directing pressurized air at electronic/electrical components or connectors, may cause buildup of static electricity and product malfunctions.

TO84419,0000228-19-25JUL17

High-Pressure Washer Use

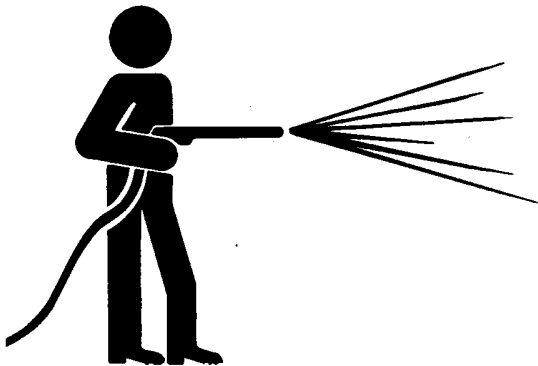

T6642EJ—UN—18OCT88

IMPORTANT: Directing pressurized water at electronic/electrical components or connectors, bearings and hydraulic seals, fuel injection pumps, exhaust outlet or other sensitive parts and components may cause product malfunctions. Reduce pressure, and spray at a 45 to 90 degree angle. When washing do not direct any water towards the exhaust or any fill tank openings.

TO84419,0000215-19-20JAN17

Disconnect Battery

CAUTION: Avoid injury or damage to tractor systems from inadvertent contact with electrical power. Disconnect battery when directed.

IMPORTANT: Prevent damage to the tractor emissions system. Never disconnect the battery disconnect switch while the battery disconnect switch light is illuminated. See Battery Disconnect Switch in Engine Operation section of this Operator's Manual.

TS36762,0000161-19-11FEB20

Service Batteries and Connections

CAUTION: It can cause a buildup of static charge leading to potential injury.

Battery gas can explode. Keep sparks and flames away from batteries. Use flashlight to check battery electrolyte level.

Never check the battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Always remove battery ground cables before positive battery cables and connect them last. Do not let disconnected ground terminal touch metal surface.

WARNING: Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. **Wash hands after handling.**

CAUTION: Avoid contact with poisonous sulfuric acid in battery electrolyte. Battery acid can burn skin, damage clothing, and cause blindness if splashed into eyes.

NOTE: Although this battery is a maintenance free battery, conditions such as long periods of operation at high ambient temperatures and excessive engine cranking may require adding water. See label on battery.

For optimum battery performance, keep battery terminals clean and tight. For replacement batteries, follow manufacturer's recommendations.


IMPORTANT: Prevent damage to tractor:

- Emissions system. Never disconnect the battery disconnect switch while the battery disconnect switch light is illuminated. See Battery Disconnect Switch in the Engine Operations section of this Operator's Manual.
- Electrical system. Ensure that the key switch is in the OFF position before servicing the batteries and connections.

1. Turn off the battery disconnect switch. See Battery


Disconnect Switch in the Engine Operation section of this Operator's Manual.

2. Open the battery compartment cover. See Access Battery Compartment in the Service—General Information section of this Operator's Manual.

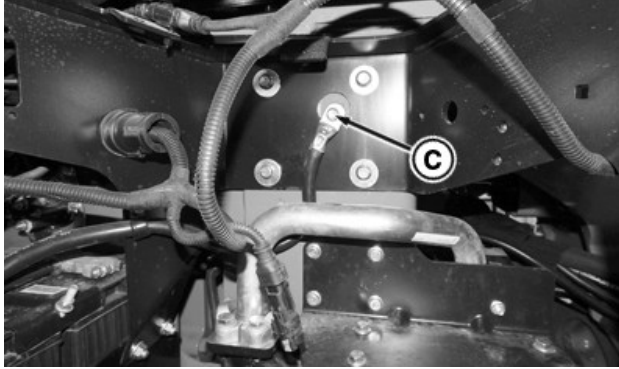

RXA0141966—UN—02JUN14

3. Disconnect the single point ground cable (C).

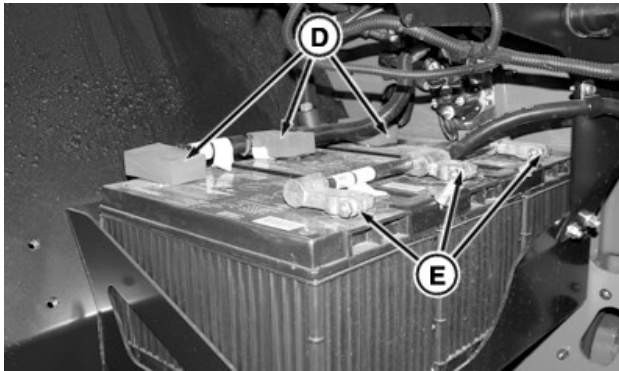

RXA0158217—UN—09MAR17

4. Disconnect negative battery cables (E), then positive battery cables (D).

IMPORTANT: Never use compressed air to clean batteries.

5. Remove any corrosion with a terminal brush, then clean terminals and battery posts using a baking soda and water solution.
6. Rinse the batteries with clean water and air dry.
7. If the batteries have been removed for service, slide batteries back into compartment.
8. Install the battery retaining clamp.
9. Connect the:
 - a. Positive battery cables.
 - b. Negative battery cables.

10. Apply a thin coating of grease to cable ends.
11. Connect the single point ground cable to the tractor frame.
12. Close the battery compartment cover. See Access Battery Compartment in the Service—General Information section of this Operator's Manual.
13. Turn on the battery disconnect switch.


RX32825,0000018-19-21APR21

Load Center—Cab

IMPORTANT: Prevent damage to the tractor:

- **Emissions System. Never disconnect the battery disconnect switch while the battery disconnect switch light is illuminated. See Battery Disconnect Switch in Engine Operation section of this Operator's Manual.**
- **Electrical system.**
 - Ensure that the key switch is in the OFF position before changing fuses.
 - Replacement fuse must be the same rating as the original fuse.

Access Cab Load Center

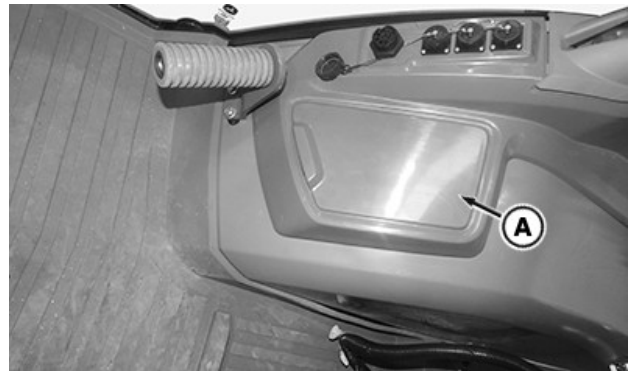

RXA0167377—UN—05APR19


Behind Side Panel (A) at Lower Right of Operator's Seat

Remove the side panel to access the cab load center.

Relay/Fuse Identification

K—Relay
F—Fuse

Relay/Fuse Locations

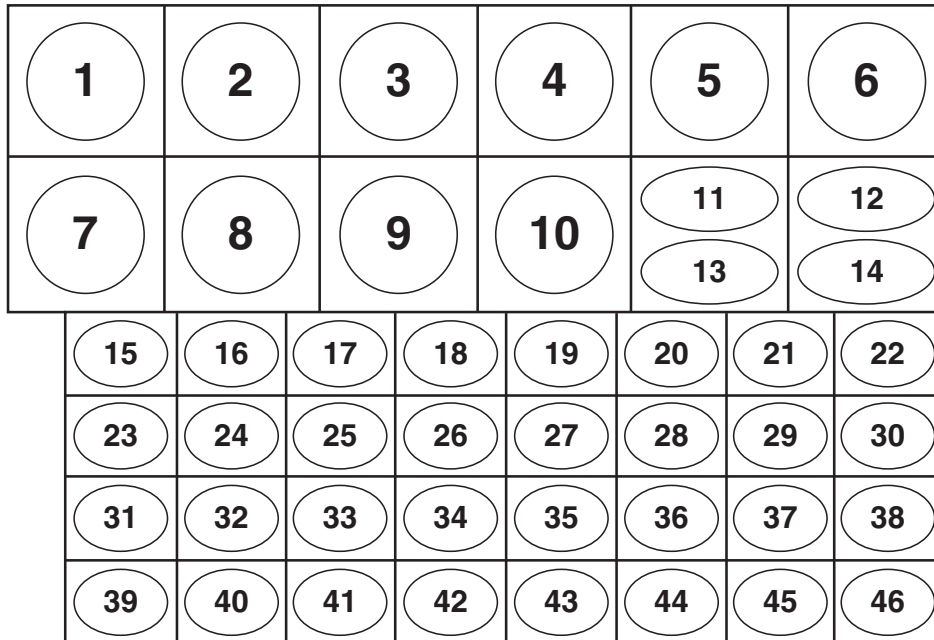

RXA0173765—UN—13JAN20

1—K2: Ignition
 2—K18: HVAC Blowers
 3—Not Used
 4—K4: Trailer Accessory Lighting
 5—K20: Seat
 6—K6: Accessory
 7—K9: 2-Track Suspension
 8—K8: Trailer Flood
 9—K9: Buzzer
 10—K10: Autonomy Relay
 11—F35: Active Seat (if equipped) (40A)
 12—F40: DC-AC Inverter (40A)
 13—F33: Accessory (70A)
 14—F37: HVAC Blowers (40A)
 15—F15: Convenience, Lighter, and CB (30A)
 16—F01: Key/Switch Battery (05A)
 17—F02: Operator Presence Switch (10A)
 18—F03: Automatic Temperature Control (10A)
 19—F17: USB Power Armrest (05A)
 20—F20: Radio ACC Power (10A)
 21—F24: Cameras (10A)
 22—F23: CB, Refrigerator (30A)
 23—F05: Radio (10A)


24—F07: MTG JDLINK Controller, Ethernet Switch, and GPS Receiver (10A)
 25—F09: CommandCenter Server (10A)
 26—F10: Trailer Flood (30A)
 27—Spare (15A)
 28—F27: Convenience Outlets (30A)
 29—F31: Power Mirrors; Trailering Lights (if equipped) (20A)
 30—F54: Auxiliary Outlets (30A)
 31—F11: Trailer Lighting (30A)
 32—F08: Armrest Controller (15A)
 33—F13: Steering Controller (15A)
 34—F55: Vehicle Autonomy Controller (05A)
 35—F32: Come Home (10A)
 36—F19: Seat Suspension (20A)
 37—F41: Seat Top (20A)
 38—F42: Seat Top (30A)
 39—F18: Primary Display Unit (10A)
 40—F47: Cab Front Console Controller (15A)
 41—F16: 2-Track Suspension Motor (30A)
 42—Spare (10A)
 43—Come Home Use Only
 44—Come Home Use Only
 45—F49: Accessory (low current), Subwoofer (20A)
 46—F46: USB Power C-Post (10A)

SV81855,0000349-19-25MAY23

Load Center—Front

IMPORTANT: Prevent damage to the tractor:

- **Emissions system.** Never disconnect the battery disconnect switch while the light is illuminated. See Battery Disconnect Switch in Engine Operation section of this Operator's Manual.
- **Electrical system.**
 - Ensure that the key switch is in the OFF position before changing fuses.
 - Replacement fuse must be the same rating as the original fuse.

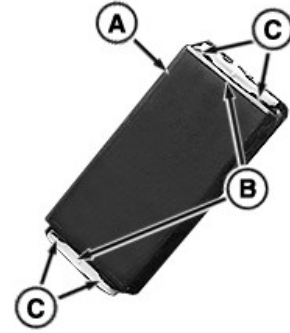


RXA0180445—UN—13NOV20

The front load center (A) is located above the batteries.

Access Front Load Center

1. Open the battery compartment. See Access Battery Compartment in Service—General Information section of this Operator's Manual.
2. To release the front load center cover and access the front load center:
 - a. Gently slide the yellow locking tabs (B) towards the load center cover front face.
 - b. Squeeze the four black tabs (C) inward towards the load center cover.
3. Replace the front load center cover when the service is complete.
4. Close the battery compartment.

Front Load Center—Relay/Fuse Identification

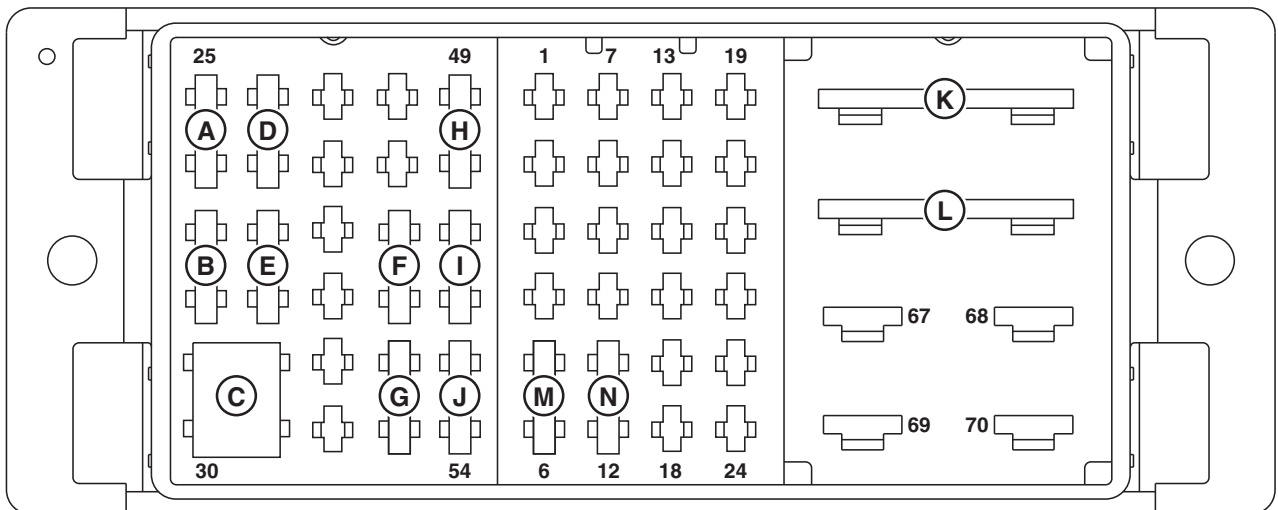

RXA0189072—UN—10JUL23

KE—Relay

FE—Fuse

Location	Relay/Fuse Identification	Size	Description	Pin Number
A	FE28	10A	Rear Chassis Controller	25, 26
B	FE101	10A	Aux Light	27, 28
C	KE14	Relay	Ether	29, 30, 35, 36

Location	Relay/Fuse Identification	Size	Description	Pin Number
D	FE13	2A	ECU	31, 32
E	FE14	15A	Ether	33, 34
F	FE07	10A	Ignition	45, 46
G	FE08	15A	Steering Controller	47, 48
H	FE01	20A	ECU	49, 50
I	FE02	25A	ECU	51, 52
J	FE03	25A	ECU	53, 54
K	FE100	60A	Implement Power	63, 64
L	FE30	30A	Implement ECU Power	65, 66
M	FE43	20A	Rear VPU	5, 6
N	FE44	20A	Front VPU	11, 12


EC82310,0000F54-19-10JUL23

Access Master Fuses

CAUTION: Disconnect both negative and positive battery connections from both batteries prior to fuse inspection or replacement.

IMPORTANT: Prevent damage to tractor:

- **Emissions system.** Never disconnect the battery disconnect switch while the battery disconnect switch light is illuminated. See **Battery Disconnect Switch** in the **Engine Operations** section of this Operator's Manual.
- **Electrical system.** Ensure that the key switch is in the **OFF** position before servicing the batteries and connections.
- **Do not attempt to disassemble the master fuses unless instructed by your John Deere dealer.** Replacement fuses must be the same rating as original.

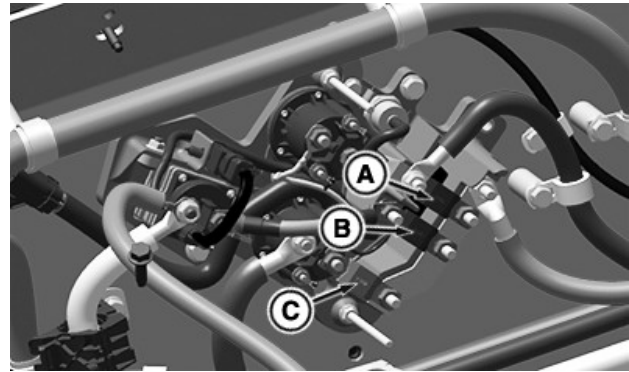

RXA0180457—UN—17NOV20

Master Fuse (A) is at the back of the battery compartment.

A—Master Fuse (300A)
 B—Alternator Battery Fuse (300A)
 C—Backup Hydraulic Pump Fuse (175A)

TO84419,00001D9-19-21APR21

To access the master fuses:

1. Turn the key switch to the **OFF** position.
2. Turn off the battery disconnect switch. See **Battery Disconnect Switch** in the **Engine Operation** section of this Operator's Manual.
3. Access the battery compartment. See **Access Battery Compartment** in the **Service—General Information** section of this Operator's Manual.
4. Disconnect the battery ground (-) cable.


NOTE: The master fuse is connected across both posts of the junction box.

The master fuses are:

Access Implement Power Relay Module Relays

IMPORTANT: Prevent damage to the tractor electrical system. Ensure that the key switch is in the **off** position before replacing the implement power relay module relays.

To access the implement power relay module relays, remove the cab rear panel. See **Remove Cab Rear Panel** in the **Service—General Information** section of this Operator's Manual.

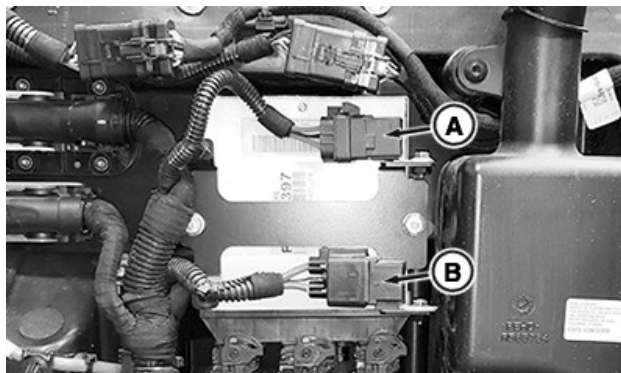

RXA0180458—UN—17NOV20

Upper Right-Hand Corner of Cab Back Panel

A—KE01 ISOBUS Control Unit Power
B—KE100 ISOBUS Implement Power

Replace the Relays


NOTE: The associated fuses are on the front load center. To replace the associated fuses, see Load Center-Front in this Operator's Manual section.

To replace the relays:

1. Turn key switch to off position.
2. Disconnect battery. See Disconnect Battery in this section of the Operator's Manual.
3. Disconnect the wiring harness from the relay.
4. Remove the old relay.
5. Attach the new relay.
6. Connect the wiring harness to the relay.

TO84419,00001DA-19-01NOV22

Handle Halogen Light Bulbs Safely

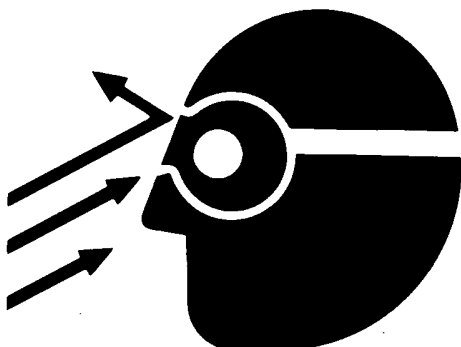

TS266—UN—23AUG88



H39474—UN—30JUN00

CAUTION: Halogen bulbs (A) contain gas under pressure. Handling a bulb improperly could cause it to shatter into flying fragments. To avoid possible injury:

- Turn light switch off and allow bulbs to cool before changing. Leave switch off until bulb change is done.
- Wear eye protection.
- Handle bulb by its base. Keep bulb oil free; wear gloves to avoid touching glass.
- Do not drop or scratch bulb. Keep moisture away.
- Place used bulb in the new bulb carton and dispose of properly. Keep out of reach of children.

TS36762,0000165-19-05SEP17

Aim Headlights

CAUTION: Avoid unacceptable lighting display. As adjustments are made, observe local requirements and regulations.


Lighting options provide different combinations and locations of light. See Light Identification in Lights section of this Operator's Manual to identify which lights are high- and low-beam headlights.

High- and low-beam headlights are adjustable to provide desired lighting coverage. In some options packages, LED high- and low-beam headlights are mounted together and cannot be adjusted separately. In others the high- and low-beam lights are mounted separately and must be adjusted individually.

All halogen high- and low-beam headlights can be adjusted individually.

Before aiming headlights, adjust the tractor to duplicate transport conditions. Adjust tire pressures to correct values. Neutralize front axle suspension system (if equipped).


NOTE: Diagrams are not drawn to scale.

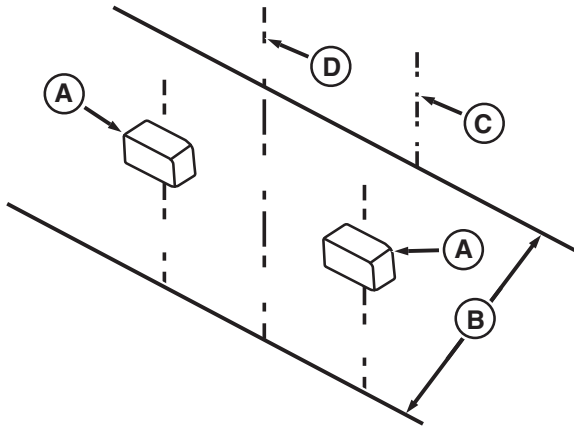

RXA0172851—UN—19DEC19

1. Park the tractor on a level surface with the low-beam headlight lenses (A) 7.5 meters (25 ft) (B) from a flat, straight, and vertical wall. Tractor must be perpendicular to the wall.
2. Mark a vertical line on the wall (C) corresponding to the tractor vertical center line (D).

NOTE: If tractor is equipped with LED headlights without separate low-beam headlights, both high and low beams are adjusted with the low-beam adjustment screws. Use low-beam aiming and adjustment procedures.

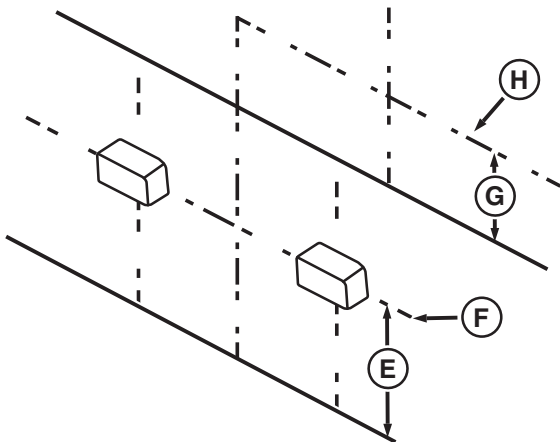

RXA0172852—UN—02JAN20


3. On the tractor, measure the vertical distance (E) from the ground to the horizontal center of the light to be adjusted (F).

4. Multiply light vertical height by the appropriate height adjustment factor. Height adjustment factor:

- High Beam = 0.95
- Low Beam = 0.75


Example: High-beam light center line height from floor (F) is 1.52 m (60 in). Multiplying times 0.95 equals 1.45 m (57 in) height for the wall high-beam horizontal center line (G).

5. Mark a horizontal line (I) on wall at the height calculated in step 4 (J).

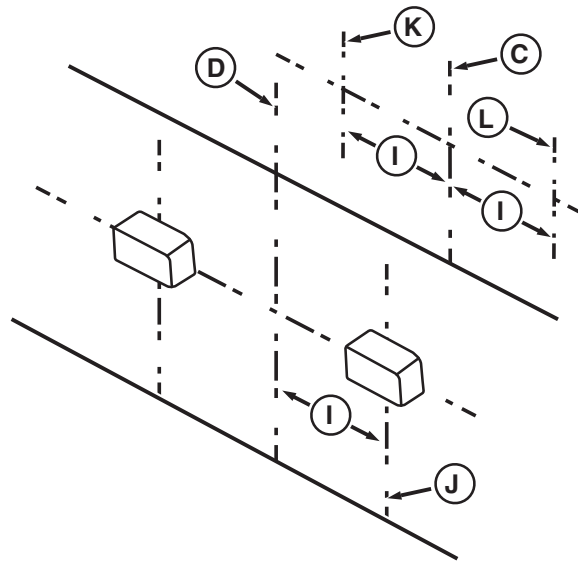

RXA0172853—UN—02JAN20

6. Measure the distance (I) from the hood vertical center (D) to the vertical center (L) of the desired right-hand light lens.
7. Place left-hand (K) and right-hand (J) vertical center lines on the wall. Position lines on either side of the tractor center line (C) at the distance (I) measured in step 3.
8. Cover left-hand light.
9. Turn on desired lights.

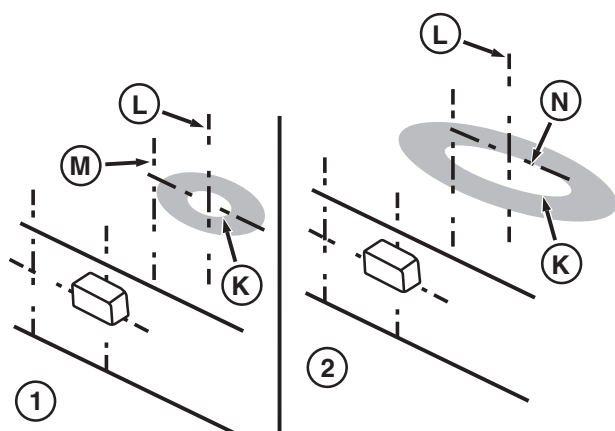

RXA0172854—UN—19DEC19

Right-Hand Headlight Adjustment

- 1—High-Beam Headlight
2—Low-Beam Headlight

10. Adjust brightest point of the light beam (hot spot) (K) so that it shines in the correct position. Center the hot spots on the light vertical center lines (L). High beams are centered on the high-beam light horizontal center line (M).

Adjust low beams so that the top of the hot spot (K) is on the low-beam light horizontal center line (N).


See appropriate adjustment information in this Operator's Manual section.

11. Transfer the cover from the left-hand light to right-hand light.
12. Repeat adjustment procedure with the left-hand light.
13. To adjust other lights, return to step 3.

RX32825,00000B4-19-05AUG21


Adjust Front Grille Lights

To adjust front grille lights:

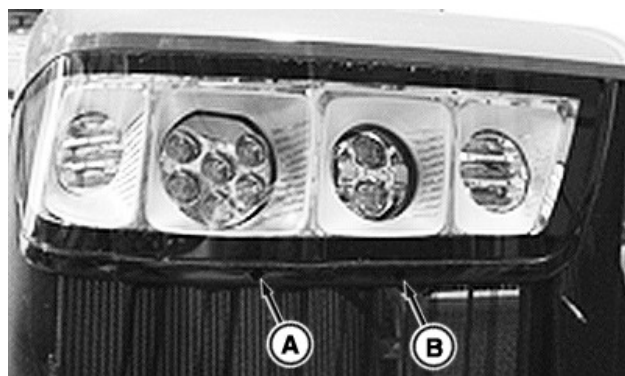For Low Beam Headlights:

RXA0169633—UN—15JUL19

1. To lower low beam aim, turn low beam adjustment screw (A) clockwise.

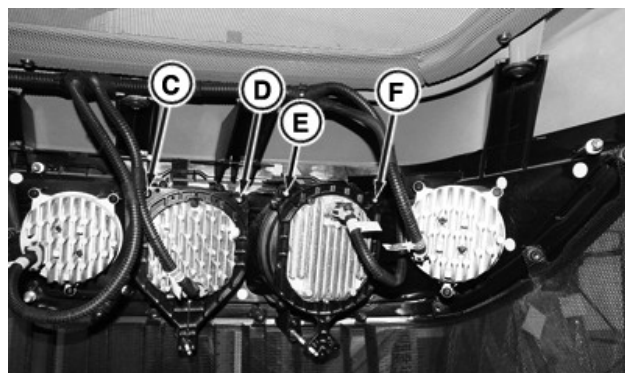

RXA0142138—UN—05JUN14

To raise and tilt out low beam headlights, turn low beam adjustment screw (E) clockwise.

To raise and tilt in low beam headlights, turn low beam adjustment screw (F) clockwise.

For High Beam Headlights:

2. To lower high beam aim, turn high beam adjustment screw (B) clockwise.

To raise and tilt out high beam, turn high beam adjustment screw (C) clockwise.

To raise and tilt in high beam, turn high beam adjustment screw (D) clockwise.

3. Repeat for opposite side of tractor.


SV81855,00002B7-19-17JUL19

Change Halogen Bulbs

1. Disconnect wiring harness plug by lifting retaining tab (B).

Change Front/Rear Belt Line Work Lights

Replace a Halogen Bulb

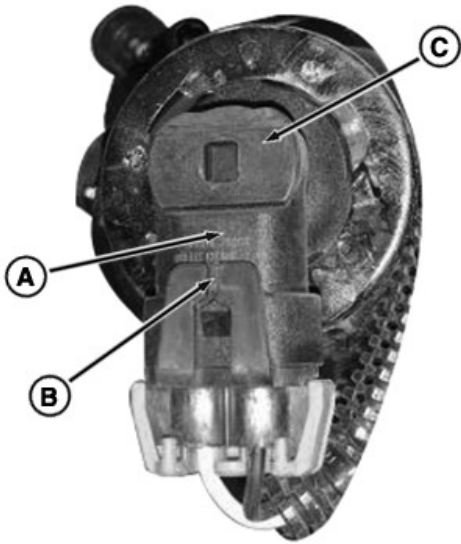


RXA0173828—UN—03FEB20
Right-Hand Side Shown

2. Rotate halogen headlight (A) counterclockwise with 1/4 of a turn and remove.
3. Replace halogen light assembly (C).

TS36762,0000167-19-30AUG22

Change Front HID/LED Light Assembly

1. Raise hood.

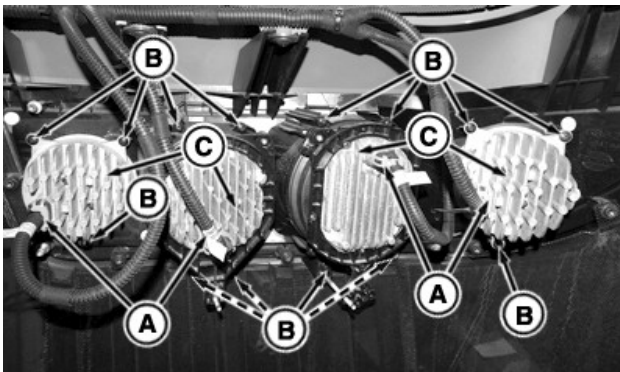

RXA0158062—UN—03MAR17
Right-Hand Side Shown

2. Disconnect harness connector (A).
3. Remove screws (B) and light assembly (C).
4. Replace light assembly.
5. Install new light assembly in reverse order of removal.
6. Close and secure hood.

SV81855,00001FA-19-20JUL17



RXA0174703—UN—04FEB20

1. Disconnect the rear wiring harness.
2. Push in, twist, and pull to remove the halogen bulb receptacle from the light housing.
3. Replace the halogen bulb.
4. Replace the halogen bulb receptacle into the light housing.
5. Connect the rear wiring harness.

Replace a LED Light Assembly




RXA0174821—UN—06FEB20

1. Disconnect the rear wiring harness.
2. Remove nut (A).

3. Replace the LED light assembly.
4. Secure the LED light assembly with the nut.
5. Connect the rear wiring harness.


ZZASX1U,0000067-19-26APR21

Change Brake or Turn Signal Light Bulb

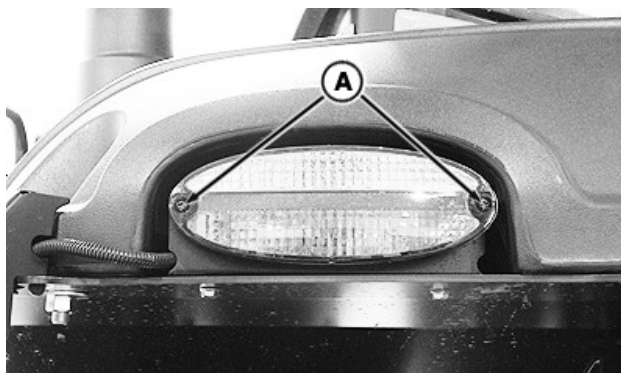

RXA0137101—UN—19NOV13

1. Remove screws (A) and take out light assembly.

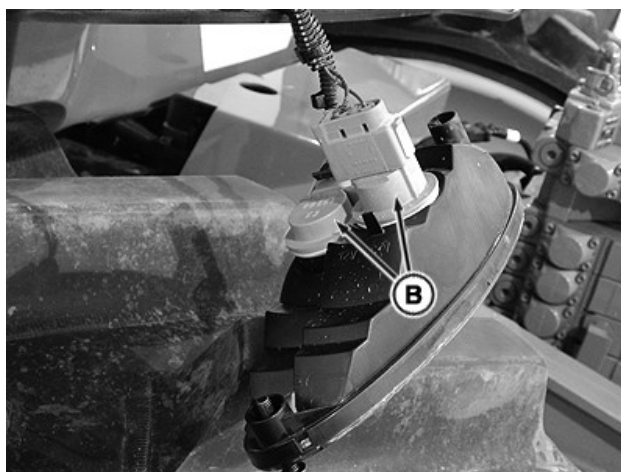

RXA0137102—UN—19NOV13

2. Turn bulb (B) counterclockwise 1/4 turn and pull out to remove.
3. Install new bulb in fixture and turn 1/4 turn clockwise.
4. Reinstall assembly and screws.

SV81855,00001FF-19-11JUL17

Change Cab Roof Light



RXA0172759—UN—03DEC19

Cab Roof Light—LED Light Option Shown

1. Gently pry light out the light assembly using a flat tip screwdriver in slot (A).
2. The cab roof light is equipped with either an LED assembly or a halogen bulb. To replace the cab roof light if the light assembly contains:
 - An LED assembly:
 - a. Disconnect the harness connector.
 - b. Replace the LED assembly.
 - c. Reconnect the harness connector.
 - d. Insert the cab roof light assembly into the cab roof until it snaps into place.
 - A halogen bulb:
 - a. Remove the halogen bulb base from the light assembly.
 - b. Remove and replace the halogen bulb from the halogen bulb base.
 - c. Insert the halogen bulb base into the light assembly.
 - d. Insert the cab roof light assembly into the cab roof until it snaps into place.

EC82310,0000B84-19-14MAY20

Change Wrap-Around Cab Light



RXA0172758—UN—03DEC19

1. Pry light out using flat tip screwdriver in slot (A).

2. Disconnect harness connectors.
3. Replace light assembly.
4. Reconnect harness connectors.
5. Insert light assembly into cab until it snaps into place.


EC82310,0000B83-19-14MAY20

Change Extremity Arm Light



RXA0172768—UN—03DEC19

1. Remove screws (A).

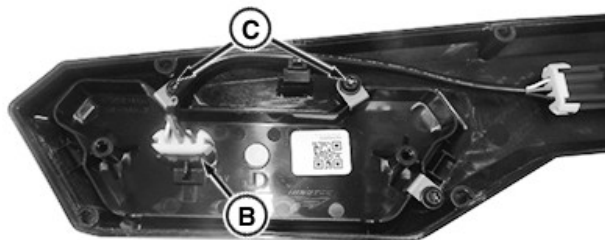

RXA0172769—UN—03DEC19

2. Remove screws (C).
3. Disconnect the harness connector (B).
4. Replace with a new light assembly.
5. Reassemble in the reverse order.


ZZASX1U,0000065-19-29JUN23

2. Disconnect wiring harness (B).
3. Remove screws (C) holding the light assembly.
4. Replace with new light assembly.
5. Reassemble in the reverse order.

EC82310,0000B8A-19-04APR23

Change Trailing Light Bulb

NOTE: Fuse number F31 is used for trailing lights.

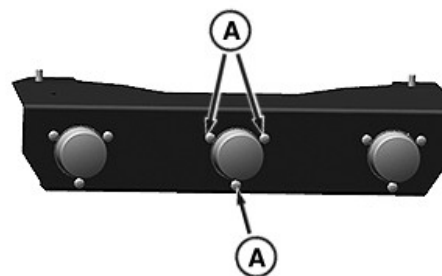

RXA0177583—UN—24APR20

1. Remove the light cover screws (A).



RXA0127823—UN—23AUG12


2. To remove the light cover (B) from the light socket (C), while holding the light socket in one hand:
 - a. Turn the light cover counterclockwise until the light cover unlocks.
 - b. Pull the light cover away from the light socket.

Change Cab Dome Light




RXA0172763—UN—03DEC19

1. Remove screws (A).

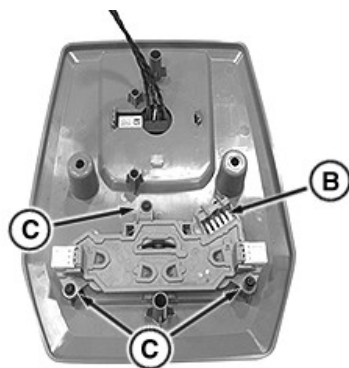

RXA0172764—UN—05DEC19

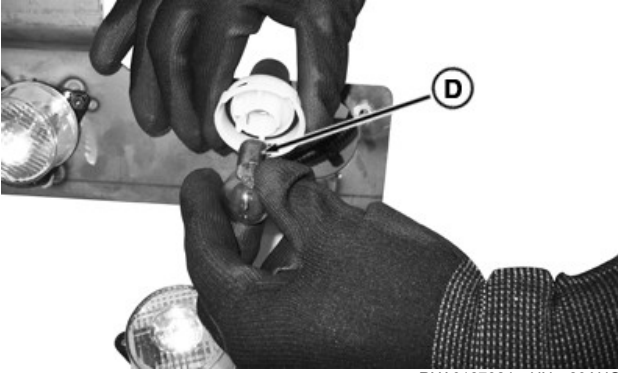

RXA0127824—UN—23AUG12

3. Replace the light bulb (D).
4. Reassemble in the reverse order.

ZZASX1U,000003D-19-27APR20

Troubleshooting—Procedures

Troubleshooting Features

Some features listed in this Operator's Manual section may not be applicable to all tractor configurations and

regions. See your John Deere dealer for unresolved product issues.

KD34109,0000944-19-19JUL21

Electrical System

Low Battery Voltage (key switch on and engine off)

Problem	Solution
Defective battery.	Check that battery voltage is 12.0—14.5 V. Service or replace battery/batteries. See your John Deere dealer.
Low charging voltage with engine running.	See your John Deere dealer.
High resistance in charging circuit.	See your John Deere dealer.

Low Charging Voltage (engine running)

Problem	Solution
Low engine speed.	Increase engine speed.
Auxiliary drive belt slips and is not fully powering the alternator.	Check the auxiliary drive belt tension.
Defective battery.	Check that battery voltage is 12.0—14.5 V. See your John Deere dealer.
Defective alternator.	See your John Deere dealer.
Excessive electrical load.	Decrease electrical load. See your John Deere dealer.
Loose or corroded connections.	Clean and tighten connections.
Sulfated or worn-out batteries.	Check that battery voltage is 12.0—14.5 V. Service or replace battery/batteries. See your John Deere dealer.
Loose or defective alternator belt.	Check the auxiliary belt tension. Replace belt.

Excessive Charging Voltage (engine running)

Problem	Solution
Faulty connection to the alternator.	Check wiring connections.
Defective regulator.	See your John Deere dealer.

Starter Inoperative

Problem	Solution
Faulty starter or starter solenoid.	See your John Deere dealer.
Loose or corroded connections.	Clean and tighten loose connections.
Low battery output.	Service or replace battery/batteries. See your John Deere dealer.
Failed fuse.	Check fuses. See Center Load—Front in Service—Electrical section of this Operator's Manual. Check the alternator/battery relay fuse. See Access Master Fuses in Service—Electrical section of this Operator's Manual.
Failed relay.	See your John Deere dealer.
Excessive cranking attempts.	To protect the starter, the ECU may prevent starting if several crank/no start events have occurred. Wait 2 minutes and attempt starting again.

Starter Turns Over Slowly

Problem	Solution
Low battery output.	Check that battery voltage is 12.0—14.5 V. Service or replace battery/batteries. See your John Deere dealer.
Crankcase oil is too heavy.	Use the correct viscosity oil. See Engine Oil section of this Operator's Manual.
Loose or corroded connections.	Clean and tighten loose connections.
Excessive hydraulic load.	Ensure SCVs are in neutral and disconnect the implement hose in the rear load sense port (if used).

Entire Electrical System Does Not Function

Problem	Solution
Faulty battery connection.	Clean and tighten connections.
Battery disconnect system switch in the off position.	Turn the battery disconnect switch to the on position.
Sulfated or worn out batteries.	Check that battery voltage is 12.0—14.5 V. Service or replace battery/batteries. See your John Deere dealer.
Failed master fuse.	Check the master fuse. See Access Master Fuses in Service—Electrical section of this Operator's Manual.
Loose or corroded connections and/or grounds.	Clean and tighten loose connections.

KD34109,000093A-19-30MAY23

Engine

Engine Is Hard to Start or Does Not Start

Problem	Solution
Incorrect starting procedure.	Review the starting procedure.
Failed relay.	Check the relay. See Load Center—Cab in Service—Electrical section of this Operator's Manual.
Failed fuse.	Check the fuses. See Load Center—Front in Service—Electrical section of this Operator's Manual.
No fuel.	Check the fuel tank. Add clean fuel. See Fuel section of this Operator's Manual.
Air in the fuel line.	Bleed the fuel line. With the engine off, turn the key to the run position for 60 seconds.
Cold weather.	Check cold-weather starting aids. See Cold Weather Operation section of this Operator's Manual.
Slow starter speed.	See Starter Turns Over Slowly in Electrical System in this Operator's Manual section.
Crankcase oil is too heavy.	Use the correct viscosity oil. See Engine Oil section of this Operator's Manual.
Incorrect type of fuel.	Use the correct fuel type for the operating conditions. Consult the fuel supplier to determine if necessary.
Water, dirt, or air in the fuel system.	Drain, flush, fill, and bleed the system. See Service—General Information section of this Operator's Manual.
Clogged fuel filter.	Replace the filter elements. See Service—Change section of this Operator's Manual.
Dirty or faulty injectors.	See your John Deere dealer.
Excessive hydraulic load.	Ensure SCVs are in neutral and disconnect the implement hose in the rear load sense port (if used).

Engine Knocks

Problem	Solution
Insufficient oil.	Add oil. See Engine Oil section of this Operator's Manual.
During warm-up, the pilot injection system activates and deactivates depending on the engine operating temperature.	It is normal for the pilot injection system to activate and deactivate depending on the engine operating temperature.
Low engine coolant temperature.	Replace the thermostats. See Service—Change section of this Operator's Manual.
Engine overheats.	See Engine Overheats later in Engine Troubleshooting.

Engine Runs Irregularly or Stalls Frequently

Problem	Solution
Low coolant temperature.	Replace the thermostats. See Service—Change section of this Operator's Manual.
Clogged fuel filters.	Replace the filter elements. See Service—Change section of this Operator's Manual.
Water, dirt, or air in the fuel system.	Drain, flush, fill, and bleed the system. See Service—General Information section of this Operator's Manual.
Water in the fuel system.	See Fuel Tank Sump in Service—Check section of this Operator's Manual.
Fuel tank vent is obstructed.	Clean the vent. Check the vent lines for restrictions. Replace the vent filter. See Service—Change section of this Operator's Manual.
Dirty or faulty injectors.	See your John Deere dealer.

Below Normal Engine Temperature

Problem	Solution
Defective thermostat.	Replace the thermostat. See Service—Change section of this Operator's Manual.
Defective temperature gauge or sender.	See your John Deere dealer.

Fan Drive Speed Surges at a Low Engine Speed

Problem	Solution
Fan drive problem.	See your John Deere dealer.

Throttle Does Not Allow Full Engine Speed

Problem	Solution
Maximum Set Speed is on and limiting maximum engine rpm.	Adjust Maximum Set Speed to maximum rpm.
Cold oil can limit the engine speed to 1500 rpm.	Warm up the transmission-hydraulic oil. See your John Deere dealer.
Engine derate is active.	Check the CommandCenter for diagnostic trouble codes. See Troubleshooting—Diagnostic Trouble Codes (DTC) section of this Operator's Manual.

Lack of Power

Problem	Solution
Engine is overloaded.	Reduce load or shift to a lower gear.
Low or high idle speed.	Adjust or turn off the Max Engine Speed setting. Set IVT/AutoPowr or EVT/eAutoPowr correctly. Check the applicable transmission section of this Operator's Manual. See your John Deere dealer.
Intake air restriction.	Service the air cleaner. See Service—Check section of this Operator's Manual.

Troubleshooting—Procedures

Problem	Solution
Clogged fuel filters.	Replace the fuel filter elements. See Service—Change section of this Operator's Manual.
Water in the fuel system.	See Fuel Tank Sump in Service—Check section of this Operator's Manual.
Incorrect type of fuel.	Use the correct fuel. See the appropriate fuel information in Fuel section of this Operator's Manual.
Engine is overheated.	See Engine Overheats later in Engine Troubleshooting.
Below normal engine temperature.	Check the thermostat. See Service—Change section of this Operator's Manual.
Incorrect valve clearance.	See your John Deere dealer.
Dirty or faulty injectors.	See your John Deere dealer.
Turbocharger does not function.	See your John Deere dealer.
Leaking exhaust manifold gasket.	See your John Deere dealer.
Implement adjusted incorrectly.	See implement Operator's Manual.
Restricted fuel inlet.	Clean or replace the fuel line. See Service—Change section of this Operator's Manual.
Incorrect ballast.	Adjust the ballast to load. See Performance Ballasting section of this Operator's Manual.

Low Oil Pressure

Problem	Solution
Low oil level.	Add oil. See Engine Oil section of this Operator's Manual.
Incorrect type of oil.	Drain and refill the crankcase with the correct quality and viscosity of oil. See Engine Oil section of this Operator's Manual.

High Oil Consumption

Problem	Solution
Crankcase oil is too light.	Use the correct viscosity oil. See the appropriate engine oil information in Engine Oil section of this Operator's Manual.
Oil leakage.	Check for leaks in the lines and around the gaskets and the drain plug.
Defective turbocharger.	See your John Deere dealer.
Restricted engine breather tube.	Clean the engine breather tube.

Engine Emits Smoke

Problem	Solution
Incorrect type of fuel.	Use the correct fuel. See the appropriate fuel information in Fuel section of this Operator's Manual.
Clogged or dirty air cleaner.	Service the air cleaner.
Engine is overloaded.	Reduce the load or shift to a lower gear.
Injection nozzles are dirty.	See your John Deere dealer.
Turbocharger does not function.	See your John Deere dealer.

Engine Overheats

Problem	Solution
Dirty radiator core, oil cooler, or grille screens.	Remove all trash and clean the coolers. See Service—Check section of this Operator's Manual.
Engine is overloaded.	Reduce the load or shift to a lower gear.
Low engine oil level.	Check the oil level and add oil as required. See Engine Oil section of this Operator's Manual.
Low coolant level.	Fill the de-aeration tank to the correct level. Check the radiator and hoses for loose connections or leaks.
Faulty radiator cap.	Replace the radiator cap.

Problem	Solution
Fan drive malfunction.	See your John Deere dealer.
Cooling system blockage.	Flush the cooling system. See Service—Clean section of this Operator's Manual. See your John Deere dealer.
Defective thermostat.	Replace the thermostat. See Service—Change section of this Operator's Manual.
Defective temperature gauge or sender.	See your John Deere dealer.
Loose or defective auxiliary drive belt slipping on coolant pump pulley (6.8 and 13.6 L engines only).	Check the auxiliary belt tension. Replace belt.

High Fuel Consumption

Problem	Solution
Clogged or dirty air cleaner.	Service the air cleaner. See Service—Check section of this Operator's Manual.
Engine is overloaded.	Reduce the load or shift to a lower gear.
Injection nozzles are dirty.	See your John Deere dealer.
Implement is incorrectly adjusted.	See implement Operator's Manual.
Excessive ballast.	Adjust the ballast to load. See Performance Ballasting section of this Operator's Manual.

KD34109,000093B-19-30MAY23

Hitch

Insufficient Transport Clearance

Problem	Solution
Center link is too short.	Adjust the center link.
Center link is in the wrong position.	Put the hitch center link in the correct hole. See Rear Hitch section of this Operator's Manual.
Lift links are too short.	Adjust the lift links.
Implement is not level.	Level the implement.
Implement is not adjusted correctly.	See implement Operator's Manual.
Upper Limit is not set correctly.	Adjust Upper Limit in the CommandCenter.
Suspension (if equipped) leveling does not function correctly or extends above level.	Refer to suspension information in this Operator's Manual.

Hitch Fails to Follow the Lever

Problem	Solution
Malfunction in the lever position sensor circuit or hitch position sensor.	See your John Deere dealer.

Poor Position Control

Problem	Solution
Hitch Load Depth is not set correctly.	Adjust Load Depth in the CommandCenter.
Malfunction in the lever position sensor circuit or hitch position sensor.	See your John Deere dealer.
Suspension (if equipped) leveling does not function correctly during large draft changes.	Refer to suspension information in this Operator's Manual.

Hitch Drops Slowly

Problem	Solution
Hitch Drop Rate is not set correctly.	Adjust Drop Rate in the CommandCenter. See Rear Hitch section of this Operator's Manual.

Hitch Fails to Lift or Lifts Slowly

Problem	Solution
Excessive load on the hitch.	Reduce load.
Center link is in the wrong position.	Put the hitch center link in the correct hole.
Hitch valve leaks.	See your John Deere dealer.
Hitch Upper Limit setting limits lift height.	Adjust Upper Limit in the CommandCenter.
Lack of lubrication.	Lubricate the hitch mechanisms. See Service—Lubricate section of this Operator's Manual.
Manual hitch drain is open.	See Hitch Manual Lowering in Rear Hitch section of this Operator's Manual. Ensure that the screw is not in the open position.
Cold hydraulic oil.	Allow the oil to heat up to the operating temperature.

Implement Not Operating at the Desired Depth

Problem	Solution
Lift links are too short.	Adjust the lift links.
Lack of soil penetration.	See implement Operator's Manual.
Draft sensor fails.	See your John Deere dealer.
Implement is not level.	See implement Operator's Manual.

Insufficient or No Hitch Response to Draft Load

Problem	Solution
Hitch Load Depth is not set correctly.	Adjust Load Depth in the CommandCenter.
Hitch Drop Rate is too slow.	Adjust Drop Rate in the CommandCenter.

Hitch Too Responsive

Problem	Solution
Hitch Load Depth is not set correctly.	Adjust Load Depth in the CommandCenter. See Rear Hitch section of this Operator's Manual.

Hitch Settles Too Fast after Tractor Is Parked and Engine Is Shut Off

Problem	Solution
Internal leakage.	See your John Deere dealer.
Manual hitch drain is open.	See Hitch Manual Lowering in Rear Hitch section of this Operator's Manual. Ensure that the screw is not in the open position.

Hitch Does Not Move (controls not working, including rear raise/lower switch)

Problem	Solution
Failed fuse.	Replace the fuse. See Load Center—Cab in Service—Electrical section of this Operator's Manual.
Hitch does not move with an intact fuse.	Check the CommandCenter for diagnostic trouble codes. See Troubleshooting—Diagnostic Trouble Codes section of this Operator's Manual.

External Raise/Lower Switch Does Not Move the Hitch

Problem	Solution
Failure of the raise/lower switch, connector, or wiring harness.	See your John Deere dealer.
Lever is in transport lock.	Move the lever out of transport. Unlock it in the CommandCenter.

Pickup Hitch Operates Incorrectly

Problem	Solution
Pickup hitch does not latch.	Adjust the pickup hitch. See Rear Hitch section of this Operator's Manual.

Excessive Implement Movement

Problem	Solution
Hitch sways too much.	Adjust the sway blocks to minimize hitch movement. See Rear Hitch section of this Operator's Manual.

KD34109,000093C-19-30MAY23

Hydraulic System

Entire Hydraulic System Fails to Function

Problem	Solution
Low oil supply.	Check the hydraulic oil level.
Clogged hydraulic filter.	Replace the oil filters. See Service—Change section of this Operator's Manual.
Clogged hydraulic oil suction screen.	Clean the screen. See Service—Clean section of this Operator's Manual.
Oil cooler air passages are clogged.	Clean the oil cooler.
High-pressure internal leak.	See your John Deere dealer.
Hydraulic pump driveline damaged or failed.	Check hydraulic pump driveline for damage.

Hydraulic Oil Overheats

Problem	Solution
Low or high oil supply.	Check the hydraulic oil level. See Service—Change section of this Operator's Manual.
Clogged oil cooler air passages.	Clean the oil cooler and condenser in the front cooling module.
Internal leaks.	See your John Deere dealer.
Implement hydraulic load is not matched to the tractor or not properly routed back into the tractor hydraulic system.	See Hydraulic Connections section of this Operator's Manual. See implement Operator's Manual. See your John Deere dealer.
Clogged oil screen.	Clean the filter screen. See Service—Change section of this Operator's Manual. See your John Deere dealer.

KD34109,000093D-19-30MAY23

Operator's Station

Excessive Dust Enters Cab

Problem	Solution
Defective seal around the cab filter element, door seal, or window seal.	Check the condition of the seals. Check that the filter installation is correct. See Service—Change Section of this Operator's Manual.
Defective cab filter.	Check the cab recirculation air filter and cab fresh air filter. See Service—Change Section of this Operator's Manual.
Inadequate blower air flow.	See Blower Air Flow Too Low later in Operator's Station Troubleshooting.

Blower Air Flow Too Low

Problem	Solution
Clogged filter or air intake screen.	Inspect the cab recirculation and cab fresh air filters and the screen for blockage. See Service—Change section of this Operator's Manual.
Clogged heater core or evaporator core.	Clean the heater core or evaporator core.
Frozen heater core.	Thaw the heater core. See your John Deere dealer.

Blower Malfunctioning

Problem	Solution
Blower does not work.	Check the CommandCenter for diagnostic trouble codes. See Troubleshooting—Diagnostic Trouble Codes section of this Operator's Manual. See your John Deere dealer.
Failed fuse.	Check the air conditioner fuses. See Load Center—Cab in Service—Electrical section of this Operator's Manual.
Failed relay.	Check the air conditioning relay. See Load Center—Cab in Service—Electrical section of this Operator's Manual.

Heater Does Not Switch Off

Problem	Solution
Heater hoses are connected incorrectly.	See your John Deere dealer.
Failed water valve actuator.	See your John Deere dealer.

Air Conditioner Not Cooling

Problem	Solution
Low refrigerant.	See your John Deere dealer.
Debris blocks the condenser.	Clean the condenser.
Belt slips.	Check the belt tension. See Service—Check section of this Operator's Manual.
CommandCenter air conditioning is set to OFF on the HVAC page.	Set the air conditioning to ON in the CommandCenter. See HVAC Settings in HVAC section of this Operator's Manual.
Clogged filter or air intake screen.	Inspect the cab recirculation and cab fresh air filters and the screen for blockage. See Service—Change section of this Operator's Manual.
Clogged heater core or evaporator core.	Clean the heater core or evaporator core.
Frozen heater core.	Thaw the heater core. See your John Deere dealer.

Seat Suspension Not Working

Problem	Solution
Failed fuse.	Check the seat fuses. See Load Center—Cab in Service—Electrical section of this Operator's Manual.

Radio Does Not Function

Problem	Solution
Failed fuse.	Check the radio fuses. See Load Center—Cab in Service—Electrical section of this Operator's Manual.
Radio cutting in and out.	Check the antenna and ground connection.

KD34109,000093F-19-30MAY23

Selective Control Valve (SCV)

Remote Cylinder Does Not Lift a Load

Problem	Solution
Flow blockage (worn hydraulic tips).	Cycle the SCV levers. Replace the hydraulic tips and check the connections.
Excessive load.	Reduce load.
SCV lever or joystick is not assigned to the expected SCV.	Change the SCV hose to the desired SCV. Reassign the SCV lever or joystick control to the desired SCV. See Selective Control Valves section of this Operator's Manual.
Hoses are not installed correctly.	Install the hoses correctly and firmly into SCV.
Incorrect remote cylinder size.	Use the correct cylinder size. See Hydraulic Connections section of this Operator's Manual.
SCV control lever lock is engaged.	Release the SCV control lever lock.
Incorrect or damaged hose tips.	Replace the hose tips.

Remote Cylinder Rate of Travel Too Fast or Too Slow

Problem	Solution
Incorrect flow rate.	Adjust the Flow setting.

Direction of Remote Cylinder Travel Is Reversed

Problem	Solution
Incorrect hose connections.	Reverse the hose connections.

Hoses Do Not Couple

Problem	Solution
Incorrect hose male connectors.	Replace the hose tips with ISO-5675 fittings.
Too much system pressure.	Release pressure from the implement or tractor.

Detent Does Not Hold or Releases Too Soon

Problem	Solution
Detent Time set incorrectly.	Set the correct detent Time.
SCV lever is not released to neutral soon enough.	Return the SCV lever to the center after being in the detent position for more than 0.8 seconds.

SCV Lever Does Not Release

Problem	Solution
SCV is unexpectedly in float mode.	Do not push the lever down when in the forward position.
Lever mechanism failed.	See your John Deere dealer.
Flow control or detent release setting incorrect.	Adjust the detent relief setting.

Implement Does Not Operate or Does Not Operate Correctly

Problem	Solution
Incorrect hose connections.	See implement Operator's Manual. See your John Deere dealer.

Feedback from Top SCVs or Hydraulic Pump

Problem	Solution
Hydraulic pump is making noise.	Make sure that continuous flow oil is not returning to a pressure-free port. See Hydraulic Connections section of this Operator's Manual.

SCV Is Unresponsive

Problem	Solution
SCV is not operating correctly.	Check the CommandCenter for diagnostic trouble codes. See Troubleshooting—Diagnostic Trouble Codes section of this Operator's Manual. Verify that transport lock is off.

KD34109,0000940-19-15JUN23

Steering System

Difficult or No Steering

Problem	Solution
Electrical or hydraulic malfunction.	Check the CommandCenter for diagnostic trouble codes. See Troubleshooting—Diagnostic Trouble Codes section of this Operator's Manual. See your John Deere dealer.
Tractor is over-ballasted or the front axle is overloaded.	See Performance Ballasting section of this Operator's Manual.

Tractor Turning Radius Larger than Desired or Tractor Difficult to Turn when Under Load

Problem	Solution
Implement causes side-loading greater than the steering system can overcome when attempting to turn.	Raise the implement. Slow down during a turn or execute a turn by doing a series of brief short turns. Add ballast. See Performance Ballasting section of this Operator's Manual. Let the drawbar swing. See Drawbar section of this Operator's Manual.
Electrical or hydraulic malfunction.	Check the CommandCenter for diagnostic trouble codes. See Troubleshooting—Diagnostic Trouble Codes section of this Operator's Manual. See your John Deere dealer.
Differential lock preventing turning under load.	See Differential Lock in Drivetrain section of this Operator's Manual.

Tractor Drifts or Pulls to One Side

Problem	Solution
Implement causing side load on the tractor.	Adjust the implement to eliminate any side draft. Widen the rear wheels out to the stops or add duals. See Rear Wheels and Tires section of this Operator's Manual. Add ballast. See Performance Ballasting section of this Operator's Manual. Let the drawbar swing. See Drawbar section of this Operator's Manual.

Tractor Turning Radius Larger than Desired with No Load

Problem	Solution
Electrical or hydraulic malfunction.	Check the CommandCenter for diagnostic trouble codes. See Troubleshooting—Diagnostic Trouble Codes section of this Operator's Manual. See your John Deere dealer.
Attempting to turn while stopped (loose soil, heavy ballast); steering load exceeds the system capacity.	Maintain forward or reverse motion while turning. Increase vehicle speed and/or hold the steering wheel against the stop for a couple of seconds to allow greater steering force. Check the steering stops. See Steering Stop, Fender, and Tread Settings section of this Operator's Manual.

Tractor Turning Radius Larger than Desired with the Tractor in High Gear or with Low Engine Speed

Problem	Solution
Minimum turn radius is greater in high gears and at a higher speed.	Utilize the turn brakes for a narrower turning radius (not applicable to 8RT and 9 Series Tractors). Shift down before the turn. See the appropriate transmission section of this Operator's Manual. Reduce vehicle speed before a turn to reduce oversteering.
Maximum steering pump oil flow is less at a lower engine speed, reducing the power available to make the turn.	Increase engine speed before a turn.

KD34109,0000941-19-30MAY23

Tractor Operation

Tractor Bounces or Jumps

Problem	Solution
Power hop or wheel hop.	See Performance Ballasting section of this Operator's Manual.
Loose wheel hardware.	Tighten the hardware to the correct specification. See Service—Tighten section of this Operator's Manual.
Wheel slip.	Check the CommandCenter for the wheel slip percentage.
ILS malfunction (8R wheel tractors only).	Refer to ILS in this Operator's Manual section.

KD34109,0000942-19-30MAY23

Transmission

Hydraulic Oil Leak between Transmission and Engine

Problem	Solution
Clogged transmission vent screen.	Clean the vent screen. See the appropriate Transmission section of this Operator's Manual. See your John Deere dealer.

Transmission Shifts Slowly and Tractor Steers Hard

Problem	Solution
Cold oil.	See Transmission—General Information section of this Operator's Manual.

Transmission Slips, Shifts Roughly or Abruptly after Oil Change

Problem	Solution
Recalibrate the transmission.	See your John Deere dealer.

Transmission Starts Out Too Quickly or Slowly

Problem	Solution
No identifiable problem.	Change the start-up gear through CommandCenter settings (16-speed PST and e23 only). See the appropriate Transmission section of this Operator's Manual. Adjust the CommandPRO settings. See CommandPRO Joystick—Acceleration/Deceleration Response in IVT-AutoPowr Transmission with CommandPRO Joystick section of this Operator's Manual.

AutoClutch Engages Too Quickly or Too Slowly when Pressing Brake Pedals

Problem	Solution
No identifiable problem.	Verify that the brake pedals are latched together. Adjust the AutoClutch sensitivity settings. See Transmission—General Information section of this Operator's Manual.

Tractor Will Not Achieve Maximum Speed

Problem	Solution
Brake pedals unlocked.	Ensure that the brake pedals are latched together. See Brakes section of this Operator's Manual (not applicable to 8RT and 9 Series Tractors).

Incorrect Wheel Speed Displayed

Problem	Solution
Incorrect tire size calibration or wheel slip value.	Complete the radar and wheel slip calibrations. See CommandCenter section of this Operator's Manual.


Troubleshooting—Diagnostic Trouble Codes (DTC)

STOP, Service, and Information Alerts on CommandCenter

CommandCenter alert overlays display control unit, diagnostic trouble code (DTC), system, and solution. If condition is out of range, the control unit followed by an industry standard number displays. Numbers to the left of the decimal indicate the system and numbers to the right of decimal indicate the condition.


Some alert indicators can be acknowledged by pressing OK. If condition still exists, diagnostic trouble code may reappear later. Follow solution on CommandCenter. If situation cannot be corrected, contact your John Deere dealer. For more information on DTCs, refer to Diagnostics Center. For access information, see Access Diagnostic Trouble Codes in this Operator's Manual section.

IMPORTANT: Engine will shut down automatically if STOP signal is received when operator is out of the seat for longer than 3 seconds and the transmission control is in PARK. CommandCenter display can be reset by cycling key switch.

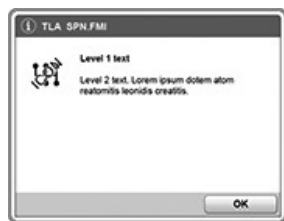

RXA0167778—UN—06MAY19
Information Alert Overlay


Information Alert — in some situations, information (INFO) indicator light comes on continuously and alarm pattern sounds for 2 seconds, indicating a fault condition. Tractor operations can continue without damage but performance of some functions may be degraded. Operating in a different manner may correct and clear an out-of-range condition.

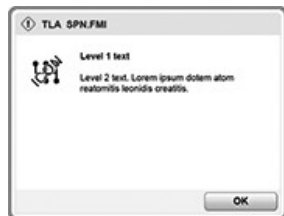

RXA0167779—UN—06MAY19
Service Alert Overlay

Service Alert — light flashes and an alarm pattern sounds five times. A performance or operational problem has been detected and must be resolved as soon as possible. Continued operations can cause a service alert to escalate into a STOP alert. If appropriate corrective action is not taken soon (service, repair,

operate in a different manner), a significant reduction in performance and/or damage to machine will occur.

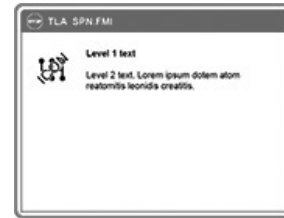

RXA0167780—UN—06MAY19
STOP Alert Overlay

STOP Alert — light flashes and an alarm pattern sounds continuously. A serious malfunction requiring immediate attention has occurred. If situation allows, stop operations immediately, reduce engine speed to idle, and shut down engine. Turn key to run position to observe CommandCenter display for problem identification and solution. It may be necessary to access the stored codes. See Access Diagnostic Trouble Codes in this Operator's Manual section. Correct problem before restarting. If ignored, damage to machine will occur.

TS36762.0000281-19-21JUN22

Access Diagnostic Trouble Codes


NOTE: If problem is not resolved after cycling power to tractor or following solution on CommandCenter page, see your John Deere dealer.

Not all active DTCs are displayed. Follow steps to retrieve stored DTCs.



RXA0133360—UN—26JUL13

1. Select Menu.
2. Select System tab.
3. Select Diagnostics Center icon.
4. Select Trouble Codes tab.

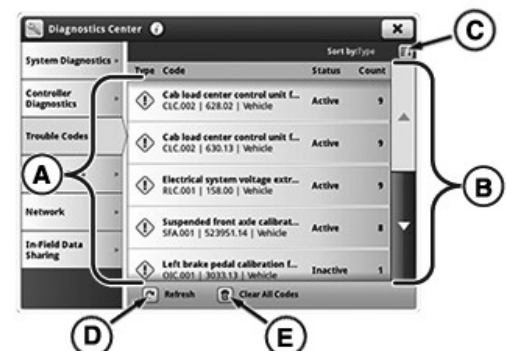

RXA0166979—UN—14MAR19

5. Select desired diagnostic trouble code from list (A).
Use arrow keys (B) to access additional diagnostic trouble codes in the list.

Additional Features on Trouble Codes Page

Sort by: (C) — select to sort list by Code, Controller, Count, Status, or Type.

Refresh (D) — select to display the most up-to-date list of codes and counts. Page automatically refreshes upon entry.

Clear All Codes (E) — select to clear inactive DTCs and reset counts to zero. A message displays to verify action since it cannot be undone.

TS36762,0000283-19-21JUN22

Service—Storage

Place Tractor in Storage

IMPORTANT: If tractor will not be used for more than three months, the following recommendations for storage and removal from storage will minimize corrosion and deterioration.

NOTE: Whenever possible store tractor in a building or under a roof to avoid damage resulting from prolonged exposure to the elements.

1. Lower hitch.
2. Change engine oil and replace filter (if required).

NOTE: Do not add BioDiesel fuel if placing tractor in storage.

3. Drain fuel tank and add back approximately 19 L (5 gal) of fuel.

IMPORTANT: Final Tier 4/Stage V Engines Only: To determine tractor engine type, see Engine Serial Number in Identification Numbers section of this Operator's Manual. Long-term storage of Diesel Exhaust Fluid (DEF) in vehicle (over six months) is not recommended. If long-term storage is necessary, periodic testing of DEF is recommended to ensure that urea concentration does not fall out of specification.

4. Final Tier 4 and Stage V tractors: Diesel Exhaust Fluid (DEF) has a limited shelf life, but may be stored in vehicle for as long as six months, depending upon storage conditions, see Storing DEF in Diesel Exhaust Fluid (DEF) section of this Operator's Manual. If draining DEF tank is necessary, see Draining DEF Tank in Fuel, Lubricants, and Coolant section of this Operator's Manual for proper procedure.
5. Using plastic bags and either tape or tie-bands, seal air inlets and exhaust, crankcase vent tube, radiator overflow hose, and transmission-hydraulic system fill cap.

IMPORTANT: Prevent damage to the tractor emissions system. Never disconnect the battery disconnect switch while the battery disconnect switch light is illuminated or blinking. See Battery Disconnect Switch in Engine Operation section of this Operator's Manual.

IMPORTANT: Prevent damage to electrical components. Avoid storing tractor equipped with EVT/eAutoPowr in temperatures below -40° C (-40°F).

6. Turn off the battery disconnect switch.
7. Disconnect batteries. See Service Batteries and

Connections in Service—Electrical section of this Operator's Manual.

8. Remove and store batteries in a cool, dry location. Keep batteries charged.¹
9. Coat all exposed (machined) metal surfaces such as lift cylinders and steering cylinder rods with light coat of grease.
10. Lubricate all grease fittings.

If tractor must be stored outside, follow these additional precautions:

1. Cover instrument panel, control levers, and seat with sheets of material or cardboard to protect against sun rays.
2. Thoroughly clean the tractor exterior. See Tractor Exterior in the Service—Clean section of this Operator's Manual.
3. Wax or cover entire tractor with waterproof material.
4. Raise tires or tracks off the ground and/or cover them to protect from heat and sunlight.

TS36762,0000284-19-17AUG22

Remove Tractor from Storage

1. Remove all coverings placed in or on tractor while preparing for storage.

IMPORTANT: To avoid engine damage, unseal crankcase vent tube.

2. Unseal all openings sealed during storage.
3. Remove any accumulated trash or debris, especially around engine and inside engine compartment.

IMPORTANT: If air conditioning compressor is locked up, engine operation with compressor clutch engaged may damage drive belt or compressor.

4. Rotate air conditioner compressor pulley several turns. If pulley does not turn freely, compressor components may be seized, see your John Deere dealer.
5. Check auxiliary drive belt for cracking and, if serviceable, install auxiliary drive belt on air conditioning compressor pulley.
6. Check under and around tractor for any evidence of fluid leaks.

¹ Disconnect battery ground cable for short-term storage periods (20 to 90 days).

IMPORTANT: If transmission-hydraulic oil level was correct at time of storage, and there is no evidence of hydraulic oil leaks, there should be no concern starting tractor even if transmission-hydraulic oil sight glass level is low. Over a period of storage, hydraulic oil may drain into transmission, causing sight glass to read low even when adequate amount of oil is available. If there are indications of oil leaks, do not start tractor until the source has been determined and repairs made. If there are no leakage indications, but there is any doubt about oil level at time of storage, check hydraulic oil level as soon as possible after starting tractor.

7. Check transmission-hydraulic oil level. Add oil as required.
8. Check all other fluid levels. Fill as required.
9. Fill fuel tank.

IMPORTANT: To confirm which engine your tractor is equipped with, see **Engine Serial Number in Identification Numbers** section of this **Operator's Manual**.

10. (Final Tier 4 and Stage V engines) If Diesel Exhaust Fluid (DEF) tank has not been drained, test urea concentration, see Testing Diesel Exhaust Fluid (DEF) in Diesel Exhaust Fluid (DEF) section of this Operator's Manual. If concentration is not within specifications, drain and replace with new or good DEF. If DEF tank has been drained, fill tank, see Refilling Diesel Exhaust Fluid (DEF) Tank in Diesel Exhaust Fluid (DEF) section of this Operator's Manual for appropriate procedures.
11. Inspect tires or tacks. To check:
 - Tires: Inspect tires and check inflation pressures. See Front or Rear Wheels and Tires sections of this Operator's Manual.
 - Tracks: Inspect tracks for wear or damage. See Track Wear in the Service—Check section of this Operator's Manual.
12. Perform all Daily or 10 Hour services and any other scheduled services as required, see 10 Hour or Daily Service in Service—Record Charts section of this Operator's Manual.
13. Install batteries and connect cables.
14. Turn battery disconnect switch on.
15. Turn key switch to RUN position for one minute to allow fuel system to prime.

NOTE: While operating engine at low idle, visually check all instruments and indicators to ensure they function properly.

16. Start and operate engine at low idle for several minutes.
17. Check tractor functions and systems, including air conditioning.
18. Warm up tractor before putting tractor under load.

RX32825,00000FE-19-06JAN22

Specifications

Engine

[Ag]	9R					
	390	440	490	540	590	640 ^a
POWER						
Rated Engine Power PS ^b (hp ISO) at 2100 Engine rpm (ECE-R120)	287 kW (390 hp)	324 kW (440 hp)	360 kW (490 hp)	397 kW (540 hp)	434 kW (590 hp)	471 kW (640 hp)
Rated Engine Power PS ^b (hp ISO) at 2100 Engine rpm (ECE-R24):						
Final Tier 4/Stage V and Tier 2/Stage II Engines	275 kW (374 hp)	311 kW (422 hp)	346 kW (470 hp)	381 kW (518 hp)	417 kW (566 hp)	452 kW (614 hp)
Tier 3/Stage IIIA Engine	252 kW (342 hp)	289 kW (392 hp)	325 kW (442 hp)	362 kW (492 hp)	399 kW (542 hp)	436 kW (592 hp)
Rated PTO Power (hp SAE) at Rated PTO Speed (1895 erpm) ^{cd}	249 kW (335 hp)					
Constant Power Range (rpm)	1550					
ENGINE						
Manufacturer	John Deere PowerTech 13.6 L Diesel Engine / JD14X					
Aspiration:						
Final Tier 4/Stage V and Tier 3/Stage IIIA Engines	Single Wastegated Turbocharger Air-to-Air Aftercooling and Cooled Exhaust Gas Recirculation			Dual Series Turbocharger with Fixed Geometry First Stage, Wastegated Second Stage, Air-to-Air Aftercooling, and Cooled Exhaust Gas Recirculation		
Tier 2/Stage II Engine	Dual Series Turbocharger with First Stage Fixed Geometry, Second Stage Wastegated Geometry, and Air-to-Air Aftercooling					—
Rated Speed (rpm)	2100					
Type	Diesel, In-Line, 6-Cylinder, Wet-Sleeve Cylinder Liners with 4 Valves-In-Head					
Filter, Engine Air	Dual Stage with Exhaust Aspiration					
Displacement	13.6 L (827 in ³)					
Bore and Stroke	132 x 165 mm (5.20 x 6.50 in)					
Compression Ratio	15.9:1					
Lubrication	Full-Pressure, Full-Flow Filtration with Bypass					
Filter, Oily	Replaceable Spin-On Style Oil Filter					
FUEL SYSTEM						
Type	Electronically Controlled, High-Pressure Common Rail with Electric Fuel Transfer Pump (self-priming)					
Filter System	Two-Stage with Water Separator and Service Indicator Light					
Filter, Primary	10 Micron Replaceable Cartridge with Water Indication Sensor and Drain					
Filter, Secondary	2 Micron Spin-On Element					
Required Fuel Type:						
Final Tier 4 Engine	Ultra-Low Sulfur Diesel (B20 diesel compatible)					
Stage V Engine	Ultra-Low Sulfur Diesel (B8 diesel compatible)					
Tier 3/Stage IIIA Engine	50 ppm Sulfur Fuel (B20 maximum diesel compatible)					
Tier 2/Stage II Engine	500 ppm Sulfur Fuel (B20 maximum diesel compatible)					—

^aNot available with Tier 2/Stage II emissions.

^bGerman term for horse power in which one PS is equivalent to 0.9863 horse power.

^cDoes not include optional equipment losses.

^d80% factory observed MOE value.

[Scraper]	9R			
	490	540	590	640 ^a
POWER				
Rated Engine Power PS^b(hp ISO) at 2100 Engine rpm (ECE-R120)	360 kW (490 hp)	397 kW (540 hp)	434 kW (590 hp)	471 kW (640 hp)
Rated Engine Power PS^b(hp ISO) at 2100 Engine rpm (ECE-R24):				
Final Tier 4/Stage V and Tier 2/Stage II Engines	346 kW (470 hp)	381 kW (518 hp)	417 kW (566 hp)	452 kW (614 hp)

Specifications

[Scraper]	9R			
	490	540	590	640 ^a
Tier 3/Stage IIIA Engine	325 kW (442 hp)	362 kW (492 hp)	399 kW (542 hp)	436 kW (592 hp)
Constant Power Range (rpm)	1550			
ENGINE				
Manufacturer	John Deere PowerTech 13.6 L Diesel Engine / JD14X			
Aspiration:				
Final Tier 4/Stage V and Tier 3/Stage IIIA Engines	Single Wastegated Turbocharger Air-to-Air Aftercooling and Cooled Exhaust Gas Recirculation	Dual Series Turbocharger with Fixed Geometry First Stage, Wastegated Second Stage, Air-to-Air Aftercooling, and Cooled Exhaust Gas Recirculation		
Tier 2/Stage II Engine	Dual Series Turbocharger with First Stage Fixed Geometry, Second Stage Wastegated Geometry, and Air-to-Air Aftercooling			—
Rated Speed (rpm)	2100			
Type	Diesel, In-Line, 6-Cylinder, Wet-Sleeve Cylinder Liners with 4 Valves-In-Head			
Filter, Engine Air	Dual-stage with Exhaust Aspiration			
Displacement	13.6 L (827 in ³)			
Bore and Stroke	132 x 165 mm (5.20 x 6.50 in)			
Compression Ratio	15.9:1			
Lubrication	Full-Pressure, Full-Flow Filtration with Bypass			
Filter, Oil	Replaceable Spin-On Style Oil Filter			
FUEL SYSTEM				
Type	Electronically Controlled, High-Pressure Common Rail with Electric Fuel Transfer Pump (self-priming)			
Filter System	Two-Stage with Water Separator and Service Indicator Light			
Filter, Primary	10 Micron Replaceable Cartridge with Water Indication Sensor and Drain			
Filter, Secondary	2 Micron Spin-On Element			
Required Fuel Type:				
Final Tier 4 Engine	Ultra-Low Sulfur Diesel (B20 diesel compatible)			
Stage V Engine	Ultra-Low Sulfur Diesel (B8 diesel compatible)			
Tier 3/Stage IIIA Engine	50 ppm Sulfur Fuel (B20 maximum diesel compatible)			
Tier 2/Stage II Engine	500 ppm Sulfur Fuel (B20 maximum diesel compatible)			—

^aNot available with Tier 2/Stage II emissions.

^bGerman term for horse power in which one PS is equivalent to 0.9863 horse power.

AK08008,0000868-19-20APR23

Capacities

[Ag]	9R					
	390	440	490	540	590	640 ^a
Fuel Tank	1514.0 L (400.0 gal)					
DEF Tank ^b	120.0 L (31.7 gal)					
Cooling System ^c	56.5 L (14.9 gal)					
Crankcase Oil Volume ^d	64 L (16.9 gal)					
Hydraulic-Transmission-Axle Oil:						
Without 3-Point Rear Hitch and PTO	234.7 L (62.0 gal)					
With 3-Point Rear Hitch and PTO	242.3 L (64.0 gal)					
Hydraulic Reservoir Reference Marks:						
FULL COLD Mark	103.0 L (27.2 gal)					
MIN COLD Mark	91.8 L (24.3 gal)					
High Volume Take Out Oil Mark (dot on sight gauge) ^e	150.0 L (39.6 gal)					

Specifications

[Ag]	9R					
	390	440	490	540	590	640 ^a
Transmission-Hydraulic Reservoir:						
Standard Flow	208.0 L (55.0 gal)					
High Flow	212.0 L (56.0 gal)					

^aNot available with Tier 2/Stage II emissions.

^bFinal Tier 4/Stage V Engine Only.

^cIncludes deaeration tank capacity.

^dIncludes filter.

^eFor applications requiring large volumes of oil (example: an Air Seeder).

[Scraper]	9R			
	490	540	590	640 ^a
Fuel Tank	1514.0 L (400.0 gal)			
DEF Tank ^b	120.0 L (31.7 gal)			
Cooling System ^c	56.5 L (14.9 gal)			
Crankcase Oil Volume ^d	64 L (16.9 gal)			
Hydraulic-Transmission-Axle Oil	234.7 L (62.0 gal)			
Hydraulic Reservoir Reference Marks:				
FULL COLD Mark	103.0 L (27.2 gal)			
MIN COLD Mark	91.8 L (24.3 gal)			
High Volume Take Out Oil Mark (dot on sight gauge) ^e	150.0 L (39.6 gal)			

^aNot available with Tier 2/Stage II emissions.

^bFinal Tier 4/Stage V Engine Only.

^cIncludes deaeration tank capacity.

^dIncludes filter.

^eFor applications requiring large volumes of oil (example: pulling 3 scrapers).

AK08008,000086A-19-16FEB23

Hydraulic System

[Ag]	9R					
	390	440	490	540	590	640 ^a
Type	Closed-Center, Pressure/Flow Compensated					
Selective Control Valves	Standard—4; Optional—5, 6, 7, and 8					
Maximum Pressure	20000 kPa (2900 psi)					
Rated Flow:						
85 cc Pump	208 L/min (55 gal/min)					
85 cc + 85 cc Dual Pump	416 L/min (110 gal/min)					
Available Flow ^b :						
Single Pump at One 1/2-Inch Coupler	132 L/min (35 gal/min)					
Dual Pump at One 3/4-Inch Coupler	170 L/min (45 gal/min)					

^aNot available with Tier 2/Stage II emissions.

^bApproximate flow values @ 2100 engine rpm.

[Scraper]	9R			
	490	540	590	640 ^a
Type	Closed-Center, Pressure/Flow Compensated			
Selective Control Valves	Standard—4; Optional—6			
Maximum Pressure	20000 kPa (2900 psi)			
Rated Flow:				
85 cc Pump	208 L/min (55 gal/min)			
85 cc + 85 cc Dual Pump	416 L/min (110 gal/min)			
Available Flow ^b :				
Single Pump at One 1/2-Inch Coupler	132 L/min (35 gal/min)			

Specifications

[Scraper]	9R			
	490	540	590	640 ^a
Dual Pump at One 3/4-Inch Coupler	170 L/min (45 gal/min)			

^aNot available with Tier 2/Stage II emissions.

^bApproximate flow values @ 2100 engine rpm.

kd34109,1675976066363-19-15FEB23

Transmission and Drivetrain

[Ag]	9R					
	390	440	490	540	590	640 ^a
TRANSMISSION						
e18 PowerShift (18F/6R) 40 km/h (25.0 mph) ^b	Standard					
FRONT AND REAR AXLES						
Final Drives	Inboard Planetary with Double-Reduction Axles					
120 x 3048 mm (4.72 x 120 in)	Standard					
HydraCushion Front Axle Suspension	Optional					Standard
Differential Lock	Full-Locking Electrohydraulic					
Wheel Equipment	Group 47/48 Tires Available as Singles/Duals/Triples ^c					
STEERING						
Hydraulic Power Steering with Electronic Backup Pump	Standard					
ActiveCommand Steering (ACS)	Optional					
BRAKES						
Hydraulic Power, Wet-Disc, Self-Adjusting on Front and Rear Axle	Standard					
Hydraulic Trailer Brakes	Optional					

^aNot available with Tier 2/Stage II emissions.

^bFor ground speed data, see *Ground Speeds—e18 PowerShift Transmission* in this *Operator's Manual* section.

^cSee your John Deere dealer for tire size selection and limitations.

[Scraper]	9R			
	490	540	590	640 ^a
TRANSMISSION				
e18 PowerShift (18F/6R) 40 km/h (25.0 mph) ^b	Standard			
FRONT AND REAR AXLES				
Final Drives	Inboard Planetary with Double-Reduction Axles			
120 x 3048 mm (4.72 x 120 in)	Standard			
HydraCushion Front Axle Suspension	Optional			Standard
Differential Lock	Full-Locking Electrohydraulic			
Wheel Equipment	Group 47/48 Tires Available as Singles/Duals/Triples ^c			
STEERING				
Hydraulic Power Steering with Electronic Backup Pump	Standard			
ActiveCommand Steering (ACS)	Optional			
BRAKES				
Hydraulic Power, Wet-Disc, Self-Adjusting on Front and Rear Axle	Standard			

Specifications

[Scraper]	9R			
	490	540	590	640 ^a
Hydraulic Trailer Brakes	Optional			

^aNot available with Tier 2/Stage II emissions.

^bFor ground speed data, see Ground Speeds—e18 PowerShift Transmission in this Operator's Manual section.

^cSee your John Deere dealer for tire size selection and limitations.

AK08008,000086C-19-16FEB23

PTO [Ag], Hitch [Ag], and Drawbar

[Ag]	9R					
	390	440	490	540	590	640 ^a
HITCH						
Rear 3-Point Hitch—Category 4N/3 with Quick Coupler (electric-hydraulic with draft sensing):						
6804 kg (15000 lb) Lift Capacity	Optional			—		
9072 kg (20000 lb) Lift Capacity ^b	Optional			—		
Rear 3-Point Hitch—Category 4N/4 with Quick Coupler (electric-hydraulic with draft sensing):						
6804 kg (15000 lb) Lift Capacity	Optional					
9072 kg (20000 lb) Lift Capacity ^b	Optional					
DRAWBAR						
For Drawbar Load Limitations, see Drawbar Load Limitations [Ag] in Drawbar section of this Operator's Manual.						
PTO						
Rear—Independent:						
1 3/4-Inch, 20-Spline, 1000 rpm	Optional					

^aNot available with Tier 2/Stage II emissions.

^bRequires 120 mm diameter axle.

[Scraper]	9R			
	490	540	590	640 ^a
DRAWBAR				
For Drawbar Load Limitations, see Scraper Application [Scraper] in Drawbar section of this Operator's Manual.				

^aNot available with Tier 2/Stage II emissions.

AK08008,000086D-19-15FEB23

Electrical System

Type	Three Batteries in Parallel
Alternator/Battery	Standard—250A/12V; Optional—330A/12V
Total Cold Cranking Amps	2775 (3-925 CCA group 31 batteries)

AK08008,0000465-19-15FEB23

Integrated Technology

AutoTrac:	
Final Tier 4	Integrated
Stage V, Tier 3/ Stage IIIA, Tier 2/Stage II Engines	Ready
Connectivity Hardware	Includes Integrated Cab Wiring Harness, Antenna, JDLINK Modem (MTG), and Ethernet Harnesses ^a
Connectivity^b	JDLINK Connectivity can be Enabled in John Deere Operations Center
ISOBUS Implement Connection	Standard (ISO 11783)

Specifications


G5 CommandCenter:	
G5 CommandCenter 257 mm (10.1 in) display with G5 processor	Availability Dependent Upon Destination
G5 ^{Plus} CommandCenter 325 mm (12.8 in) display with G5 processor	Availability Dependent Upon Destination

^aEthernet harnesses may vary per configuration.

^bConnectivity service is subject to country availability.

kd34109, 1656355638833-19-26JUN23

Overall Dimensions

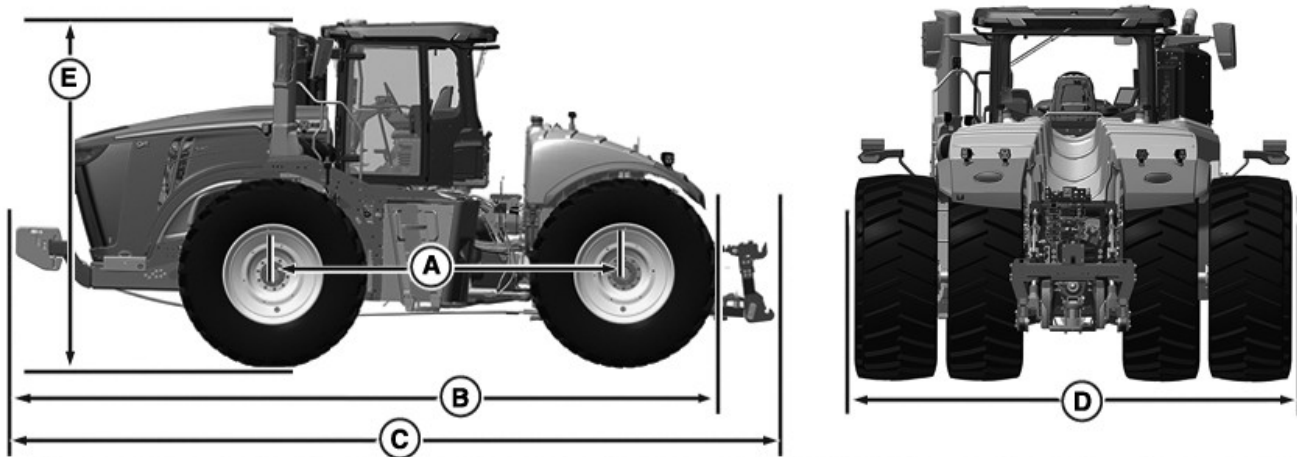

RXA0183314—UN—27MAY21

[Ag]	9R					
	390	440	490	540	590	640 ^a
LENGTH						
Wheelbase (A)	3912 mm (154 in)					
With Front Weights ^b (B)	8100 mm (318.9 in)					
With Front Weights, Hitch, and Coupler (C)	8440 mm (332.3 in)					
WIDTH						
Axle Length	3055 mm (120.3 in)					
With Outside Duals (D)	4900 mm (192.9 in)					
HEIGHT ^c (E)						
Top of Roof	3742 mm (147.3 in)					
With Optional FOPS	3757 mm (147.9 in)					
With StarFire Receiver Bracket	3756 mm (147.9 in)					
With Integrated StarFire Receiver	3773 mm (148.5 in)					
With Universal StarFire Receiver	3892 mm (153.2 in)					
Top of Exhaust:						
Final Tier 4 Engine	3736 mm (147.1 in)					
Stage V Engine	3999 mm (157.4 in)					
Tier3/Stage IIIA Engine	3740 mm (147.2 in)					
Tier 2/Stage II Engine	3740 mm (147.2 in)					—

Specifications

[Ag]	9R					
	390	440	490	540	590	640 ^a
TURNING RADIUS						
With Group 48 Tires	6099 mm (20 ft)					
CLEARANCE						
Drawbar ^{de}	333 mm (13.1 in)					


^aNot available with Tier 2/Stage II emissions.

^bCategory 5 drawbar in farthest back position.

^cWith largest Group 48 tire offered.

^dGround Clearances were calculated using smallest Group 47 tires.

^eGround to bottom of drawbar support.

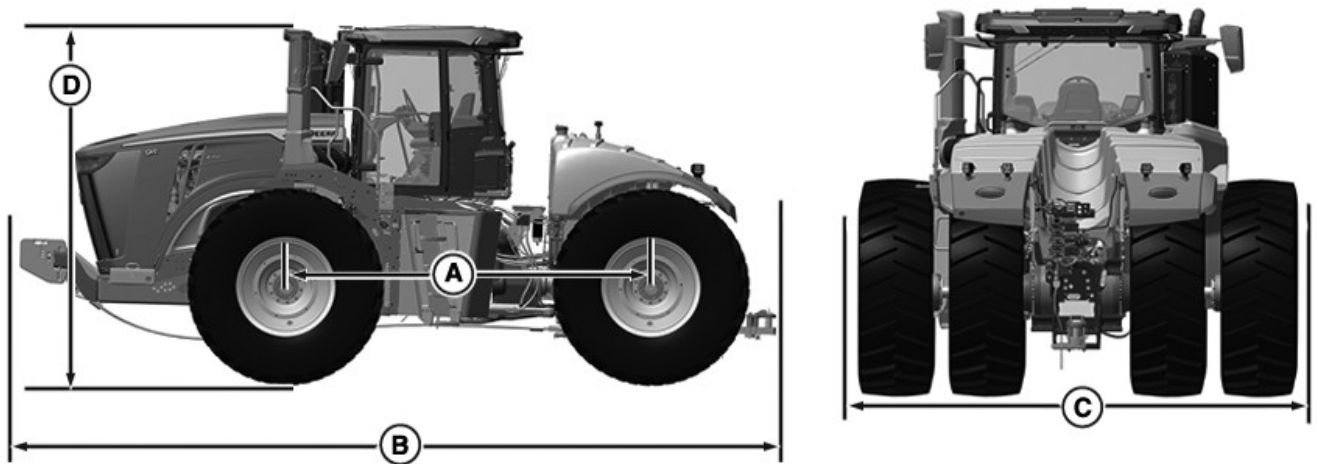

RXA0183315—UN—28MAY21

[Scraper]	9R			
	490	540	590	640 ^a
LENGTH				
Wheelbase (A)	3912 mm (154 in)			
With Front Weights and Drawbar ^b (B)	8100 mm (318.9 in)			
WIDTH				
Axle Length	3055 mm (120.3 in)			
With Widest Tires (C)	4496 mm (177.7 in)			
With Narrowest Tires (C)	4403 mm (173.3 in)			
HEIGHT ^c (D)				
Top of Roof	3757 mm (147.9 in)			
With StarFire Receiver Bracket	3756 mm (147.9 in)			
With Integrated StarFire Receiver	3773 mm (148.5 in)			
With Universal StarFire Receiver	3892 mm (153.2 in)			
Top of Exhaust:				
Final Tier 4 Engine	3736 mm (147.1 in)			
Stage V Engine	3999 mm (157.4 in)			
Tier3/Stage IIIA Engine	3740 mm (147.2 in)			
Tier 2/Stage II Engine	3740 mm (147.2 in)			—

Specifications

[Scraper]	9R			
	490	540	590	640 ^a
TURNING RADIUS				
With Group 48 Tires	6099 mm (20 ft)			
CLEARANCE				
Drawbar ^{de}	333 mm (13.1 in)			

^aNot available with Tier 2/Stage II emissions.

^bCategory 5 drawbar in farthest back position.

^cWith largest Group 48 tire offered.

^dGround Clearances were calculated using smallest Group 47 tires.

^eGround to bottom of drawbar support.

AK08008,0000870-19-16FEB23

Tractor Loads/Weights

Maximum Permissible Static Vertical Load

Maximum Permissible Load [Ag] kg (lb)						
Axle	9R					
	390	440	490	540	590	640 ^a
Front	15195 (33500)					
Rear	15195 (33500)					
Total	30390 (67000)					

^aNot available with Tier 2/Stage II emissions.

Maximum Permissible Load [Scraper] kg (lb)				
Axle	9R			
	490	540	590	640 ^a
Front	12250 (27000)			
Rear	12250 (27000)			
Total	24500 (54000)			

^aNot available with Tier 2/Stage II emissions.

For drawbar loads, see Drawbar Load Limitations [Ag] or Scraper Applications [Scraper] in the Drawbar section of this Operator's Manual.

Tractor Weights

[Ag]	9R					
	390	440	490	540	590	640 ^a
ESTIMATED SHIPPING WEIGHT						
Tractor Equipped with Final Tier 4/Stage V Engine, 800/70R38 Single Tires, Unladen, a Full Fuel Tank, No PTO, and No 3-Point Hitch	18387 kg (40451 lb)					
Tractor Equipped with Tier 3/Stage IIIA Engine, 800/70R38 Single Tires, Unladen, a Full Fuel Tank, No PTO, and No 3-Point Hitch	18228 kg (40102 lb)					
Tractor Equipped with Tier 2/Stage II Engine, 800/70R38 Single Tires, Unladen, a Full Fuel Tank, No PTO, and No 3-Point Hitch	18100 kg (39820 lb)					—
MAXIMUM BALLAST LEVEL^b	28123 kg (62000 lb)				30390 kg (67000 lb)	

^aNot available with Tier 2/Stage II emissions.

^bFor specific ballast instructions, see Performance Ballasting Section of this Operator's Manual.

[Scraper]	9R			
	490	540	590	640 ^a
ESTIMATED SHIPPING WEIGHT				
Tractor Equipped with Final Tier 4/Stage V Engine, 710/70R42 Dual Tires, Unladen, and a Full Fuel Tank	21448 kg (47186 lb)			
Tractor Equipped with Tier 3/Stage IIIA Engine, 710/70R42 Dual Tires, Unladen, and a Full Fuel Tank	21289 kg (46836 lb)			
Tractor Equipped with Tier 2/Stage II Engine, 710/70R42 Dual Tires, Unladen, and a Full Fuel Tank	21161 kg (46554 lb)			—

Specifications

[Scraper]	9R			
	490	540	590	640 ^a
MAXIMUM BALLAST LEVEL^b	24500 kg (54000 lb)			

^aNot available with Tier 2/Stage II emissions.

^bFor specific ballast instructions, see Performance Ballasting Section of this Operator's Manual.

kd34109,1657227020213-19-13JUN23

Sound Level (EU 1322/2014)

Maximum sound level at operator's ear^a: 86 dB

Maximum pass-by noise^b: 89 dB

^aMeasurement method in accordance with Directive 2009/76/EC (1), Supplement II and (EU) 1322/2014, annex XIII test method 2

^bMeasurement method in accordance with Directive 2009/63/EC (2)

NOTE: Sound level at operator ear is below the directive requirement of 86 dB with cab windows and doors closed. Drive-by sound level is below the directive requirement of 89 dB.

EC82310,000074E-19-26JUN23

Vibration Level

Maximum vibration level at operator's seat^a: 0.9 m/s²

Maximum vibration level at steering wheel^a: 0.8 m/s²

^aMeasurement method in accordance with GOST 31193

EC82310,0000F4C-19-16FEB23

Cab Classification According to EN 15695-1 (for Application of Crop Protection Chemicals and Liquid Fertilizer) (EU 1322/2014)



RXA0186207—UN—01DEC21

Label Shown for Illustration Purposes Only (may not indicate the category of the cab installed)

Cab classification according to EN 15695-1 provides information on the effectiveness of protection against harmful substances offered by the cab.

Categories 1—4 are used for classification and specified on a label inside the cab.

Replace the label if missing or damaged. See your John Deere dealer.

NOTE: EU and EAEU-compliant tractors are only equipped with a Category 1 cab.

Category 1—Cab does not offer any protection against substances that are harmful to health.

Category 2—Cab offers protection against solid airborne particles such as dust but not against aerosols and vapors.

Category 3—Cab offers protection against dust and aerosols (liquid airborne substances such as spray) but not against vapors.

Category 4—Cab offers protection against dust, aerosols, and vapors.

CAUTION: Before working in an environment containing hazardous substances (for example: when using pesticides), check whether the cab offers sufficient protection. Refer to the spraying liquid manufacturer's product data sheets specifying the required cab category.

In case of Category 3 and 4 cabs, determine whether the installed filters have been checked according to EN 15695-2:2009 and whether they are suitable for the chemical being used (refer to the manufacturer's information) before working in an environment containing hazardous substances.

Cab fresh air and recirculation air filters must be serviced as specified. Change filters every 1000 hours or annually, whichever occurs first. See Cab Filters in Service—Change section of this Operator's Manual.

Refer to product data sheets and product identification of the crop protection chemicals. These contain important information on how to avoid hazards.

The following requirements must be met to offer the best protection:

1. All seals (on door, windows, and roof) are in good condition.
2. Doors, windows, and roof closed.
3. Grommets for cables in the cab sealed properly.

4. Fan on.
5. Cab air filters are in good condition.

KD34109,0000754-19-18JAN22

Ground Speeds—e18 PowerShift Transmission

Forward Speeds

Gear	Tire Group	
	47	48
	Ground Speeds ^a km/h (mph)	
1	3.9 (2.4)	4.1 (2.5)
2	4.8 (3.0)	5.1 (3.2)
3	5.3 (3.3)	5.6 (3.5)
4	6.0 (3.7)	6.3 (3.9)
5	6.6 (4.1)	6.9 (4.3)
6	7.4 (4.6)	7.8 (4.8)
7	8.1 (5.0)	8.6 (5.3)
8	9.0 (5.6)	9.5 (5.9)
9	10.0 (6.2)	10.6 (6.6)
10	11.1 (6.9)	11.7 (7.3)
11	12.3 (7.6)	12.9 (8.0)
12	13.5 (8.4)	14.2 (8.8)
13	15.1 (9.4)	16.0 (9.9)
14	16.6 (10.3)	17.6 (10.9)
15	20.6 (12.8)	21.7 (13.5)
16	25.4 (15.8)	26.8 (16.7)
17	31.1 (19.3)	32.8 (20.4)
18	38.3 (23.8)	40.0 (25.0) ^b @ 2076 erpm ^c

^aGround speeds are at a rated engine speed of 2100 erpm (unless otherwise noted).

^bIf equipped.

^cEngine speed is electronically limited.

Reverse Speeds

Gear	Tire Group	
	47	48
	Ground Speeds km/h (mph)	
R1	3.9 (2.4)	4.1 (2.5)
R2	5.3 (3.3)	5.6 (3.5)
R3	6.0 (3.7)	6.3 (3.9)
R4	8.1 (5.0)	8.6 (5.3)
R5	9.0 (5.6)	9.5 (5.9)
R6	12.3 (7.6)	12.9 (8.0)

KD34109,0000945-19-15FEB23

Agricultural Heavy-Duty Land Leveling Package [Ag]

If agricultural tractor heavy-duty land leveling use exceeds 150 hours per year, the warranty period is limited to 90 days unless the following exception applies.

9R Series agricultural wheel tractors that are factory equipped with the following required option codes and tire specifications for heavy-duty land leveling:

- No rear hitch.
- 120 mm (4.72 in) by 3048 mm (120 in) double reduction axle with axle flats.
- Heavy-duty frame with a tapered roller bearing gudgeon.
- Tow cable.
- Greasable steering cylinder pins.
- Tires with 710 mm section width or less. Maximum outer tread spacing is 3690.6 mm (145.3 in).

In addition, the tractor:

- Must not exceed 24500 kg (54000 lb) maximum ballast level.
- Must be equipped with Category 5 drawbar with 4989 kg (11000 lb) vertical load limit.
- Must not exceed 8391 kg (18500 lb) vertical drawbar load (requires a separately ordered implement drawbar).
- Configuration is not approved for commercial scraper applications.

For additional information, see your John Deere dealer.

AK08008,000022F-19-09MAY22

Eurasian Economic Union



EAC Marking

TS1738—UN—26APR16

This information applies only to products which bear the EAC conformity mark of the Eurasian Economic Union member states.

Manufacturer:

Deere & Company, Moline, Illinois U.S.A.

Specifications

Name of the authorized representative in the Eurasian Economic Union:
Limited Liability Company
“John Deere Rus”

Address of the authorized representative:
142050, Russia, Moscow region, Domodedovo district,
Domodedovo, Belye Stolbi micro district, vladenye
“Warehouse 104”, Building 2

For technical support, contact your dealer.

Date of manufacture is denoted by the product marking
on or near the serial number plate.

DX,EAC-19-27APR16

Machine Design Life

This machine is designed and manufactured to provide
a long life of productive operation, however actual

attainable life depends on a number of factors including
the severity of working conditions and completion of
recommended maintenance. (See the Service section
of this manual.)

Periodically inspect and review the machine in
conjunction with your John Deere dealer. The review
may result in recommendations for service, component
repair, remanufacture or replacement, or, if at the end of
life, that the machine be removed from operation. (See
separate decommissioning section of this manual for
information on disposal and recycling of machine
components.)

No machine should be operated if safety-related
components are missing or in need of service. All
missing or damaged safety-related components,
including safety signs, should be repaired or replaced
before operating.

DX,MACH,DESIGN,LIFE-19-14SEP15


Required Emission-Related Information

Service Provider

A qualified repair shop or person of the owner's choosing may maintain, replace, or repair emission control devices and systems with original or equivalent replacement parts. However, warranty, recall, and all other services paid for by John Deere must be performed at an authorized John Deere service center.

DX,EMISSIONS,REQINFO-19-12JUN15

Carbon Dioxide Emissions (CO₂)

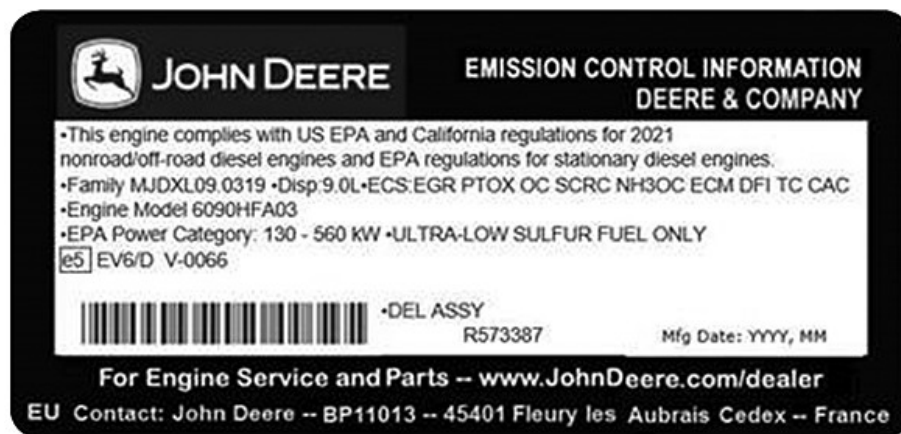

SAMPLE - Engine Emissions Label

RG33429—UN—04FEB21

To identify the carbon dioxide (CO₂) output, locate the
engine emissions label. Find the appropriate family on
the emissions label and reference the chart.

NOTE: The first letter of the family number is not utilized
for family identification on the chart.

Emissions Label Family	CO ₂ Result
_JDXL02.9323	952 g/kW-hr
_JDXL02.9327	784 g/kW-hr
_JDXL04.5337	819 g/kW-hr
_JDXL04.5338	682 g/kW-hr
_JDXL04.5304	1004 g/kW-hr

Specifications

Emissions Label Family	CO ₂ Result
_JDXN04.5174	792 g/kW-hr
_JDXL06.8324	720 g/kW-hr
_JDXL06.8328	683 g/kW-hr
_JDXL06.8336	701 g/kW-hr
_JDXN06.8175	771 g/kW-hr
_JDXL09.0319	646 g/kW-hr
_JDXL09.0325	695 g/kW-hr
_JDXL09.0329	657 g/kW-hr
_JDXL09.0333	650 g/kW-hr
_JDXL13.5326	684 g/kW-hr
_JDXL13.6320	651 g/kW-hr
_JDXL13.5340	632 g/kW-hr

Emissions Label Family	CO ₂ Result
_JDXL18.0341	683 g/kW-hr
_JDXL18.0342	687 g/kW-hr
F28	870 g/kW-hr
F32	710 g/kW-hr
F33	677 g/kW-hr

This CO₂ measurement results from testing over a fixed test cycle under laboratory conditions a(n) (parent) engine representative of the engine type (engine family) and shall not imply or express any guarantee of the performance of a particular engine.

DX,EMISSIONS,CO2-19-23JUN23

China Emission Control Warranty Statement



JOHN DEERE

CHINA EMISSION CONTROL WARRANTY STATEMENT YOUR WARRANTY RIGHTS AND OBLIGATIONS

To determine if the John Deere engine qualifies for the additional warranties set forth below, look for the "Emissions Control Information" label located on the engine. If the engine is operated in China and the Emissions Control Information label contains an Information Disclosure number, refer to the "China Emission Control Warranty Statement".

Warranties stated on this certificate refer only to emissions-related parts and components of your engine. The complete engine warranty, less emissions-related parts and components, is provided separately. If you have any questions about your warranty rights and responsibilities, you should contact John Deere at 400-6576-555.

JOHN DEERE'S WARRANTY RESPONSIBILITY:

John Deere warrants to the ultimate purchaser and each subsequent purchaser that this off-road diesel engine including all parts of its emission-control system was designed, built and equipped so as to conform at the time of sale with GB20891-2014 and HJ1014-2020 and is free from defects in materials and workmanship which would cause the engine to fail to conform with applicable China regulations for a period of five years from the date the engine is placed into service or 3,000 hours of operation, whichever first occurs.

Where a warrantable condition exists, John Deere will repair or replace, as it elects, any part or component with a defect in materials or workmanship that would increase the engine's emissions of any regulated pollutant within the stated warranty period at no cost to you, including expenses related to diagnosing and repairing or replacing emission-related parts. Warranty coverage is subject to the limitations and exclusions set forth herein. Emission-related components include engine parts developed to control emissions related to the following:

Air-induction system
Fuel System
Exhaust gas recirculation systems

Aftertreatment devices
Sensors
Electronic control units

EMISSION WARRANTY EXCLUSIONS:

John Deere may deny warranty claims for malfunctions or failures caused by:

- Non-performance of maintenance requirements listed in the Operator's Manual.
- The use of the engine / equipment in a manner for which it was not designed.
- Abuse, neglect, improper maintenance or unapproved modifications or alterations.
- Accidents for which it does not have responsibility or by acts of God.

The off-road diesel engine is designed to operate on diesel fuel as specified in the Fuels, Lubricants and Coolants section in the Operators Manual. Use of any other fuel can harm the emissions control system of the engine / equipment and is not approved for use.

To the extent permitted by law John Deere is not liable for damage to other engine components caused by a failure of an emission-related part, unless otherwise covered by standard warranty.

THIS WARRANTY IS EXPRESSLY IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. REMEDIES UNDER THIS WARRANTY ARE LIMITED TO THE PROVISIONS OF MATERIAL AND SERVICES AS SPECIFIED HEREIN. WHERE PERMITTED BY LAW, NEITHER JOHN DEERE NOR ANY AUTHORIZED JOHN DEERE ENGINE DISTRIBUTOR, DEALER, OR REPAIR FACILITY OR ANY COMPANY AFFILIATED WITH JOHN DEERE WILL BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

LX528019—UN—10DEC21



中国排放物控制质保声明 您的质保权利和责任

为了确定约翰迪尔发动机是否符合下述额外质保，请查看发动机的“排放标签”。如果发动机是在中国销售使用并且“排放标签”包含信息公开编号，请参考本声明。

本质保声明只涉及与发动机排放相关的零部件。对于发动机整机以及与非排放相关零部件的质保声明将另行提供。如果您对您的质保权利和责任有任何疑问，请致电 400-6576-555 联系约翰迪尔。

约翰迪尔保修责任

约翰迪尔向最终购买者和每位后续购买者保证：该非道路柴油发动机，包括其排放控制系统的所有零件的设计、制造和配置在销售时均符合《非道路移动机械用柴油机排气污染物排放限值及测量方法（三、四阶段）》（GB20891-2014）和《非道路柴油移动机械污染物排放控制技术要求的（HJ1014—2020）》标准的规定，发动机材料无缺陷，在工艺上不会导致不符合中国法规的缺陷，保修期从发动机销售之日起算五年或作业 3000 小时，先到者为准。

如符合质保条件，约翰迪尔将按其选择，修理或者更换任何在材料或工艺存在缺陷，会导致法规规定的发动机排放污染物增加的零部件，在规定的质保期内，您无需支付任何费用，包括与诊断、维修或更换排放相关零部件的费用。保修范围受以下限制和排除条款约束。排放相关的部件包括下列为控制排放物而开发的发动机零件：

进气系统
燃油系统
废气再循环系统

后处理装置
传感器
发动机电子控制单元

排放保修除外条款

约翰迪尔有权拒绝由以下原因引起故障或失效的保修申请：

- 不履行操作手册中列出的维修要求
- 不按设计的方式使用发动机/设备
- 误用、疏忽、不正确的维修或未经批准而进行的修改或改装
- 非因约翰迪尔责任导致的事故或不可抗力引起的事故

该非道路柴油发动机的运行需要使用指定的柴油机燃油，这一点在操作手册中“燃油、润滑油和冷却液”章节中明确规定。任何其它燃油的使用都可能导致发动机/设备的排放控制系统受损，因此不得使用。

在法律允许的范围内，除非标准保修另有规定，否则约翰迪尔对因排放相关零部件故障而导致的其他发动机部件损坏不承担责任。

本质保声明将替代所有其他明示或暗示的保证，包括任何促销性或出于其他目的的间接保证。本质保声明所涉及的保修服务仅限于本声明规定的零部件和质保条款。在法律允许的情况下，约翰迪尔或任何约翰迪尔授权的发动机批发商、经销商或维修机构或任何约翰迪尔附属公司均不对间接或后继损失负责。

LX528020—UN—10DEC21
DX,EMISSIONS,NR4-19-21APR22

Third-Party Software Notifications and Licenses

The copyrights for certain portions of the Software on this machine may be owned or licensed by other third parties (“Third Party Software”) and is used and

distributed under those licenses. The License Agreement link in the System Information section of the CommandCenter Software Manager includes the acknowledgements, notices and licenses for such Third Party Software. The Third Party Software notices are included with the distribution of this License Agreement.

If you are unable to locate these Third Party Software notices, please write to the address included below. The Third Party Software is licensed according to the applicable Third Party Software license notwithstanding anything to the contrary in this Agreement. If the Third Party Software contains copyrighted software that is licensed under the GPL/LGPL or other copyleft licenses, copies of those licenses are included in the Third Party Notices. You may obtain the complete corresponding source code for such Third Party Software from Deere for a period of three years after our last shipment of the Software by sending a request to:

Deere Open Source Compliance Team
P.O. Box 1202
Moline, IL 61266-1202
USA

Please include name of the product and the version number of the software in the request letter. This offer is valid to anyone in receipt of this information.

EC82310,0000F7B-19-14FEB23

Identification Numbers

Identification Plates

Each tractor is equipped with the identification plates shown in this section. The complete series of letters and numbers stamped on the plates:

- Identify a component or assembly.
- Are required when ordering parts or identifying a tractor or component for any John Deere product support program.

For each identification plate, accurately record the identification numbers in the space provided.

RW29387,00003B7-19-04MAR20

Position 11		
Code		Transmission and Configuration Option
[Ag]	[Scraper]	
A	C	

SV81855,0000387-19-29JUN22

Product Identification Number (China Only)


* _____ *

Record the PIN in the Space Provided

Product Identification Number


* _____ *

Record the PIN in the Space Provided

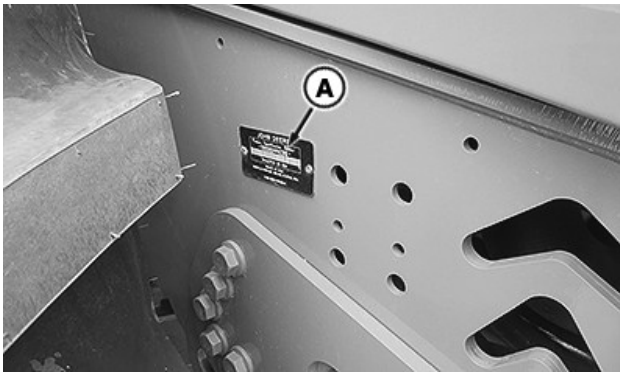

RXA0185228—UN—25AUG21

PIN Plate (A) is on the Right-Hand Side of the Tractor Frame

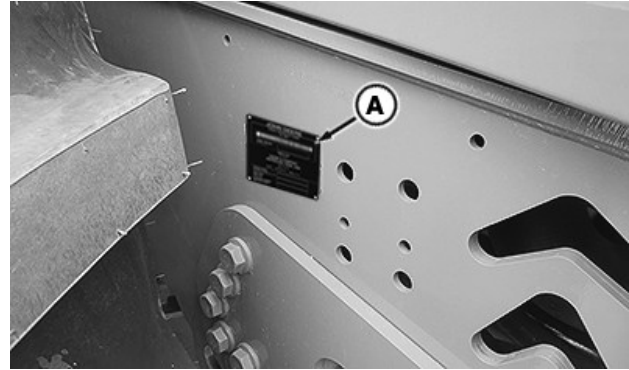

RXA0185271—UN—30AUG21

PIN Plate (A) is on the Right-Hand Side of the Tractor Frame

Position 8—Trim and Series Code

Position 10—Character designating calendar year of manufacture

Position 11—Transmission and Configuration Option Code

Position 8			
Trim Code	Series Code		
	2	4	6
R	D	M	S

Position 10					
Code	M	N	P	R	S
Year	2021	2022	2023	2024	2025

JOHN DEERE	
PRODUCT IDENTIFICATION NUMBER 出厂编号	

WHEEL TRACTOR 轮式拖拉机	
MADE IN USA 美国制造	
DEERE & COMPANY WATERLOO, IOWA, USA 迪尔公司 美国, 爱荷华州, 滑铁卢市	
ENGINE POWER 发动机标定功率 (12 小时)	
BUILD DATE 制造日期	
STANDARD NUMBER 拖拉机执行标准	

RXA0187225—UN—10JUN22

PIN Plate

Position 8—Trim and Series Code

Position 10—Character designating calendar year of manufacture

Position 11—Transmission and Configuration Option Code

Identification Numbers

Position 8			
Trim Code	Series Code		
	2	4	6
R	D	M	S

Position 10					
Code	M	N	P	R	S
Year	2021	2022	2023	2024	2025


Position 11		
Code		Transmission and Configuration Option
[Ag]	[Scraper]	
A	C	e18 Powershift

EC82310,0000501-19-30JUN22

Engine Serial Number

* _____ *

Record the Serial Number in the Space Provided

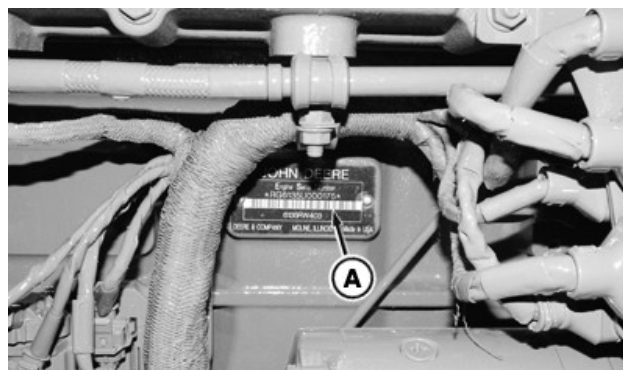

RXA0160356—UN—03AUG17

Engine Serial Number Plate (A) is on the Left-Hand Side of the Engine Near the Starter (Parts Removed For Clarity)



RXA0184055—UN—10JUN21

Engine Serial Number Plate Example

Position 7—Engine emission configuration code (B)


Position 7	
Code	Engine Emission Configuration
U	Final Tier 4/Stage V
L	Tier 3/Stage IIIA [Ag]
G	Tier 2/Stage II

KD34109,00006C4-19-10FEB22

Cab Serial Number

* _____ *

Record the Serial Number in the Space Provided

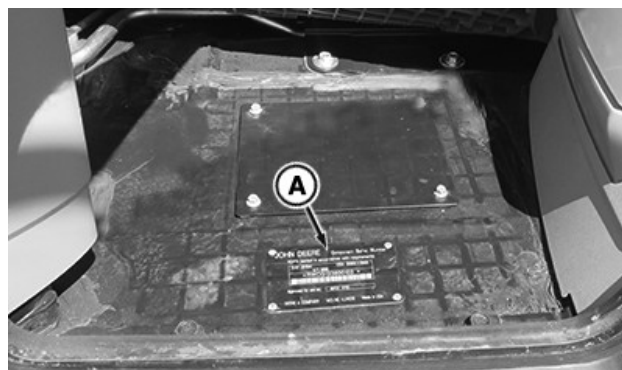

RXA0179149—UN—18AUG20


Cab Serial Number Plate (A) is Underneath the Cab Floor Mat at the Cab Door

EC82310,000006F-19-22OCT20

Transmission Serial Number


* _____ *

Record the Serial Number in the Space Provided

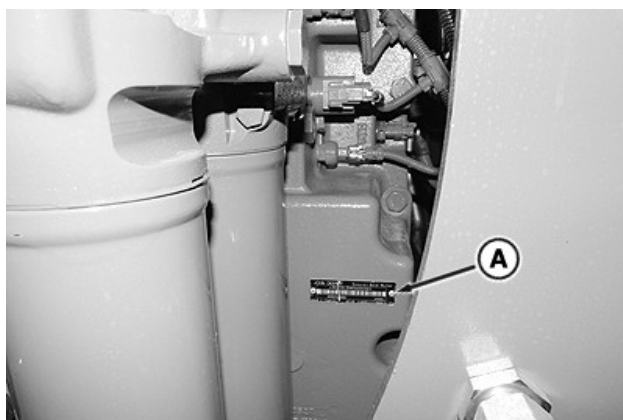

RXA0142107—UN—05JUN14
Transmission Serial Number (A) is on the Right-Hand Rear of the Transmission Case (Near the Transmission Filters)

TO84419,000021F-19-22OCT20

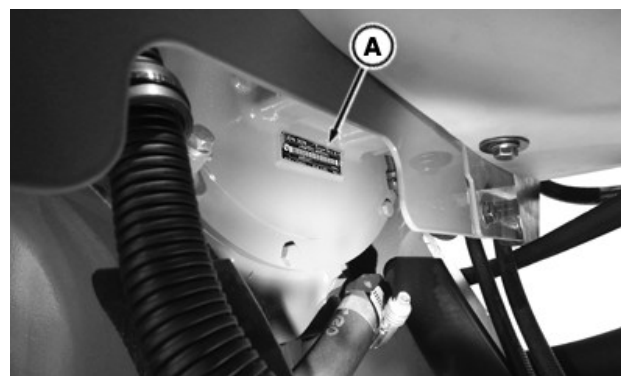


RXA0142514—UN—24JUN14
PTO Clutch Serial Number (A) is on the PTO Clutch in the Gudgeon Area

TO84419,0000221-19-22OCT20

PTO Drop Box Serial Number [Ag]

* _____ *

Record the Serial Number in the Space Provided

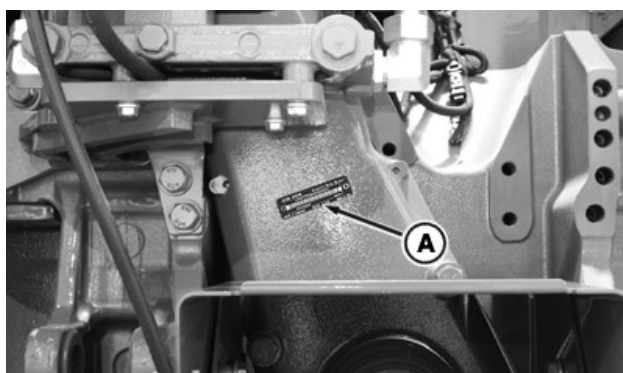

RXA0142515—UN—24JUN14
PTO Drop Box Serial Number (A) is on the PTO Drop Box at the Rear of the Tractor


TO84419,0000220-19-22OCT20

PTO Clutch Serial Number [Ag]

* _____ *

Record the Serial Number in the Space Provided

Keep Proof of Ownership

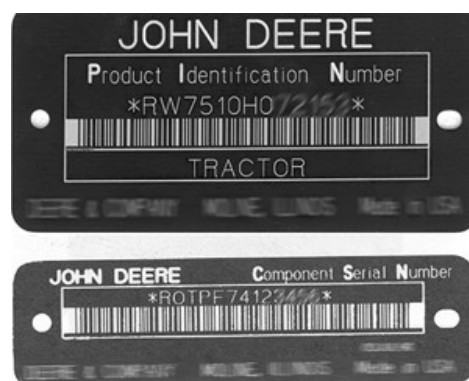


TS1680—UN—09DEC03

1. Maintain in a secure location an up-to-date inventory of all product and component serial numbers.
2. Regularly verify that identification plates have not been removed. Report any evidence of tampering to law enforcement agencies and order duplicate plates.
3. Other steps you can take:

- Mark your machine with your own numbering system
- Take color photographs from several angles of each machine

DX,SECURE1-19-18NOV03

Keep Machines Secure

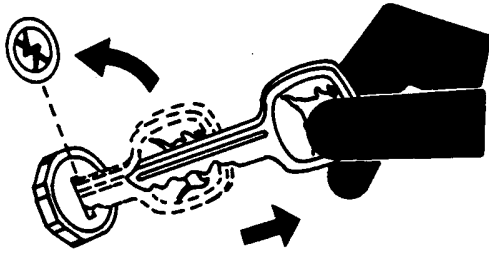

TS230—UN—24MAY89

1. Install vandal-proof devices.
2. When machine is in storage:
 - Lower equipment to the ground
 - Set wheels to widest position to make loading more difficult
 - Remove any keys and batteries
3. When parking indoors, put large equipment in front of exits and lock your storage buildings.
4. When parking outdoors, store in a well-lighted and fenced area.
5. Make note of suspicious activity and report any thefts immediately to law enforcement agencies.
6. Notify your John Deere dealer of any losses.

DX, SECURE2-19-18NOV03

Change of Ownership

Subsequent Ownership

Second Owner

Serial Number:	Tractor Model:
Engine Number:	Registration Number:
Previous Owner:	New Owner:
Address:	Address:
Purchase Date: Hours at Purchase:	Dealer's Stamp <i>(only if sold through a dealer)</i>

Third Owner

Serial Number:	Tractor Model:
Engine Number:	Registration Number:
Previous Owner:	New Owner:
Address:	Address:
Purchase Date: Hours at Purchase:	Dealer's Stamp <i>(only if sold through a dealer)</i>

TS36762,000029B-19-23NOV16

Predelivery

Predelivery Checklist

NOTE: Make a copy of this checklist and complete while performing.

Some listed options are not available on specific tractors.

The following inspection, adjustment, and service work were performed before delivery of this machine.

Complete the Air Conditioning Pre-Run Procedure

IMPORTANT: Reduce chance of air conditioner compressor damage. Complete pre-run procedure when the tractor:

- Arrives at the dealership.
- Has not been run for over 29 days.

- ☐ 1. Complete the pre-start checks.
- ☐ 2. Start tractor and run the engine at a low idle.
- ☐ 3. Switch the air conditioning system to high.
- ☐ 4. Run the tractor for at least three minutes.
- ☐ 5. Shut off the tractor.

Complete the Following Pre-Start Checks Before Operating the Tractor

- ☐ 1. Engine oil level is between Low and Full marks.
- ☐ 2. Coolant level is correct.
- ☐ 3. Air cleaner elements are installed correctly.
- ☐ 4. Air intake system clamps are tight.
- ☐ 5. Transmission-hydraulic and axle oil levels are correct.
- ☐ 6. Lubrication fittings are greased.
- ☐ 7. Shields, guards, handrails, and steps are installed correctly.
- ☐ 8. Power assisted implement is connected correctly (if tractor is equipped with VC-B offboarding). See Connecting Power Assisted Implement instructions DZ128740.
- ☐ 9. Paint is free of defects.
- ☐ 10. Exterior and interior labels are smooth and neat.
- ☐ 11. Protective plastic film removed from seats and panels.

Start the tractor before continuing the checks.

- ☐ 12. Start and run tractor at a low idle for at least three minutes.

IMPORTANT: Determine if the air conditioning pre-run procedure is needed. Run if necessary.

- ☐ 13. Complete the air conditioning pre-run procedure.
- ☐ 14. Shut off the tractor.

Inspect the tractor for:

- ☐ 15. Coolant leaks.
- ☐ 16. Engine oil leaks.
- ☐ 17. Fuel leaks.
- ☐ 18. Transmission, hydraulic, and axle oil leaks.

Complete the Following Checks Inside the Cab

- ☐ 1. Check for diagnostic trouble codes. If diagnostic trouble codes are present, record the codes and see Service ADVISOR to resolve and repair as needed. Clear all the codes.
- ☐ 2. All brake systems operate correctly:
 - Service brakes.
 - Hydraulic and air trailer brakes.
 - Parking brake.
 - Secondary brake.
- ☐ 3. Transmission operates correctly (including PARK position).
- ☐ 4. Neutral start switch operates correctly.
- ☐ 5. SCVs operate correctly.
- ☐ 6. Hitch operates correctly.
- ☐ 7. PTO operates correctly.
- ☐ 8. Warning system lights and instrument displays and gauges operate correctly.
- ☐ 9. All lights operate correctly in all switch positions.
- ☐ 10. Engine high and low idle are set correctly.
- ☐ 11. Seat can be adjusted properly.
- ☐ 12. Check seat belt integrity. Seat belt latches function correctly.
- ☐ 13. Doors operate correctly.
- ☐ 14. Cab is clean and upholstery appearance neat.
- ☐ 15. Premium radio region code set for location.
- ☐ 16. Radio operates correctly.
- ☐ 17. Washers and wipers operate correctly.
- ☐ 18. Heater, ventilation, and air conditioning system operate correctly. For details, see separate information leaflet in tractor cab.
- ☐ 19. Back up alarm operates correctly (if equipped).
- ☐ 20. All optional equipment is installed and operates correctly.

Complete These Dealer Services Before Delivery to the Customer

IMPORTANT: Avoid drivetrain damage. Operate tractor at low speeds (below 10 mph (16km/h)) for first 6 hours.

- ☐ 1. Thoroughly wash the tractor.
- ☐ 2. Charge the battery and set the battery date code.

IMPORTANT: Muffler extension and radio antenna increase tractor height. Be aware of clearance restrictions when transporting tractor.

- ☐ 3. Replace the transport rain cap with the muffler extension.
- ☐ 4. Install the AM/FM radio antenna if necessary.¹
- ☐ 5. Check and adjust the tire pressure.
- ☐ 6. Adjust the wheel spacings for the customer needs:
 - ☐ If equipped with dual tires with John Deere CTIS, see R572695 installation instructions.
 - ☐ If equipped with front dual tires without John Deere CTIS, see R572069 installation instructions for the front extension.
- ☐ 7. Check track tread settings and track alignment.
- ☐ 8. Check and adjust the steering stops.²

IMPORTANT: Failure to follow track tractor road transport recommendations can void the tractor warranty. See Transport section and General Track Use Guidelines in Tracks—General Information section of this Operator's Manual.

- ☐ 9. Perform the track system break-in procedure. See Perform Track Systems Break-In in Service—Break-In (100 Hours or Less) section of this Operator's Manual.

CAUTION: Avoid the possibility of personal injury. Never operate the tractor with loose wheel or wheel weight bolts. Failure to follow torquing procedure can result in personal injury. Wheel and wheel weight bolts are critical and require repeated torquing to assure secure tightness.

IMPORTANT: Failure to follow correct tightening procedure could result in equipment damage. Retighten bolts after working 3 hours, 10 hours, and daily during the first week of operation.

- ☐ 10. Tighten wheels and weights to specifications (even if no adjustments are made).
- ☐ 11. Tighten the track drive (sprocket) wheel, drive (sprocket) wheel sleeve, idler wheel, and mid-roller fasteners to specifications (even if no adjustments are made).
- ☐ 12. Reposition all components from shipping to operating positions (i.e. mirrors).
- ☐ 13. Adjust all lights, including extremity warning lights and beacon light. Check all lights for compliance with local regulations.
- ☐ 14. Adjust the hitch components and lock in position.
- ☐ 15. Install the Slow Moving Vehicle emblem (if necessary).
- ☐ 16. Set up the display to customer preference.

- ☐ 17. Activate the Automatic Exhaust Cleaning Mode in CommandCenter.
- ☐ 18. Install the StarFire receiver.
- ☐ 19. Perform the Connected Machine Setup Process together with customer. See CCMS Solution 206001 for details.
- ☐ 20. Perform a test drive. Verify correct function of all systems, including transmission, brakes, and steering.
- ☐ 21. Calibrate the radar.
- ☐ 22. Check for diagnostic trouble codes. If codes are present, record codes and see Service ADVISOR to resolve and repair as needed. Clear all codes.
- ☐ 23. Install RTK antenna (if equipped). See Mount RTK (Real-Time Kinematic) Radio in Accessories section of this Operator's Manual.
- ☐ 24. Check the ExactRate tractor tanks for leaks (if equipped):
 - a. Fill the ExactRate tanks with 38 L (10 gal) of water. See Fill the Tanks in the ExactRate Tractor Tanks section of this Operator's Manual.
 - b. Drive the tractor for 5 to 10 minutes with the ExactRate pump on and circulating water.
 - c. Check the system for leaks.
 - d. Drain the ExactRate tanks. See Drain the System in the ExactRate Tractor Tanks section of this Operator's Manual.
 - e. Tighten the ExactRate tank straps. See Tank Straps in the Service—Tighten section of this Operator's Manual.

Date and Signature of Dealer/Service Technician

KD34109,00005B8-19-12APR23

¹ Located in the cab.

² To avoid equipment damage on tractors equipped with ILS and group 43 or larger tires remove both transport steering stops and adjust tread settings.

Delivery Checklist and Certificate

Make two copies of this form. Complete one copy for customer and retain a second copy for dealer records.

☐ Customer Copy

☐ Dealer Copy

Delivery Checklist

At the Dealer:

- ☐ Predelivery inspection completed
- ☐ All necessary forms and literature available
- ☐ Labels installed
- ☐ Customer specified attachments and options are installed or available



CAUTION: Avoid the possibility of personal injury. Never operate tractor with loose wheel or wheel weight bolts. Failure to follow torquing procedure may result in personal injury. Wheel and wheel weight bolts are critical and require repeated torquing to assure secure tightness.

IMPORTANT: Failure to follow correct tightening procedure could result in equipment damage. Retighten wheel bolts after working 3 hours, 10 hours, and daily during first week of operation.

At Delivery Area with Customer: (shown and explained)

- ☐ All warning labels on machine
- ☐ Location of all serial numbers on machine
- ☐ Operator's Manual
- ☐ Help Text access and function
- ☐ Lubrication and service points on machine and attachments
- ☐ Tire or track maintenance and care
- ☐ Use of lubrication and maintenance schedules
- ☐ Break-in service procedures
- ☐ Warranty coverage and procedure

Demonstrated operating procedures:

- ☐ Engine—throttle, starting and stopping
- ☐ Transmission
- ☐ Steering
- ☐ Brakes
- ☐ Hitch and SCVs
- ☐ Differential lock
- ☐ PTO
- ☐ Three-point hitch adjustment
- ☐ iTEC system
- ☐ Lights
- ☐ Wipers
- ☐ Heater
- ☐ Air conditioning
- ☐ CommandCenter display and controls
- ☐ Operator's seat

- ☐ Check hardware is tight on frame, drawbar support, wheels, and wheel weights or track system component

Delivery Certificate

Serial number:

Vehicle Model:

OM Number:

Issue:

Registration No.:

Engine No.:

Delivery Date:

Owner's Name:

Delivery Hours:

Street Address:

Dealership:

City/State:

Dealer's Stamp:

ZIP/Postal Code/Country:

Predelivery

I hereby confirm receiving the tractor in complete and good condition. I have received the Operator's Manual. All necessary work upon delivery has been carried out and I have been informed of the safe method of operation and the mandatory daily maintenance work as per the Delivery Checklist.

Customer's Signature: _____ Dealership Instructor's Signature: _____

Date: _____ Date: _____

BH38674,0000D3E-19-23JUN22

Index

A

AC Compressor Belt	
Replacing	220D-1
Activating Independent Mode	
SCV	70A-6
Aftertreatment indicators overview	20B-1
Agricultural Heavy-Duty Land Leveling Package [Ag] ..	500A-10
Air Conditioning	
Checking	220B-2
Air Conditioning (A/C)	90E-3
Air Flow Mode	90E-3
Alternator Belt	
Replacing	220D-1
Annual	
Checking seat belts	220B-6
Applications	
Control Setup	30C-7
Assignment	
SCV	70A-6
AutoLoad	
Harness Connector	90D-8
AutoLoad Settings	
Access	70E-4
Advanced	70E-7
Average Draft	70E-7
Initial Draft	70E-6
Main Page	70E-4
Scraper Dimensions	70E-7
Scraper Position	70E-6
Scraper Status	70E-5
Automation	
SCV	70A-6
AUX Input	
Radio	90D-1
Auxiliary fuel filter and water separator	
Check and drain	220A-4
Avoid static electricity risk when fueling	05-4
Axle oil	
Hydraulic oil	220D-13
Axle vertical play	
Check	220B-8

B

Backup alarm	
Volume control	50B-4
Ballast	
Determining ballasted	
Required tire inflation pressures	100-9
Tractor axle loads	100-9
Tractor weight	100-9
Tractor weight split	100-9
Battery Handling, Safety	
Safety, Battery Handling	05-12

Belt

Tensioner	
Belt tensioner	
Check belt tensioner	220B-6
Belts	220D-1
Biodiesel fuel	200A-2
Bolt and screw torque values	
Metric	210-11
Unified inch	210-12
Bracket Mounts	
Monitor	90D-4
Brake light bulb	
Replacing	220F-11
Brake warning indicators	30A-1
Brakes	50A-3
Hydraulic Trailer Brakes (If Equipped)	50A-4
Secondary brake	220B-5
Break-in engine oil	
Interim tier 4, final tier 4, stage IIIB, stage IV, and stage V	200C-1
Business band and antenna	
Installing	90D-5

C

Cab	
Classification	500A-9
Cab Air Filters	
Inspecting or replacing	220D-4
Cab Classification	
(EU 1322/2014)	500A-9
Carbon Dioxide Emissions	500A-11
Carging Ports	
USB	90D-3
Category 5 to 4 drawbar pin	
Drawbar pin adapter	60F-8
Chain Box	90D-9
Change starting fluid canister	20A-1
Changing to a different size tire	
Tire	80-1
Check	
Wheel and wheel weight bolt torque	220C-1
Checking	
Seat Belts	220B-6
Weep hole	220B-3
Clean dual beam radar sensor	
500 hour service	
Dual beam radar	220A-4
Clean oil-fuel cooler, A/C condenser	
Cooler-A/C condenser	220A-2, 220A-3
Cleaning	
Engine Exhaust Filter	20-4
Clevis	
Category 4	60F-7
Category 5	60F-7
Climate controls	30B-2

Cold Weather Operation		
Engine Coolant Heater Use	20A-1	
Cold weather starting		
Engine		
With starting aid	20A-1	
CommandARM		
Climate controls	30B-2	
Example	30B-1	
Hitch controls	30B-1	
Left side controls	30B-4	
Lighting controls	30B-2	
Navigation bar	30B-6	
Position, adjusting	30B-7	
PTO control levers	30B-2	
Radio controls	30B-2	
Right-Hand Reverser		
e18 Transmission	50G-1	
SCV control levers	30B-2	
Secondary brake lever	30B-6	
Speed Adjustment Wheel		
e18 Transmission	50G-1	
CommandCenter	30C-5	
Access Lights	90C-2	
Advanced Lighting Settings	90C-4	
Calibration		
Slip	30C-6	
Calibrations		
Radar	30C-5	
Camera	30C-8	
Compatible Displays	30C-4	
Hood/belt line lights	90C-4	
Input Fields	30C-4	
iTEC		
Abort conditions	40-3	
Cancel conditions	40-3	
CommandCenter functions	40-1, 40-2	
Control functions	40-1	
Inhibit conditions	40-3	
Interrupt conditions	40-3	
Perform sequence	40-5	
Set Assignments	40-4	
Light identification	90C-1	
Lights settings main page	90C-2	
Machine settings menu	30C-1	
Power on/off	30C-4	
Shortcut buttons	30B-6	
Video display capability	30C-8	
Worklights presets	90C-4	
Compressed air	220F-2	
Connector		
Diagnostic	90D-1	
Display	90D-2	
Ethernet	90D-2	
GreenStar Display	90D-2	
Implement		
Ethernet	90D-8	
ISO 11783	90D-8	
ISO 11783	90D-1	
ISO 11786	90D-2	
Control Setup	30C-7	
Coolant		
Diesel engine		
Engine with wet sleeve cylinder liners	200D-1	
Disposing	200D-3	
John deere COOL-GARD II coolant extender	200D-1	
Mixing with concentrate, water quality	200D-2	
Testing freeze point	200D-2	
Warm temperature climates	200D-2	
Corner Post Display	30A-1	
D		
DEF		
Disposal	200B-3	
Dosing unit filter, change	220D-12	
In-line filter, change	220D-9	
Storing	200B-1	
Tank, cleaning	220A-1	
Tank, refilling	200B-2	
Testing	200B-3	
Use in SCR equipped engines	200B-1	
DEF dosing unit filter		
Change	220D-12	
DEF in-line filter		
Change	220D-9	
DEF tank		
Cleaning	220A-1	
Depth set point		
Rear hitch	60E-8	
Diagnostic Trouble Codes		
Accessing	300B-1	
Diesel engine oil		
Interim tier 4, final tier 4, stage IIIB, stage IV, and stage V	200C-1	
Service interval for operation at high altitude	200C-1	
Tier 2 and stage II	200C-2	
Tier 3 and stage IIIA	200C-4	
Diesel engines, cold weather effect	200-1	
Diesel Exhaust Fluid		
DEF		
Filler neck filter	220A-1	
Diesel Exhaust Fluid (DEF)		
Fill DEF Tank-Final Tier 4/Stage V Engine	200B-2	
Diesel fuel	200A-1	
Supplemental additives	200A-1	
Diesel fuel, testing	200A-4	
Differential lock	50-2	
Differential Lock		
Floor Switch	30-4	

Disconnect Battery		Cold weather starting	
Purgw DEF Lines		Change starting fluid canister	20A-1
DEF, Purgie Lines		With starting aid	20A-1
Battery, Disconnect	220F-2	Crankshaft damper	220D-19
Draft control		Emissions certification	20-9
Rear hitch	60E-6	Operating	20-9
Draft response		Reduce Fuel Consumption	20-11
Rear hitch	60E-4	Restarting when Out of Fuel	20-11
Draining		Engine Access Panel, Remove	210-2
Fuel Filters	220B-1	Engine Air filters	
Fuel tank sump	220B-3	Inspect	
Drawbar	60F-2	Final Tier 4/Stage V or Tier 3/Stage IIIa Engine	
Calculate Static Vertical Load	60F-3	220D-6	
Calculate Vertical Load Distance Behind Rear Axle		Tier 2/Stage II Engine	220D-7
60F-4		Engine auxiliary drive belt	220D-1
Heavy-Duty drawbar		Engine Brake	
Limitations	60F-4	5000 hour service	220B-9
Long drawbar support		Engine coolant	
Limitations	60F-6	Disposing of	200D-3
Tow cable	60F-6	Engine oil	200-1
Drawbar support and cap screws		Break-In	
Inspect drawbar support and cap screws		Interim tier 4, final tier 4, stage IIIB, stage IV, and	
500 hour service	220C-2	stage V	200C-1
Drivetrain Protection	50-3	Diesel	
Drop rate		Interim tier 4, final tier 4, stage IIIB, stage IV, and	
Rear hitch	60E-3	stage V	200C-1
		Service interval for operation at high altitude	200C-1
		200C-1	
		Tier 2 and stage II	200C-2
		Tier 3 and stage IIIA	200C-4
		Engine oil and filter service intervals	
		Interim tier 4, final tier 4, stage IIIB, stage IV, and	
		stage V	
		0.12 L/kW or greater oil pan	200C-2
		Operation at high altitude	200C-1
		Tier 2 and stage II	
		Extended drain oil pan	200C-3
		Tier 3 and stage IIIA	
		PowerTech Plus	
		0.22 L/kW or greater oil pan	200C-4
		Engine Operation	
		Battery Booster or Battery Charger	20-12
		Battery Disconnect Switch	20-9
		Start the Engine	20-9
		Engine Settings	
		Access	20-1
		Advanced	20-7
		AUTO Exhaust Filter Cleaning	20-5
		Automatic Engine Braking	20-7
		Decelerator	20-7
		Disable AUTO Exhaust Filter Cleaning	20-5
		Exhaust Filter Cleaning Overview	20-4
		Main Page	20-1
		Max Speeds	20-3
		Parked Filter Cleaning	20-6
		Power	20-3

E

e18 Transmission	
Operate	50G-1
Set Speeds and Efficiency Manager	50G-3
Shift	50G-1
e18 Transmission Settings	50G-4
Access	50G-4
Custom	50G-6
Droop	50G-6
ECO	50G-7
Max Speeds	50G-7
Mode	50G-6
Effect of cold weather on diesel engines	200-1
Electrical system	
Introduction	220F-1
Electronic display, use properly	30C-1
Emergency Exit	90D-5
Emissions	
Required language	
EPA	500A-11
Emissions Equipment	
DPF Service	20B-4
Emissions Performance	
Tampering	2
Engine	
Change starting fluid canister	20A-1
Check engine and exhaust compartments	
Check for debris	220B-2

Engine Speed	
PTO	60A-6
Engine Valve Clearance	
2000 hour service	220B-8
Exhaust Filter, Safety	
Safety, Exhaust Filter	05-14
External Switches	
Hitch	60E-9
PTO	60A-5

F

Fan Speed	90E-3
Feature Mode	
SCV	70A-4
Filter	
Axle	220D-13
Fuel (water separator), auxiliary, check and drain ..	220A-4
Transmission	220D-13
Filters	
Cab air	
Inspecting or replacing	220D-4
Cab recirculation	
Replacing	220D-4
Fuel	220D-3
Hydraulic	220D-13
Filters, Oil	
Oil Filters	200-2
Flow Adjustment	
SCV	70A-4
Determine	70A-8
Flow Adjustment Sensitivity	
SCV	70A-7
Flow Sharing	
SCV	70A-9
Freeing a Mired Tractor	
Transport	110-8
Front console	
Example	30-1
Front Drive Line U-Joints	
Service	220D-19
Front Engine Side Shield, Remove	210-2
Front grille lights	
Adjusting	220F-9
Fuel	
Biodiesel	200A-2
Diesel	200A-1
Filters	220D-3
Handling and storing	200A-3
Lubricity	200A-3
System	20-9
Tank	200A-3
Tank sump	220B-3
Fuel filter	
Water separator, auxiliary, check and drain ..	220A-4

Fuel Filters	
Filters, Fuel	200A-4
Fuel system	
Bleeding	210-10
Do not modify	210-10

G

Gauges	30A-1
Glossary	00-1
GPS	
Configure Tractor	50B-1
GPS Data	
RS232 Serial Communication Connection	90D-8
Grease	
Multipurpose Extreme Pressure (EP)	200E-1
Ground Speed	30A-1
Ground Speeds	
e18 PowerShift Transmission	500A-10

H

Halogen light bulbs	
Handling	220F-7
Handling	
Halogen light bulbs	220F-7
Hardware torque values	
Metric	210-11
Unified inch	210-12
High-pressure washer use	220A-2
High-pressure washers	210-7, 220F-2
Hinge pins	220E-1
Hitch	
Adjust Implement Level	60E-11
Adjust Lateral Float	60E-11
Adjust Sway Blocks	60E-9
Components	60E-8
Convertible Quick-Hitch Upper Hook	
Category 4N/3	60E-13
External Switches	60E-9
Quick-Hitch	
Attach Implement	60E-10
Detach Implement	60E-10
Hitch (Rear)	
Convertible Quick-Hitch Lower Hooks	
Category 4N/3	60E-12
Float Operation	60E-8
Manual Lowering	60E-9
Hitch control lever	
Adjustments	60E-7
Hitch controls	30B-1
Hitch Conversion	
Category 4N/4/3	60E-11
Hood, Open	210-1
Horn	
Operate	30-1

HVAC	CommandCenter description.....	40-1, 40-2
Settings	Inhibit conditions.....	40-3
Access.....	Interrupt conditions.....	40-3
Air Conditioning.....	Perform sequence.....	40-5
Air Flow Mode.....	Recommendations (AutoLearn).....	40-5
Climate Control Automation.....	Set Assignments.....	40-4
Fan Speed.....	Set up a sequence.....	40-2
Main page.....	Introduction to	
Set Temperature.....	Electrical system.....	220F-1
Hydraulic	iTEC	
Warm-up.....	Functions	
Hydraulic Connection	Efficiency manager transmission.....	40-6
Implement Connection Example [Ag] 70B-7, 70B-11	iTEC station description.....	40-1
Implement Connection Example [Scraper] ... 70B-13		
Hydraulic Connections		
Component Identification [Ag].....	J	
Component Identification [Scraper].....	Jacking up the tractor.....	210-4
Connect/Disconnect Hydraulic Hoses.....		
Implements Requiring Large Volumes of Hydraulic	K	
Oil.....	Key switch.....	30-2
Using Hydraulic Spray Pumps [Ag].....		
Hydraulic oil.....	L	
Hydraulic System	Lateral Float.....	60E-11
Load Sense	Lifting points for jacking up.....	210-4
Power-Beyond.....	Lighting controls.....	30B-2
	Lights	
I	7-Pin Outlet.....	90C-6
Identification Number	Access Settings.....	90C-2
Cab Serial Number.....	Adjusting front grille lights.....	220F-9
Identification Plates.....	Aim headlights	
Identification Numbers	Headlights.....	220F-7
Product Identification Number.....	Daytime running lights setting.....	90C-4
Product Identification Number (China Only) 500B-1	Engine off delayed lighting setting.....	90C-4
Implement Connector	Entrance/exit lights setting.....	90C-4
Clean Implement Connector.....	Extremity warning lights.....	90C-5
Clean Implement Ethernet Connector.....	Front grille flood light bulbs	
Ethernet.....	Replacing.....	220F-10
ISO 11783.....	Front grille worklight bulbs	
Independent Mode	Replacing.....	220F-9
SCV.....	Hazard lights.....	90C-5
Indicators	Hood/belt line settings.....	90C-4
Alert.....	Identification.....	90C-1
Digital.....	Light identification.....	220F-10, 220F-11, 220F-13
Information.....	Main page.....	90C-2
Service alert.....	Operate.....	30-3
STOP.....	Replacing brake light bulb.....	220F-11
Warning.....	Rotary beacon light.....	90C-5
Indicators overview.....	Worklights presets settings.....	90C-4
Inspecting	Lights	
Or replacing cab air filters.....	7-pin outlet.....	90C-5
Or replacing recirculation filter.....	Load depth	
Instructional seat.....	Rear hitch.....	60E-4
Intelligent Total Equipment Control (iTEC)	Lubricant	
Abort conditions.....	Mixing.....	200E-2
Cancel conditions.....	Lubricant Storage	
CommandARM control functions.....	Storage, Lubricant.....	200E-2

Lubricants, safety	200E-2
Lubricate lift cylinders and rockshaft	220E-3
Lubricate PTO drive shaft	220E-2
Lubrication	
Heavy-Duty gudgeon bearings	220E-2
HydraCushion Front Axle Suspension	220E-4
Lower drive line bearing	220E-2
Lubrication and maintenance	
As required	
Cleaning DEF tank	220A-1
Lubricity of diesel fuel	200A-3

M

Machine design life	500A-11
Machine stop warning, required	20-8
Maximum Permissible Static Vertical Load	
Specifications	500A-8
Metric bolt and screw torque values	210-11
Mirrors	
Adjust	90A-1
Mixing lubricants	200E-2
Multipurpose Extreme Pressure (EP) grease	200E-1

N

Navigating G5 CommandCenter	30C-3
Navigation bar	30B-6

O

Oil	
Engine	200-1
Interim tier 4, final tier 4, stage IIIB, stage IV, and stage V	200C-1
Tier 2 and stage II	200C-2
Tier 3 and stage IIIA	200C-4
Filter	220D-13
Hydraulic	200E-1
Transmission	200E-1
Oil change	
Transmission	
Powershift	
Hydraulic reservoir vent filter	220D-13
Onscreen Help	30C-1
Operator Station	
Business Band or CB, Install	90D-5
Optional Fuel Water Separator Filter Element (30 Micron)	
Service—Change	220D-3
Other Lubricants	
Transmission and Hydraulic Oil Use	200E-1
Outlet	
12V Accessory	90D-1, 90D-3
AC (Alternating Current)	90D-2

P

Paint care	220A-2
------------------	--------

Pedals	30-2
Performance Ballasting	
Ballast Options	100-3
Control Power Hop	100-8
General Ballasting Information	100-1
General Guidelines	100-1
General Weight Split Guidelines	100-2
Implement and Scraper Size Guidelines	100-9
Implement Guidelines	100-9
Liquid Ballast Use	100-12
Measure Slip	100-4
Quik-Tatch Weight Use	100-4
Rear Wheel Weight Installation—Dual Drive	
Wheels	100-6
Rear Wheel Weight Use	100-5
Unballasted Tractor Weight Chart	100-13

PowerShift	
Calibration	210-7
Predelivery	
Predelivery Checklist	700-1
Product identification	500B-1
Psotion	
Rear hitch	60E-5
Psotion control	
Rear hitch	60E-6
PTO	
Correct Engine Speed	60A-6
External Switches	60A-5
Operate	60A-5
Settings	
Access	60A-1
Advanced	60A-2
Engagement Rate	60A-3
Main Page	60A-1
PTO Out-of-Seat	60A-3
Rear PTO Speed Limit	60A-3
PTO control levers	30B-2
PTO, operating instructions (EU 1322/2014)	60A-4

Q

Quick-Hitch	60E-10
-------------------	--------

R

Radar	
Configure Tractor	50B-1
Radar Calibration	30C-5
Radiator	
Clean	220A-2, 220A-3
Radio controls	30B-2
Raise rate	
Rear hitch	60E-3
Rear Engine Side Shield, Remove	210-2
Rear hitch	
Depth set point	60E-8

Lubricate rear hitch.....	220E-3
Rear Hitch [Ag]	
Hitch Lift Capacities.....	60E-1
Rear hitch settings	
Access.....	60E-1
Draft control.....	60E-6
Drop rate.....	60E-3
Load depth.....	60E-4
Main Page.....	60E-1
Position.....	60E-5
Position control.....	60E-6
Raise rate.....	60E-3
Slip sensitivity.....	60E-4
Upper limit.....	60E-3
Recirculation Air Filter	
Inspecting or replacing.....	220D-4
Recommended tire pressures	
Group 47.....	80A-8
Group 48.....	80A-13
Record engine serial number	
Identification numbers.....	500B-2
Record product identification number.....	500B-1
Record PTO clutch serial number.....	500B-3
Record PTO dropbox serial number.....	500B-3
Record transmission serial number.....	500B-2
Refrigerator.....	90D-3
Refueling, avoid static electricity risk.....	05-4
Remove tractor from storage	
Remove tractor storage.....	400-1
Replace trailering light bulb	
Electrical system service.....	220F-13
Replacing	
Brake light bulb.....	220F-11
Required machine stop warning.....	20-8
Restarting when Out of Fuel.....	20-11
RS232 Serial Communication Connection.....	90D-8
RTK Receiver	
Installation.....	90D-7
Running engine.....	20-11

S

Safety	
Handling Halogen light bulbs.....	220F-7
Protect against noise.....	05-2
Rotating drivelines, stay clear.....	05-5
Safe maintenance, practice.....	05-13
Tires, service safely.....	05-17
Towed equipment, transport at safe speeds ..	05-9
Tractor, operating safely.....	05-6
Use caution on slopes, uneven terrain, and rough ground.....	05-10
Safety chains.....	110-2
Safety Lights and Devices	
Rotary Beacon Light.....	90C-5
Safety, Avoid High-Pressure Fluids	
Avoid High-Pressure Fluids.....	05-17

Safety, Fire Prevention	
Fire Prevention.....	05-3
Safety, Forestry Operations	
Limited Use in Forestry Operation.....	05-7
Safety, Handle Fuel Safely, Avoid Fires	
Avoid Fires, Handle Fuel Safely.....	05-2
Safety, lubricants.....	200E-2
Safety, ROPS	
ROPS, Keep Installed Properly.....	05-4
Safety, Steps and Handholds	
Use Steps and Handholds Correctly.....	05-5
Safety, Tightening Wheel Retaining Bolts/Nuts	
Tightening Wheel Retaining Bolts/Nuts.....	05-17
SCR	
System overview.....	20B-3
Scraper Applications [Ag].....	60F-2
Scraper Applications [Scraper].....	60F-3
Scraper Information	
Connect AutoLoad Harness.....	70E-3
Scraper Information [Scraper]	
Scraper Operation Cycle.....	70E-1
SCV Control Lever	
Adjustments.....	70A-7
SCV control levers.....	30B-2
SCV Settings.....	70A-1
Access.....	70A-1
Activating Independent Mode.....	70A-6
Advanced.....	70A-5
Assignment.....	70A-6
Automation.....	70A-6
Feature Mode.....	70A-4
Flow Adjustment.....	70A-4
Flow Adjustment Sensitivity.....	70A-7
Independent Mode.....	70A-3
Standard Mode.....	70A-3
Time Adjustment.....	70A-5
TouchSet Depth Control.....	70A-4
Seat	
ActiveSeat II.....	90-3
Air Seat.....	90-1
Operator Presence Sensor.....	90-5
Seat Belts	
Checking.....	220B-6
Serial numbers.....	500B-1
Service	
10 hour or daily	
Draining water from fuel filters	
Water separator.....	220B-1
500 hours	
Check wheel and weight bolt torque.....	220C-1
Draining fuel tank sump.....	220B-3
1000 hours	
Inspecting recirculation filter.....	220D-4
1000 hours	
Inspecting cab air filters.....	220D-4

2000 hours		Short drawbar support	
Check engine valve clearance.....	220B-8	Short drawbar	
Annual		Quick-attach drawbar	60F-5
Checking seat belts	220B-6	Signal words, understand.....	05-1
As required		Slip Calibration	30C-6
Cleaning DEF tank	220A-1	Slip sensitivity	
Service		Rear hitch	60E-4
1500 hours		Snap to Connect Fitting (STC)	
SCV Pilot Filter	220D-8	STC	210-6
Service—Break-In (100 Hours or Less)		Sound Level	500A-9
Perform Break-In Services	210A-1	Specifications	
Service—Change		Capacities	500A-2
Access Diesel Exhaust Fluid (DEF) Dosing Unit		Dimensions, Overall	500A-6
Filter.....	220D-11	Electrical System	500A-5
Access Diesel Exhaust Fluid (DEF) In-Line Filter ..		Engine	500A-1
220D-9		Ground Speeds: e18 PowerShift Transmission	500A-10
Diesel Exhaust Fluid (DEF) Tank Vent Filter	220D-8	Hydraulic System	500A-3
Engine Coolant	220D-16	Integrated Technology	500A-5
Engine Oil and Filter	220D-2	PTO [Ag], Hitch [Ag], and Drawbar	500A-5
Fan Belt-Tier 3/Stage IIIA or Tier 2/Stage II Engine		Sound Level.....	500A-9
220D-1		Transmission and Drivetrain	500A-4
Fuel Tank Vent Filters.....	220D-4	Vibration Level	500A-9
Optional Fuel Water Separator Filter Element (30		Standard Mode	
Micron).....	220D-3	SCV	70A-3
Service—Check		StarFire Receiver	
Drawbar Sensor Calibration [Scraper]	220B-8	Installation	90D-6
Drawbar Wear	220B-9	Steering fault indicator	30A-1
Engine Air Intake System-Final Tier 2/Stage II	220B-5	Steering pin bushings	220E-1
Engine Air Intake System-Final Tier 4/Stage V or Tier		Steering Settings	
3/Stage IIIA Engine	220B-6	Access	30C-7
Engine Coolant Level	220B-1	Main Page.....	30C-7
Engine Oil Level	220B-3	Steering Wheel Resistance	30C-7
HydraCushion Suspended Front Axle Accumulator		Steering wheel and column	
Charge Pressure	220B-6	Adjust	30-1
Service—Clean		Stopping engine.....	20-11
Tractor Exterior	220A-2	Storage	
Service—Electrical		Chain Box	90D-9
Access Implement Power Relay Module Relays ...		Cool Box.....	90D-3
220F-6		Fender	90D-4
Access Master Fuses	220F-6	Operator's Manual	90D-4
Change Belt Line Work Light-Front/Rear.....	220F-10	Overhead	90D-4
Change Extremity Arm Light	220F-13	Removal From	400-1
Load Center-Cab	220F-3	Storing fuel	200A-3
Load Center-Front	220F-5	Sunshade	90D-4
Service Batteries and Connections.....	220F-2	Suspension	
Service—General Information.....	210-1, 210-2	Operate	
Access Battery Compartment	210-3	HydraCushion.....	50-3
Remove Cab Rear Panel	210-3	ILS	50-3
ServiceADVISOR	30C-5	TLS Plus.....	50-3
Servicing and Connecting Snap to Connect Fittings ..		Suspension Settings.....	50-1
210-6		Access	50-1
Set Speed	30A-1	Manual	50-2
Short drawbar		Sway Blocks.....	60E-9
Scraper drawbar conversion	60F-5		

T

Tachometer	30A-1
Tank, fuel	200A-3
Temperature	90E-2
Test coolant freeze point.....	220B-1
Testing diesel fuel	200A-4
Theft Deterrent Systems	
CESAR Datatag	20-10
Immobilizer Keys	20-10
Time Adjustment	
SCV	70A-5
Tire	
Duals	80A-2
Inflation	80-3
Tires, service safely	05-17
Torque charts	
Metric	210-11
Unified inch.....	210-12
TouchSet Depth Control	
Connect/Disconnect the Implement Position	
Connector	70C-1
Settings	70A-4
Settings and Adjustments	70C-1
Tow Mode—Engine Will Not Start	110-7
Tow Mode—Engine Will Start	110-7
Towable loads	110-1
Towed equipment, transport at safe speeds	05-9
Towed mass	110-1
Towing	
All Wheels on Ground	
Engine Will Not Start.....	110-7
Engine Will Start.....	110-7
Loads	110-1
Releasing Park Brake.....	110-7
Tractor	
Storage	
Preparation For	400-1
Tractor storage.....	400-1
Tractor-Implement Automation (TIA)	
Activate	40A-1
Introduction.....	40A-1
Operate	40A-1
PowerShift Transmission Requirements	40A-2
Requirements for AutoTrac.....	40A-2
Requirements for E-SCVs.....	40A-2
Requirements for PTO.....	40A-2
Requirements for rear hitch	40A-3
Tractor, operating safely	05-6
Trailer Brake System Settings	
Access	50A-1
Advanced	50A-3
Brake Gain	50A-2
Main Page	50A-1
Pre-Brake Offset.....	50A-2
Trailer Brake Test.....	50A-3
Trailer Lighting	90C-6

Transmission

Abort calibration	210-10
Access Advanced Settings	50B-1
Advanced Settings	50B-1
Operate	
e18	50G-1
Park position	220B-5
PowerShift	
Calibration	210-7
Set Speeds and Efficiency Manager	
e18	50G-3
Shift	
e18	50G-1
Suction screen	220D-13
Warm-up	50B-3
Transmission oil	200E-1
Transmission Settings	
Access	
e18	50G-4
Custom	
e18	50G-6
Droop	
e18	50G-6
ECO	
e18	50G-7
Main Page	
e18	50G-4
Max Speeds	
e18	50G-7
Mode	
e18	50G-6
Transmission/hydraulic reservoir/axles	
Oil level check	220B-4
Transport	
Carrier Transport	110-3
Freeing a Mired Tractor	110-8
Tow Points	110-3
Transporting	
Driving on roads	110-1
Tow Mode—Engine Will Not Start	110-7
Tow Mode—Engine Will Start	110-7
With ballast	110-1
Tread settings	80A-1
Turn signals	
Operate	30-2

U

Unified inch bolt and screw torque values.....	210-12
Upper limit	
Rear hitch	60E-3
USB Input	
CommandCenter	90D-1
Radio.....	90D-1

V

Vibration Level 500A-9

W

Water separator

Auxiliary, check and drain 220A-4

Weep hole

Checking..... 220B-3

Wheel

Tread settings..... 80A-1

Wrench adapter..... 220C-1

Wheels

Checking..... 220B-5

Tightening stand..... 220C-1

Tire Load Index 80-2

Weight holding wrench..... 80A-6

Wheels and Tires

Adjust and Tighten: Drive (Inner) Wheel Hubs 80A-6

Adjust and Tighten: Dual Wheel Hubs..... 80A-7

Install Wheel Rim to Drive (Inner) Wheel Hub 80A-4,
80A-5

Triple Wheels 80A-3

Wheels and Tires—General Information

Use Correct Tire Combinations 80-2

Wheels, Tires, and Treads

Tread Widths..... 80A-1

Wipers and Washers

Operate 30-1

Z

Zinc-Flake

Coated Fasteners 210-10

John Deere Service Literature Available

Technical Information

Technical information can be purchased from John Deere. Publications are available in print or CD-ROM format.

Orders can be made using one of the following:

- John Deere Technical Information Store: **www.JohnDeere.com/TechInfoStore**
- Call 1-800-522-7448
- Contact your John Deere dealer

Available information includes:




TS189—UN—17JAN89

PARTS CATALOGS list service parts available for your machine with exploded view illustrations to help you identify the correct parts. It is also useful in assembling and disassembling.



TS191—UN—02DEC88

OPERATOR'S MANUALS providing safety, operating, maintenance, and service information.

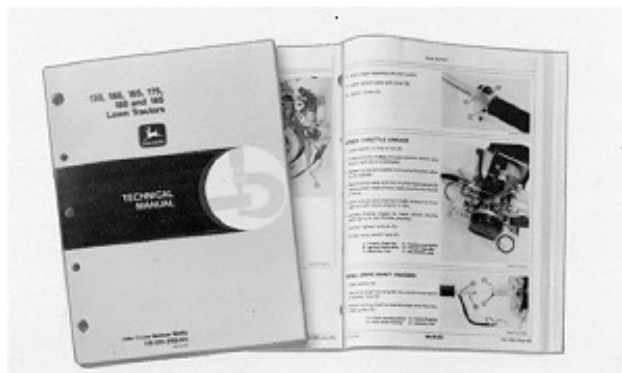

TS224—UN—17JAN89

TECHNICAL MANUALS outlining service information for your machine. Included are specifications, illustrated assembly and disassembly procedures, hydraulic oil flow diagrams, and wiring diagrams. Some products have separate manuals for repair and diagnostic information. Some components, such as engines, are available in a separate component technical manual.



TS1663—UN—10OCT97

EDUCATIONAL CURRICULUM including five comprehensive series of books detailing basic information regardless of manufacturer:

- Agricultural Primer series covers technology in farming and ranching.
- Farm Business Management series examines “real-world” problems and offers practical solutions in the areas of marketing, financing, equipment selection, and compliance.
- Fundamentals of Services manuals show you how to repair and maintain off-road equipment.
- Fundamentals of Machine Operation manuals explain machine capacities and adjustments, how to improve machine performance, and how to eliminate unnecessary field operations.
- Fundamentals of Compact Equipment manuals provide instruction in servicing and maintaining equipment up to 40 PTO horsepower.

DX,SERV LIT-19-07DEC16

John Deere Service Keeps You On The Job

John Deere Parts



TS100—UN—23AUG88

We help minimize downtime by putting genuine John Deere parts in your hands in a hurry.

That's why we maintain a large and varied inventory—to stay a jump ahead of your needs.

DX,IBC,A-19-04JUN90

School is never out for John Deere service technicians.

Training schools are held regularly to be sure our personnel know your equipment and how to maintain it.

Result?

Experience you can count on!

DX,IBC,C-19-04JUN90

Prompt Service



TS103—UN—23AUG88

Our goal is to provide prompt, efficient care when you want it and where you want it.

We can make repairs at your place or at ours, depending on the circumstances: see us, depend on us.

JOHN DEERE SERVICE SUPERIORITY: We'll be around when you need us.

DX,IBC,D-19-04JUN90

The Right Tools



TS101—UN—23AUG88

Precision tools and testing equipment enable our Service Department to locate and correct troubles quickly . . . to save you time and money.

DX,IBC,B-19-04JUN90

Well-Trained Technicians



TS102—UN—23AUG88