

USER MANUAL

Lectric XPress2

V1 2026



To prevent PROPERTY DAMAGE, SERIOUS INJURY, or DEATH, you should read, understand, and follow the warnings and instructions in this manual. Keep for future reference.

WELCOME TO THE LECTRIC eBIKES FAMILY

Thank you for purchasing a Lectric eBike.

Please read this User Manual carefully before setting up your bicycle and riding. You should become thoroughly familiar with the proper operation of your Lectric eBike, its features, capabilities, and limitations. To ensure a long, trouble-free life for your Lectric eBike, provide it with the proper care and maintenance as described in this manual. Of course, it is not practical or possible to warn you about all of the hazards associated with operating or maintaining your Lectric eBike, for this, you must use your own good judgment.

You should also read the full Electric Bicycle Owner's Manual, and Battery Safety Manuals, as they contain additional important general information and instructions you should follow. You can find copies of these manuals on page 4 of this manual or download them at lectricebikes.com or request one from Lectric eBikes Customer Support or your nearest Authorized Lectric eBikes Retailer.

Additional safety, performance, and maintenance information related to specific components—such as brakes, pedals, or accessories like racks and lights—may also be available. If there is any discrepancy between this manual and the instructions provided in a component manufacturer's manual, please contact Lectric eBikes Customer Support or an Authorized Lectric eBikes Retailer for guidance.

For replacement parts and accessories, you should always use Lectric eBikes approved parts, as they have been specially designed for your bicycle and manufactured to meet Lectric eBikes' demanding standards.

This manual should be considered a permanent part of your bicycle and should remain with the bicycle when it is sold.

If you need any assistance, please do not hesitate to reach out to us.

CONTACT INFORMATION

Email: contact@lectricebikes.com

Phone: (602) 715-0907

Website: lectricebikes.com

Lectric Help Center: help.lectricebikes.com

TABLE OF CONTENTS

Important Safety Information	6
Getting Started	13
Assembly	16
Tightening Torque	34
Features	35
Cockpit System	40
Preparing to Ride	50
Your First Ride	50
Battery Pack	52
Moving and Storing Your Lectric eBike	59
Disposal of Your Lectric eBike	60
Troubleshooting Your Lectric eBike	60
User Maintenance Instructions	62
Legal	64

SERIAL NUMBER

Please record your bicycle's serial number in the space below. The serial number is located on the head tube of your bicycle. Refer to "Serial Number" on page 15 for the location of the serial number.

Additional User Information



Online User Manual

Scan the QR code to find the latest version of your User Manual.


[Lectricebikes.com/manual](https://lectricebikes.com/manual)



Electric Bicycle Owner's Manual

Scan the QR code to find the latest version of the universal Electric Bicycle Owner's Manual.


[Lectricebikes.com/manual](https://lectricebikes.com/manual)

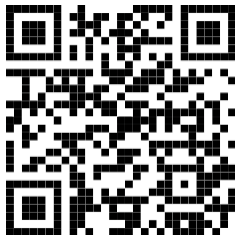

Battery Safety Manuals

Scan the QR code to find safety information for batteries.

[Lectricebikes.com/battery-safety-manuals](https://lectricebikes.com/battery-safety-manuals)

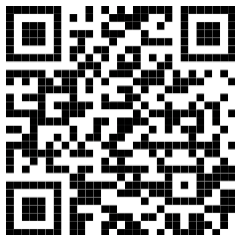

Video Guides

Scan the QR code to find a video guide to help set up your bike.

[Lectricebikes.com/first-ride-videos](https://lectricebikes.com/first-ride-videos)

IMPORTANT SAFETY INFORMATION

Read and Understand User Manual Before Riding

Read this entire User Manual before you take the first ride on your new eBike and keep it for reference. This User Manual contains important safety, performance, and service information. The latest version of your manual is available at lectricebikes.com/manual

Like any sport, bicycling involves risk of injury and damage. By choosing to ride a bicycle, you assume the responsibility of that risk: you need to know and practice the rules of safe and responsible riding as well as proper use and maintenance. Proper use and maintenance of your bicycle reduces the risk of injury. With an electric bike there is risk of fire or electric shock. If you have any questions or do not understand any aspect of using or maintaining your bike, take responsibility for your safety and consult with your local bicycle shop, or contact us for assistance.

This manual is not intended as a comprehensive use, service, repair, or maintenance manual. Please see your local bicycle shop for all service, repairs, or maintenance. Your local bicycle shop may also be able to refer you to classes, clinics, or books on bicycle use, service, repair, and maintenance.

Your Lectric eBike is classified as an EPAC (Electrically Power Assisted Cycle, otherwise known as a Pedelec), and is referred to in this manual as a bicycle unless otherwise noted.

Rider's Responsibility Regarding Regulations

It is the rider's responsibility to obey the regulations that apply to your Lectric eBike.

The regulations covering the use of your Lectric eBike vary by state, and even municipality in certain locations. You must comply with the local regulations related to the minimum age of the rider, driver's license, insurance, license plate, traffic, maximum speed regulations, and any other regulations. These regulations may change at any time.

Intended Use

The intended use of your Lectric eBike is to be ridden by one adult rider (age 16 and up) at an appropriate time and place for general transportation and/or recreational use. The intended use is multi-surface such as riding on gravel trails, hard packed dirt trails, and other surfaces where both wheels remain in contact with the ground at all times. Any other use is prohibited and may result in SERIOUS INJURY or DEATH.

Your bicycle is NOT INTENDED for mountain bicycle use including any kind of jumping or downhill mountain biking.

Riders should be proficient cyclists (ages 16+), riding where the tires are always on the ground, where permitted by law (not on pedestrian-use shared lanes or sidewalks). Your bicycle should not be used to tow another bicycle. For trailer towing, consult this User Manual and the trailer owner's manual for towing instructions and towing compatibility.

Safety Messages

WARNING

To prevent serious injury or death:

1. Read all safety warnings and all instructions.
2. Always ride within your limits and the limits of your Lectric eBike
3. Bicycles are only for use by persons 16 years of age and above. Riders must have the physical coordination, reaction, and mental capabilities to control a bicycle and manage traffic, in addition to managing road conditions and sudden situations with respect to the laws and instructions governing bicycle use. Persons with any mental or physical conditions that may make them susceptible to injury, impair their physical dexterity or mental capabilities to recognize, understand, and follow safety instructions—or understand the hazards inherent to its use—should not use or be permitted to use products inappropriate for their abilities.
4. Never ride under the influence of drugs and/or alcohol.
5. Consult a doctor before using the bicycle if you have any medical condition or issue that affects your ability to safely perform physical activities, or if you:
 - a. are or may be pregnant;
 - b. have heart, respiratory, back, joint, or other orthopedic conditions;
 - c. have high blood pressure;
 - d. have difficulty with physical exercise; or
 - e. have been instructed to restrict physical activity.
6. Always keep small parts away from children. Some eBike accessories may present a choking hazard to small children.
7. Never modify your frame or bicycle in any way. Do not sand, drill, file, or remove parts from your bicycle. Do not install incompatible components or hardware.
8. Always use proper lifting techniques to prevent injury. Your eBike may be significantly heavier than a bicycle without a battery pack and a motor.
9. Take responsibility for your own SAFETY. If you have any questions or do not understand any aspect of using or maintaining your bicycle, contact Lectric eBikes at contact@lectricebikes.com or call (602) 715- 0907.

Helmets

1. Always wear a helmet. Wearing a helmet properly may reduce the risk of a severe head injury. When riding, always wear a helmet that meets or exceeds the standards of the Consumer Product Safety Commission (CPSC). Check the manual that comes with your helmet.
2. Ensure your helmet fits your head and is properly secured. If you attach a child's seat to the bicycle, the child must wear a properly fitted helmet at all times.
3. Read your helmet manual to make sure it is adjusted properly according to the fitting instructions provided by the helmet manufacturer.
4. A proper-fitting helmet should be comfortable and should neither rock forward/backward nor side to side.

Follow eBike Regulations On and Off the Road

Be aware of eBike regulations in your area. Generally, the regulations for the use of an electric bicycle are the same as those for a standard bicycle. However, there may be local differences such as where you can ride, minimum rider age, or required equipment and license and registration regulations. It is your responsibility to know the local regulations that apply to an electric bicycle and to obey them.

Ride at Your Own Risk and Use Common Sense

1. Always keep both hands on the handlebar grips and the brake levers so they are within reach while riding.
2. Do not ride distracted. Always remain alert to all riding conditions. Using the Display or other technology (including your mobile phone or music player) could distract you from riding. Only adjust the Display when stationary and in a safe start-up position.
3. Never use headphones or a cell phone to talk or text when riding.
4. Always ride defensively. Watch out for potential obstacles that could force you to swerve suddenly or lose control. Braking while steering may reduce your ability to control your bicycle.
5. Look ahead and brake sooner. You may be moving faster on your eBike, and it may be heavier compared to a bicycle, which means you may need to react and brake sooner when riding. Other road users may not expect you to be traveling at higher speeds. Riding faster may increase your risk of a crash.
6. Stop pedaling well before approaching corners to avoid entering a corner too quickly. You should also pay particular attention to terrain conditions as you may approach obstacles faster than expected.
7. Check and follow all local laws before operating your eBike on public roads. If you choose to ride on public roads and it is permitted, pay attention to the other traffic and always ride so that you minimize your chance of a collision or crash.

Riding at Night

1. Riding at night comes with more risks than riding during the day due to decreased visibility; riders are encouraged to exercise increased caution in nighttime conditions.
2. Turn lights ON for safety. For increased visibility, ensure that the front headlight and rear taillight are turned ON and adjusted such that other people on the road can see them clearly. Also check your front and rear wheel reflectors.
3. Riders should wear reflective clothing at night. You may want to attach additional flashing lights to your clothing or helmet.

Riding in Wet Conditions

1. Use caution when riding in wet conditions as it will take longer to brake and to stop. Your tires may slip when turning. Risk of a crash is dramatically increased in wet conditions.
2. Your electric bicycle can withstand light rain and small splashes, but it is not designed to be subjected to inclement weather, extremely heavy showers, or submersion in water. The complete electric bike with battery installed has an IP rating of IP X5. Water damage is not covered under the warranty.

Pre-Ride Safety Checklist

Lectric eBikes recommends going through each item on the pre-ride safety checklist before and after each ride. Spending time to make sure all of the bike's components are in good working order before a ride is a crucial step along the way to a safe and fun ride.

This checklist is not intended to function as a detailed service manual. Be sure to read your entire User Manual, Electric Bicycle Owner's Manual, and Battery Safety Manual, before riding or repairing your bike. If you do not have the expertise required to perform any of these checks, Lectric eBikes recommends having your local bike shop mechanic perform a detailed safety check of your bike in regular intervals. Ensure your local mechanic is experienced and reputable. If you decide to work on your eBike by yourself, you must have and use the proper tools (for example, a torque wrench) to make sure that your eBike's components are tightened to the proper torque and other specifications before riding.

1. Before each ride, inspect your eBike for damage. If damage is found, do not ride.
2. Verify that the left and right pedals are locked in position. Verify that the front and rear axles are secure.
3. Check that the front and rear tire pressure is within the recommended pressure range printed on the tire sidewall.
4. Pull the brake levers to ensure the brakes are working properly and adjust if necessary.
5. Visually inspect the bike for damage or anything out of the ordinary. Turn on the lights, especially if riding at night.

6. Make sure all hardware is tightened to the recommended torque specifications found in "Tightening Torque" on page 34 of this User Manual
7. Verify that the stem folding latch is securely closed and locked.
8. Check that the handlebar Stem Clamp Bolt is closed and tightened to the value in "Tightening Torque" on page 34.
9. Check that the seat post is inserted past the minimum insertion point. The minimum insertion point is labeled on the seat post.
10. Check that the seat post collar and clamp are closed and tightened appropriately. When closing the clamp it should be tight enough that it leaves an impression in your hand.
11. Check that the seat cannot be twisted out of position, and set the height to a safe position that makes it easy to mount and dismount the bike.
12. Check the condition of the chain to see if it needs cleaning or lubrication.
13. Wear a helmet and high visibility clothing.
14. NEVER exceed the maximum total weight limit of 330lbs (150kg). The rear rack can hold a maximum of 30lbs, (14kg).
15. As an example, if you have 30lbs (14kg) of cargo on the rear rack, then the maximum weight of the rider is 300lbs (136kg).
16. Only carry the cargo you need. More weight will drain the battery faster and affect how the bike handles. Properly secure any cargo so that it cannot shift or fall. Check the cargo periodically to make sure it is still secure. Make sure that the cargo and anything you use to secure it (for example, straps or cords) will not interfere with you or your eBike while riding.
17. Ensure all components are properly secured. Make sure your battery is fully charged.

Signal Words, Warnings, and Caution Statements

This Manual contains many “Warnings” and “Cautions” concerning the consequences of failure to maintain or inspect your bicycle and of failure to follow safe cycling practices.

DANGER	Indicates a hazardous situation that, if not avoided, will result in death or serious injury.
WARNING	Indicates a hazardous situation that, if not avoided, could result in death or serious injury.
CAUTION	Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.
NOTICE	Indicates information considered important, but not hazard-related (e.g. messages relating to property damage).



Symbol Index

	Safety Alert Symbol. This symbol is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible serious injury or death.
	Read, understand, and follow the warnings and instructions in this manual.

On-Product Warning Labels and Tags

There are warning labels on your Lectric eBike for your protection. If a label is missing or is not legible, contact Lectric eBikes for a replacement.

States that recognize three classes of eBikes require a label to be placed on the bicycle denoting the class of your Lectric eBike, the motor's wattage rating, and the top speed of your Lectric eBike. Your bicycle comes as a Class 2 bicycle by default and has a label with this information posted under the carry handle, near the seat post on the bicycle.

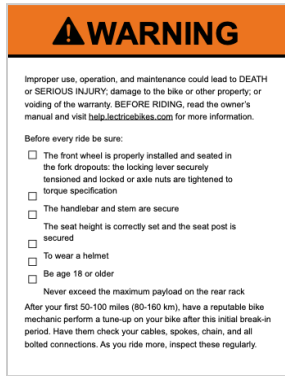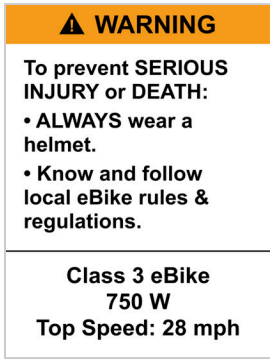Sidewalk Notice Label	Stem Warning Label	Handlebar Tag
 NOTICE ALWAYS YIELD TO PEDESTRIANS AND FOLLOW TRAFFIC LAWS. RIDING ON THE SIDEWALK MAY BE ILLEGAL; CONSULT LOCAL LAWS. NOTICE 注意 请始终礼让行人并遵守交通法规。在人行道上骑行可能会违法。请咨询当地法律。 AVISO SIEMPRE CÉDELO A LOS PEATONES Y SIGA LAS LEYES DE TRÁFICO. VIAJAR POR LA ACERA PUEDE SER ILLEGAL; CONSULTE LAS LEYES LOCALES. AVIS CÉDEZ TOUJOURS LE PASSAGE AUX PIÉTONS ET RESPECTEZ LE CODE DE LA ROUTE. IL PEUT ÊTRE INTERDIT DE CIRCULER À VÉLO SUR LE TROTTOIR; CONSULTEZ LA RÉGLEMENTATION LOCALE.	 ⚠ WARNING To prevent SERIOUS INJURY or DEATH, BEFORE each ride: • Check ADJUSTABLE STEM and STEM RISER latches are closed and secure.	 ⚠ WARNING Improper use, operation, and maintenance could lead to DEATH or SERIOUS INJURY; damage to the bike or other property; or voiding of the warranty. BEFORE RIDING, read the owner's manual and visit help.lectricebikes.com for more information. Before every ride be sure: ☐ The front wheel is properly installed and seated in the fork dropouts: the locking lever securely tensioned and locked or axle nuts are tightened to torque specification ☐ The handlebar and stem are secure ☐ The seat height is correctly set and the seat post is secured ☐ To wear a helmet ☐ Be age 18 or older Never exceed the maximum payload on the rear rack. After your first 50-100 miles (80-160 km), have a reputable bike mechanic perform a tune-up on your bike after this initial break-in period. Have them check your cables, spokes, chain, and all bolted connections. As you ride more, inspect these regularly.
Terms of Service Tag	Class 2	Class 3
 Attention For end-user removal only. Notwithstanding any terms and conditions currently in the user manual, by using this eBike you agree to the terms and conditions available at lectricebikes.com/policies/terms-of-service. These online terms, including the Terms of Service and Important Safety Information in the Owner's Manual apply as soon as you use the eBike. (Terms of Purchase Tag)	 ⚠ WARNING To prevent SERIOUS INJURY or DEATH: • ALWAYS wear a helmet. • Know and follow local eBike rules & regulations. Class 2 eBike 750 W Top Speed: 20 mph	 ⚠ WARNING To prevent SERIOUS INJURY or DEATH: • ALWAYS wear a helmet. • Know and follow local eBike rules & regulations. Class 3 eBike 750 W Top Speed: 28 mph

GETTING STARTED

These instructions are intended to assist you in setting up and getting familiar with your new bicycle.

WARNING

After you assemble and inspect your bicycle, we recommend seeking professional help from a reputable and certified bicycle mechanic to check your bicycle before your first ride.

What's in the Box

Before removing the packaging material from your bicycle, remove all items from the box and make sure you have the following:

Lectric eBike	Lectric eBike Charger	2 QR Pedals
		
Torque Wrench Bits	Display	2 Battery Keys
		
Torque Wrench	Extended 5mm hex bit (Step Thru only)	
		

If anything is missing or is damaged, contact Lectric eBikes immediately for assistance. For a video about how to setup your bicycle visit: LectriceBikes.com/first-ride-videos

Bike Diagram

High-Step Frame



Step-Thru Frame



Serial Number

Your serial number is located on the head tube of the bicycle as shown below. Please write it down inside the front cover of this manual.

You may be asked for your bicycle's serial number as part of a warranty request. You may also be asked to provide this number to law enforcement if your bicycle is stolen.



Setting Up Your eBike

NOTE: This manual is not intended to be an extensive reference book about service, maintenance, and/or repairs.

You can find more information on our website: lectricebikes.com and our help center: help.lectricebikes.com

Find the latest version of this User Manual at: lectricebikes.com/manual




Find the Electric Bicycle Owner's Manual at: lectricebikes.com/manual

Find the Battery Safety Manual at: lectricebikes.com/battery-safety-manuals

ASSEMBLY

Front Wheel Installation

1. Remove the thru axle from the fork. To do this, open the axle lever so that it reads "OPEN".	
2. Hold the lever in place and press the adjustment nut until the segmented flange retracts, then turn the adjustment nut clockwise until the flange stays locked in place (roughly $\frac{1}{4}$ turn). Now pull the thru axle out of the fork.	
3. Set bike gently on the bottom of the forks, lay the bike on the non-driveside* OR have a friend lift the bike by the handlebars to raise the front fork off the ground. <i>NOTE: Be mindful to not damage the derailleur or other drivetrain components if laying the bike on it's side.</i>	
4. Remove the plastic slider from between the two front brake pads. This slider is used to prevent damage during shipping. <i>NOTE: If the plastic slider is not present, this means it slid out during shipping. If this is the case, DO NOT grab the front brake lever. This can result in the brake pads coming together, and the rotor will not fit between the brake pads, preventing front wheel installation.</i>	

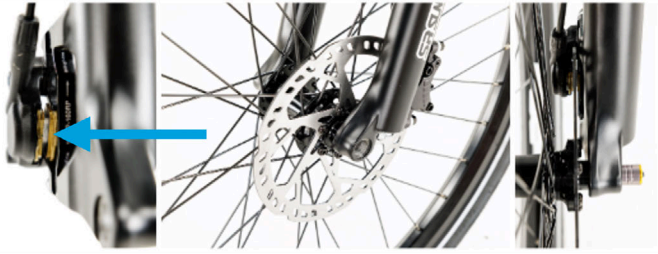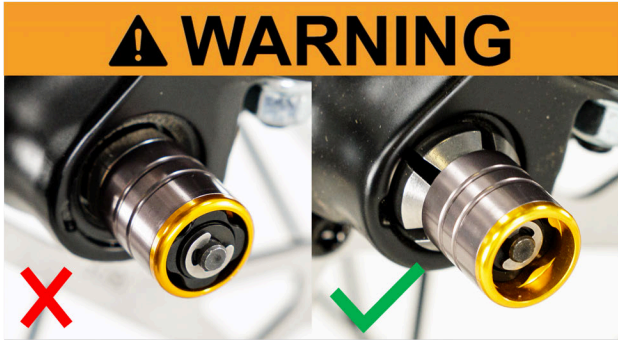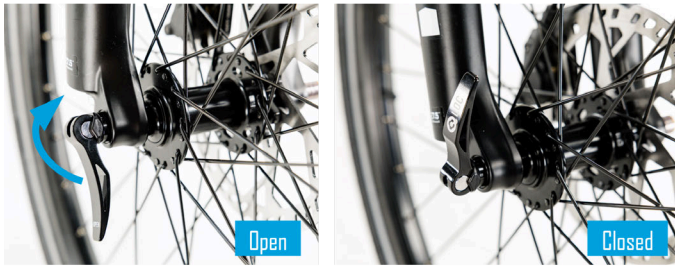5. Install the front wheel by aligning the disc brake rotor with the caliper brake pad slot.	
6. Ensure the axle lever is in the open position. Press the adjustment nut and turn counterclockwise so that the segmented flange is expanded. Slide the thru axle into the fork from the non-brake side until there is a “click”. Pull on the axle to ensure it cannot slide out of place.	
7. If the axle is fully pushed into the fork but the segmented flange isn't expanded, then turn the adjustment nut counterclockwise until the axle can be completely inserted.	
8. Push the lever up to the closed position. There should be some resistance when closing the lever. If there isn't any resistance, open the lever and turn the adjustment nut clockwise until the desired amount of resistance is reached. If the lever is unable to be fully closed, then open the lever and turn the adjustment nut counterclockwise until the desired amount of resistance is reached. The axle lever should be pointed upwards and slightly in front of the fork leg, so it is less likely to get caught on something while riding.	

Torque Wrench Usage Instructions


It's crucial to use a torque wrench correctly during assembly to ensure all bolts are tightened to the specified torque values.

1. The torque wrench provided with your bicycle has a torque range of 6-35Nm.
2. See "Tightening Torque" on page 34 for torque specifications for each part of this bicycle.
3. Below are instructions for using the provided torque wrench. If you're still unsure about usage of this tool after reading the instructions, please contact Lectric eBikes support for further assistance.

WARNING

Always tighten fasteners to the correct torque to prevent serious injury or death. Bolts that are too tight can stretch and deform. Bolts that are too loose can move and fatigue. Either condition can lead to a sudden failure of the bolt and result in a crash.

Torque Wrench Parts	
1. Lever 2. Torque Gauge 3. Torque Pointer 4. Wrench Socket 5. Hex Bit	
1. To use the torque wrench, first select the appropriate hex bit and insert it into the socket of the torque wrench.	

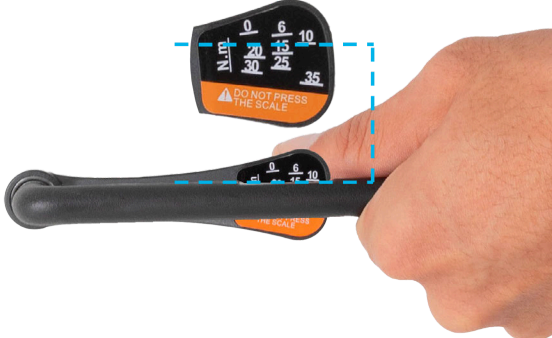2. When there is no tension on the torque wrench lever arm, the right side of the arm should align with the small white line just below the “0” on the torque gauge.	
3. Not all of the included hex bits are necessary for the assembly process, but keep them available for future maintenance.	
4. Insert the torque wrench into the bolt head and turn the lever arm clockwise until you feel resistance and the lever arm begins to flex.	
5. Once the lever arm begins to flex, continue turning until the torque pointer aligns with the specified numbered line on the torque gauge, then stop and remove the torque wrench from the bolt. <i>For example, if the required torque is 10Nm, turn the lever arm until the pointer is aligned with the line just to the left of “10”.</i>	

CAUTION

Avoid touching the torque gauge with your fingers while using the wrench. Failure to refrain from touching the gauge could result in an inaccurate torque measurement.

High-Step Model: Stem Installation



Tools Needed		
5mm hex wrench <i>Included</i>	Torque wrench bits <i>Included</i>	Torque wrench with a range of 6-35 Nm <i>Included</i>
		



1. Using a 5mm hex/Allen wrench, remove the pre-installed top cap bolt and top cap.


NOTE: the position of the spacers around the cardboard tube. These spacers should be in the same orientation once the stem is reassembled (two spacers under the stem and one above).

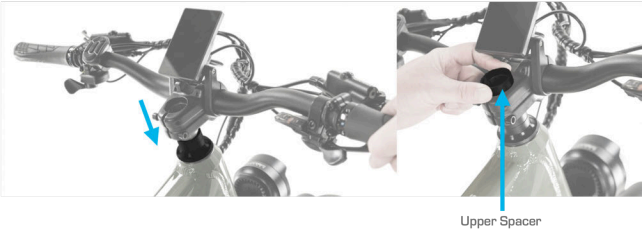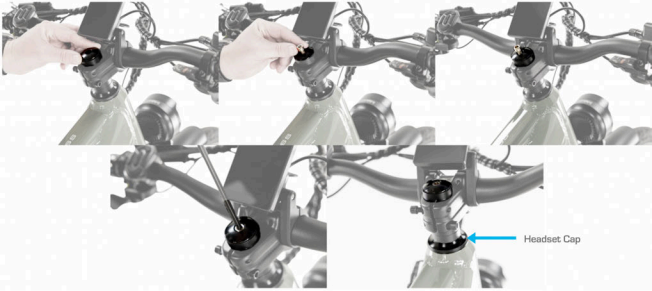

2. Remove the cardboard tube and top spacer from the steerer tube.	
3. Slide the stem onto the steerer tube and place the upper spacer on top of the stem.	
4. Using the included torque wrench and 5mm hex bit, tighten the top cap bolt to 6Nm. <i>Ensure the headset is not too loose or too tight. If too loose, the headset cap will have play when rocking the bike back and forth with the front brake applied. If too tight, the handlebars will be difficult to turn. Slightly tight is preferable.</i>	
5. Align the stem with the front wheel to make sure it is straight.	

6. Using the included torque wrench in combination with the 5mm hex bit, torque the two stem pinch bolts, located on the backside of the stem, evenly to 10 Nm. Alternate tightening the top and bottom stem pinch bolts in the sequence of *top, bottom, top, bottom* to ensure the bolts are equally torqued.

The pinch bolts secure the stem onto the steerer tube, so these must be tightened properly. Once both top and bottom bolts are tightened, repeat the tightening process again to ensure proper torque has been achieved.

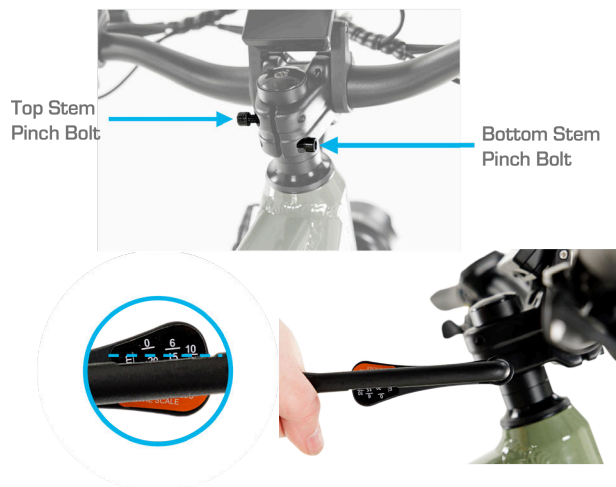

7. Before riding, double-check the stem's tightness by placing the front wheel against a wall or between your legs and attempting to turn the handlebars.

If the handlebars don't move with significant force, you're good to go. If the handlebars move, repeat the tightening process (Step 6) until there is no movement.




Step-Thru Model: Stem Installation

1. Using a 5mm hex/Allen wrench, remove the pre-installed top cap bolt and top cap.

Note the position of the spacers around the cardboard tube. (All three spacers will be installed under the stem.)



2. Remove the cardboard tube from the steerer tube and ensure that all three spacers remain on the steerer tube.	
3. Slide the stem onto the steerer tube.	
4. Unlock the stem, do this by simultaneously pushing the safety button and pulling the stem lever upward.	
5. With the stem unlocked, fold the stem forward to roughly 90°. The hole in the stem should be inline with the compression bolt inside the stem, so that the extended 5mm hex bit can be used to tighten the compression bolt.	

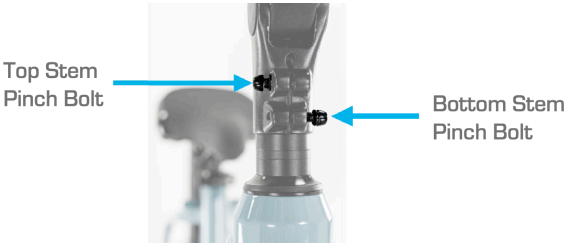6. Using the extended 5mm hex bit and the included torque wrench (or a long 5mm wrench), tighten the compression bolt in the stem to 6Nm. <i>Ensure the headset is not too loose or too tight. If too loose, the headset cap will have play when rocking the bike back and forth with the front brake applied. If too tight, the handlebars will be difficult to turn. Slightly tight is preferable.</i>	
7. Ensure the handlebars are centered in the stem and the stem is raised to a comfortable riding position. <i>Lock the stem back into place by pushing the stem lever downward until hearing an audible click.</i>	
8. Align the stem with the front wheel to make sure it is straight.	
9. Using the included torque wrench in combination with the 5mm hex bit, torque the two stem pinch bolts, located on the backside of the stem, evenly to 10 Nm. Alternate tightening the top and bottom stem pinch bolts in the sequence of <i>top, bottom, top, bottom</i> to ensure the bolts are equally torqued. <i>The pinch bolts secure the stem onto the steerer tube, so these must be tightened properly. Once both top</i>	

and bottom bolts are tightened, repeat the tightening process again to ensure proper torque has been achieved.



10. Before riding, double-check the stem's tightness by placing the front wheel against a wall or between your legs and attempting to turn the handlebars.

If the handlebars don't move with significant force, you're good to go. If the handlebars move, repeat the tightening process (Step 8) until there is no movement.



WARNING

Ensuring a proper fit of your eBike is an important element of comfort and safety. Follow the instructions below carefully to make sure that you can safely and effectively control your eBike while riding.

How to Operate the Adjustable Stem

How to Unlock the Stem Lever

1. Push the stem safety button up, toward the LCD display.




2. Keep the safety button pushed, as you pull the stem lever up and away from the stem. From here, the stem angle, roll of the bars, and centering of the bars can all be adjusted.



How to Lock the Stem Lever

1. To lock, push the stem lever down until you hear an audible click. Ensure the stem lever is locked by giving it a small tug.


Check that the handlebars are centered in the stem and rolled to a comfortable position before riding.

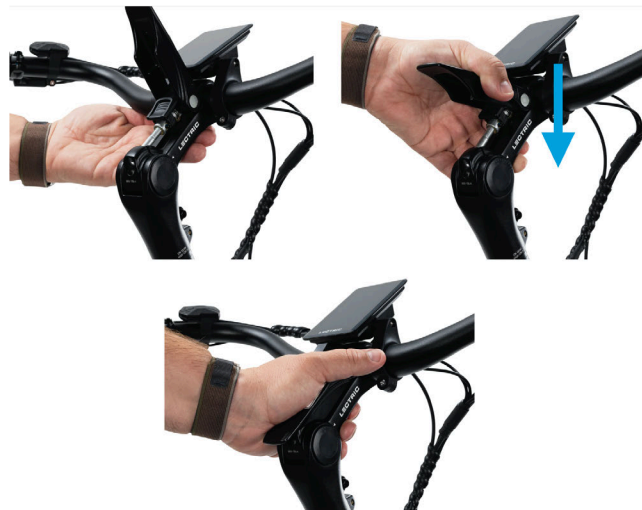

Adjust Seat Height

WARNING

1. **Always tighten fasteners to the correct torque to prevent serious injury or death. Bolts that are too tight can stretch and deform. Bolts that are too loose can move and fatigue. Either condition can lead to a sudden failure of the bolt and result in a crash. See “Tightening Torque” on page 34.**
2. **ALWAYS insert the seat post past the minimum insertion point marked on the seat post. A seat post that is positioned too high can damage the bike and can cause you to lose control and crash.**

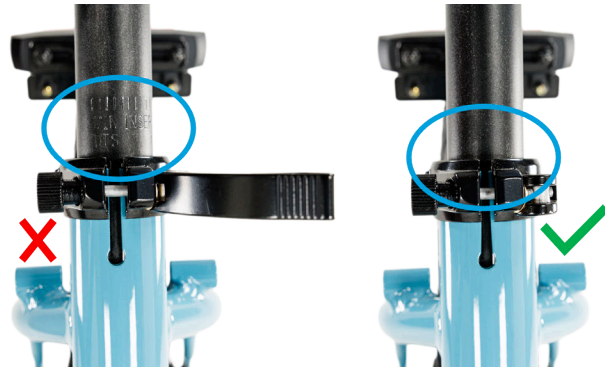

How to Achieve Correct Seat Height:


Correct seat adjustment is an important factor in getting the most performance and comfort from your bicycle. If the seat position is not comfortable for you, you may want to go to your local bicycle shop for assistance.

1. Sit on the seat;
2. Place one heel on a pedal;
3. Rotate the crank until the pedal with your heel on it is in the down position and the crank arm is parallel to the seat tube.

If your leg is not completely straight, your seat height needs to be adjusted. If your hips must rock for your heel to reach the pedal, the seat is too high. If your leg is bent at the knee with your heel on the pedal, the seat is too low.

How to Adjust Seat Height:

1. Loosen the seat post clamp. The open and closed positions of the seat post clamp are shown below (open position on left, closed position on right)
2. Raise or lower the seat post in the seat tube;
3. Check that the seat is straight.
4. Re-tighten the seat post clamp to the recommended torque. See “Tightening Torque” on page 34.

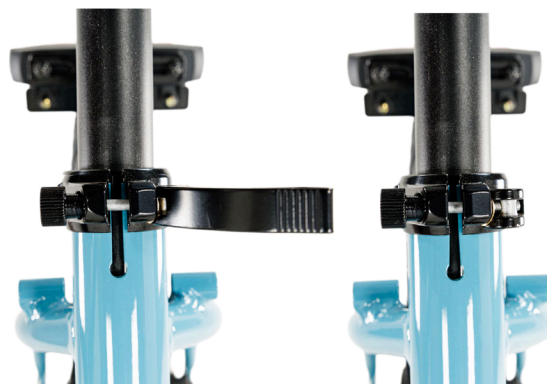

Adjust Seat Position

WARNING

Always tighten fasteners to the correct torque to prevent serious injury or death. Bolts that are too tight can stretch and deform. Bolts that are too loose can move and fatigue. Either condition can lead to a sudden failure of the bolt and result in a crash. See “Tightening Torque” on page 34.

Front and Back Seat Adjustment:

Loosen 14mm nuts on both sides of the seat with a 14mm socket or box wrench. Make sure the clamp mechanism is clamping on the straight part of the seat rails and is not touching the curved part of the rails. Ensure that you are using the recommended torque on the clamping fastener(s). See “Tightening Torque” on page 34.



Adjust Seat Angle:

Most people prefer a horizontal seat; but you may prefer the seat nose angled slightly up or down. Loosen the clamp bolt to allow any serrations on the clamp mechanism to disengage before changing the seat angle, and to fully re-engage the serrations before you tighten the clamp bolt to the recommended “Tightening Torque” on page 34.

How to Install the Display

1. Remove the display from the box and slide onto the mounting point at the center of the cockpit.





2. Align the display then push down to secure.



3. Ensure the display locks in place to the tabs. These tabs secure the display.

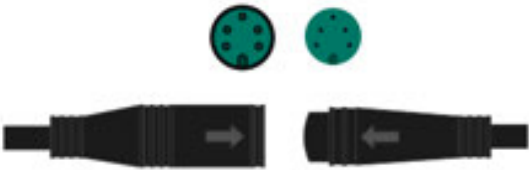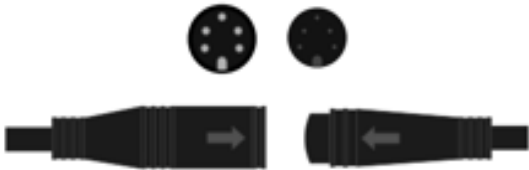

4. Then find the green and black quick plugs in the handlebar wiring harness.	
5. To plug in the display, align the arrows on the female and male sides of the green display plugs. Next, push the plugs together until the plugs fully connect and no color is shown. Be careful not to twist the plugs together as this may damage the plugs.	
6. To plug in the button pad, align the arrows on the female and male sides of the black button pad plugs. Next, push the plugs together until the plugs fully connect and no color is shown. Be careful not to twist the plugs together as this may damage the plugs.	

Charge Battery Before First Use

Locate the charging port on the side of the battery pack. Use this port to charge the battery pack on or off the bike.



You should fully charge your battery before your first ride.

WARNING

Fire and explosion hazards. Never leave your battery pack unattended while charging to prevent serious injury or death.

See “Battery Pack” on page 51 for additional information.

Installing and Uninstalling Battery Pack

WARNING

To prevent serious injury or death:

- Only place the battery pack on clean surfaces. Avoid getting dirt, e.g. sand or soil, in the charging port and contacts.
- Do not charge or use the battery pack if it is damaged. Contact Lectric eBikes to order a replacement.

Your bike comes with a 48V lithium-ion battery. The bike’s battery comes with a unique set of keys that are used to keep it unlocked/locked to the frame.

The battery has 2 key positions: LOCKED, and UNLOCKED. The key lock is spring-loaded and will spring back to the LOCKED position when not manually turned to UNLOCKED.

The battery has a secondary release mechanism that must be pressed in to unlock the battery completely from the bike in order to be removed.

How to Install the Battery

To Insert:

1. Align the battery to the tabs of the bottom battery plate first.	
2. Slide the battery into the frame and push up until you hear two clicks.	

How to Remove the Battery

To Remove:

1. Turn the battery key counter-clockwise into the UNLOCKED position.	
2. Push the small release lever into the battery for the secondary removal mechanism to release the battery from the top.	

How to Remove and Insert Pedals

Removing Pedals:

1. Pull the spring-loaded sleeve while also pulling the pedal out from the splined slot.



Inserting Pedals:

1. Pull the spring-loaded sleeve and insert the pedal axle while aligning the spline pattern.



2. Be sure the sleeve retracts, and give the pedals a small tug to ensure they are locked in.



This is what the pedal should look like when correctly installed, with the spring-loaded sleeve fully seated and locked against the crank arm.



WARNING

Pedals that are not properly seated can suddenly loosen causing you to lose control and crash.

Tightening Torque

Part	Tool	Spec
Bottom Bracket	BBT-69.4	40 Nm
Brake Caliper Mounting Bolts	5mm hex wrench	10 Nm
Brake Lever Clamp Bolt	4mm hex wrench	5 Nm
Crank Bolts	8mm hex wrench	40 Nm
Disc Rotor Mounting Bolts	T-25 Torx	5-8 Nm
Fender Mounting Bolts	4mm hex wrench	5 Nm
Headlight Mounting Bolt	3mm hex wrench	2-4 Nm
Headset Compression Bolt	5mm hex wrench	6 Nm
Kickstand Mounting Bolts	5mm hex wrench	10 Nm
Pedals	8mm hex wrench	35 Nm
Rear Derailleur Mounting Bolt	5mm wrench	8-10 Nm
Rear Wheel Axle Nuts	17mm wrench	35 Nm
Seat Rail Binder	14mm wrench	20 Nm
Shifter Clamp Bolt	5mm hex wrench	5 Nm
Spokes	Spoke Wrench 2	
Front Tension	180-200 KGF	
Stem Faceplate Bolts	4mm hex wrench	5-6 Nm
Stem Pinch Bolts (High-Step)	5mm hex wrench	10 Nm
Stem Pinch Bolts (Step-Thru)	5mm hex wrench	12 Nm
Throttle Clamp Bolt	3mm hex wrench	1 Nm
Torque Arm Bolt	4mm hex wrench	5 Nm

FEATURES

WARNING

Never modify your frame or bicycle in any way as this could cause serious injury or death. Do not sand, drill, file, or remove parts from your bicycle. Do not install incompatible components or hardware.

Motor

WARNING

To prevent serious injury or death:

Do not open the drive unit yourself. The drive unit must only be repaired by qualified personnel using only original parts. This will ensure that the safety of the drive unit is maintained. Unauthorized opening of the drive unit will render warranty claims null and void.

All components fitted to the drive unit and all other components of your Lectric eBike PAS system (e.g. chainring, chainring receptacle, pedals) must only be replaced with identical components or components that have been specifically approved by Lectric eBikes. This should help protect the motor from overloading.

Always remove the battery pack from your Lectric eBike before beginning work (e.g. inspection, repair, assembly, maintenance, work on the chain, etc.), moving it with a car or on an airplane, or storing it. Battery pack removal should prevent unintentional activation of your Lectric eBike.

Do not make any modifications to your Lectric eBike or attach any other products that might increase the performance of your Lectric eBike. Doing so will generally reduce the service life of the system and risks damaging the drive unit and the bicycle. You also run the risk of losing the guarantee and warranty claims on the bicycle you have purchased. By handling the system improperly, you are also endangering your safety and that of other road users, thus running the risk of high personal liability costs and possibly even criminal prosecution in the event of accidents that can be attributed to manipulation of the bicycle.

Under extreme conditions, such as continuously high loads at low speed when riding up hills or carrying loads, parts of the motor can reach high temperatures.

8-Speed Gear System

Your Lectric eBike comes with a 8-speed freewheel. The freewheel is the cluster of sprockets on the rear wheel of your bicycle.

While pedaling in 1st gear (lowest gear using the largest sprocket), it will be easier to pedal up hills. In 8th gear (highest gear using the smallest sprocket), it will be easier to reach higher speeds on flat or downhill terrain.



Throttle

The left handlebar features a below-the-bar thumb throttle.

To operate:

Check that the Pedal Assist (PAS) level is set in a mode other than “OFF”, then push the throttle lever forward to achieve your desired speed and acceleration.



Hydraulic Disc Brakes

Your Lectric eBike is equipped with hydraulic disc brakes.

WARNING

To prevent serious injury or death:

1. ALWAYS apply the right brake lever (rear wheels) before and during use of the front brake.
2. ALWAYS apply even pressure to both brake levers when slowing down or stopping.

If only the front brake is applied while slowing or stopping quickly, you may be ejected over the front handlebars.

Before riding, check to ensure the brake levers do not touch the handlebars when fully applied. If either lever touches the handlebars, call Lectric eBikes to determine next steps. You will likely need your brakes bled.

To Brake the Rear Wheel:

Pull the right brake lever to activate the rear brake.

To Brake the Front Wheel:

Pull the left brake lever to activate the front brake.

WARNING

Disc brake rotors will become hot during use and will stay hot for a short period after use. To prevent burns, do not touch the disc rotor right after use.

WARNING

DO NOT loosen any screw/bolt on the caliper (the bleed screw should only be loosened when changing brake fluid). Loosening screws other than the bleed screw could cause leaking and consequently loss of braking power.

WARNING

If you notice fluid leaking from any part of the brakes, stop riding at once. Have your brakes serviced at a certified reputable bike shop before riding again.


The hydraulic disc brakes on this bike use mineral oil. Only use mineral oil purchased from Lectric eBikes or Shimano for service.

WARNING

Never add or mix with DOT brake fluid or any mineral oil not intended for bicycle hydraulic disc brake use.

When using your new bike, the brakes will need to be bedded in. This means that braking force on the first 10-30 pulls is not as powerful as subsequent pulls and the bike will take longer to stop. Ride your bike in a safe environment away from other vehicles and stop the bike 10-30 times before riding normally.

Before riding the bicycle, check the thickness of the brake pads. When the wear of the brake pads exceeds 0.8 mm, replacement of the pad is recommended. When the total thickness of the worn brake pad is less than 2.7 mm, the pads must be replaced to ensure safe riding.

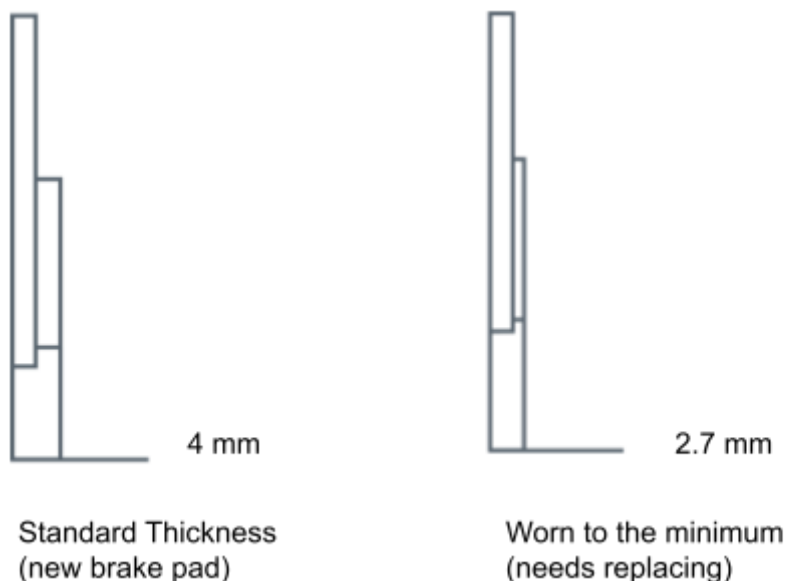

Front and Rear Lights

Your Lectric eBike comes with integrated front and rear lights.

To turn lights ON:

Hold plus (+) button on the display control pad for about 3 seconds until the lights turn ON.

To turn lights OFF:

Hold plus (+) button on the display control pad for about 3 seconds until the lights turn OFF.

WARNING

Always turn lights ON for your safety, especially when riding at night or in low visibility situations.

Turn Signal Function

Activation:

Pressing the Right (>) or Left (<) turn signal button activates the corresponding signal. The signal will blink for 20 seconds before automatically turning off.

Deactivation:

Pressing the same button again will turn the blinker off.

Pressing Opposite Button:

While a turn signal is active, pressing the opposite side (L/R) will activate the turn signal on the other side. This does not turn all signals off but instead switches sides and restarts the 20s timer.

Dual Turn Signal (Hazards):

Activated by pressing and holding the R and L buttons simultaneously. Will stay on until turned off by pressing and holding the R and L buttons simultaneously again.

Suspension Fork

The suspension fork will affect the handling of the bicycle, primarily when going over bumps and stopping. In some situations, it may be advantageous to lock the suspension so it is fully rigid.

Check to ensure your suspension fork is properly adjusted for the terrain and your weight.

To lockout suspension:

Turn the blue knob (on the driveside of the bike) clockwise towards the “lock” direction indicated.

To unlock suspension:

Turn the blue knob counterclockwise towards the “open” direction indicated.

To increase stiffness:

Turn the preload knob (on the non-driveside of the bike) clockwise.


To reduce stiffness:

Turn the preload knob counter clockwise.



COCKPIT SYSTEM

Cockpit Instruments

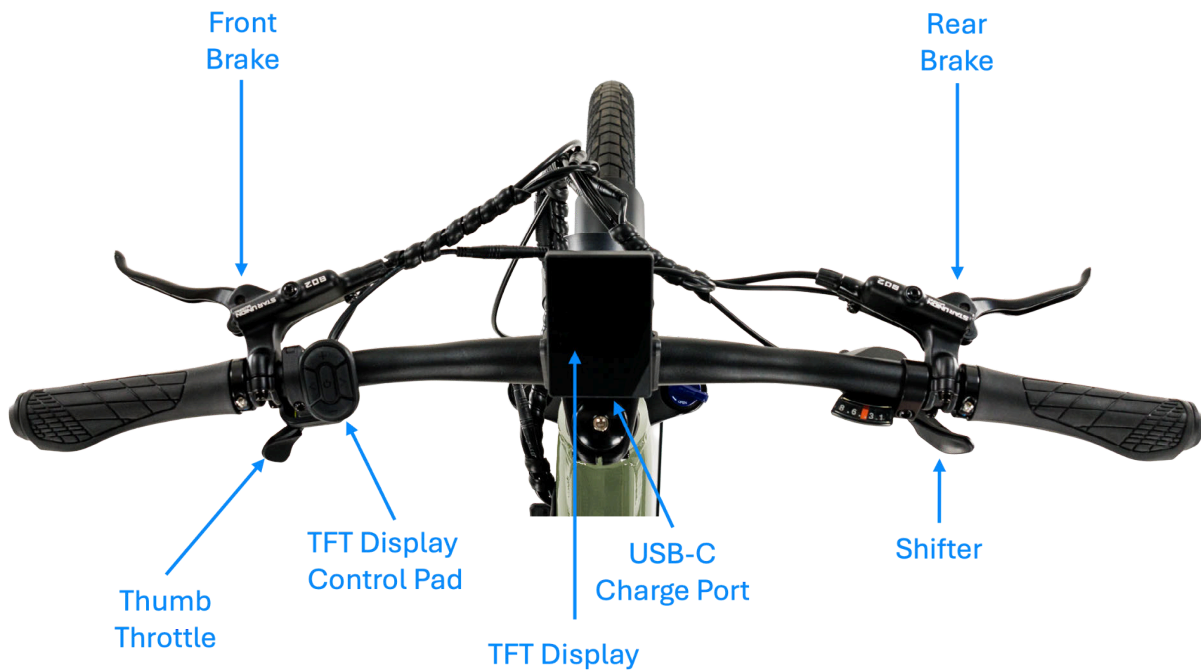

Display Controls



Settings Press and hold + and -	Screen Page Toggle Press □	Lights ON Press and hold +
		
Walk Mode or Cruise Control Press and hold -	Left Turn Signal Press left arrow	Right Turn Signal Press right arrow
		
Hazard Lights Press both left and right arrow		
		

Pedal Assist Overview

When does the Pedal Assist activate?

Pedal Assist (PAS) functions only when you are pedaling. If you do not pedal, the PAS will not activate. The motor output always depends on your pedaling and the PAS level you have set.

PAS automatically switches off at the maximum speed set for your Lectric eBike (up to 28 mph). When the speed falls below the maximum set speed, PAS automatically becomes available again.

You can also use your Lectric eBike as a normal bicycle without assistance at any time, either by switching the Cockpit System power button OFF, or by setting PAS to OFF. If the battery needs to be charged, PAS will not function.

When the bicycle has not been used for 10 consecutive minutes, the display will automatically shut down. The PAS and throttle features will no longer work when the display is OFF.




WARNING

To prevent serious injury or death:

- **Do not allow yourself to be distracted by the display. If you do not concentrate on the traffic around you, you risk being involved in a crash. If you want to change any settings other than the PAS level, always stop before changing the settings or display.**
- **Set the display brightness such that you can adequately see important information like speed or warning symbols. Display brightness that is incorrectly set can result in dangerous situations.**
- **The electrical components on the bicycle are not waterproof.**
- **Check the display and plug. If damage is detected, do not use the display. A damaged display or cables or plugs increase the risk of a fire, explosion, and personal injury.**
- **Do not disassemble the display. There are no user serviceable parts inside the display. Incorrect reassembly or damage may result in fire or explosion.**

Display Functions


1	Battery percentage
2	Maximum and Average Speed
3	(PAS) Level indicator
4	Light On/Off indicator
5	Cruise Control indicator
6	Wattage Output reading
7	Turn Signals
8	Walk Mode indicator
9	Speedometer in MPH or KM/H
10	Switch screens for Odometer, Trip, Voltage, Current, Trip Timer readouts

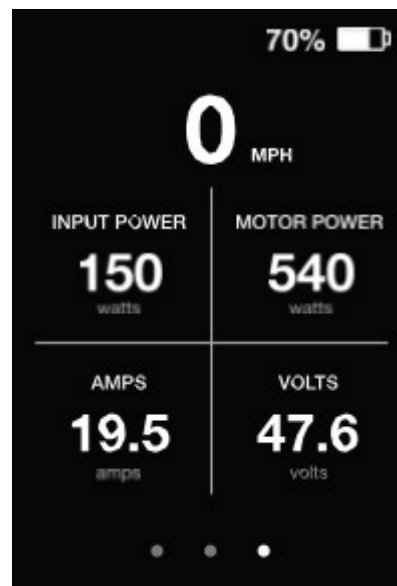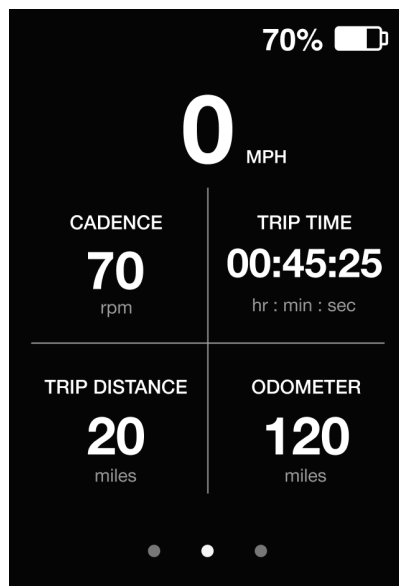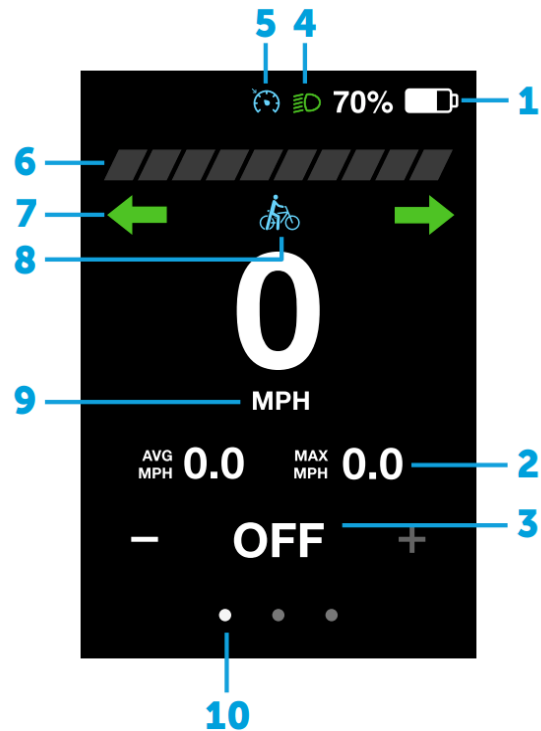

Battery Level Indicator Bar

The Battery Percentage at the top right of the display screen is your battery indicator and shows the estimated charge level remaining in your battery pack.

As the battery charge depletes, the battery percentage will reduce. When the battery voltage gets below the usable level, an E006 error code will pop up on the screen.



OPERATING COCKPIT SYSTEM

Turn the bicycle ON/OFF	Press and hold the Power button
Increase PAS Level	Press plus (+) button
Decrease PAS Level	Press minus (-) button
Turn lights ON/OFF	Press and hold the plus (+) button for about 3 seconds or until lights turn ON; repeat to turn OFF
Toggle Odometer, Trip A, Voltage, Current, Trip Timer (TM)	Press Power button
Max Speed and Average Speed	Press and hold the plus (+) button and Power button simultaneously to toggle between the speedometer, max speed and average speed

NOTE: The trip meter, as well as maximum and average speed will reset when the bicycle is powered OFF.

Range Estimates

The range the bicycle can go on a single battery charge can vary significantly between riders, terrain, wind conditions, user input, and additional cargo weight.

Tips to Increase Range

To get the maximum range out of each battery charge, there are some simple things you can do:

- Ride at a lower PAS level
- Use lower PAS levels and pedal when climbing hills
- Pedal when starting from a standstill
- Carry the least amount of cargo and weight as is necessary
- Frequently check that your eBike is in good condition and have it serviced regularly. The wheels should always spin freely.
- Choose the right gear for speed and level of incline of the terrain. Try to keep pedaling at a consistent and comfortable pace without unnecessary slowing down and speeding back up.

Conditions for Range Test

- Flat ground
- Top speed at 20 mph
- No additional cargo
- Few bumps
- Lectric 27.5x2.1 in. ~20 PSI
- Temperature ~75°F
- Little to no wind
- Few starts and stops
- Rider weight ~180 lbs.
- 14 Ah Battery

Range Estimates Under Test Conditions	Throttle and PAS Level
Up to 20 miles	Pure throttle use Mostly Turbo and Sport+
Up to 35 miles	Little use of throttle Mostly Sport
Up to 60 miles	Very little use of throttle Mostly Eco- Tour

WARNING

Using the throttle to go uphill at a slow speed will put the maximum strain on the drive system.

It will subject the battery to excessive stress and reduce its capacity.

Settings Menu

WARNING

Do not tamper with your bicycle. Tampering is defined as removing or replacing any original equipment, or modifying your bicycle in any way that may change its design and/or operation. Such changes may seriously impair the handling, stability, and other aspects of the bicycle, making it unsafe to ride. Do not attempt to use any of your eBike's equipment or components for any other purpose than using them as described in this manual for your eBike. Tampering can void the warranty and render your bicycle noncompliant with the applicable laws and regulations. Lectric eBikes is not responsible for any direct, incidental, or consequential damages, including, without limitation, damages for personal injury, property damage, or economic losses due to tampering.

To access the settings page, hold the plus (+) and the minus (-) buttons simultaneously. The settings menu will appear. Use the (+) and (-) to toggle up and down in the settings menu. Press the power button to select the settings page you wish to adjust. To adjust the setting within the settings category, use the (+) and (-). When the desired setting is selected, press the power button. This action will return the user to the settings menu.

To Exit the settings menu, hold the plus (+) and the minus (-) buttons simultaneously.

NOTE: The settings cannot be accessed while the bike is in motion.

WARNING

To prevent serious injury or death, DO NOT change settings excluded from the table. Changing settings not listed in the following table may cause your bike to stop working properly. If you need the default setting values of settings not listed, contact Lectric eBikes. DO NOT ride your bicycle until the default settings have been restored.

Settings Menu

Setting	Default	Descriptions
Screen Brightness	2	1: Low, 2: Medium, 3: High
Sleep	10 minutes	0 - 60 minutes
Distance Units	Mile	Mile Kilometer
Tire Size	27.5in	26 - 29 inch range
Trip Time	Motion Aware	Motion Aware Elapsed Time
Bike Classification	Class 2	Class 1: 20mph PAS, no throttle Class 2 - 20mph PAS, 20mph throttle Class 3 - 28mph PAS, 20mph throttle California Mode - 28mph PAS, no throttle
Assistance Level	Standard Torque Multiplier	Standard Torque Multiplier Increased Torque Multiplier
Pedal Sensor	Torque	Torque Cadence
Throttle / PAS Toggle	PAS Active and Throttle Active	PAS Active, Throttle Inactive PAS Inactive, Throttle Active PAS Active and Throttle Active
Throttle Output	Throttle output limited based on PAS level	Throttle output limited based on PAS level Full throttle output in each PAS level
Throttle Zero Start	Throttle active from standstill	Throttle active from standstill Throttle only active when already moving
Walk Mode	Walk mode 3mph	Walk mode OFF Walk mode 3mph Walk mode 3.7mph
Light Operation	Lights are OFF, until manually turned on	Lights are OFF, until manually turned ON Lights flash when bike is ON. When manually turned ON flashing stops.
Odometer Reset	—	Reset Now- Hold the PLUS(+) button for 5 seconds to reset your odometer

Changing Top Speed

Your Lectric eBike ships with a maximum speed set at 20 miles per hour (mph). This means it is a Class 2 electric bicycle in states that recognize three classes of eBikes. In most states that only recognize eBikes generally, the 20 mph top speed is legal for use on public roads. Check and follow the local laws where you will be riding your eBike.

eBike Classes in the U.S.A.

Class	Pedal Assist Speed Limit	Throttle Speed Limit
1	20 mph	Throttle Not Allowed
2	20 mph	20 mph
3	28 mph	20 mph

WARNING

Ride within your limits to prevent serious injury or death. Riding at higher speeds poses an increased safety risk. ALWAYS wear a helmet and obey the rules of the road.

WARNING



ALWAYS check your local laws and regulations to determine if it is lawful to ride Class 3 eBikes on public roads before increasing your bicycle's top speed. Laws vary by territory, state, trail, path, and road so you will need to check the applicable regulations in each new location you ride

Class 3 Label

If you increase your bicycle's top speed, you must remove the Class 2 label that displays your Lectric eBike class, top pedal assisted speed, and motor wattage. This label is posted near the seat tube on the bicycle. Peel back the Class 2 label to reveal the Class 3 label located underneath the Class 2 label.



To Increase Maximum PAS Speed from 20 mph to 28 mph:

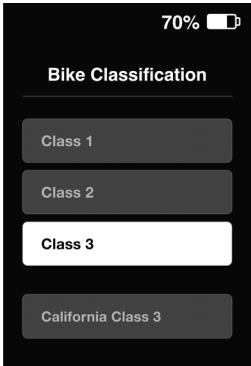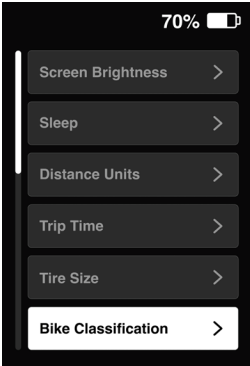1. Press and hold the plus (+) and minus (-) buttons on the control pad and scroll down to "Bike Classification" and press the power button to select. 2. Scroll and press the power button to select the "Class 3" option. 3. Press and hold the plus (+) and the minus (-) buttons on the control pad to exit Settings Menu.	
--	--

Walk Mode

Electric bicycles are heavier than bicycles. To make walking the bicycle easier, your Lectric eBike is equipped with Walk Mode, which can be toggled ON or OFF in the settings menu. Walk Mode may be subject to local regulations. Check your local regulations to determine if allowed.

To Activate Walk Mode:

Hold down the minus (-) button on the display control pad and the motor will engage at a speed similar to a slow walk.

When Walk Mode is active, a blue walking icon will appear on the display.

WARNING

ALWAYS keep wheels in contact with the ground when using Walk Mode.

To Deactivate Walk Mode:

Pull either brake lever to disengage Walk Mode OR release the minus (-) button on the display control pad.

Cruise Control

Cruise control on your Lectric eBike works similarly to cruise control on a car. Cruise control can only be engaged when using the throttle.

To Activate Cruise Control:

Throttle to your desired cruise speed then hold the minus button.

To cruise at low speeds, only slightly push the throttle and hold the minus (-) button.

To Deactivate Cruise Control:

Pull either brake lever to disengage Cruise Control.

PREPARING TO RIDE

Towing

WARNING

When towing a trailer, do not exceed 20 miles per hour. Stopping with a trailer at speeds higher than 20 miles per hour can cause the trailer to jackknife and the rider to lose control which can lead to serious injury or death.

WARNING

To prevent serious injury or death, go through the “Pre-Ride Safety Checklist” on page 8 of your User Manual before each ride.

YOUR FIRST RIDE

The acceleration of your Lectric eBike may be faster than anticipated, and may feel unusual at first. Before your first ride, you should use the lowest level of pedal assist (ECO) and become familiar with the operation of your Lectric eBike by practicing starting, stopping, cornering, and navigating obstacles in a safe environment away from other bicycles, pedestrians, and/or vehicles. You should also pay particular attention to terrain conditions as you may approach obstacles faster than expected.

The Pedal Assist may be activated as soon as you step onto the pedals and the bicycle is in motion. ALWAYS be seated on the bicycle and engage at least one brake before starting to pedal. DO NOT place one foot on a pedal then throw your other leg over the bicycle or your eBike could accelerate unexpectedly. Refer to “Pre-Ride Safety Checklist” on page 8 before you go on your first ride.

How to Start Your Ride

Hold down the  button located on the button pad on the left side of the handlebar until the display comes on.

NOTE: The first time you use your bike, you will have to wake the battery by pressing the button on top of the battery shown in the photo. This button is only accessible when the battery is not in the frame.

NOTE: After 9 days without usage or charging, the battery will go into sleep mode and need to be removed and woken up by pressing the button on top of the battery.



Select a Pedal Assist (PAS) level using the plus (+) and minus (-) buttons. OFF provides no motor assist. ECO is the lowest level of assist and TURBO is the highest level of assist.



WARNING

To prevent serious injury or death:

1. Exercise extreme caution when using the thumb throttle. When at a complete stop with the bicycle turned ON, be careful not to engage the thumb throttle or the bicycle could accelerate and cause you to crash.
2. Do not engage Walk Mode when riding or sitting on your Lectric eBike. Holding the minus (-) button will engage the motor up to a walking speed. Release (-) button to stop walk mode or grab either brake lever to also disengage walk mode.

How to End Your Ride

When the bicycle is at a complete stop, press and hold the power button to turn the display OFF. This ensures the motor will not activate until the display is turned ON again and you are ready to ride. Also turn your battery pack OFF to avoid losing charge due to parasitic drain.

WARNING

To prevent serious injury or death go through the “Pre-Ride Safety Checklist” on page 8 of this manual before each ride.

A Note for Parents and Guardians

As a parent or guardian, you are responsible for the activities and safety of your child. The Lectric XPress or XPress Step-Thru is not designed to be ridden by a child under the age of 16. Additional safety information regarding helmets can be found in “Helmets” on page 7 of this manual.

BATTERY PACK

The term battery pack refers to all original Lectric eBikes battery packs.

The safety of both our customers and our products is important to us. Our eBike batteries are lithium-ion batteries, which have been developed and manufactured in accordance with the latest technology. We comply with or exceed the requirements of all relevant safety standards. When charged, these lithium-ion batteries contain a high level of energy. If a fault occurs (which may not be detectable from the outside), in very rare cases and under unfavorable conditions, lithium-ion batteries can catch fire.

Take care when using and charging your battery. Failure to follow the guidelines below could result in damage to property and/or serious injury. Contact Lectric eBikes immediately if you have any questions regarding battery safety.

Your Lectric eBike battery must not be opened, even for repairs. There is a risk your eBike battery could catch fire, e.g. due to a short circuit. This risk increases if an eBike battery which has already been opened is reused at a later point in time. Do not attempt to repair an eBike battery in the event of a fault; have it replaced with an original Lectric eBike battery pack.

The battery is protected against deep discharge, overloading, overheating, and short-circuiting by Electronic Cell Protection (ECP). In the event of a fault, a protective circuit switches the battery pack off automatically.

Battery Safety

WARNING

Only use original Lectric eBike batteries for your eBike. Using other batteries can lead to injuries and pose a fire hazard. Lectric eBikes accepts no liability or warranty claims if other batteries are used.

To prevent serious injury or death:

- **Do not leave your battery unattended while charging.**
- **When removing the battery, unplug the rubber stopper on the charging point.**
- **Always charge your battery in temperatures between 32°F – 113°F (0°C – 45°C).**
- **For an optimum service life, operate your Lectric eBike battery at temperatures between 32°F -104°F (0°C-40°C).**
- **Battery leakage may occur under extreme usage or temperature conditions. Avoid contact with skin and eyes. Battery liquid is caustic and could cause chemical burns. If battery liquid comes in contact with skin, wash quickly with soap and water. If the liquid contacts your eyes, immediately flush eyes with water for a minimum of 15 minutes and seek medical attention.**
- **Always remove the battery from the bicycle when not in use and store in a secure location to prevent unauthorized use.**
- **Do not submerge the battery in liquid of any kind.**
- **Do not touch the terminals on your battery.**

- Turn display and battery pack OFF when not in use and before removing battery pack.
- The battery pack should not be excessively difficult to insert or to remove. Do not force the battery pack in or out of the bike frame.
- Battery charging times may increase with battery age and usage.
- Only grab the charger by the plug and not the cable when plugging and unplugging from the wall.
- If the battery has trouble charging, stop charging and contact Lectric eBikes immediately.
- Do not puncture or crush the battery pack. Do not impact the battery pack or modify it in any way. Do not use the battery pack if it shows visible damage. The aforementioned can increase danger of fire or explosion.
- Protect the battery pack from heat (e.g., temperature >140°F), fire, and immersion in water. The aforementioned can increase danger of fire or explosion.
- Always remove the battery pack before beginning work (e.g. inspection, repair, assembly, maintenance, work on the chain, etc.) on your Lectric eBike, moving it via car or airplane, or storing it. Unintentional activation of the Lectric eBike poses a risk of injury.
- Do not open the battery. There is a risk of short circuiting. Opening the battery voids any and all warranty claims.
- When the battery is not in use, keep it away from paper clips, coins, keys, nails, screws, or other small metal objects that could make a connection from one terminal to another. A short circuit between the battery terminals may cause burns or a fire. Short circuit damage, which occurs in this instance, voids any and all warranty claims against Lectric eBikes.
- Avoid mechanical loads and exposure to high temperatures. These can damage the battery cells and cause the flammable contents to leak out.
- Do not place the charger or the battery near flammable materials. Ensure the battery is completely dry and placed on a fireproof surface before charging. There is a risk of fire due to the heat generated during charging.
- Your Lectric eBike battery must not be left unattended while charging.
- Batteries must not be subjected to mechanical shock. If battery is dropped or struck with another object, the battery may be damaged.
- The battery may give off fumes if it becomes damaged or is used incorrectly. Ensure the area is well ventilated and seek medical attention should you experience any adverse effects. The fumes may irritate the respiratory system.
- Only charge the battery using original Lectric eBikes chargers. When using chargers that are not made by Lectric eBikes, the risk of fire cannot be excluded.
- Use the battery only in conjunction with your Lectric eBike. This is the only way in which you can protect the battery against dangerous overload.
- Use only original Lectric eBikes battery packs that the manufacturer has approved for your eBike. Using other batteries can lead to injuries and pose a fire hazard. Lectric eBikes accepts no liability or warranty claims if other batteries are used.

- Keep the battery away from children.
- Always turn the display and battery pack OFF before removing the battery pack.
- Always remove the key from the battery pack after each use. This prevents both unauthorized use of the powered features of your Lectric eBike and removal of the battery by unauthorized persons when your Lectric eBike is not in use. Failure to secure your bicycle from unauthorized use can result in death or serious injury to others.

Charging

Locate the charge port on the end side of the battery. You can charge the battery from this port while the battery is in or out of the bicycle.

WARNING

To prevent serious injury or death:

- Do not leave your battery unattended while charging.
- Do not connect the battery pack to the charger until it has reached an allowable charging temperature (within 10°F of room temperature).
- Do not charge the battery with chargers other than the charger provided by Lectric eBikes.
- Only charge the battery indoors and in dry spaces which are not excessively hot or cold (within 10°F of room temperature) in a room with a smoke alarm.
- Ensure there are no flammable items, dirt, or debris nearby when using the charger.
- Never use a power converter or power inverter to charge the battery.
- The charger will automatically stop charging once the battery reaches its full capacity.
- The light on the charger will be red when the battery is charging, and will turn green when charging has finished.
- Avoid leaving the charger plugged in when the battery is fully charged.
- Do not charge the battery if you notice the battery is damaged, excessively hot, leaking, smells, makes noises, swells, bulges, smokes, or is discolored. If you notice these or any other unusual characteristics while charging, immediately evacuate the area and notify the fire department. Move the battery outside and away from flammable materials ONLY if it can be done safely.
- Charging the battery should take approximately 6-10 hours if the battery is mostly empty.
- Store the battery indoors in a dry space, away from heat or flame sources and out of direct sunlight in a room with a smoke alarm.
- The charger may get hot (>165°F) when charging. Use caution and avoid touching the body of the charger.
- To reduce risk of injury, charge only batteries of your Lectric eBike. Other types of batteries may burst, causing personal injury and damage.
- Only charge Lectric eBikes approved lithium-ion battery packs. The battery pack voltage must match the battery pack charging voltage of the charger. Otherwise, there is risk of fire and explosion.

- Do not expose the charger to rain or wet conditions. If water enters a charger, there is a risk of electric shock.
- Only use the original Lectric eBikes battery charger supplied with your eBike or one approved for your eBike by the manufacturer and purchased from a trusted source. Bypassing the battery charger or the use of a non-approved or counterfeit battery charger can lead to death or serious injury.
- Keep the battery charger clean. Contamination can lead to the risk of an electric shock. Clean only with the use of a damp cloth (mild soap/ water) when the charger is unplugged from both the wall and the bike.
- Always check the charger, cable, and plug before use. Stop using the charger if you discover any damage. Do not open the charger. Damaged chargers, cables, and plugs increase the risk of electric shock.
- Do not operate the charger on an easily ignited surface (e.g. paper, textiles, etc.) or in a flammable environment. There is a risk of fire due to the charger heating up during operation.
- Take care if you touch the charger while it is charging. The charger can get very hot, especially when the ambient temperature is high.
- Batteries must not be subjected to mechanical shock. There is a risk of damage to the battery pack.
- Keep the battery charger away from children. This will ensure that children do not play with the charger.
- Persons who are not capable of safely operating the charger because of their physical, sensory, or mental limitations, or because of their lack of experience or knowledge, may only use this charger under supervision or after having been instructed by a responsible person. Otherwise, there is a risk of operating errors and injuries.
- Note the household voltage! The voltage of the power supply must correspond to the specifications given on the battery charger nameplate.
- Damage to your ebike's electrical system caused in any manner, including water intrusion, can lead to battery failure, electrical system malfunction, or electrical fire and consequent property damage, injury, or death. Follow all recommendations to minimize chance of water damage. If you have any questions, contact Lectric eBikes.
- Keep the rubber plug inserted into the battery any time the battery is in the bike to prevent water ingress.

WARNING

To reduce the risk of fire, connect only to a circuit provided with 10 amperes maximum branch circuit overcurrent protection in accordance with the National Electrical Code, ANSI/NFPA 70. Never use extension cords with your Lectric eBikes charger provided with the purchase of your ebike, after sales service, or warranty charging devices.

WARNING

Using a damaged battery or charger can create additional bike damage or a fire hazard. Stop using your battery and charger and contact Lectric eBikes immediately if any of the following occur: (1) Your charger's flexible power cord or output cable or any of the electrical cables on your bike is frayed, has broken insulation, or any other signs of damage, (2) Your battery or charger is physically damaged, non-functional, or performing abnormally, (3) Your battery or charger experienced a significant impact from a fall or crash, with or without obvious signs of damage, or (4) Your charger becomes too hot to touch (it's designed to get warm with normal use), gives off an odor, begins smoking, makes noises, starts swelling, or shows other signs of overheating. Store any damaged battery or charger in a safe location and, as soon as possible, recycle or otherwise dispose of it according to local rules. Contact Lectric eBikes if you have any questions or to purchase a compatible replacement battery or charger.

Battery Charging Information

- Check the charger, charger cables, and battery for damage before beginning each charge.
- Always charge in a safe area that is cool*, dry, indoors, away from direct sunlight, dirt, or debris, in a clear area away from the potential to trip on the charging cords causing damage to the bike, battery, or charging equipment while parked and/or charging. *Always charge your battery in temperatures between 32°F – 113°F (0°C – 45°C),
- The battery can be charged on or off the bike. To remove the battery see instructions “Installing and Uninstalling Battery Pack” on page 31.
- The battery should be recharged after each use, so it is ready to go the full range per charge next ride. There is no memory effect, so charging the battery after short rides will not cause damage.
- Charging the battery normally takes 6-10 hours. In rare cases, it may take longer to allow the battery management system to balance the battery, particularly when the bike is new or after long periods of storage.
- The charge indicator light will show red while the battery charges. When charging is complete, the charging indicator light will turn green. Ensure the lights face upward when charging.
- Remove the charger from the battery within one hour of the green light indicating a complete charge. The charger is designed to automatically stop charging when the battery is full, but unnecessary wear of the charging components could occur if the charger is left attached to the battery and a power source for longer than 12 hours. Detach the charger as soon as possible once the green light indicates a complete charge to avoid unnecessary wear of charging components.
- Never charge a battery for more than 12 hours at a time.
- Do not leave a charging battery unattended

Charger Manufacturer

- Charger made by: D-POWER
- Charger Model: DPLC110V55
- Charger Model: DPLC275V55

To Charge Battery

1. Plug the cable from the charger into the port on the side of the battery pack.
2. Plug the charger power cable into an electrical mains wall socket.

NOTE: Use only the supplied input connection: standard AC power cord when connecting to the household electrical supply.

NOTE: The charging process is only possible when the temperature of your Lectric eBike battery is within the permitted charging temperature range.

NOTE: PAS is deactivated during the charging process.

After charging is complete and the light on the charger is green, disconnect the cable from the battery port and power cord from the wall socket. If you have charged the battery in the bicycle frame, carefully insert the plug after charging, so that no dirt or water can enter the battery port.

Charge Battery in eBike Frame

While in the frame, the battery is charged through the battery charge port located on the driveside right behind the fork.



Charge Battery out of eBike Frame

When the battery is removed from the frame, use the charge port on the side of the battery.



Moving and Storing your eBike Battery

Charging Battery Pack Before and During Storage

When the battery pack will not be used for weeks or months, remove it from the eBike and store the battery pack at about 60 % charge as indicated by the Energy Bar on the display. At about 60% charge, the battery will degrade less, compared to higher charge levels.

Every 2-3 months check the battery charge level and recharge to 60%, if necessary.

NOTE: If the battery is stored with no charge for an extended period of time, it may be damaged despite the low self-discharge and may reduce the battery capacity.

For optimum service life for your battery pack, charge the battery pack to 100% a few hours before you plan to ride. For example, if you ride the bicycle and the charge level falls to 50% but you plan to use the bicycle again in a few days, wait until the day before you plan to use it again to charge it to 100%.

WARNING

DO NOT charge battery unattended or leave battery connected to charger overnight.

Leaving the battery permanently connected to the charger is not recommended.

As the battery pack ages, capacity will diminish and the battery pack will eventually need to be replaced. A significantly reduced operating period after charging indicates that the battery pack is worn out and must be replaced.

You may replace it yourself by purchasing a replacement battery pack from Lectric eBikes.

Battery Pack Storage Conditions

If possible, store the battery pack in a dry, well-ventilated place. Protect it from moisture and water.

Always store your Lectric eBike battery pack in a location that:

1. Is in a room with a smoke alarm;
2. Is away from combustible or easily flammable objects; and
3. Is away from heat sources.

For an optimum service life, operate your Lectric eBike battery at temperatures between 32° F -104° F (0°C-40°C).

Make sure the maximum operating temperature is not exceeded. Do not leave the battery in your car during the summer, for example, and store it away from direct sunlight.

NOTE: Leaving the battery installed on the bicycle for long-term storage is not recommended.

WARNING

Failure to follow Battery Charging & Storage Best Practices could result in unnecessary wear to the charging components, battery, and or charger, and could lead to an underperforming or non-functional battery and replacement will not be covered under warranty.

Troubleshooting the Battery Pack

If you have any questions at all regarding the basic troubleshooting below, reach out to Lectric eBikes customer support by email at contact@lectricebikes.com, or call (602) 715-0907.

Issue	Most Common Solutions
Battery charging indicator lights do not illuminate.	1. Check that the cord is connected to the charger. 2. Check power availability at the main plug location. 3. If the battery does not charge, unplug and contact Lectric eBikes. Do not attempt to repair cord or charger.
Battery charging indicator light is always red.	Battery pack may be defective. Contact Lectric eBikes customer support for assistance.

Battery Recycling

When your battery is no longer usable, dispose of your battery according to state and federal regulations. State regulations regarding battery disposal vary so it is important you find out and follow the rules in your state.

Lithium-ion batteries cannot be put in with standard garbage bins.

MOVING AND STORING YOUR LECTRIC EBIKE

Please observe storage temperatures for your Lectric eBike. Protect the Drive Unit, Cockpit System, and Battery Pack against extreme temperatures (e.g. from intense sunlight without adequate ventilation). Extreme temperatures can cause the components (especially the battery) to be damaged.

Before shipping or transporting your eBike or battery on public transport or an airplane, check with the carrier for any restrictions on electronics or batteries and also check your local laws.

WARNING

To prevent serious injury or death:

1. **Always remove the battery pack before moving your Lectric eBike on a bicycle rack mounted on your vehicle.**
2. **Always use a bicycle rack that is compatible with your Lectric eBike. Check your bicycle rack manual to be sure your rack has sufficient capacity. Overloading a bicycle rack could cause the rack to fail and your eBike to be damaged.**
3. **Never attempt to use a roof-mounted bicycle rack. ONLY use hitch-mounted racks.**
4. **Always use proper lifting techniques when lifting your Lectric eBike. Electric bicycles are generally heavier than bicycles.**

DISPOSAL OF YOUR LECTRIC EBIKE

When your Lectric eBike is no longer usable, dispose of your eBike according to state and federal regulations. The motor, display, battery, speed sensor, accessories, and packaging should be disposed of in accordance with these regulations. State regulations regarding electronics disposal vary, so it is important you abide by the rules in your state.

NOTE: Do not dispose of eBikes and their components with household waste.

TROUBLESHOOTING YOUR LECTRIC EBIKE

If you have any questions at all regarding the basic troubleshooting below, reach out to Lectric eBikes customer support by email at contact@lectricebikes.com, or call (602) 715-0907.

Issue	Most Common Solutions
Bicycle will not turn ON.	1. Charge the battery until the light on the charger turns from red to green. This may take up to 7 hours. 2. Insert key in the battery and turn counterclockwise to the LOCK position. Then press and hold the power button to turn ON. 3. Follow the cable coming from the display down to the quick plug and the cable coming from the button pad. You may need to unravel some of the plastic wrapping to access these plugs. With a quick pull (do not twist), unplug each quick plug, inspect both sides of the plug, and reconnect by lining up the arrows on both ends. After checking the quick plugs, press and hold the power button on the display control pad to turn on.
Pedal Assist or Throttle do not work	1. Check that the PAS level is set between ECO-TURBO. 2. To test if PAS is working, do not operate the throttle. 3. To test if the throttle is working, do not pedal. 4. Check all quick plugs.

Error Codes

The components of your Lectric eBike are continuously monitored automatically. If a fault is detected, the corresponding error code will appear on the display.

	Error Code	Meaning	Most Common Solution
	E003	PAS Sensor Fault	Check PAS quick plug
	E006	Battery undervoltage	Fully charge Battery
	E007	Motor Fault	Check motor quick plug
	E008	Throttle Fault	Check throttle quick plug
	E009	Controller Fault	Check controller connections
	E010	Display Communication Reception Failure	Check display quick plug
	E011	Display Communication Send Failure	Check display quick plug
	HOT	High Temperature Fault	Stop use and allow bike to cool

USER MAINTENANCE INSTRUCTIONS

You should have your bicycle maintained at regular service intervals at your local bicycle shop.

WARNING

To prevent serious injury or death:

1. **NEVER open any of the components, including the battery, display, motor, or PAS sensor.** Service should only be performed by a bicycle repair shop.
2. **Always remove the battery pack before performing any bicycle inspection, maintenance, or repair.**
3. **If you suspect that something is loose, do not ride your bicycle.** All nuts, bolts, and screws require the proper tightening force. Too little force and the fastener may not hold securely. Too much force and the fastener can strip threads, stretch, deform, or break. Either way, incorrect tightening force can result in component failure, which can cause you to lose control and crash. Take your bicycle to a bicycle repair shop for service.
4. **Do not paint any components of your Lectric eBike as they may cause premature failure of the component.**
5. **Do not submerge your Lectric eBike or its components in water or use a pressure washer to clean.**

Caring for Your eBike

Always observe the operating and storage temperatures of your Lectric eBike and its components. Protect motor, display, and battery pack against extreme temperatures (e.g. from intense sunlight without adequate ventilation). Extreme temperatures can damage components (especially the battery pack). Please have your Lectric eBike serviced at least once a year.

Tune-Ups

100 Mile Tune-Up

After 100 miles, or 5 full battery charge cycles, have the following services performed at a bicycle shop:

1. Check that your brakes are functioning correctly and adjust if necessary.
2. All hardware should be adjusted to the specified "Tightening Torque" on page 34. If any hardware is damaged, it may need to be replaced by a bicycle mechanic.

Monthly (or about every 250-500 miles)

1. Inflate tires to pressure within recommended range printed on tire sidewalls.
2. Lubricate chain.
3. Check that all hardware is tightened to the torque specifications listed in the "Tightening Torque" on page 34 section of this manual.

4. Check your brake pads for signs of wear. Replace if necessary.
5. Clean the bicycle with a low residue cleaner and dry completely. Lubricate after cleaning where necessary.
6. Check spoke tension and adjust if necessary. See “Tightening Torque” on page 34.

Quarterly (or about every 750-1500 miles)

1. Check all items on the monthly service list above.
2. Check tire tread for excessive wear. Replace if necessary.
3. Check electrical connectors and cable housings are secured away from moving parts and are free from damage. Replace if necessary.

If you ever have a crash or wreck on your eBike, first get attention for any injuries you might have received. After that, check your eBike for any damage. Go through the pre-ride inspection again before riding your eBike after a crash or wreck.

WARNING

Do not tamper with your bicycle. Tampering is defined as removing or replacing any original equipment or modifying your bicycle in any way that may change its design and/or operation. Such changes may seriously impair the handling, stability, and other aspects of the bicycle, making it unsafe to ride. Do not attempt to use any of your eBike’s equipment or components for any other purpose than using them as described in this manual for your eBike. Tampering can void your warranty and render your bicycle noncompliant with the applicable laws and regulations. Lectric eBikes is not responsible for any direct, incidental, or consequential damages. This includes, without limitation, damages for personal injury, property damage or economic losses due to tampering.

To ensure safety, quality, and reliability, use only original parts or Lectric eBikes authorized replacements for repair and replacement.

Cleaning

WARNING

Do not submerge your Lectric eBike or its components in water, or use a pressure washer to clean.

Clean your Lectric eBike carefully with a soft, damp cloth (using only mild soap and water). Rinse with water.

LEGAL

Lectric eBikes Manufacturer's Limited Warranty

Subject to the terms and conditions of this Limited Warranty (this **“Warranty”**), Lectric eBikes LLC (**“Lectric”**) warrants to each owner (then-current and previous) of the Lectric eBike (collectively, the **“Owner”** or **“you”**) located in the Continental United States or Canada covered by this Warranty (the **“Warranted eBike”**) that the parts of such eBike described in Section 1 of this Warranty as the **“Covered Parts”** will be free from defects in workmanship and materials for the one (1) year period commencing on the original delivery date of such eBike to the first Owner as shown in the records of Lectric (the **“Warranty Period”**). For purposes of this Warranty, the **“Continental United States”** means the forty-eight (48) contiguous states of the United States of America, plus the District of Columbia.

1. The Covered Parts: The Covered Parts consist of the frame, forks, stem, handlebars, headset, seat post, saddle, brake calipers, brake adapter for mounting, brake levers, lights, bottom bracket, crank set, pedals, pedal assist sensor, axles, wheel hub, rims, freewheel, cassette, derailleur, shifter, motor, throttle, controller, battery (including without limitation extended-life battery, if purchased), battery plates, battery isolator, wiring harness, display, kickstand, and hardware.

2. The Exclusions: Each of the following are excluded from coverage under this Warranty (collectively, the **“Exclusions”**):

- eBike accessories, whether sold on Lectric’s website(s) or otherwise;
- Each eBike part that is not one of the Covered Parts, including without limitation, wear parts, such as, but not limited to, the chain or belt, tires, wheels, spokes, tubes, battery handle, reflectors, brake rotors, brake pads, brake cables, brake housings, and grips;
- Customary wear and tear;
- Injuries and damage caused by or resulting from in whole or part any or all of the following with respect to the Warranted eBike: (a) failing to follow instructions or warnings in the written materials or labels accompanying such eBike, (b) improper assembly or maintenance, (c) modification(s) or alteration(s) not expressly authorized by Lectric, (d) installation, repair or use of parts or accessories not intended by Lectric or incompatible with such eBike or each other, (e) user error, (f) misuse, (g) abuse, (h) neglect (including without limitation improper storage or failure to properly maintain), (i) inappropriate use (such as, but not limited to, extreme or stunt riding), (j) water or water vapor damage (including without limitation rust), (k) acts of God (such as, but not limited to, fire, floods, tornados, hurricanes or earthquakes), (l) severe conditions (including without limitation exposure to excessive wet, hot or cold environments), (m) theft, (n) accidents, (o) power surges and (p) overcharging or use of chargers other than that or those approved by Lectric; and
- Compensation for time and efforts (whether by the Owner or anyone acting on behalf of the Owner) associated with (a) making claims under this Warranty or asserting breach of warranty, (b) loss of use of the Warranted eBike or any part(s) or accessories thereof or (c) labor related to disassembly of each allegedly defective portion or installation of its replacement.

3. The Exclusive Remedy: For the Warranted eBike or its part(s) treated by Lectric under this Warranty as defective within the Warranty Period (regardless whether it or they are in fact defective), Lectric will, at its option, repair or replace such eBike or part(s) at no expense to you, provided that, if so requested by Lectric's furnishing you with a shipping label, you, using such label, will arrange for shipping such eBike or part(s) to Lectric or its designee for inspection and repair or replacement in timely fashion. As determined by Lectric, each such replacement or each such replacement used in such repair will be of (a) the same, (b) substantially equal or (c) greater in value and quality than what was used originally. Each such repair and replacement (i) is covered by this Warranty for the remainder of the Warranty Period and (ii) does not extend such period. The remedy described in this Section 3 of this Warranty is the sole and exclusive remedy for claims under this Warranty (the **"Exclusive Remedy"**).

4. LIMITATIONS: THIS WARRANTY, PLUS AN IMPLIED WARRANTY OF MERCHANTABILITY, IS IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES, OBLIGATIONS OR LIABILITIES, INCLUDING, BUT NOT LIMITED TO, EACH IMPLIED WARRANTY OF FITNESS FOR PARTICULAR PURPOSE. EACH WARRANTY, IF ANY, THAT IS FOUND TO ARISE BY WAY OF FEDERAL, STATE, PROVINCIAL OR TERRITORIAL LAW IS LIMITED TO AND DOES NOT EXTEND BEYOND EITHER AND BOTH OF THE SCOPE OF THIS WARRANTY AND THE WARRANTY PERIOD. EACH CLAIM UNDER THIS WARRANTY MUST BE BROUGHT DURING THE WARRANTY PERIOD, AND EACH ACTION FOR BREACH OF WARRANTY MUST BE BROUGHT NO LATER THAN THIRTY (30) DAYS AFTER THE WARRANTY PERIOD (the latter period together with the Warranty Period is the "Claims Period"). IN NO CASE WILL LECTRIC BE LIABLE FOR ANY OR ALL INCIDENTAL AND CONSEQUENTIAL DAMAGES OF ANY KIND FOR BREACH OF THIS WARRANTY OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHETHER TO THE OWNER OR ANYONE ELSE. THE EXCLUSION OF INCIDENTAL AND CONSEQUENTIAL DAMAGES WILL BE INDEPENDENT OF ANY FAILURE OF THE ESSENTIAL PURPOSE OF ANY WARRANTY. No agent, representative or employee of Lectric or anyone else has the authority to increase or alter the obligations of this Warranty.

Some states do not allow limitations on how long an implied warranty lasts, so the limitations described above may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

5. Warranty Claims: All claims under this Warranty must be made in writing or electronically (a) by the then-current Owner and (b) within the Warranty Period. To start such a claim, please contact Lectric online support at contact@lectricebikes.com. You may be required (i) to provide evidence of ownership or purchase (such as, but not necessarily limited to, when the then-current Owner is not the original purchaser) and (ii), to assist with accurately diagnosing the apparent problem, send photographic evidence and additional documentation (such as, but not limited to, video). You also may be required to ship at Lectric's expense each product or part in question to Lectric or its designee for inspection and repair or replacement. The failure to provide such evidence, documentation and product or part in a timely fashion may result in delayed response(s) from Lectric or denial of the warranty claim. For purposes of this Warranty, a warranty claim is **"made"** the when Lectric has (A) received written or electronic notice of such claim as described in this Warranty, (B) received (as determined by Lectric) reasonably sufficient information and materials (including without limitation if so requested, such product(s) or part(s)) to evaluate such claim and (C) expressly acknowledges the receipt of such notice and such information and materials in writing or electronically. Each shipment to Lectric or its designee not authorized by Lectric in advance may be refused or ignored.

Once a warranty claim has been (1) made, (2) entered in Lectric's system and (3) approved by Lectric, the company, as soon as it determines that it is feasible to do so, will ship the relevant repaired product or replacement part(s) at Lectric's cost to the address provided by the then-current Owner in the Continental United States or Canada. Approval of a warranty claim [a] may be based on preserving customer goodwill or other factors and [b] does not constitute an admission on the part of Lectric.

6. Additional Information: Please note:

- Do not send personal items or products other than those sold by Lectric that you wish to retain, such as things used for packing or protection. (Such items or products will not be returned.)
- Lectric will cover shipping charges associated with either (a) sending you each product or part that Lectric repairs or replaces and (b) returning to you each Lectric product or part you submit using the shipping label provided by Lectric if Lectric determines that such product or part is **not** covered by this Warranty (unless you tell Lectric not to return such product or part to you).
- When a Lectric item sent to Lectric for inspection and repair or replacement is replaced by Lectric, such item sent cannot be returned to you.
- From time to time, supply chain delays or other issues may affect the provision of repairs or replacement parts.
- Your insurance policy or policies may not provide coverage for theft or accidents and are solely a matter between you and each relevant insurance company or agent.

7. Enforcement: This Warranty, as well as any and all claims or causes of action arising out of or relating to this Warranty (regardless whether in contract or tort or by statute), shall be governed by and interpreted under the substantive and procedural laws of the State of Arizona without regard to that state's conflicts of laws provisions, except that, to the extent otherwise applicable, the United Nations Convention for the International Sale of Goods does not apply. The claims process described in Section 5 of this Warranty must be completed and a decision received from Lectric regarding approval of each claim prior to initiating any action to seek legal or equitable remedies for breach of warranty. Any action for breach of warranty must be commenced no later than the end of the Claims Period. Some states do not permit reduction of the statute of limitations, so such limitation on commencement may not apply to you. Legal disputes relating to any or all of this Warranty, breach of warranty and representations by Lectric of any kind will be: (a), if the Owner is located in the United States of America, litigated at the trial level as a bench trial in federal or state court in Phoenix, Arizona, **as each of the Owner and Lectric hereby waives trial by jury** and (b), if the Owner is located in Canada, finally settled by arbitration in Phoenix, Arizona under commercially reasonable rules designated by Lectric and available upon request at contact@lectricebikes.com. The Owner: (i) hereby submits to personal and subject matter jurisdiction in such courts or such arbitration, (ii) agrees not to contest venue and (iii) agrees that, in the event that litigation or arbitration of such dispute does not commence during the Claims Period, the claims of the Owner against Lectric in such dispute shall be barred. The right of the Owner (then-current or previous) to participate as a class member in any class action lawsuit brought against Lectric regarding any alleged defect or performance failure regarding any or all Lectric eBikes, accessories and the parts of either or both thereof is expressly waived. Any authorization or performance of repairs, attempt to resolve a complaint or filing of a claim under this Warranty will not (A) constitute a waiver of Lectric's rights or (B) extend the Warranty Period or (C) when the Owner must commence an action to enforce any breach of warranty or other claim, unless prohibited by state law. Except to the extent expressly prohibited by applicable law, the interpretation of this Warranty by Lectric will control.

8. Acceptance of Terms: By performance or the acceptance of performance under this Warranty, the Owner accepts and agrees to the terms and conditions of this Warranty.

9. Modification: If, in the view of Lectric, applicable law contains or may contain any requirement(s) or other provision(s) that is or are contrary to, in conflict with or missing from any provision(s) or part(s) thereof in this Warranty (collectively, the ***“Identified Provisions”***), Lectric, at any time, may elect by notice from Lectric to the Owner (effective upon receipt thereof or as otherwise designated by Lectric) that such requirement(s) or provision(s) be deleted from, substituted for or added to the Identified Provisions to the minimum extent necessary in the opinion of Lectric to address the issue(s).

10. Questions: Please contact Lectric Customer Service at contact@lectricebikes.com.

Find the latest version of the Lectric eBikes warranty at:

LectriceBikes.com/pages/lectric-ebikes-manufacturers-warranty

Bike Performance Disclaimer

The bikes listed range and top speed are estimates (not guarantees) of expected performance. Performance will vary with rider weight, cargo weight, rider/cargo shape (both contribute to drag), terrain, tire pressure, brake adjustment, throttle vs PAS usage, pedal power, battery charge level, ambient temperature, and wind conditions. Under certain conditions it is possible to get ranges and top speeds that are different from the listed estimates.

Liability Disclaimer

Riding any kind of bicycle comes with inherent risks and dangers that cannot be predicted or avoided. These dangers could result in a serious accident, injury, or death of the rider. It is the sole responsibility of the rider to become properly educated and prepared to ride safely. Once in possession of the bike, Lectric eBikes strongly encourages and recommends that all customers have a certified and reputable bicycle mechanic complete a full inspection of each component on the bicycle to ensure it is safe for operation. Lectric eBikes makes no claims or guarantees that the brakes, battery, frame, motor, motor controller, display, electrical cables, electrical cable housings, fasteners, grips, fork, stem, shifters, headset, seat post, seat post clamp, handlebar stem clamp, saddle, wheel hubs, handlebars, spokes, rims, tires, tubes, derailleur, freewheel, cassette, throttle, kickstand, lights, reflectors, hardware, bottom bracket, or any other part or accessory, will be properly secured and adjusted upon arrival. Before every ride, fully inspect your bicycle to ensure everything is secured and adjusted properly.

Under no circumstances is Lectric eBikes responsible for any damage resulting from damaged, defective, or improperly secured parts. This includes, but is not limited to, damage to personal property, personal injury, or death.

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with radio frequency exposure limits set forth by the FCC for an uncontrolled environment.

This equipment should be installed and operated with a minimum distance of 5 mm between the device and the user or bystanders.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

WARNING

When using this product, basic precautions should always be followed, including the following:

1. Read all the instructions before using the product.
2. To reduce the risk of injury, close supervision is necessary when the product is used near children.
3. Do not put fingers or hands into the product.
4. Do not use this product if the flexible power cord or output cable is frayed, has broke insulation, or any other signs of damage.
5. For an off board charging system provided with a field wiring terminal or leads, the installation instructions shall state that the installation is intended to use copper wires only.
6. For an off board charging system, when a pressure terminal connector, or the fastening hardware, are not provided on the unit as shipped. The instruction manual shall indicate which pressure terminal or component terminal assemblies are for use with the unit.
7. With reference to (f), the terminal assembly packages and the instruction manual shall include information identifying the wire size and the
8. manufacturer's name, trade name, or other descriptive marking by which the organization responsible for the product is identified.
9. When a pressure terminal connector is provided on an off board charging system, for a field installed conductor requires the use of other than an ordinary tool for securing the conductor, identification of the tool for securing the conductor, identification of the tool and any required instructions for using the tool shall be included in the installation instructions.
10. The instruction manual for a unit where the abnormal test is terminated by operation of the intended branch circuit over current protective device, shall include the word "CAUTION" and the following or equivalent: "To reduce the risk of fire, connect only to a circuit provided with _____ amperes maximum branch circuit overcurrent protection in accordance with the National Electrical Code, ANSI/NFPA 70" The blank space is to be filled in with the applicable ampere rating of branch circuit overcurrent protection.

AVERTISSEMENT

Lors de l'utilisation de ce produit, il convient toujours de respecter des précautions élémentaires, notamment les suivantes:

1. Lire toutes les directives avant d'utiliser le produit.
2. Pour limiter les risques de blessure, exercer une surveillance étroite si le produit est utilisé à proximité d'enfants.
3. Ne pas introduire les doigts ou les mains dans le produit.
4. Ne pas utiliser ce produit si le cordon d'alimentation souple ou les câbles de sortie sont effilochés, si l'isolant est abîmé ou s'il y a d'autres signes de dommages.
5. Lorsqu'un système de charge externe est fourni avec une borne pour connexion à pied d'œuvre ou des fils de raccordement, les directives d'installation préciseront que l'installation prévoit uniquement l'utilisation de fils de cuivre.
6. Avec un système de charge externe, lorsque l'unité n'est pas livrée avec une borne de raccordement à pression ou le matériel de fixation, le manuel d'utilisation devra indiquer quels assemblages de bornes à pression ou de bornes de composant doivent être utilisés avec l'unité.
7. En référence au point f), les boîtiers d'assemblage des bornes et le manuel d'utilisation doivent comprendre des renseignements indiquant la taille des fils et la raison sociale du fabricant, la marque de commerce ou toute autre inscription descriptive permettant d'identifier l'entreprise responsable de la fabrication de produit.
8. Lorsqu'une borne de raccordement à pression fournie sur un système de charge externe pour un conducteur installé sur place nécessite d'utiliser un outil inhabituel pour fixer le conducteur, les directives d'installation préciseront la nature de l'outil et les instructions pour l'utiliser.
9. Le Manuel d'utilisation d'une unité dans laquelle l'essai anormal se termine en utilisant le circuit de dérivation prévu plutôt que le dispositif de protection actuel devra comprendre le terme << ATTENTION >> et la formule suivante ou un équivalent : << Afin de limiter le risque d'incendie, raccorder uniquement à un circuit équipé d'un dispositif de protection contre les



The latest version of your manual is available at lectricebikes.com/manual