


OWNER'S MANUAL

NEWHEEL


XR
CLASSIC

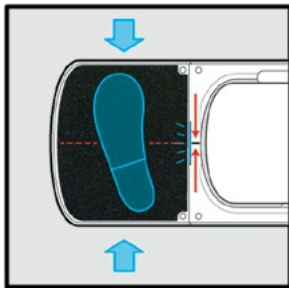

- Switch on your Onewheel using the power switch on the side.
- Step firmly on both sides of the front footpad.



- Always wear a helmet and other protective gear.
- Lean on a friend to get started.
- Slowly come up to balance.
- Onewheel will engage when you reach a horizontal orientation.

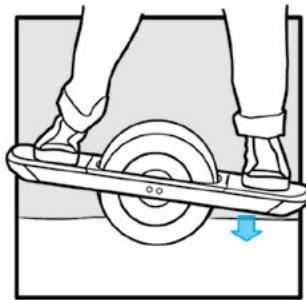

- Lean forward to accelerate.
- Lean back to slow down.
- Lean side to side to turn.



Dismount

- **Slow down to < 1 mph** and with your toe planted lift your heel from one side of the rider detection area.
- **If you are new to riding, enable Simplestop™** in the Onewheel App. Simplestop™ is the easiest way to dismount. **See pgs. 36-37 for more info on dismounts.**

Welcome to the revolution

Now that you're a proud owner of your very own Onewheel, we want to keep you safe while you experience a whole new way of riding. We've created this owner's manual to share important safety, performance, and service information with you. Please read it before you take your first ride and keep it for reference.

Getting there is more than half the fun!



WARNING

Read this manual and all other materials carefully
and follow the riding procedures described.

Always heed pushback, and lean back to slow down (pgs. 42-49).

Never lean forward into pushback (pgs. 42-49).

Always ride your Onewheel at a speed and in a manner
appropriate for the conditions and your ability.

Always wear a certified helmet and other safety gear (pg. 23).




WARNING

Risk of Death or Serious Injury

Whenever you ride a Onewheel, you risk death or serious injury from loss of control, collisions and falls. To ride safely, you must read and follow all instructions and warnings in the Owner's Manual.




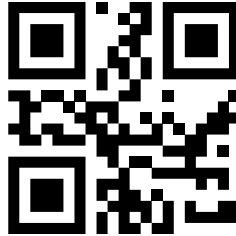

Register Your Onewheel

We can't guarantee a warranty claim unless your board is registered.

my.onewheel.com

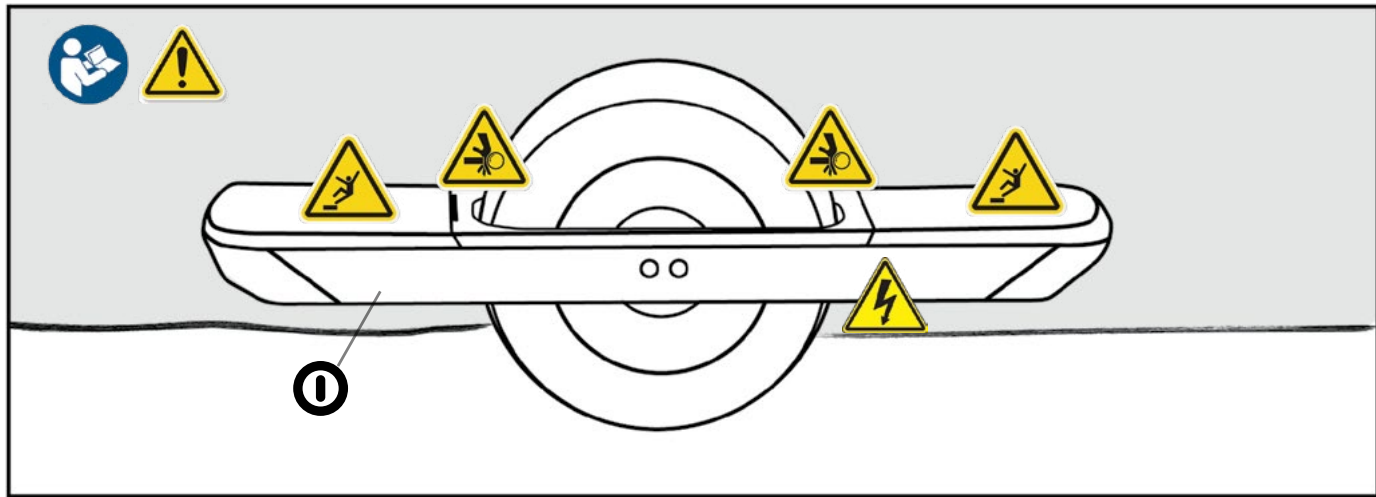

General Warnings

Like any sport, Onewheeling involves risk of injury. By choosing to ride a Onewheel, you assume the responsibility for that risk. It's important that you understand and practice the rules of safe and responsible riding and proper use and maintenance to reduce the risk of injury. This manual contains many “**WARNINGS**” and “**CAUTIONS**” concerning the consequences of failing to follow safe riding practices and properly maintaining and inspecting your Onewheel.

The word  **WARNING** indicates a potentially hazardous situation that, if not avoided, could result in serious injury or death.

The word  **CAUTION** indicates a potentially hazardous situation or unsafe practice that, if not avoided, could result in minor or moderate injury, serious damage to your Onewheel and the voiding of your warranty.

The word  **TIPS** indicates information to help you get the most out of your Onewheel experience.



Safety Tips

- Always wear a certified helmet
- Ride at speeds appropriate for your abilities and the conditions
- Always heed pushback, and lean back to slow down
- Accelerate gradually, never accelerate quickly or aggressively
- Ride defensively, and observe all traffic laws and regulations
- Never ride after consuming alcohol or drugs
- Avoid slippery surfaces such as wet or sandy roads, or ice

ATTENTION

Maximum rider weight: 275 lb / 124 kg

Do not allow children under the age of 14
to use this product

Adult supervision is required

Special Note to Parents and Guardians

As a parent or guardian, you are responsible for the activities and safety of your minor or child (while he or she is operating a Onewheel). Please ensure that their Onewheel is in good repair and safe operating condition and that your child understands its proper use. It is also important that both you and your child learn, understand, and obey all applicable local motor vehicle and traffic laws. Always make sure your child is wearing proper protective equipment, including a helmet and other protective gear. **Onewheel is not recommended for children under the age of 14. For children 14 years of age and older, adult supervision is required.**

Download the Onewheel App

Sync to your board from the Onewheel App to customize your riding experience with Digital Shaping™. The Onewheel App also allows you to check your battery status for epic adventures, toggle your LED lights for night cruising, and track riding data.

- ✓ **TIP:** Search “Onewheel” on Google Play or Apple App Store.
- ✓ **TIP:** Make sure your Bluetooth is enabled on your phone so that your board can connect to the Onewheel App.



XR Classic Owner's Manual




Home Screen

Your dashboard. Select your shaping, monitor your board and see live stats.



Rides Screen

See posted rides from all over the world on phone or browser.

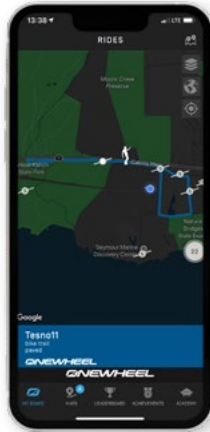


Ride Screen Details

Find the ride details of all posted rides.



Leaderboard

See top stats and mileage from the Onewheel community.

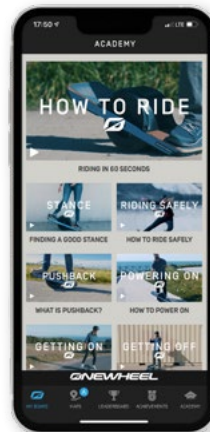


Academy

Riding instructions for beginners through advanced riders.

Digital Shaping 3.0


Sync to your board from the Onewheel app to customize your riding experience. Digital Shaping 3.0 provides the pinnacle of performance, comfort, and control. Inspired by surfboard shapers creating different boards for different rides, Digital Shaping 3.0 offers a complete quiver of Shapings selectable from your smartphone.

Select your
ride mode/shaping

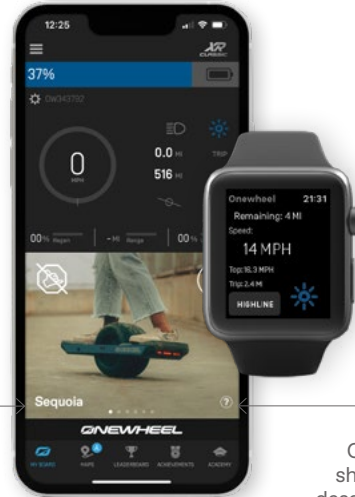

Open
shaping
descriptions

XR Classic Shapings / Ride Modes

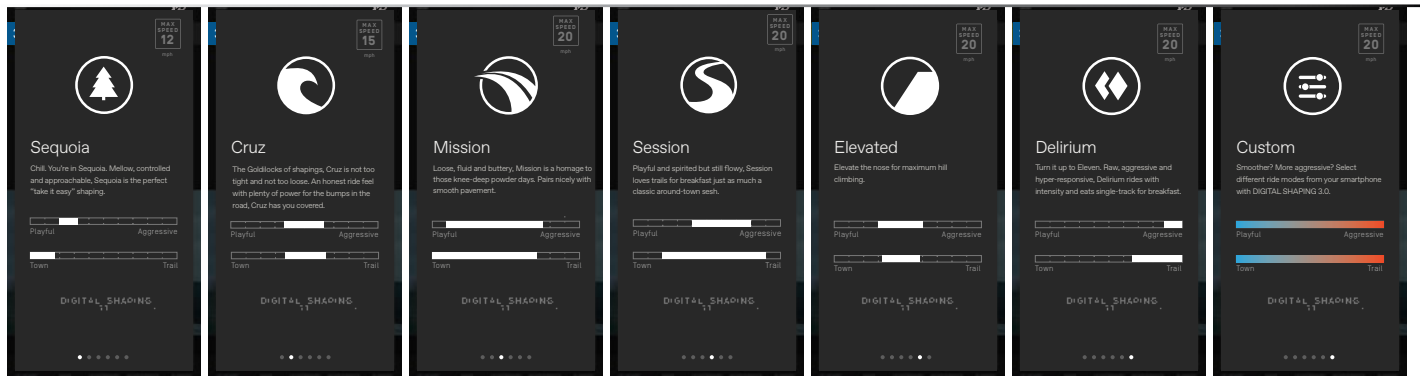



No Remote Required

Lean forward to go, back to slow down, it's that easy.



Simplestop™

Onewheel's Simplestop™ technology makes riding Onewheel even easier. Slow to a stop then lean back and the board sets you down gently.



Lightbar

Onewheels feature Lightbar™ integrated into the front footpad for sensor pad indication, battery monitoring, and in-ride alerts.



Maghandle™ Pro

Onewheels have a built in Maghandle™ Pro making it easy to carry and it magnetically snaps in flush with the wheel when not in use.



Hypercore™ Brushless Motor

Incredibly smooth power and torque to climb over anything and powerful regenerative braking on the way down.



NMC Battery

Safe, powerful and quick to charge.



Intuitive Lighting

Bright LED headlights and taillights automatically reverse when you switch direction.



Digital Shaping 3.0

Smoother? More aggressive? Select different ride modes from your smartphone with Digital Shaping 3.0 in the Onewheel App.

XR
CLASSIC



RANGE

17-24mi

27-39km

SPEED

20mph

32 kph

A photograph of a green classic car, possibly a Volkswagen Beetle, with an Onewheel electric skateboard leaning against its rear wheel. The skateboard is blue and black with the 'ONEWHEEL' logo. The background is a clear blue sky.

TABLE OF CONTENTS

00

00 Welcome to the Revolution	03
Safety Overview	04
Register Your Onewheel	07
General Warning	09
Special Note to Guardians	13
Onewheel App	14
Digital Shaping	16
 01 Put Safety First	 22
 02 Riding your Onewheel	 24
Basic Balance	26
Regenerative Braking	28
Understanding the Footpad	28
Direction and Speed	29

Turning	29	04 Getting to Know your Onewheel	58
Riding Position	30	Main Power Pushbutton Switch	59
Range	32	Lightbar™	60
Ways to Dismount	34	Decoding Your Onewheel	66
Pushback	42	05 More Ways to Ride Safely	68
Haptic Buzz	50	General Board Care	76
03 Maintaining Onewheel	52	Onewheel Specifications	78
Bumpers	53	Charger Specifications	78
Footpads	53	Warranty	79
Tire	54	Declaration of Conformity	84
Battery	55	Contact	86
Battery Charger/How to Charge Your Battery	56		

**PUT
SAFETY
FIRST**

01



Ride Safely

Whether you're a pro or brand new to riding, it's always important to ride safely. Here are a few tips to ensure that you and your Onewheel stay safe.

Helmet

Always wear an ASTM F1492-08, CPSC and/or CE EN1078 certified helmet when riding your Onewheel Classic. Be sure to attach the chin strap and follow the helmet manufacturer's instructions for fit, use, and general care.

Other Safety Equipment

It's a good idea to wear wrist guards, elbow pads, and knee pads for extra protection.

Shoes

Always wear shoes that will stay on your feet and grip the board. Never ride barefoot or in flip-flops.

See Section 05 “More Ways to Ride Safely” for more safety information.

 **WARNING:** Many local governments legislate “road worthy” laws and require specific safety equipment. It is your responsibility to familiarize and comply with all applicable laws of the location where you ride your Onewheel. This includes properly equipping yourself and your Onewheel as required by law.

RIDING YOUR ONEWHEEL XR CLASSIC

02



An Incredible Ride

Quite simply the most beautiful riding experience on the planet, Onewheel is the perfect trail slasher, mid-town ripper, or grocery getter. So fun the pros can't get enough of it.

Onewheel is designed to be intuitive. Anyone can learn the basics in just a few minutes. Once you start riding regularly, there's plenty of room to challenge yourself.

Before you get on your Onewheel

- Always do a safety check before each ride (see page 52).
- Read all safety instructions.
- Wear a helmet and other protective gear.
- Choose a safe, controlled, and calm environment away from cars, crowds, obstacles, and other potential hazards.



Basic Balance

Remember, Onewheel is self-balancing so there's no need to muscle your way onto the board. Instead, use slow, small movements.

When Onewheel is on the ground, you'll notice a lower side and a higher side. Always step onto the lower side first. Then place your other foot onto the rider-detection area. Keep your legs straight (like you are standing on the ground) with a very slight bend in your knees.

Stand up slowly, bring the board to parallel, and the Onewheel will engage.


- ✓ **TIP:** Have a friend's shoulders handy to help you the first few times you get on your Onewheel. After practicing a few times, we promise you'll be a pro.
- ✓ **TIP:** Look where you want to go (don't look down).
- ✓ **TIP:** Use light, constant pressure to control your Onewheel.
- ✓ **TIP:** Don't bend your knees too much; stand tall on your first rides.

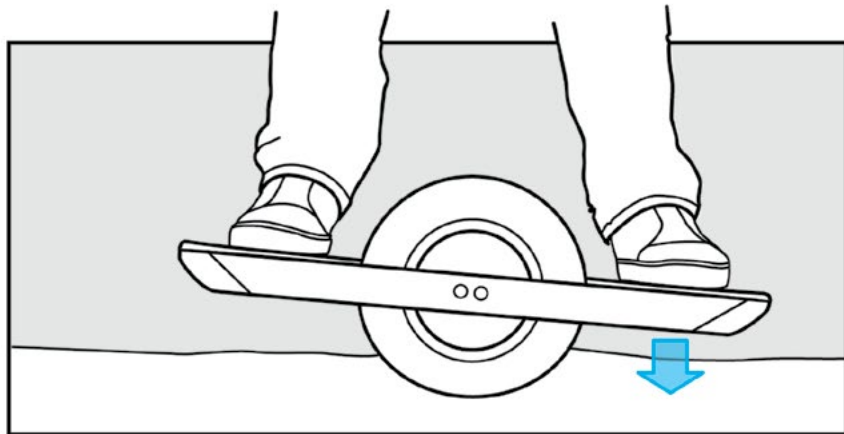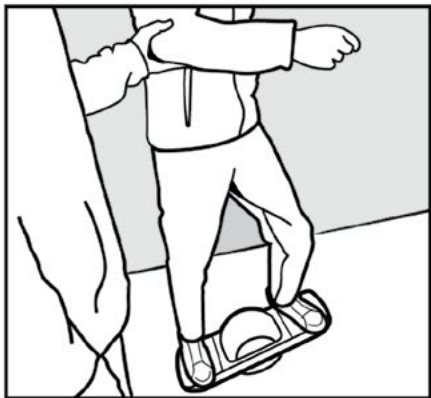

Regenerative Braking

Decelerating while going downhill recharges the Onewheel battery.


⚠ WARNING: Riding hills exceeding a 15% grade is extremely dangerous and may result in loss of control or damage to your Onewheel Classic.

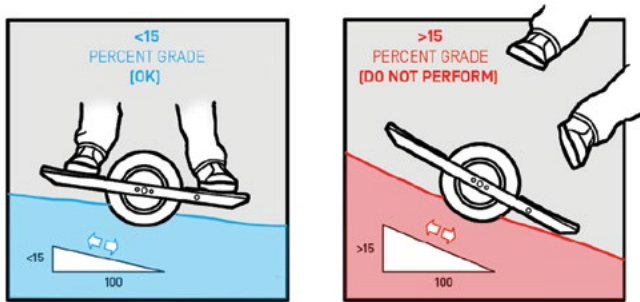

Understanding the Footpad

The front footpad is pressure sensitive and divided into two zones, one on each side of the footpad. Both zones must be pressed to begin riding. The Lightbar™ turns blue as visual indication of the sensor pad areas you are engaging.


✓ **TIP:** Avoid repositioning your foot while riding.

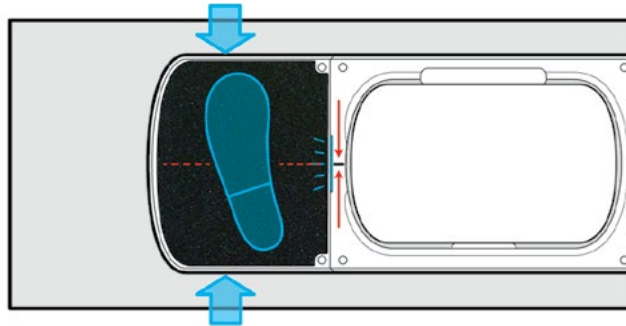

Direction and Speed


Lean forward to move forward, and lean back to slow down or to move backwards. The more you lean, the faster you'll go. Always accelerate slowly and under control.

⚠ WARNING: Accelerating too hard or quickly can cause nose-down contact with the ground, increasing the risk of a fall and possible injury.

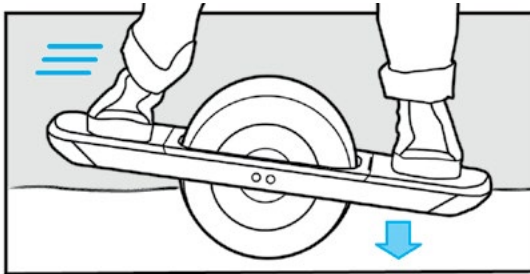

Turning


Use subtle heel-toe pressure for turning left or right. You will begin to turn in the direction you lean. The more you lean, the sharper the turn.

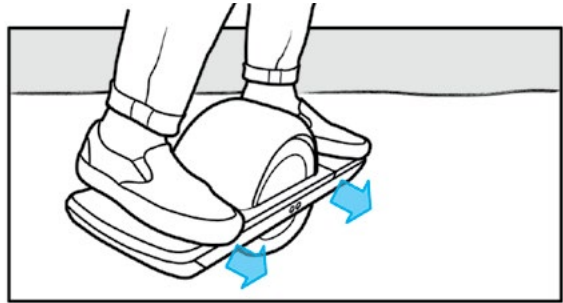

Riding Position

When riding, always keep center of gravity (CG) over the wheel. Lean forward or back from the hips rather than head/shoulders to maintain CG over the wheel as much as possible. If you have trouble controlling speed

of board, make sure your CG is over the wheel and make gradual forward or backwards movements to cause slight board speed changes.

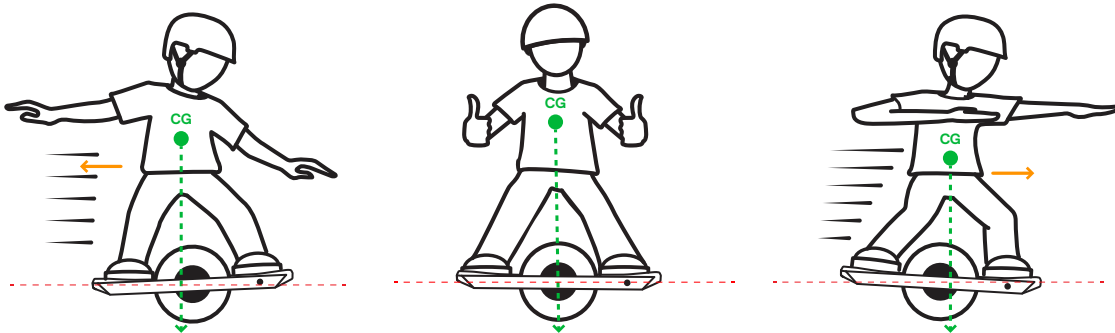



MECUM
AUCTIONS
MECUM.COM

CONCRETE-HEEL

Range

Range varies based on an assortment of factors including rider weight and riding style, terrain, inclines and declines, and tire pressure. For optimal range, we recommend the following tips:

- ✓ **TIP:** Fully charge your XR Classic.
- ✓ **TIP:** Ensure the tire pressure is at 20psi.*

*Tire pressure makes a significant difference to Onewheel range, top speed, and ride quality. Even a few PSI change can alter the ride.




Ways to Dismount

There are a few ways to dismount your Onewheel. The Simplestop™ method is the easiest way to dismount. If you are new to riding, start with Simplestop™.

- ✓ **TIP:** Both rider-detection areas must be pressed to start riding. If you slow down and remove your foot from only one area, the board will disengage.
- ⚠ **WARNING:** Never step off with your back foot first (the foot not on the rider-detection area). This increases risk of a fall and possible injury.


01

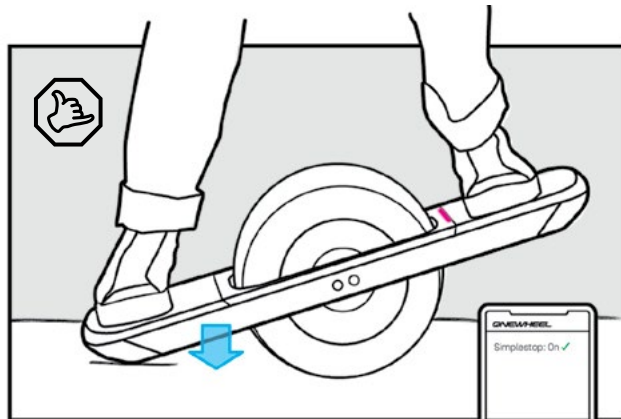

Simplestop™ - The easiest way to stop. If you are new to riding, start with Simplestop™ which can be enabled through the Onewheel App.

pg. 36


02

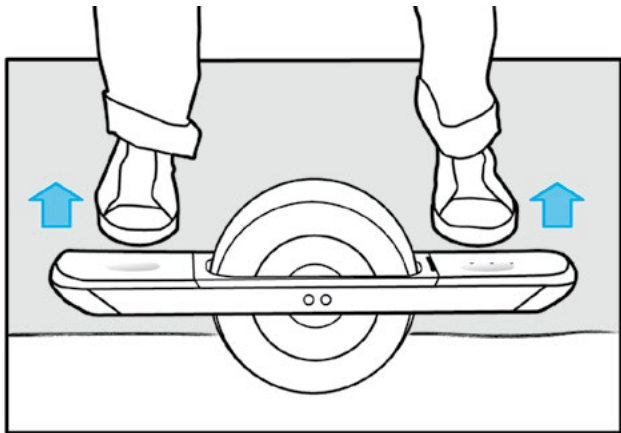

The Jump off - Another way to get off. It is not the most elegant dismount, but it is easy to execute and it can be done quickly.

pg. 38

03

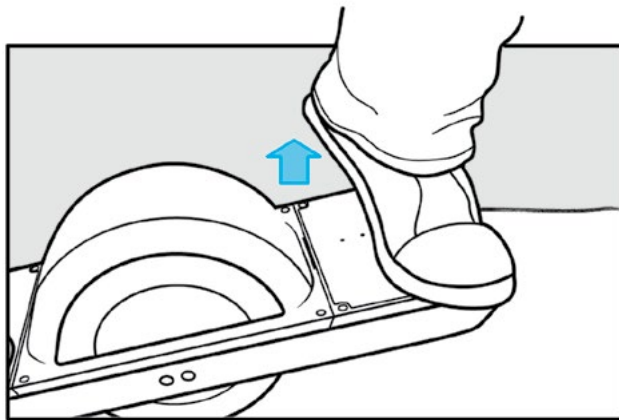

Heel Lift Dismount - A more advanced way to dismount. Dismount like a pro once you feel like you are ready.

pg. 40

Simplestop™ (Optional)


With Simplestop™ turned on, slow down to a stop by leaning backward to decelerate. Once stopped, slowly lean back. The board will travel a few inches backwards then the tail of the board will gently lower to the ground.

⚠ CAUTION: To use Simplestop™, it must be turned on in the Onewheel App on your smartphone.

⚠ WARNING: Never step off with your back foot first (the foot not on the rider-detection area). This increases risk of a fall and possible injury.


✓ TIP: To Simplestop™ smoothly shift your weight back with your hips and knees while keeping your chest over the center of the tire.

01

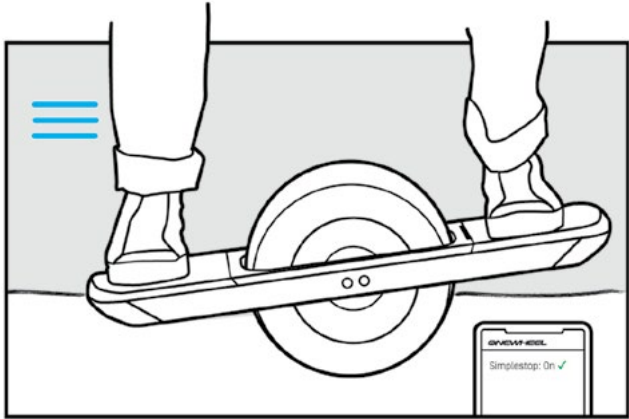


When **Simplestop™ is TURNED ON** in the settings on your Onewheel App, lean back to slow the board down to a stop.

02

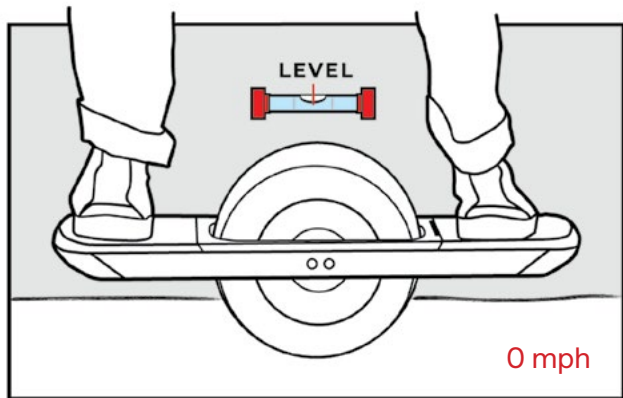

Level out. Once stopped, bring your board parallel to the ground (level).

03

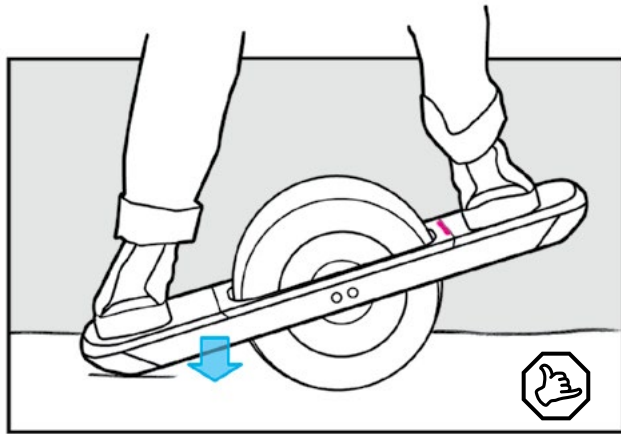

Lean back and lower. SLOWLY lean back. The board will travel backwards a couple of inches then disengage and the tail will lower to the ground.


Jump Off Method

Slow down to a standstill by leaning backward to decelerate. Once stopped, bring your board parallel to the ground (level), and jump off with both feet at the same time.

✓ **TIP:** This isn't the best way to dismount as there is a chance your board will tip over on its side and you may scratch the side rails.


⚠ **WARNING:** Never step off with your back foot first (the foot not on the rider-detection area). This increases risk of a fall and possible injury.

01

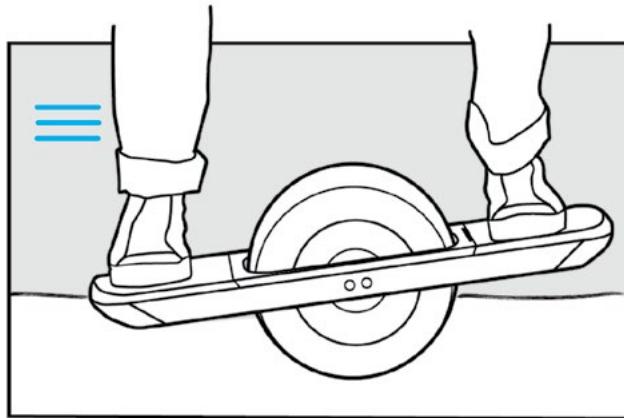


Slow to a stop. Lean back to slow your board down to a stop.

02

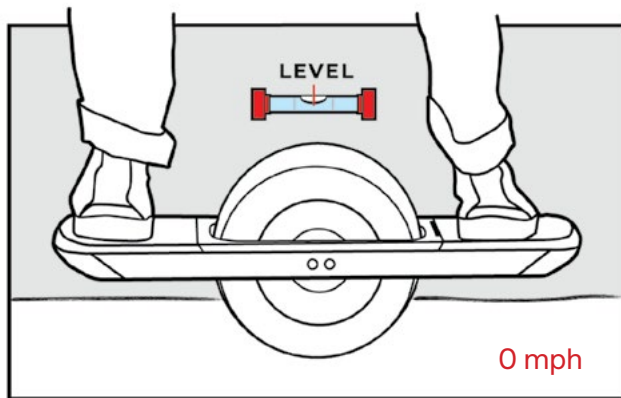

Level out. Once stopped, bring your board parallel to the ground (level).

03

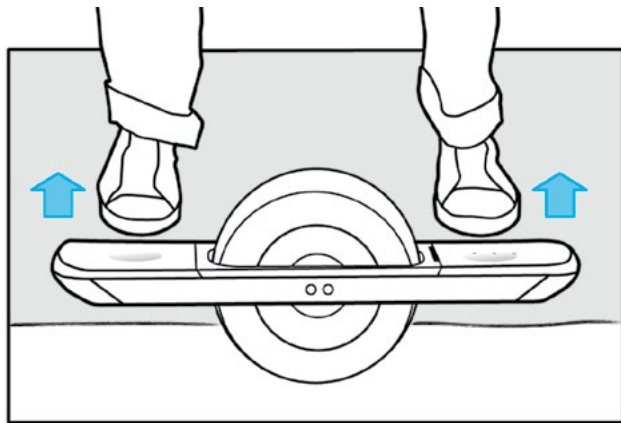

Jump off. Carefully jump off with BOTH FEET simultaneously.


Heel Lift Method

The heel lift method is a little trickier than Simplestop™, but it can be one of the most seamless ways to dismount a Onewheel.

⚠ **WARNING:** Never step off with your back foot first (the foot not on the rider-detection area). This increases risk of a fall and possible injury.


✓ **TIP:** Practice the heel lift dismount while holding onto something to keep your balance. You'll hear a small click when the motor disengages.

01

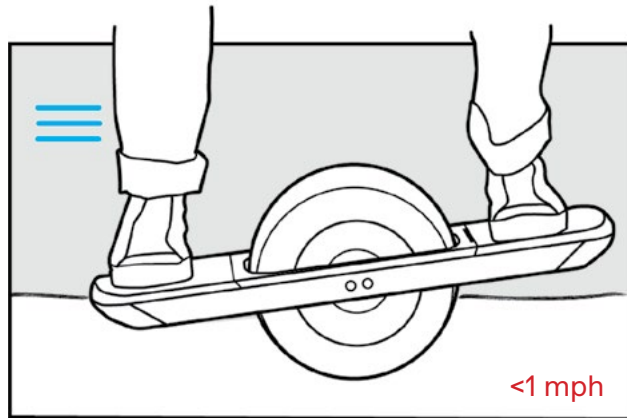


Slow to less than 1 mph. Lean back to slow your board down to less than 1 mph.

02

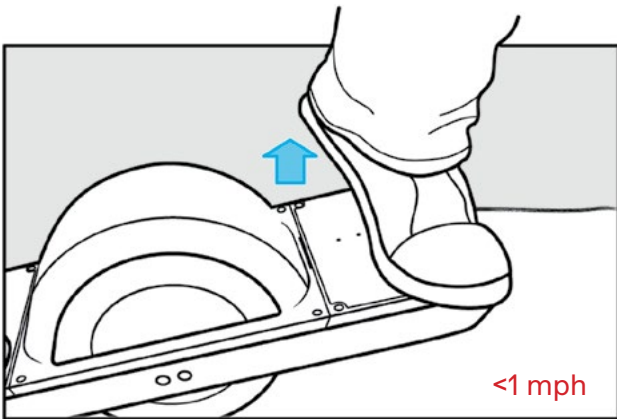

Lift your heel. Lift your front heel off one side of the sensor pad and the board will disengage letting you set the tail down.

03

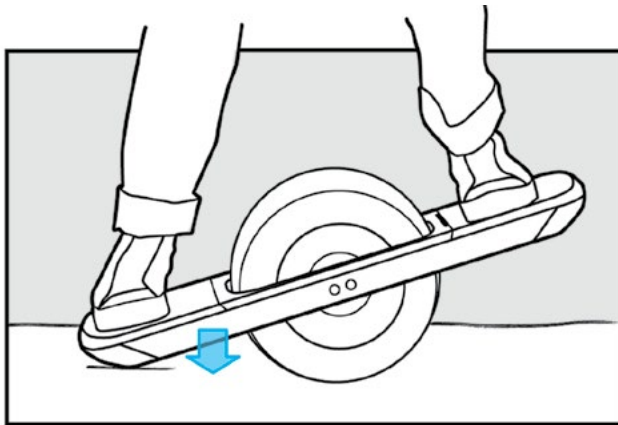

Lower the tail. Once your board is disengaged, slowly lower the tail to the ground.

Pushback

Onewheel is designed so that the wheel always tries to stay under your Center of Gravity (CG). As you lean forward to speed up or back to slow down, the wheel speeds up or slows down to stay under you. However, the torque or power needed to keep you balanced has its limits. To keep you safe, Onewheel was designed with “pushback”. Pushback is designed to alert you before you reach the limits of the board’s torque/power. The board is reading all sorts of inputs to calculate how much torque/power is available. Rider weight, tire pressure, battery percentage, terrain, wind, and grade can all impact when pushback starts. You may feel pushback before you reach the estimated top speed for your riding mode. In a pushback

situation the nose of the board will lift to let the rider know to slow down. **ALWAYS LEAN BACK TO SLOW DOWN WHEN PUSHBACK OCCURS. NEVER LEAN FORWARD INTO PUSHBACK.** Failing to heed pushback by leaning back to slow down may result in the board reaching its torque/power limits and being unable to cause the wheel to speed up to keep you balanced. This can cause nose-down contact with the ground to occur, which may result in loss of control and serious injury or death.



WARNING: Ignoring safety warnings, including pushback, may result in loss of control, serious injury, or death.

Speed/Torque Pushback

When your Onewheel is reaching its limits, pushback will occur. When that happens, lean your weight back to decrease your speed. **Never lean forward into pushback** as you may push your Onewheel beyond its limits, which could cause the board not to be able to keep you balanced, which could cause nose-down contact with the ground to occur, loss of control and serious injury or death.

 **WARNING:** Ignoring safety warnings, including pushback, may result in nose-down contact with the ground and cause loss of control, serious injury, or death.

Low-Battery Pushback

When your Onewheel battery is extremely low, it will perform a much more aggressive pushback and will become inoperable. This means a full battery charge is needed. When low-battery pushback occurs, stop your Onewheel and charge it.

 **WARNING:** Continuing to ride when low-battery pushback occurs may result in sudden shutdown or damage to your Onewheel.

Full-Battery Pushback

You may also experience pushback in other situations such as when the battery is low, the board is experiencing an error, or the battery is fully charged and continued charging is occurring because of regenerative braking. In these situations, pushback will be aggressive and will continue until you lean back and bring the board to a stop and dismount.


If your board is experiencing an error, you will observe blinking lights. Count the number of blinking lights, and consult the Owner's Manual for the next steps.

 **WARNING:** Never attempt to ride down a long or steep hill with a freshly charged Onewheel. Loss of control or damage to your Onewheel may occur.




Speed Pushback - Do this!

Pushback is an important safety feature. Ignoring or trying to push through pushback is extremely dangerous.

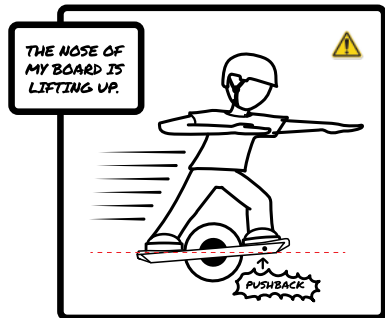


⚠ CAUTION: PUSHBACK

The nose of the board lifts up to warn the rider to slow down.

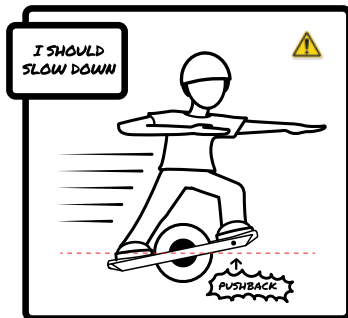


⚠ CAUTION: PUSHBACK

The rider recognizes pushback and plans to adjust.

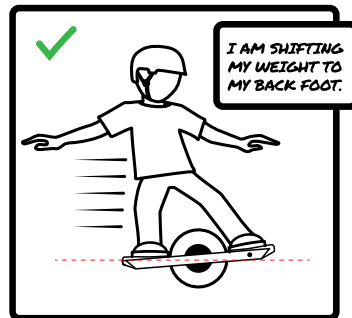


Rider shifts weight to the back foot in order to slow down.

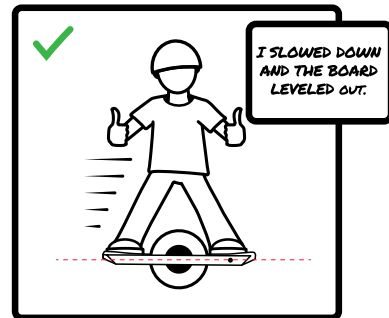


Rider has slowed down and the board returns to riding normally.

Speed Pushback - Never do this!


Pushback is an important safety feature. Ignoring or trying to push through pushback is extremely dangerous.

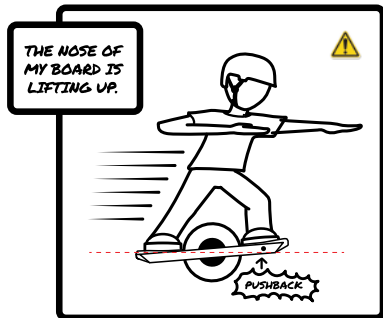


⚠ CAUTION: PUSHBACK
The nose of the board lifts up to warn the rider to slow down.

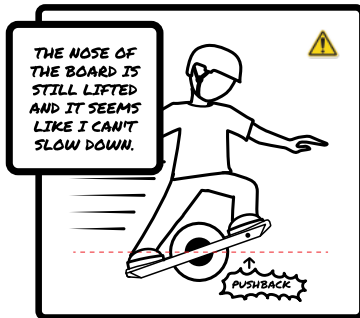

⚠ WARNING: DO NOT IGNORE PUSHBACK
If the rider's weight continues to be forward the board will continue to give the rider pushback.

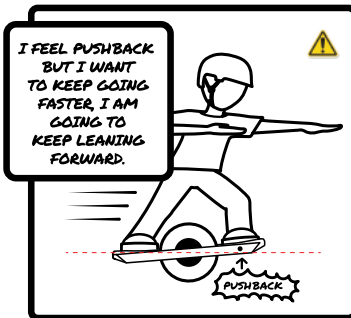


⚠ WARNING: DO NOT IGNORE PUSHBACK
Rider leans weight forward to accelerate. Board continues to give the rider pushback.

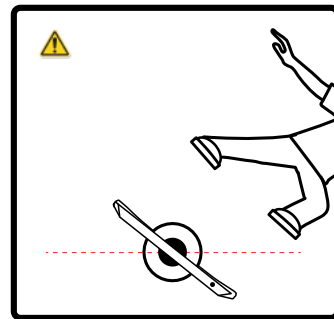


⚠ WARNING: DO NOT IGNORE PUSHBACK
Leaning weight forward into pushback may result in nose-down contact with the ground and cause loss of control, serious injury or death.

Full Battery Pushback - Do this!


Pushback is an important safety feature. Ignoring or trying to push through pushback is extremely dangerous.

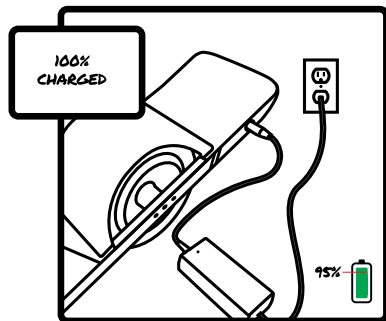


Onewheel is 100% charged.

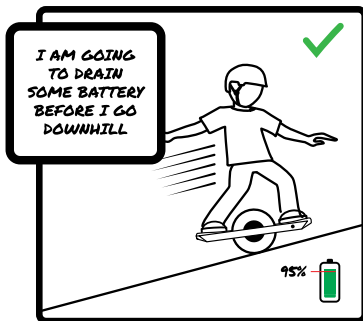

⚠ CAUTION: PUSHBACK
Ride uphill until the battery is below 95% charged.

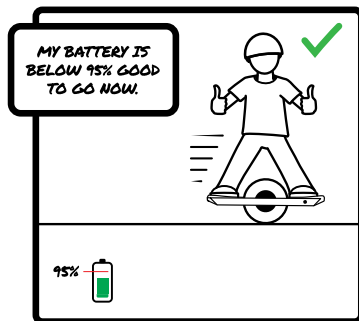


After draining the battery under a 95% charge, the battery is ready for regenerative braking.

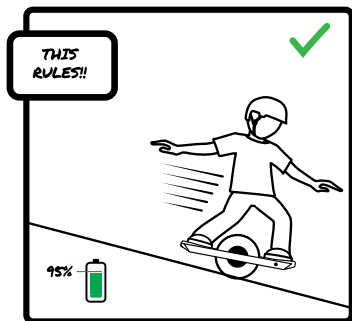


Good to go, have fun.

Full Battery Pushback - Never do this!

Pushback is an important safety feature. Ignoring or trying to push through pushback is extremely dangerous.

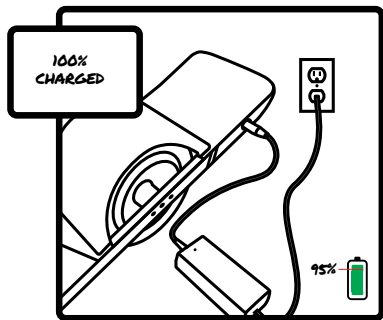


OneWheel is 100% charged.

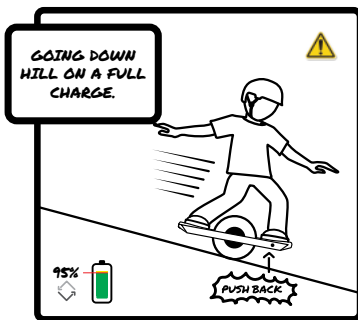


WARNING:
DO NOT IGNORE PUSHBACK

The nose of the board lifts up to warn the rider the battery can't handle any more regen braking.

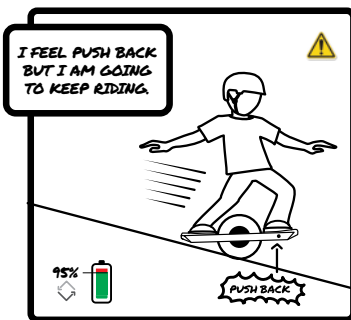

WARNING:
DO NOT IGNORE PUSHBACK

If regenerative braking continues the board will continue to pushback.

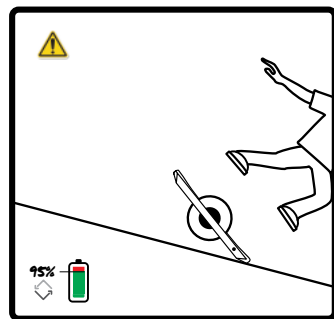

WARNING:
DO NOT IGNORE PUSHBACK

Ignoring safety warnings, including pushback, may result in loss of control, serious injury, or death.

Haptic Buzz

Haptic Buzz is an important safety feature that produces both an audible indication and a board vibration that you can feel in your feet as you approach the board's limits.

Always lean back to slow down when you hear or feel Haptic Buzz.

Haptic Buzz is not a substitute for pushback, but is a separate warning system to give additional rider feedback.

In high speed or high torque situations (such as when going up steep hills), Haptic Buzz will start out as a pulsing sound/vibration and become a solid sound/vibration if you ignore it and continue to accelerate towards the board's limits.

As soon as Haptic Buzz occurs, lean back to slow down until Haptic Buzz goes away. Never accelerate after experiencing Haptic Buzz.

In low battery or when your board is in an error state, Haptic Buzz will be experienced as a double buzz, which is a signal to slow the board to a stop and get off.

 **WARNING:** Haptic Buzz is an important safety feature. By failing to lean back to slow down when you hear or feel Haptic Buzz, you risk serious injury or death.

 **WARNING:** Always heed pushback warnings. Do not rely solely on Haptic Buzz.





MAINTAINING YOUR XR CLASSIC

03

Safety Check

Doing regular safety checks will help prolong the life of your Onewheel. We recommend that you carefully inspect your Onewheel before every ride to make sure that there are no loose, damaged, or unusually worn parts, and that the air pressure in the tire is adequate. All nuts and bolts should be tight. Most Onewheel components were designed so that they can be easily replaced if there is a problem.

If you have any questions, contact Onewheel Customer Service by creating a support ticket at onewheel.com/support.

-  **WARNING:** Before performing any minor work on your Onewheel, make sure the power button is in the “OFF” position.
-  **WARNING:** The footpads are an integral part of the safety system for the Onewheel. Never ride with damaged footpad or grip tape, and never attempt to replace grip tape. Replacement footpads are available at onewheel.com.
-  **CAUTION:** Riding a damaged board will void its warranty.

Bumpers

Bumpers are designed as wear-and-tear components and must be replaced as they wear. More details can be found at onewheel.com/support

Footpads

Inspect footpads for any cracks, punctures or tears in the grip tape, particularly in the rider-detection area. If you notice any damage, do not ride, visit onewheel.com/support and submit a request for replacement parts.


-  **CAUTION:** Never attempt to remove or replace grip tape with aftermarket grip tape.
-  **WARNING:** Riding with a damaged footpad is extremely dangerous. Replace immediately.

Tire

Check your Onewheel tire for any cuts in the tread and sidewall. Also be sure it is sufficiently inflated, up to 20 PSI. The best way to check and inflate your tire is with a quality digital gauge and compressor.

For a softer, more forgiving ride you can decrease the tire pressure as low as 17 PSI, but note that **tire pressure makes a significant difference** to your Onewheel's range, top speed, tire wear and ride quality.

If your tire is damaged or has a hole, please visit onewheel.com/support for more information.

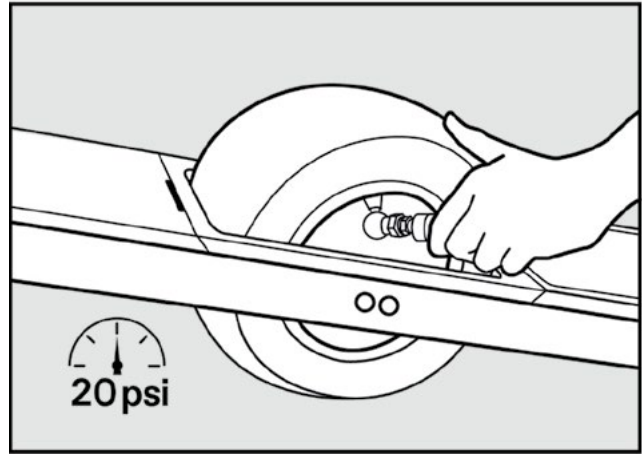

-  **WARNING:** Exceeding the maximum pressure of 30 PSI (2.0 bar) could damage your Onewheel and result in injury. It will also void your warranty.
-  **CAUTION:** Tire pressure makes a significant difference to your Onewheel range, top speed, tire wear, and ride quality.
-  **CAUTION:** Riding your Onewheel with a flat or under-inflated tire will void your warranty.
-  **CAUTION:** Pencil-type automotive tire gauges can be inaccurate. Always use a quality digital gauge

Battery


Be careful not to overcharge or undercharge your battery. The battery should be charged at least once every two months. Failure to do so may void your warranty. You must dispose lithium batteries according to local laws and regulations. (Additional battery care info p. 77)

-  **WARNING:** If the battery pack appears to be damaged or is not holding a charge, please do not use it. For further assistance, contact Onewheel Customer Support by submitting a support request at onewheel.com/support.
-  **CAUTION:** Do not expose the battery to extreme high or low temperatures. These may degrade or damage the battery pack.

Battery Charger



Use only the Onewheel GT Home Charger (FY7562500), Onewheel GT Car Charger (FY7561600D) or Onewheel GT Hypercharger (FY7565200) to charge your Onewheel.

NOTE: The FY7562500 and FY7565200 chargers can operate on 110V-240V. Depending on your country, a plug adapter may be required.

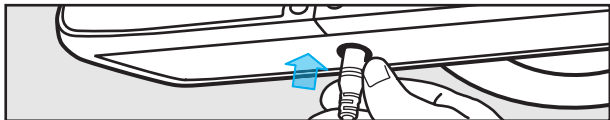

How to Charge your Battery

- 01** Connect the charger to an “AC” supply and then to the Onewheel charging port. The charger will display a red light.
- 02** A green light will appear when the battery pack is fully charged and the charger will automatically stop charging.
- 03** Disconnect the charger by grasping the charge plug at the “L” bend and pulling it out firmly.



 **CAUTION:** Only use the Onewheel GT Home Charger (FY7562500), Onewheel GT Car Charger (FY7561600D) or Onewheel GT Hypercharger (FY7565200) to charge your Onewheel XR Classic. Use of any other charger will void your warranty and may damage your Onewheel

 **CAUTION:** All electronic and drive components may only be repaired by Future Motion. Any other adjustments will void your warranty.

 **CAUTION:** Don't begin any repairs or adjustments on your Onewheel until you properly understand how to complete them. An improper adjustment or repair may result in damage to your Onewheel or a potentially serious injury. Contact Customer Support at onewheel.com/support for assistance with complex services, maintenance, and repairs.

 **TIP:** Periodically leave the charger attached to your Onewheel overnight to allow the battery pack to thoroughly balance.

90% Charge Setting

This function, which can be enabled through the Onewheel App, limits your board charging to 90% of a full charge to prevent overcharging and extend battery life.

- Reduces risk of overcharging your battery. Especially if you usually start your ride going downhill.
- By enabling “90% Charge” battery cycle life can be extended significantly.
- If this setting is not enabled, always remember to begin your ride on a flat surface or uphill with a full charge to prevent overcharging.

Note: Range per ride is reduced when using this setting.

A person with a tattooed arm is holding a blue Onewheel XR Classic electric skateboard. The skateboard is standing upright on a paved street. In the background, a silver car is parked, and palm trees are visible under a clear sky.

GETTING TO KNOW YOUR XR CLASSIC

04


Understanding the Awesome

You already know Onewheel is super fun, but it's also important to your safety, performance and enjoyment to understand how the Onewheel works. If after reading this manual you still have questions, please submit a support request at onewheel.com/support

Main Power Switch

Onewheel is powered ON and OFF by the push button switch on the side of your board. Always make sure your Onewheel is on the ground in the ready-to-ride position before switching it “ON.” Always turn your Onewheel “OFF” when charging, storing or carrying it.

- ⚠ **WARNING:** Never pick up your Onewheel when the switch is in the “ON” position since the wheel may spin, thus causing a safety hazard.
- ⚠ **CAUTION:** Do not press the rider-detection area section of the footpad while powering on your Onewheel or it will not operate.
- ✓ **TIP:** Turning on your Onewheel while it is not on the ground will cause an error.

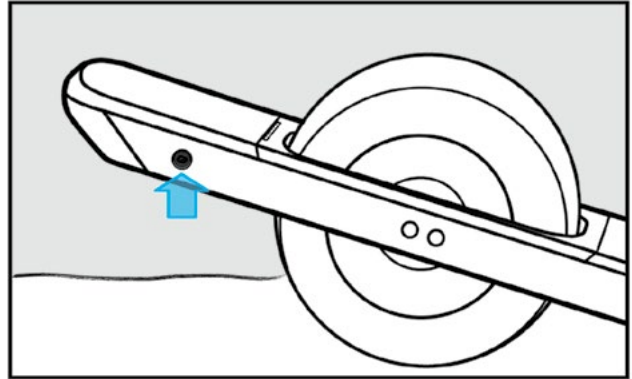

Lightbar™

LED Lightbar™ Indicator

The Lightbar™ directly behind the front footpad is the status indicator for Onewheel. The Lightbar™ will indicate battery status, error codes, and other information for your Onewheel.


Normal Operation

While powered on, the Lightbar™ will show a bar graph of your battery state of charge, starting on the left hand side. The Lightbar™ also indicates footpad contact, Simplestop™ behavior, as well as errors and warnings. While riding, the Lightbar™ fades out so you can focus on the ride ahead. Slow down and the Lightbar™ will come back on.

Charging

While charging, the Lightbar™ will pulse and act as a bar graph. When fully charged, it will turn off.

Lightbar™
indicating
a fully charged
battery

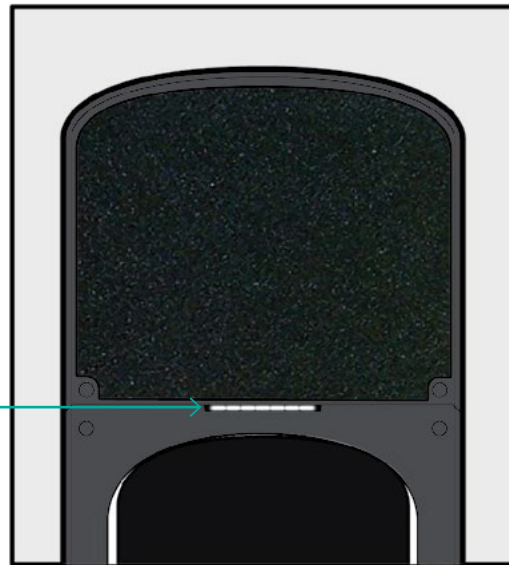

Battery Status



50% CHARGE



< 10% CHARGE

Time to conclude your ride and recharge your battery.



FULLY DEPLETED

Pushback will occur. Stop riding immediately.



CHARGING

The Lightbar™ will pulse and act as a bar graph.

 **WARNING:** Continuing to ride when low-battery pushback occurs may result in sudden shutdown or damage to your Onewheel.

Simplestop™ Behaviors

Onewheel notifies you when Simplestop™ is enabled through the Lightbar™.

Simplestop™ Startup

The Lightbar™ will blink magenta on power-up if Simplestop™ is enabled.


Simplestop™ Dismount

While performing a Simplestop™ dismount the Lightbar™ will turn magenta to indicate that Simplestop™ is engaged and that you are performing a Simplestop™ dismount.

Simplestop™
indicator
is magenta



Simplestop™ Indication

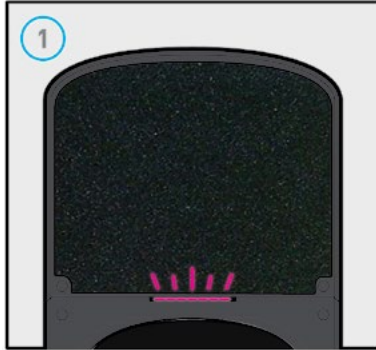

Simplestop™ Power Up

Lightbar™ blinks magenta then transitions to white.



Powered Up

Once powered up, Lightbar™ will turn to white battery bar graph indicator.



Simplestop™ Dismount

While performing a Simplestop™, Lightbar turns a steady magenta.


Footpad Sensor Behaviors

The front footpad has two zones on each side of the footpad which makes up Onewheel's rider detection area. When traveling at less than 1 mph, each side of the Lightbar™ will illuminate blue when the corresponding zone of the rider-detection area is engaged.


✓ **TIP:** Make sure you are engaging both sides of the pressure sensitive pad before riding.

⚠ **WARNING:** Never step off with your back foot first (the foot not on the rider-detection area). This increases risk of a fall and possible injury.

Indicator showing contact on both zones of the rider-detection area.

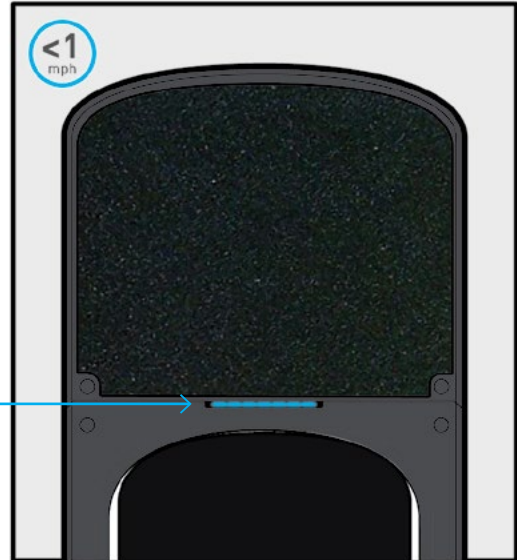


Rider-Detection Footpad Contact Indication

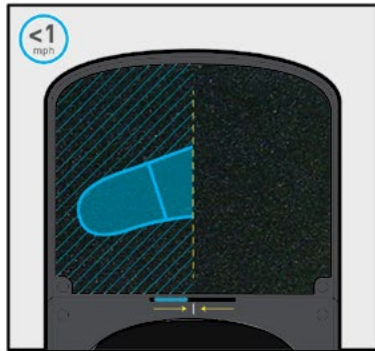


Left Zone Only

The three left LEDs of the Lightbar™ will illuminate blue.

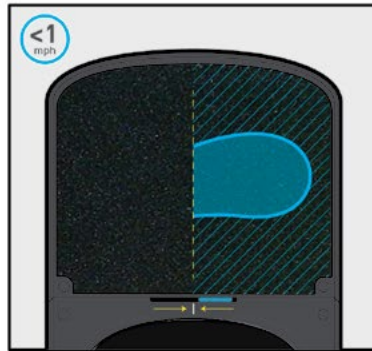

Right Zone Only

The three right LEDs of the Lightbar™ will illuminate blue.

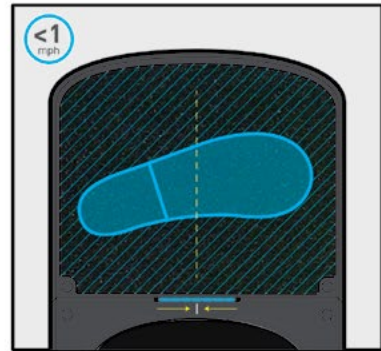

Both Zones

The entire Lightbar™ will illuminate blue.

Decoding Your Onewheel

The different blink codes, differentiated by the number of blinks in a row, may indicate different issues with your Onewheel. The entire Lightbar will blink yellow or red. If you are riding the board when an error code occurs, the board will give extreme pushback. Lean back to slow down, stop, and dismount immediately.

Always count the error code if one occurs. Sometimes you can solve the issue by charging the battery or by switching your Onewheel OFF and then ON again. If you are still experiencing problems, please contact Onewheel Customer Support by submitting a support request at onewheel.com/support

Lightbar Color	# Of Blinks	Description
-----	03	Overcharged
-----	04	Invalid power-up orientation
-----	06	Motor stall detected
-----	07	Out of range controller temperature
-----	09	Bad accelerometer
-----	10	Bad controller
-----	11	Bad hall sensors
-----	13, 14	Over-current detected
-----	15	Footpad sensor pressed on power-up
-----	16, 22	Invalid hardware
-----	17	Out of range battery temperature
-----	18	Out of range motor temperature
-----	21	Charger connected



Blinking Yellow

A minor issue that may be fixed by charging or switching your board off and on again.



Blinking Red

An issue that may require you to contact Customer Support.

MORE WAYS TO RIDE SAFELY

05



Modifying your Onewheel

Never use non-Future Motion approved accessories, or components, or otherwise modify or change the appearance or performance of Onewheel's factory components. If you do, you can increase your risk of serious injury or death, the chances of property damage, and you will void your warranty.

Authorized Official Onewheel Accessories are available at onewheel.com/accessories.

If you have specific questions, please contact Onewheel Customer Support by submitting a support request at onewheel.com/support.



WARNING: Failure to confirm the compatibility of, or to properly install, operate or maintain any component or accessory on your Onewheel can result in serious injury or death and will void your warranty.



WARNING: Changing or modifying any Onewheel can result in serious injury or death and will void your warranty.



WARNING: Using unauthorized accessories or components may void your warranty or cause serious injury or death.



WARNING: Risk of Fire and Electric Shock – No user serviceable parts.

More Ways to Ride Safely

Observe all local traffic laws and regulations regarding riding on sidewalks and trails. It is your responsibility to know and obey the laws in your riding area.

Share the road and respect the rights and safety of other motorists, pedestrians, and cyclists.

Ride defensively. Always assume that others do not see you.

 **WARNING:** Never ride your Onewheel on inclines or declines with grades steeper than 15%. This may cause the motor and battery to overheat and will also void your warranty.

 **CAUTION:** Jumping and stunt riding will void your warranty.

Look ahead, and be ready to avoid or yield to:

- Vehicles slowing or turning, entering your lane ahead of you, or coming up behind you.
- Parked cars or opening car doors
- Pedestrians
- Children or pets
- Potholes, sewer grating, railroad tracks, expansion joints, road or sidewalk construction, debris, and other obstructions that could cause you to swerve into traffic, catch your wheel, or fall.

Always Wear:

- Always wear a ASTM F1492-08, CPSC and/or CE EN1078 certified helmet, and follow the manufacturer's instructions for fit, use and care. Head injuries are some of the most serious and may be avoided with proper protection.
- Shoes that stay on your feet and will grip the board. Never ride barefoot or while wearing sandals or flip-flops.

 **WARNING:** Failure to wear a helmet when riding may result in serious injury or death.

 **TIP:** Protective eyewear to protect against the sun, as well as airborne dirt, dust, and, of course, bugs.

- Bright clothing that makes you clearly visible to drivers, riders and pedestrians.
- Avoid sharp bumps, drainage grates, and sudden surface changes.
- Avoid streets and surfaces with water, sand, gravel, dirt, leaves, and other debris. Wet weather impairs traction, braking, and visibility and may damage your board.
- Always use extra caution when riding near motor vehicles.

More Ways to Ride Safely

- Always ride in designated lanes or paths or as close to the edge of the road as possible in the direction of traffic flow or as directed by local laws.
- Never weave through traffic.
- Never carry a passenger.
- Stop at stop signs and traffic lights. Slow down and look both ways at street intersections. Be prepared to yield even if you have the right of way.
- Use approved hand signals for turning and stopping.
- Never carry anything that could obstruct your vision or that could cause you or your clothing to become entangled in the wheel.
- Never hitch a ride holding onto another moving vehicle or object.
- Never ride your Onewheel while under the influence of alcohol or drugs.
- Observe and yield the right of way.
- Do not perform racing, stunt riding, or other maneuvers that may cause loss of control.

- Before each use, perform pre-operation checks as specified by the manufacturer.
- The owner shall allow use of the unit only after clearly demonstrating its proper and safe use and confirming that the operator understands all components and aspects of operation of the unit, and is wearing a helmet. Before riding, have the operator review the safety information and riding tips available on the Onewheel app and/or Future Motion's website.
- Be thoroughly familiar with the way your Onewheel works (e.g., speed, direction, turning).
- Do not allow body parts, clothes, etc. to come into contact with moving parts, wheels, or drive train while the motor is running.
- Always do a mechanical safety check before getting on your Onewheel.
- When riding, be aware of your environment. Ride at a speed appropriate for your conditions. Increased speed equals higher risk. Ride at a speed appropriate for your abilities and the conditions.

More Ways to Ride Safely

- Do not ride at night or during times of low visibility (e.g., fog, rain, dusk, dawn).
- Follow all manufacturer's recommendations and instructions, as well as comply with all laws and ordinances.
- Components shall be maintained and repaired in accordance with manufacturer's specifications.
- Persons with heart conditions, pregnant women, persons with head/back/neck ailments, persons with mental or physical conditions that make them susceptible to injury, and persons with impaired capabilities should not operate.



General Boardcare

Daily Use

Keeping your board looking great and riding for years is pretty easy. **Just keep it dry, keep it clean, and keep it partially charged.** When you are done riding store your board in a warm, dry place.

Moist Environments

If you ride in any moist environment make sure you wipe your board off fully afterward and get all debris off and let it fully dry out before charging. The board is not waterproof, but water-resistant. Ride into moist environments at your own risk.

 **WARNING:** Prolonged exposure to UV rays, rain and the elements may damage the enclosure materials, store indoors when not in use.

Cold Weather

Riding in the winter is a blast and Onewheels can be operated in the cold. Don't let the winter cold ruin your fun. When you are done riding, don't leave your Onewheel outside or in the trunk of your car. Long exposure to extremely cold temps can adversely affect your board's health.

If you do happen to leave your Onewheel out in the cold you may have to bring your board in and warm it up (60°F / 15°C) before it is ready to ride (You may see error 17 if battery temperature is too low). It may take an hour or more to warm up to a rideable temperature.

Battery Care

Leaving the board on the charger several days in a row will not damage the board although for long term storage, it is best to store as per the long term storage instructions.

- Leaving your board on the charger for several days in a row will not damage your board.
- Do not leave your board on the charger for months.
- For long term storage make sure to charge between 40-50% and check it monthly.

Long Term Storage

Make sure to charge between 40-50% and store it in a dry place between 50°-60°F (10°-15°C). Check monthly to ensure your battery remains between 40-50%.



**40-50%
CHARGE**



**50°-60°F
(10°-15°C)**



**CHECK
MONTHLY**

XR Classic Specifications

Motor	: 750W Hypercore® hub motor
Battery	: Nickel Manganese Cobalt Oxide (NMC)
Sensors	: Solid State MEMS 6-DOF
Tire	: 11.5 × 7.0-6.0 Onewheel
Max Lean Angle	: > 30 degrees
Top Speed	: 20 mph / 32 kph
Typical Range	: 17-24 mi / 27-39 km
Dimensions	: 9.75 × 11 × 30 (in) / 248 × 276 × 762 (mm)
Weight	: 30 lb / 13.6 kg
Recharge Time	: 140 mins* (FY7562500 charger)

*Charge time estimated starting from a 10%-90% charge.

Charger Specifications

Input	: AC100-240V 50/60Hz 300VA
Output	: +75.6VDC 2.5A
Model #	: FY7562500

Operating Temperature Range	: 0C to 50C
-----------------------------	-------------

Operating Humidity Range	: 0 to 100% RH (non-condensing)
--------------------------	------------------------------------



Warranty

WARRANTY This agreement outlines the **LIMITED WARRANTY** coverage supplied by Future Motion Inc., hereinafter to be called the **COMPANY**, to the **USER**, which is defined as an individual who has purchased a Onewheel (hereinafter to be called the **PRODUCT**) in a retail establishment or via an on-line storefront as approved by the **COMPANY** or from a **COMPANY**-authorized sales representative. Purchasing any **PRODUCT** from an unauthorized reseller, including any online purchase other than directly from the **COMPANY**, will void all product warranties to the extent permitted by law.

The **COMPANY** warrants that the **PRODUCT**, other than the footpad, tire and battery pack, will be free from defects in materials and workmanship for a period of 12 months/2000 KM (1243 miles), whichever comes first. The warranty for the footpad, tire and battery pack is 6 months/1000 KM (622 miles).

If the **PRODUCT** proves defective **AND** a claim is filed during the warranty period, the **COMPANY**, at its option, will:

- 01** Repair the **PRODUCT** by means of telephone support, email support, or by providing service at no charge for parts or labor,
- 02** Replace the **PRODUCT** with a comparable **PRODUCT** which may be new or refurbished.
- 03** Refund the original amount paid for the **PRODUCT**, less a reasonable allowance for usage, upon its return.

The **COMPANY** recommends that the **USER** first utilize support materials shipped with the **PRODUCT**, **PRODUCT** diagnostics, information contained on the Internet, and email support. If unsuccessful, to obtain service under this **WARRANTY** the **USER** must notify the **COMPANY** or its authorized service.

Future Motion provides paid repairs for products that are out of warranty.

All Sales are Final.



If you wish to discard this product please contact your local authorities or dealer and ask for the correct method of disposal.

Component Warranty Duration Notes

(For defects in materials and workmanship.)

Components	Duration	Notes
XR Classic	1 year	Parts that are not listed separately
Footpad, Tire, Battery Pack	6 months	

Warranty

The following are not covered by the warranty

- Total mileage is over 2000km/1243miles.
- Damage has been caused by modification or use outside those specified in the User Manual.
- The barcode or serial number of the product has been altered or removed.
- The warranty registration is inconsistent with the product itself.
- The product has been dismantled or repaired by an unauthorized third party.
- Water damage is not covered under warranty.
- Damage or fault has been caused by other issues (excluding product design, manufacture, quality, etc.).
- Natural wear and tear that does not affect product function (including scratches and wear and tear on frame rails, footpad, tires, etc).
- Damage has been caused by accidents or human errors, such as breakage caused by dropping or rusting in a very wet environment.
- Damage has been caused by overloading the Onewheel.
- Damage has been caused by acts-of-god such as fire, flood, earthquake, freezing, etc.
- Products purchased from an unauthorized reseller, including any online purchase other than directly from Future Motion, Inc., to the extent permitted by law.

All implied warranties (including but not limited to the implied warranties of merchantability and fitness for a particular purpose) are limited in duration to the above 12 month/6 month warranty period. Future Motion Inc. further disclaims all express warranties.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you if inconsistent with controlling state law.



Declaration Of Conformity

Onewheel Classic: Self-Balancing Electric Skateboard

Product: XR Classic: Self-Balancing Electric Skateboard

Type Model: OW2-00012-XX

Manufacturer: Future Motion Inc

Manufacturer Address:

1201 Shaffer Rd.

Santa Cruz, CA 95060, USA

The undersigned hereby declares, on behalf of Future Motion Inc. of Santa Cruz, CA, that the above-referenced product, to which this declaration relates, is in conformity with the provisions of:

EU Machinery Directive 2006_42_EG

Council Directive 2014/30/EU on Electromagnetic

Compatibility:

EN 55022 Class B Limits

EN 55024

EN 60204

EN ISO 12100

The Technical Construction File is maintained at the corporate headquarters at 1201 Shaffer Rd, Santa Cruz, CA 95060, USA.

Signed _____



Kyle Doerksen. Founder, CEO



15.11.2024





1201 Shaffer Rd.
Santa Cruz, CA 95060, USA

**This manual contains
important safety information.**

XR Classic Owner's Manual V1.0 (Original Instructions)

Manuals in other languages are available
at onewheel.com/support

@onewheel

Copyright © 2024 Future Motion Inc.

Onewheel® is a trademark of Future Motion Inc.

Onewheel® is protected by numerous patents in the U.S. and world-wide.

See www.onewheel.com/patents for more information.

All sales are final.