



# **SWANN SECURITY APP**

**USER MANUAL for iOS**

English

# Table of Contents

---

## Getting Started

|                                           |   |
|-------------------------------------------|---|
| Installing the Swann Security App.....    | 4 |
| Creating your Swann Security Account..... | 5 |
| Pairing the Device.....                   | 7 |
| Scanning the QR Code.....                 | 8 |

## About the App Interface

|                                           |    |
|-------------------------------------------|----|
| App Navigation.....                       | 10 |
| App Menu.....                             | 11 |
| Live View Tab.....                        | 12 |
| Single View Mode.....                     | 13 |
| Single View Mode: Pan and Tilt Panel..... | 14 |
| Single View Mode: Tracker Panel.....      | 14 |
| Adding Camera Presets.....                | 15 |
| Playback Tab.....                         | 16 |
| Video Playback Screen.....                | 17 |
| Modes Tab.....                            | 18 |
| Configuring Modes.....                    | 19 |
| Schedules.....                            | 20 |
| Creating Schedules.....                   | 20 |
| Schedules Setup (Basic).....              | 20 |
| Add Schedules (Advanced).....             | 21 |
| Creating Additional Schedules.....        | 22 |
| Editing or Deleting Schedules.....        | 23 |
| Activity Tab.....                         | 24 |

## Device Settings

|                                    |    |
|------------------------------------|----|
| Managing your Devices.....         | 26 |
| Personal Alarm Settings.....       | 27 |
| DVR/NVR Settings.....              | 28 |
| Power Hub Settings.....            | 29 |
| Live View.....                     | 30 |
| System Settings.....               | 30 |
| Camera Status.....                 | 30 |
| Detection Zone.....                | 31 |
| Alarm.....                         | 31 |
| Advanced.....                      | 32 |
| Advanced - Network.....            | 32 |
| Wi-Fi Camera Settings.....         | 33 |
| Camera Settings.....               | 34 |
| Detection Settings.....            | 35 |
| Detection Zone.....                | 36 |
| Facial Recognition.....            | 37 |
| Advanced Settings.....             | 38 |
| Wi-Fi Sensor / Siren Settings..... | 39 |


## Appendix

|                                                   |    |
|---------------------------------------------------|----|
| Updating your Swann Security Account Profile..... | 41 |
| Setting up SwannShield (Beta).....                | 42 |
| Changing the Camera's Wi-Fi Network.....          | 43 |
| Factory Resetting the Camera.....                 | 44 |
| Finding your CCTV System Password.....            | 47 |
| FAQs: General.....                                | 48 |
| FAQs: Wi-Fi Cameras.....                          | 49 |
| Troubleshooting: Pairing Issues.....              | 51 |
| Additional Support.....                           | 53 |




# Getting Started

# INSTALLING THE SWANN SECURITY APP


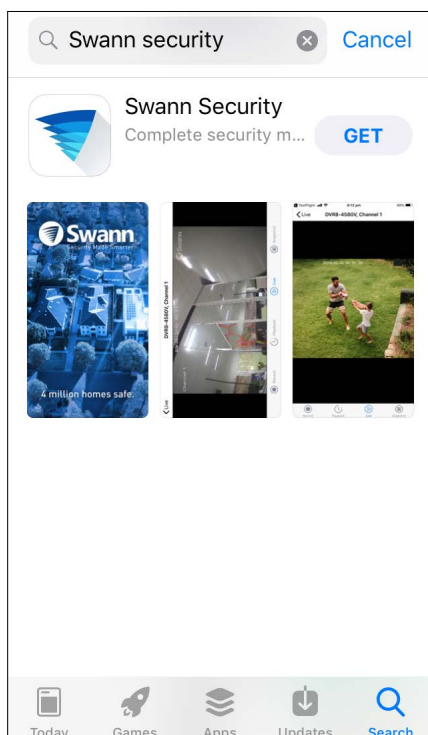


1. Search and download the latest version of the Swann Security app from the App store.

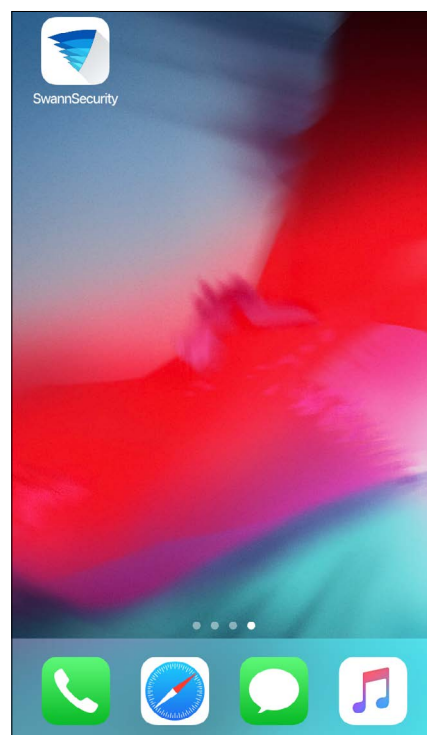



2. After the Swann Security app is installed, tap the Swann Security icon on the Home screen to launch the app.

# CREATING YOUR SWANN SECURITY ACCOUNT

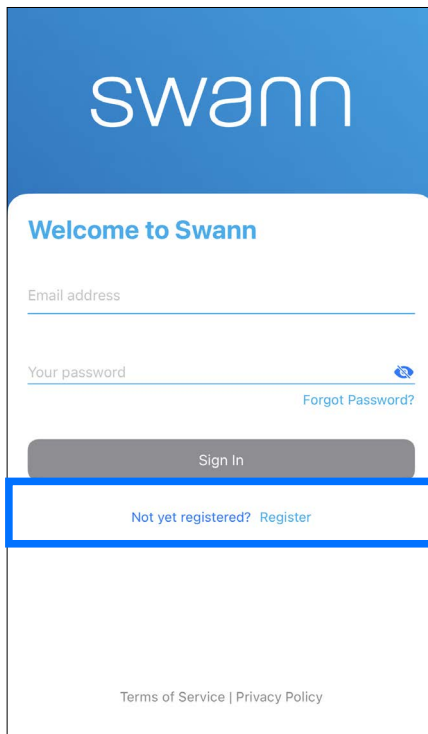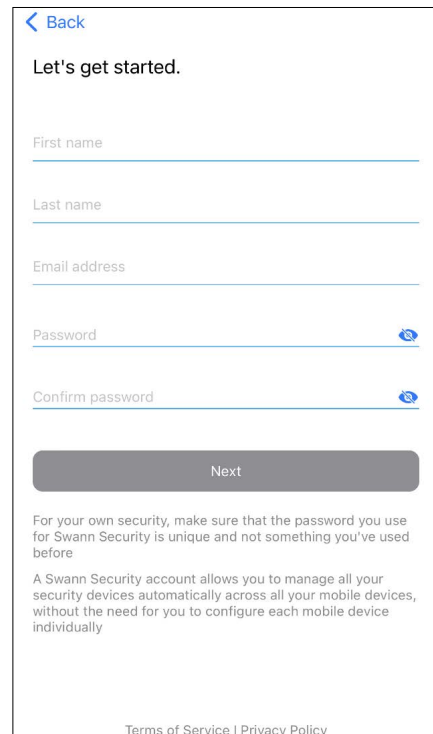The image shows the 'Welcome to Swann' screen of the app. At the top is the Swann logo. Below it, the text 'Welcome to Swann' is displayed. There are two input fields: 'Email address' and 'Your password'. A link 'Forgot Password?' is next to the password field. Below these fields are two buttons: 'Sign In' and 'Not yet registered? Register'. The 'Register' button is highlighted with a blue border. At the bottom, there is a link for 'Terms of Service | Privacy Policy'.The image shows the registration form in the Swann app. At the top, there is a 'Back' button. The text 'Let's get started.' is displayed. Below it are four input fields: 'First name', 'Last name', 'Email address', and 'Password'. The 'Password' field has a strength indicator icon. Below the password field is a 'Confirm password' field, also with a strength indicator icon. Below these fields is a 'Next' button. Below the 'Next' button, there is a paragraph of text: 'For your own security, make sure that the password you use for Swann Security is unique and not something you've used before. A Swann Security account allows you to manage all your security devices automatically across all your mobile devices, without the need for you to configure each mobile device individually.' At the bottom, there is a link for 'Terms of Service | Privacy Policy'.

1. Open the Swann Security app and tap "**Not yet registered? Register**".

2. Enter your first and last names, email address, desired password (between 8 - 32 characters), and confirm the password. Tap **Next** to continue. This helps us verify your identity if you contact us for assistance with your account or device

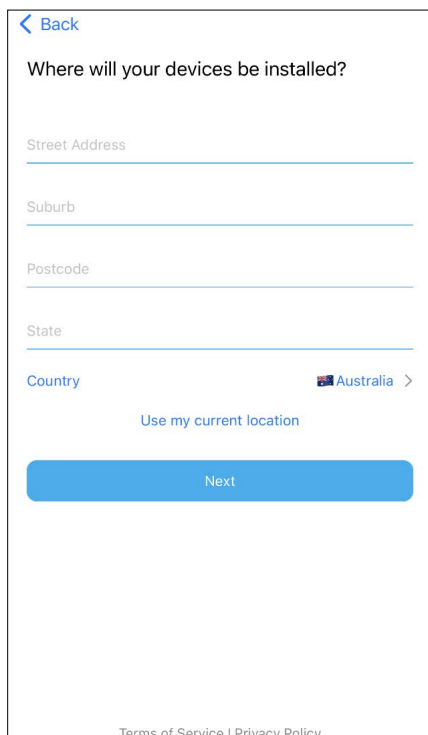
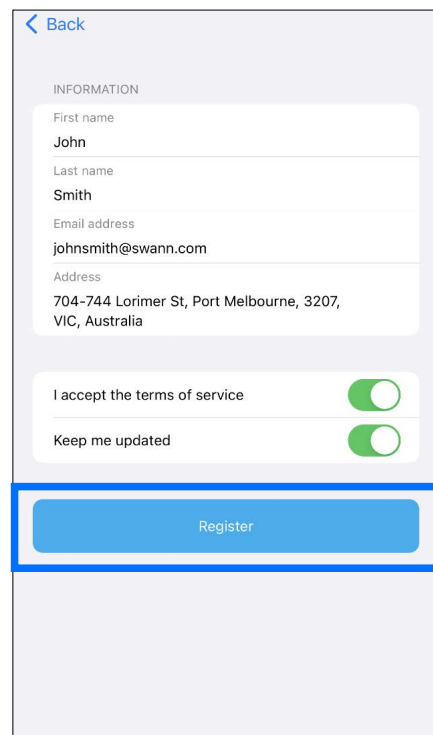
The image shows the 'Where will your devices be installed?' screen in the Swann app. At the top, there is a 'Back' button. Below it, the text 'Where will your devices be installed?' is displayed. There are five input fields: 'Street Address', 'Suburb', 'Postcode', 'State', and 'Country'. The 'Country' field has a dropdown menu showing 'Australia' with a chevron icon. Below these fields is a link 'Use my current location'. Below this link is a 'Next' button. At the bottom, there is a link for 'Terms of Service | Privacy Policy'.The image shows the registration confirmation screen in the Swann app. At the top, there is a 'Back' button. Below it, the text 'INFORMATION' is displayed. Below this text are five input fields: 'First name', 'Last name', 'Email address', 'Address', and 'Country'. The 'First name' field contains 'John', the 'Last name' field contains 'Smith', the 'Email address' field contains 'johnsmith@swann.com', and the 'Address' field contains '704-744 Lorimer St, Port Melbourne, 3207, VIC, Australia'. Below these fields are two toggle switches: 'I accept the terms of service' and 'Keep me updated'. Both toggle switches are turned on. Below these toggle switches is a 'Register' button, which is highlighted with a blue border. At the bottom, there is a link for 'Terms of Service | Privacy Policy'.

3. Enter your address or tap **Use my current location** to allow the app to automatically determine your street address based on your phone's current location. Your location allows us to personalize your experience on Swann Security and other Swann services. Tap **Next** to continue.

4. Check the details you've provided are correct, then tap the **Register** button to create your account. **Note:** If you need to correct any details, tap **Back** in the top left corner.



(Continued on the next page)

# CREATING YOUR SWANN SECURITY ACCOUNT

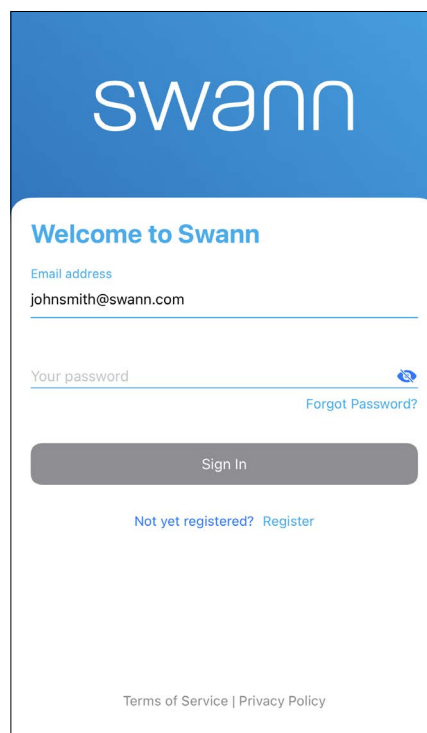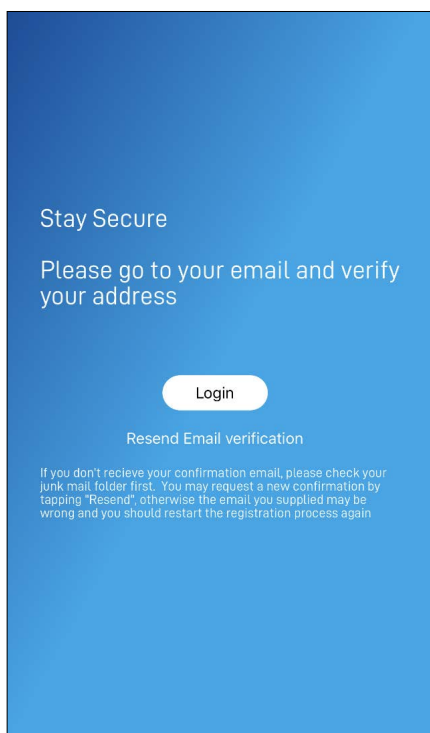


5. Go to your email inbox and open the link in the verification email from Swann Security to activate your account. If you can't find the verification email, try checking the Junk folder. If needed, you can also request a new verification email by tapping the **Resend Email Verification** option. Once verified, tap the **Login** button to return to the **Sign In** screen.

6. Enter the email address and password you used to set up your Swann Security account, then tap the **Sign In** button.

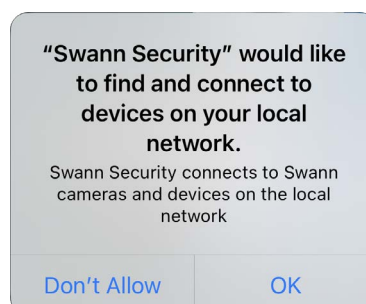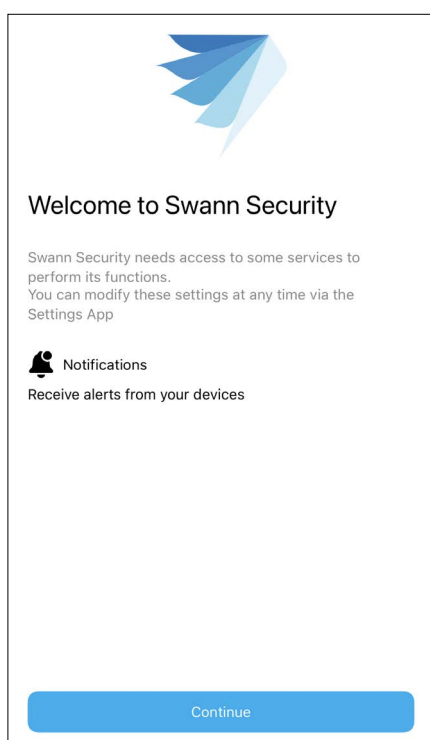


7. When signing in to the app for the first time, you will be prompted to grant permissions for the app to access services such as notifications, microphone, location, local network, and more. To make the most of the app's features, including alerts and device pairing capabilities, please grant the necessary permissions following the on-screen instructions.


# PAIRING THE DEVICE

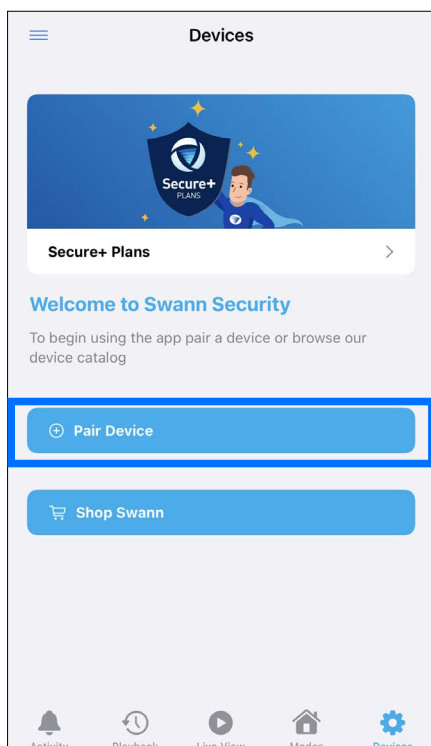


1. After signing in to the app, if your Swann Security account has no devices associated with it, simply tap the **Pair Device** button to pair your first Swann device.

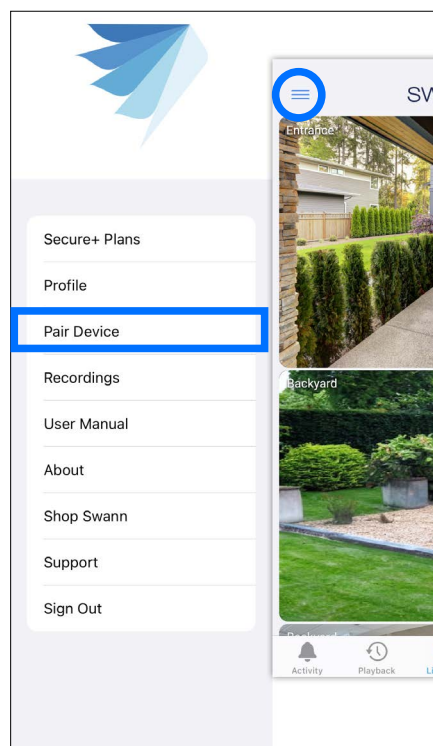


2. You can also add Swann devices to your Swann Security account via the:
  - **App menu** ≡ > **Pair Device**
  - **Devices tab** > **Pair Device**

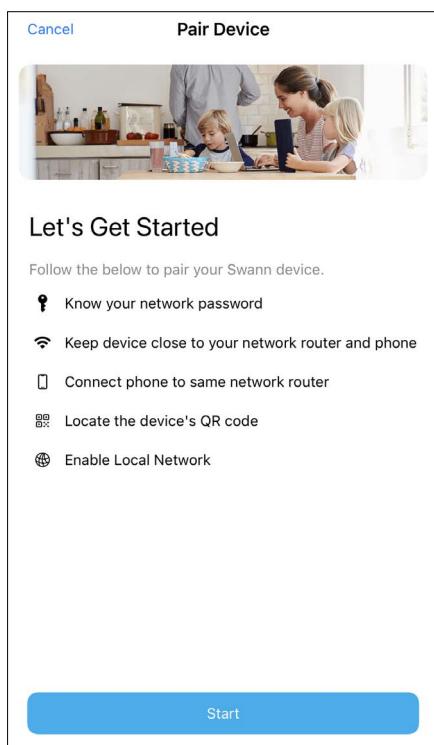


3. To pair and set up your new Swann device, simply follow the **Pair Device** on-screen instructions. Once the pairing process is complete, your device will be displayed on the **Live View** tab.  
**Note:**
  - If you need help with the device's QR code, see "[Scanning the QR Code](#)" on page 8.
  - It may take a few minutes for the entire pairing process to finish as the app will also automatically upgrade your Swann device to the latest firmware.
  - For a detailed walk-through of the pairing process, you can download the pairing guide specific to your device from: [support.swann.com](https://support.swann.com).

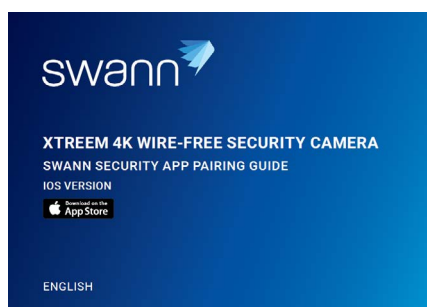

# SCANNING THE QR CODE

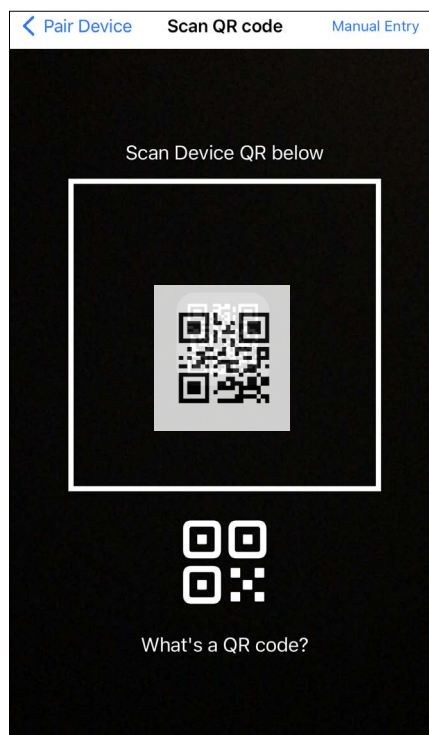

During the pairing process, you'll need to scan the device's QR code which can be generally found on the top, bottom, or back of the device. Check out the figures below for examples of where the QR code is located.

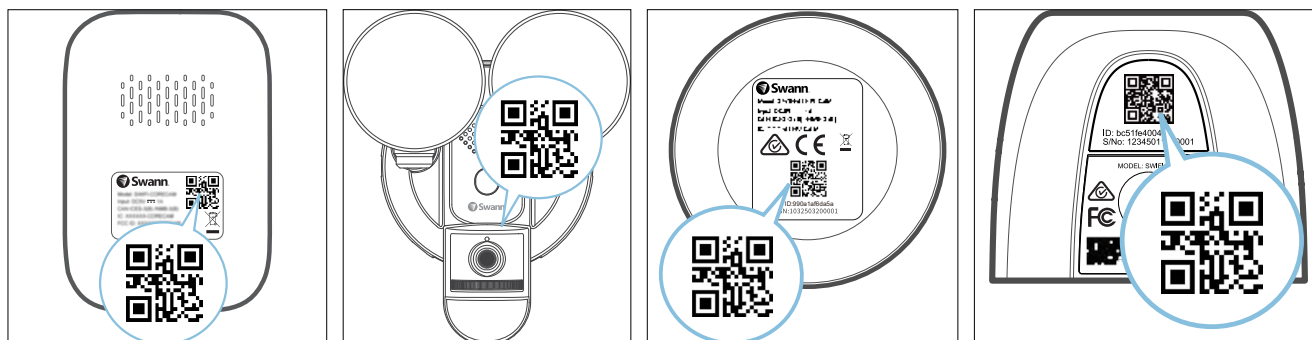


## If your phone can't scan the QR code

- You can tap **Manual Entry** at the top right of the QR code scanning screen, select the device you want to pair from the product menu, and type in the device's ID/MAC (consists of 12 alphanumeric characters) listed on a sticker located on the back, top, bottom or base of the device, as shown below:







# About the App Interface

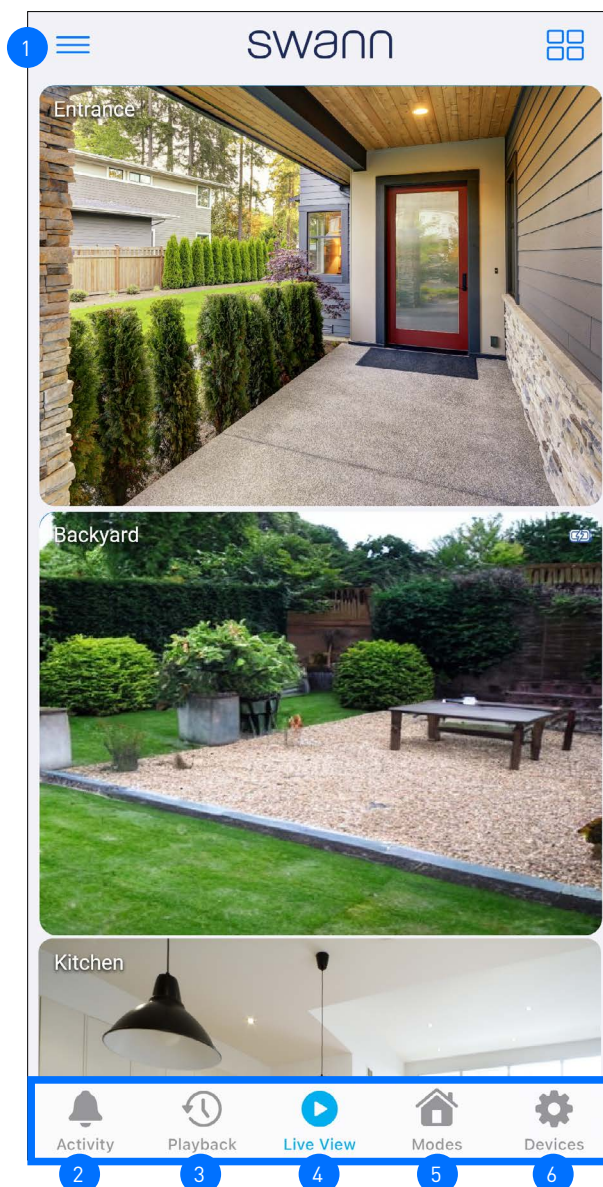


- 1 App Menu:** Tap to open the menu where you can edit your account profile, pair a new device, download the app manual, contact technical support, and more. See ["App Menu" on page 11](#).
- 2 Activity Tab:** Tap to obtain a detailed report of the current day and past week's device activities. When there is a dot <sup>30</sup> displayed next to the icon, this indicates the number of new activities since the app was last opened. Double-tap the **Activity** tab to clear the dot. You can also turn on or off the **Do Not Disturb** feature, which is helpful when you want to stop receiving push notifications from the app at certain times, such as when you're sleeping or in a meeting. For more information, see ["Activity Tab" on page 24](#).
- 3 Playback Tab:** Tap to access and playback the event recordings from your devices. For more information, see ["Playback Tab" on page 16](#).
- 4 Live View Tab:** Tap to view live video feed from all your connected devices in multi-view screen as well as in single-view where you can operate various camera functions if available. For more information, see ["Live View Tab" on page 12](#).
- 5 Modes Tab:** Displays the icon of the currently active mode. Tap to manage modes and configure the behavior of your devices for the Home, Night, and Away modes. You can also set up schedules to automate mode changes. For more information, see ["Modes Tab" on page 18](#).
- 6 Devices Tab:** Tap to view and manage settings for your devices, check device status and perform general maintenance. For more information, see ["Device Settings" on page 25](#).

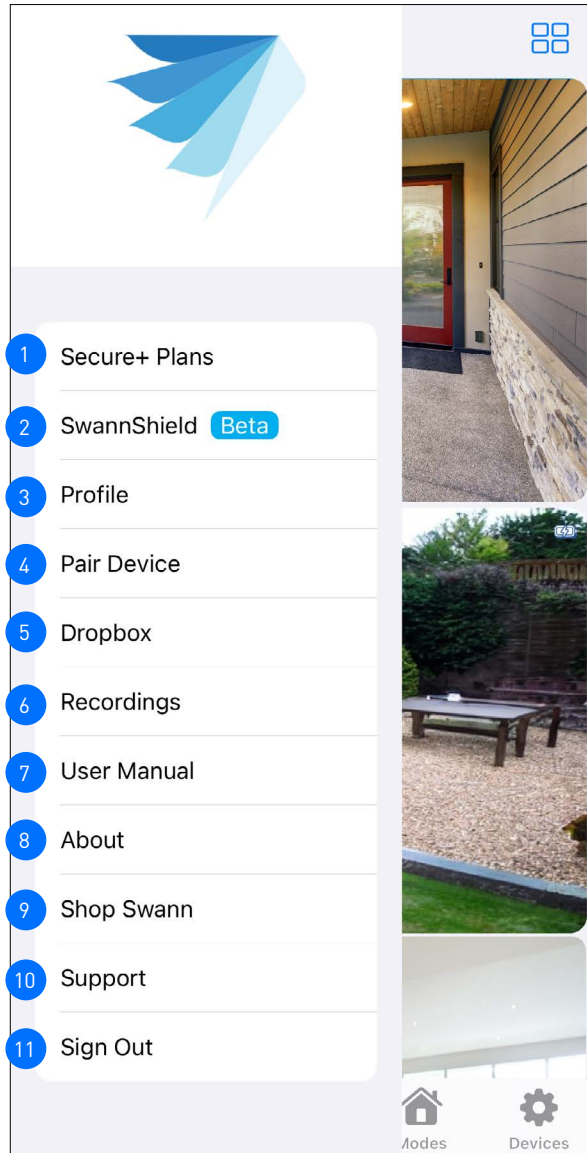

- 1 Add and manage the Secure+ plan subscriptions for your Swann Security devices.
- 2 Configure SwannShield voice assistant on the SwannBuddy4K Video Doorbell. See "[Setting up SwannShield \(Beta\)](#)" on page 44.
- 3 Manage your Swann Security account profile. You can update your profile name, account password, and address. See "[Updating your Swann Security Account Profile](#)" on page 43.
- 4 Pair a new Swann device to your Swann Security account or re-pair an existing Swann device (for example, after the device has been factory reset).
- 5 **(For DVR/NVR/Power Hub only)** Link your Dropbox account to your Swann Security account which will enable you to save recordings using Dropbox as an external cloud storage. Refer to your security system's instruction manual for more information on activating the Dropbox feature.
- 6 View and manage manual (i.e., camera live view recordings) and downloaded camera recordings.
- 7 Download the app user manual (PDF file) to your phone. For best viewing experience, open the user manual using Acrobat Reader (available on the App Store).
- 8 Display the application version information and access the terms of service and privacy policy relating to the Swann Security app.
- 9 Open the [Swann.com](http://Swann.com) website on your phone's web browser where you can find and purchase the latest products to integrate with your Swann Security system.
- 10 Obtain technical support for your Swann Security devices. See "[Additional Support](#)" on page 55.
- 11 Sign out of the Swann Security app.

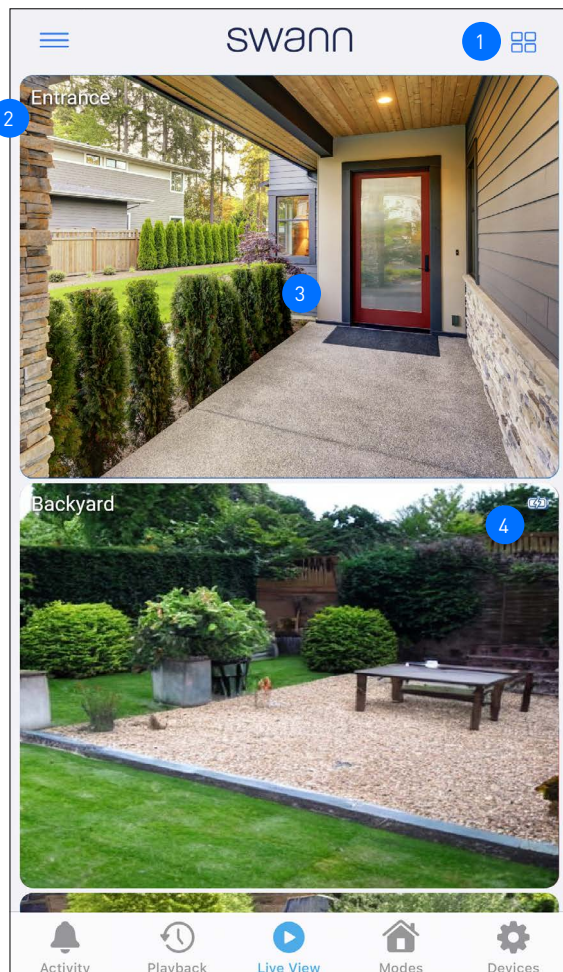


- 1 Toggle the layout of camera tiles in the viewing area between list and two-column grid views. You can customize the order of camera tiles according to your preferences via the **Devices** tab. See ["Managing your Devices" on page 26](#).
- 2 The device name. You can easily change the name of your device via the **Devices** tab. See ["Managing your Devices" on page 26](#).
- 3 Tap the tile to display live view of the selected camera in single view mode and access additional camera options (device-dependent) such as quick snapshots/clips, 2-way talk, pan and tilt controls, spotlight, siren, and more. For detailed information, see ["Single View Mode" on page 13](#).

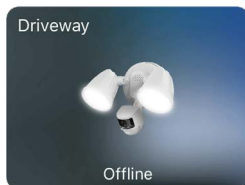

**Note:** If **"Offline"** is displayed, it may indicate that the camera has been disconnected from your network. Try turning the power to the camera off for a minute, then back on to reconnect. Additionally, check to make sure that your internet connection is working properly. You can try rebooting your Wi-Fi router to quickly resolve any network connectivity issues.

- 4 **(Battery-powered camera only)** The battery charging icon is displayed when the camera is being charged via the USB wall charger or the solar panel.
- 5 **(Personal Alarm only)** Tap the tile to display the device settings screen. For more information, see ["Personal Alarm Settings" on page 27](#).
- 6 **(Indoor Siren only)** You can manually turn the siren on/off by tapping the **Siren** tile then selecting the desired action from the context menu.


## Single View Mode

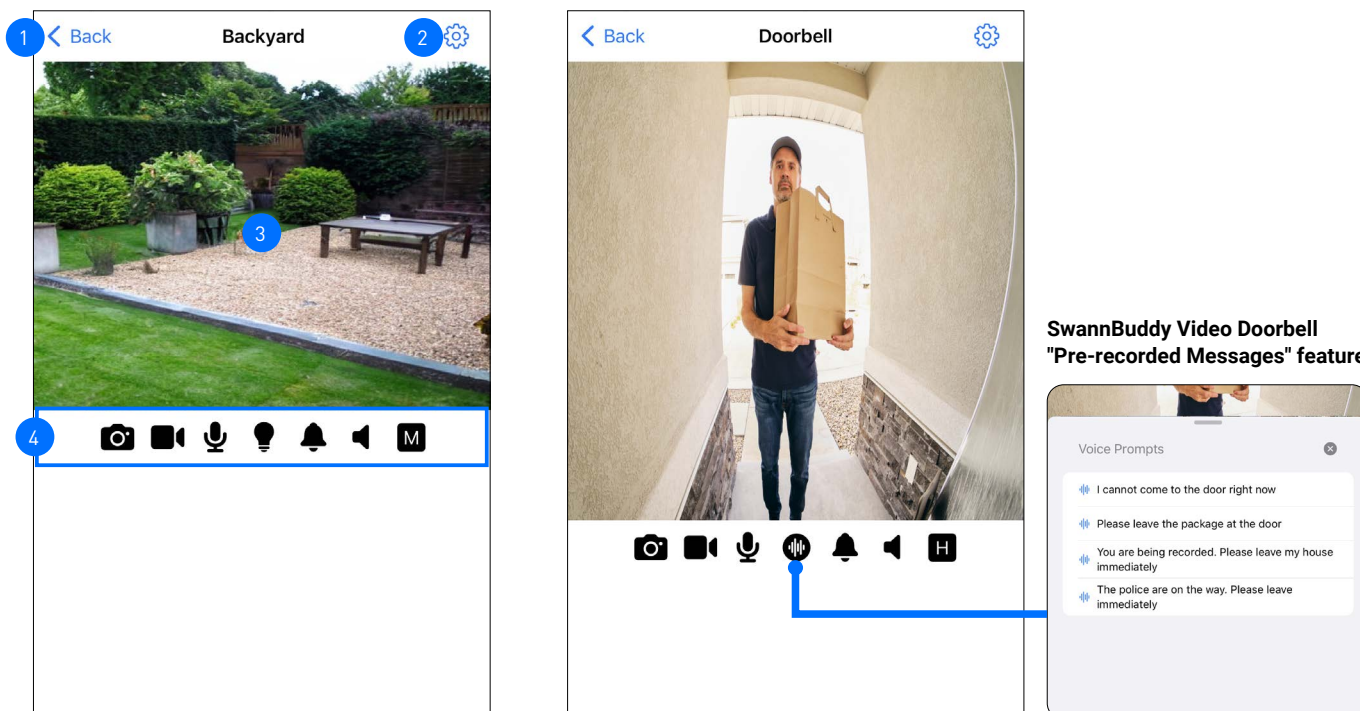

- 1 Tap to go back to multi camera view on the Live View tab.
- 2 Tap to go directly to the camera's settings overview screen.
- 3 The camera's live video window.
  - You can zoom in or out on the video. Use two fingers to pinch and spread out to zoom in on an area, and pinch back to zoom out.
  - You can turn your phone sideways to view the video window in landscape (fullscreen) mode.
- 4 The icons shown depend on the device and will only be visible if the function is supported. Refer to the table below for details on the icon functions.


| Icon | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|      | Tap to take a snapshot of the live video. The snapshot will be saved to your phone. Open your phone's <b>Photo</b> app to view the snapshot.                                                                                                                                                                                                                                                                                                                            |
|      | Tap to start recording of the live video. Icon turns red  to indicate the camera is recording. Tap again to stop the recording. Depending on the camera model, manual live recordings can be viewed in either the <b>Playback</b> tab or <b>App Menu &gt; Recordings</b> .                                                                                                                                                                                              |
|      | Activate or deactivate the camera's 2-way talk mode. Press and hold the <b>PTT</b> (Push to Talk) button to talk then release the <b>PTT</b> button to listen.                                                                                                                                                                                                                                                                                                          |
|      | Tap to turn on or off the camera's built-in floodlight/spotlight. Icon turns red  when the camera's floodlight/spotlight is on. On certain models, you can also adjust the brightness (%) by sliding left or right on the  Light Intensity <span>100%</span> .                                                                                                                                                                                                          |
|      | Tap to turn on or off the camera's red and blue enforcer lights.                                                                                                                                                                                                                                                                                                                                                                                                        |
|      | Tap to turn on or off the camera's built-in siren.                                                                                                                                                                                                                                                                                                                                                                                                                      |
|      | Tap to mute or unmute the live video.                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|      | Tap to display the list of pre-recorded messages (see above right screenshot) which you can quickly select to play as a response to visitors when you are unable to answer the door.                                                                                                                                                                                                                                                                                    |
|      | Tap to display the on-screen pan and tilt / tracker panel which will allow you to control the camera's view. See " <a href="#">Single View Mode: Pan and Tilt Panel</a> " and " <a href="#">Single View Mode: Tracker Panel</a> " on <a href="#">page 14</a> .                                                                                                                                                                                                          |
|      | Tap to select different video aspect ratios. Options available: <b>Stretched</b> (expand to fill the entire video window), <b>Original</b> (match the camera's aspect ratio), <b>16:9</b> , <b>4:3</b> .                                                                                                                                                                                                                                                                |
|      | Indicates the current live video quality. Tap to change the live video quality. The HD quality setting provides the clearest and sharpest video, but will require a higher bandwidth high-speed internet at both ends of the connection to stream video. Lower video quality settings are recommended if you have slow cellular/internet speed or limited data allowance as they use less bandwidth to stream video and may result in a smoother live video experience. |

## Single View Mode: Pan and Tilt Panel

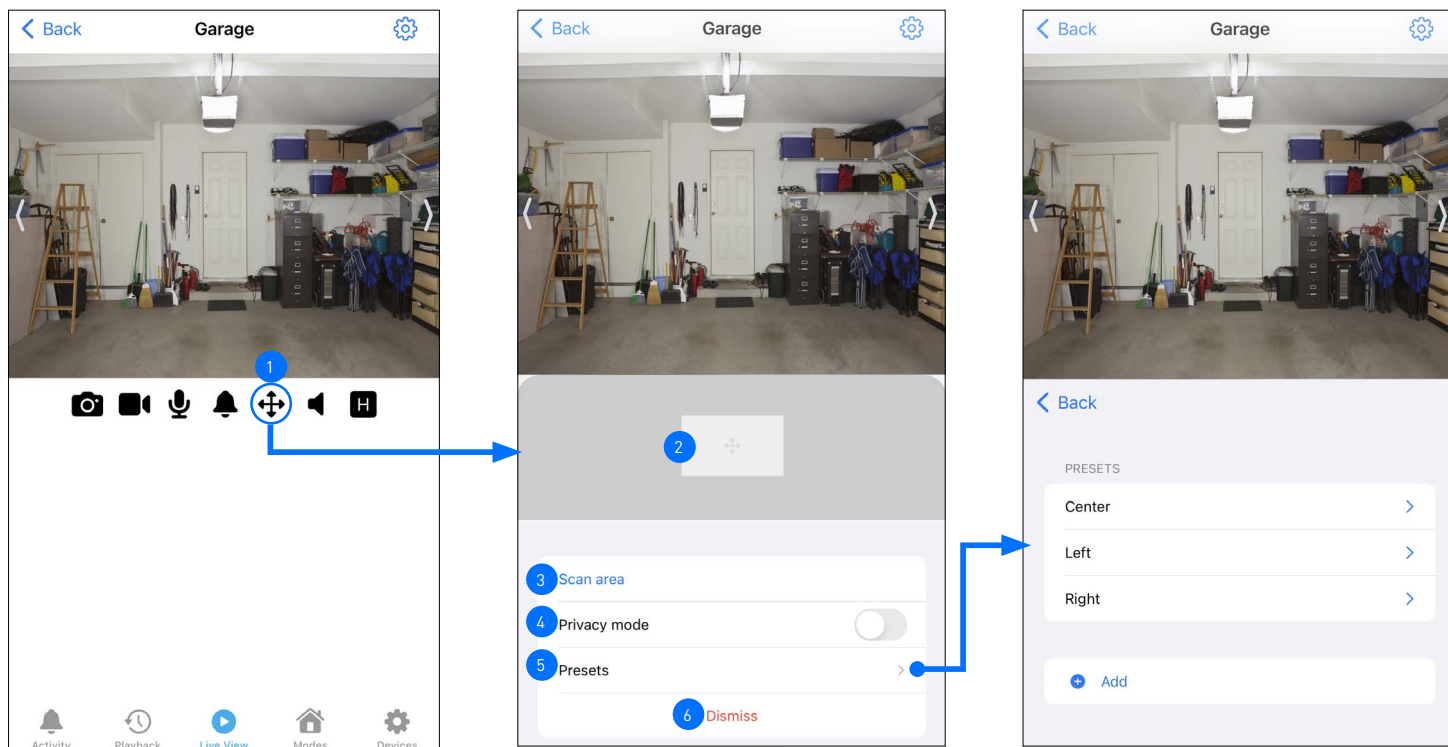


- 1 Tap to display the on-screen pan and tilt panel.
- 2 To pan and tilt the camera, drag the control box in the desired direction within the control area.  
**Note:** You can adjust the pan and tilt speeds in the camera's settings (**Pan & Tilt Settings**).
- 3 Tap to auto-rotate the camera and scan the scene once.
- 4 Tap to toggle **Privacy mode** on or off. While **Privacy mode** is enabled, the camera will temporarily disable the motion sensor, preventing any recordings from being captured to ensure privacy.
- 5 Tap to open the **Presets** menu (see above right figure). Camera presets enable you to quickly point the camera at pre-defined viewpoints. For instructions on how to add camera presets, see ["Adding Camera Presets" on page 15](#).
- 6 Tap to close the on-screen pan and tilt panel.

## Single View Mode: Tracker Panel

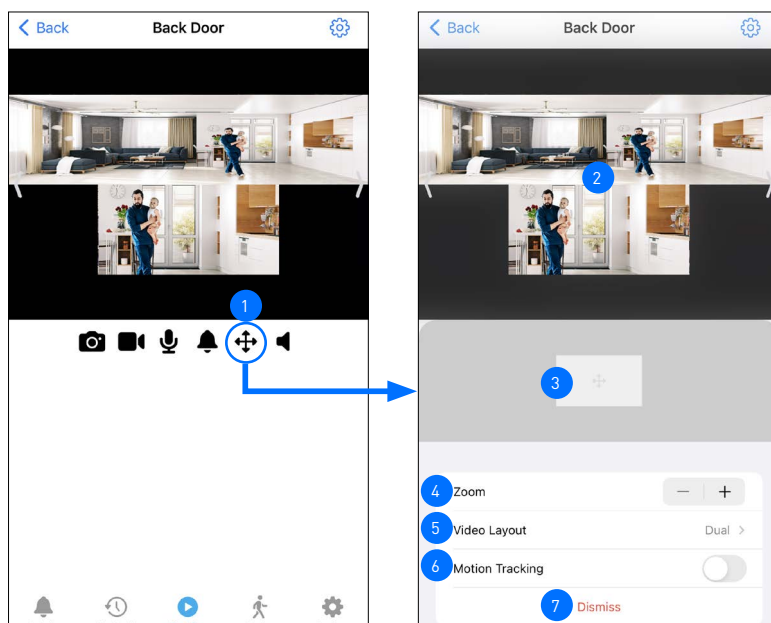


- 1 Tap to display the on-screen tracker panel.
- 2 'Dual' layout mode:  
**Top panel** - 180° Panoramic wide-angle view  
**Bottom panel** - Zoom view
- 3 Drag the control box in the desired direction to manually focus the zoom view on a particular zone.
- 4 You can further zoom in (+) and out (–) on the zoom video panel.
- 5 You can select the layout of the camera live view: **Dual (both Wide and Zoom views), Wide, Zoom**
- 6 You can toggle **Motion Tracking** on or off. While **Motion Tracking** is enabled, the Zoom view will automatically track the movement of detected person.
- 7 Tap to close the on-screen tracker panel.


## Adding Camera Presets

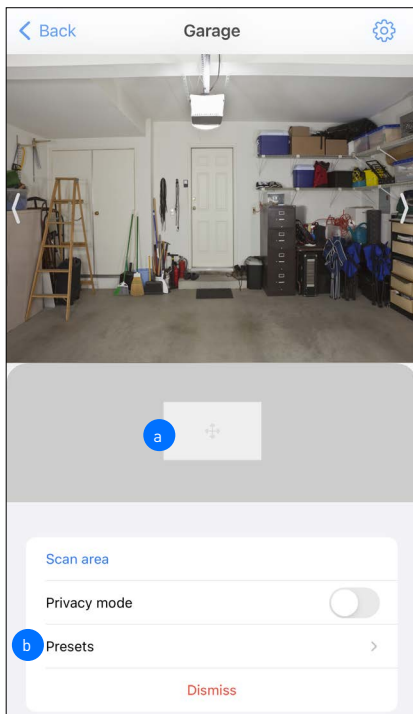


1. From the Pan and Tilt panel, using the **a** control box, rotate the camera view to the desired preset position, then tap **b** Presets.

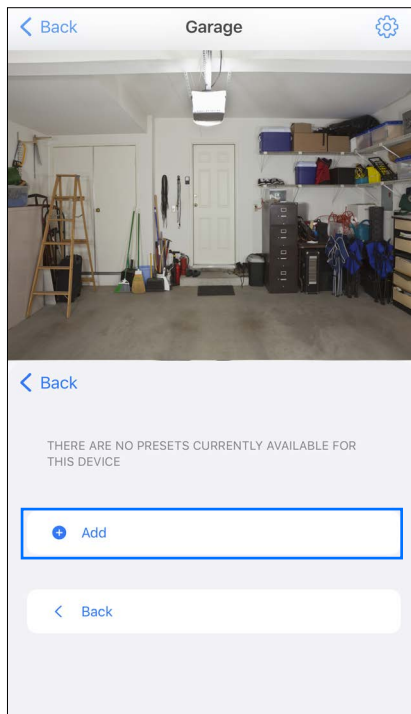


2. Tap **+ Add**.

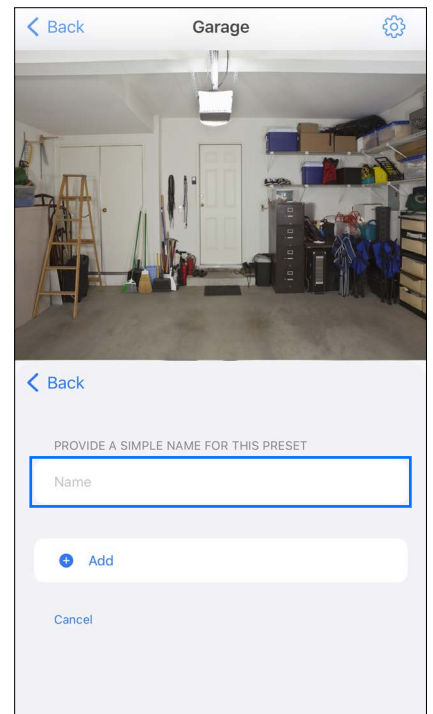


3. Tap on the **Name** field.

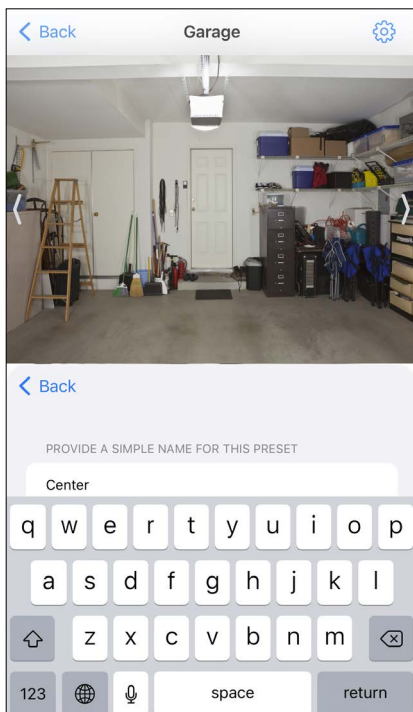

4. Enter the name for the camera preset, for example 'Center', then press "return" on the onscreen keyboard.


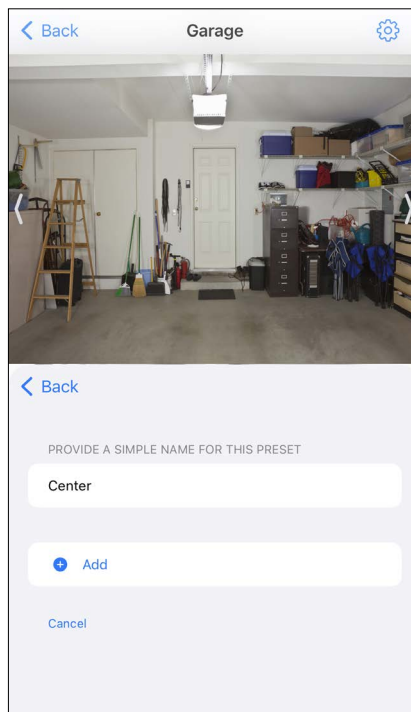


5. Tap **+ Add** to save the preset.

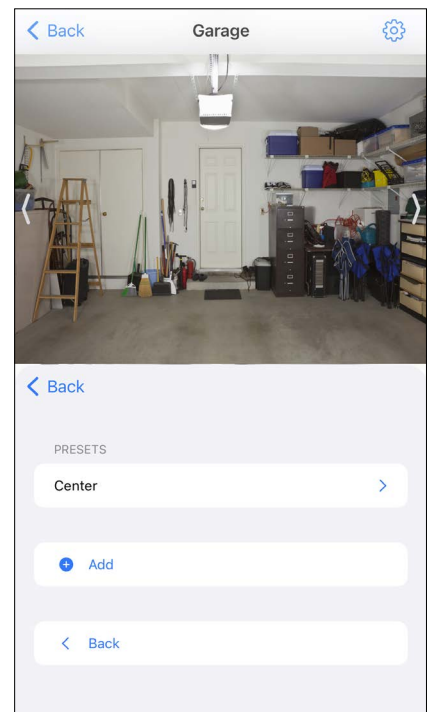

6. The newly added preset appears in the **Presets** section. To create more camera presets, tap **Back** and repeat steps 1 - 5. You can add up to 5 preset positions for the camera. To "Call" or "Delete" an existing preset, tap the preset and select the desired action from the context menu.

# PLAYBACK TAB

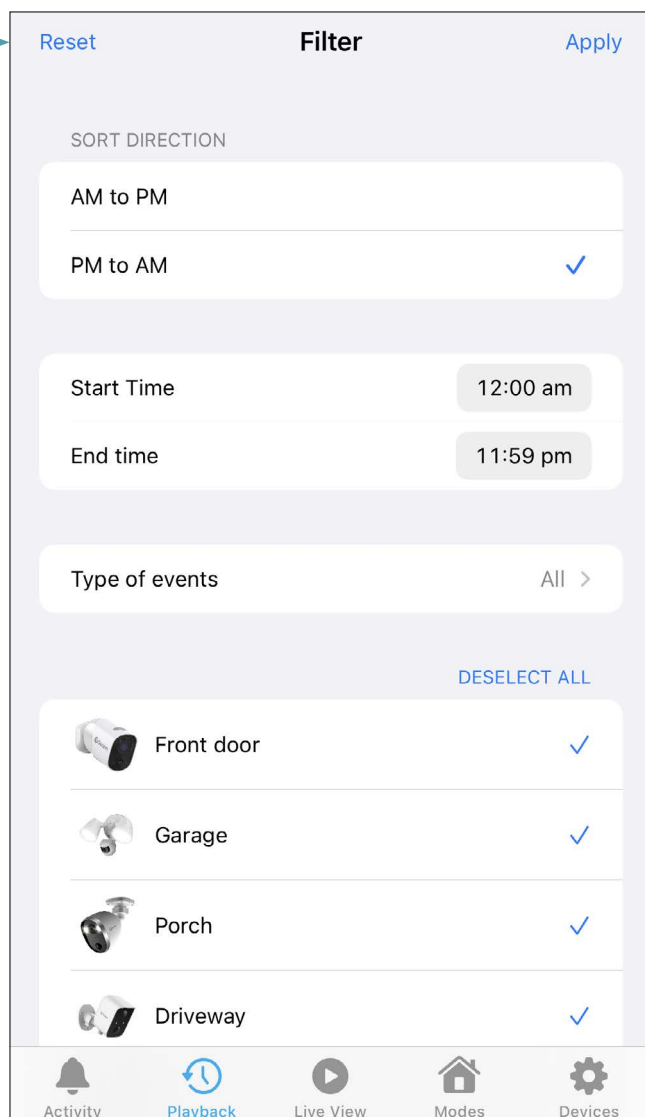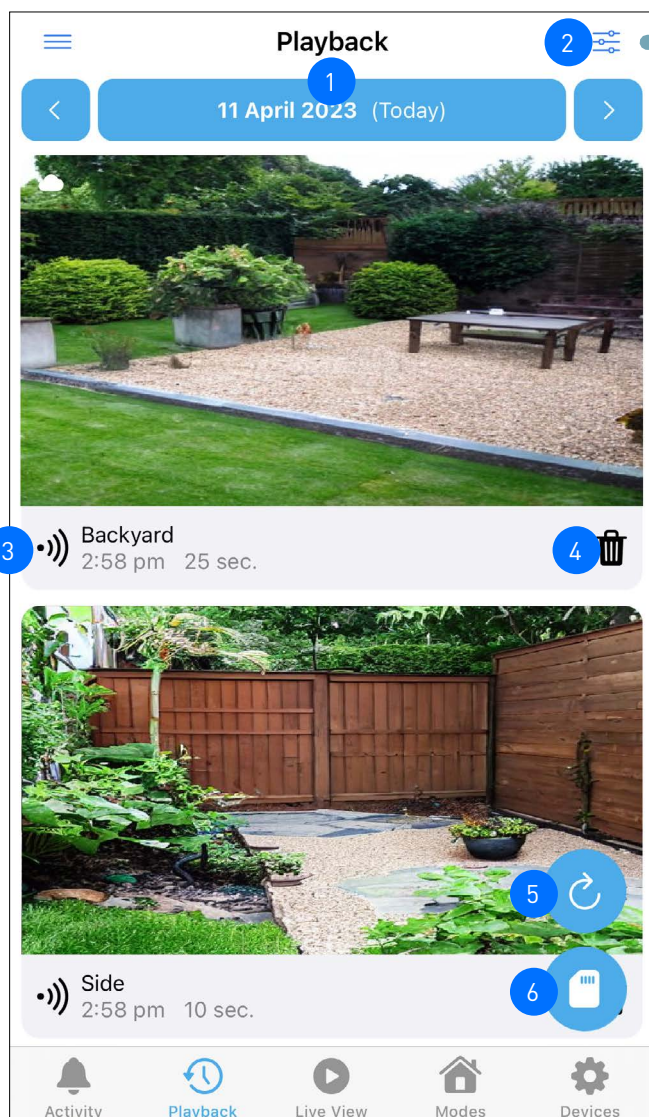

1 By default, the list of today's camera recordings is displayed. Depending on the paired devices, this may include cloud recordings, live recordings, and recordings stored on the DVR/NVR.

**For SWIFI camera models (e.g., SWIFI-SE2KPT, SE2KIC, SE2KBC) that store recordings locally only on a microSD card, please refer to 6.**

You can view camera recordings from a different date, simply tap here and select the desired date using the calendar or tap the left or right arrow to view the previous or next day's recordings.

## Note:

Cloud recordings will be displayed on the Playback tab for the length of time determined by the Secure+ cloud plan associated with the camera. You can find out more about the Secure+ cloud plans available for your cameras and as well as subscribe to a plan at any time, simply tap **Menu** > **Secure+ Plans**.

2 Tap to access the playback filter options, as shown above right. You can sort recordings in chronological (AM-PM) or reverse chronological (PM-AM) order, and filter recordings by device type, event type, and time range.

3 The camera name (or channel number), the start time, and the length of the recording. Please note that thumbnails are not available for DVR/NVR recordings. To watch the recording, simply tap on the video thumbnail. See "[Video Playback Screen](#)" on page 17.


4 You can delete the recording, which will remove it from the video history and cloud storage. Make sure to download it first if you want to keep it.

**Note:** The Delete icon will not appear for DVR/NVR camera recordings.

5 Tap to refresh the screen and check for new camera recordings.

6 Tap to access recordings stored on your camera's local microSD memory card, if available.

## Video Playback Screen

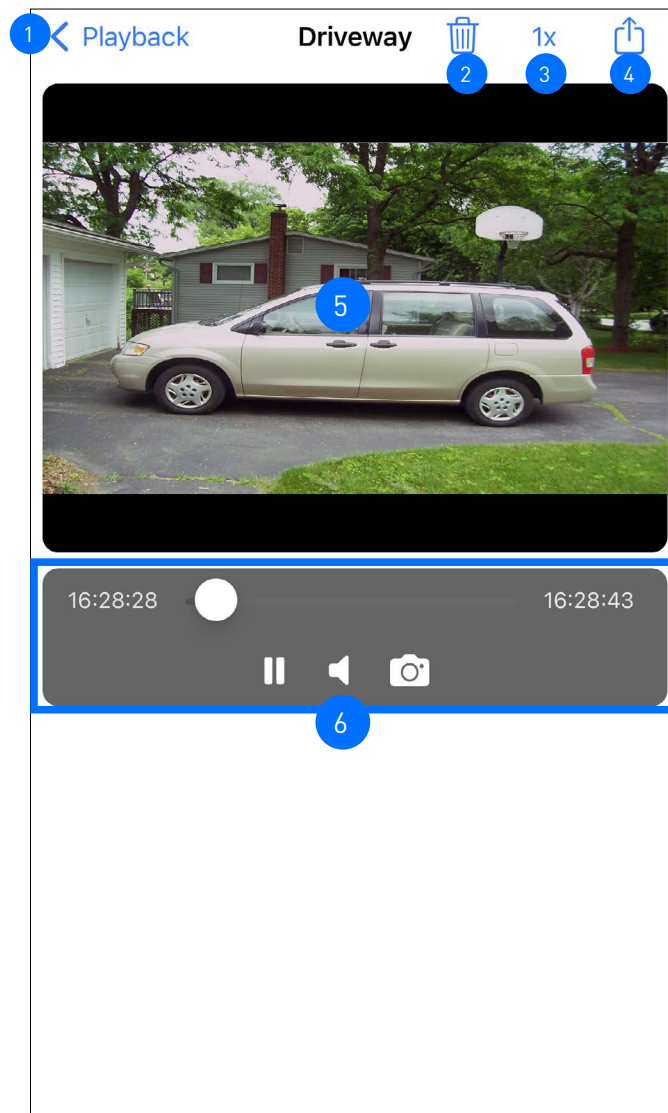

- 1 Tap to go back to the Playback tab.
- 2 Tap to delete the recording, which will remove it from the video history and cloud storage. Make sure to download it first if you want to keep it.  
**Note:** The  Delete icon will not appear for DVR/NVR recordings.
- 3 Tap to select a different playback speed.
- 4 Tap to share the video via popular email/messaging apps or save the video to your phone's cloud or local storage.
- 5 You can turn your phone sideways to view the video window in landscape (fullscreen) mode.
- 6 Video playback controls. You can pause/play, fast-forward/rewind (with the seekbar), mute the audio, and capture a snapshot. For DVR/NVR recordings,  also appears to enable you to change the video quality of the recording between **SD (substream)** and **HD (mainstream)**.

## MODES TAB

The Modes feature provides you with the ability to monitor your home in three modes: Home, Night and Away. You can customize the **motion detection sensitivity** settings and actions of your Swann devices according to these scenarios.


For example,

**Home:** When you're home and awake.

**Night:** When you're home and heading to bed or asleep.

**Away:** When you're at work or out.


For your convenience, each mode comes pre-configured with default "typical use" settings, but they are fully configurable to suit your daily security needs. You can easily switch between modes with a simple button press on this screen.

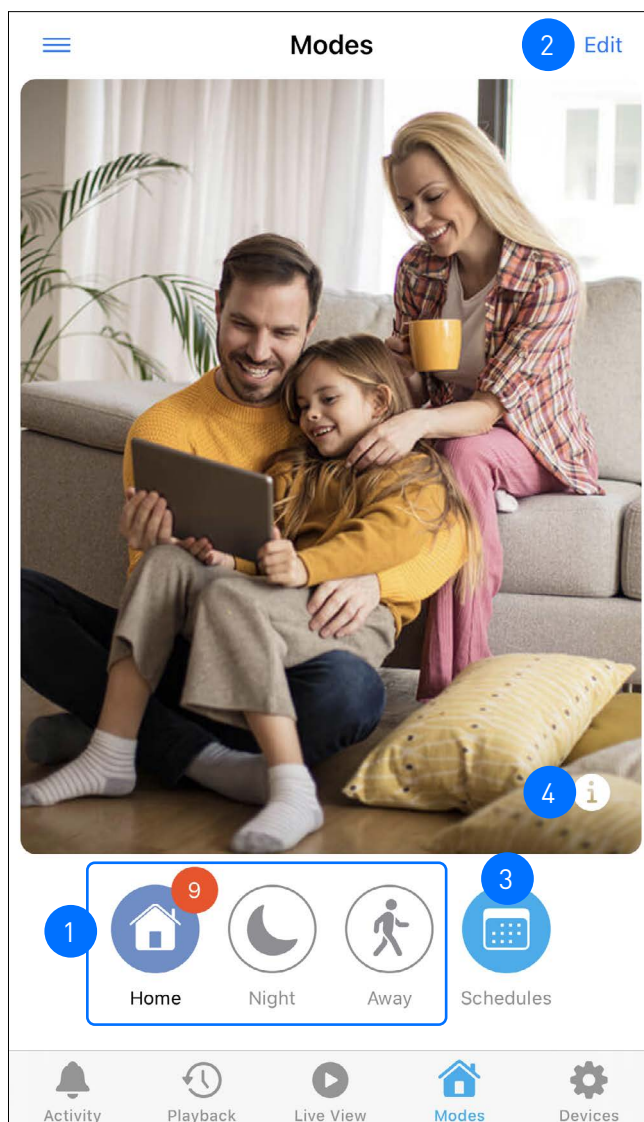


- 1 Modes panel. The highlighted icon with a red bubble indicates the current active mode and number of devices. You can change the mode by tapping the icon of the mode you'd like to change to. Apply different modes (Home/ Night/Away) to suit different situations and customize how devices respond and alert you to events such as motion detection, sound detection, doorbell presses, etc. (device-dependent).  
**Note:** You can also use the Modes panel to manually override the scheduled mode that is currently activated.
- 2 Tap to configure the modes. For each mode (Home, Night, Away), you can independently customize each individual camera's detection settings (device-dependent) and whether to receive push notifications. To learn more, see "[Configuring Modes](#)" on page 19.
- 3 Tap to display the **Schedules** screen where you can create schedules to automate mode changes for your devices. For more information, see "[Schedules](#)" on page 20.
- 4 Tap to display a popup window providing a general introduction to the Modes feature.

## Configuring Modes


1. From the **Modes** tab, tap **Edit** in the top right corner.

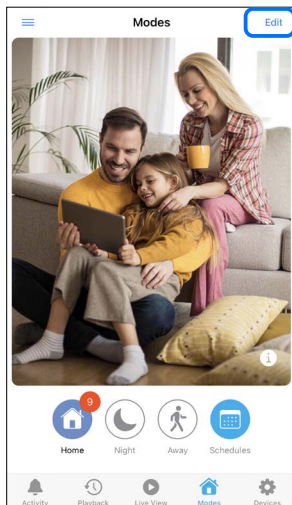


2. Select the mode that you want to configure by tapping on the icon.

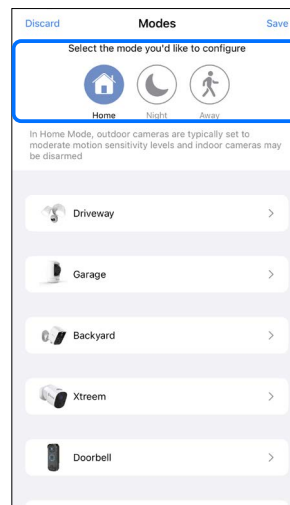

3. Tap the > of the device to reveal the available settings.

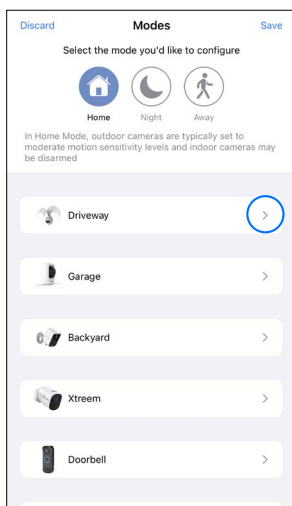

4. The settings that can be configured depend on the capabilities of the paired device. You may adjust the Motion Detection sensitivity, Sound Detection sensitivity choose to enable or disable push notifications for various detection types, and, if an add-on siren is paired, choose whether to sound it when a motion event occurs.

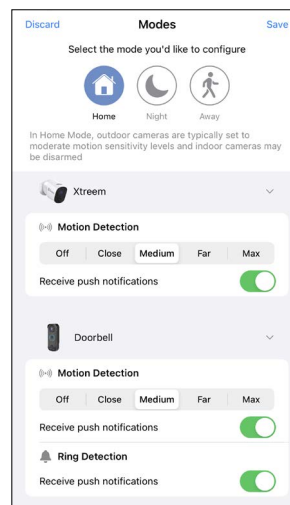

5. Tap **Save** in the top right corner of the screen to save any changes you have made. The changes will take effect immediately.

## Schedules



Your Swann Security devices can change modes automatically at various times of the day or days of the week using **Schedules**. For example, you can use schedules to set your devices in **Night** mode every day around bedtime, **Away** mode on the weekdays just before everyone leaves for work or school, or **Home** mode when you are back at home relaxing after work and during the weekends. Simply create a schedule whenever you want a mode change to occur and as many as needed—it's a convenient and flexible way to control your Swann Security devices.

## Creating Schedules


There are two ways you can choose to create schedules. You can quickly create a set of schedules based on your typical weekday and weekend routines via **Schedules Setup (Basic)**, or you can choose **Add Schedule (Advanced)** to create individual custom schedules.

### • Schedules Setup (Basic)


1. From the **Modes** tab, tap .
2. Tap the  **Schedules Setup (Basic)** button.

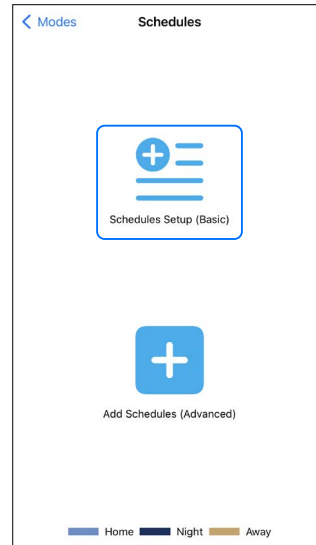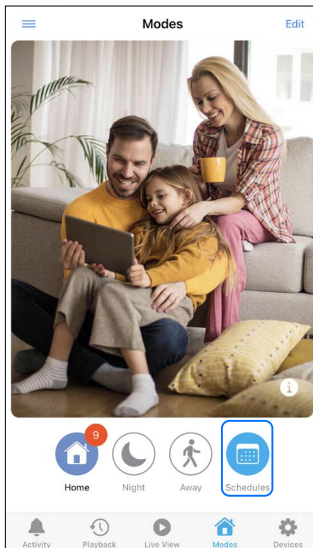

3. Set the start times for mode schedules on weekdays (Monday to Friday) and weekends (Saturday and Sunday) based on your typical morning wake-up time, departure time from home, return time to home, and bedtime, as shown below.
4. Once finished, tap the **Apply Schedules** button on the bottom of the screen. The **Schedules** screen displays a color-coded overview of your weekly modes schedule, as shown below.

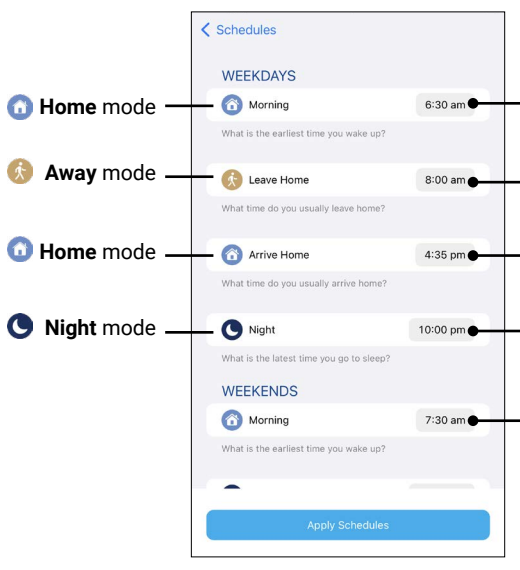

Tap to set the time the schedule will start

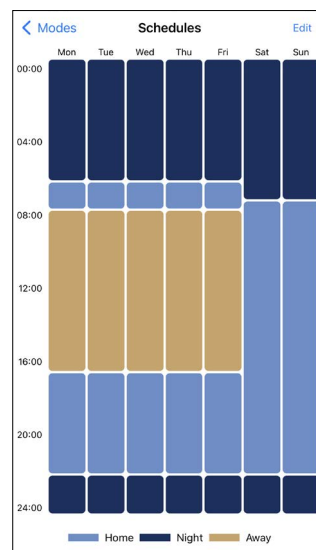


5. You can make changes to your schedules or create additional schedules by tapping **Edit** in the top right corner of the screen. For more information, see:
  - ["Creating Additional Schedules" on page 22](#)
  - ["Editing or Deleting Schedules" on page 23](#)


# MODES TAB

- **Add Schedules (Advanced)**


1. From the **Modes** tab, tap .

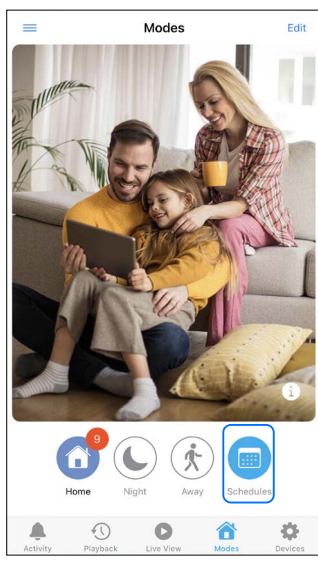


2. Tap the  **Add Schedules (Advanced)** button.

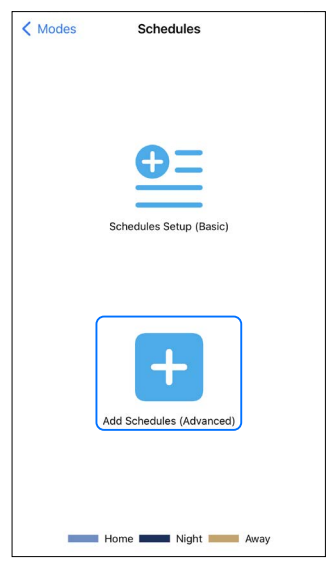

3. Set the mode, the start time, and the day(s) for the schedule you are creating, as shown below.

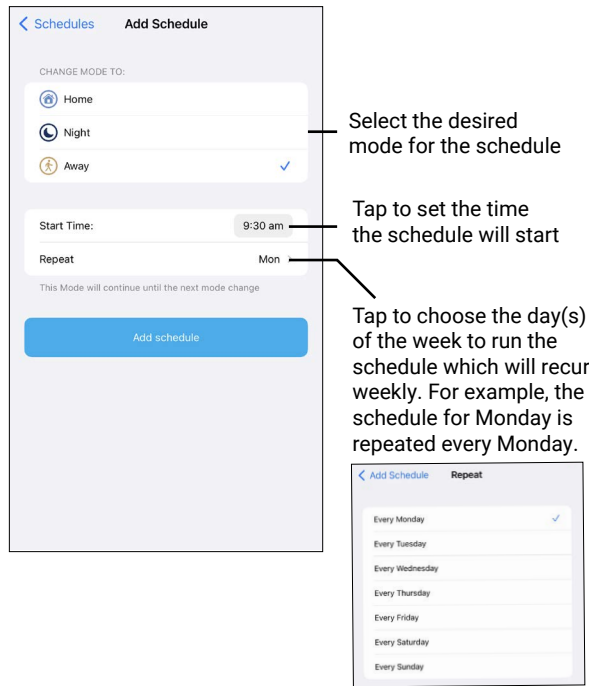

4. When you have finished customizing your new mode schedule, tap the **Apply Schedules** button on the bottom of the screen. The **Schedules** screen displays a color-coded overview of your weekly modes schedule, as shown below.

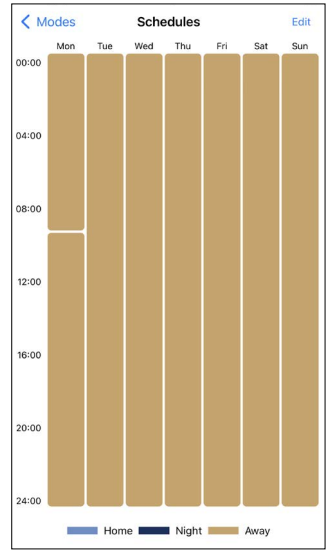



5. For your devices to be able to automatically switch to different modes with schedules, a minimum of two schedules must be created. See ["Creating Additional Schedules" on page 22](#).

# MODES TAB


## Creating Additional Schedules

You can create additional schedules, one at a time, for your devices to change modes.


1. From the **Modes** tab, tap .
2. Tap **Edit** in the top right corner.

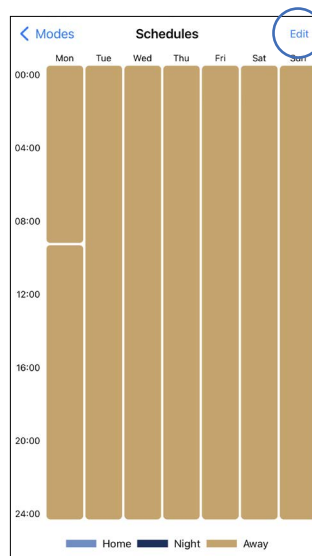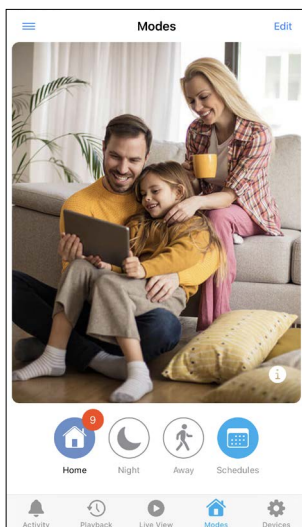


3. Tap  in the top right corner.

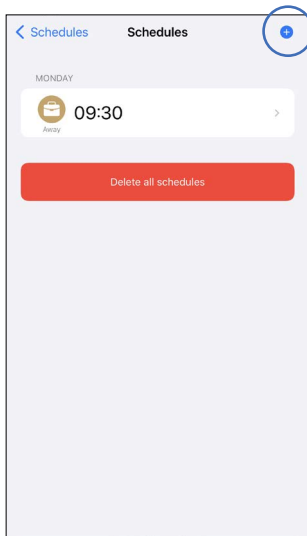

4. Set the mode, the start time, and the day(s) for the schedule you are creating, as shown below.

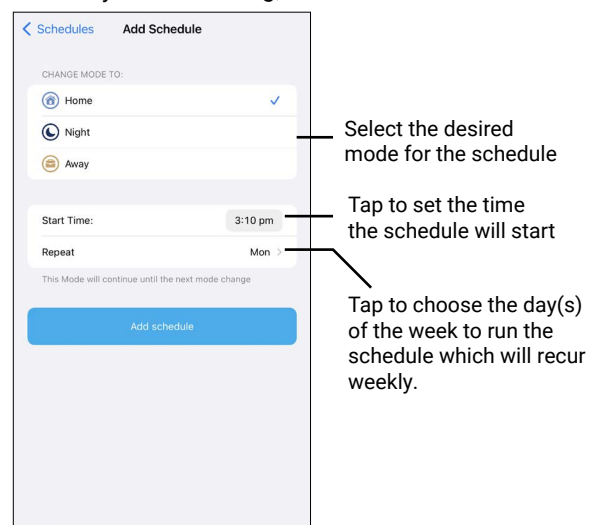


5. When you have finished, tap the **Add Schedule** button on the bottom of the screen. The new schedule is added to your list of schedules. Repeat the steps 3-4 above to add more schedules.

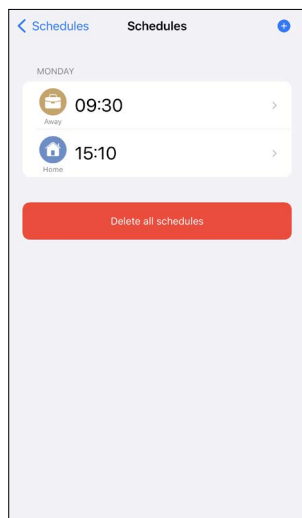



**Note:** You can make changes to your schedules if necessary. See ["Editing or Deleting Schedules"](#) on page 23.

## Editing or Deleting Schedules

1. From the **Modes** tab, tap . The **Schedules** screen is displayed.

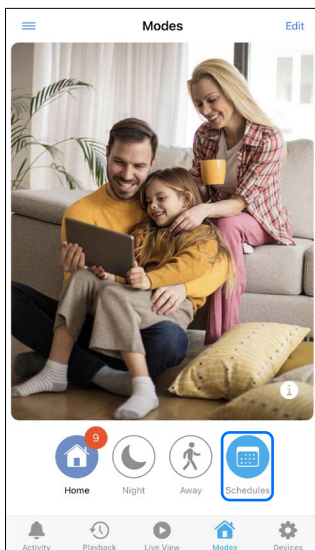



2. Tap **Edit** in the top right corner. The list showing the times and days of the week modes are scheduled to change is displayed. You can scroll all the way to the bottom to delete all the schedules by tapping the **Delete all schedules** button.

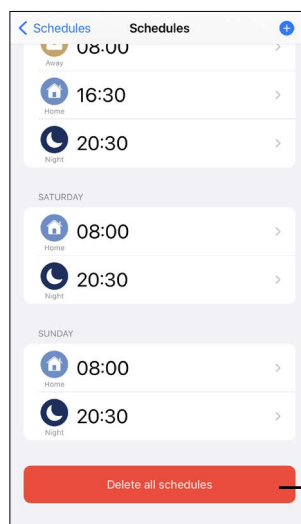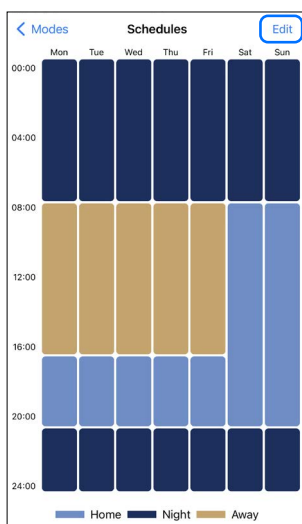

 You can manually override the mode after the schedule has started using the **Modes panel**. This is useful for any situation where the mode set by the schedule is no longer appropriate.

Delete all existing schedules

3. Tap the schedule you want to edit. You can adjust the start time, disable the schedule temporarily, change the scheduled mode or delete the schedule, as shown below.

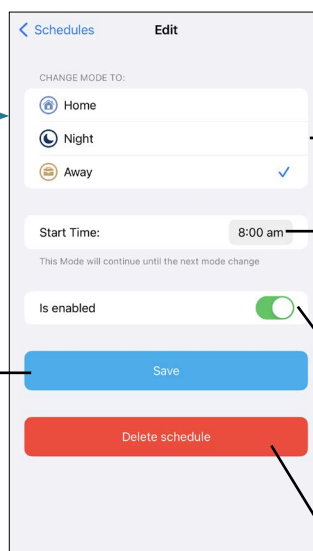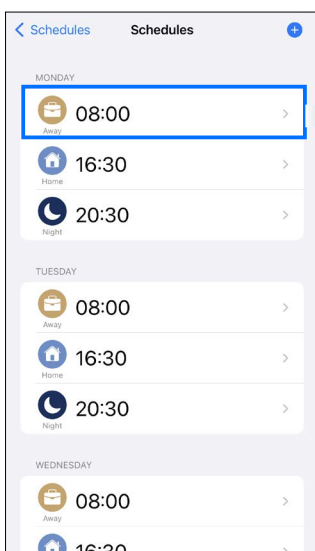

You can change the mode that will take effect for the schedule if necessary

Adjust the schedule's start time.

**Note:** If the start time conflicts with an existing schedule, this schedule will override and delete the other schedule automatically.

Occasionally, you might want to turn the schedule off temporarily, for example, when you have something else planned for the day. You can turn the schedule off/on by tapping the toggle switch. If disabled, the schedule will be removed from the graphical weekly view and won't run until it is re-enabled.

Delete the schedule.


Save any changes you've made to the schedule.

# ACTIVITY TAB

The Activity tab provides a consolidated view of all the detection alerts generated today and the past week by your Swann Security devices.


- The **Today** chart shows the hourly number of various events detected for the current day.
- Color-coded bars are used to represent:
  - event types such as motion, ring, sound, person, pet, vehicle, and package detection events.
- Detection of package, pet, and vehicle requires a Secure+ plan subscription and is available only for certain Wi-Fi camera models. For more details about the Secure+ plans, go to **App Menu > Secure+ Plans**.

- The **Past Week** chart shows the total number of various events detected daily for the last 7 days (from current day).
- Color-coded bars are used to represent:
  - event types such as motion, ring, sound, person, pet, vehicle, and package detection events.
- Detection of package, pet, and vehicle requires a Secure+ plan subscription and is available only for certain Wi-Fi camera models. For more details about the Secure+ plans, go to **App Menu > Secure+ Plans**.

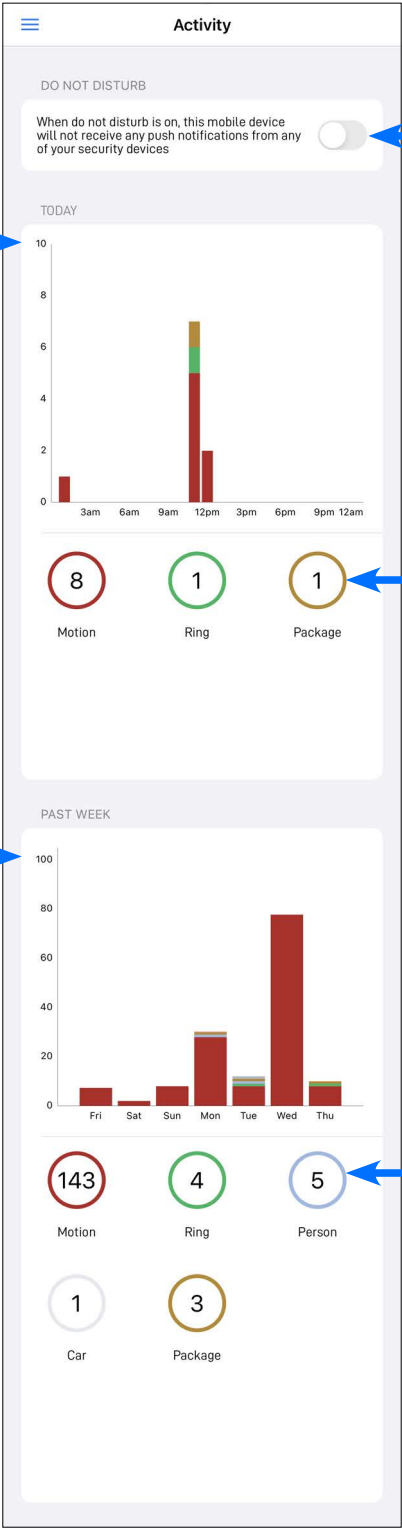


If you enable **Do Not Disturb**, your phone will not receive any notifications from the Swann Security app, regardless of the push notification settings you've configured for individual devices in **Modes**.

- The **Today Summary** shows the total number of various events detected over the course of 24 hours ending on the current day.
- Tap on an event type (circle with a number) to view a detailed timeline of when those events were detected by your devices today along with a chart showing the number of hourly detections.

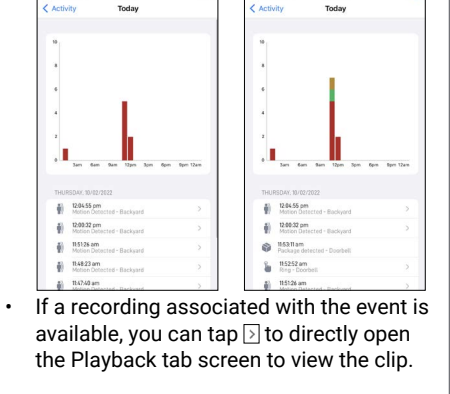

- If a recording associated with the event is available, you can tap to directly open the Playback tab screen to view the clip.

- The **Past Week Summary** shows the cumulative total of various events detected over the course of the last 7 days (from the current day).
- Tap on an event type (circle with a number) to view a detailed timeline of when those events in the past week were detected by your devices along with a chart showing the daily number of detections.

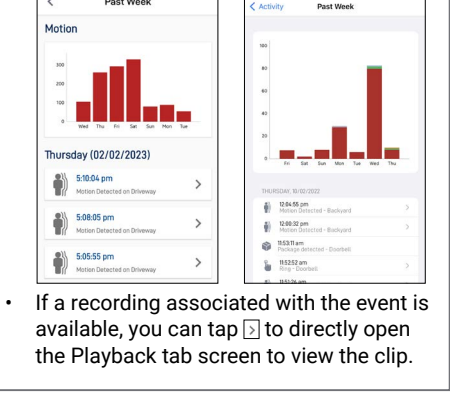

- If a recording associated with the event is available, you can tap to directly open the Playback tab screen to view the clip.




# Device Settings

# MANAGING YOUR DEVICES

1. From the navigation bar, tap the **Devices** tab.



2. Tap the device for which you would like to view details or change settings.

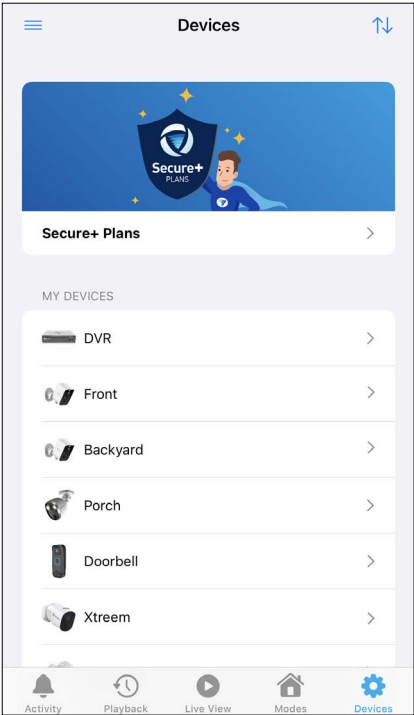


You can also do the following:

- Tap  in the top right corner to rearrange the order of the device tiles on the Live View tab. Tile positions in grid and list views are arranged in the following order, as shown below.

| Grid View  |            | List View  |
|------------|------------|------------|
| Position 1 | Position 2 | Position 1 |
| Position 3 | Position 4 | Position 2 |
| Position 5 | Position 6 | Position 3 |
| Position 7 | Position 8 | Position 4 |


- Tap the **Pair Device** button on the bottom of the screen to pair a new Swann Security device to your account.
- Tap the **Shop Swann** button on the bottom of the screen to visit the official Swann online store and browse for Swann Security products.

# PERSONAL ALARM SETTINGS

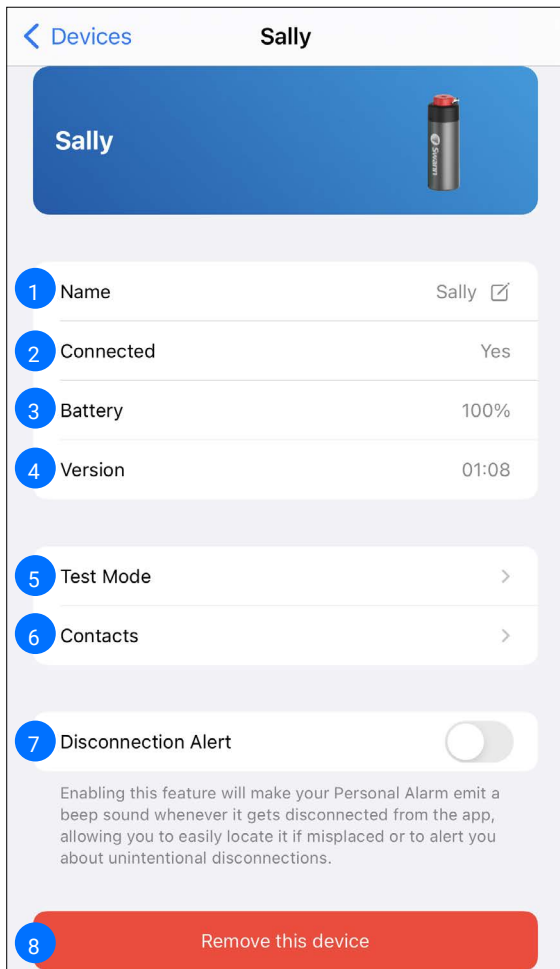

In addition to professional monitoring, the ActiveResponse plan allows you to locate misplaced keys and designate up to five emergency contacts. To learn more about the benefits and to subscribe, navigate to the **App Menu > Secure+ Plans**.

- 1 The name of the Personal Alarm. You can tap to change it.
- 2 The connection status of the Personal Alarm.  
**Note:** If the device is not connected, check your phone settings to ensure that **Bluetooth** is turned on.
- 3 Shows the current battery level (%).
- 4 Shows the firmware version of the Personal Alarm.
- 5 You can enter **Test Mode** at any time to familiarize yourself with how your Personal Alarm works without risking false alarms. Triggering the Personal Alarm during the test mode will display your current location on the screen and result in one of the following actions:
  - a test SMS sent to your emergency contact, or
  - (Only available to ActiveResponse plan subscribers) a test alarm sent to the professional monitoring center. You will receive a call to validate the test alarm. Please ensure you have your personal 4-digit pin code ready for identity verification. You can manage your pin code in the **App Menu > Profile**. (See "[Updating your Swann Security Account Profile](#)" on page 43.)

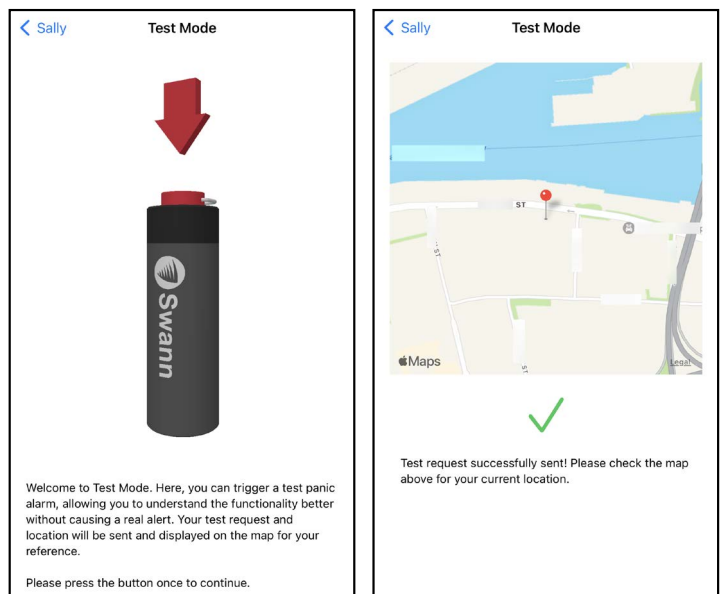

- 6 You can manage the details of your emergency contacts, including their 4-digit pin code (this option is only available to ActiveResponse plan subscribers).  
**Note:** Be sure to inform your designated contacts about their 4-digit pin code, which will be used to verify their identity when the monitoring center calls.
- 7 You can toggle '**Disconnection Alert**' on or off. When this is enabled, your Personal Alarm will emit a 20-second beep when it's out of Bluetooth range of your phone. This feature is useful if you want to ensure that your Personal Alarm always stays with you when you leave the house.
- 8 You can unpair the Personal Alarm from your Swann Security account. For example, if you plan to give it away to a family member, you will need to unpair it first.

## Device Settings

NVR8580

1 NameNVR8580

2 OnlineYes

3 Time Zone+1100

4 Usernameadmin

5 Password\*\*\*\*\*

6 Automatically Start Live ViewAlways

7 Camera Settings

8 Detection Zone

9 Alarm

10 Advanced


11 Technical Details

12 Remove this device

Note: The available settings may vary by DVR/NVR system and will only be displayed if the feature is supported.

- 1 The name of the system. You can tap  to change it.
- 2 Shows the 'Online' status of the system. If the status is "No", please check your Wi-Fi/internet connection and make sure the Ethernet and power cables are securely connected at both ends.
- 3 The timezone (GMT format) set on the system. Please ensure that the timezone matches your current location. Incorrect timezone settings can prevent mode schedules from running as scheduled and may also result in incorrect timestamps on recordings.
- 4 Shows the username currently logged into the system.
- 5 In case you've forgotten the password to access the system locally, tap on the **Password** field then authenticate yourself to reveal the password. See ["Finding your CCTV System Password" on page 49](#).
- 6 When the app is launched, you can choose how the Live View tab starts the camera live streams. You can select 'Always' to automatically start the live streams, 'Wi-Fi only' to start the live streams only when your phone is connected to Wi-Fi, or 'Never' to never start the live streams - you'll need to tap the **Play** icon on the camera tile to manually start live view.
- 7 You can manage the camera names, configure the on-screen display information, adjust image settings, and set up privacy zones. See ["Camera Settings" on page 29](#).
- 8 You can set up detection zones for the cameras to help minimize false motion alerts. See ["Setting up Detection Zone" on page 30](#).
- 9 You can manage the alarm settings for the cameras such as the motion detection sensitivity and light/siren activation.
- 10 You can access a range of advanced options to monitor and enhance your system's performance, including firmware updates, auto-reboot routine maintenance, storage management, and system reboot. See ["Advanced" on page 34](#).
- 11 You can view technical information about the system, such as the model code, software (firmware) version, device ID, MAC address, and network IP address.
- 12 You have the option to remove (unpair) the system from your Swann Security account. There may be instances where you need to unpair your system. For example, if you plan to use your system with a different Swann Security account or give it away to a family member, unpairing it first is necessary.

## Camera Settings

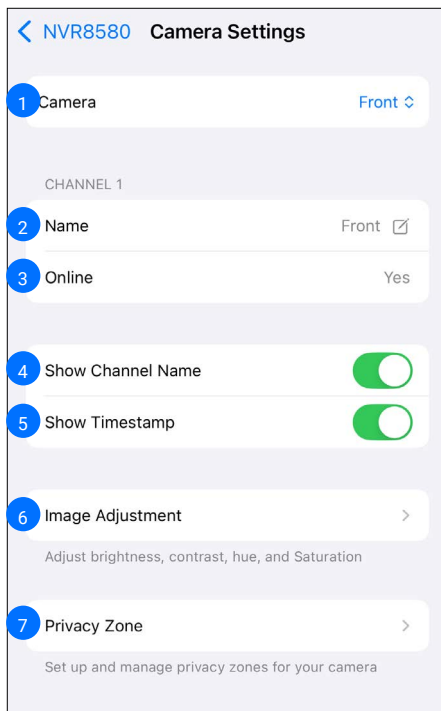

- 1 Select a camera (channel) to view information and adjust settings.
- 2 The name of the camera. You can tap to change it.
- 3 Shows the 'Online' status of the camera. If the status is 'No', please check your internet connection and the camera battery status.
- 4 You can toggle the '**Show Channel Name**' option to display or hide the camera name on the video.
- 5 You can toggle the '**Show Timestamp**' option to display or hide the date and time on the video.
- 6 Adjust the camera's image settings to optimize visual quality for the environment. You can modify brightness, contrast, hue, and saturation. Increasing brightness helps in low-light conditions, while adjusting contrast enhances element distinction. Hue fine-tunes color balance, and saturation controls color intensity. Experiment with these settings to achieve the best image quality for your surveillance needs.
- 7 Create privacy zones to block out specific areas in the camera view to protect privacy. For example, you can use privacy zones to obscure windows, doorways, or other areas where privacy is a concern. See "[Setting up Privacy Zones](#)" below. Please note that this feature may not be supported on all camera models.



## Setting up Privacy Zones

1. From the **Camera Settings** screen (see above), select the camera you want to set up Privacy Zones for.
2. Tap **Privacy Zone**.
3. On the **Privacy Zone** screen, tap the **Add Zone** button. The corresponding privacy zone box is added to the camera preview screen.
4. Tap and drag the box to move it around. Drag in the corner to resize the zone.
5. Repeat steps 3-4 to add up to 4 privacy zones.
6. Once privacy zones are created, they can be adjusted by selecting and repositioning them on the camera preview screen.
7. Areas located in the privacy zones will appear blocked out on the camera video. Changes are saved automatically.

## Deleting Privacy Zones

To delete an existing privacy zone:



1. Tap the privacy zone you want to remove.
2. Tap Delete.

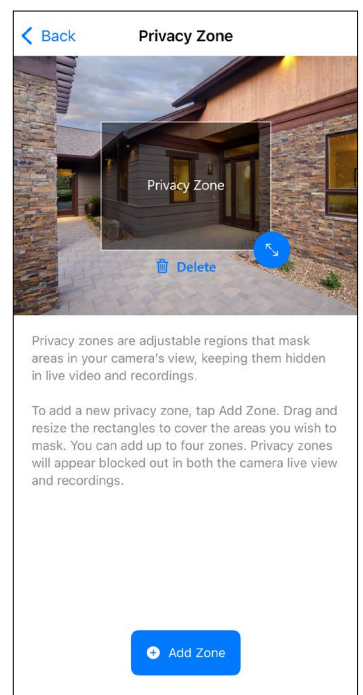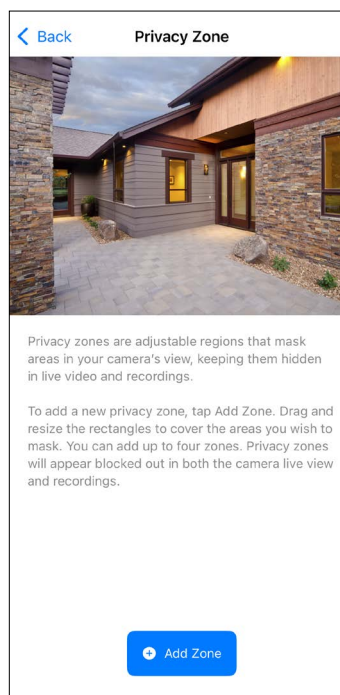


## Setting up Detection Zone

1. From the **Device Settings** screen (see page 28), tap **Detection Zone**.
2. Select the camera you want to configure from the **Camera** dropdown below the camera preview window.
3. On the **Detection Zone** screen, use the following options to customize motion detection areas:  
**Fill**: Highlight specific areas of the camera view where you want to detect motion  
**Clear**: Unhighlight existing detection zone areas.  
**Fill All**: Highlight the entire camera view.  
**Clear All**: Remove all detection areas.
4. Once you're done customizing the detection zone, tap the **Save** button. If you want to discard your changes, tap **Cancel**.
5. To set up the detection zone for another camera, select the desired camera from the dropdown below the camera preview window and repeat steps 3-4.

**Tip:** To minimize false motion alerts, exclude areas with constant activity, such as moving bushes, busy streets, or other high-traffic spots. If your camera faces a road, configure the Detection Zone to ignore that section. You can also angle the camera slightly downward to reduce coverage of busy areas and focus on key zones.

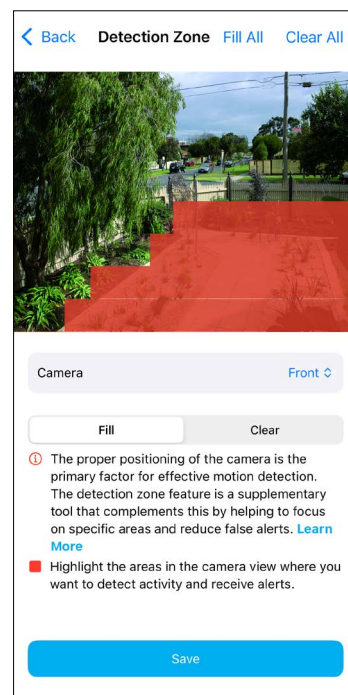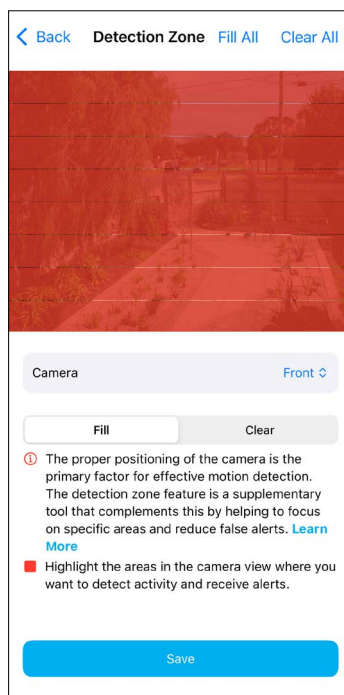

## Advanced Settings

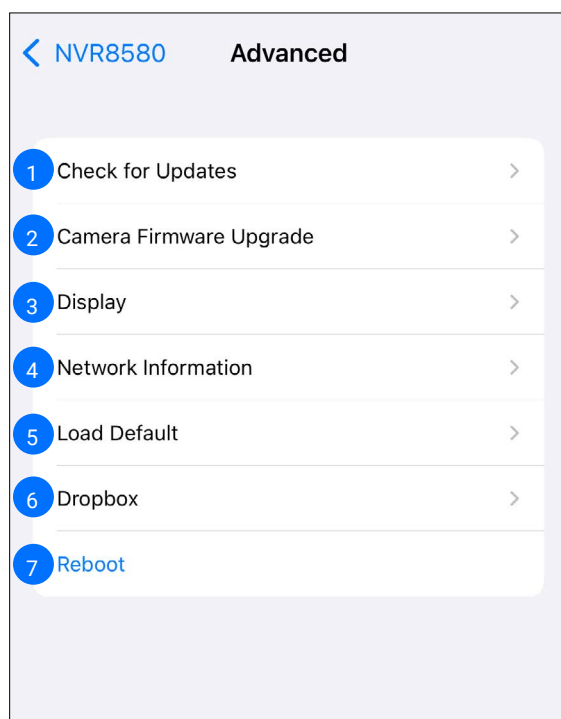

*Note: The available settings may vary by DVR/NVR system and will only be displayed if the feature is supported.*

- 1 Allows you to check for and install the latest firmware updates to ensure your system is running with the most recent features and security improvements.
- 2 Updates the firmware of connected cameras, improving performance, compatibility, and security.
- 3 Allows you to configure the timestamp format and choose whether to display the Swann watermark on the camera video.
- 4 Displays details about your system's network connection, including IP address, gateway, MAC address and DNS settings for troubleshooting or configuration.
- 5 Restores the system settings to factory defaults. This can be useful for troubleshooting but will erase custom configurations.
- 6 Authorize and link your personal Dropbox account as external cloud storage for Swann Security to automatically back up footage and keep it secure. For more details on activating this feature, refer to your system's instruction manual.
- 7 Restarts the system, which can help resolve minor network issues and refresh system performance.

## Device Settings

Power Hub



1 Name Power Hub

2 Online Yes

3 Time Zone +1000

4 Username admin

5 Password .....

6 Automatically Start Live View Always

7 Live View

8 System Settings

9 Camera Status

10 Detection Zone

11 Alarm

12 Advanced

13 Technical Details

14 Remove this device

**Note:** The Power Hub-based device is available on the AllSecure/MaxRanger4K series security systems. Available settings vary by device and will only appear if the feature is supported.

- 1 The name of the system. You can tap  to change it.
- 2 Shows the 'Online' status of the system. If the status is "No", please check your internet (Wi-Fi/Ethernet) connection and make sure the power cables are securely connected at both ends.
- 3 The timezone (GMT format) set on the system. Please ensure that the timezone matches your current location. Incorrect timezone settings can prevent mode schedules from running as scheduled and may also result in incorrect timestamps on recordings.
- 4 Shows the username currently logged into the system.
- 5 In case you've forgotten the password to access the system locally, tap on the **Password** field then authenticate yourself to reveal the password. See ["Finding your CCTV System Password" on page 49](#).
- 6 When the app is launched, you can choose how the camera live streaming should start. You have three options:
  - **Always:** The live streams start automatically.
  - **Wi-Fi only:** The live streams start only when your phone is connected to Wi-Fi.
  - **Never:** The live streams don't start automatically. You'll need to tap the **Play** icon on the camera tile to start live view manually.
- 7 You can configure the live view display for each paired camera. Customize channel names, show or hide timestamp, adjust image settings, and set up privacy zones. See ["Live View" on page 32](#).
- 8 You can customize the watermark visibility and the date format display on the camera live view and recordings. See ["System Settings" on page 32](#).
- 9 You can check the current battery level, signal strength, and type of connection for each paired camera. You can also pair an additional camera to an unused channel. See ["Camera Status" on page 32](#).
- 10 You can adjust the detection zone for each paired camera to reduce false motion alerts. See ["Setting up Detection Zone" on page 33](#).
- 11 You can manage alarm settings, including configuring light and siren activation in response to motion, and check the current motion detection sensitivity level for each paired camera. See ["Alarm Settings" on page 33](#).
- 12 You can access a range of options to manage and optimize your system's performance and connectivity. See ["Advanced" on page 34](#).
- 13 View technical information about the system such as the model code, software (firmware) version, device ID, MAC address, and network IP address.
- 14 You have the option to remove (unpair) the system from your Swann Security account. There may be instances where you need to unpair your system. For example, if you plan to use your system with a different Swann Security account or give it away to a family member, unpairing it first is necessary.

# POWER HUB SETTINGS

## Live View

Power Hub

Live View

1

Camera

Channel 1

CHANNEL 1

2

Name

Channel 1

3

Online

Yes

4

Show Channel Name

5

Show Timestamp

6

Image Adjustment

Adjust brightness, contrast, hue, and Saturation

7

Privacy Zone

Set up and manage privacy zones for your camera

- 1 Select the camera (channel) you want to configure for live view display.
- 2 The name of the camera. You can tap  to change it.
- 3 Shows the 'Online' status of the camera. If the status is 'No', please check your internet/Wi-Fi connection. For battery-powered cameras, ensure the battery is not empty.
- 4 Select whether to show the channel name on the live view display and recordings.
- 5 Select whether to show the date and time on the live view display and recordings.
- 6 Adjust the camera's image settings to optimize visual quality for the environment. You can modify brightness, contrast, hue, and saturation. Increasing brightness helps in low-light conditions, while adjusting contrast enhances element distinction. Hue fine-tunes color balance, and saturation controls color intensity. Experiment with these settings to achieve the best image quality for your surveillance needs.
- 7 Create privacy zones to block out specific areas in the camera view to protect privacy. For example, you can use privacy zones to obscure windows, doorways, or other areas where privacy is a concern. Please note that this feature may not be supported on all camera models.

## System Settings

Power Hub

System Settings

1

Timestamp Format

DD/MM/YYYY

2

Show Logo

Changes will apply momentarily

- 1 Select the format in which the date is displayed on the live view display and recordings. You can choose from the following options: DD/MM/YYYY, YYYY/MM/DD, or MM/DD/YYYY.
- 2 Select whether to show the Swann watermark on the live view display and recordings.

## Camera Status

Power Hub

Camera Status

Reload

DECK

1

Battery

100%

2

Signal Strength

High

3

Pair State : Paired

Unpair

DRIVEWAY

Battery

98%

Signal Strength

High

Pair State : Paired

Unpair

CHANNEL 4

3

Pair State : Not Paired

Pair

Power Hub

Camera Status

Reload

CHANNEL 1

Battery

99%

Signal Strength

High

4


Connection Mode

AP

- 1 Shows the camera's battery level.
- 2 Shows the camera's signal strength. Regularly checking the signal strength is important, especially if the camera is placed far from the Power Hub or in areas with potential interference or physical obstructions. If the signal strength is low, consider repositioning the camera or the Power Hub to improve the connection.
- 3 Shows the camera's pair status.
  - If a camera is paired to the channel, you can unpair it by tapping the 'Unpair' button. This allows you to link a different camera to the channel to suit your preference.
  - If the **Pair State** of the channel is **"Not Paired"**, it can be paired to a camera by tapping the 'Pair' button. Follow the on-screen instructions pair the camera.
- 4 Depending on the Power Hub model, you can check whether the camera is operating in AP mode or Mesh mode.

# POWER HUB SETTINGS

## Alarm Settings

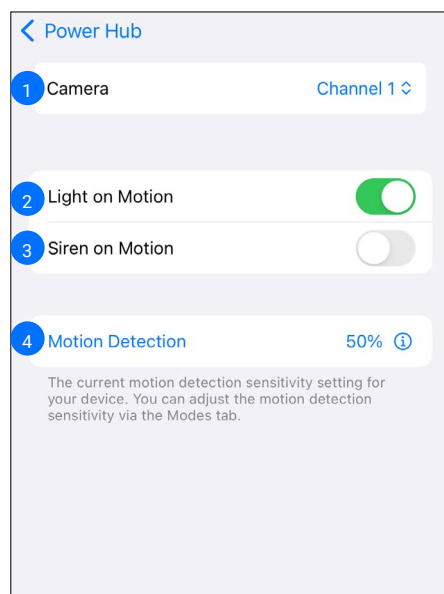

- 1 Select the camera (channel) for which you want to adjust the alarm settings.
- 2 Select whether to activate the camera's built-in lights when motion is detected. The lights will automatically turn off once motion is no longer detected.
- 3 Select whether to activate the camera's built-in siren when motion is detected. The siren will automatically turn off after motion is no longer detected.
- 4 Shows the motion detection sensitivity level of the camera in the current mode. To adjust the motion detection sensitivity, tap on the ⓘ icon then select **Go to Modes** in the context menu. For details, see "[Configuring Modes](#)" on page 19.



### Tips:

- Higher sensitivity setting detects movement from farther away and may cause more false alerts.
- Higher sensitivity setting on battery-powered cameras will drain the battery faster, requiring more frequent charging.
- Lower sensitivity setting detects nearby movement only, ideal for high-traffic areas.
- For optimal motion detection, point the camera towards desired detection areas, avoiding busy roads or moving objects like trees. If overlooking a busy road, lower the camera angle downwards to focus more on your property (e.g., driveway) to reduce false alerts and save battery.


## Setting up Detection Zone

1. From the **Device Settings** screen (see page 31), tap **Detection Zone**.
2. Select the camera you want to configure from the Camera dropdown below the camera preview window.
3. On the **Detection Zone** screen, use the following options to customize motion detection areas:
  - Fill:** Highlight specific areas of the camera view where you want to detect motion
  - Clear:** Unhighlight existing detection zone areas.
  - Fill All:** Highlight the entire camera view.
  - Clear All:** Remove all detection areas.
4. Once you're done customizing the detection zone, tap the **Save** button. If you want to discard your changes, tap **Cancel**.
5. To set up the detection zone for another camera, select the desired camera from the dropdown below the camera preview window and repeat steps 3-4.

**Tip:** To minimize false motion alerts, adjust the Detection Zone to exclude areas with constant activity, such as moving bushes, busy streets, or other high-traffic spots. If your camera faces a road, configure the Detection Zone to ignore that section. You can also angle the camera slightly downward to reduce coverage of busy areas and focus on key zones.


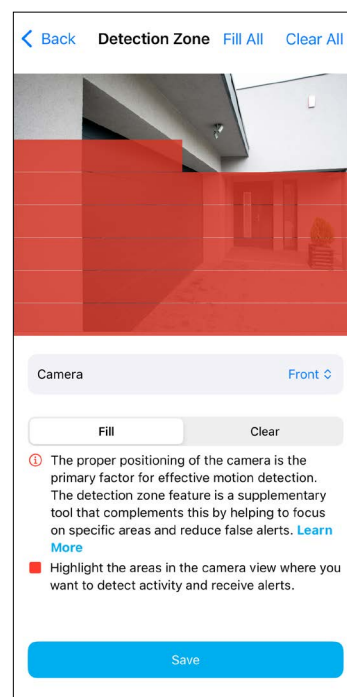
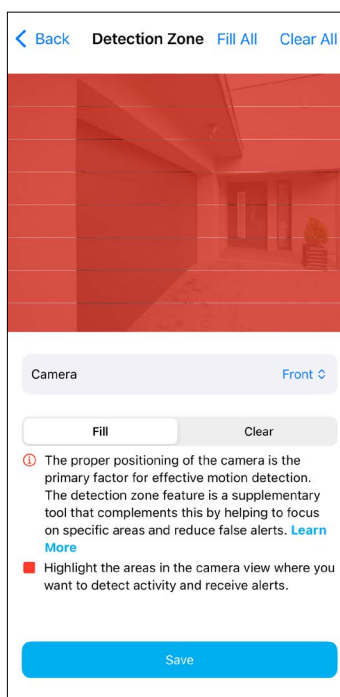


Advanced

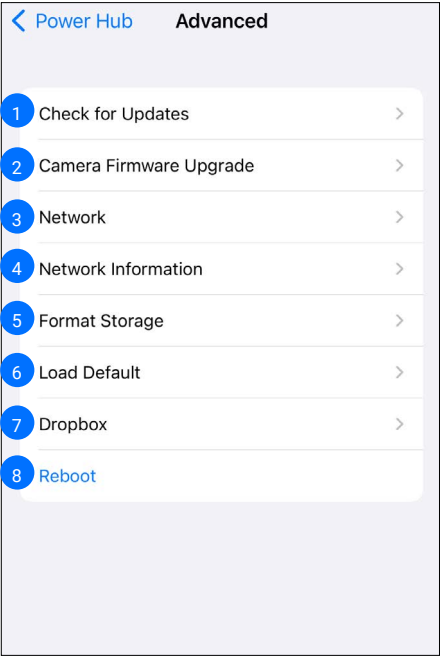


- 1 Check for firmware updates on the Power Hub. New firmware may from time to time be available to improve the performance, fix bugs, or roll out new features and enhancements.
- 2 Ensure the cameras connected to the Power Hub are running with the latest firmware by checking and installing any available updates
- 3 Configure network settings for the Power Hub. You can easily switch between Wired (Ethernet) and Wi-Fi connection modes. See ["Advanced - Network" on page 34](#).
- 4 View detailed information about the network connection of the Power Hub, including the network IP address and MAC address.
- 5 Erase and reformat the storage device used by the Power Hub. Please note, this will result in the deletion of all recordings on the storage device.
- 6 Restore the Power Hub to its default settings, which will revert all custom configurations, including camera names and detection zones to their initial state.
- 7 Set up and manage the integration of your Dropbox account with the Power Hub to facilitate the backup of your camera footage via cloud storage.
- 8 Perform a reboot of the Power Hub. This can be useful for troubleshooting network or camera connection issues.

Advanced - Network

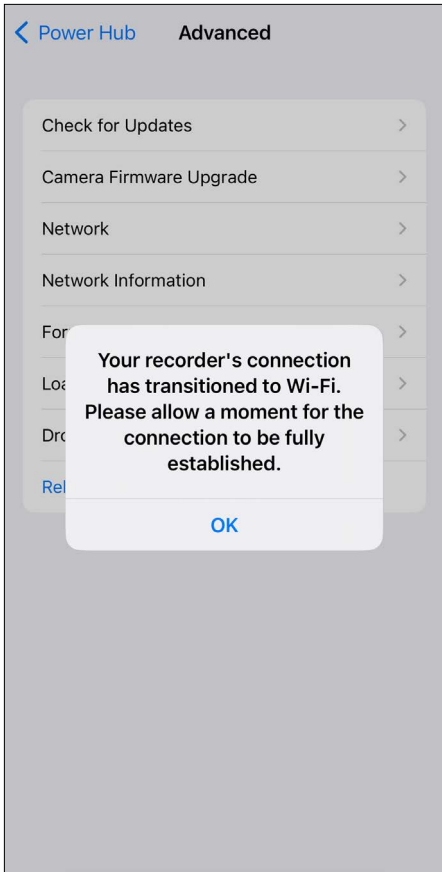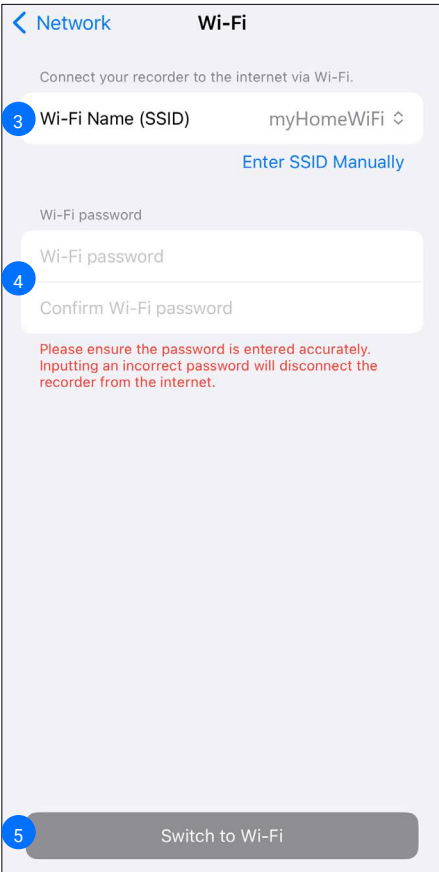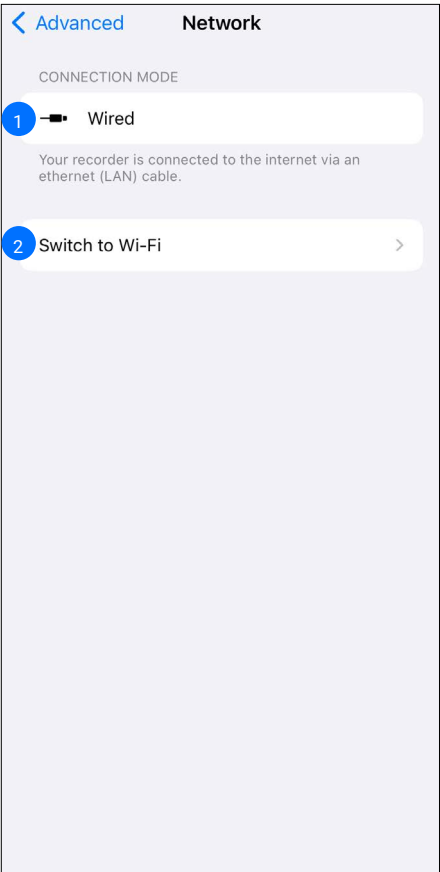

- 1 Displays the current connection mode of the Power Hub: either **Wired** (via Ethernet cable) or **Wi-Fi**.
- 2 You can change the connection of the Power Hub to either Wi-Fi or Wired, based on its current connection mode: tap **'Switch to Wi-Fi'** or **'Switch to Wired'**.
- 3 To change the Power Hub's connection mode to Wi-Fi, choose your Wi-Fi network from the list of available networks. If your Wi-Fi network is hidden, select **'Enter SSID Manually'** to enter the network name manually.
- 4 Enter your Wi-Fi network password in the **Wi-Fi password** and **Confirm Wi-Fi password** fields. Please note that the password is case sensitive, so ensure that you enter it exactly as it was created or as found on your router.
- 5 Once you've entered the Wi-Fi credentials, the button will turn blue. Tap this button to initiate the connection switch. A popup will then appear to confirm the switch. Please note, the camera live view will be unavailable during this transition.

# WI-FI CAMERA SETTINGS

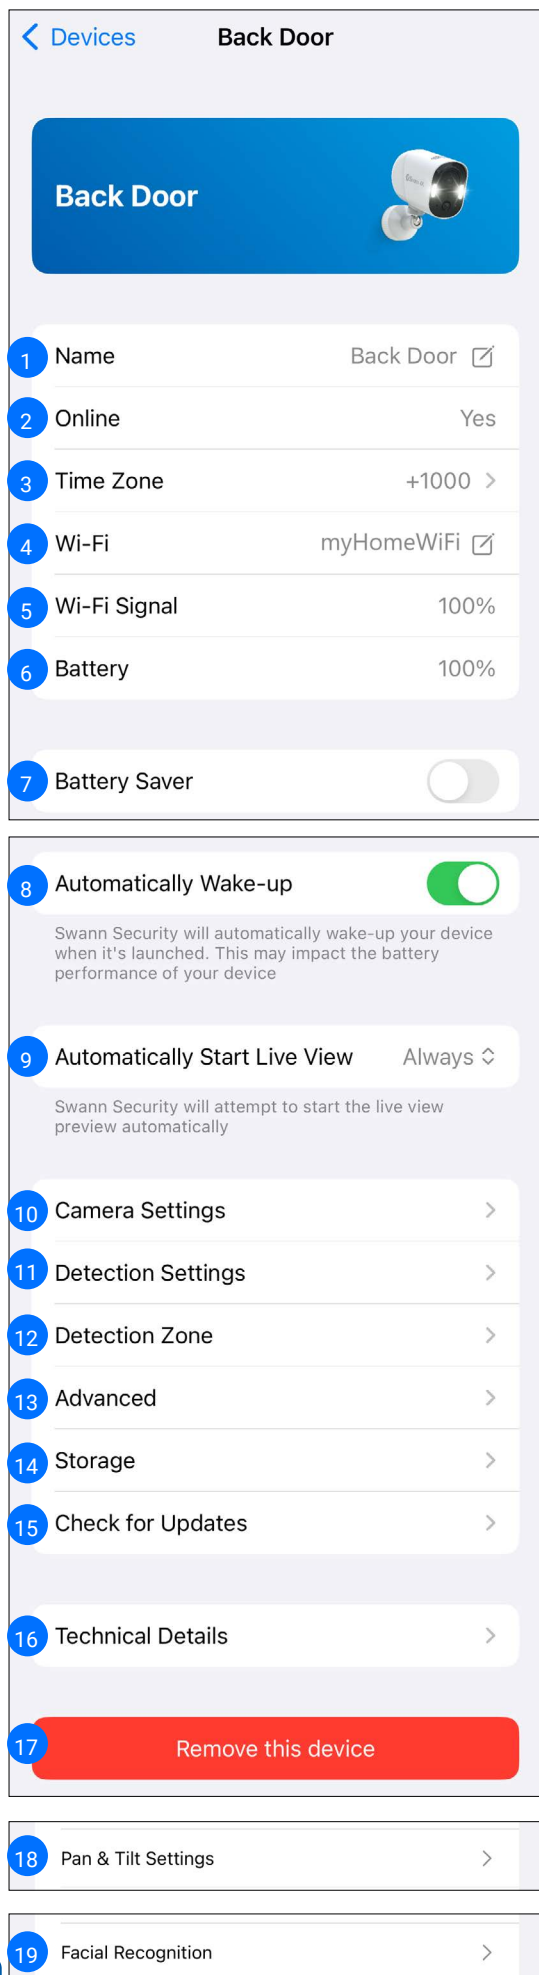

Available settings vary by device and will only appear if the feature is supported.

- 1 The name of the camera. You can tap to change it.
- 2 The connection status of the camera. **Note:** If the device is not "Online", check your Wi-Fi/internet connection and the device's battery level/power connection.
- 3 The timezone (GMT format) of the camera. The date and time stamp of camera recordings will be based on the selected timezone. You can tap to change the timezone. There is also the option to sync the camera to your phone's timezone.
- 4 The name (SSID) of the Wi-Fi network to which the camera is connected. If you have multiple Wi-Fi networks in your home, you can tap to change the Wi-Fi connection the camera is using. For more information, see ["Changing the Camera's Wi-Fi Network" on page 45](#).
- 5 The signal strength of the Wi-Fi network the camera is currently connected to. The signal strength is represented as a percentage, and the closer the camera is to your Wi-Fi router or access point, the higher the percentage and the more reliable and faster the wireless connection between devices. A camera located far from the router or access point, without a strong wireless connection, may drop off the network from time to time, resulting in problems with video streaming.
- 6 Shows the current battery level (%).
- 7 This setting is enabled by default to optimize power consumption, which helps prolong the camera's battery life. Disabling this setting may result in faster performance but higher battery drain.
- 8 When the app is launched, you have the option to choose whether or not the camera should be automatically woken up from sleep.
- 9 When the app is launched, you can choose how the Live View tab starts the camera's live stream. You can select '**Always**' to start the live stream all the time, select '**Wi-Fi only**' to start the live stream only when your phone is connected to Wi-Fi, or select '**Never**' to never start the live stream.
- 10 Adjust the camera's video and audio settings such as the live view quality and mic volume. See ["Camera Settings" on page 36](#).
- 11 Adjust the camera's detection settings such as the motion detection sensitivity and light duration. See ["Detection Settings" on page 37](#).
- 12 Set up one or more detection zones for the camera to minimize false motion alerts. See ["Detection Zone" on page 38](#).
- 13 Perform general maintenance such as rebooting the camera, resetting camera settings, formatting the microSD card, and factory reset. See ["Advanced Settings" on page 40](#).
- 14 Access recordings stored on the camera's local microSD card.
- 15 Check for firmware updates. New firmware may from time to time be available for your camera to improve the performance, fix bugs, or roll out new features and enhancements.
- 16 View technical information about the camera such as the model code, firmware version, installation date, and MAC address.
- 17 Remove (unpair) the camera from your Swann Security account. In some cases, you might need to unpair your camera, for example, if you give away your camera to a family member, you need to unpair it first.
- 18 Adjust the camera's pan and tilt speeds.
- 19 Set up and manage face recognition profiles on the camera. See ["Facial Recognition" on page 39](#).

## Camera Settings

10 Discard
Camera Settings
9 Save

VIDEO

1 Live View Quality High ↕

2 Video Environment Outdoor ↕

3 Camera Date Format DD/MM/YYYY ↕

IMAGE

4 Image Mirror ☐

5 Image Flip ☐

AUDIO

6 Speaker Volume : 85%

7 Microphone Volume : 76%

8 Remote Receiver Chime Volume Maximum ↕

Available settings vary by device and will only appear if the feature is supported.

- Select the default live view quality. Please note that this setting does not affect the video quality of camera recordings, which are always in HD.

**Tips:**

If the camera live view takes a while to stream, it is generally due to slow internet speed on your phone, which can be caused by poor Wi-Fi or cellular coverage, or limited home internet bandwidth. Additionally, concurrent video streaming activities on your Wi-Fi network can cause congestion, affecting your internet upload and download speeds. For smoother streaming, especially if you experience slow loading times, the **Low** setting is recommended as it requires less bandwidth.
- Select the video environment according to where your camera is physically located. If your camera is used in **Indoor** mode, you must set the camera's environment to match with your country's electrical frequency. This can help prevent video flicker caused by fluorescent lights.

  - 50Hz (Australia/UK)
  - 60Hz (North America)
- You can change how the date is displayed in the camera recordings. Options available: DD/MM/YYYY, YYYY/MM/DD, MM/DD/YYYY
- You can enable **Image Mirror** to horizontally reverse the orientation of the camera's video display.
- You can enable **Image Flip** to turn the camera's video display upside down. This is useful if the camera has been mounted upside down.
- Adjust the camera's speaker level. You can also mute the camera's speaker by sliding the level all the way left to 0%.
- Adjust the camera's microphone level. The higher the microphone level, the more sensitive the camera will be at picking up background noises. You can also mute the camera's microphone by sliding the level all the way left to 0%.
- (SwannBuddy/Evo models only)** Select the volume of the chime speaker linked to your Video Doorbell. You can completely turn the volume off by selecting the **Mute** option.
- Save any changes made to the camera settings.
- Discard any changes and return to the previous screen.

## Detection Settings

9 Discard
8 Save

1 Motion Detection
Close ⓘ

The current motion detection sensitivity setting for your device. You can adjust the motion detection sensitivity via the Modes tab.

2 Sleep Period
Off ↕

After motion is recorded, the camera will sleep for a short period to conserve energy. A longer sleep period will give longer battery life, but have bigger gaps between recordings.

3 Person Detection
Off ↕

Lower values will only detect people that are nearby. Higher values will trigger on people detected in the distance and produce more false triggers.

4 Light
1 minute ↕

When motion is detected, turn the light on for the specified period of time

5 Siren
Off ↕

When motion is detected, sound the siren for the specified period of time

6 Enforcer
Off ↕

When motion is detected, turn the Enforcer on for the specified period of time

7 Sound Detection
Off ⓘ

Available settings vary by device and will only appear if the feature is supported.

- Motion Detection** – Shows the motion detection sensitivity level of the camera in the current mode. To adjust the motion detection sensitivity, tap on the ⓘ icon then select **Go to Modes** in the context menu. For details, see "[Configuring Modes](#)" on page 19.
 

**Tips:**

  - Higher sensitivity setting detects movement from farther away and may cause more false alerts.
  - Higher sensitivity setting on battery-powered cameras will drain the battery faster, requiring more frequent charging.
  - Lower sensitivity setting detects nearby movement only, ideal for high-traffic areas.
  - For optimal motion detection, point the camera towards desired detection areas, avoiding busy roads or moving objects like trees. If overlooking a busy road, lower the camera angle downwards to focus more on your property (e.g., driveway) to reduce false alerts and save battery.
- Sleep Period** – Select the period of time that must elapse before the camera can be triggered again by another motion activity.
 

**Note:** If you know that there's continuous activity happening around the camera, such as someone mowing the grass in the backyard or people walking in and out, it is recommended that you temporarily set a longer sleep period. This will prevent unnecessary recordings and conserve battery life.
- Person Detection** – Receive person detection alerts when the camera detects the presence of a person during a motion event or live view. The higher the person detection sensitivity, the more accurately the camera can distinguish between human shapes and other moving objects, even at greater distances. Selecting **Off** turns off person detection alerts.
 

**Note:** To receive person detection alerts, ensure the **Motion Detection** setting (see above) is not set to **Off**.
- Light** – Select how long the camera's spotlight/floodlight will stay on when motion or sound is detected during night time.
- Siren** – Select how long the camera's built-in siren will sound when motion is detected.
 

**Note:** Please exercise discretion and good judgment when deciding to activate the siren. Make sure to comply with all local noise regulations.
- Enforcer** – Select the duration for which the camera's red and blue LEDs will flash when motion is detected.
- Sound Detection** – Shows the sound detection sensitivity level of the camera in the current mode. To adjust the sound detection sensitivity, tap on the ⓘ icon then select **Go to Modes** in the context menu. For details, see "[Configuring Modes](#)" on page 19.
 


**Tips**

  - Highest Sensitivity Setting (Quietest):** Detects most ambient sounds, including faint noises like whispers or keyboard typing.
  - Lowest Sensitivity Setting (Loudest):** Detects only very loud noises, such as vacuum cleaners or smoke alarms.
  - If you're not getting any sound detection alerts, check the camera's microphone level in [Camera Settings](#). Try increasing the microphone level to make it more sensitive to picking up sounds.
- Save any changes made to the detection settings.
- Discard any changes and return to the previous screen.

## DETECTION ZONE

The Detection Zone feature allows you to define specific areas for your camera to monitor, helping to reduce false motion alerts. When motion is detected, the camera checks if it occurred within the defined Detection Zone. If motion is detected within the Detection Zone, a notification is sent, and the activity is recorded. You can exclude certain areas from detection, such as swaying bushes or trees, roads with regular traffic, and other high-traffic areas. For example, if your outdoor camera's view overlooks the street that is triggering unwanted motion alerts, you can adjust the Detection Zone to exclude that area.


**Note:** If the motion detection sensitivity level on the camera is set to MAX, the entire camera view will be applied (i.e., custom detection zones will not work).

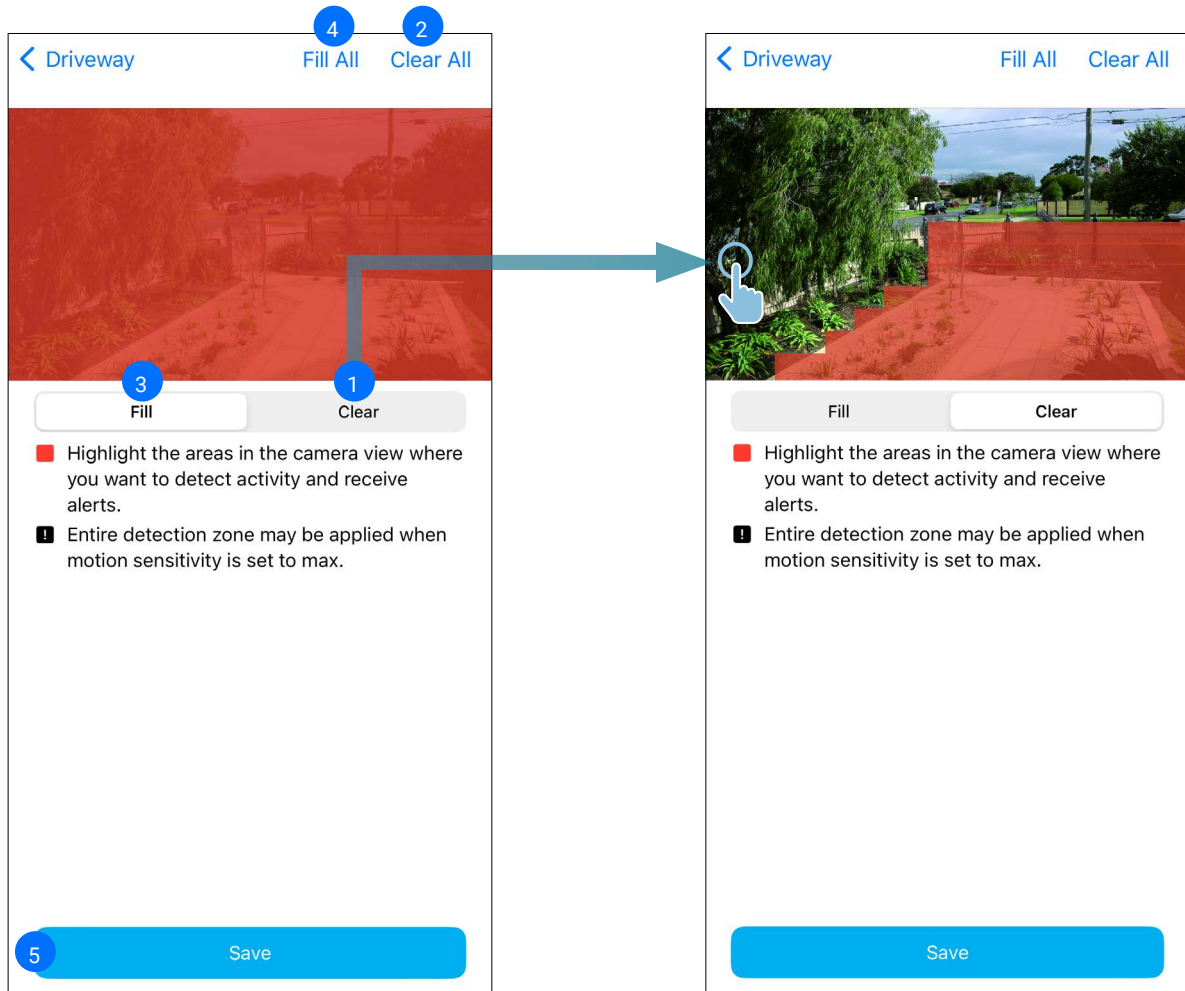

- 1 Tap the **'Clear'** button to unhighlight the areas of the camera view that you want to exclude from motion detection. If motion activity occurs in those cleared areas, you will not receive any alerts or recordings.
- 2 Tap **'Clear All'** to remove all highlighted areas from the camera view.
- 3 Tap the **'Fill'** button to highlight the areas of the camera view that you want to detect motion activity.
- 4 Tap **'Fill All'** to highlight all areas of the camera view.
- 5 Tap to save any changes made to the camera's Detection Zone.

# FACIAL RECOGNITION

**NOTE:** THIS FEATURE IS ONLY AVAILABLE ON THE **SWIFI-CAM** WIRE-FREE SECURITY CAMERA.

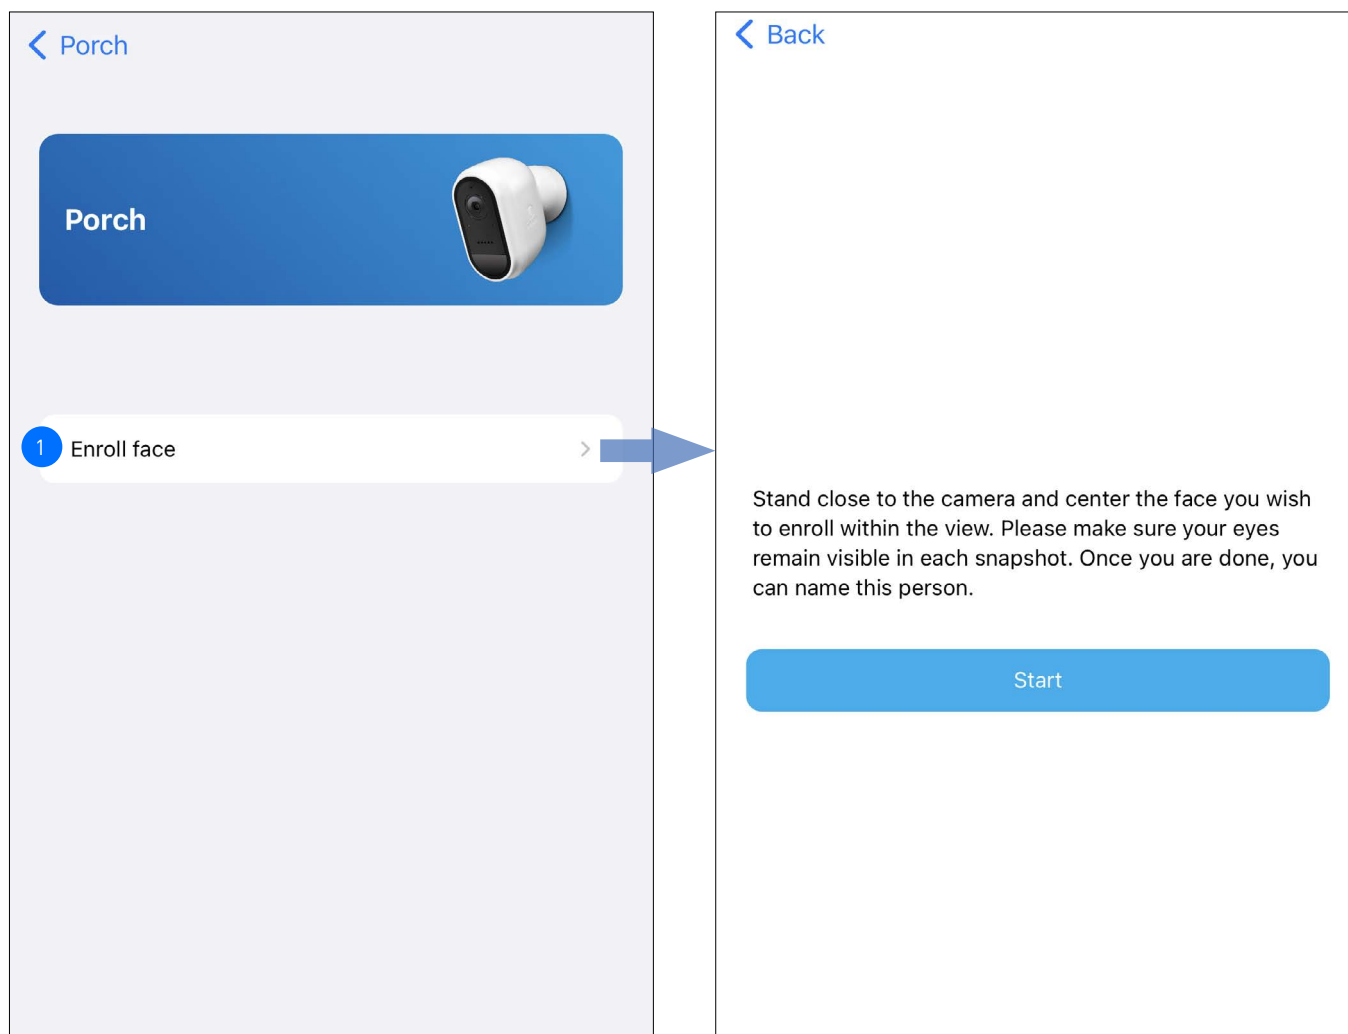


1 The Face Recognition video analytics feature uses profiles to represent individuals, such as family members. Each profile will require enrollment of multiple face images (five different face views) of an individual that you want the camera to recognize. When the camera detects and identifies an individual matching a profile, you'll receive a Face Recognition alert notification from the app.

To register a new Facial Recognition profile, tap the **"Enroll face"** button and follow the on-screen instructions (as shown on the right figure) to capture the face images of the individual that you want to associate with the profile. You can enter a name for the profile once all of the required face images have been taken.

**NOTE:**


- It is recommended that you register the Facial Recognition profiles at the camera location.
- Keep a distance of about 30cm to 70cm from the camera during the registration process.
- Ensure the face is centered and directly in front of the camera. The green dot that is displayed in the video window indicates where the face should look towards.
- If glasses are worn, ensure the frame of the glasses does not obscure the eyes and there is no reflection from the lens.
- If the individual occasionally switches between wearing glasses and not wearing glasses (for example, contact lens may be worn), simply register two separate Facial Recognition profiles (i.e., with and without glasses) for the individual and name the profiles accordingly.
- To replace an existing Facial Recognition profile, simply tap the profile and start the Facial Recognition registration process again.
- You can store up to 10 Facial Recognition profiles on the camera.
- To enable the Facial Recognition feature, ensure the camera's **Person Detection** setting (on the **Detection Settings** screen) is not turned **Off**.
- Facial recognition results may vary depending on many factors (distance, facial expressions, lighting, etc)

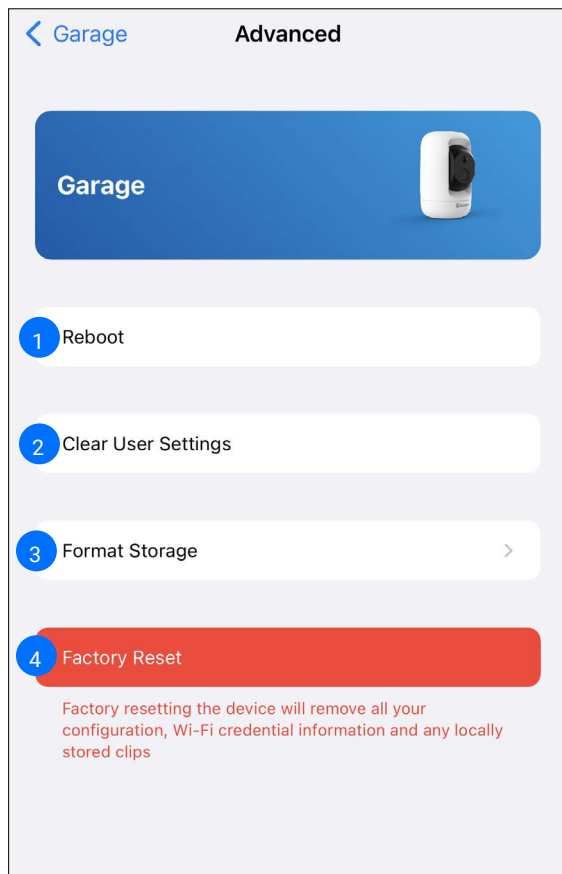

Available settings vary by device and will only appear if the feature is supported.

- 1 Tap to reboot the camera. If you are having difficulties with the camera, try rebooting it. A simple reboot can often fix connectivity issues quickly.
- 2 Tap to reset camera settings such as the name, timezone, audio, video, and detection settings to default values.
- 3 Tap to format the camera's internal memory (or installed microSD memory card) and permanently erase all recordings on it.
- 4 Tap to reset the camera to factory defaults. This is usually only necessary for troubleshooting. It isn't something to do lightly as it will format the internal memory, wipe the current Wi-Fi information, and return all of the camera settings (camera name, timezone, etc) to factory defaults. If your camera is already offline, you can factory reset the camera using the physical Reset button located on the device. See ["Factory Resetting the Camera" on page 46](#).


## WI-FI SENSOR / SIREN SETTINGS

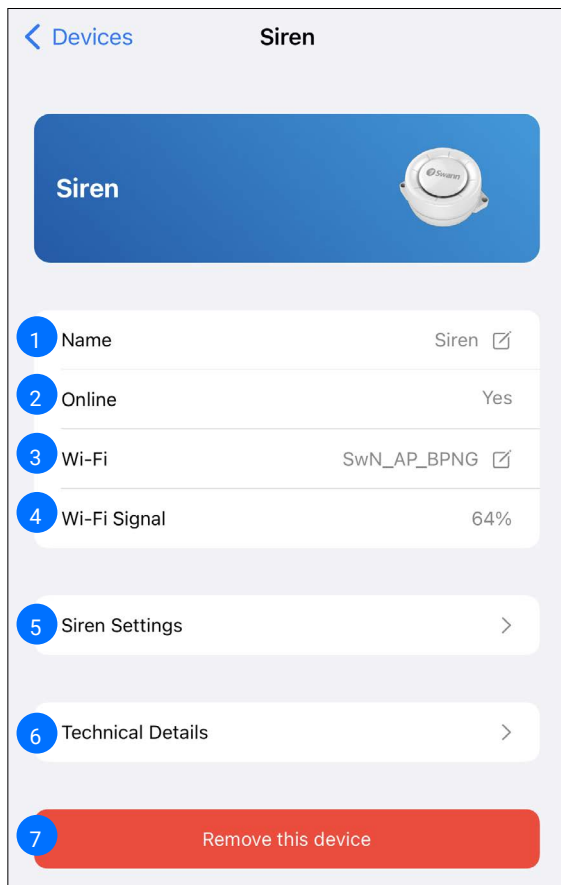

Available settings vary by device and will only appear if the feature is supported.

- 1 The name of the device. You can tap to change it.
- 2 The connection status of your device. **Note:** If the device is not "Online", check your Wi-Fi/internet connection and the device's battery level/power connection.
- 3 The name (SSID) of the Wi-Fi network to which your camera is connected. If you have multiple Wi-Fi networks in your home, you can tap to change the Wi-Fi connection the device is using.
- 4 The signal strength of the Wi-Fi network the device is currently connected to. The signal strength is represented as a percentage, and the closer the device is to your Wi-Fi router or access point, the higher the percentage and the more reliable and faster the wireless connection between devices.
- 5 You can change the settings for the siren such as the volume, duration, and sound effect. See below for more information.
- 6 View technical information about the device such as the model code, firmware version, installation date, and IP address.
- 7 Remove (unpair) the device from your Swann Security account. **Note:** In some cases, you might need to unpair your device. For example, if you want to use your device with a different Swann Security account or if you give away your device to a family member, it must be unpaired first.

### SIREN SETTINGS

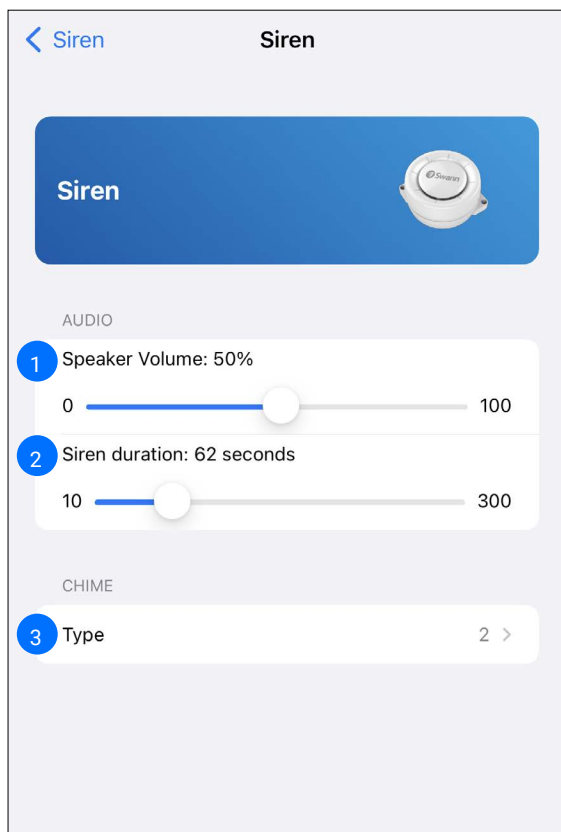


- 1 Slide left or right to decrease or increase the volume of the siren. You can also completely mute the siren when triggered and only flash the red and blue LED light ring by setting the **Speaker Volume** to 0%.
- 2 Use the slider to set how long the siren will sound when triggered.
- 3 You can change the siren alarm tone. There are four alarm tones to choose from:
  - Siren
  - 'Ding Dong' Chime
  - 'Beep Beep' Alert
  - Human Voice "Sensor Triggered"



# Appendix

# UPDATING YOUR SWANN SECURITY ACCOUNT PROFILE

You can update your Swann Security account profile information at any time. Tap **Menu**  > **Profile**.

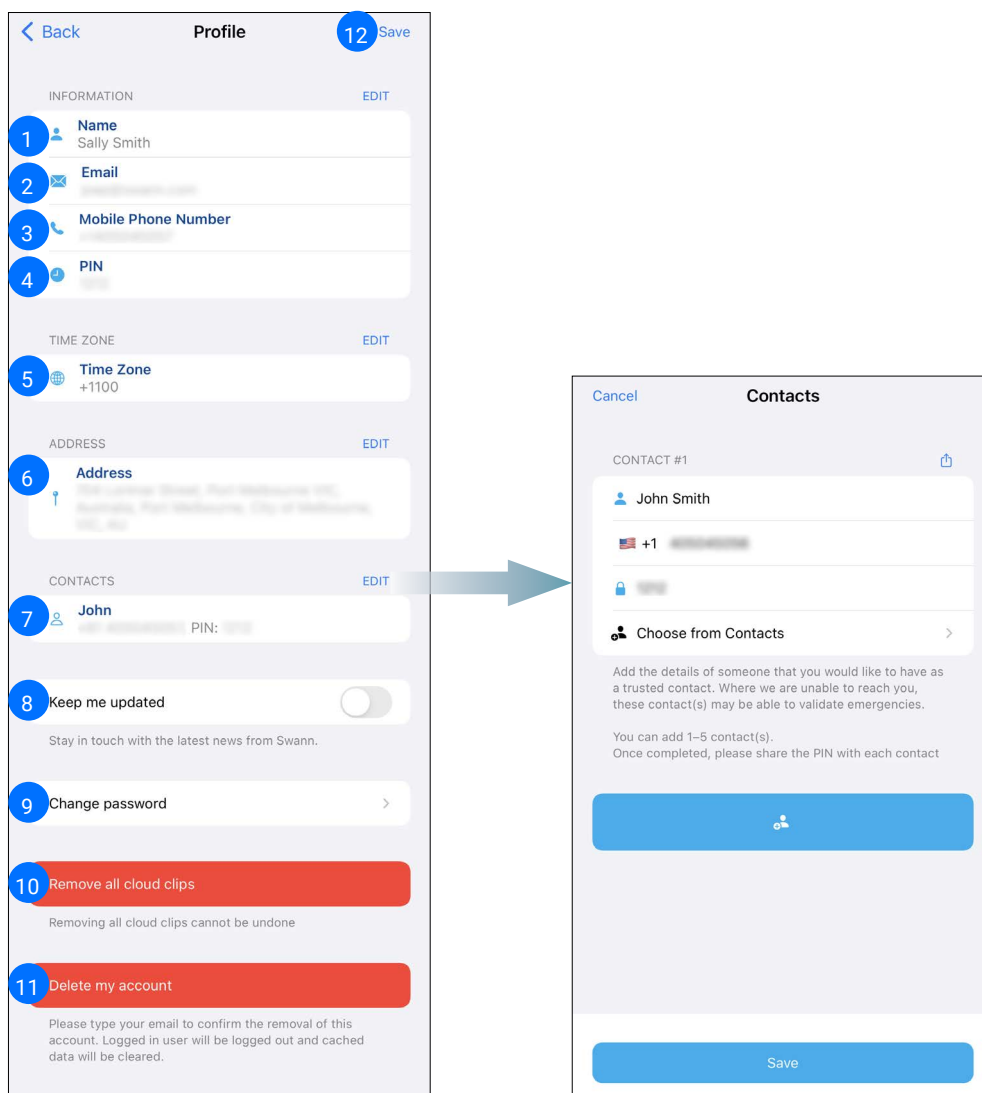


- 1 Shows the name associated with your Swann Security account. Tap **EDIT** to update the name.
- 2 Shows the email address registered to your Swann Security account.
- 3 (Only available to **ActiveResponse** plan subscribers) Tap **EDIT** to update your mobile phone number.
- 4 (Only available to **ActiveResponse** plan subscribers) Tap **EDIT** to manage your personal 4-digit pin code. This will be used by the professional monitoring center to contact and verify your identity in the event of an emergency.
- 5 Shows your Swann Security account's timezone. Tap **EDIT** to change the timezone.
- 6 Shows the address associated with your Swann Security account. Tap **EDIT** to update the address.
- 7 (Only available to **Personal Alarm** users) Tap **EDIT** to update the details of your emergency contacts, including their 4-digit pin code (this option is only available to **ActiveResponse** plan subscribers). Remember to tap the **Save** button after making any changes.
- 8 Optional. This can be turned off.
- 9 Tap > to change your Swann Security account password.
- 10 Tap to permanently delete all cloud recordings stored in your Swann Security account. Please ensure you have saved a copy of any cloud recording you want to keep via the Playback tab before performing this action.
- 11 Tap to delete your Swann Security account. A confirmation link will be sent to your registered email address. Open the link to confirm that you want to permanently delete your Swann Security account.
- 12 Tap to save any changes made to your Swann Security account profile.

# SETTING UP SWANNSHIELD (BETA)


SwannShield by Swann is an AI-driven voice assistant that enhances the functionality of the Video Doorbell. It communicates with visitors to screen unexpected guests and manage deliveries using customizable instructions, ensuring your home and packages remain secure. SwannShield activates only when the doorbell is pressed, enabling efficient and secure interactions with anyone at your door.

Follow the steps below to set up the SwannShield voice assistant on your Video Doorbell:

1. You can access SwannShield Settings directly from either the Video Doorbell Device settings screen or the app menu.

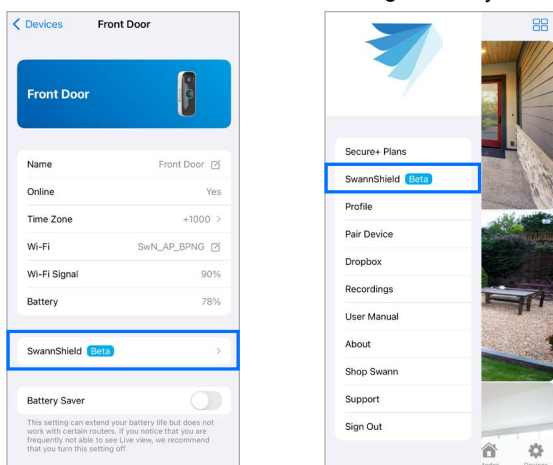

2. Configure SwannShield voice assistant settings for the Video Doorbell:

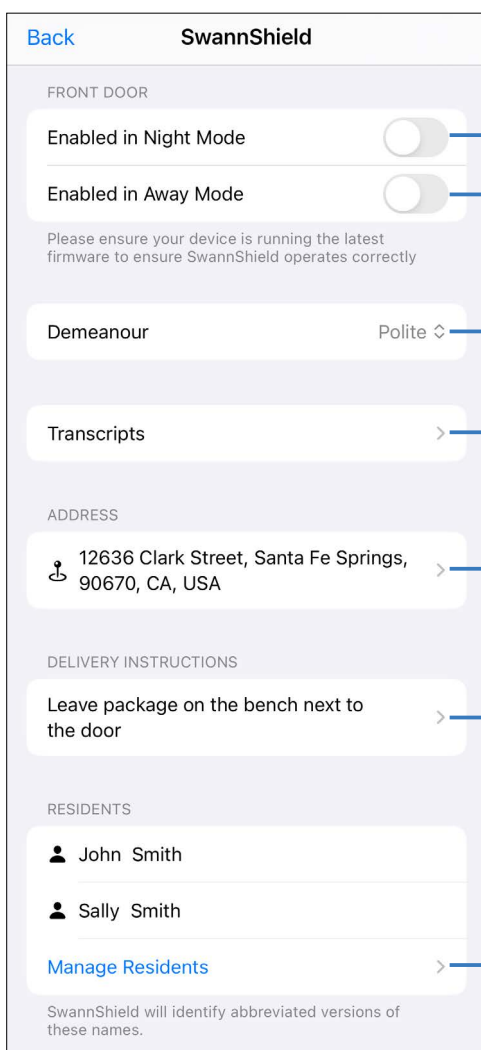

Toggle the switch to enable or disable SwannShield in Night Mode as needed.

Toggle the switch to enable or disable SwannShield in Away Mode as needed.

Tap to select SwannShield's interaction style with visitors.

- **Polite:** Friendly and courteous.
- **Aggressive:** Assertive and direct.
- **Disinterested:** Detached and indifferent.

Tap to view SwannShield's voice history. Transcripts are stored for 2 days in the cloud before being deleted.

Tap to enter your address details. This helps SwannShield handle package deliveries and respond to visitors appropriately.

Tap to provide specific instructions (up to 80 characters) for deliveries, such as 'Leave package on the bench next to the door.'

Tap to add a new resident or edit the details of existing ones. You can add up to 5 names of people living at your address. SwannShield adapts its responses based on the names provided. For example, if someone says, 'I have a package for Adam,' and there isn't a resident named Adam, SwannShield might respond with something like, 'I'm sorry, you may have the wrong house. Perhaps try the house on the left.'



## FAQS

- **Can SwannShield be enabled in Home mode?**  
*No, SwannShield can't be enabled in Home mode. It's designed to step in when you're not available to answer the door.*
- **I'm able to answer the doorbell. How do I interrupt SwannShield?**  
*Simply open the doorbell notification from the app to take over the conversation.*


# CHANGING THE CAMERA'S WI-FI NETWORK

You can easily change the Wi-Fi network that your camera is using, if your home has multiple Wi-Fi access points or if you have installed a new router.

1. Tap the **Devices** tab > Select your camera > **Wi-Fi** .

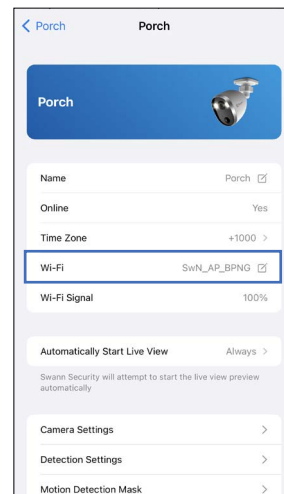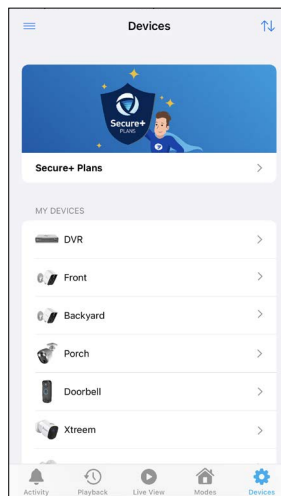


2. Tap 'Pair Device' on the **Change Network** confirmation box that is displayed.

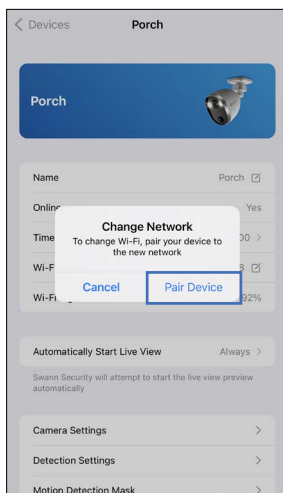

 If your previous Wi-Fi network has been disconnected and the camera is no longer online, simply go to App Menu > Pair Device and follow the on-screen instructions to pair the camera to the new Wi-Fi network.

3. Follow the on-screen instructions to pair your camera to the new Wi-Fi network.

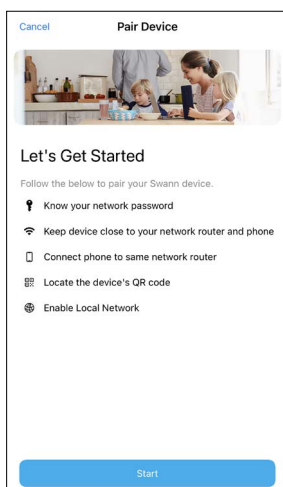

# FACTORY RESETTING THE CAMERA


Factory resetting your camera is usually only necessary for troubleshooting. It isn't something to do lightly as it will format the internal memory/microSD card (i.e., all locally stored clips will be deleted), wipe the current Wi-Fi pairing information, and return all of the camera settings to the original factory defaults.

**Note:** Factory resetting your camera does not remove (unpair) it from your Swann Security account. If you're giving your camera to somebody else, make sure to remove it from your account first via the Advanced Settings.


Depending on whether your camera status is online or offline, you can perform a factory reset via the app Factory Reset button or the physical Reset button located on the camera.

## METHOD A - VIA ADVANCED SETTINGS (IF CAMERA STATUS IS ONLINE)

1. Tap the **Devices** tab > Select your camera > **Advanced**.

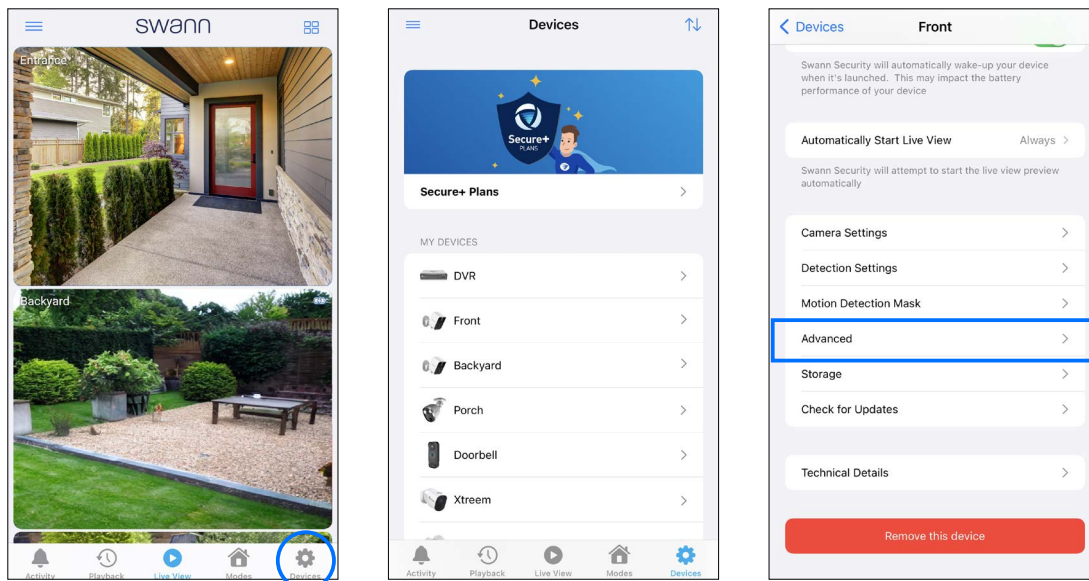

2. Tap the **Factory Reset** button.

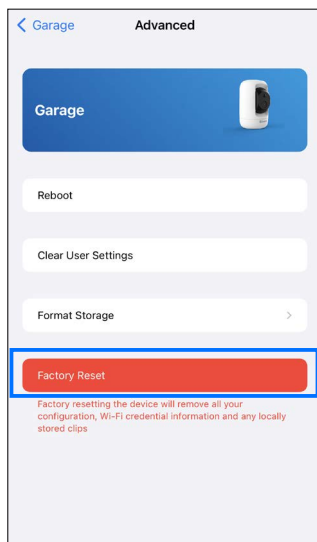

3. The camera will reset to factory defaults and restart automatically. When factory reset is complete, the LED indicator/ring on the camera will blink blue slowly to indicate that it is in pairing mode (on certain models, you will also hear the device say "Ready for pairing").













**IMPORTANT:** After factory resetting your device, you'll have to pair it with your Wi-Fi network again. See "[Pairing the Device](#)" on page 7.

**SEE NEXT PAGE FOR METHOD B - VIA PHYSICAL RESET BUTTON**

# FACTORY RESETTING THE CAMERA


## METHOD B - VIA PHYSICAL RESET BUTTON (IF CAMERA STATUS IS OFFLINE)

1. Find the **Reset**, **SET**, and/or **Pair** button on the camera (refer to the figures below). Ensure the camera is connected to a power supply or USB charger. Proceed to [step 2](#) on the following page for the factory reset procedures.
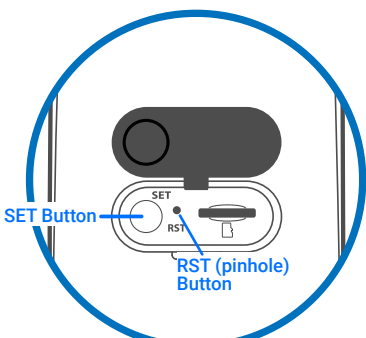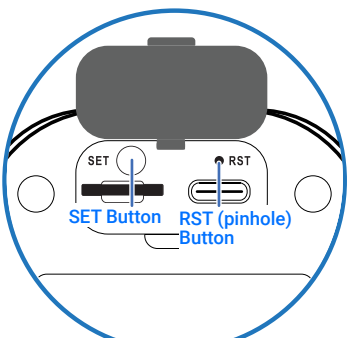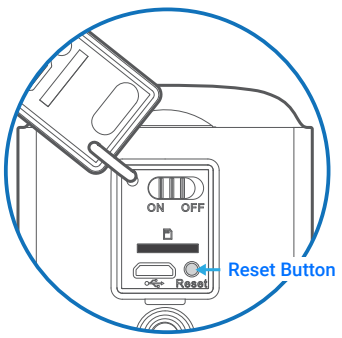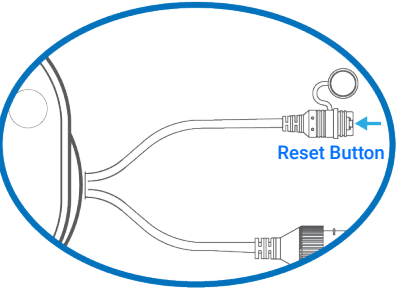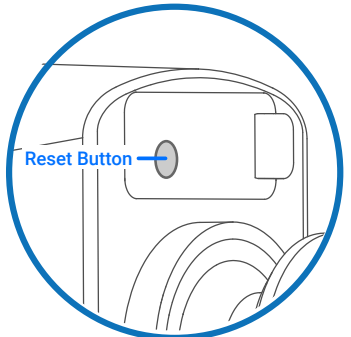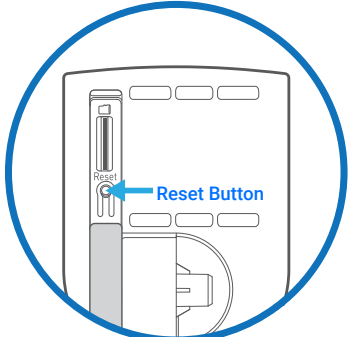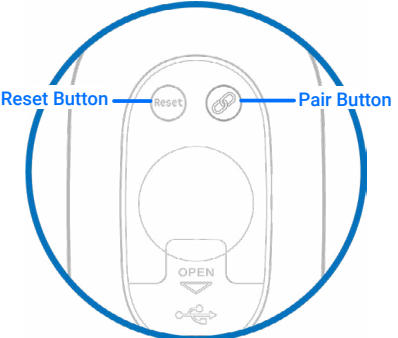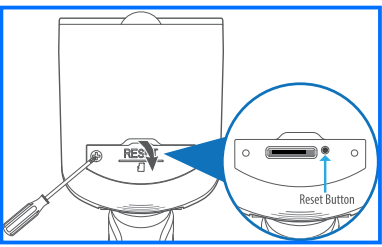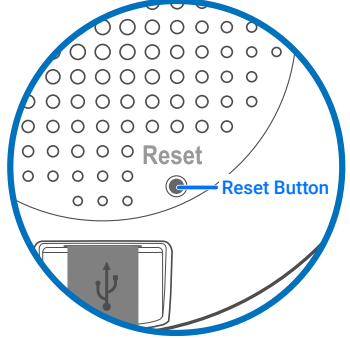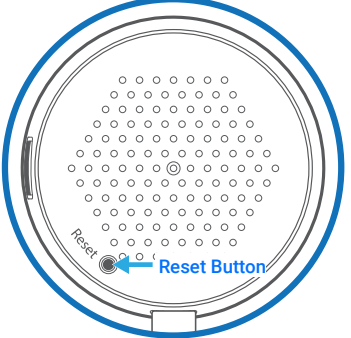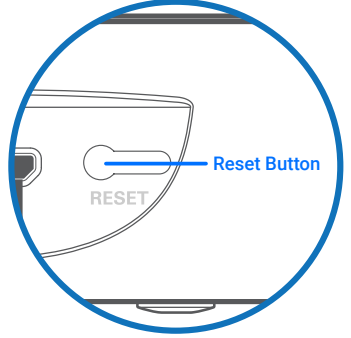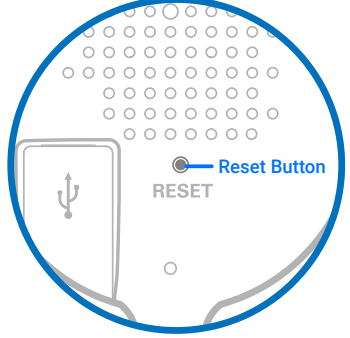
|                                                                                                                                                           |                                                                                                                                                                   |                                                                                                                                      |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| <p>SWIFI-XTRCM/4KXTRM</p>  <p>SET Button</p> <p>RST (pinhole) Button</p> | <p>SWIFI-BUDDY/4KBUDDY/SEVDBC</p>  <p>SET Button</p> <p>RST (pinhole) Button</p> | <p>SWIFI-CORECAM/COREPRO</p>  <p>Reset Button</p> |
| <p>SWIFI-2KOCAM/SPOTCAM</p>  <p>Reset Button</p>                        | <p>SWIFI-FLOCAM</p>  <p>Reset Button</p>                                        | <p>SWIFI-4KFLOCAM</p>  <p>Reset Button</p>       |
| <p>SWIFI-CAM</p>  <p>Reset Button</p> <p>Pair Button</p>               | <p>SWIFI-FOURIFY4</p>  <p>Reset Button</p>                                    | <p>SWIFI-TRACKCAM</p>  <p>Reset Button</p>      |
| <p>SWIFI-2KICAM</p>  <p>Reset Button</p>                               | <p>SWIFI-PTCAM2</p>  <p>Reset Button</p>                                       | <p>SWIFI-ALERTCAM</p>  <p>Reset Button</p>      |

→ CONTINUED NEXT PAGE

# FACTORY RESETTING THE CAMERA

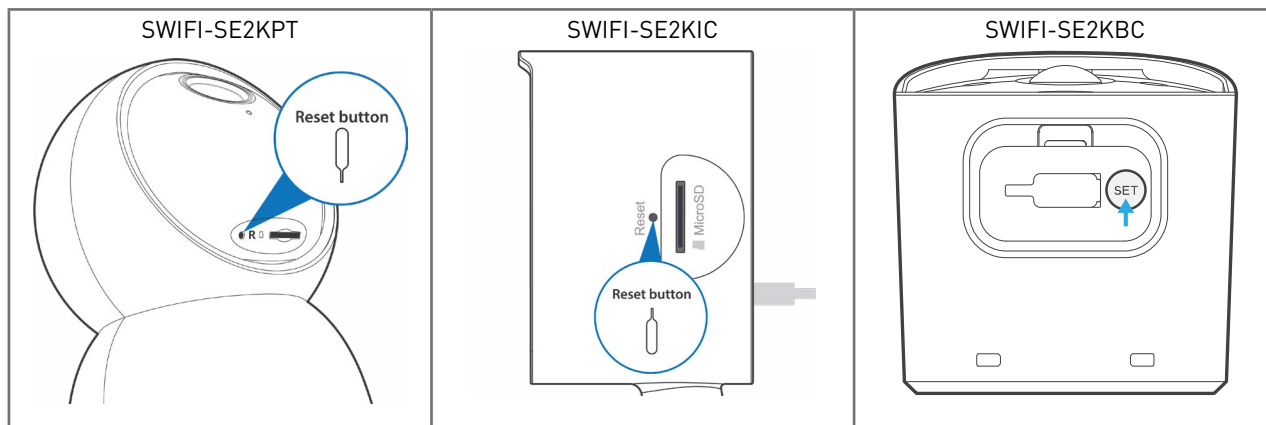

2. Find the factory reset procedures for your device below:

2a. **For models SWIFI-2KICAM/2KOCAM/ALERTCAM/SPOTCAM/4KFLOCAM/FLOCAM/TRACKCAM/PTCAM2:**

- Press and hold the **Reset** button for 20 seconds until the blue LED indicator turns off.
- Release the **Reset** button. The camera will start the factory reset process, which can take up to 2 minutes.

2b. **For models SWIFI-XTRCM/4KXTRM/BUDDY/4KBUDDY/SEVDBC:**

- Press and hold the **SET** and **RST** buttons simultaneously.
- Release the **RST** button and continue holding the **SET** button until the LED indicator starts blinking red.
- Release the **SET** button. The camera will start the factory reset process, which can take up to 2 minutes.

2c. **For models SWIFI-SE2KPT/SE2KIC:**

- Press and hold the **Reset** button for 10 seconds until the blue LED indicator turns off.
- The camera will start the factory reset process, which can take up to 1 minute.

2d. **For model SWIFI-SE2KBC:**

- Press and hold the **SET** button for 15 seconds until the LED indicator starts blinking red.
- The camera will start the factory reset process, which can take up to 1 minute.

2e. **For models SWIFI-CORECAM/COREPRO:**

- Make sure the Power switch is in the **ON** position.
- Press and hold the **Reset** button for 10 seconds until the blue LED indicator turns off.
- Release the **Reset** button. The camera will start the factory reset process, which can take up to 2 minutes.

2f. **For model SWIFI-FOURIFY4:**

- Press and hold the **Reset** button for 10 seconds.
- Release the **Reset** button. You'll hear the camera say "**Restore factory settings and format SD card**". The camera will start the factory reset process which can take up to 2 minutes.

2g. **For model SWIFI-CAM:**

- Press and hold the **Reset** and **Pair** buttons simultaneously
- Release the **Reset** button and continue to hold only the **Pair** button for another 35 seconds.
- Release the **Pair** button. The camera will start the factory reset process, which can take up to 2 minutes.


3. When the factory reset is complete, the camera will be in pairing mode state, indicated by the LED indicator/ring blinking blue slowly (on certain models, you will also hear the device say "**Ready for pairing**").

**IMPORTANT:** After factory resetting your device, you'll have to pair it with your Wi-Fi network again. See "[Pairing the Device](#)" on page 7.


# FINDING YOUR CCTV SYSTEM PASSWORD

You can easily find the password for any DVR/NVR associated with your Swann Security account. This can be particularly helpful when you need to log into your DVR/NVR locally but have forgotten the password.


1. Tap the **Devices** tab > Select your DVR/NVR.

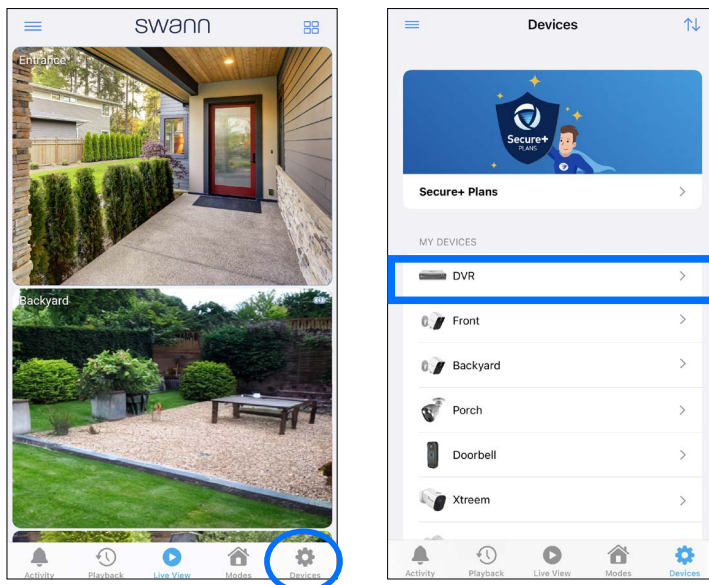

2. Tap on the **Password** field. This will trigger a security challenge on your phone.

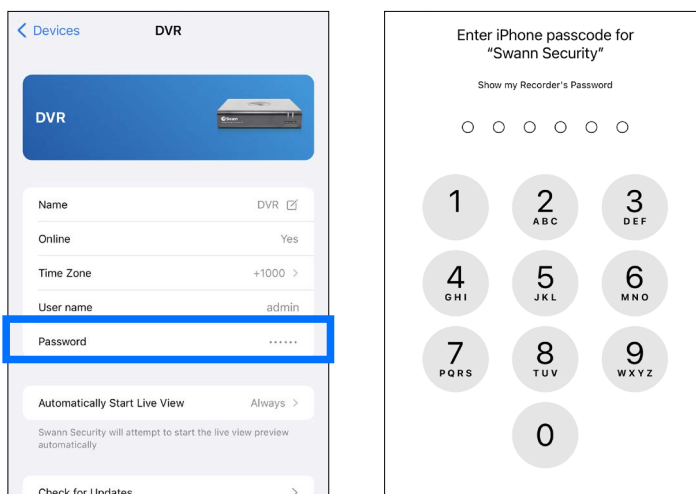

3. Depending on the type of screen lock you have set on your phone, you'll be prompted to use your phone's biometrics (passcode, fingerprint, etc) or your Swann Security account password for authentication. This is to make sure that it is actually you who is wanting to view the stored password.
4. Your DVR/NVR password is revealed in the **Password** field.

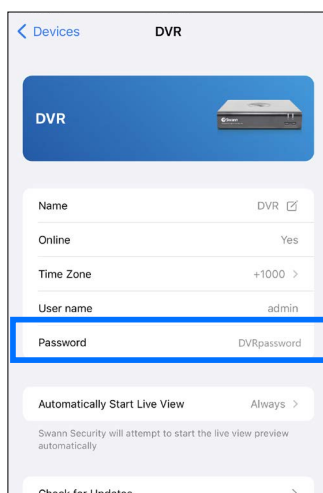

### I have forgotten my Swann Security account password. How do I reset it?

Tap the "Forgot Password" link on the Sign In screen of the Swann Security app and submit the email address that you used to create your account. You'll shortly receive an email with instructions on how to reset your account password.

### Can I access my device with another phone?

Yes. Just install the Swann Security app on your other phone and sign in using the same Swann Security account credentials. For privacy, make sure to sign out of the app on any secondary devices before switching back to your primary phone.

### Can I register my device to another Swann Security account?

A device can be registered to a single Swann Security account only. If you want to register the device to a new account (for example, if you want to give the device to a friend), you'll first need to remove the device (i.e., unpair) from your account. Once removed, the device can be registered to another Swann Security account.

### How do I find my device's ID?

For CCTV systems: The device's ID is listed on a sticker located on the top of the device.

For SWIFI cameras: The device's ID (or MAC address) is listed on a sticker located on the back, bottom or base of the device.

If the device is already paired to your account, you can find the device's ID in the app: **Device tab** > Select the device > **Technical details**

### Why am I not receiving push notifications?

Ensure that the "**Do Not Disturb**" toggle on the **Activity** tab has not been enabled in the app, as this will suppress all push notifications from Swann Security.

### Will I be able to stream live video if I'm travelling overseas?

As long as your mobile phone and the Swann Security devices are both connected to the internet, you can conveniently check in on your devices via the Swann Security app from anywhere in the world.

### Why is live video slow to load?

Camera streaming issues may be caused by any of the following:

- Poor internet/Wi-Fi connection (e.g., weak spots in your cellular/wireless network coverage) is the most common reason. Test your internet speed at [speedtest.net](https://speedtest.net). We recommend internet speeds of at least 2 Mbps for optimal streaming performance. You can also install a Wi-Fi extender to improve the Wi-Fi coverage throughout your home and ensure the camera receives a strong Wi-Fi signal where it is located.
- Limited internet bandwidth at home, for example, other video streaming services running at the same time on your network can cause congestion slowing down the internet upload and download speeds. As a general rule, the more devices you have connected to your Wi-Fi router, the more internet bandwidth you'll need. Contact your Internet Service Provider (ISP) and ask about upgrading your plan to get more bandwidth.

### Why is the video event history not loading in the Playback tab?

After launching the Swann Security app, please allow a moment for camera tiles to load live video before trying to retrieve the video event history of your cameras from the Playback tab.

### I cannot connect the camera to my Wi-Fi network. How do I fix this?

- Make sure the Wi-Fi network that you want the camera to join is not an unencrypted (open) network or 5GHz band network.
- Test your Wi-Fi network with other devices such as smart TV to make sure it is operating properly. Bring your phone to the location where your camera will be installed and check the  Wi-Fi icon on your phone—at least 2 bars is recommended for the Wi-Fi signal to be considered reliable.
- Wi-Fi quality can vary significantly at different locations around the home due to environmental factors such as home construction type (e.g., metal objects are generally known to block Wi-Fi signals. A camera mounted on a metal surface may experience more Wi-Fi problems) and wireless interference from other electronic devices.
- If you're getting a weak Wi-Fi signal or can't connect to Wi-Fi at the installation site, try moving your router closer (to provide a stronger signal), installing a Wi-Fi extender (to increase signal coverage) or selecting another location with better Wi-Fi coverage. Be mindful of the physical barriers located between the camera and router. Ideally, try to place your camera within a clear line of sight to your router.
- The Wi-Fi connection may not be stable during pairing. Try moving the camera closer to your Wi-Fi router.
- The Wi-Fi network password is case sensitive, so make sure to enter it exactly the same as it was created or as found on your Wi-Fi router.
- Check whether your Wi-Fi router is using MAC filtering. MAC filtering provides an extra level of security by ensuring that no unknown devices can connect to your Wi-Fi network without prior authorization. If you cannot disable MAC filtering, you will need to add the camera's MAC address to the router's white-list of allowed devices. You can find the camera's MAC address printed on a label at the bottom of the device.

### Can I use my camera without an internet connection?

No, your camera requires a Wi-Fi network connection with internet access so you can stream live video to your phone and manage the camera's settings.

### Why is my camera offline?

Occasionally you might get a notification that your camera is offline. When your camera can't be reached by the Swann Security server, you'll get a notification that it is offline. This could mean your internet is down, the internet connection between your camera and our server is unstable, or your camera has been moved out of range from your Wi-Fi router. Normally, your camera should come back online by itself once your internet access is available again. If your camera stays offline for an extended period of time, try turning the power to the camera off for 10 seconds before turning it back on. You might also want to make sure that your internet connection is working properly. You can try rebooting your Wi-Fi router to resolve any network connectivity issue.

### Why am I getting false motion alerts?

Moving cars, passersby, direct sunlight or reflection may cause unwanted motion detection. To minimize false motion detections, adjust the camera angle slightly downward and ensure the field of view is focused only on the immediate area of concern and excludes as much background activity as possible. If placed outdoors, avoid locations where your camera will be directly exposed to sunlight during the day. Also, take note of shiny surfaces in the vicinity, such as house or car windows, which can reflect sunlight and trigger your camera's motion sensor. You can also try lowering the motion detection sensitivity to suit the environment.

### Can my camera still record events if my internet connection goes down?

Your camera continues to detect and record events locally to its internal memory even if your home Wi-Fi network or internet is having issues, as long as your camera is not powered off. Once your camera comes back online, it will attempt to upload any event clips that were recorded during the downtime to your cloud storage which you can later view from the Playback tab.

### If I set my camera's live view quality to Low, will it also affect the video quality of event clips?

No, event recordings will always be captured in the highest camera resolution available.

*(Continued on the next page)*

### (For Battery-powered cameras) What can I do to maximize the battery performance on my camera?

Here are some simple and practical tips to get more battery life out of your camera:

- Make sure your camera's firmware is the latest version.
- Your camera will last longer when you stream at a lower resolution. The fewer pixels that your camera has to stream, the less power it uses.
- Lower the motion sensor sensitivity or turn off motion detection to conserve battery life when activity monitoring is not needed.
- Make sure your camera is properly positioned to eliminate any false motion triggering. The more events the camera records, the faster the battery life will drain.
- As a general rule, the nearer your camera is to your router, the better the wireless connection quality and battery performance. Your camera will work harder and use more power trying to maintain wireless connection the further it is away from your router. Consider installing a Wi-Fi range extender if your camera has poor Wi-Fi reception where it is located.
- Your camera can operate over a wide temperature range, however, in freezing conditions, the battery discharges more quickly and will not hold a charge for as long as it normally would in more moderate climates.

### (For Wi-Fi camera models with cloud storage) How far back can I access my camera's cloud recordings?

**Note: Please check the product specifications to find out if the cloud storage feature is available on your camera.**

For Wi-Fi cameras with cloud storage, event recordings displayed on the Playback tab will be available for the length of time determined by the cloud subscription plan associated with the camera. To find out more about the cloud storage subscription plans available for your cameras, go to **App Menu > Secure+ Plans**.

### Can I disable the siren so it doesn't sound when my camera is triggered?

Yes, you can easily set your camera not to activate its built-in siren when an event is detected. Go to your camera's **Devices** tab > Select the camera > **Detection Settings**, and under the **Siren** setting, select **OFF**.

### How long is a camera event clip?

Event clips can be as short as 10 seconds and up to 1 minute in length, depending on how long the sound or motion activity lasts. The camera will begin recording an event when sound or motion is first detected, and continue to record until there is completely no sound or motion. If the camera continues to detect sound or motion for longer than a minute, a new recording will be created as a separate event in the camera's event timeline.

### How long does it take for camera recordings to appear on the Playback tab?

Depending on the size of the video and the strength of your network, this can be highly variable. In normal circumstances, an event should be displayed in the Playback tab video timeline a few minutes after it has been recorded.

### Why doesn't the camera event clip have sound?

Make sure that the camera's microphone volume level is not set to 0% or the volume level set too low—the camera will not be able to pick up any sound in the background when it is recording the event.

### (For devices with local microSD card storage feature) Can my camera record events without a microSD card installed?

No. Events are first recorded to the camera's local storage (i.e., microSD card) and then uploaded to your cloud storage. If the camera doesn't have a microSD memory card installed, it can still detect events but will not be able to record video. The camera will also not be able to download and perform firmware updates without a microSD card.

### (For devices with local microSD card storage feature) Why has my camera stopped recording events?

If you've recently removed your microSD card from the camera (for example, to copy files to your computer) and then re-inserted the card, the camera might not have recognized and mounted the microSD card properly. Try restarting your camera. From the app, go the **Devices** tab > Select the camera > **Advanced** and tap the **Reboot** button.

### (For devices with local microSD card storage feature) What is the maximum microSD card size that can be used?


The maximum microSD card size supported is 128GB (class 10 or higher recommended).

## TROUBLESHOOTING: PAIRING ISSUES


If you're having trouble pairing your device with the Swann Security app, here are some tips that may help you solve the issue.

**Note:** Screenshots are for reference only and may vary depending on device.

- **PAIRING ISSUE - "UNABLE TO JOIN THE NETWORK SWANN-SWIFI-XXXXXX"**

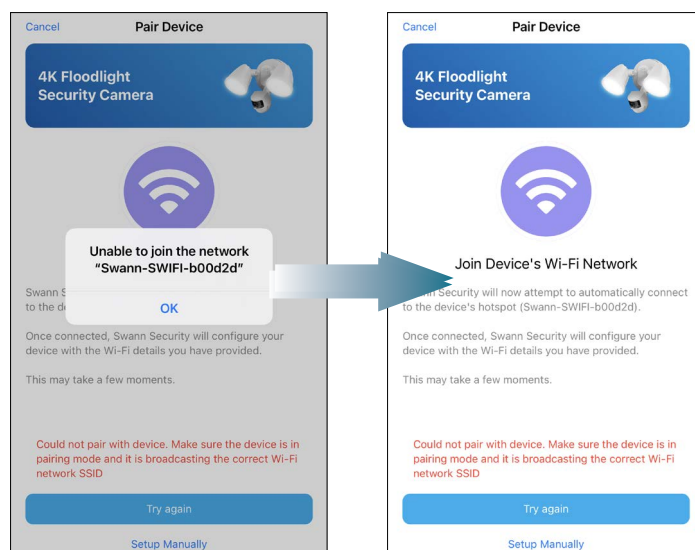


- Make sure the camera is in pairing mode—check the LED indicator on the camera is blinking blue slowly. If the camera is not in pairing mode yet, the app will not be able to proceed with the pairing process.
- If you need to enable pairing mode on the camera, just tap the **Try again** button and follow the on-screen instructions on how to put the camera in pairing mode. In most cases, you will just need to press and hold the camera's **Pair** or **Reset/RST** button for 5 seconds until the LED indicator starts blinking blue.
- Something might be preventing the Swann Security app from connecting to the camera's Wi-Fi hotspot automatically. To fix this issue, you'll have to perform a manual connection to the device. Just tap **"Setup Manually"** and follow the on-screen instructions (see below figure) on how to manually connect to the camera's Wi-Fi network (SWANN-SWIFI-XXXXXX where XXXXXX is the last six characters of the device MAC ID) via your phone's Wi-Fi Settings.

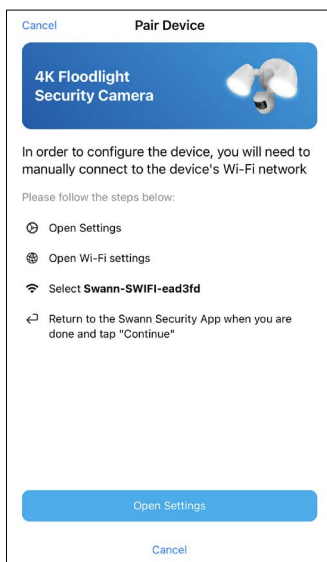

- If the advice above did not resolve the issue, you can try the following:
  1. Reset the camera to factory settings. For information on how to factory reset the camera, see ["Factory Resetting the Camera" on page 46](#).
  2. Restart your phone.
  3. Open the Swann Security app on your phone and try pairing the camera again. Move the camera closer to your phone to make sure that it's in range.

# TROUBLESHOOTING: PAIRING ISSUES

- **PAIRING ISSUE - "FAILED TO ESTABLISH INITIAL CONNECTION"**

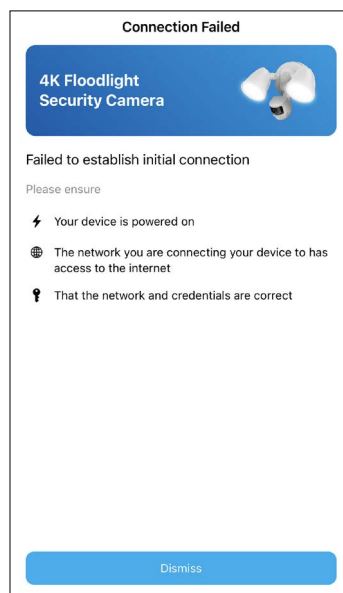


- Make sure you know your Wi-Fi network password and that you have entered it correctly. When entering the password, toggle the  icon on the screen to show the password so you can double-check that you've entered the correct password. Wi-Fi passwords are case-sensitive, so make sure lowercase, uppercase and special characters have been accounted for.
- Make sure your Wi-Fi network uses the **2.4GHz** band (**Not 5GHz**). If your Wi-Fi router broadcasts separate 2.4GHz and 5GHz networks, make sure to choose the 2.4GHz network. **If your router broadcasts the 5GHz network only, contact your Internet Service Provider for information about your router and how to switch it to dual-band (2.4GHz/5GHz).**
- The Wi-Fi connection may not be stable during pairing. Make sure the camera is within range of your Wi-Fi router. Try moving the camera closer to your Wi-Fi router or use a Wi-Fi range extender to improve the Wi-Fi signal throughout your home.
- Test your Wi-Fi network with other devices such as a smart TV to make sure it is working properly.
- Check whether your Wi-Fi router is using MAC filtering. MAC filtering provides an extra level of security by ensuring that no unknown devices can connect to your Wi-Fi network without prior authorization. If you cannot disable MAC filtering, you will need to add the camera's MAC address to the router's white-list of allowed devices. You can find the camera's MAC address printed on a label at the top or bottom of the device.


## ADDITIONAL SUPPORT

If you need further assistance, you can get in touch with us through the app's built-in contact feature.

1. From the app menu, tap **Support**.

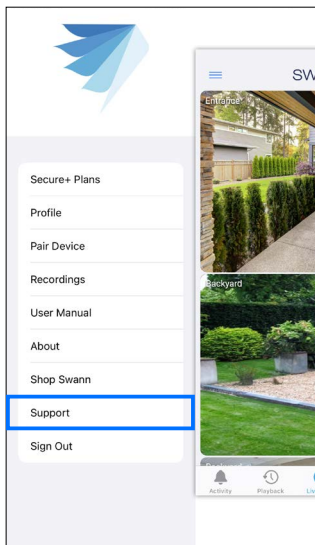

2. Choose from one of the following options:

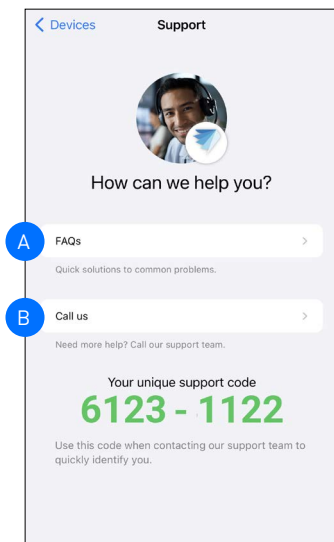

- A Open the link to the [Swann Help Center](#) website where you can find the latest product FAQs, video tutorials, pairing guides, and more.
- B Call Swann Tech Support. Please have your unique 8-digit support code displayed on the screen ready. This will enable our support agent to quickly identify your Swann Security account and assist you in troubleshooting your device.

The content in this manual is for information purposes only and is subject to change without notice. While every effort is made to ensure that this manual is accurate and complete at the time of publication, no liability is assumed for any errors and omissions that may have occurred. For the latest version of this user manual, please visit: [support.swann.com](https://support.swann.com)

Apple and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.

