ESCALADE

CONVENIENCE & PERSONALIZATION GUIDE

2025

cadillac.com

Review this quick reference guide for an overview of some important features in your Cadillac Escalade. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at cadillac.com/owners.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions.

INSTRUMENT PANEL

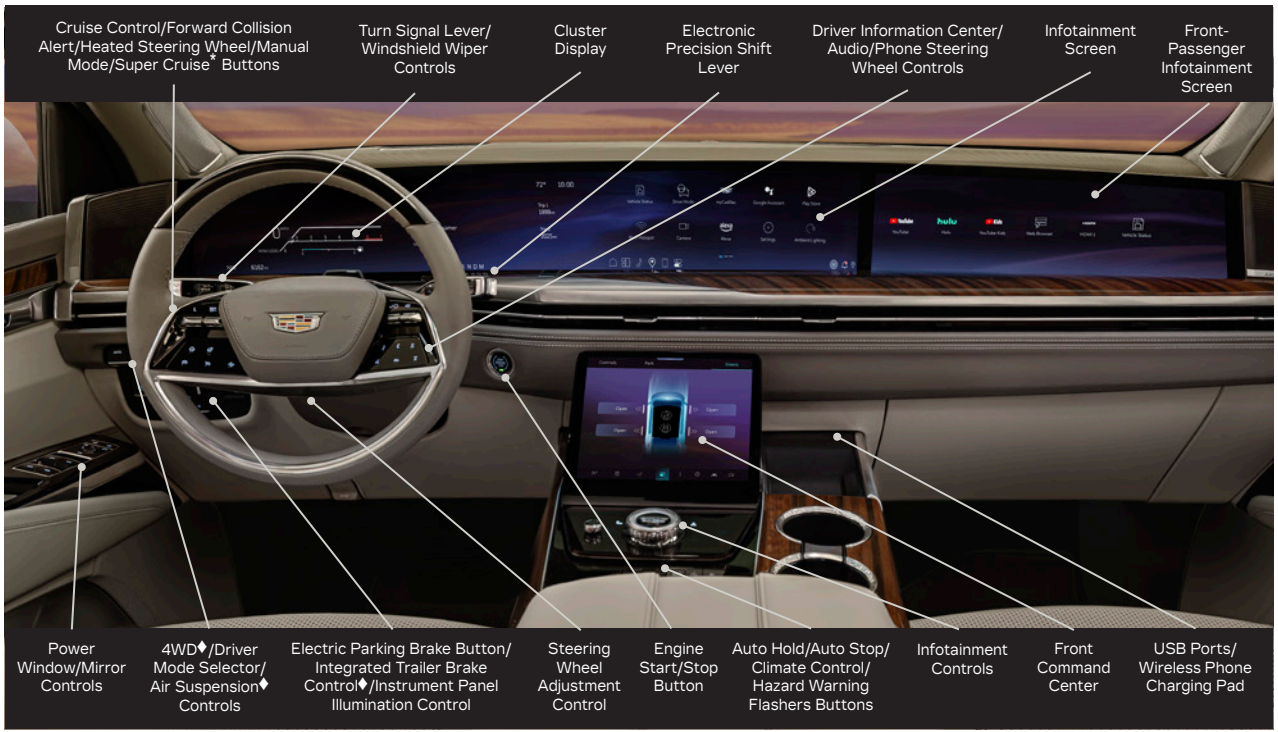

Preproduction model shown throughout. Actual production model may vary.
Certain features shown have limited or late availability, or are no longer available.
See the window label or your dealer regarding the features on an individual vehicle.

See Introduction in your Owner's Manual.

*Refer to the Super Cruise Convenience & Personalization Guide for additional information.

ADVANCED LED DISPLAY

Cluster Display

Infotainment Screen

Selectable Cluster Views

Left Reconfigurable Zone – Audio, Phone, Navigation

Right Reconfigurable Zone – Vehicle/Trip Information

Applications Tray (Shortcuts to Apps)

Infotainment/ Navigation/Vehicle Settings/Vehicle Information Apps

Status Pane

TOUCH CONTROLS

Use simple gestures to interact with the Infotainment Screen.

- Swipe left/right to view the available menus and options.
- Scroll up/down to view menu items.
- Tap to select or adjust the displayed item.
- Press and hold some icons to reset the information.

MULTI-COLOR HEAD-UP DISPLAY (HUD)♦

1. Select HUD on the Infotainment Screen.
2. Touch the controls to adjust the height, brightness and angle of the image.

- To turn the HUD on/off and select HUD content, go to Settings > System > Display > Head-Up Display on the Infotainment Screen.

CLUSTER DISPLAY CONFIGURATION

1. Press the ∧ ∨ switch on the steering wheel to scroll through the cluster views: Gauge, Map, Driver Assistance, Night Vision, AR Camera, Minimalist.
2. Press the ✓ switch to select the desired view.

SELECT VEHICLE INFORMATION (RIGHT RECONFIGURABLE ZONE)

1. Select the Vehicle Status icon on the Infotainment Screen.
2. Select the desired vehicle feature.
3. Select Add to Driver Display to display an item in the right reconfigurable zone. Select Remove from Display to remove an item, or select another item.

See Instruments and Controls in your Owner's Manual.

♦ Optional equipment

Some equipment shown may not be included in your vehicle.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)

Lock

Press to lock all doors, fuel door and liftgate.

Unlock

Press to unlock the driver's door and fuel door only or all doors and liftgate.

Remote Vehicle Start

Press twice to start the engine from outside the vehicle. After entering the vehicle, press the ENGINE START/STOP button.

Rear Liftglass

Press twice to open the rear liftglass.

Power Liftgate

Press twice to open or close the power liftgate. Press once to stop power operation.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. Press and hold for 3 seconds to activate the alarm. Press again to cancel the alarm.

Remote Power Windows

Press and hold the button to fully open the windows or the button to fully close the windows. To enable, go to Settings > Vehicle > Remote Lock, Unlock, and Start > Remote Window Operation.

Automatic Mirror Folding

To enable the automatic power folding mirrors, go to Settings > Vehicle > Comfort and Convenience > Remote Mirror Folding.

Note: To change or enable some remote settings, go to Settings > Vehicle > Remote Lock, Unlock, and Start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and liftgate without removing the Remote Keyless Entry transmitter (key fob) from your pocket or bag. The key fob must be within 3 feet of the liftgate or door being unlocked/locked.

KEYLESS UNLOCKING

With the key fob within range:

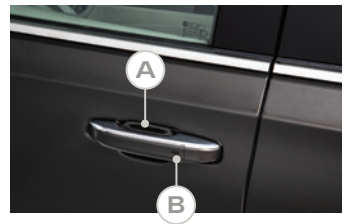

- Press the touchpad (A) on the back of the driver's door handle to unlock the driver's door or all doors and liftgate.
- Press the touchpad on the back of a passenger door handle to unlock all doors and liftgate.
- Press the Cadillac crest under the liftglass to open the liftgate.

KEYLESS LOCKING

With the key fob within range:

- Press the Cadillac crest sensor (B) on the outside of a front door handle to lock all doors and liftgate immediately.

PASSIVE LOCKING

- To have all doors lock automatically after the last door is closed, the ignition is off, and the key fob is removed from the vehicle, go to Settings > Vehicle > Power Door Locks.
- To have the driver's door or all doors unlock when using the touchpad on the driver's door handle, go to Settings > Vehicle > Remote, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

POWER DOORS♦

The doors are always power assisted, even when operated manually. The doors automatically slow down prior to fully opening or closing. If a door is left open, the power assist will hold the door at the same position.

- To open the locked driver's power door from the outside, approach the door with the key fob, or press the exterior door switch. To prevent the door from stopping, stand rearward of the door and clear of the door handle radar. Push the door to have it close automatically.
- To operate a door manually, press and hold the door handle switch while pulling on the door.
- To operate a power door from inside, pull the handle, or use the Front Command Center screen controls.
- To close the driver's door, press the brake pedal.

Note: To change the power door settings, go to Settings > Vehicle > Doors and Locks.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS START

The Remote Keyless Entry transmitter (key fob) must be in the vehicle to turn on the ignition.

START

- With the vehicle in Park or Neutral, press the brake pedal and then press and hold the ENGINE START/STOP button to start the engine. The green indicator on the button will illuminate.

KEYLESS START

STOP/OFF

- Shift to Park and then press the ENGINE START/STOP button to turn off the engine.

Retained Accessory Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof♦ until any door is opened.

ACCESSORY MODE

- With the engine off and the brake pedal NOT depressed, press the ENGINE START/STOP button to place the ignition system in the Accessory Mode. The amber indicator on the button will illuminate.

Note: If the key fob battery is weak, place the key fob in the front cupholder in the center console to enable the engine to start. Replace the key fob battery as soon as possible.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START

Automatic Stop/Start is a fuel-saving feature that automatically turns off the engine when the brake pedal is pressed, the vehicle is at a complete stop, and operating conditions are met. In Auto Stop mode, an AUTO STOP message will display. The engine may remain running or restart when the vehicle is stopped, depending on current operating conditions. When the brake pedal is released or the accelerator pedal is pressed, the engine will automatically restart.

- Press the Auto Stop button on the center console to turn the system on/off.

Auto Stop/Start is turned on each time the vehicle is started.

Note: Disable Auto Stop/Start when using the Rear Seat Media System for continuous play while driving.

See Driving and Operating in your Owner's Manual.

INFOTAINMENT SYSTEM CONTROLS

Read your Owner's Manual for important information about using the infotainment system while driving.

Your Escalade offers a variety of entertainment, communication and vehicle options. Touch an application icon on the Infotainment Screen or use the rotary controller and buttons on the center console to access an item. You can use simple gestures on the touchscreen, such as tap, drag, pinch and spread, to interact with the system. Link a compatible smartphone or portable audio player to the system using a Bluetooth or USB connection. For additional information, visit cadillac.com/support.

Applications:
Touch a screen
icon to access an app

Additional Views/Pages:
Swipe to display additional views or
pages of apps (if available)

Home page

Applications Tray:
Shortcuts
to apps

Return to
previous
screen

Home
screen

Audio
menu

Navigation
menu

Power/Volume:
Press to turn on/Press and
hold to turn off/Press to
mute or unmute/Rotate to
adjust the volume.

Multifunction Controller:
Rotate to highlight a feature on the
infotainment screen/Tilt knob (left,
right, up, or down) to go to the next
item or group on the screen/Press to
select an item.

See Infotainment System in your Owner's Manual.

INFOTAINMENT SYSTEM FEATURES

MANAGING HOME PAGE ICONS

1. Press the ⌂ Home button.
2. To enter edit mode, touch and hold the icon to move.
3. Drag the icon to the Applications Tray or the desired position on the screen.
4. After positioning all icons as desired, select Done.

STORING STATION FAVORITES

Radio stations from all bands (AM, FM or SiriusXM♦) can be stored in any order. Audio source options are on the left side of the Audio screen.

1. Display the desired radio station.
2. Touch the ★ icon. Favorites also can be saved by touching the ★ in a station list.

IN-VEHICLE APPS

In-vehicle apps offering entertainment, news, weather, travel information and more, including Amazon Alexa Built-in, are available on the Infotainment Screen or can be downloaded through the Apps icon. Downloading and using the apps requires internet connectivity, and may require a data plan, accessed through the vehicle's available Wi-Fi Hotspot, if active, or a mobile hotspot. Go to onstar.com for data plan information.

PORTABLE AUDIO DEVICES

USB ports for data and charging are located at the front of the center console and in the console storage compartment.

1. Connect an iPhone®, MP3 player or USB flash drive to the USB port.
2. Touch Audio, and then select the USB device.

GOOGLE BUILT-IN†

Google built-in provides access to some of your favorite apps, including Google Assistant, Google Maps and Google Play.

► Sign in to your Google Account to get your apps, messages, custom directions and more in your vehicle.

Google Assistant – Talk to Google in your compatible Cadillac to get hands-free help to call or text friends, listen to music, set reminders, or even control the temperature in your vehicle.

► To start, say "Hey Google," tap the Google Assistant icon on the Home page, or press and release the Push to Talk button on the steering wheel.

Google Maps – Use Google Maps to find your fastest route, get updates on traffic, find the nearest coffee shop and know how much range/mileage you have left when you select a destination. Sign in to your Google Account for personalized maps with home/recent locations.

Google Play – Download some of your favorite apps in your vehicle just as you would on your phone to listen to music, podcasts, audiobooks and more.

†Google built-in services are subject to limitations and availability may vary by vehicle, infotainment system and location. Select service plan required. Certain Google actions and functionality may require account linking. User terms and privacy statements apply.

Google, Google Play, and Google Maps are trademarks of Google LLC.

See Infotainment System in your Owner's Manual.

INFOTAINMENT SYSTEM FEATURES

SIRIUSXM® WITH 360L♦

The personalized content of SiriusXM with 360L offers more than 200 channels, including ad-free music, sports, comedy, talk and news, along with access to On Demand shows, performances and interviews. Certain features require a SiriusXM subscription and a Connected Access plan. See siriusxm.com and onstar.com for details.

APPLE CARPLAY® AND ANDROID AUTO™†

Apple CarPlay or Android Auto capability is available through a compatible smartphone using the Apple CarPlay or Android Auto icon on the Home page.

1. Download the Android Auto app to your phone from the Google Play Store. No app is required for Apple CarPlay.
2. There are two ways to set up device projection:
   - Wireless Connection – Connect your phone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
   - Wired Connection – Connect your phone to a USB data port using the USB cable provided with your phone. Aftermarket USB cables may not work.
3. Follow the instructions on the Infotainment Screen and phone.
4. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.

► To exit Apple CarPlay or Android Auto, press the ⌂ Home button. To return to Apple CarPlay or Android Auto, press and hold the ⌂ Home button.

See Infotainment System in your Owner's Manual.

†Android and Android Auto are trademarks of Google LLC; Apple CarPlay is a trademark of Apple Inc. User terms and privacy statements apply.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving.

To use a Bluetooth-enabled device, it must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions. The vehicle must be stopped to pair a device. Enable Bluetooth on the device before pairing.

PAIR A PHONE

1. Press and hold the Push to Talk button to start the pairing process on the Infotainment Screen (if a phone is not connected). To use the Infotainment Screen, select the Phone icon > Manage Phones > +Add Phone..
2. From the phone's Bluetooth settings, select the name shown on the Infotainment Screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.

FIRST TO CONNECT PHONE

Multiple phones can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect.

► To set the First to Connect phone, select the Phone icon > Phones.

BLUETOOTH VOICE RECOGNITION

Bluetooth Voice Recognition allows access to the voice recognition commands on a compatible, paired phone; e.g., Siri or Google Assistant.

► To activate Bluetooth Voice Recognition, press and hold the Push to Talk button for 3-4 seconds.

See Infotainment System in your Owner's Manual.

NAVIGATION SYSTEM

- Select the Navigation icon on the Home screen to start a route, get directions, choose a display view and select other features.
- Select Settings to save Home and Work destinations, set map preferences and more.
- Swipe on the screen or use the rotary controller to view the surrounding area, powered by Google Street View.

AUGMENTED REALITY VIEW

Route guidance and upcoming turns appear as graphics on the front camera image displayed in the Cluster Display.

- To view the Augmented Reality View, after entering a destination and selecting a route, select AR Camera from the Cluster Display menu.

See Infotainment System in your Owner's Manual.

WIRELESS PHONE CHARGING

The wireless phone charging system is located in the center console. Visit cadillac.com/support to check device compatibility. See your phone retailer for required phone accessories or charging adapters.

1. The vehicle must be On or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the phone on the pad.
4. The ϟ battery charging symbol will display on the Infotainment Screen. If not charging, remove the phone for 3 seconds, and rotate it 180 degrees, before placing it on the pad again.

See Instruments and Controls in your Owner's Manual.

WI-FI® HOTSPOT

With the vehicle's available built-in Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet. For information on use and system limitations, visit cadillac.com/support.

- To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon on the Infotainment Screen.

See Infotainment System in your Owner's Manual

VEHICLE CUSTOMIZATION

Many vehicle features can be turned on/off and customized using the Settings menus on the Infotainment Screen, including Remote Start, Power Liftgate, Wipers and others.

1. Touch Settings on the Home screen.
2. Select the desired feature and setting.
3. Touch Back to exit each menu.

See Infotainment System in your Owner's Manual.

FRONT-PASSENGER INFOTAINMENT SCREEN

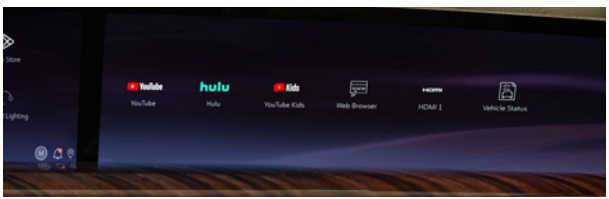

The Front Media System includes a touchscreen, HDMI port, Bluetooth headphone support and video support.

- To power on the system and view the Home page, tap anywhere on the screen.
- Touch Off on the navigation bar to turn the screen off.
- Select an application or the web browser to stream media or view web content, if equipped.

See Infotainment System in your Owner's Manual.

REAR SEAT MEDIA SYSTEM♦

The Rear Seat Media System includes 2 touchscreens, 2 HDMI ports and 2 Bluetooth wireless headphones.

- To power on the system and view the Home page, double tap anywhere on either screen.
- To power on the system and control the screen sources from the front seats, select the Entertainment Hub icon on the Infotainment Screen.
- Touch the Headphone icon on the screen to pair headphones or view a list of available headphones.

See Infotainment System in your Owner's Manual.

UNIVERSAL REMOTE SYSTEM

The Universal Remote System enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.

STEERING WHEEL CONTROLS

A. CRUISE CONTROL/ADAPTIVE CRUISE CONTROL

Note: Refer to the Super Cruise Convenience & Personalization Guide for information on Super Cruise functionality.

On/Off

SET– Set Speed

With Cruise Control on , rotate the thumbwheel down to set the current cruise speed.

RES+ Resume Speed

With Cruise Control on , rotate the thumbwheel up to resume the set speed.

Adjust Speed

With a cruise speed set, rotate the thumbwheel up or down to the first detent to increase or decrease the set speed in 1-mph increments; rotate the thumbwheel past the detent to increase or decrease the set speed to the next 5-mph interval on the speedometer.

Cancel

Press to cancel Cruise Control without erasing the set speed from memory.

Press and hold to switch between regular Cruise Control and Adaptive Cruise Control .

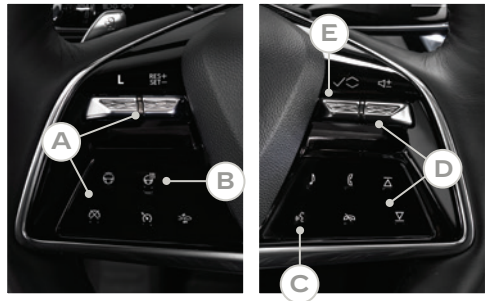

Follow Distance Gap (Adaptive Cruise Control)

Press to select a targeted gap setting of Far, Medium or Near — the time between your vehicle and a vehicle detected directly ahead.

See Driving and Operating in your Owner's Manual.

B. HEATED STEERING WHEEL

On/Off

See Instruments and Controls in your Owner's Manual.

C. VOICE RECOGNITION

Push to Talk

Press to use Google Assistant.

Press and hold to use natural voice recognition with the Bluetooth system of a paired, compatible phone.

See Infotainment System in your Owner's Manual.

D. AUDIO/PHONE CONTROLS

Volume

Press + or – to adjust the volume.

Next/Previous

Press or to select the next or previous stored favorite radio station or track.

Audio

Press to view the audio source.

Phone

Press to answer a call or view the phone menu.

End Call/Mute

Press to end/decline a call or mute/unmute the audio system.

See Infotainment System in your Owner's Manual.

E. DRIVER INFORMATION CENTER CONTROLS

Select/Scroll

Press the thumbwheel to open a menu, select or reset an item, or clear a message. Rotate the thumbwheel up or down to scroll through the active menu.

See Instruments and Controls in your Owner's Manual.

CLIMATE CONTROLS

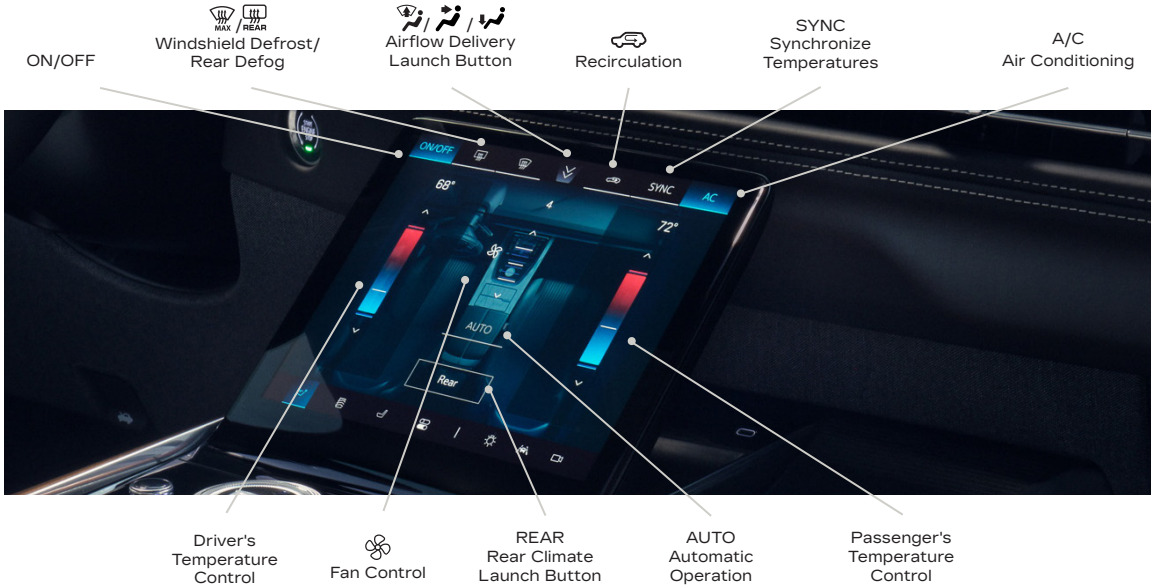

AUTOMATIC OPERATION

- Press the AUTO button. The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature.

REAR CLIMATE CONTROLS

Use the rear climate control touchscreen or select the Rear Climate icon on the Front Command Center screen controls to adjust the rear climate control settings.

See Climate Controls in your Owner's Manual.

SEAT FEATURES

POWER SEAT ADJUSTMENTS

Use the controls on the side of the Front Seats or Executive Second-Row Seats♦ to adjust the seat position. With the ignition on, turn the Feature Select knob to view and select the available settings displayed on the Front Command Center or Rear Command Center.♦

A. Seat Adjustment

B. Seatback Recline

C. Feature Select Control/Lumbar Support

D. Seat Massage♦

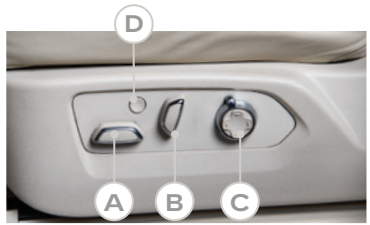

SET DRIVER'S SEAT MEMORY POSITIONS

With the ignition On or in Accessory mode:

1. Adjust the driver's seat and power outside mirrors to the desired positions.
2. Press and release the SET button on the driver's door. A beep will sound.
3. Immediately press and hold button 1 or 2 until two beeps sound. Use the button that matches the Driver Information Center welcome message indicating driver 1 or 2.

► To store seat and power steering column positions for exiting the vehicle, repeat the steps using the Exit button.

RECALL DRIVER'S SEAT MEMORY POSITIONS

► Press and hold button 1, 2 or Exit until the set position is reached.

► To enable the seat positions to be recalled automatically when the vehicle is turned On/Off (for exit recall, the driver's door must be opened), go to Settings > Vehicle > Seating Position.

2ND-ROW SEAT ADJUSTMENTS

► To slide a 2nd-row seat, lift the front lever (E) on the side of the seat cushion.

► To recline a 2nd-row seatback, lift the rear lever (F) on the side of the seat cushion and push on the seatback.

► To fold a 2nd-row seat, lift the rear lever (F) on the side of the seat cushion or, from the 3rd-row seat, pull the strap on the bottom of the seatback. The seatback will fold forward. Lift the lever or pull the strap again to tumble the seat forward.

► To return the seat to the upright position, pull down the seat and lift the seatback until it locks in place. Slide the seat rearward by using the lever (E) on the seat cushion.

Note: Do not slide the 2nd-row seat while folded.

See Seats and Restraints in your Owner's Manual.

SEAT FEATURES

POWER RELEASE 2ND-ROW SEATS

1. Unbuckle the seat belts, remove anything under or in front of the seats, and move the front seats forward to allow room for the folded seat.
2. Press the Seat Release button (A) on the panel behind each rear door or the x2 2nd-Row Seat button (B) in the cargo area. The seatback will fold forward.
3. Press either button again to tumble the seat forward.

► To return the seat to the upright position, pull down the seat and lift the seatback until it locks in place

POWER FOLDING/UNFOLDING 3RD-ROW SEATS

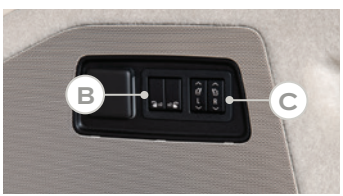

1. Unbuckle the seat belts, remove anything on the seats, and move the 2nd-row seats forward to allow room for the folded seats.
2. Press and hold the bottom of the 3rd-Row Seat button (C) in the cargo area or 3rd-Row Folding Seat button on the front overhead console to fold the seatback.

► To unfold the seat, press and hold the top of either button.

See Seats and Restraints in your Owner's Manual.

POWER LIFTGATE

OPEN/CLOSE THE POWER LIFTGATE

► Press the x2 Power Liftgate button on the Remote Keyless Entry transmitter (key fob) twice to open or close.

► Press the Power Liftgate knob (A) on the overhead console to open or close.

► Press the Escalade crest below the liftglass to open.

► Press the button (B) next to the liftgate latch to close.

PROGRAMMING THE LIFTGATE HEIGHT

1. Turn the Power Liftgate knob (A) to the 3/4 position.
2. Open the liftgate. Adjust it manually to the desired height.
3. To save the setting, press and hold the button (B) next to the liftgate latch until the turn signals flash and a beep sounds.

HANDS-FREE OPERATION

► The liftgate will open automatically when the key fob is within 3 feet of the rear of the vehicle for several seconds. Beeps sound and the taillights flash before the liftgate will open. Move the key fob more than 3 feet away from the vehicle to cancel an automatic opening.

Note: To change the liftgate settings, go to Settings > Vehicle > Comfort and Convenience > Hands-Free Exterior Storage Access on the Infotainment Screen.

See Keys, Doors and Windows in your Owner's Manual.

ELECTRONIC PRECISION SHIFT

The automatic transmission is electronically controlled using the shift lever on the right side of the steering column. The selected position is illuminated in red on the lever and is shown on the cluster display.

Park – Press the P button on the end of the lever to shift into Park.

Reverse – Press the brake pedal and then pull the lever toward you and up to shift into Reverse.

Neutral – Press the brake pedal and then pull the lever toward you and hold briefly to shift into Neutral.

Note: The vehicle will not stay in Neutral for an extended period. It will automatically shift into Park. See Car Wash Mode in your Owner's Manual.

Drive – Press the brake pedal and then pull the lever toward you and down to shift into Drive.

Manual Mode – Allows you to choose the top gear limit to reduce transmission shifts and vehicle speed when driving downhill or towing a trailer. With the transmission in Drive, press the L (Low) switch on the steering wheel. On the back of the steering wheel, press the top-left (-) control to downshift or the top-right (+) control to upshift. Press the L switch again to return to Drive.

See Driving and Operating in your Owner's Manual.

DRIVER MODE SELECTOR

The Driver Mode Selector settings automatically adjust various vehicle control systems based on driving preferences, weather and road conditions. The modes are displayed on the Infotainment Screen.

► Press the MODE button (A) on the left side of the instrument panel to select a different driving mode.

Available modes may include:

Tour – Use in normal driving for a smooth ride.

Sport – Use for enhanced responsiveness. Performance Shift Features are enabled when spirited driving is detected.

Snow/Ice (2WD only) – Use for enhanced acceleration on slippery surfaces.

Off-Road (4WD♦ only) – Use for enhanced control on unpaved roads or trails at moderate speeds. Accelerator pedal mapping, steering, ride height and other systems are modified.

Tow/Haul – Use to reduce shift cycling when towing or hauling heavy loads in stop-and-go traffic or rolling hills.

My Mode – Allows the engine sound, steering and braking feel to be customized to your preference.

See Driving and Operating in your Owner's Manual.

FOUR-WHEEL DRIVE♦

► Use the four-wheel-drive buttons (A) on the left side of the instrument panel to shift into and out of four-wheel drive.

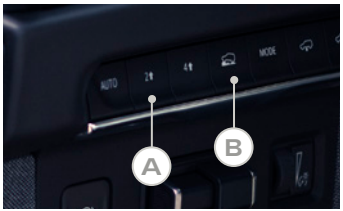

Shift between 2H, 4H, and AUTO at normal driving speeds. The current status of the transfer case is displayed on the Cluster Display.

AUTO Automatic 2WD High/4WD High – Use when traction conditions vary; engages the front and rear wheels automatically based on driving conditions.

2H 2WD High – Use for most streets and highways.

4H 4WD High – Use when extra traction is needed or in most off-road driving.

4L 4WD Low (2-Speed Transfer Case♦) – Use when driving off-road in deep sand, mud or snow, or on steep hills. Shift into or out of this mode when the vehicle is stopped or moving less than 3 mph with the transmission in Neutral.

N Neutral (2-Speed Transfer Case♦) – Use to dolly or dinghy tow the vehicle. Refer to your Owner's Manual for the shift procedure.

TERRAIN MODE (4WD Single-Speed Transfer Case only)♦

► Press the button (B) for enhanced control in low-speed, off-road conditions. The transmission will hold a lower gear longer to maximize engine torque. The system automatically provides light vehicle braking. Only available when in 4H.

See Driving and Operating in your Owner's Manual

AIR RIDE ADAPTIVE SUSPENSION♦

The Air Ride Adaptive Suspension offers load-leveling and adjustable ride height capabilities.

1. Press either Ride Height button on the left side of the instrument panel to display the menu on the Cluster Display.
2. Press the Down Ride Height button (A) or Up Ride Height button (B).
3. After a brief pause, the menu will time out and the selection will be saved.

Ride heights that are unavailable for selection will be grayed out in the menu. Available modes may include:

Normal Ground Clearance – Use for normal driving.

Entry/Exit Ground Clearance – Lowers the vehicle for easy entry/exit.

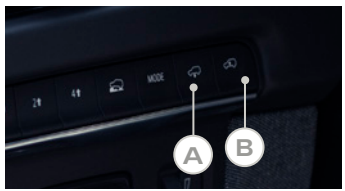

Increased Ground Clearance – Raises the vehicle 1 inch from Normal. 4WD♦ models only.

Maximum Ground Clearance – Raises the vehicle 2 inches from Normal. 4WD♦ models only; available only in 4WD Low.

Aero – Automatically lowers the vehicle when vehicle speed exceeds 65 mph for a period of time to improve aerodynamics. This feature cannot be user-selected.

► To have the vehicle automatically lower to the Entry/Exit height when the vehicle is shifted to Park, go to Settings > Vehicle > Ride Height > Easy Exit Vehicle Height.

Note: Heavy use of the air suspension may cause the system to temporarily suspend all height changes to allow the air compressor to cool down.

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

Following are some of the many advanced driver assistance systems that may be on your vehicle. Refer to your Owner's Manual for more information on all available systems.

► To turn the following driver assistance systems on/off or to change the system settings, go to Settings > Vehicle > Collision/Detection Systems on the Infotainment Screen.

SAFETY ALERT SEAT – The driver's seat pulses (left, right or both sides) to alert you of the direction of potential hazards. Audible alerts may be selected instead of seat-pulsing alerts.

FORWARD COLLISION ALERT – The Vehicle Ahead Indicator on the Cluster Display is green when a vehicle is detected ahead that you're following and is amber when following a detected vehicle ahead much too closely. When approaching a detected vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

► Press the Forward Collision Alert button on the steering wheel to set the alert timing to Far, Medium or Near. This is also the Adaptive Cruise Control Follow Distance Gap setting.

ENHANCED AUTOMATIC EMERGENCY BRAKING – The system works with Forward Collision Alert to help you avoid or reduce the severity of a front-end collision with a vehicle you're following. Camera technology is used to automatically provide hard emergency braking or enhance the driver's hard braking.

INTERSECTION AUTOMATIC EMERGENCY BRAKING – The system can help you avoid or reduce the severity of an intersection collision with a detected cross-traffic vehicle. It provides alerts and may automatically provide hard emergency braking or enhance the driver's hard braking.

LANE CHANGE ALERT WITH BICYCLE DETECTION — The system works to help you avoid a potential collision with a detected vehicle or bicycle in an adjacent lane. While driving, the system displays a warning symbol on the left- or right-side mirror when a moving vehicle is detected rapidly approaching or is in that side blind zone. The symbol flashes if a turn signal is activated when a vehicle has been detected on the same side. If a bicycle is detected, the Safety Alert Seat may pulse or beeps may sound (if selected). Bicycle Detection is available for a short time after the vehicle is turned off.

BLIND ZONE STEERING ASSIST – The system can help you avoid a potential collision with a detected vehicle in an adjacent lane. If a vehicle is detected in the adjacent lane that you are entering, the system provides an urgent steering wheel turn to alert you to take action and the Safety Alert Seat may pulse or beeps may sound (if selected). The green Lane Keep Assist indicator will turn amber and the warning symbol will flash on the left- or right-side mirror. The system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle.

► To turn on or off, press the Lane Keep Assist button (A) on the Front Command Center screen controls.

DRIVER ASSISTANCE SYSTEMS

FRONT PEDESTRIAN BRAKING WITH BICYCLIST DETECTION – During daytime driving, the system detects pedestrians and bicycles directly ahead and displays an amber indicator on the Cluster Display. When approaching a detected pedestrian or bicycle too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected). The system may automatically provide hard emergency braking or enhance the driver's hard braking. Nighttime and low-visibility performance are limited.

REVERSE AUTOMATIC BRAKING – In detected, potentially imminent collision situations with some objects behind your vehicle while in Reverse, the system can provide alerts and hard emergency braking, if you have not already done so, to help reduce the severity or help avoid collisions at very low speeds.

FRONT♦ AND REAR PARK ASSIST – During low-speed parking maneuvers, the system provides "distance to closest object" information on the Driver Information Center and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or 5 beeps sound (if selected).

REAR PEDESTRIAN ALERT – During daytime driving with the vehicle in Reverse, the system can detect pedestrians directly behind the vehicle and will display an amber indicator on the Infotainment Screen. When a pedestrian is detected close to the vehicle, the indicator flashes red and the Safety Alert Seat pulses or rapid beeps sound (if selected). Nighttime and low-visibility performance are limited.

REAR CROSS TRAFFIC BRAKING – When in Reverse, the system warns of detected cross traffic coming in either direction by displaying a red alert on the Infotainment Screen and pulsing the left or right side of the Safety Alert Seat or sounding beeps (if selected). The system may automatically provide hard emergency braking, if you have not already done so.

HD SURROUND VISION – The system uses multiple cameras to display a high-resolution image of the area around your vehicle along with front- and rear-camera views on the Infotainment Screen. The system operates when in Reverse or Drive while moving less than 8 mph.

► The Surround Vision camera also can be activated by selecting the Camera icon on the Home page or the Front Command Center.

ENHANCED AUTOMATIC PARKING ASSIST♦ – The system can search for a parallel or perpendicular parking space and then steer and brake the vehicle into that space while shifting gears as needed. It can also help you unpark the vehicle after parallel parking. While using the system, you need to remain in your vehicle and be prepared to override and take control.

► To activate the system, select Auto Parking Assist on the Infotainment Screen. A parking-assist display will be shown. Follow all instructions as directed.

See Driving and Operating in your Owner's Manual.

REAR CAMERA MIRROR♦

The Rear Camera Mirror provides a wider, less-obstructed field of view than a traditional mirror to assist when driving, changing lanes and checking traffic conditions.

A. On/Off

Pull or push the lever at the bottom of the mirror to turn the video display on or off.

B. Selection Control

Press and release the button to select the brightness, zoom or tilt setting.

C. Adjustment Controls

Press and release either button to adjust the selected setting.

- Rotate the Rear Wiper control band to the washer position to clean the Rear Camera Mirror lens and rear window.

See Keys, Doors and Windows in your Owner's Manual.

TIRE PRESSURE MONITORING

The Low Tire Pressure light illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Infotainment Screen.

When inflating a tire, the Tire Fill Alert sounds the horn and changes the turn signals from flashing to solid when the recommended tire pressure is reached (does not apply to spare tire).

See Vehicle Care in your Owner's Manual.

LIGHTING

EXTERIOR LIGHTS

- Select the Automatic Light Control icon on the Front Command Center to turn the auto headlamps on/off.

INTELLIBEAM SYSTEM

- To enable the IntelliBeam system, which automatically turns the high-beam headlamps on/off based on traffic conditions when it is dark enough, go to Controls > Auto High Beams. The exterior lamps must be in the Auto setting. The AUTO symbol on the Cluster Display indicates the system is on. The symbol appears when the high-beam headlamps are on.

Note: The IntelliBeam system activates the high-beam headlights only when driving more than 25 mph.

DOME LAMPS

- To turn a reading lamp on/off, press the lamp lens.
- To turn on/off all reading/dome lamps with the doors closed, press and hold either reading lamp in the overhead console.
- To turn all dome lamps off when the doors are open, press the OFF button on the overhead console.

See Lighting in your Owner's Manual.

OWNER PRIVILEGES™

ROADSIDE ASSISTANCE **1-800-224-1400**
TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump starts, lockout service, fuel delivery and flat-tire assistance. Services are provided for up to 6 years/70,000 miles, whichever occurs first.

OnStar® Roadside Assistance

If you have a current OnStar Safety & Security Plan, press the blue OnStar button or red Emergency button (for emergencies only) to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue OnStar button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

CUSTOMER ASSISTANCE **1-800-333-4223**

Cadillac Customer Assistance is available anytime to answer questions or provide additional information.

myCADILLAC MOBILE APP

Download the myCadillac app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can use your device to start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit onstar.com for more details. Download the mobile app from your compatible mobile device's app store.

MY CADILLAC ACCOUNT

Create an account at cadillac.com/owners to access personalized information, including an online Owner's Manual and helpful how-to videos; track your service history and warranty status; manage your OnStar and Connected Services vehicle plans; review your current Vehicle Diagnostics report (active service account required); and more.

We recommend always using ACDelco or GM Genuine Parts.

87855310 A

Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2024 General Motors LLC. All Rights Reserved.

8785 5310