

User Manual

ANNKE

Network Video Recorder

Thank you very much for choosing ANNKE.

Our products are supported by the world's first video monitoring manufacturers,
and they have adopted military level of protection.

It is our top priority to ensure your data safety and offer you a satisfactory service.

We strongly recommend that you set up an appropriate password for your device and save it,
also set up security questions and reserved email to ensure you can reset password by yourself.

If you have any questions, please feel free to email us at **support@annke.com**.

Or visit our help center: **help.annke.com**.

Please download ANNKE App, Client software and user manuals from our download center:

<https://www.annke.com/pages/download-center>

Free call for US and CA, +1 833 717 0187

Production Information

Thank you for purchasing our NVRI! This manual is designed for the installation and operation of this product. You can get more information about the features and functions of this product in details. Please read this manual carefully before using. Please contact us if you have any questions.

Legal Disclaimer

REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. OUR COMPANY SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, OUR COMPANY WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED. SURVEILLANCE LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS THE APPLICABLE LAW. OUR COMPANY SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES. IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.

Regulatory Information

FCC Conditions

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Warning Statements:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment shall be installed and operated with minimum distance 20cm between the radiator & body.

EU Conformity Statement



This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the EMC Directive 2004/108/EC, the RoHS Directive 2011/65/EU and Amendment (EU)2015/863.



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info



2013/56/EU (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: www.recyclethis.info

Safety Instruction

These instructions are intended to ensure that user can use the product correctly to avoid danger or property loss. The precaution measure is divided into [Warnings] and [Cautions].

Warnings: Serious injury or death may occur if any of the warnings are neglected.

Cautions: Injury or equipment damage may occur if any of the cautions are neglected.

	
Warnings: Follow these safeguards to prevent serious injury or death.	Cautions: Follow these precautions to prevent potential injury or material damage.



Warnings

- Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.
- In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region. Please refer to technical specifications for detailed information.
- Input voltage should meet both the SELV (Safety Extra Low Voltage) and the Limited Power Source with 100 to 240 VAC or 12 VDC according to the IEC60950-1 standard. Please refer to technical specifications for detailed information.
- Do not connect several devices to one power adapter as adapter overload may cause over-heating or a fire hazard.
- Please make sure that the plug is firmly connected to the power socket.
- If smoke, odor or noise rise from the device, turn off the power at once and unplug the power cable, and then please contact the service center.

Prevention and warning tips:

Only qualified maintenance personnel can perform equipment installation and maintenance. Please make sure to read and understand the complete manual before installation.

- Please install the equipment away from the elderly and children, so as not to cause electrical injury.
- Please ensure the safety of electricity use to avoid fire caused by current overload.
- The NVR unit is designed for indoor use only. Make sure the device is installed in a well-ventilated and dust-free environment. Keep the NVR away from liquids.
- The camera unit supports dustproof and waterproof. Can support outdoor use. Please make sure to fix it firmly. Avoid injury from falling.
- When connecting the cable of the camera unit, please ensure that the connection is waterproof and dustproof. Inadequate links can easily damage the device.
- Before connecting and disconnecting accessories and peripheral devices, turn off the power of the device to avoid damage to the device.
- This device should use the hard disk recommended by the factory. Hard disks of different quality may cause the device to fail to record and fail to start.

Table of Contents


EN

1. What's in the box	06
2. Connection Diagram	07
3. Setup The System	08
3.1 Activate your device.....	08
3.2 Wizard setting.....	10
3.3 Menu structure.....	10
3.4 Live View.....	11
3.5 Motion detection.....	12
3.6 Playback.....	12
3.7 Add IP Camera.....	12
4. Remote Access	13
4.1 Accessing by Mobile Client.....	14
4.2 Accessing by desktop software.....	15
5. FQA	17


DE

1. Was ist in der Box	18
2. Schaltplan	19
3. Richten Sie das System ein	20
3.1 Aktivieren Sie Ihr Gerät.....	20
3.2 Assistenteneinstellung.....	22
3.3 Menüstruktur.....	22
3.4 Liveübertragung.....	23
3.5 Bewegungserkennung.....	24
3.6 Wiedergabe.....	24
3.7 IP-Kamera hinzufügen.....	24
4. Fernzugriff	25
4.1 Zugriff über Mobile Client.....	26
4.2 Zugriff über Desktop-Software.....	27
5. FQA	29


1. What's in the box

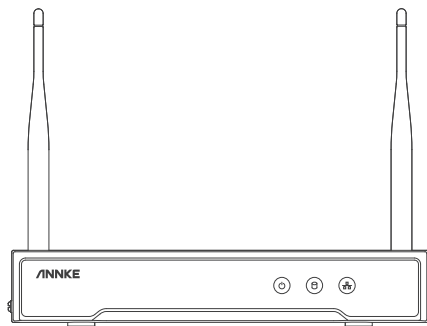


WiFi NVR x1

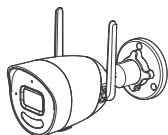


WiFi IP Camera x4




DC12V 1A Power supply for IPC x4



DC12V 2A Power supply for NVR x1

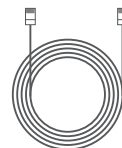

Network Cable x1




USB Mouse x1




Wall Sticker x1



User Manual x1




HDMI Cable x1



Screw bag for IPC x4

2. Connection Diagram

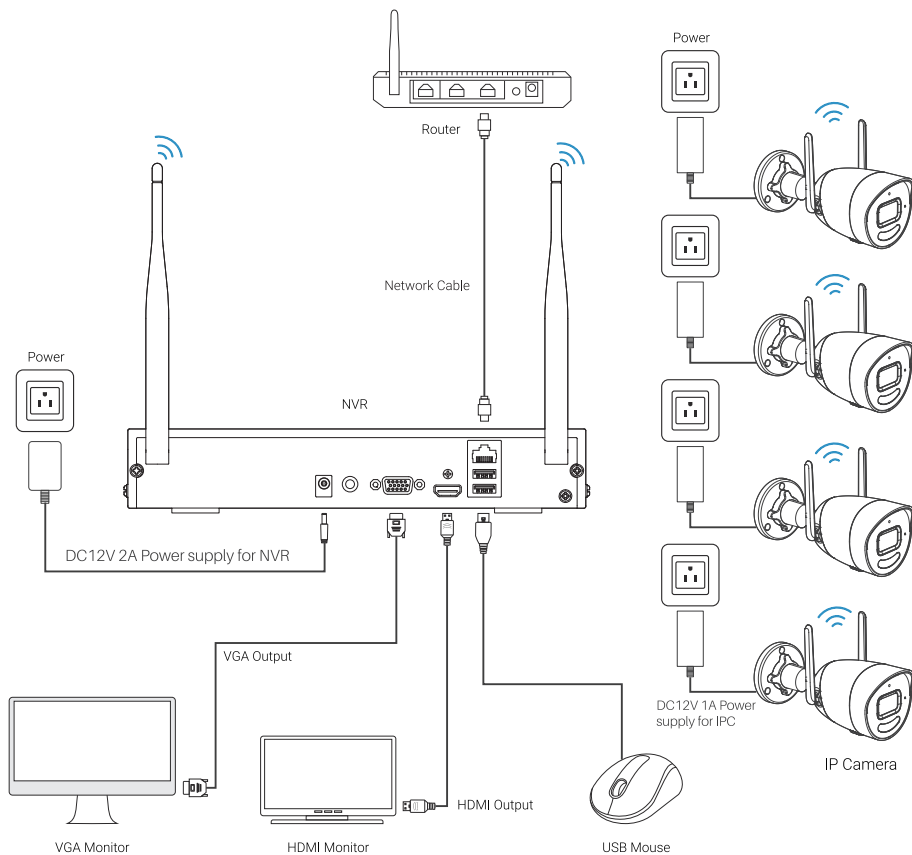

3. Setup The System

Before setup the system, please note:

1. You can record and play back only after a hard disk is installed, otherwise you can only preview. Please check if your device has a hard drive installed, **before installation, please make sure the power is disconnected from your NVR.**
2. It is recommended that the resolution of the display connected to the NVR is 1080P or higher, and the minimum resolution requirement is 1024*768.
3. Power on the NVR and IP cameras, the system will start automatically, the supplied Wi-Fi kit cameras will connect to NVR automatically.
4. When install camera, make sure that there is no reflective surface too close to the camera lens to prevent IR reflection. Wrap the DC12V and RJ45 interface of camera with waterproof tape.
5. Make sure the distance between Cameras and NVR is no more than 15m at first power up. If you want to install a camera in a long distance, you can enable the repeater function on NVR.

3.1 Activate your device

After selecting the system language that you want, you will be prompted to activate the device by setting a memorable administrator password for the first-time access. You can check the password by clicking on the little eye behind the input field. Please select the correct area / country where your device is located.

Activation	
User Name	admin
Create New P...	■■■■■
Confirm New P...	■■■■■
Use Device Pa...	☒
IP Camera Acti...	☐
Reserved E-m...	☒
Valid password range[8-16]. You can use a combination of numbers, lowercase, uppercase and special character for your password with at least two kinds of them contained.	
Wi-Fi	
Area/Country	North America ▼



STRONG PASSWORD RECOMMENDED– We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Then you need to set a reserved email and security question to reset the administrator password in case you forget it.

Reserved E-mail Settings	
Reserved E-mail Settings	
When resetting password, your reserved email will receive a verification code. Use that code to reset the admin password.	
OK Cancel	

Security Question Configuration	
Security Question1	Your father's name.
Answer	
Security Question2	Your mother's name.
Answer	
Security Question3	Your senior class teacher's name.
Answer	
The answer is the certification to get your password back. Please take photos and save it.	
Skip Next	

If you forget your password in some day, click Forgot Password on the login interface and select a method to reset it.

Login	
User Name	admin
Password	
Forgot Password OK Cancel	

Password Reset Type	
☒ Verify by Security Question	☐ Verify by Reserved Email
OK Cancel	

3.2 Wizard setting

The setup wizard can guide you through some settings of the device. Choose the correct time zone, dates and time as needed. Complete the wizard step by step. Basically none of these settings need to be changed.

Wizard	
Time Zone	(GMT-05:00) Eastern Time(U.S. & Canada) ▾
Date Format	DD-MM-YYYY ▾
System Date	22-02-2021 
System Time	19:53:57 


Previous

Next

Exit

3.3 Menu structure


Right click your mouse, click menu, you can get the menu below:

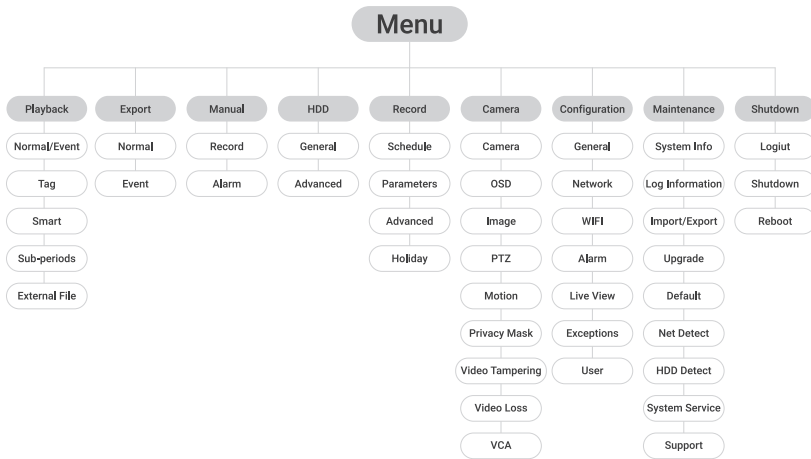


Note: Pictures in this user manual are for reference only, please consult with the real product.

3.4 Live View

In live view mode, right click mouse to get main menu. And there are icons at the right top of the screen for each channel, showing the status of the record, Wi-Fi and alarm, so you can find problems as soon as possible.

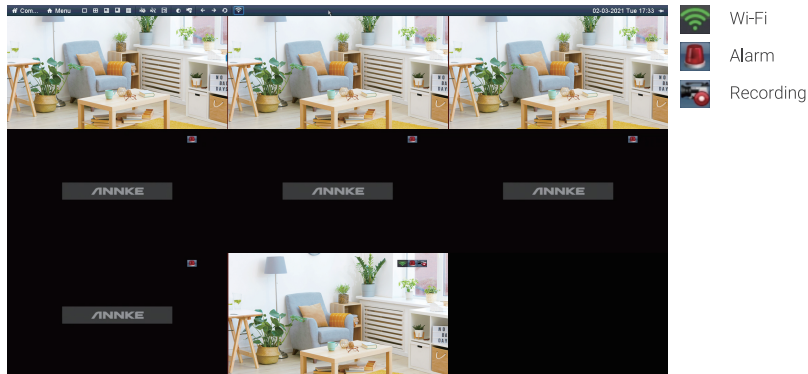


You can change NVR's output to 1080P in the interface **Menu-Configuration-General-VGA/HDMI Resolution** for better display effect if your monitor support 1080P or higher resolution.

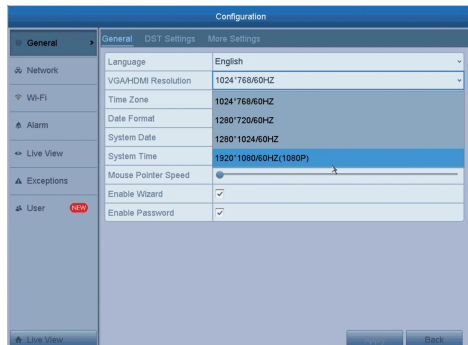

3.5 Motion detection

The motion detection is enabled 24/7 and for all area by default, if you want to change the settings, please right click the mouse, click **Menu-Camera-Motion** to set the sensitivity level, area, more settings like arming schedule, linkage action.

The suitable motion detection areas, period and sensitivity level will reduce the false alarms.

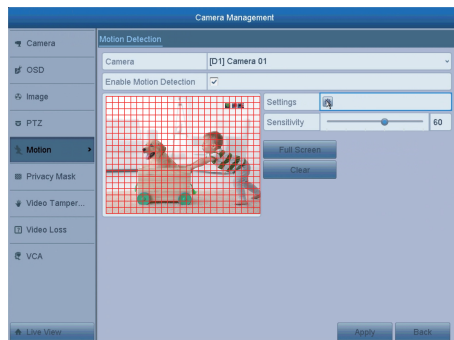

3.6 Playback

The recorded video files on the hard disk can be played back in several modes: instant, normal, smart, event, tag, sub-periods, and support external file playback.

In the normal mode, choose the channel that you want to playback, and then double click the date to start playback.



3.7 Add IP Camera

The NVR support up to 8 IP camera input, you can add more IP camera to the NVR.


Make sure the IP camera is not activated before the installation, you can hold the RESET button of the camera for 10 seconds to restore the camera to defaults after power up.

Right click the screen by mouse and select Wi-Fi Match. The camera connects to the NVR within 120 s.



If you want to install the camera at a long distance after matching, you can enable the repeater function on the MENU-Camera Management-Camera-IP Camera interface.


Select the camera No. and click Enable Repeater. It is recommended that the longest distance between the camera and the NVR is no more than 30 meters.

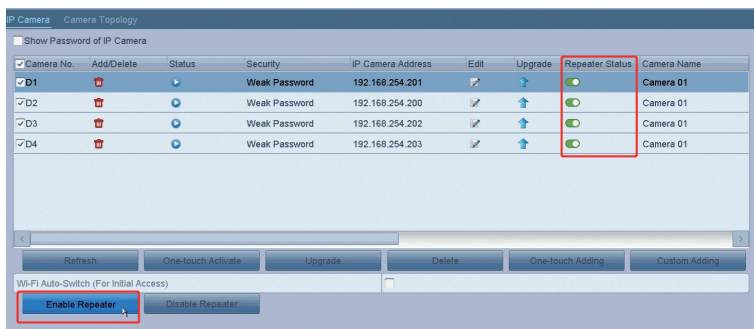

4. Remote Access


You can get remote view when the NVR has been connected to the internet. Use a network cable to connect NVR and your router, enable P2P service in the

Menu-Configuration-Network-Platform Access, create an encryption password and make sure the P2P status is online first.

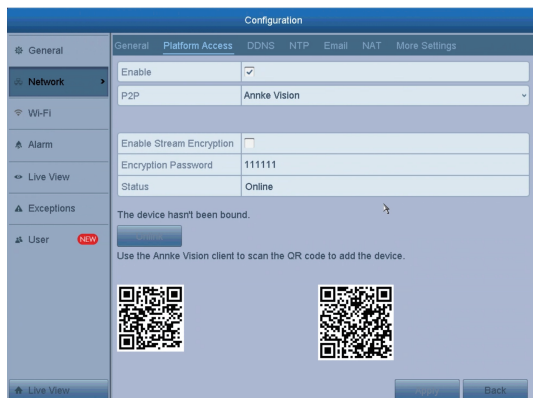


4.1 Accessing by Mobile Client


1. Download and install **ANNKE VISION** APP from Google Play or Apple Store, select the correct country or region, register an account by your mobile phone or email address.

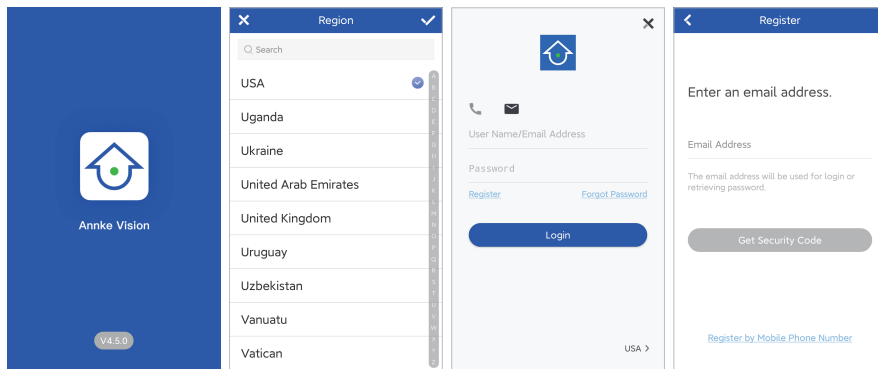

2. Select “+” or click the icon “+” in the upper right corner to add a device. You can follow the path “Menu-Configuration-Network-Platform Access” to scan the SN’s QR code.

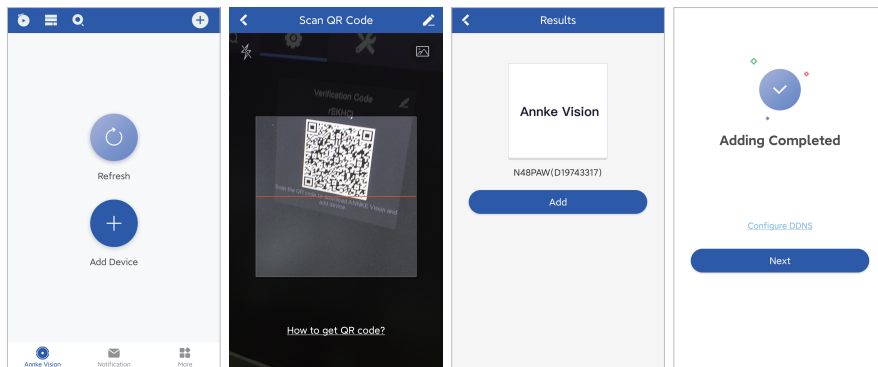


3. Select the device to get real-time preview, click the icon “...” in the upper right corner to enter into the interface of function, you can playback, change settings and other functions. click "More" to check more information.

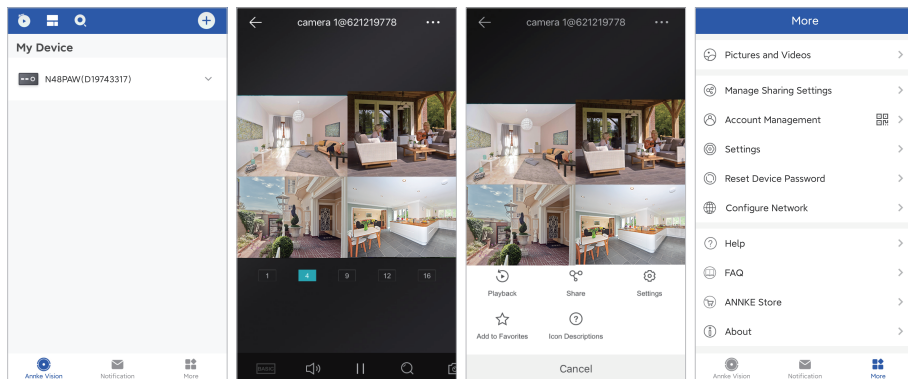

Note: For your security, one SN can only be added by one account. But an account can be used on multiple mobile phones.

4.2 Accessing by desktop software

1. Download desktop software Guarding Vision from www.annke.com/pages/download-center, follow the installation prompts to install the software, the control panel interface is shown below.

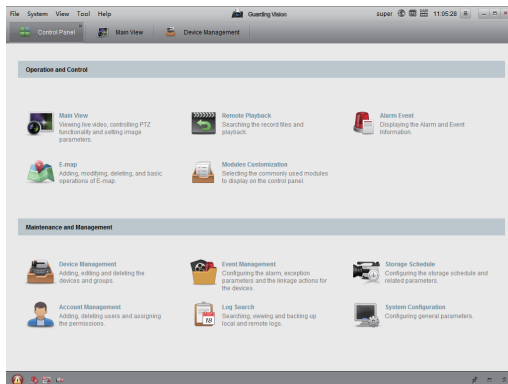

5. FAQ

1. How far can the cameras work from the NVR?

- 1). It depends on the Wi-Fi signal strength and interference attenuation. It's recommended to place the cameras within the range of 60ft-100ft away from the NVR. When there are many 2.4G WIFI signals around or there are many walls, the transmission distance will be shorter.
- 2). Therefore, we recommend to test the signal strength of the camera at the installation location before installing the camera. You can extend the transmission distance by turning on the repeater function of the camera through the NVR.


2. What should I do if there is no live video sometimes?

- 1). Open the repeater function of the camera through the NVR as mentioned in the section 3.7 Add IP camera.
- 2). Check the quality of the wifi signal from the live interface. If the wifi signal is poor, move the camera close to the NVR or adjust the antenna of the camera and NVR.


3. How can I receive the push notifications from my mobile phone?

- 1). Make sure the camera has connected to the NVR and your NVR has been connected to the internet, the p2p has been enabled and the p2p status is online.
- 2). Make sure your phone has connected to the internet, and the NVR has been added to your mobile app Annke Vision.
- 3). Select NVR in the device list of the app, then enter the device settings to enable notifications. Then, if there is a moving object in a certain channel, you will receive the push alert message of the corresponding channel.


1. Was ist in der Box

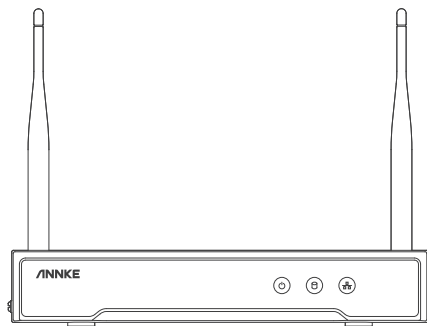


WIFI NVR x1

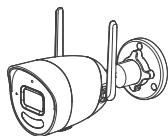


WIFI IP-Kamera x4




DC12V 1A Netzteil für IPC x4



DC12V 2A Netzteil für NVR x1

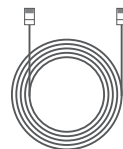

Netzwerkabel x1




USB-Maus x1



Wandaufkleber x1



Benutzerhandbuch x1




HDMI-Kabel x1



Schraubbeutel für IPC x4

2. Schaltplan

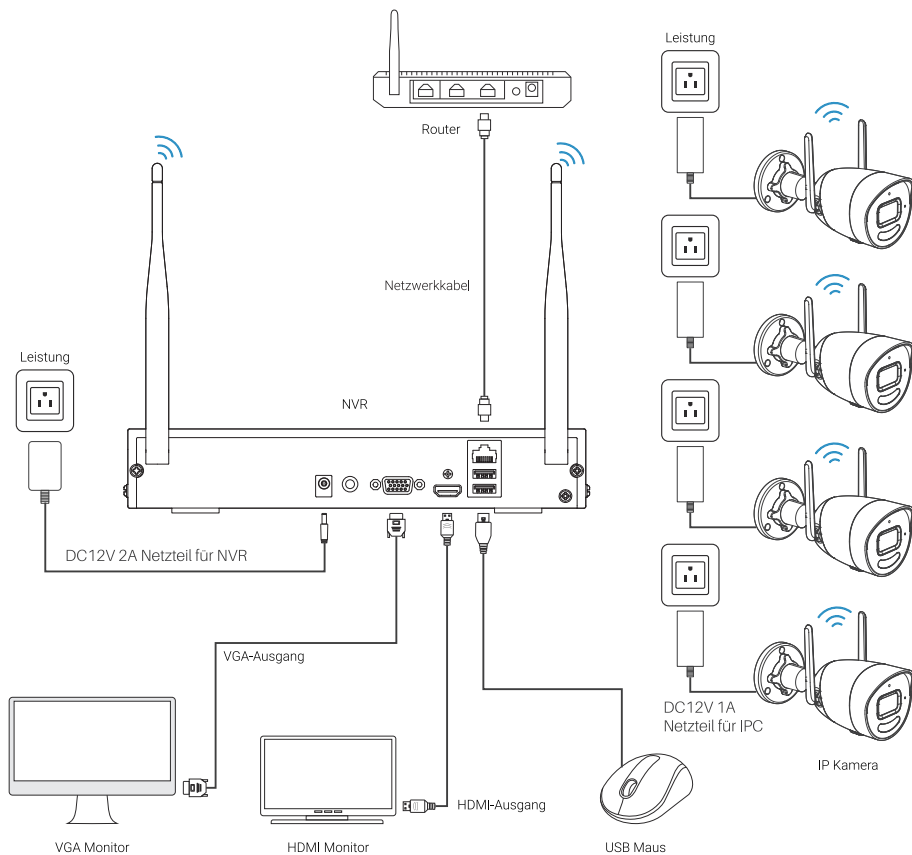

3. Richten Sie das System ein

Beachten Sie vor dem Einrichten des Systems Folgendes:

1. Sie können erst aufnehmen und wiedergeben, nachdem eine Festplatte installiert wurde. Andernfalls können Sie nur eine Vorschau anzeigen. Überprüfen Sie vor der Installation, ob auf Ihrem Gerät eine Festplatte installiert ist, und stellen Sie sicher, dass die Stromversorgung von Ihrem NVR getrennt ist.
2. Es wird empfohlen, dass die Auflösung des an den NVR angeschlossenen Displays 1080P oder höher und die Mindestauflösungsanforderung 1024 * 768 beträgt.
3. Schalten Sie die NVR- und IP-Kameras ein. Das System wird automatisch gestartet. Die mitgelieferten Wi-Fi-Kit-Kameras stellen automatisch eine Verbindung zum NVR her.
4. Stellen Sie beim Installieren der Kamera sicher, dass sich keine reflektierende Oberfläche zu nahe am Kameraobjektiv befindet, um eine IR-Reflexion zu verhindern. Wickeln Sie die DC12V- und RJ45-Schnittstelle der Kamera mit wasserdichtem Klebeband um.
5. Stellen Sie sicher, dass der Abstand zwischen Kamera und NVR beim ersten Einschalten nicht mehr als 15 m beträgt. Wenn Sie eine Kamera über große Entfernungen installieren möchten, können Sie die Repeater-Funktion am NVR aktivieren.

3.1 Aktivieren Sie Ihr Gerät

Nachdem Sie die gewünschte Systemsprache ausgewählt haben, werden Sie aufgefordert, das Gerät zu aktivieren, indem Sie ein einprägsames Administrator Kennwort für den erstmaligen Zugriff festlegen. Sie können das Kennwort überprüfen, indem Sie auf das kleine Auge hinter dem Eingabefeld klicken. Bitte wählen Sie den richtigen Bereich / das richtige Land, in dem sich Ihr Gerät befindet.

Aktivierung

Benutzername	admin
Neues Kennw...	
Kennwort best...	
Gerätekennw...	☒
IP-Kamera-Akti...	☐
Reserved E-m...	☒
✓ Ungültiger Kennwortbereich [8-16]. Kennwort kann eine Kombination aus Zahlen, Klein- und Großbuchstaben und Sonderzeichen aufweisen und sollte mindestens zwei Arten davon aufweisen.	
Region/Land	North America

OK

Abbrechen



STARKES PASSWORT EMPFOHLEN - Wir empfehlen Ihnen dringend, ein sicheres Passwort Ihrer Wahl zu erstellen (mit mindestens 8 Zeichen, einschließlich Großbuchstaben, Kleinbuchstaben, Zahlen und Sonderzeichen), um die Sicherheit Ihres Produkts zu erhöhen. Wir empfehlen Ihnen, Ihr Passwort regelmäßig zurückzusetzen, insbesondere im Hochsicherheitssystem. Wenn Sie das Passwort monatlich oder wöchentlich zurücksetzen, können Sie Ihr Produkt besser schützen.

Sie müssen eine reservierte E-Mail- und Sicherheitsfrage festlegen, um das Administratorkennwort zurückzusetzen, falls Sie es vergessen.

Reserved E-mail Settings	
Reserved E-mail Settings	
When resetting password, your reserved email will receive a verification code. Use that code to reset the admin password.	
OK Cancel	

Security Question Configuration	
Security Question1	Your father's name.
Answer	
Security Question2	Your mother's name.
Answer	
Security Question3	Your senior class teacher's name.
Answer	
The answer is the certification to get your password back. Please take photos and save it.	
Skip Next	

Wenn Sie Ihr Passwort irgendwann vergessen haben, klicken Sie in der Anmeldeschrittstelle auf Passwort vergessen und wählen Sie eine Methode aus, um es zurückzusetzen.

Login	
Benutzername	admin
Passwort	
Forgot Password OK Abbrechen	

Password Reset Type	
☒ Verify by Security Question	☐ Verify by Reserved Email
OK Cancel	

3.2 Assistenteneinstellung


Der Setup-Assistent kann Sie durch einige Einstellungen des Geräts führen. Wählen Sie die richtige Zeitzone, Daten und Zeit nach Bedarf. Beenden Sie den Assistenten Schritt für Schritt. Grundsätzlich muss keine dieser Einstellungen geändert werden.

Assistent	
Zeitzone	(GMT-05:00) Eastern Time(U.S. & Canada) ▼
Datum Format	DD-MM-YYYY ▼
Datum	28-02-2021 
Zeit	22:27:54 

Zurück Nächste Verlassen

3.3 Menüstruktur

Klicken Sie mit der rechten Maustaste, klicken Sie auf Menü, um das folgende Menü:

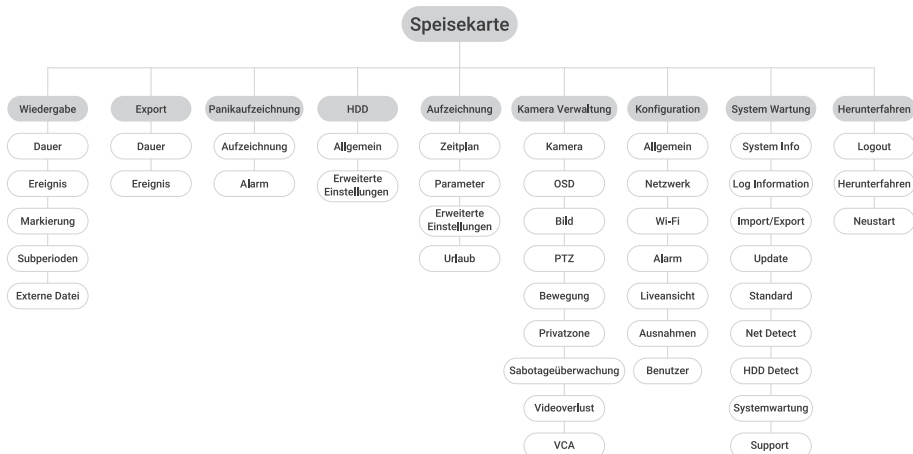

Hinweis: Die Bilder in dieser Bedienungsanleitung dienen nur als Referenz. Bitte wenden Sie sich an das Originalprodukt.

3.4 Liveübertragung

Klicken Sie im Live-Ansichtsmodus mit der rechten Maustaste, um das Hauptmenü aufzurufen. Oben rechts auf dem Bildschirm befinden sich Symbole für jeden Kanal, die den Status der Aufzeichnung, des WLANs und des Alarms anzeigen, sodass Sie Probleme so schnell wie möglich feststellen können.




Wi-Fi



Alarm




Aufzeichnung

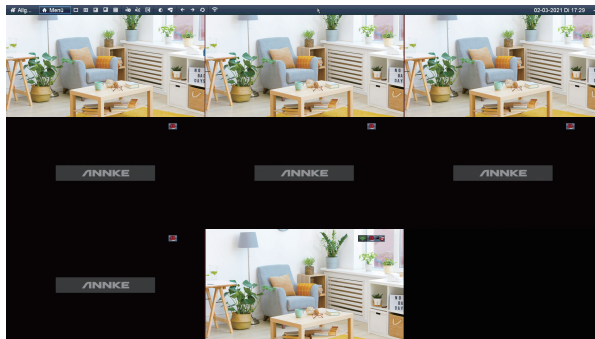


Sie können den NVR-Ausgang in der Benutzeroberfläche

Menü-Konfiguration-Allgemein-Auflösung auf 1080P ändern, um einen besseren Anzeigeeffekt zu erzielen, wenn Ihr Monitor eine Auflösung von 1080P oder höher unterstützt.

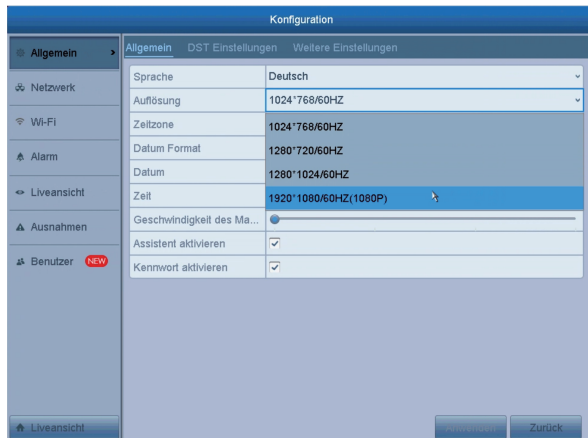

3.5 Bewegungserkennung

Die Bewegungserkennung ist rund um die Uhr aktiviert. Wenn Sie die Einstellungen für alle Bereiche ändern möchten, klicken Sie mit der rechten Maustaste und klicken Sie auf **Menü-Kamera-Bewegung**, um die Empfindlichkeitsstufe, den Bereich und weitere Einstellungen wie Aktivierungsplan und Verknüpfung festzulegen Aktion. Die geeigneten Bewegungserkennungsbereiche, Perioden und Empfindlichkeitsstufen reduzieren die Fehlalarme.

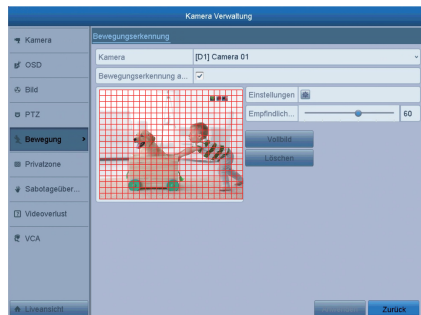

3.6 Wiedergabe

Die auf der Festplatte aufgezeichneten Videodateien können in verschiedenen Modi wiedergegeben werden: Sofort, Normal, Smart, Ereignis, Tag, Unterperioden und Unterstützung für die Wiedergabe externer Dateien. Wählen Sie im normalen Modus den Kanal aus, den Sie wiedergeben möchten, und doppelklicken Sie dann auf das Datum, um die Wiedergabe zu starten.



3.7 IP-Kamera hinzufügen

Der NVR unterstützt bis zu 8 IP-Kameraeingänge. Sie können dem NVR weitere IP-Kameras hinzufügen.


Stellen Sie sicher, dass die IP-Kamera vor der Installation nicht aktiviert ist. Halten Sie die RESET-Taste der Kamera 10 Sekunden lang gedrückt, um die Standardeinstellungen der Kamera nach dem Einschalten wiederherzustellen.

Klicken Sie mit der rechten Maustaste auf den Bildschirm und wählen Sie Wi-Fi Match. Die Kamera wird innerhalb von 120 s mit dem NVR verbunden.



Wenn Sie die Kamera nach dem Abgleich über große Entfernungen installieren möchten, können Sie die Repeater-Funktion auf der Benutzeroberfläche Menü-Kamera-Management-Kamera-IP-Kamera aktivieren.

Wählen Sie die Kameranummer aus und klicken Sie auf Repeater aktivieren. Es wird empfohlen, dass der größte Abstand zwischen Kamera und NVR nicht mehr als 30 Meter beträgt.

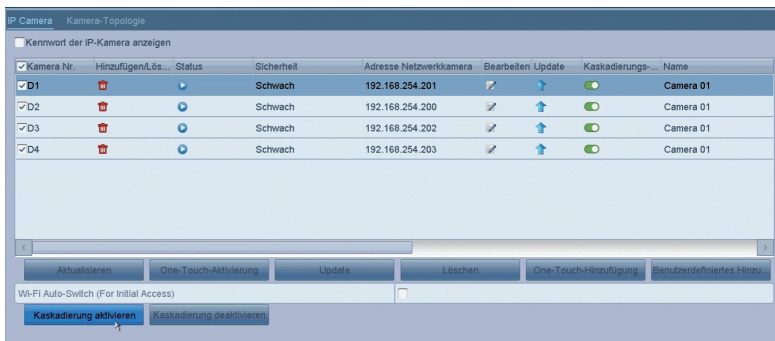


4. Fernzugriff

Sie können eine Remote-Ansicht erhalten, wenn der NVR eine Verbindung zum Internet hergestellt hat. Verwenden Sie ein Netzkabel, um den NVR und Ihren Router zu verbinden, aktivieren Sie den P2P-Dienst im **Menü-Konfiguration-Netzwerk-Plattformzugriff**, erstellen Sie ein Verschlüsselungskennwort und stellen Sie sicher, dass der P2P-Status zuerst online ist.




4.1 Zugriff über Mobile Client


1. Laden Sie die **ANNKE VISION** APP von Google Play oder dem Apple Store herunter und installieren Sie sie. Wählen Sie das richtige Land oder die richtige Region aus und registrieren Sie ein Konto über Ihr Mobiltelefon oder Ihre E-Mail-Adresse.

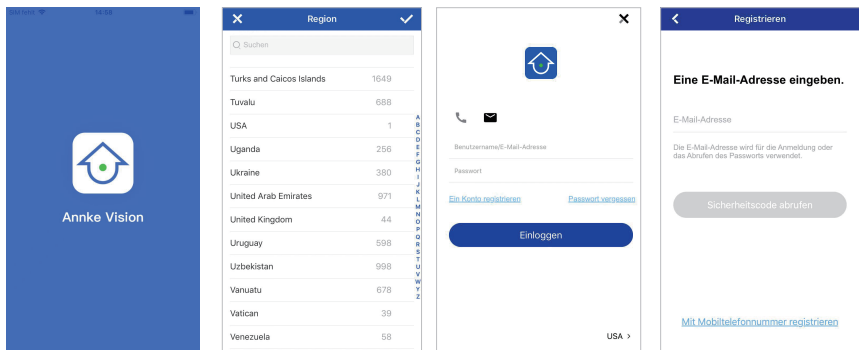

2. Wählen Sie "  " oder klicken Sie auf das Symbol "  " in der oberen rechten Ecke, um ein Gerät hinzuzufügen. Folgen Sie dem Pfad "Menü-Netzwerk-Plattform-Zugriff", um den QR-Code des SN zu scannen.

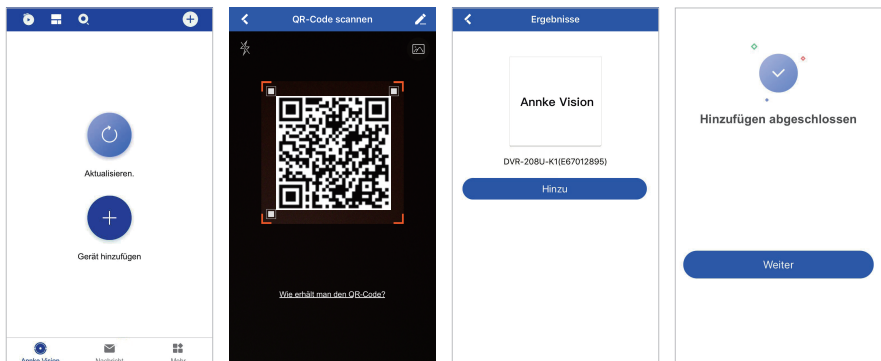


3. Wählen Sie das Gerät aus, um eine Echtzeitvorschau zu erhalten, klicken Sie auf das Symbol " ••• " in der oberen rechten Ecke, um die Funktionsoberfläche aufzurufen. Sie können wiedergeben, Einstellungen und andere Funktionen ändern. Klicken Sie auf "Mehr", um weitere Informationen zu überprüfen.

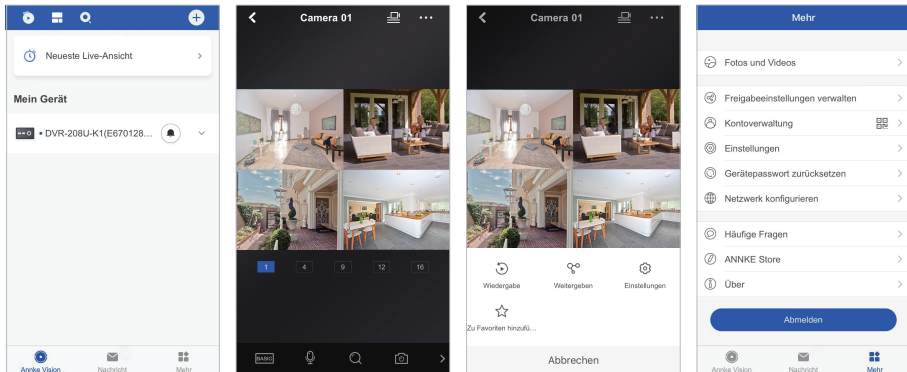


Hinweis:: Zu Ihrer Sicherheit kann eine SN nur von einem Konto hinzugefügt werden. Ein Konto kann jedoch auf mehreren Mobiltelefonen verwendet werden.

4.2 Zugriff über Desktop-Software


1. Laden Sie die Desktop-Software Guarding Vision von www.annke.com/pages/download-center herunter. Befolgen Sie die Installationsanweisungen, um die Software zu installieren. Die Benutzeroberfläche des Bedienfelds ist unten dargestellt.

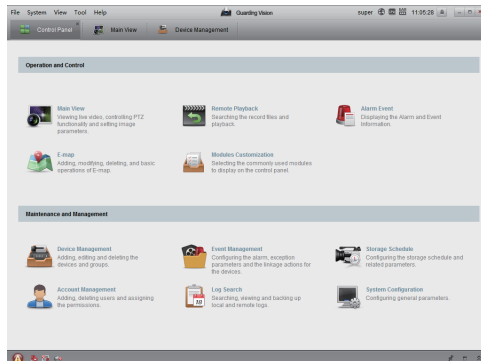

2. Klicken Sie auf Geräteverwaltung und wählen Sie unter Gerätetyp die Option Gerät (lokales Netzwerk) oder Cloud-P2P-Gerät (P2P-Remote-Ansicht). Hier wählen wir beispielsweise Gerät. Das Gerät im lokalen Netzwerk wird im Online-Gerät angezeigt. Wählen Sie das Gerät aus und klicken Sie auf Zum Client hinzufügen. Es wird Witze hinzufügen angezeigt. Geben Sie den Spitznamen, den Benutzernamen des Geräts und das vom Gerät aktivierte Kennwort ein. Klicken Sie dann auf Hinzufügen zu Fügen Sie das Gerät dem Client hinzu.

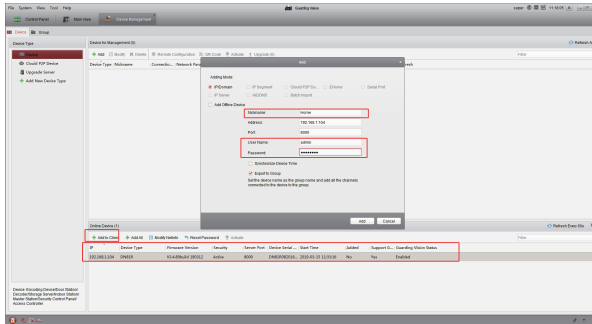

3. Gehen Sie zur Systemsteuerung-Hauptansicht, klicken Sie in der Liste der Kamera auf Gerät, und Sie erhalten eine Live-Ansicht wie unten gezeigt.

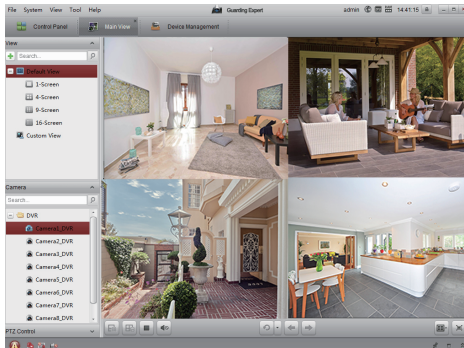

5. FAQ

1. Wie weit können die Kameras vom NVR entfernt arbeiten?

- 1). Dies hängt von der Stärke des Wi-Fi-Signals und der Interferenzdämpfung ab. Es wird empfohlen, die Kameras in einem Bereich von 60 bis 100 Fuß vom NVR zu platzieren. Wenn viele 2,4-G-WIFI-Signale vorhanden sind oder viele Wände vorhanden sind, erfolgt die Übertragung Entfernung wird kürzer sein.
- 2). Wir empfehlen daher, vor der Installation der Kamera die Signalstärke der Kamera am Installationsort zu testen. Sie können die Übertragungsentfernung verlängern, indem Sie die Repeater-Funktion der Kamera über den NVR einschalten.

2. Was soll ich tun, wenn manchmal kein Live-Video vorhanden ist?

- 1). Öffnen Sie die Repeater-Funktion der Kamera über den NVR, wie in Abschnitt 3.7 IP-Kamera hinzufügen beschrieben.
- 2). Überprüfen Sie die Qualität des WLAN-Signals von der Live-Schnittstelle. Wenn die WLAN-Single schlecht ist, bewegen Sie die Kamera in die Nähe des NVR oder stellen Sie die Antenne der Kamera und des NVR ein.

3. Wie kann ich die Push-Benachrichtigungen von meinem Handy erhalten?

- 1). Stellen Sie sicher, dass die Kamera mit dem NVR verbunden und Ihr NVR mit dem Internet verbunden ist, der P2P aktiviert wurde und der P2P-Status online ist.
- 2). Stellen Sie sicher, dass Ihr Telefon mit dem Internet verbunden ist und der NVR zu Ihrer mobilen App Annke Vision hinzugefügt wurde.
- 3). Wählen Sie NVR in der Geräteliste der App aus und geben Sie die Geräteeinstellungen ein, um Benachrichtigungen zu aktivieren. Wenn sich in einem bestimmten Kanal ein Objekt bewegt, erhalten Sie die Push-Warnmeldung des entsprechenden Kanals.



Shenzhen Kean Digital co.,Ltd.

Address: Room 1001, Rujun Building, No.105 Center Road, Bantian Street,

Longgang District, Shenzhen, China.518000

Tech Support Email Address: support@annke.com

NVR FCC ID: 2AKL2-N44WEC

IPC FCC ID: 2AKL2-I41GD



THEMIS AR Unterstützung UG
Beedstrasse 54, In Dusseldorf, (40468), Deutschland



Made in China

www.annke.com