



POWERFRESH®
STEAM MOP
1940 SERIES



IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Do not direct steam at people, animals, or at electrical outlets.
- Unplug from outlet when not in use and before conducting maintenance or troubleshooting.
- Do not leave steam cleaner unattended.
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts.
- Do not service steam cleaner when it is plugged in.
- Do not handle steam cleaner with wet hands.
- Do not use steam cleaner if it has been dropped, damaged, left outdoors or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, or expose cord to heated surfaces.
- Do not unplug by pulling on cord.
- Do not use appliance in an enclosed space filled with vapor given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not allow to be used as a toy.
- Do not use on leather, wax polished furniture or floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.
- Do not immerse.
- Not for space heating purposes
- Do not use for any purpose other than described in this user guide.
- Use only manufacturer's recommended attachments – use of attachments not provided or sold by BISSELL may cause fire, electric shock or injury.
- Never put descaling, aromatic, alcoholic or detergent products into the steam cleaner, as this may damage it or make it unsafe for use.
- Unplug by grasping the plug, not the cord.

- Close attention is necessary when used by or near children.
- Do not leave appliance when it is plugged in. Unplug from outlet when not in use and before servicing.
- Use indoors only.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and have it repaired at an authorized service center.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Turn OFF all controls before plugging or unplugging appliance.
- Use extra care when cleaning on stairs
- Do not turn over the steam-cleaning nozzle, or touch the surface of the nozzle when using the steam-cleaner.
- Do not turn over the steam-cleaning nozzle, or touch the surface of the nozzle when using the steam-cleaning attachment.
- Do not touch the steam-cleaning nozzle or adjacent surfaces when steam-cleaning or when the nozzle is heated.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- Plastic tanks are not dishwasher safe. Do not put tanks in dishwasher.

IMPORTANT INFORMATION

- To reduce the risk of a leaking condition, do not store where freezing may occur. Damage to internal components may result.
- When finished using the product, wrap cord around cord wrap for storage. Store unit indoors in a dry location in an area where the product is not likely to get damaged.
- Any other maintenance or servicing not included in this manual should be performed by an authorized service representative.
- Do not handle plug or appliance with wet hands.
- Keep appliance on a level surface.

SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY.

COMMERCIAL USE OF THIS UNIT voids THE MANUFACTURER'S WARRANTY.

THIS APPLIANCE HAS A POLARIZED PLUG

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a proper outlet. Do not change the plug in any way.

Thanks for buying a BISSELL® PowerFresh®

We love to clean and we're excited to share one of our innovative products with you. We want your BISSELL® PowerFresh® to work like new for the years to come, so this guide has tips on how to use, maintain and, if there's a problem, troubleshoot.

Your BISSELL PowerFresh needs a little assembly before getting to work, so flip to the "Assembly" section and let's get started!

Product View	3
Assembly	4
Special Features	4
Operations	5
Maintenance and Care	7

Troubleshooting	7
Warranty	7
Service	7
Register Your Product	8
Parts & Supplies	8

Product View

- 1 Strain Reliever Handle
- 2 Quick Release Cord Wrap
- 3 Removable Water Tank
- 4 Lower Cord Wrap
- 5 Smart Set Steam Control
- 6 Low Profile, Edge-Cleaning Mop Head
- 7 Maneuverable Swivel
- 8 Easy Scrubber

Accessories (Vary By Model)

- 9 Rectangle Washable Microfiber Mop Pads (quantity may vary)
- 10 Spring Breeze® Fragrance Discs (quantity may vary)



WARNING

Plastic film can be dangerous. To avoid danger of suffocation, keep away from babies and children.

WARNING

Do not plug in your hard floor cleaner until you are familiar with all instructions and operating procedures.

WARNING

To reduce the risk of electric shock, turn power switch OFF and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.

Assembly

Your PowerFresh® Steam Mop assembles quickly and easily.

1. Attach lower body to mop head by snapping it into place.
2. Slide handle assembly down and screw until tightened.

PowerFresh Steam Mop assembly is now complete.

1.



2.



WARNING

Exercise extreme care when using your steam mop on hardwood floors. Prolonged application of steam in one area increases the risk of damage to the surface treatment on timber floors. Test steam mop in an inconspicuous area before mopping a large area. The steam mop generates hot steam, so move the unit continuously when depressing the trigger. The trigger does not need to be depressed at all times. Regular foot traffic and direct sunlight will wear down timber floor surface treatment, making it more susceptible to steam damage. Check with your timber floor treatment and application specialist prior to steam mop operation. We recommend checking with the flooring manufacturer prior to use for any specific cleaning instructions.



WARNING

Do not plug in your hard floor cleaner until you are familiar with all instructions and operating procedures.

Special Features

Removable Water Tank

The water tank is located on the top of the PowerFresh® Steam Mop. It can be refilled with water any time during use. Distilled or demineralized water is recommended in place of tap water. **Do not use chemicals in the water tank of your PowerFresh Steam Mop.**

SmartSet Steam Control

(Low, Medium, High) SmartSet Steam Control indicator light will stop blinking when PowerFresh Steam Mop is ready to use. Then press the Steam Level button to choose the level of steam you desire.

Microfiber Mop Pads

Reusable microfiber mop pads are machine washable and safe for virtually all hard floor surfaces. Your PowerFresh may have come with two different pads. Use the soft, white pad to clean everyday messes. Use the scrubby, striped pad to clean tougher, stuck-on messes.

Easy Scrubber

Quickly clean sticky messes by flipping down the Easy Scrubber with your foot and locking it into position. Clean grout and crevices easily with this effective tool.



WARNING

Do not attempt to use your PowerFresh Steam Mop without water in the tank. You may hear a knocking sound indicating there is no water.

Operations

Getting Ready

The mop pad may have already come attached to the mop head, if not follow steps 1a and 1b below.

1. Add Fragrance Disc and attach mop pad

- a. Insert Spring Breeze® Fragrance Disc into pocket inside mop pad. Use the whole disc for a refreshing scent or cut in half for a lighter scent.
- b. Set mop head in mop pad, making sure quick-grip release tab is located on the back.

1a.



1b.



NOTE: Use of **distilled water** in place of tap water is recommended to prolong the life of your steamer. **Do not use chemicals in the water tank of your machine.** Other solutions may harm the machine.

2. Fill the water tank

- a. Remove tank by lifting straight up and away from unit.
- b. Unscrew cap at bottom of water tank.
- c. Fill water tank with water. For best results, water should be at room temperature.
- d. Replace the cap, tighten until snug.
- e. Replace water tank by gently sliding tank into place and press down firmly.

2a.



2b.




3. Twist the Quick Release cord wrap clockwise to unwrap the power cord completely and plug into a 120-Volt outlet as described on the Important Safety Instructions, page 2.

4. SmartSet Steam Select Indicator light will glow when PowerFresh® Steam Mop is ready to use. Press the Steam Level button to choose the level of steam you desire.

NOTE: Upon first use of the PowerFresh Steam Mop or first use after refilling the water tank, the pump may make a “knocking” sound. This is normal and should only last a few seconds.

4.

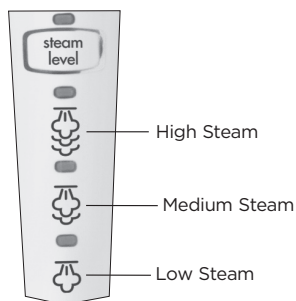

WARNING

Never put descaling, alcoholic, or detergent products into the steam cleaner, as this may damage it or make it unsafe for use.

Operations CONTINUED

Steam Cleaning & Sanitizing*

Your handheld steam cleaner was tested by third-party laboratories under controlled conditions to ensure it sanitizes and kills 99.9% of germs, bacteria and viruses, including Coronavirus and Influenza viruses*. Please use as directed; your results may vary.

CLEANING TIPS:

Before using your steam mop to clean and sanitize*, thoroughly sweep or vacuum floor. Your steam mop is designed to clean sealed hard floors, including ceramic tile, laminate, marble, stone and hardwood floors. The steam mop is not intended for use on vinyl, vinyl plank, linoleum, or unsealed floors. Use of your steam mop on waxed or some unwaxed floors may result in a diminished glossiness. For best results and to prevent damage to flooring, always check the care instructions from your floor manufacturer and test in an inconspicuous area before use. Do not use the steam mop if you notice any damage to your flooring prior to, during, or after use.

1. Plug the unit in and wait 30 seconds for it to heat up. Choose the level of steam to clean your floor: Low (delicate floors), Medium (regular cleaning), High (durable floors or sticky messes). Begin cleaning by slowly passing the unit over the floor surface.

2. To be sure to sanitize an area of your floor, use the microfiber cloth pads and slowly and evenly stroke the Powerfresh® back and forth at least three times over the area using continuous steam. For best results, remove the pad and wash after use.

3. To thoroughly clean dried-on sticky spots place the scrubby pad on the steam mop. Then press and lock the Easy Scrubber brush into place and slowly move the brush over the sticky spot to remove.

4. To turn off the PowerFresh Steam Mop, continue to press the Steam Level button until the blue light is illuminated above the Steam Level button.

5. When the PowerFresh Steam Mop stops emitting steam, unplug the unit. Simply remove the water tank, refill, and continue steaming.

*Kills 99.9% of Human Coronavirus (Strain 229E), Influenza A Virus (H1N1), Staphylococcus aureus, Klebsiella aerogenes, and Aspergillus niger when used as directed. Testing conducted in a third-party laboratory under controlled conditions. Results may vary.



WARNING

Tinted plates on foot may get hot while steam mop is in use. Do not touch while hot.

Maintenance and Care

When You're Done

1. Unplug power cord from outlet.
2. Carefully remove the mop pad using the Quick Release tab from the mop head. The mop pad and lower assembly may be hot. Remove Spring Breeze® Fragrance Disc from mop pad.
3. Any water remaining in the water tank should be emptied prior to machine storage.
4. Mop pad can be machine washed in warm water. Use only liquid detergents. Do not use fabric softeners or bleach. For best results, air dry.
5. Wrap power cord around quick release cord wrap on back of PowerFresh® Steam Mop.
6. Wipe all surfaces of PowerFresh Steam Mop with a soft cloth.
7. Store upright in a protected, dry area.

WARNING

To reduce the risk of electric shock, turn power switch OFF and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.

CAUTION

Upright storage of the cleaner with a wet mop pad may result in the formation of white marks on your floor. To remove the white marks, clean area with vinegar.

Troubleshooting

Problem	Possible Causes	Remedies
Reduced steam or no steam	Water tank empty.	Fill tank.
	Steam level not selected.	Select steam level by pushing steam level button.
	Mineral deposits from hard water caused clog.	Contact BISSELL Consumer Care at support.BISSELL.ca or call 1-800-263-2535.

Note: Any other servicing should be performed by an authorized service representative.

Warranty

Limited 2-year warranty. Visit support.BISSELL.ca or call 1-800-263-2535 for complete warranty information.

Terms and Conditions

Your purchase is subject to the BISSELL Terms and Conditions, which includes dispute resolution through arbitration and class waiver. For complete terms or to opt out from arbitration or class waiver, visit BISSELL.ca/terms-of-use or call 1-800-263-2535.

Service

Please do not return this product to the store. Other maintenance or service not included in the manual should be performed by an authorized service representative.

If your BISSELL product should require service: Visit support.BISSELL.ca or call 1-800-263-2535 for warranty information, BISSELL Authorized Service Centers, and replacement parts.

Parts & Supplies

For Parts and Supplies, go to [BISSELL.ca](https://www.bissell.ca) and enter your model number in the search field.

We're Waggin' Our Tails!

BISSELL proudly supports BISSELL Pet Foundation and its mission to help save homeless pets. When you buy a BISSELL® product, you help save pets, too. We're proud to design products that help make pet messes, odours and pet homelessness disappear.

Visit **[BISSELLsavespets.ca](https://www.bissellsavespets.ca)** to learn more.



Love your BISSELL® product?

Don't keep it a secret. Let us, and millions of others, know what you think! Leave your star-rating on **[BISSELL.ca](https://www.bissell.ca)**.

Pièces et fournitures

Pour vous procurer des pièces et fournitures, rendez-vous sur le site [BISSELL.ca](https://www.bissell.ca) et inscrivez le numéro de modèle de votre appareil dans le champ de recherche.

Nous frétillons de joie!

BISSELL appuie fièrement la BISSELL Pet Foundation et sa mission de sauver des animaux sans foyer. Lorsque vous achetez un produit BISSELL, vous contribuez aussi à sauver des animaux. Nous sommes fiers de concevoir des produits qui aident à faire disparaître les saletés et les odeurs laissées par les animaux tout en réduisant le nombre d'animaux sans foyer.

Visitez le site [BISSELLsavespets.ca](https://www.bissellsavespets.ca) pour en savoir plus.



Vous aimez votre produit BISSELL®?

Ne le gardez pas secret. Dites-nous ce que vous en pensez, à nous et à des millions d'autres. Évaluez le produit sur [BISSELL.ca](https://www.bissell.ca).



Entretien et soin de l'appareil

Après le nettoyage

1. Débranchez le cordon d'alimentation de la prise.
2. Retirez soigneusement le tampon de la tête à l'aide de la languette de dégorgement Quick Release. Le tampon et l'assemblage inférieur peuvent être chauds. Retirez les disques de fragrance Spring Breeze® du tampon.
3. Tout reste d'eau dans le réservoir doit être vidé avant le rangement de l'appareil.

⚠️ AVERTISSEMENT

Afin de réduire les risques de décharge électrique, mettez l'interrupteur d'alimentation en position éteinte (OFF) et débranchez la fiche polarisée de la prise électrique avant de procéder aux vérifications d'entretien ou de diagnostic.

⚠️ ATTENTION

Le rangement de l'appareil en position verticale lorsque le tampon est humide risque d'entraîner la formation de marques blanches sur votre plancher. Pour retirer ces marques, nettoyez la surface tachée avec du vinaigre.

Diagnostics de panne

Problème	Causes possibles	Solutions
Vaporisation faible ou aucune vaporisation	Le niveau de vaporisation n'est pas sélectionné.	Sélectionnez le niveau de vaporisation en appuyant sur le bouton correspondant.
	Les dépôts minéraux provoquant de l'eau dure ont provoqué une obstruction.	Communiquez avec le Service à la clientèle de BISSELL à support.BISSELL.ca ou composez le 1-800-263-2535.
		Remplissez le réservoir.

Remarque : Toute autre réparation doit être effectuée par un représentant d'entretien autorisé.

Garantie

Garantie limitée de 2 ans. Visitez le site support.BISSELL.ca ou téléphonez au 1-800-263-2535 pour obtenir des renseignements complets sur la garantie.

Conditions générales

Votre achat est soumis aux conditions générales de BISSELL, qui comprennent la résolution des litiges par voie d'arbitrage et la renonciation aux recours collectifs. Pour connaître les conditions complètes ou pour vous retirer de l'arbitrage ou de la renonciation à un recours collectif, visiter le site BISSELL.ca/fr-ca/terms-of-service.html ou téléphoner au 1-800-263-2535.

Entretien

N'oubliez pas retourner ce produit au magasin. Toute opération d'entretien ou de réparation autre que celles qui sont indiquées dans le manuel doit être effectuée par un représentant d'entretien autorisé.

Pour tout service relatif à un produit BISSELL : Visitez le site support.BISSELL.ca ou téléphonez au 1-800-263-2535 pour obtenir des informations sur la garantie, les centres de service autorisés BISSELL et les pièces de rechange.

Nettoyage et assainissement à la vapeur*

Votre appareil à vapeur portatif a été testé par des laboratoires tiers dans des conditions contrôlées afin de garantir qu'il assainit et tue 99,9 % des germes, des bactéries et des virus, y compris les coronavirus et les virus de la grippe*. Utiliser le produit selon les instructions; les résultats peuvent varier.

ASTUCES DE NETTOYAGE :

Avant d'utiliser votre vadrouille à vapeur pour nettoyer et assainir*, balayez bien le plancher ou passez l'aspirateur. Votre vadrouille à vapeur est conçue pour nettoyer les planchers durs recouverts, notamment les surfaces de céramique, de stratifié, de marbre, de pierre et de bois dur. La vadrouille à vapeur n'est pas conçue pour être utilisée sur des planchers en vinyle, en planches de vinyle, en linoléum ou sur des planchers non recouverts. L'utilisation de votre vadrouille à vapeur sur des planchers cires et sur certains planchers non cires pourrait en diminuer le lustre. Pour obtenir les meilleurs résultats et éviter d'endommager les planchers, toujours vérifier les instructions d'entretien du fabricant du plancher et faites un essai dans une zone peu visible avant l'utilisation. Ne pas utiliser la vadrouille à vapeur si vous remarquez des dommages sur le plancher avant, pendant ou après l'utilisation.

1. Branchez l'appareil et attendez 30 secondes pour qu'il se réchauffe. Choisissez le niveau de vaporisation requis pour nettoyer votre plancher : Low (pour les planchers délicats), Medium (pour un nettoyage normal), High (pour les planchers nus ou les tâches collantes). Commencez le nettoyage en passant lentement l'unité sur le plancher.
2. Pour vous assurer de bien désinfecter une section de plancher, utilisez les tampons en microfibre et passez lentement et uniformément le PowerFresh® d'avant en arrière au moins trois fois sur la surface souhaitée, en utilisant de la vapeur continuellement. Pour obtenir des résultats optimaux, retirez le tampon et lavez-le après utilisation.

3. Pour enlever complètement les tâches collantes séchées, placez le tampon à frotter sur la vadrouille à vapeur. Appuyez ensuite sur la brosse Easy Scrubber pour la fixer en place, et passez lentement la brosse sur la tâche collante pour l'enlever.
4. Pour éteindre la vadrouille à vapeur PowerFresh, continuez à appuyer sur le bouton du niveau de vaporisation jusqu'à ce que le voyant bleu s'allume en haut du bouton du niveau de vaporisation.
5. Lorsque la vadrouille à vapeur PowerFresh® cesse d'émettre de la vapeur, débranchez l'appareil. Vous n'aurez qu'à enlever le réservoir d'eau, à le remplir de nouveau et à poursuivre la vaporisation.

* Tue 99,9 % du coronavirus humain (souche Z29C), du virus de l'influenza A (H1N1), de *Staphylococcus aureus*, de *Klebsiella aerogenes* et d'*Aspergillus niger* lorsque l'appareil est utilisé conformément au mode d'emploi. Essais effectués dans un laboratoire tiers dans des conditions contrôlées. Les résultats peuvent varier.

AVERTISSEMENT

Les plaques teintées sur le pied peuvent devenir chaudes lorsque la vadrouille à vapeur est utilisée. Ne les touchez pas tant qu'elles sont chaudes.

Utilisation


Préparation

Lorsque vous recevez votre appareil, il est possible que le tampon soit préalablement fixé à la tête. Si ce n'est pas le cas, suivez les étapes 1a et 1b indiquées ci-dessous.

1. Ajoutez le disque de fragrance et fixez-le au tampon.

a. Insérez le disque de fragrance Spring Breeze dans la pochette à l'intérieur du tampon. Utilisez le disque complet si vous voulez un parfum plus fort ou coupez-le en deux pour une touche plus légère.

b. Placez la tête de la vadrouille sur le tampon en vous assurant que la languette de dégagement rapide est placée à l'arrière.

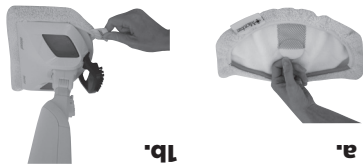

1 a.

1 b.

2. Remplissez le réservoir d'eau.


a. Retirez le réservoir en le tirant directement vers le haut, puis en l'éloignant de l'appareil.
b. Dévissez le bouchon situé en bas du réservoir d'eau.
c. Remplissez le réservoir avec de l'eau. Pour obtenir les meilleurs résultats possible, l'eau doit être à la température ambiante.

d. Remplissez le bouchon; serrez celui-ci jusqu'à ce qu'il tienne bien en place.
e. Remplacez le réservoir d'eau en faisant doucement glisser le réservoir à sa place et en appuyant fermement sur celui-ci.

3. Faites tourner le range-cordon Quick Release dans le sens horaire pour dérouler tout le cordon d'alimentation et le brancher dans une prise de 120 V, tel qu'indiqué à la section Instructions de sécurité importantes, à la page 2.

4. Le témoin indicateur du contrôle de la vapeur Smart Set s'allumera lorsque la vadrouille à vapeur PowerFresh® sera prête à être utilisée. Appuyez sur le bouton du niveau de vaporisation pour choisir le niveau de vaporisation désiré.


REMARQUE : Lors de la première utilisation de la vadrouille à vapeur PowerFresh ou de la première utilisation après un nouveau remplissage du réservoir d'eau, la pompe peut produire un bruit de cognement. Ce bruit est normal et cela ne devrait durer que quelques secondes.

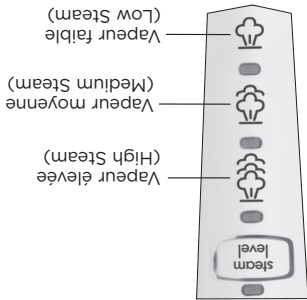

4.

2 a.

2 b.

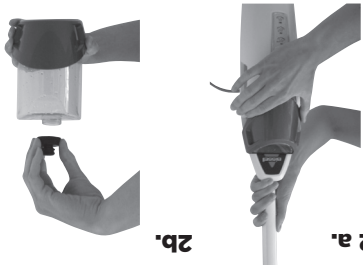

AVERTISSEMENT

Ne jamais verser de produits détartrants, alcoolisés ou détergents dans l'appareil de nettoyage : cela pourrait l'endommager ou en rendre l'utilisation dangereuse.

⚠️ AVERTISSEMENT

N'essayez pas d'utiliser votre vadrouille à vapeur PowerFresh lorsque son réservoir est vide. Vous pourriez entendre un cognement indiquant qu'il n'y a pas d'eau.

Réservoir d'eau amovible
Le réservoir d'eau est situé sur le dessus de la vadrouille à vapeur PowerFresh®. Il peut être rempli avec de l'eau à tout moment pendant l'utilisation de l'appareil. Utilisez de l'eau distillée ou déminéralisée plutôt que de l'eau du robinet. **N'ajoutez pas de produits chimiques dans le réservoir d'eau de votre vadrouille à vapeur PowerFresh.**

Contrôle de la vapeur SmartSet
(Low/faible, Medium/moyen, High/élevé) Le témoin indicateur du contrôle de la vapeur Smart Set cessera de clignoter lorsque la vadrouille à vapeur PowerFresh sera prête à être utilisée. Appuyez ensuite sur le bouton du niveau de vaporisation pour choisir le niveau de vaporisation désiré.

Tampons de recharge en microfibre
Les tampons de recharge en microfibre peuvent être lavés à la machine et sont sûrs pour toutes les surfaces de planchers nus. Votre vadrouille à vapeur PowerFresh peut comprendre deux tampons différents. Utilisez le tampon blanc et doux pour nettoyer les dégâts quotidiens. Utilisez le tampon rayé et rugueux pour nettoyer les salissures les plus tenaces et collées.

Brosse Easy Scrubber
Nettoyez rapidement des tâches collantes en appuyant vers le bas sur la brosse Easy Scrubber avec votre pied et en la verrouillant en place. Nettoyez facilement les joints et les fissures à l'aide de cet outil efficace.

Caractéristiques spéciales

⚠️ AVERTISSEMENT

Ne branchez pas votre appareil de nettoyage pour planchers nus avant de vous être familiarisé avec toutes les instructions et toutes les procédures d'utilisation.

⚠️ **AVERTISSEMENT**
Prenez de grandes précautions lorsque vous nettoyez les planchers nus avec votre vadrouille à vapeur. Une exposition prolongée des planchers de bois à la vapeur augmente les risques d'endommagement à la surface traitée. Essayez l'appareil sur une surface dissimulée avant de nettoyer une grande surface. Puisque la vadrouille à vapeur dégage de la vapeur chaude, assurez-vous que l'appareil soit constamment en mouvement lorsque vous appuyez sur la gâchette. La gâchette n'a pas à être tenue enfoncée. Le va-et-vient quotidien ainsi que l'ensoleillement direct endommageront les surfaces traitées des planchers de bois et rendront ces dernières plus fragiles lors de l'utilisation de la vapeur. Consultez votre spécialiste des planchers de bois traités avant de vous servir de votre appareil. Nous recommandons de consulter le fabricant du plancher avant l'utilisation pour connaître les instructions de nettoyage particulières.

Votre vadrouille à vapeur PowerFresh® peut être assemblée rapidement et facilement.

1. Fixez la partie inférieure du corps à la tête en la logeant à sa place.
2. Faites glisser l'assemblage du manche et vissez jusqu'à ce que la vis soit serrée.

L'assemblage de la vadrouille à vapeur PowerFresh est maintenant terminé.


2.

1.



Assemblage

Schéma du produit

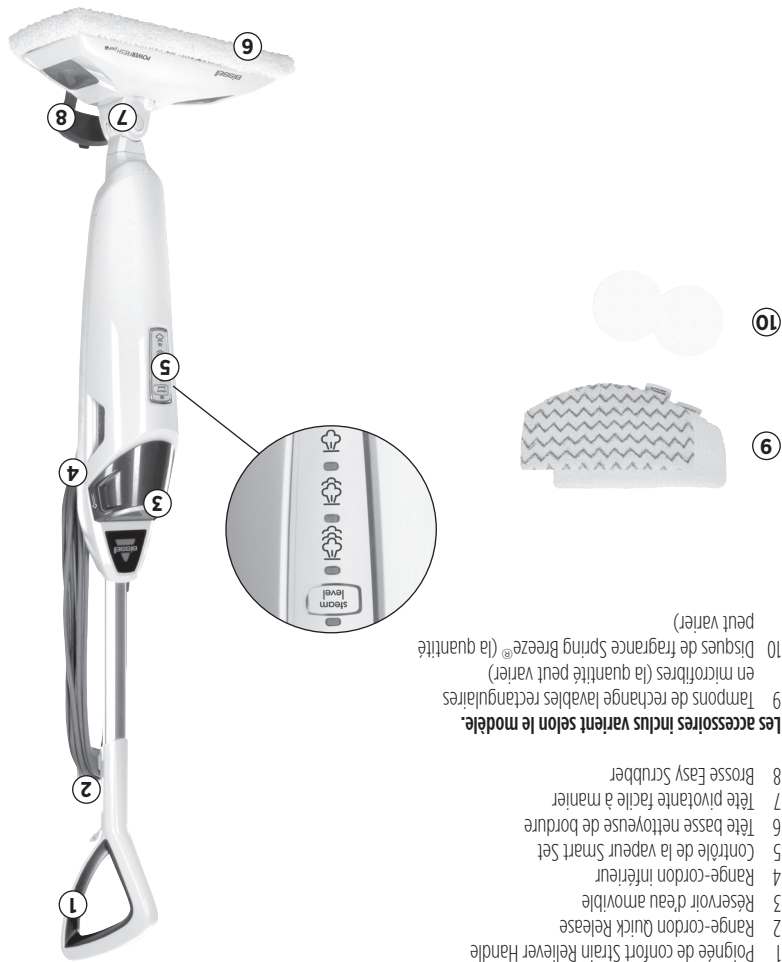

- 1 Poignée de confort Strain Reliever Handle
 2 Range-cordon Quick Release
 3 Réservoir d'eau amovible
 4 Range-cordon inférieure
 5 Contrôle de la vapeur Smart Set
 6 Tête basse nettoyeuse de bordure
 7 Tête pivotante facile à manier
 8 Brosse Easy Scrubber

Les accessoires inclus varient selon le modèle.

- 9 Tampons de rechange lavables rectangulaires
 10 Disques de fragrance Spring Breeze® (la quantité peut varier)

⚠️ AVERTISSEMENT

La pellicule de plastique peut être dangereuse. Pour éviter les risques d'étouffement, tenez-la hors de portée des bébés et des enfants.

⚠️ AVERTISSEMENT

Ne branchez pas votre appareil de nettoyage pour planchers nus avant de vous être familiarisé avec toutes les instructions et toutes les procédures d'utilisation.

⚠️ AVERTISSEMENT

Afin de réduire les risques de décharge électrique, mettez l'interrupteur d'alimentation en position éteinte (OFF) et débranchez la fiche polarisée de la prise électrique avant de procéder aux vérifications d'entretien ou de diagnostic.



POWERFRESH®
VADROUILLE À VAPEUR
SÉRIE 1940

