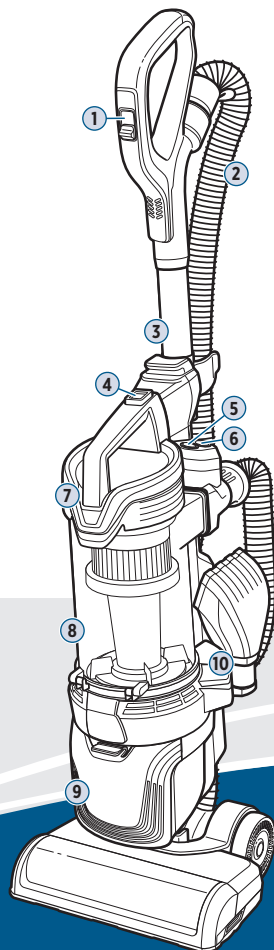




POWERLIFTER™ ALLERGEN PET REWIND UPRIGHT VACUUM MODEL 3404

What's in the Box?	2
Assembly	3
Using Your Vacuum.....	3
Automatic Cord Rewind	3
Above Floor Cleaning.....	4
Emptying the Dirt Tank.....	4
Cleaning the Inner Cyclone Separator.....	4
Cleaning and Replacing the Filters.....	5
Protecting the Vacuum's Motor.....	6
Resetting the Brush Motor.....	6
Warranty	6
Troubleshooting.....	6



Product Overview

- | | |
|---------------------------------|------------------------|
| 1. Carpet Type Control | 8. Dirt Tank |
| 2. Hose | 9. Post-Motor Filter |
| 3. Quick Release Extension Wand | 10. Cord Rewind Button |
| 4. Dirt Tank Release Button | |
| 5. Power Switch | |
| 6. Brush Roll Switch | |
| 7. Pre-Motor Filter | |



Meet your new BISSELL product!

Go to **[support.BISSELL.com](https://support.bissell.com)** for a comprehensive walkthrough of your new purchase, including videos, tips, support, and more. Want to get started right away? This guide has all the information you need to set up your new product. Let's take a look...

IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

Always connect to a polarized outlet (one slot is wider than the other). Unplug from outlet when not in use and before conducting maintenance. When using an electrical appliance, basic precautions should be observed, including the following:



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Do not leave vacuum cleaner when it is plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not use for any purpose other than described in this user guide. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners.
- Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn all controls OFF before plugging or unplugging vacuum cleaner.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.

- Do not use vacuum cleaner in an enclosed space filled with vapors given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use without filters in place.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Use only on dry, indoor surfaces.
- Keep appliance on a level surface.
- Do not carry the vacuum cleaner while it is running.
- Unplug before connecting or disconnecting the TurboBrush® tool.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- Do not plug in your vacuum cleaner until you are familiar with all instructions and operating procedures.
- Turn power switch OFF and disconnect polarized plug from electrical outlet BEFORE performing maintenance or troubleshooting checks.
- Hold plug when rewinding onto cord reel. Do not allow plug to whip when rewinding.
- When finished using the product, rewind cord for storage. Store unit indoors in a dry location in an area where the product is not likely to get damaged.
- Any other maintenance or servicing not included in this manual should be performed by an authorized service representative.


SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY.
COMMERCIAL USE OF THIS UNIT VOIDS THE MANUFACTURER'S WARRANTY.

THIS APPLIANCE HAS A POLARIZED PLUG To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a proper outlet. Do not change the plug in any way.


What's in the Box?

Standard accessories may vary by model. To identify what should be included with your purchase, please refer to the "Carton Contents" list located on the carton top flap.


				
Vacuum Base	Handle	Stretch Hose	2-in-1 Dusting Brush & Crevice Tool	Pet TurboEraser® Tool

Assembly

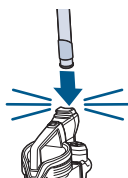
▶ Go to support.BISSELL.com for assembly videos.



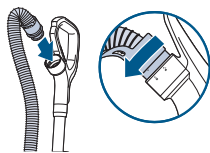
1. Insert handle into body until it clicks into place.



2. Attach hose to wand by twisting clockwise.

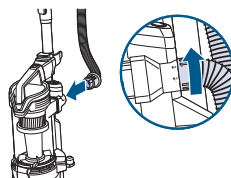


3. Attach hose to back of vacuum by twisting clockwise.

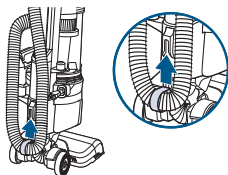

4. Attach hose clip to the body of the vacuum by clicking it into place.



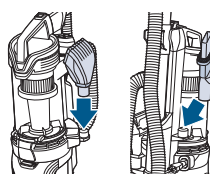
5. The hose should sit on the vacuum without any twists as pictured.



6. Attach tools to tool holders on vacuum.

Using Your Vacuum

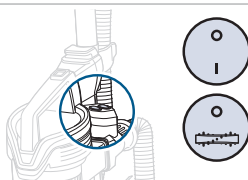▶ For additional ways to use your vacuum's features, check out support.BISSELL.com.



1. Power ON (I). Turn the brush roll ON (I) for carpet cleaning and OFF (O) when vacuuming hard or delicate surfaces like hardwood, tile, small rugs, or frieze carpets with long fibers.



2. Step gently on base and pull the handle back to recline.

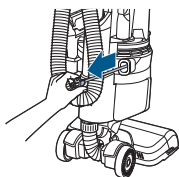
Note: The brush roll shuts OFF when vacuum is locked in upright position.




3. Use the carpet type control for optimized cleaning on high pile and low pile carpet. The control can be moved to the middle position for medium pile carpeting.

Automatic Cord Rewind


▶ If you have trouble with this feature, see our troubleshooting videos on support.BISSELL.com.



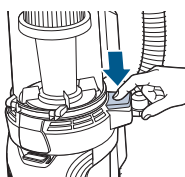1. Gently pull the cord out. Do not pass the red mark on the cord. Plug cord into an outlet.



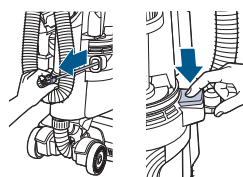
2. To retract, hold the plug and press the automatic cord rewind button.




3. If cord doesn't fully retract, pull some of the cord out and press the button again.

Above Floor Cleaning

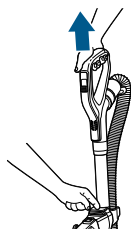
➤ Visit support.BISSELL.com to see all the ways you can use your vacuum's tools.



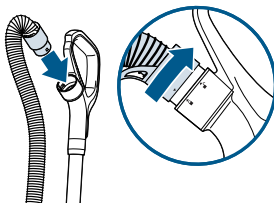1. Push the release button to remove extension wand and attach desired tool.



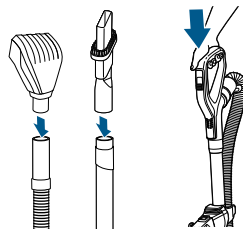2. The hose can be removed from the extension wand. Twist hose cuff counter-clockwise and remove from handle.




3. Attach desired tool.
Note: For optimal use, attach the Pet TurboEraser® Tool to the hose instead of wand.


Reinstall wand by sliding until it clicks into place. Reattach hose to handle if needed.

Emptying the Dirt Tank

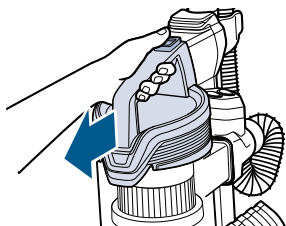
➤ For additional maintenance steps, visit support.BISSELL.com.



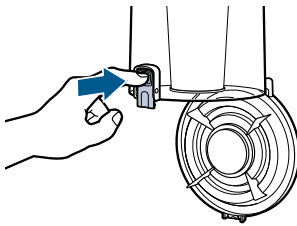1. Press the release button and pull the tank away.



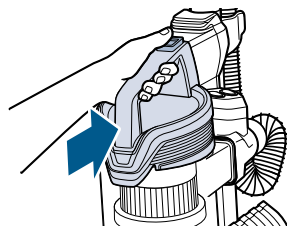
2. Hold the tank over a trash bin and press the empty button. Once emptied, snap bottom back into place.




3. Reinstall tank by inserting bottom first and pushing top back until it clicks into place.

Cleaning the Inner Cyclone Separator

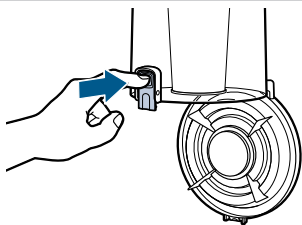
▶ We have additional maintenance videos for your machine on support.BISSELL.com.



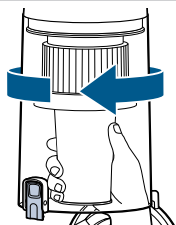1. Hold the dirt tank over a trash container. Press the bottom release button to empty.



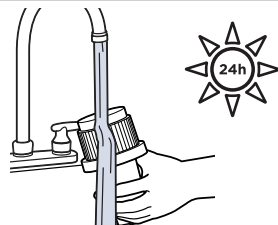2. Twist separator counter-clockwise and pull down to remove.









3. Tap separator against inside of trash container and rinse under warm water, if necessary. Let dry completely before reinstalling.

Cleaning and Replacing the Filters




Visit **BISSELL.com** to find replacement filters.

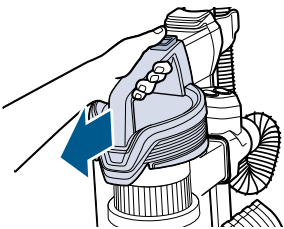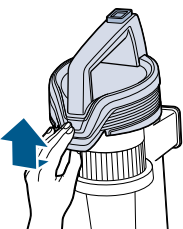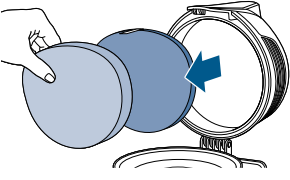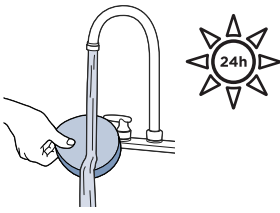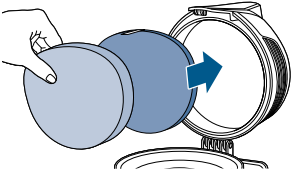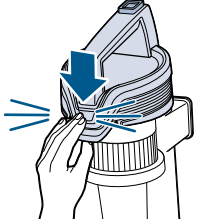Pre-Motor Filter

		
1. Press the dirt tank release button and pull away from vacuum.	2. Open the tank lid by lifting up.	3. Remove pre-motor filters from top of dirt tank lid by pulling out.
		
4. Clean with mild detergent, rinse and squeeze all excess water. Allow filters to dry completely before reinserting.	5. Return pre-motor filters to the top of the dirt tank. Put the thin flat filter with the white tab in first, then put the thick foam filter in.	6. The lid will click into place when tank lid is closed securely.

Post-Motor Filter

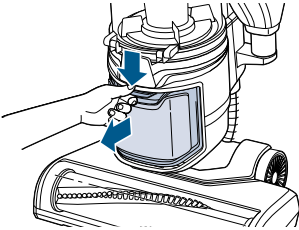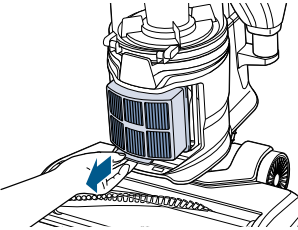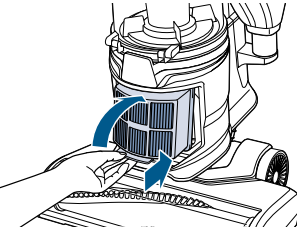For optimal performance, replace the filter every 6 months.

		
1. Press down on tab to remove post-motor filter cover and pull away from vacuum.	2. Press tab on bottom of filter and pull out to remove from vacuum. Remove debris from filter by tapping on the side of a trash container. This pleated filter should NOT be washed.	3. When reassembling, be sure to lock the filter back into place by aligning the top of the filter first, then clicking the bottom into place.

WARNING To reduce the risk of electrical shock:

- Turn power switch OFF and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.
- Before using your vacuum, make sure that the dirt tank is in locked position and that all filters, both pre- and post-filters, are in place. Do not operate vacuum with damp or wet filters. Allow components to dry before reassembling the dirt tank.
- Do not use without filters in place.

Protecting the Vacuum's Motor

➤ For more assistance with your vacuum's motor protection, visit support.BISSELL.com.

There is an internal thermal protector in your vacuum that protects it from overheating. It controls the main vacuum motor only, not the brush motor. When it activates, the main motor will stop. The front lights and brush roll will stay on but there won't be any suction. If this happens, follow these steps:

1. Turn vacuum OFF and unplug from electrical outlet.
2. Check for the source of overheating problem (full dirt tank, dirty filters or a clog) and fix by following the steps in the "Vacuum won't pick up dirt" troubleshooting section.
3. When the motor cools for approximately 30 minutes, the thermal protector automatically resets and cleaning may continue. If the vacuum will not turn ON or the thermal protector continues to activate, contact Consumer Care.

Resetting the Brush Motor

➤ For more assistance with your vacuum's brush motor, visit support.BISSELL.com.

There is a circuit to protect the brush motor. If something becomes lodged in the foot and the brush shuts off, turn the cleaner off and unplug from the outlet. Remove the obstruction. The brush will automatically reset when the cleaner is plugged in and turned back on.



WARNING

To reduce the risk of electrical shock:

- Turn power switch OFF and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.
- Before using your vacuum, make sure that the dirt tank is in locked position and that all filters, both pre- and post-filters, are in place. DO NOT operate your vacuum without these filters.
- Do not operate vacuum with damp or wet filters. Allow components to dry before reassembling the dirt tank.
- Do not use without filters in place.

Warranty

➤ Limited 5-year warranty, may vary by state. Visit support.BISSELL.com or call 1-800-237-7691 for complete warranty information.

Troubleshooting

For a comprehensive walkthrough of your product and support tips visit support.BISSELL.com.

Note: Any other servicing should be performed by an authorized service representative.

♥ Every Purchase Saves Pets™

BISSELL proudly supports BISSELL Pet Foundation® and its mission to help save homeless pets. When you buy a BISSELL® product, you help save pets, too. We're proud to design products that help make pet messes, odors and pet homelessness disappear.

Visit BISSELLsavespets.com to learn more.



©2022 BISSELL Inc. All rights reserved.
Part Number 1628641 08/22 RevA



Visite BISSELLsavespets.com
para obtener más información.



BISSELL orgullosamente apoya a la BISSELL Pet Foundation® y su misión de ayudar a salvar a las mascotas sin hogar. Cuando compra un producto BISSELL®, también ayuda a salvar mascotas. Estamos orgullosos de diseñar productos que ayudan a hacer desaparecer la suciedad, los olores y la falta de hogar de las mascotas.

Every Purchase Saves Pets™

Nota: cualquier otro servicio debe ser realizado por un representante de servicio autorizado. Para un recorrido completo de su producto y consejos de asistencia técnica visite support.BISSELL.com.

Resolución de problemas

Garantía

Garantía limitada de 5 años, puede variar según el estado. Visite support.BISSELL.com o llame al 1-800-237-7691 para obtener información completa sobre la garantía.

ADVERTENCIA

- Para reducir el riesgo de descarga eléctrica: Apague el interruptor de alimentación y desconecte el enchufe polarizado de la toma de corriente antes de realizar el mantenimiento o las comprobaciones para solucionar problemas.
- Antes de utilizar su aspiradora, asegúrese de que el depósito de suciedad esté en posición de bloqueo y que todos los filtros, tanto los previos como los posteriores, estén colocados. NO haga funcionar su aspiradora sin estos filtros.
- No haga funcionar la aspiradora con los filtros húmedos o mojados. Deje que los componentes se sequen antes de volver a ensamblar el depósito de suciedad.
- No utilice su aspiradora sin los filtros colocados.

Reajuste del motor de los cepillos

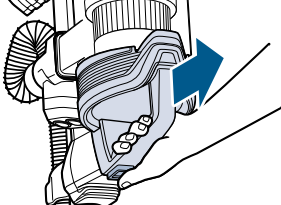
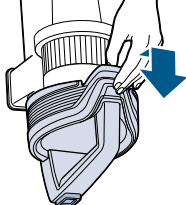
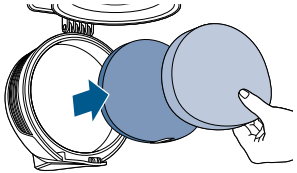
Para obtener más ayuda sobre el motor de los cepillos de su aspiradora, visite support.BISSELL.com.


1. APAGUE la aspiradora y desconchúfela de la toma de corriente.
 2. Compruebe el origen del problema de sobrecalentamiento (depósito de suciedad lleno, filtros sucios o un atasco) y arreglíelo siguiendo los pasos de la sección de solución de problemas "La aspiradora no recoge la suciedad".
 3. Cuando el motor se enfría durante aproximadamente 30 minutos, el protector térmico sigue activándose, póngase en contacto con el Servicio de Atención al Consumidor.
- Hay un protector térmico interno en su aspiradora que la protege del sobrecalentamiento. Controla únicamente el motor principal de la aspiradora, no el motor de los cepillos. Cuando se activa, el motor principal se detiene.
- Las luces delanteras y el rodillo del cepillo permanecerán encendidos pero no habrá succión. Si esto ocurre, siga estos pasos:

Como proteger el motor de la aspiradora

Para obtener más ayuda sobre la protección del motor de su aspiradora, visite support.BISSELL.com.

Filtro premotor


1. Presione el botón de liberación del depósito de suciedad y aléjelo de la aspiradora. 	2. Levante la tapa del depósito para abrirla. 	3. Retire los filtros del premotor de la parte superior de la tapa del depósito de suciedad tirando hacia fuera. 
--	---	---

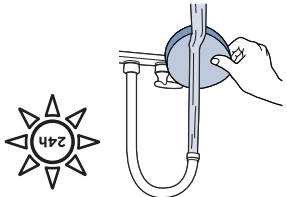

4. Limpie con un detergente suave, enjuague y exprima todo el exceso de agua. Deje que los filtros se sequen completamente antes de volver a colocarlos.




5. Vuelva a colocar los filtros del premotor en la parte superior del depósito de suciedad. Ponga primero el filtro plano y fino con la lengüeta blanca, y luego ponga el filtro de espuma grueso.

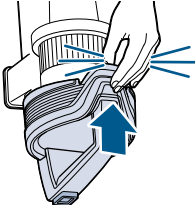6. La tapa del depósito encaja en su sitio cuando esté bien cerrada.






Filtro posmotor

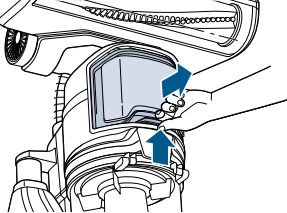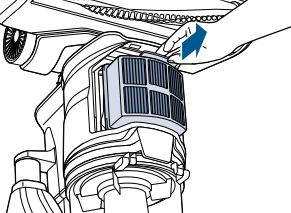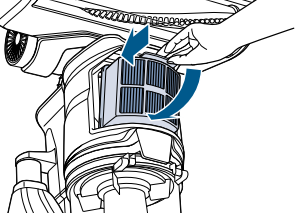Para un rendimiento óptimo, sustituya el filtro cada 6 meses.




1. Presione hacia abajo la lengüeta para retirar la cubierta del filtro posmotor y tire de ella para separarla de la aspiradora. 	2. Presione la lengüeta de la parte inferior del filtro y tire hacia fuera los residuos del filtro mediante golpes en el lateral de un bote de basura. Este filtro plisado NO debe lavarse. 	3. Al volver a ensamblar, cerciórese de asegurar el filtro en su lugar alineando primero la parte superior del filtro y luego encajando la parte inferior en su sitio. 
---	---	---

ADVERTENCIA

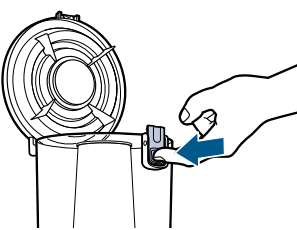
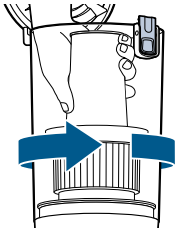
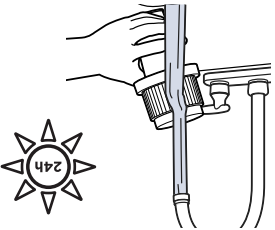
- Apague el interruptor de alimentación y desconecte el enchufe polarizado de la toma de corriente antes de realizar el mantenimiento o las comprobaciones para solucionar problemas.
- Antes de utilizar su aspiradora, asegúrese de que el depósito de suciedad esté en posición de bloqueo y que todos los filtros, tanto los previos como los posteriores, están colocados. No haga funcionar la aspiradora con los filtros húmedos o mojados.
- Deje que los componentes se sequen antes de volver a ensamblar el depósito de suciedad.
- No utilice su aspiradora sin los filtros colocados.

1. Sostenga el depósito de suciedad sobre un bote de basura. Presione el botón de liberación inferior para vaciar. 	2. Gire el separador en sentido contrario a las agujas del reloj y tire hacia abajo para sacarlo. 	3. Golpee el separador contra el interior del bote de basura y enjuague con agua tibia, si es necesario. Deje secar completamente antes de volver a instalarlo. 
---	---	--

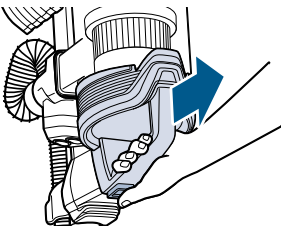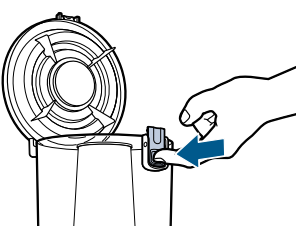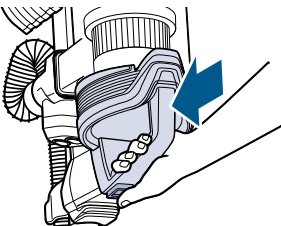Limpieza del separador de cíción interno ► Tenemos videos adicionales de mantenimiento para su máquina en support.BISSELL.com

1. Presione el botón de liberación y retire el depósito. 	2. Sostenga el depósito sobre un bote de basura y presione el botón de vaciado. Una vez vaciado, vuelva a colocar la parte inferior en su sitio. 	3. Vuelva a instalar el depósito introduciendo primero la parte inferior y empujando de vuelta la parte superior hasta que encaje en su sitio. 
--	--	---

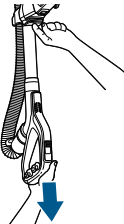
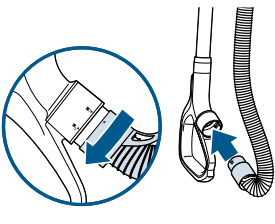
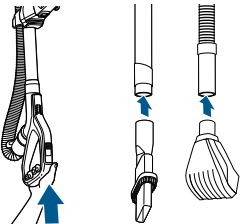
Vaciado del depósito de suciedad ► Para conocer otros pasos de mantenimiento, visite support.BISSELL.com.

1. Presione el botón de liberación para retirar el tubo de extensión y colocar la herramienta desecada. 	2. La manguera puede retirarse del tubo de extensión. Gire el manguito a las agujas del reloj y retirelo de la manija. 	3. Coloque la herramienta que desee. Nota: para un uso óptimo, acople la herramienta Pet TurboEraser® a la manguera en lugar de al tubo. Vuelva a instalar el tubo deslizándolo hasta que encaje en su sitio. Vuelva a colocar la manguera en la manija si es necesario. 
---	--	--

Limpieza de suelos ► Visite support.BISSELL.com para ver todas las formas de utilizar las herramientas de su aspiradora.

Rebobinado automático del cable ▶ Si tiene problemas con esta función, consulte nuestros videos de solución de problemas en support.BISSELL.com.

Cómo usar su aspiradora  Para conocer otras formas de utilizar las funciones de su aspiradora, consulte support.bissell.com.

1. Inserte la manija en el cuerpo de la aspiradora hasta que encaje en su lugar. 	2. Conecte la manguera al tubo con el sentido de las agujas del reloj. 	3. Conecte la manguera a la parte trasera de la aspiradora en el sentido de las agujas del reloj. 
--	--	--

	Herramienta Pet TurboEraser®
	Cepillo para polvo y hendiduras 2 en 1
	Manguera extensible
	Manija
	Base de la aspiradora

¿Qué incluye la caja?

Los accesorios estándar pueden variar según el modelo. Para identificar lo que debe incluirse con su compra, consulte la lista de "Contenido de la caja" situada en la solapa superior de la caja.

ESTE APARATO TIENE UN ENCHUFE POLARIZADO

Para reducir el riesgo de descarga eléctrica, este aparato tiene un enchufe polarizado (una hoja es más ancha que la otra). Este enchufe encaja en un tomacorriente polarizado solo en un sentido. Si el enchufe no entra completamente en la toma de corriente, invierta el enchufe. Si sigue sin encajar, póngase en contacto con un electricista cualificado para que instale un tomacorriente adecuado. No cambie el enchufe de ninguna manera.

GUARDE ESTAS INSTRUCCIONES

ESTE MODELO ES SOLO PARA USO DOMESTICO. EL USO COMERCIAL DE ESTA UNIDAD ANULA LA GARANTIA DEL FABRICANTE.

- ADVERTENCIA**

PARA REDUCIR EL RIESGO DE INCENDIO, DESCARGA ELÉCTRICA O LESIÓN:

 - No dege soia la aspiradora cuando este enchufada. Desenchufe del tomacorriente cuando no este en uso y antes de realizar el mantenimiento.
 - No la utilice en exteriores ni en superficies húmedas.
 - No permita que se utilice como juguete. Es necesario prestar mucha atención cuando sea utilizado por niños o cerca de ellos.
 - No la utilice para ningún otro fin que no sea el descrito en esta guía del usuario. Utilice únicamente los accesorios recomendados por el fabricante.
 - No lo utilice con un cable o enchufe dañado. Si el aparato no funciona como debiera, se ha caído, se ha dañado, se ha dejado al aire libre o se ha caído al agua, lévele a reparar a un centro de servicio autorizado.
 - No tire del cable ni lo transporte, ni utilice el cable como manija, ni drene una puerta sobre el cable, ni tire del cable alrededor de bordes afilados.
 - No pase el aparato por encima del cable. Mantenga el cable alejado de las superficies calientes.
 - No desenchufe tirando del cable. Para desenchufar, sujete el enchufe, no el cable.
 - No manipule el enchufe ni la aspiradora con las manos mojadas.
 - No ponga ningún objeto en las aberturas. No lo utilice con ninguna abertura bloqueada; mantenga las aberturas libres de polvo, pelusa, alfileres o todos los controles y partes móviles.
 - Alejado de las aberturas y de las partes móviles.
 - La aspiradora, el apagado y los controles de enchufar o desenchufar no necesitan cuidado al limpiar ni limpiar en las escaleras.
 - No lo utilice para recoger materiales inflamables o combustibles (líquido para encendedores, gasolina, queroseno, etc.) ni lo utilice en zonas donde puedan estar presentes.
 - No utilice la aspiradora en un espacio cerrado en el que haya vapores dispersando por pinturas a base de aceite, disolventes, algunos sustancias antipollas, polvo inflamable u otros vapores explosivos o tóxicos.
 - No lo utilice para recoger material tóxico (lejía, amoníaco, descalcador, etc.).
 - No recoja nada que esté ardiendo o humeando, como cigarrillos, cenizas o cenizas calientes.
 - No lo utilice sin los filtros colocados.
 - No recoja objetos duros o afilados como cristales, clavos, tornillos, monedas, etc.
 - Utilice sólo en superficies secas y de interior.
 - Mantenga el aparato en una superficie nivelada.
 - No transporte la aspiradora mientras este en funcionamiento.
 - Desenchufe antes de conectar o desconectar la herramienta TurboBrush®. La película de plástico puede ser peligrosa. Para evitar el peligro de asfixia, mantenga alejada de los niños.
 - No enchufe su aspiradora hasta que se haya familiarizado con todas las instrucciones y procedimientos de funcionamiento.
 - Apague el interruptor de alimentación y desconecte el enchufe antes de la toma de corriente ANTES de realizar el mantenimiento.
 - Sujete el enchufe al redobinar en el carrete del cable. No permita que el cable se enrolle en el producto, redobine el cable para guardarlo. Aliméne la unidad en un lugar seco y en una zona que no sea probable que el producto se dañe.
 - Cualquier otro mantenimiento o revisión que no esté incluido en este manual debe ser realizado por un representante del servicio técnico autorizado.

ADVERTENCIA

PARA REDUCIR EL RIESGO DE INCENDIO, DESCARGA ELÉCTRICA O LESIÓN:

LEA TODAS LAS INSTRUCCIONES ANTES DE UTILIZAR SU APARATO.

INSTRUCCIONES IMPORTANTES DE SEGURIDAD



POWERLIFTER™ ALLERGEN PET REWIND ASPIRADORA VERTICAL MODELO 3404

¿Qué incluye la caja?.....2

Ensamblaje.....3

Cómo usar su aspiradora.....3

Rebobinado automático del cable.....3

Limpieza de suelos.....4

Vaciado del depósito de suciedad.....4

Limpieza del separador de ciclón interno.....4

Limpieza y sustitución de los filtros.....5

Cómo proteger el motor de la aspiradora6


Reajuste del motor de los cepillos6

Garantía.....6

Resolución de problemas.....6

Resumen del producto

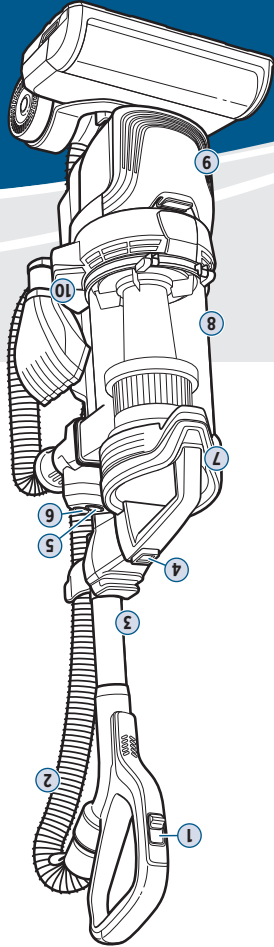1. Control del tipo de alfombra
2. Manguera
3. Tubo de extensión de liberación rápida
4. Botón de liberación del depósito de suciedad
5. Interruptor de encendido
6. Interruptor del rodillo del cepillo
7. Filtro premotor
8. Depósito de suciedad
9. Filtro posmotor
10. Botón de rebobinado del cable



¡Conozca su nuevo producto BISSELL!



Visite support.bissell.com para un tutorial completo de su nueva compra, que incluye videos, consejos, soporte, y más. ¿Desea comenzar de inmediato? Esta guía incluye toda la información que necesita para configurar su nuevo producto. Echemos un vistazo...