

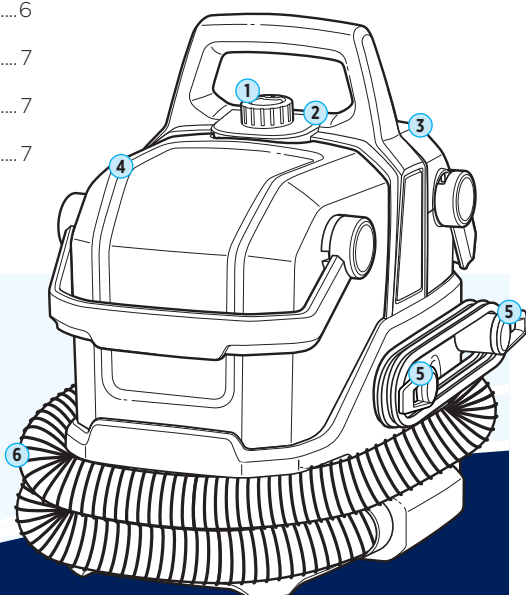


LITTLE GREEN® HYDROSTEAM™ PORTABLE CARPET AND UPHOLSTERY CLEANER 3532, 3618, 3605, 3606 SERIES

What's in the Box?	3
Filling the Formula Tank.....	3
Stain, Surface, and Tool Guide.....	4
Using Your Machine.....	5
Emptying the Dirty Water Tank.....	6
Cleaning and Storing Your Machine	6
Thermal Protector	7
Troubleshooting.....	7
Warranty	7

Product Overview

1. Power and Cleaning Mode Dial
2. Steam Ready Light
3. Clean Water Tank
4. Dirty Water Tank
5. Quick Release™ Cord Wrap and Power Cord
6. Flexible Hose



Meet your new BISSELL® product!

Go to support.BISSELL.com for a comprehensive walkthrough of your new purchase, including videos, tips, support, and more. Want to get started right away? This guide has all the information you need to set up your new product. Let's take a look...



IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Do not leave appliance when it is plugged in. Unplug from outlet when not in use and before servicing.
- Do not expose to rain. Store indoors.
- Always install float before any wet pick-up operation.
- Use only cleaning products intended for use with this appliance to prevent internal component damage. See the Cleaning Formulas section of this guide.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not use for any purpose other than described in this user guide.
- Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and have it repaired at an authorized service center.
- Do not pull or carry by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts of the appliance and its accessories.
- Turn OFF all controls before plugging or unplugging appliance.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Unplug from outlet before filling, rinsing or cleaning.
- Do not turn over the steam-cleaning nozzle, or touch the surface of the nozzle when using the steam-cleaner.
- Do not apply steam directly to any person or animal.
- Do not touch the steam cleaning nozzle or adjacent surfaces when steam-cleaning or when the nozzle is heated.
- Do not turn your appliance ON until you are familiar with all instructions and operating procedures.
- Keep appliance on a level surface.
- Do not leave steam cleaner unattended.
- Liquid or steam must not be directed towards equipment containing electrical components.
- Do not use appliance in an enclosed space filled with vapors given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.)
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- Connect to a properly grounded outlet only. See grounding instructions. Do not modify the three-prong grounded plug.

SAVE THESE INSTRUCTIONS

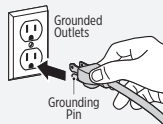
THIS MODEL IS FOR HOUSEHOLD USE ONLY. COMMERCIAL USE OF THIS UNIT VOIDS THE MANUFACTURER'S WARRANTY.

WARNING

Improper connection of the equipment-grounding conductor can result in a risk of electrical shock. Check with a qualified electrician or service person if you aren't sure if the outlet is properly grounded. **DO NOT MODIFY THE PLUG.** If it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is designed for use on a nominal 120-volt circuit and has a grounding attachment plug that looks like the plug in the illustration. Make certain that the appliance is connected to an outlet having the same configuration as the plug. No plug adapter should be used with this appliance.

GROUNDING INSTRUCTIONS

This appliance must be connected to a grounded wiring system. If it should malfunction or break down, grounding provides a safe path of least resistance for electrical current, reducing the risk of electrical shock. The cord for this appliance has an equipment-grounding conductor and a grounding plug. It must only be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.



IMPORTANT INFORMATION

- To reduce the risk of a leaking condition, do not store where freezing may occur. Damage to internal components may result.
- Plastic tanks are not dishwasher safe. Do not put tanks in dishwasher.

What's in the Box?

Standard accessories may vary by model. To identify what should be included with your purchase, please refer to the "Carton Contents" list located on the carton top flap.

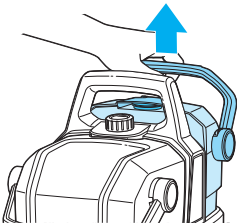
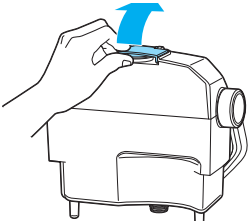
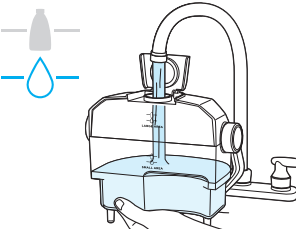
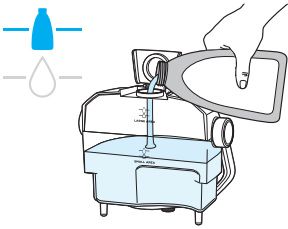
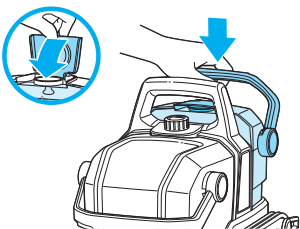
		
Machine	Tools (vary by model)	Trial Formula(s) (vary by model)

Filling the Formula Tank

Find more formulas at [BISSELL.com](https://www.bissell.com).



This machine is compatible with BISSELL® formulas made for portable carpet cleaners. Always use genuine BISSELL formulas in your machine. Use of other cleaning formulas may harm the machine.

		
1. Choose your formula.* Visit BISSELL.com for formulas.	2. Remove clean water tank from back of machine by lifting carry handle.	3. Flip cap open.
		
4. Add water to line based on size of your mess. Small Area: 28 oz Large Area: 56 oz	5. Add formula** to line based on size of your mess. Small Area: 4 oz Large Area: 8 oz	6. Close cap. Return clean tank to machine and click back into place.

***Compatible BISSELL formulas include:** Spot & Stain, PRO OXY Spot & Stain, PET Spot & Stain, PET PRO OXY Spot & Stain, SIMPLY
****Machine may be used without formula;** however, BISSELL recommends using only distilled water to prevent hard water buildup and prolong the life of your machine.

⚠ WARNING To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL cleaning formula intended for use with this machine.

Stain, Surface, and Tool Guide

➔ To purchase additional tools or formulas, visit **BISSELL.com**.



3" Tool

Great for hard-to-reach areas and small stains.



5" Tool

Wider clean path for upholstery, curtains, car interiors, stairs, and larger stains.



Multi-Surface Tool

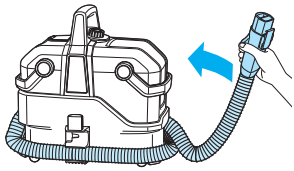
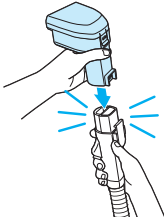
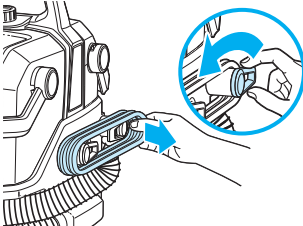
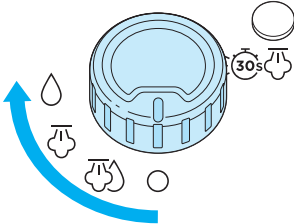
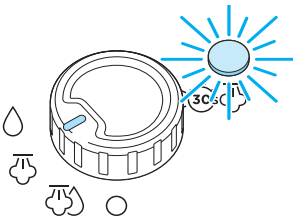
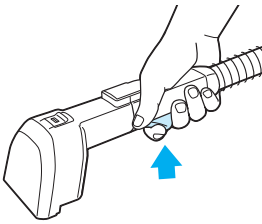
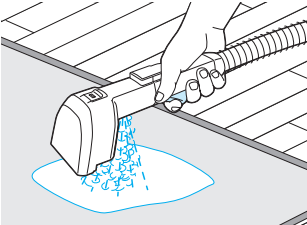
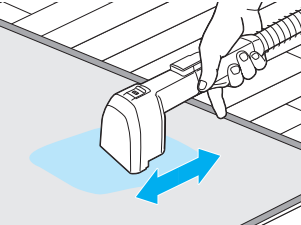
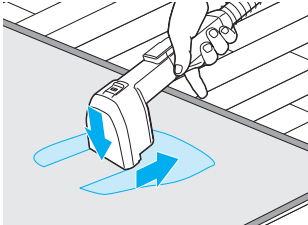
Clean unique areas like tile and grout, sneakers, car consoles, and more.

Cleaning Mode	 SteamWash™ Max Clean Mode	 Steam Mode	 Wash Mode
Cleaning Method	Spray + Steam	Steam	Spray
Description	HydroSteam™ and formula penetrate the toughest messes for fast and effective stain removal.	Loosen stains and refresh carpets and upholstery.	Water and formula scrub away everyday dirt and stains.
Recommended Tools	3", 5"	5", Multi-Surface Tool	3", 5"
Recommended Surfaces	Carpet, Area Rugs, Upholstery	Tile/Grout, Drapes, Upholstery	Carpet, Area Rugs
Beverages: Coffee, Cola, Fruit Juice, Red Wine, Tea			
Oily Messes: Cooking Grease, Pasta Sauce			
Sticky Messes: Chocolate Syrup, Honey, Jelly			
Pet: Vomit, Blood, Grass, Dirt, Urine, Feces			
Dairy: Milk, Yogurt, Baby Formula			

Important: Check the manufacturer's tag before cleaning upholstery. "W" or "WS" on the tag means you can use your Little Green HydroSteam™. If tag is coded with an "S" (with diagonal strike-through), or says "Dry Clean Only," do not proceed. If manufacturer's tag is missing or not coded, check with your furniture dealer.

Using Your Machine

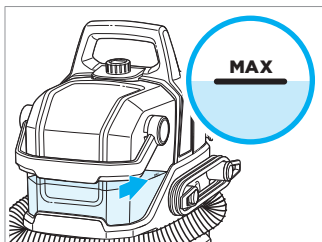
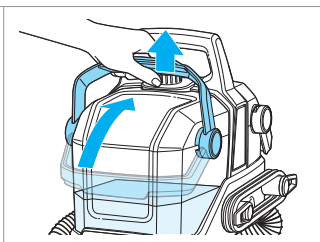
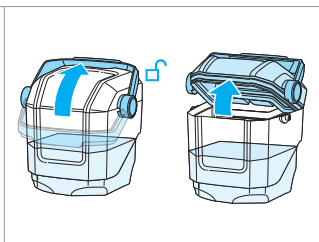
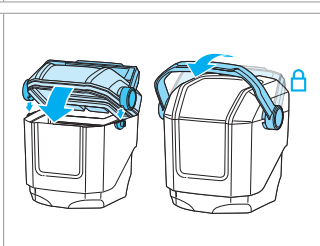
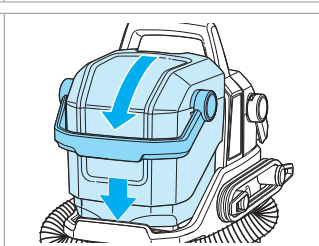
Note: This appliance is primarily a portable carpet cleaner with a steam-cleaning attachment. Before you clean, vacuum to remove loose dirt from areas to be cleaned. Spray any BISSELL stain pretreat formula on soiled areas and allow to sit for a few minutes. Test a small, hidden area for colorfastness and examine when dry. If color is affected, do not use.

		
1. Release hose by pulling away from hose clip.	2. Attach desired tool to hose grip until it clicks.	3. Twist Quick Release Cord Wrap to remove cord. Plug cord into outlet.
		
4. Select cleaning mode to turn machine ON. Turn dial to (O) position to turn OFF.	5. If choosing a mode with steam, wait 30 seconds for steam light to illuminate.	6. Press and hold trigger over sink or bowl to prime the machine until steam is present.
		
7. Point tool above stain. Firmly press and hold trigger.	8. Release trigger and use bristles to scrub area.	9. To remove stain, release trigger and make "dry passes". Firmly apply downward pressure and move tool slowly toward you until water can no longer be seen in nozzle.

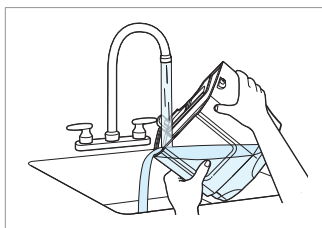
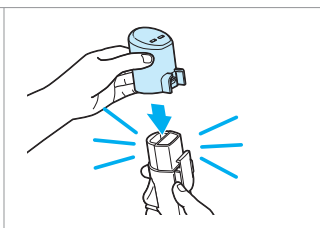
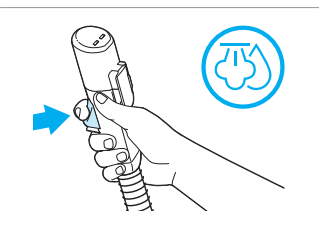
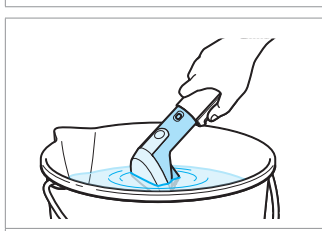
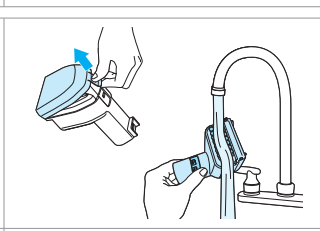
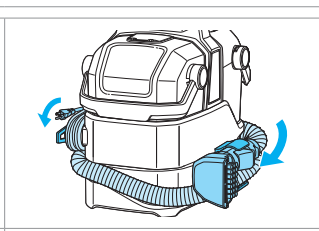
Note: In **Steam Mode** or **SteamWash™ Max Clean Mode**, it is normal for some liquid to dispense during initial steam usage and after longer durations without using steam. The longer the trigger is pressed down, the more consistent the steam is. During periods without using steam, excess water may build up and dispense upon holding the trigger again. During these instances, continue to hold the trigger for 5-10 seconds until steam comes out.

Emptying the Dirty Water Tank

Find additional tips for maintaining your machine at support.BISSELL.com.

		
1. Empty dirty water tank when water reaches “MAX” line. Do not let water overflow.	2. Remove dirty water tank and carry to a disposal area.	3. Holding dirty tank from bottom, unlock and remove lid by rotating handle backward.
		
4. Pour out dirty water. Rinse out tank to remove any debris.	5. Align lid and rotate handle forward to lock into place.	6. Place dirty water tank back onto machine.

Cleaning and Storing Your Machine

		
1. Be sure to empty dirty water tank after use (see above).	2. Clean hose with HydroRinse™ Self-Cleaning Hose Tool: Attach tool to end of hose grip until it clicks.	Turn dial to SteamWash™ Max Clean Mode. With hose upright and machine ON, press HydroRinse trigger 30 seconds.
		
Hose Cleaning Alternative: Suction clean water from bowl (or bucket). Lift and stretch hose until all water is cleared. Do not suction >32 oz. water.	3. Lift latch on clear nozzle to remove. Then rinse. Wipe away any debris from steam nozzle.	4. Wrap hose for storage. Store indoors in a secure, dry location.

Thermal Protector

An internal thermal protector has been designed into your machine to protect it from overheating. When the thermal protector activates, the main motor will stop operating. If this happens, proceed as follows:

1. Turn machine OFF and unplug from electrical outlet.
2. Let the motor cool for approximately 30 minutes. The thermal protector will automatically reset, and cleaning may continue once plugged back in.

Note: If the thermal protector continues to activate after following the above steps, your machine may need servicing. Call BISSELL® Consumer Care or visit the website.

Troubleshooting

🔧 Below are some of the issues you may run into. If you don't see the issue you're experiencing below, visit support.BISSELL.com.

Problem	Possible Cause	Remedies
Reduced/no spray	Clean water tank may be empty.	Refill tank.
	Clean water tank may not be seated properly.	Fully seat tank until it clicks into place.
	Spray tip may be clogged/dirty.	Clean spray tip.
Reduced/loss of suction	Dirty tank may be full.	Empty dirty tank.
	Red filter under dirty tank may be clogged.	Remove any debris from the red filter.
	Dirty tank may not be correctly seated.	Ensure there are no obstructions preventing the dirty tank from fully being seated in its recess.
	Dirty tank lid may not be correctly seated.	Ensure the lid is fully seated in the dirty tank and the handle fully locks the lid into place.
	Tool or hose may be clogged with hair/fibers/etc.	Remove any clogs.
Machine leaks	<i>From bottom:</i> Dirty tank has been filled beyond the "Max" line with water or foam.	Do not allow machine to collect liquid past the "max" line. Ensure only Bissell portable deep cleaner formulas are used, at the correct concentrations, to prevent excessive foaming.
	<i>From hose/tool:</i> Water remains in hose after turning off.	Run machine for several seconds after stopping suction to ensure water is sucked into dirty tank.
No/low steam.	Clean water tank may be empty.	Refill tank.
	Machine not pre-heated.	Wait 30 seconds for "steam ready" indicator light to turn on.
	Water sprays instead of steam.	This is normal; a small amount of water condensate forms in the steam lines when steam is not used. Continue to hold the trigger and steam will come out within 5-10 seconds.
Steam ready light not illuminated after two minutes.	Thermal Protector on heater has tripped.	Please visit an authorized service center.

Note: Any other servicing should be performed by an authorized service representative.

Warranty

Limited 3-year warranty, may vary by state. Visit support.BISSELL.com or call 1-800-237-7691 for complete warranty information.



We're Waggin' Our Tails!

BISSELL proudly supports BISSELL Pet Foundation® and its mission to help save homeless pets. When you buy a BISSELL® product, you help save pets, too. We're proud to design products that help make pet messes, odors and pet homelessness disappear.

Visit **BISSELLsavespets.com** to learn more.

But wait, there's more!

Join us online for a complete guide to your new product, including troubleshooting, product registration, parts, and more.

Go to support.BISSELL.com.



REGISTER



INFO



VIDEOS



PARTS



SUPPORT



©2023 BISSELL Inc. All rights reserved.
Part Number 1634731 05/23 v51

REGÍSTRASE INFO VIDEOS PIEZAS SOPORTE

Vistenos en línea para obtener información completa sobre su nuevo producto, incluidos la solución de problemas, el registro del producto, las piezas y más. **Visite support.bissell.com.**

Pero espere. ¡Aún hay más!

BISSELL se enorgullece de apoyar a la BISSELL Pet Foundation® y su misión de ayudar a las mascotas sin hogar. Cuando compra un producto BISSELL®, también ayuda a salvar mascotas. Estamos orgullosos de diseñar productos que ayudan a eliminar el desorden, los olores y la falta de hogar de las mascotas. Visite **[BISSELLsavespets.com](https://bissellsavespets.com)** para obtener más información.

¡Por los amigos peludos!



Protector térmico

Se diseñó un protector térmico interno en su máquina para protegerla de un sobrecalentamiento. Cuando se active el protector térmico, el motor principal dejará de funcionar. Si esto ocurre, proceda de la siguiente manera:

1. APAGUE la máquina y desconecte de la toma de corriente.

2. Deje que el motor se enfríe durante aproximadamente 30 minutos. El protector térmico se restablecerá de manera automática y puede continuar con la limpieza una vez que vuelva a enchufar la máquina.

Nota: Si el protector térmico se sigue activando después de seguir los pasos anteriores, tal vez su máquina requiera servicio técnico. Llame al Servicio de atención al consumidor de BISSELL® o visite el sitio web.

Resolución de problemas

🔍 A continuación le indicamos algunos de los problemas con los que puede encontrarse. Si no ve el problema que está experimentando a continuación, visite [support.BISSELL.com](https://support.bissell.com).

Problema	Posible causa	Soluciones
No hay rocío/está reducido	Tal vez el depósito de agua limpia no esté asentado correctamente.	Asiente completamente el depósito hasta que encaje en su sitio.
	La punta rociadora puede estar obstruida/sucia.	Limpie la punta rociadora.
	El depósito de agua sucia puede estar lleno.	Vacíe el depósito de agua sucia.
	El filtro rojo debajo del depósito de agua sucia puede estar obstruido.	Retire cualquier residuo del filtro rojo.
No hay succión o está reducida	Tal vez el depósito de agua sucia no esté asentado correctamente.	Compruebe que no haya obstrucciones que eviten que el depósito de agua sucia se asiente completamente en su hueco.
	Tal vez la tapa del depósito de agua sucia no esté asentada correctamente.	Compruebe que la tapa esté asentada completamente en el depósito de agua sucia y que la manija bloquee completamente la tapa en su posición.
	La herramienta o manguera puede estar obstruida con cabello/fibras/etc.	Retire cualquier obstrucción.
	De la parte inferior: el depósito de agua sucia se llenó más allá de la línea "Max" con agua o espuma.	No deje que la máquina recolecte líquido más allá de la línea "Max". Compruebe que solo se utilicen fórmulas BISSELL para limpiador profundo portátil, en las concentraciones correctas, para evitar una espumación excesiva.
Fugas de la máquina	De la manguera/herramienta: hay agua en la manguera después de apagar el aparato.	Haga funcionar la máquina por varios segundos después de detener la succión para asegurarse de que el agua se succione hacia el depósito de agua sucia.
	El depósito de agua limpia puede estar vacío.	Rellene el depósito.
No hay vapor/hay muy poco.	La máquina no se precalentó.	Esprese 30 segundos a que se encienda la luz indicadora de "Vapor listo".
	Se rocía agua en vez de vapor.	Esto es normal; se forma una pequeña cantidad de agua condensada en las líneas de vapor cuando este no se utiliza. Siga manteniendo oprimido el disparador y saldrá vapor dentro de 5 a 10 segundos.
	Se activo el protector térmico en el calentador.	Visite un centro de servicio autorizado.
La luz de vapor listo no se enciende después de dos minutos.		

Nota: Cualquier otro servicio lo debe realizar un representante autorizado del servicio técnico.




Garantía

Garantía limitada de 3 años: puede variar según el estado. Visite [support.BISSELL.com](https://support.bissell.com) o llame al 1-800-237-7691 para obtener información completa sobre la garantía.

BISSELL.com

➤ Encontrará consejos adicionales para el mantenimiento de su máquina en support.BISSELL.com.

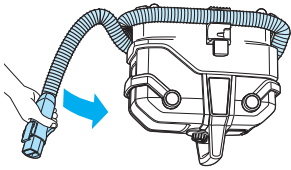
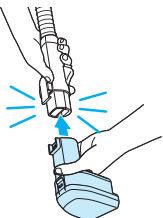
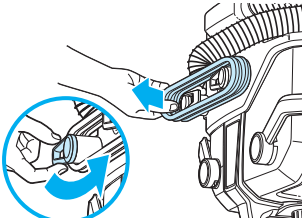
Limpieza y almacenamiento de su máquina

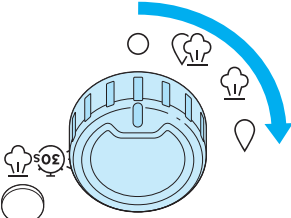
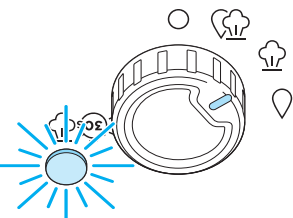
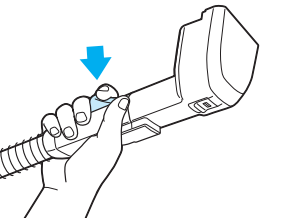
 Alternativa de limpieza de la manguera: succione el agua sucia del recipiente (o cubeta). Levante y estire la manguera hasta que salga toda el agua. No succione más de 32 oz de agua.	3. Levante el cerrojo en la boquilla para retirarla. Luego enjuague. Limpie cualquier residuo de la boquilla de vapor.	4. Enrolle la manguera para almacenarla. Guarde en interior, en una ubicación segura y seca.
		

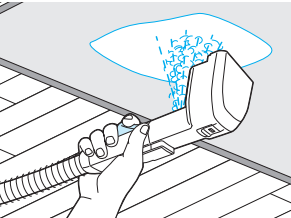
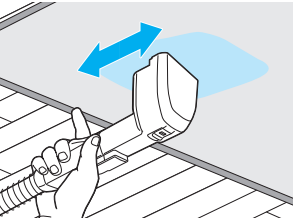
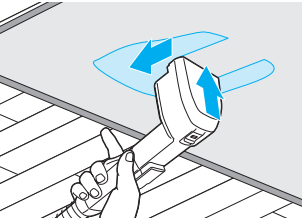
Uso de su máquina

Nota: este aparato es principalmente un limpiador de alfombras portátil con un accesorio de limpieza con vapor.

Antes de limpiar, aspire para retirar la tierra suelta de las áreas a limpiar. Rocíe cualquier fórmula BISSELL para tratamiento previo de manchas en las áreas sucias y deje asentarse por unos cuantos minutos. Pruebe la fijación de color en un área oculta pequeña y examine cuando se seque. Si el color se ve afectado, no utilice la fórmula.

	1. Para soltar la manguera, tire de modo que se aleje de la abrazadera.
	2. Conecte la herramienta deseada al conector de la manguera hasta que se enganche.
	3. Tuerza el rollo de cable Quick Release para quitar el cable. Enchufe el cable en un tomacorriente.

	4. Seleccione el modo de limpieza para ENCENDER la máquina. Gire el selector a la posición (O) para APAGARLA.
	5. Si selecciona un modo con vapor, espere 30 segundos hasta que se encienda la luz de vapor.
	6. Presione y mantenga oprimido el disparador sobre el lavado o recipiente para cebar la máquina hasta que haya vapor presente.

	7. Apunte la herramienta sobre la mancha. Presione firmemente y mantenga oprimido el disparador.
	8. Suelte el disparador y utilice cerdas para frotar el área.
	9. Para quitar la mancha, suelte el disparador y realice "pasadas en seco". Aplique firmemente presión descendente y mueva la herramienta con lentitud hacia usted, hasta que ya no se vea agua en la boquilla.

Nota: En el **modo de vapor** o **SteamWash™ de limpieza máxima**, es normal que se disperse líquido durante el uso inicial del vapor y después de duraciones más extensas sin utilizar vapor. Entre más tiempo se presione el disparador, más consistente será el vapor. Durante periodos sin utilizar vapor, se puede acumular agua en exceso y dispensar si se presiona el disparador de nuevo. Durante estos casos, siga presionando el disparador de 5 a 10 segundos hasta que salga el vapor.

Guía de herramientas, superficies y manchas

Para comprar herramientas o fórmulas adicionales, visite BISSELL.com.



Herramienta multisuperficie
Limpie áreas únicas como mosaico y lechada, tenis, consolas de auto y más.



Herramienta de 5"
Ruta de limpieza más amplia para tapicería, cortinas, interiores de autos, escaleras y manchas más grandes.



Herramienta de 3"
Excelente para áreas difíciles de alcanzar y manchas pequeñas.



Modo de limpieza	Método de limpieza	Spray + Vapor	HydroSteam™ y la fórmula penetran en los lugares más sucios para eliminar las manchas de forma rápida y eficaz.	Descripción	Herramientas recomendadas	3", 5"	Superficies recomendadas	Alfombra, tapetes de área, tapicería	Azuleros y baldosas, cortinas, tapicería	Alfombra, tapetes de área	Bebidas: café, cola, jugo de fruta, vino tinto, té	Desastres aceitosos: grasa de cocina, salsa para pasta	Desastres pegajosos: jarabe de chocolate, miel, mermelada	Mascota: vómito, sangre, hierba, tierra, orina, heces	Lácteos: leche, yogurt, fórmula para bebé
		Vapor	Afloja las manchas y refresca alfombras y tapicerías.		5", Herramienta multisuperficie										
					3", 5"										

Importante: Compruebe la etiqueta del fabricante antes de limpiar la tapicería. "W" or "WS" en la etiqueta significa que puede utilizar su Little Green HydroSteam™. Si la etiqueta está codificada con una "S" (con tachadura diagonal), o dice "Solo limpieza en seco", no continúe. Si falta la etiqueta del fabricante o no está codificada, consulte a su vendedor de muebles.

¿Qué incluye la caja?

Los accesorios estándar pueden variar según el modelo. Para identificar lo que debe incluirse con su compra, consulte la lista de "Contenido de la caja" situada en la solapa superior de la caja.

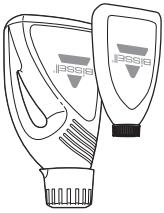
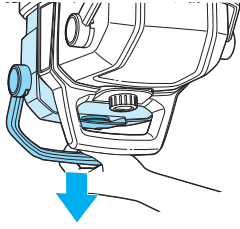
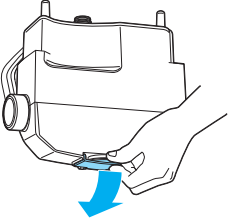
Máquina 	Herramientas (varía según el modelo) 	Fórmula(s) de prueba (varía según el modelo) 
--	---	---

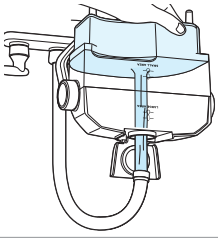
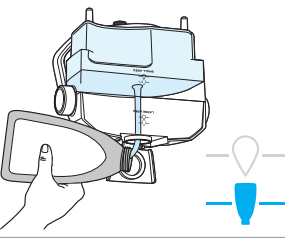
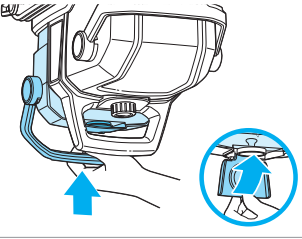
Llenado del depósito de fórmula

➤ Encontrará más fórmulas en [BISSELL.com](https://www.bissell.com).

Esta máquina es compatible con las fórmulas BISSELL® fabricadas para limpiadores de alfombras portátiles. Utilice siempre fórmulas genuinas de BISSELL en su máquina. El uso de cualquier otra fórmula de limpieza puede dañar la máquina.



1. Seleccione su fórmula.* Visite BISSELL.com para las fórmulas. 	2. Retire el depósito de agua limpia de la parte posterior de la máquina; para ello, levante la manija de transporte. 	3. Gire la tapa para abrirla. 
--	---	--

4. Agregue agua a la línea con base en el tamaño del área a limpiar. Área pequeña: 28 oz Área grande: 56 oz 	5. Agregue fórmula** a la línea con base en el tamaño del área a limpiar. Área pequeña: 4 oz Área grande: 8 oz 	6. Cierre la tapa. Regrese el depósito limpio a la máquina hasta que enganche de nuevo en su lugar. 
---	--	--

*Las fórmulas BISSELL compatibles son: Spot & Stain, PRO OXY Spot & Stain, PET Spot & Stain, PET PRO OXY Spot & Stain, SIMPLY La máquina puede utilizarse sin fórmula; sin embargo, BISSELL recomienda utilizar solo agua destilada para evitar la acumulación de agua dura y prolongar la vida de su máquina.

¡ADVERTENCIA Para reducir el riesgo de incendio y descarga eléctrica debido a daños en los componentes internos, utilice solo la fórmula de limpieza BISSELL diseñada para usarse con esta máquina.

INSTRUCCIONES IMPORTANTES DE SEGURIDAD

LEA TODAS LAS INSTRUCCIONES ANTES DE UTILIZAR SU APARATO.

Al utilizar un aparato eléctrico, deben observarse las precauciones básicas, entre ellas las siguientes:



ADVERTENCIA

LESIONES:

- No deje solo el aparato cuando esté enchufado. Desenchufe el tomacorriente cuando no esté en uso y antes de realizar el mantenimiento.
- No lo exponga a la lluvia. Almacene en interiores.
- Instale siempre el filtroador antes de cualquier operación de recolección húmeda.

- Use solo los productos de limpieza diseñados para usarse con este aparato para prevenir un daño a los componentes internos. Consulte la sección Formulas de limpieza de esta guía.
- No permita que se utilice como juguete. Es necesario prestar mucha atención cuando sea utilizado por niños o cerca de ellos.
- No la utilice para ningún otro fin que no sea el descrito en esta guía del usuario.

- Utilice únicamente los accesorios recomendados por el fabricante.
- No lo utilice con un cable o enchufe dañado. Si el aparato no funciona como debería, se cayó, se dañó, se dejó al aire libre o se cayó al agua, no intente utilizarlo y llévelo a reparar a un centro de servicio autorizado.
- No tire del cable ni lo transporte, ni utilice el cable como manija, ni tire una puerta sobre el cable, ni tire del cable alrededor de bordes o esquinas afilados. No pase el aparato por encima del cable. Mantenga el cable alejado de las superficies calientes.

- No desenchufe tirando del cable. Para desenchufar, sujete el enchufe y no el cable.
- No manipule el enchufe ni el aparato con las manos mojadas.
- No ponga objetos en las aberturas. No lo utilice con ninguna abertura bloqueada; mantenga las aberturas libres de polvo, pelusa, pelo y cualquier cosa que pueda reducir el flujo de aire.
- Mantenga el pelo, la ropa suelta, los dedos y todas las partes del cuerpo alejados de las aberturas y de las partes móviles, tanto del aparato como de sus accesorios.

GUARDE ESTAS INSTRUCCIONES

ESTE MODELO ES SÓLO PARA USO DOMÉSTICO. EL USO COMERCIAL DE ESTA UNIDAD ANULA LA GARANTÍA DEL FABRICANTE.

INFORMACIÓN IMPORTANTE

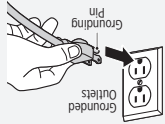
- Para reducir el riesgo de que se produzcan fugas, no lo almacene en lugares donde pueda congelarse. Pueden producirse daños en los componentes internos.
- Los depósitos de plástico no son aptos para el lavavajillas. No coloque depósitos en el lavavajillas.

ADVERTENCIA

La conexión incorrecta del conductor que conecte el equipo a tierra puede provocar un riesgo de descarga eléctrica. Compruebe con un electricista o técnico de servicio calificado si no está seguro de que el tomacorriente este correctamente aterrizado. NO MODIFIQUE EL ENCHUFE SI NO entra en el 120 voltios nominales y tiene un enchufe con conexión a tierra que se parece al de la ilustración. Compruebe que el aparato esté conectado a un tomacorriente que tenga la misma configuración que el enchufe. No deben utilizarse adaptadores de enchufe con este aparato.

INSTRUCCIONES DE CONEXIÓN A TIERRA

Este aparato debe conectarse a un sistema de cableado con conexión a tierra. En caso de falla o descompostura, la conexión a tierra provee una ruta segura de menor resistencia para la corriente eléctrica, lo que reduce el riesgo de una descarga eléctrica. El cable para este aparato tiene un conductor con conexión a tierra y un enchufe con conexión a tierra. Solo debe enchufarse en un tomacorriente que esté instalado de manera apropiada y conectado a tierra de conformidad con todos los códigos y disposiciones locales.





LITTLE GREEN® HYDROSTEAM™ LIMPIADOR PORTÁTIL DE ALFOMBRAS Y TAPICERÍA SERIES 3532, 3618, 3605, 3606

¿Qué incluye la caja?.....3

Llenado del depósito de fórmula.....3

Guía de herramientas, superficies y manchas...4

Uso de su máquina5

Vaciado del depósito de agua sucia.....6

Limpieza y almacenamiento de su máquina6

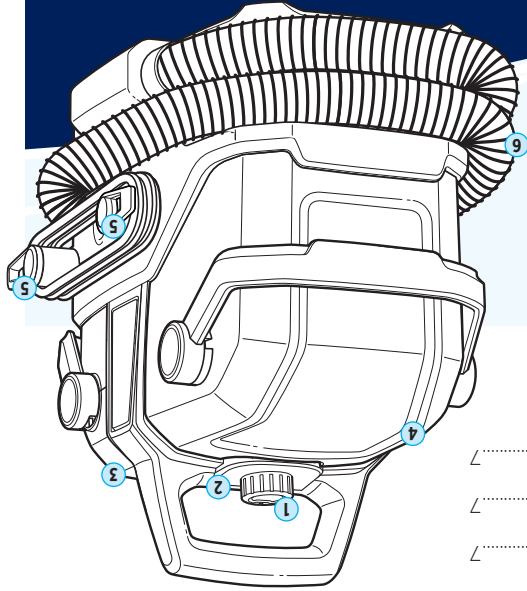
Protector térmico.....7

Resolución de problemas.....7

Garantía.....7

Resumen del producto

1. Selector de modo de energía y limpieza
2. Luz de vapor listo
3. Depósito de agua limpia
4. Depósito de agua sucia
5. Rollo para cable y cable de alimentación Quick Release™
6. Manguera flexible



¡Conozca su nuevo producto BISSELL®!

Visite support.BISSELL.com para una descripción detallada de su nueva compra, que incluye videos, consejos, asistencia y mucho más. ¿Quiere empezar de inmediato? Esta guía tiene toda la información que necesita para configurar su nuevo producto. Echemos un vistazo...

