

Gillette®
Venus™

powered by **BRAUN**



Type 5365
Modèle 5365



face
PERFECTION



91590597/VI-17

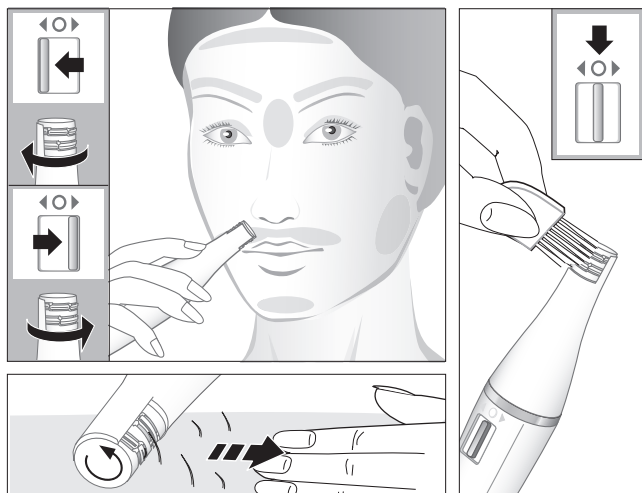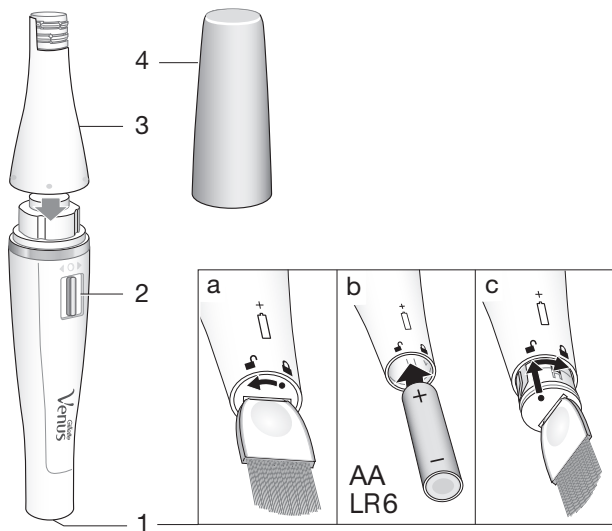



Consumer Helplines Lignes d'assistance

English 4

Français 7

To be referred to a Braun Service Center in your region or to locate Braun parts and accessories visit www.service.braun.com or call:

US residents:

800-Braun-11 (1-800-272-8611)

Canadian residents:

1-800-387-6657

Pour contacter le service après-vente, veuillez composer le 1-800-387-6657 ou visiter www.service.braun.com afin d'être dirigé vers le centre de service après-vente agréé Braun le plus proche.

English

The facial epilator is ideal for removing even the finest facial hairs from the roots.

Important

Do not use the epilation head on eyelashes. You may use the epilation head for removing individual hairs between or above the eyebrows, but not for shaping eyebrows.

Never epilate with a damaged epilation head.

When the appliance is switched on, it must never come in contact with long hair, clothing or ribbons to prevent any risk of personal injury as well as to prevent blockage or damage to the appliance.

Description

- 1 Battery compartment
- 2 On/off switch
- 3 Epilation head
- 4 Protective cap

Battery

Replace the batteries as needed: Open the battery compartment (1) by turning the lid towards  using the brush provided. Replace the battery (AA alkaline, 1.5 V) observing correct polarity. Replace the lid by aligning the dot with  (see fig. c) and turning turning towards  to lock it. Make sure your hands and the appliance are dry when replacing the battery.

How to use the facial epilator

- Before use, make sure your skin and the epilation head are thoroughly clean.
- Turn on the appliance by sliding the on/off switch (2) to the left or to the right. The rotating direction of the tweezers depends on the direction you move the switch when turning on. For best results, make sure that the

tweezers rotate against the direction of hair growth.

- To become familiar with the appliance we recommend trying it first on the chin or near the outer corners of the mouth.
- Hold the appliance with the tweezers against a section of skin that you keep stretched with your free hand. Carefully guide it with gentle pressure against the direction of hair growth. Do not press too hard as this may lead to skin injury. To stretch the upper lip area, use your tongue to push from below.
- After use, slide the on/off switch to the «O» (= off) position.
- Carefully clean the epilation head using the cleaning brush provided. You may want to dip the brush into ethanol (70 %).
- To relax the skin we recommend applying a moisturizing cream after epilation.
- When epilating for the first time, it is advisable to epilate in the evening, so that any possible reddening can disappear overnight.

General information on epilation

All methods of hair removal from the root can lead to irritation (e.g. itching, discomfort and reddening of the skin) depending on the condition of the skin and hair.

This is a normal reaction and should quickly disappear, but may be stronger when you are removing hair at the root for the first few times or if you have sensitive skin. If, after 36 hours, the skin still shows irritation, we recommend that you contact your physician. In general, skin reactions and the sensation of pain tend to diminish considerably with the repeated use.

In some cases inflammation of the skin could occur when bacteria penetrate the

skin (e.g. when sliding the appliance over the skin). Thoroughly cleaning the epilation head and your skin before each use will minimise the risk of infection. If you have any doubts about using his appliance, please consult your physician. In the following cases, this appliance should only be used after prior consultation with a physician: eczema, wounds, inflamed skin reactions such as folliculitis (purulent hair follicles) and varicose veins around moles, reduced immunity of the skin, e.g. diabetes mellitus, during pregnancy, Raynaud's disease, koebner phenomenon, haemophilia or immune deficiency. When you begin taking hormones or if you change the type of hormone medication (e.g. contraceptive pill), the growth of your hairs may be influenced due to a change of your hormone level. This is caused by the change of hormonal conditions, but not by the appliance.

Battery warnings

Keep batteries away from children and pets. If swallowed, consult a physician at once. For information on treatment call Poison Control (202) 625-3333. Batteries may explode or leak and cause burn injury if recharged, disposed of in fire, mixed with a different battery type, inserted backwards or disassembled. If a battery leaks, wipe the device with a damp cloth and wash hands. If any material gets in eyes, contact a physician immediately. Remove the batteries before storing your appliance for extended periods.

Disposal

These products contain batteries and recyclable electronic waste. To protect the environment, do not discard them with the household waste, but dispose



of them at appropriate local collection points.

Subject to change without notice.

FOR USA ONLY

1 year limited warranty

Braun warrants this product to be free of defects in material and workmanship for a period of one year from the date of original purchase.

If the appliance exhibits such a defect, Braun will, at its option, either repair or replace it for the consumer without charge.

This warranty does not cover damage resulting from accident, misuse, abuse, dirt, water, tampering, unreasonable use, servicing performed or attempted by unauthorized service agencies or failure to provide reasonable and necessary maintenance.

ALL IMPLIED WARRANTIES INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE ARE LIMITED IN DURATION TO 1 YEAR FROM DATE OF ORIGINAL PURCHASE. IN NO EVENT WILL BRAUN INC. BE RESPONSIBLE FOR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state.

FOR CANADA ONLY

In the event this appliance fails to function within 1 year from date of purchase, because of defects in material or workmanship, and the consumer returns the unit to an authorized service center, Braun Canada, will, at its option, either repair or replace the unit without additional charge to the consumer.

This guarantee does not cover any product, which has been damaged by dropping, tampering, wrong current, servicing performed or attempted by unauthorized service agencies, misuse or abuse.

Exclusion of Warranties: The foregoing warranty is the sole warranty offered by Braun Canada hereby disclaims any implied warranty or merchantability or fitness for any particular purpose. In no event will Braun Canada be responsible for consequential damages resulting from the use of this product.

Français

L'épilateur pour le visage est parfait pour enlever même les poils du visage les plus fins à la racine.

Important

Ne pas utiliser la tête d'épilation pour épiler les cils. Il est possible d'utiliser la tête d'épilation pour enlever les poils entre ou au-dessus des sourcils, mais pas pour les définir.

Ne jamais épiler si la tête d'épilation est endommagée.

Lorsque l'appareil est en marche, il ne doit jamais entrer en contact avec les cheveux, les rubans ou autres accessoires afin d'éviter les risques de blessure et pour ne pas bloquer ou endommager l'appareil.

Description

- 1 Compartiment à piles
- 2 Interrupteur marche/arrêt
- 3 Tête d'épilation
- 4 Capuchon de protection

Pile

Remplacer les piles lorsque nécessaire.

Ouvrir le compartiment à piles (1) en tournant le couvercle en direction du symbole  en utilisant la brosse fournie.

Remplacer la pile (type AA alcaline de 1,5 V) en respectant la polarité. Replacer le couvercle en alignant le point avec le symbole  (voir fig. c) puis tourner vers la position  pour le fermer.

Prendre soin de remplacer la pile lorsque les mains et l'appareil sont secs.

Comment utiliser l'épilateur pour le visage

- Avant d'utiliser l'appareil, s'assurer que la peau et la tête d'épilation sont bien propres.
- Mettre l'appareil en marche en glissant l'interrupteur marche/arrêt (2) vers la gauche ou vers la droite. Le mouvement rotatif des pincettes dépend de la direction donnée à

l'interrupteur lors de la mise en marche. Pour des résultats optimaux, s'assurer que les pincettes tournent dans le sens opposé à la repousse.

- Pour vous familiariser avec l'appareil, nous recommandons d'en faire l'essai sur le menton ou près des coins extérieurs de la bouche.
- Maintenir l'appareil avec les pincettes sur la peau tendue à l'aide de la main libre. En exerçant une légère pression, déplacer l'appareil avec soin dans le sens opposé à la pousse des poils. Ne pas appuyer trop fort, car cela pourrait causer des lésions cutanées. Pour étirer la zone au-dessus de la lèvre, pousser sous la surface avec la langue.
- Après l'utilisation, faire glisser l'interrupteur marche/arrêt à la position « O » (arrêt).
- Nettoyer délicatement la tête d'épilation à l'aide de la brosse de nettoyage fournie. Vous pouvez aussi tremper la brosse dans de l'éthanol (70 %).
- Nous vous recommandons d'appliquer une crème hydratante après l'épilation pour détendre votre peau.
- Il est préférable de s'épiler pour la première fois le soir afin que les rougeurs qui risquent d'apparaître puissent disparaître durant la nuit.

Renseignements généraux concernant l'épilation

Selon l'état de la peau et le type de poil, toutes les méthodes d'épilation des poils à la racine peuvent causer de l'irritation (p. ex. des démangeaisons, de l'inconfort ou des rougeurs sur la peau). Il s'agit d'une réaction normale qui devrait disparaître rapidement, mais elle peut s'avérer plus forte lors des

premières épilations ou si vous avez la peau sensible. Si, après 36 heures, la peau est toujours irritée, nous vous recommandons de communiquer avec votre médecin. En général, la réaction cutanée et la sensation de douleur tendent à diminuer considérablement avec l'utilisation répétée de l'appareil. Dans certains cas, l'inflammation de la peau peut se produire lorsque des bactéries pénètrent dans la peau (p. ex. au passage de l'appareil). Nettoyer la tête d'épilation et la peau à fond avant chaque utilisation aidera à réduire les risques d'infection.

En cas de doute sur l'utilisation de l'appareil, veuillez consulter votre médecin. Dans les cas suivants, l'appareil ne devrait être utilisé qu'après avoir consulté un médecin : eczéma, lésions, inflammations de la peau telles qu'une folliculite (follicules purulents), varices, autour des grains de beauté, faible immunité de la peau (p. ex. diabète sucré, durant la grossesse, maladie de Raynaud), phénomène de Köbner, hémophilie ou immunodéficience.

Au début de la prise d'hormones ou au changement du type d'hormonothérapie (p. ex. : pilule contraceptive), la concentration hormonale peut avoir une incidence sur la pousse des poils. Cela est causé par les changements hormonaux et non par l'appareil.

Mise en garde concernant les piles

Tenir les piles hors de la portée des enfants et des animaux. En cas d'ingestion, consulter immédiatement un médecin. Pour obtenir de plus amples renseignements sur les modes de traitement, appeler le centre antipoison au 202-625-3333.

Les piles peuvent exploser ou couler et causer des brûlures si elles sont rechargées, jetées au feu, combinées

à d'autres types de piles, insérées à l'envers ou démontées.

Si la pile fuit, essuyer l'appareil à l'aide d'un chiffon humide, puis se laver les mains. Si toute substance entre en contact avec les yeux, consulter immédiatement un médecin.

Enlever les piles de l'appareil avant de le ranger pendant une période de temps prolongée.

Conseils pour jeter ces produits

Ces produits contiennent des piles et des déchets électroniques recyclables. Afin de protéger l'environnement, ne les jetez pas avec les ordures ménagères, mais déposez-les dans un site de récupération approprié.



Sous réserve de modifications sans préavis.

POUR LE CANADA SEULEMENT

Garantie

Advenant un défaut de fonctionnement de cet appareil survenant au cours de la période d'un an suivant la date de l'achat, en raison d'un vice de matière ou de fabrication, et pourvu que le consommateur retourne l'appareil à un centre de service après-vente agréé, Braun Canada se réserve le choix de le réparer ou de le remplacer, sans aucuns frais supplémentaires pour le consommateur.

La présente garantie ne couvre aucun produit endommagé par une chute, une modification, l'utilisation d'un courant inadéquat, un entretien ou des tentatives d'entretien par des centres de service après-vente non agréés, ou usage impropre ou abusif.

Exclusion de garantie : La présente garantie est la seule garantie offerte par Braun Canada. Par la présente, Braun Canada rejette toute garantie implicite à l'égard de la qualité marchande ou de l'aptitude à des fins particulières. En aucun cas Braun Canada ne sera tenue responsable des dommages indirects résultant de l'utilisation de ce produit.