


Cub Cadet[®]

OPERATOR'S MANUAL

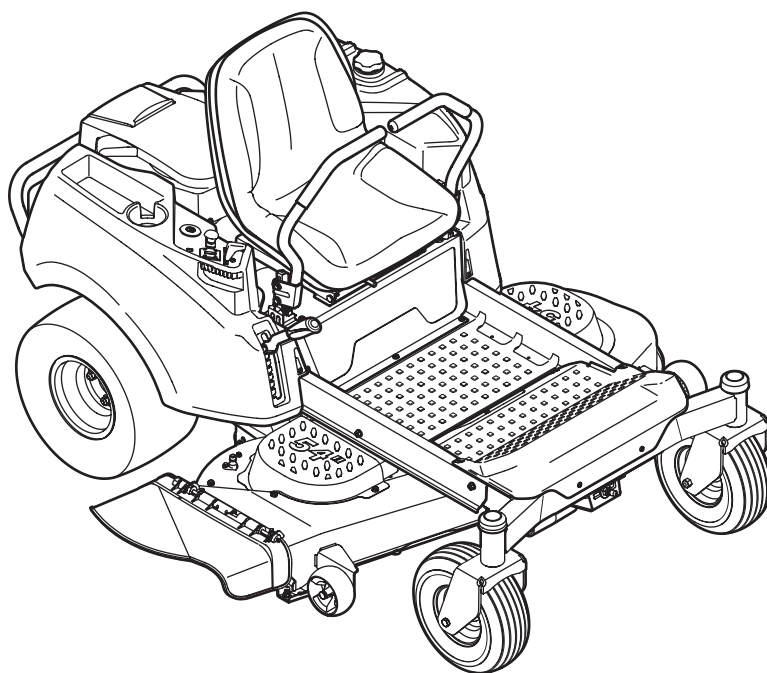

RZT L Series Tractor

⚠ WARNING

**READ AND FOLLOW ALL SAFETY RULES AND INSTRUCTIONS IN THIS MANUAL
BEFORE ATTEMPTING TO OPERATE THIS MACHINE.
FAILURE TO COMPLY WITH THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY.**

P. O. Box 1386 KITCHENER, ONTARIO, CANADA N2G 4J1

Thank You

Please read this entire manual prior to operating the equipment. It instructs you how to safely and easily set up, operate and maintain your machine. Please be sure that you, and any other persons who will operate the machine, carefully follow the recommended safety practices at all times. Failure to do so could result in personal injury or property damage.

All information in this manual is relative to the most recent product information available at the time of printing. Review this manual frequently to familiarize yourself with the machine, its features and operation. Please be aware that this Operator's Manual may cover a range of product specifications for various models. Characteristics and features discussed and/or illustrated in this manual may not be applicable to all models. The manufacturer reserves the right to change product specifications, designs and equipment without notice and without incurring obligation.

This product has met the rigid safety standards of the Outdoor Power Equipment Institute and an independent testing laboratory. If you have any problems or questions concerning the machine, phone your local authorized service dealer.

Throughout this manual, all references to *right* and *left* side of the machine are observed from the operating position.

The engine manufacturer is responsible for all engine-related issues with regards to performance, power-rating, specifications, warranty and service. Please refer to the engine manufacturer's Owner's/Operator's Manual, packed separately with your machine, for more information.

Table of Contents

<i>Safe Operation Practices</i>	3	<i>Troubleshooting</i>	34
<i>Assembly & Set Up</i>	9	<i>Replacement Parts</i>	35
<i>Controls & Features</i>	12	<i>Accessories</i>	37
<i>Operation</i>	15	<i>Emissions Control Warranty Statement</i>	38
<i>Maintenance & Adjustment</i>	22	<i>Warranty</i>	40
<i>Service</i>	28		

Record Product Information

Before setting up and operating your new equipment, please locate the model plate on the equipment and record the information in the provided area to the right. You can locate the model plate by looking beneath the seat. This information will be necessary, should you seek technical support from an authorized service dealer.

MODEL NUMBER

--	--	--	--	--	--	--	--	--	--	--	--

SERIAL NUMBER

--	--	--	--	--	--	--	--	--	--	--	--

Customer Support

If you have difficulty assembling this product or have any questions regarding the controls, operation, or maintenance of this machine, you can seek help from the experts. Choose from the options below:

- ◇ Visit our web at www.cubcadet.ca
- ◇ Locate your nearest dealer at: 1-800-668-1238
- ◇ Contact Cub Cadet, 97 Kent Ave., Kitchener, ON N2G 4J1 Phone: 1-800-668-1238 or
LES DISTRIBUTIONS RVI LIMITÉE, 29,55, Jean-Baptiste Deschamps, Lachine, Quebec H8T 1C5 Phone: 1-800-361-5770



WARNING! This symbol points out important safety instructions which, if not followed, could endanger the personal safety and/or property of yourself and others. Read and follow all instructions in this manual before attempting to operate this machine. Failure to comply with these instructions may result in personal injury.

When you see this symbol. **HEED ITS WARNING!**



DANGER! This machine was built to be operated according to the safe operation practices in this manual. As with any type of power equipment, carelessness or error on the part of the operator can result in serious injury. This machine is capable of amputating hands and feet and throwing objects. Failure to observe the following safety instructions could result in serious injury or death.

General Operation

1. Read, understand, and follow all instructions on the machine and in the manual(s) before attempting to assemble and operate. Keep this manual in a safe place for future and regular reference and for ordering replacement parts.
2. Be familiar with all controls and their proper operation. Know how to stop the machine and disengage them quickly.
3. Never allow children under 14 years of age to operate this machine. Children 14 and over should read and understand the instructions and safe operation practices in this manual and on the machine and should be trained and supervised by an adult.
4. Never allow adults to operate this machine without proper instruction.
5. To help avoid blade contact or a thrown object injury, keep bystanders, helpers, children and pets at least 75 feet from the machine while it is in operation. Stop machine if anyone enters the area.
6. Thoroughly inspect the area where the equipment is to be used. Remove all stones, sticks, wire, bones, toys, and other foreign objects which could be picked up and thrown by the blade(s). Thrown objects can cause serious personal injury.
7. Plan your mowing pattern to avoid discharge of material toward roads, sidewalks, bystanders and the like. Also, avoid discharging material against a wall or obstruction which may cause discharged material to ricochet back toward the operator.
8. Always wear safety glasses or safety goggles during operation and while performing an adjustment or repair to protect your eyes. Thrown objects which ricochet can cause serious injury to the eyes.
9. Wear sturdy, rough-soled work shoes and close-fitting slacks and shirts. Loose fitting clothes and jewelry can be caught in movable parts. Never operate this machine in bare feet or sandals.
10. Be aware of the mower and attachment discharge direction and do not point it at anyone. Do not operate the mower without the discharge cover or entire grass catcher in its proper place.
11. Do not put hands or feet near rotating parts or under the cutting deck. Contact with the blade(s) can amputate hands and feet.
12. A missing or damaged discharge cover can cause blade contact or thrown object injuries.
13. Stop the blade(s) when crossing gravel drives, walks, or roads and while not cutting grass.
14. Watch for traffic when operating near or crossing roadways. This machine is not intended for use on any public roadway.
15. Do not operate the machine while under the influence of alcohol or drugs.
16. Mow only in daylight or good artificial light.
17. Never carry passengers.
18. Back up slowly. Always look down and behind before and while backing to avoid a back-over accident. Be aware and pay attention to the safety system function that stops power to the blades when driving in reverse. If not functioning properly, contact an authorized dealer for safety system inspection and repair.
19. Slow down before turning. Operate the machine smoothly. Avoid erratic operation and excessive speed.
20. Disengage blade(s), set parking brake, stop engine and wait until the blade(s) come to a complete stop before removing grass catcher, emptying grass, unclogging chute, removing any grass or debris, or making any adjustments.

21. Never leave a running machine unattended. Always turn off blade(s), place transmission in neutral, set parking brake, stop engine and remove key before dismounting.
22. Use extra care when loading or unloading the machine into a trailer or truck. This machine should not be driven up or down ramp(s), because the machine could tip over, causing serious personal injury. The machine must be pushed manually on ramp(s) to load or unload properly.
23. Muffler and engine become hot and can cause a burn. Do not touch.
24. Check overhead clearances carefully before driving under low hanging tree branches, wires, door openings etc., where the operator may be struck or pulled from the machine, which could result in serious injury.
25. Disengage all attachment clutches, set the parking brake to the 'on' position and move the RH and LH drive control levers to the neutral position before attempting to start the engine.
26. Your machine is designed to cut normal residential grass of a height no more than 10". Do not attempt to mow through unusually tall, dry grass (e.g., pasture) or piles of dry leaves. Dry grass or leaves may contact the engine exhaust and/or build up on the mower deck presenting a potential fire hazard.
27. Use only accessories and attachments approved for this machine by the machine manufacturer. Read, understand and follow all instructions provided with the approved accessory or attachment.
28. Data indicates that operators, age 60 years and above, are involved in a large percentage of riding mower-related injuries. These operators should evaluate their ability to operate the riding mower safely enough to protect themselves and others from serious injury.
29. If situations occur which are not covered in this manual, use care and good judgment. Contact your customer service representative for assistance.

Slope Operation

Slopes are a major factor related to loss of control and tip-over accidents which can result in severe injury or death. All slopes require extra caution. If you cannot back up the slope or if you feel uneasy on it, do not mow it.

For your safety, use the slope gauge included as part of this manual to measure slopes before operating this machine on a sloped or hilly area. If the slope is greater than 15 degrees as shown on the slope gauge, do not operate this machine on that area or serious injury could result.

Do:

1. Mow across slopes, not up and down. Exercise extreme caution when changing direction on slopes.
2. Watch for holes, ruts, bumps, rocks, or other hidden objects. Uneven terrain could overturn the machine. Tall grass can hide obstacles.
3. Use slow speed. Choose a low enough speed so that you will not have to stop while on the slope. Avoid starting or stopping on a slope. If the tires are unable to maintain traction, disengage the blades and proceed slowly and carefully straight down the slope.
4. Follow the manufacturer's recommendations for wheel weights or counterweights to improve stability.
5. Use extra care with grass catchers or other attachments. These can change the stability of the machine.
6. Keep all movement on the slopes slow and gradual. Do not make sudden changes in speed or direction. Rapid engagement or braking could cause the front of the machine to lift and rapidly flip over backwards which could cause serious injury.

Do Not:

1. Do not turn on slopes unless necessary; then, turn slowly and gradually downhill, if possible.
2. Do not mow near drop-offs, ditches or embankments. The mower could suddenly turn over if a wheel is over the edge of a cliff, ditch, or if an edge caves in.
3. Do not try to stabilize the machine by putting your foot on the ground.
4. Do not use a grass catcher on steep slopes.
5. Do not mow on wet grass. Reduced traction could cause sliding.
6. Do not tow heavy pull behind attachments (e.g. loaded dump cart, lawn roller, etc.) on slopes greater than 5 degrees. When going down hill, the extra weight tends to push the tractor and may cause you to lose control (e.g. tractor may speed up, braking and steering ability are reduced, attachment may jack-knife and cause tractor to overturn).

Children

1. Tragic accidents can occur if the operator is not alert to the presence of children. Children are often attracted to the machine and the mowing activity. They do not understand the dangers. Never assume that children will remain where you last saw them.
 - a. Keep children out of the mowing area and in watchful care of a responsible adult other than the operator.
 - b. Be alert and turn machine off if a child enters the area.
 - c. To avoid back-over accidents, look behind and down for small children.
 - d. Never carry children, even with the blade(s) shut off. They may fall off and be seriously injured or interfere with safe machine operation.
 - e. Use extreme care when approaching blind corners, doorways, shrubs, trees or other objects that may block your vision of a child who may run into the path of the machine.
 - f. Keep children away from hot or running engines. They can suffer burns from a hot muffler.
 - g. Remove key when machine is unattended to prevent unauthorized operation.
2. Never allow children under 14 years of age to operate this machine. Children 14 and over should read and understand the instructions and safe operation practices in this manual and on the machine and should be trained and supervised by an adult.

Towing

1. Tow only with a machine that has a hitch designed for towing. Do not attach towed equipment except at the hitch point.
2. Follow the manufacturers recommendation for weight limits for towed equipment and towing on slopes.
3. Never allow children or others in or on towed equipment.
4. On slopes, the weight of the towed equipment may cause loss of traction and loss of control.
5. Travel slowly and allow extra distance to stop.
6. Do not shift to neutral and coast downhill.
7. Do not tow heavy pull behind attachments (e.g. loaded dump cart, lawn roller, etc.) on slopes greater than 5 degrees. When going down hill, the extra weight tends to push the tractor and may cause you to lose control (e.g. tractor may speed up, braking and steering ability are reduced, attachment may jack-knife and cause tractor to overturn).

Service

Safe Handling of Gasoline:

1. To avoid personal injury or property damage use extreme care in handling gasoline. **Gasoline is extremely flammable and the vapors are explosive.** Serious personal injury can occur when gasoline is spilled on yourself or your clothes which can ignite. Wash your skin and change clothes immediately.
 - a. Use only an approved gasoline container.
 - b. Never fill containers inside a vehicle or on a truck or trailer bed with a plastic liner. Always place containers on the ground away from your vehicle before filling.
 - c. When practical, remove gas-powered equipment from the truck or trailer and refuel it on the ground. If this is not possible, then refuel such equipment on a trailer with a portable container, rather than from a gasoline dispenser nozzle.
 - d. Keep the nozzle in contact with the rim of the fuel tank or container opening at all times until fueling is complete. Do not use a nozzle lock-open device.
 - e. Extinguish all cigarettes, cigars, pipes and other sources of ignition.
 - f. Never fuel machine indoors.
 - g. Never remove gas cap or add fuel while the engine is hot or running. Allow engine to cool at least two minutes before refueling.
 - h. Never over fill fuel tank. Fill tank to no more than ½ inch below bottom of filler neck to allow space for fuel expansion.
 - i. Replace gasoline cap and tighten securely.
 - j. If gasoline is spilled, wipe it off the engine and equipment. Move machine to another area. Wait 5 minutes before starting the engine.
 - k. To reduce fire hazards, keep machine free of grass, leaves, or other debris build-up. Clean up oil or fuel spillage and remove any fuel soaked debris.
 - l. Never store the machine or fuel container inside where there is an open flame, spark or pilot light as on a water heater, space heater, furnace, clothes dryer or other gas appliances.
 - m. Allow a machine to cool at least five minutes before storing.

General Service

1. Never run an engine indoors or in a poorly ventilated area. Engine exhaust contains carbon monoxide, an odorless, and deadly gas.
2. Before cleaning, repairing, or inspecting, make certain the blade(s) and all moving parts have stopped. Disconnect the spark plug wire and ground against the engine to prevent unintended starting.

3. Periodically check to make sure the blades come to complete stop within approximately (5) five seconds after operating the blade disengagement control. If the blades do not stop within the this time frame, your machine should be serviced professionally by an authorized Service Dealer.
4. Regularly check the safety interlock system for proper function, as described later in this manual. If the safety interlock system does not function properly, have your machine serviced professionally by an authorized dealer.
5. Check the blade(s) and engine mounting bolts at frequent intervals for proper tightness. Also, visually inspect blade(s) for damage (e.g., excessive wear, bent, cracked). Replace the blade(s) with the original equipment manufacturer's (O.E.M.) blade(s) only, listed in this manual. "Use of parts which do not meet the original equipment specifications may lead to improper performance and compromise safety!"
6. Mower blades are sharp. Wrap the blade or wear gloves, and use extra caution when servicing them.
7. Keep all nuts, bolts, and screws tight to be sure the equipment is in safe working condition.
8. Never tamper with the safety interlock system or other safety devices. Check their proper operation regularly.
9. After striking a foreign object, stop the engine, disconnect the spark plug wire(s) and ground against the engine. Thoroughly inspect the machine for any damage. Repair the damage before starting and operating.
10. Never attempt to make adjustments or repairs to the machine while the engine is running.
11. Grass catcher components and the discharge cover are subject to wear and damage which could expose moving parts or allow objects to be thrown. For safety protection, frequently check components and replace immediately with original equipment manufacturer's (O.E.M.) parts only, listed in this manual. "Use of parts which do not meet the original equipment specifications may lead to improper performance and compromise safety!"
12. Do not change the engine governor settings or over-speed the engine. The governor controls the maximum safe operating speed of the engine.
13. Maintain or replace safety and instruction labels, as necessary.
14. Observe proper disposal laws and regulations for gas, oil, etc. to protect the environment.
15. According to the Consumer Products Safety Commission (CPSC) and the U.S. Environmental Protection Agency (EPA), this product has an *Average Useful Life* of seven (7) years, or 270 hours of operation. At the end of the *Average Useful Life* have the machine inspected annually by an authorized service dealer to ensure that all mechanical and safety systems are working properly and not worn excessively. Failure to do so can result in accidents, injuries or death.

Do not modify engine

To avoid serious injury or death, do not modify engine in any way. Tampering with the governor setting can lead to a runaway engine and cause it to operate at unsafe speeds. Never tamper with factory setting of engine governor.

Notice Regarding Emissions

Engines which are certified to comply with California and federal EPA emission regulations for SORE (Small Off Road Equipment) are certified to operate on regular unleaded gasoline, and may include the following emission control systems: Engine Modification (EM) and Three Way Catalyst (TWC) if so equipped.

Spark Arrestor



WARNING! This machine is equipped with an internal combustion engine and should not be used on or near any unimproved forest-covered, brushcovered or grass-covered land unless the engine's exhaust system is equipped with a spark arrester meeting applicable local or state laws (if any).

If a spark arrestor is used, it should be maintained in effective working order by the operator.

A spark arrestor for the muffler is available through your nearest engine authorized service dealer.



WARNING! Your Responsibility—Restrict the use of this power machine to persons who read, understand and follow the warnings and instructions in this manual and on the machine.

SAVE THESE INSTRUCTIONS!

Safety Symbols

This page depicts and describes safety symbols that may appear on this product. Read, understand, and follow all instructions on the machine before attempting to assemble and operate.

Symbol	Description
	READ THE OPERATOR'S MANUAL(S) Read, understand, and follow all instructions in the manual(s) before attempting to assemble and operate.
	WARNING— ROTATING BLADES Do not put hands or feet near rotating parts or under the cutting deck. Contact with the blade(s) can amputate hands and feet.
	WARNING—THROWN OBJECTS This machine may pick up and throw and objects which can cause serious personal injury.
	WARNING—THROWN OBJECTS This machine may pick up and throw and objects which can cause serious personal injury.
	BYSTANDERS Keep bystanders, helpers, children and pets at least 75 feet from the machine while it is in operation.
	WARNING— SLOPE OPERATION Do not operate this machine on a slope greater than 15 degrees.
	DANGER — ROTATING BLADES To reduce the risk of injury, keep hands and feet away. Do not operate unless discharge cover or grass catcher is in its proper place. If damaged, replace immediately.

Slope Gauge

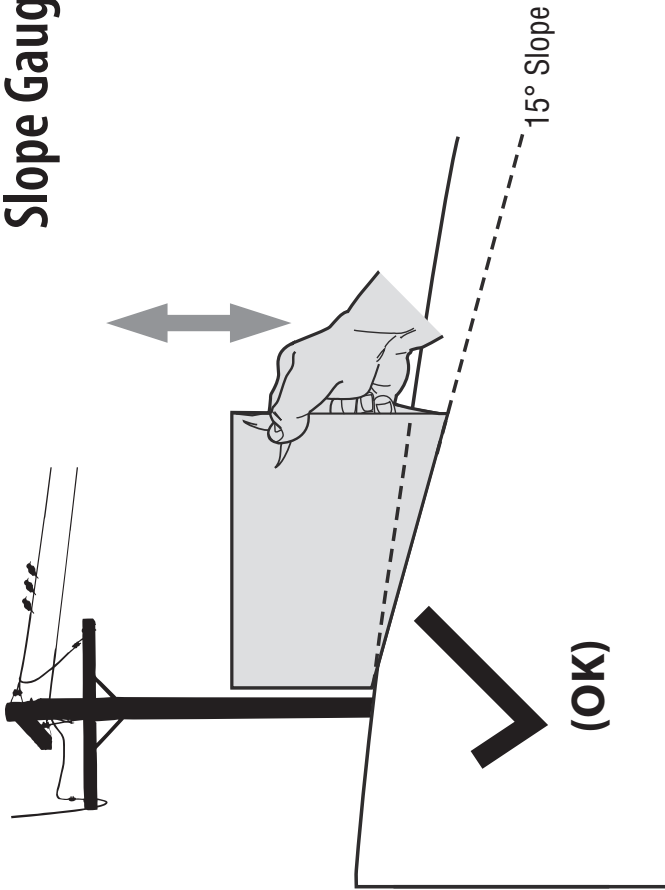


Figure 1

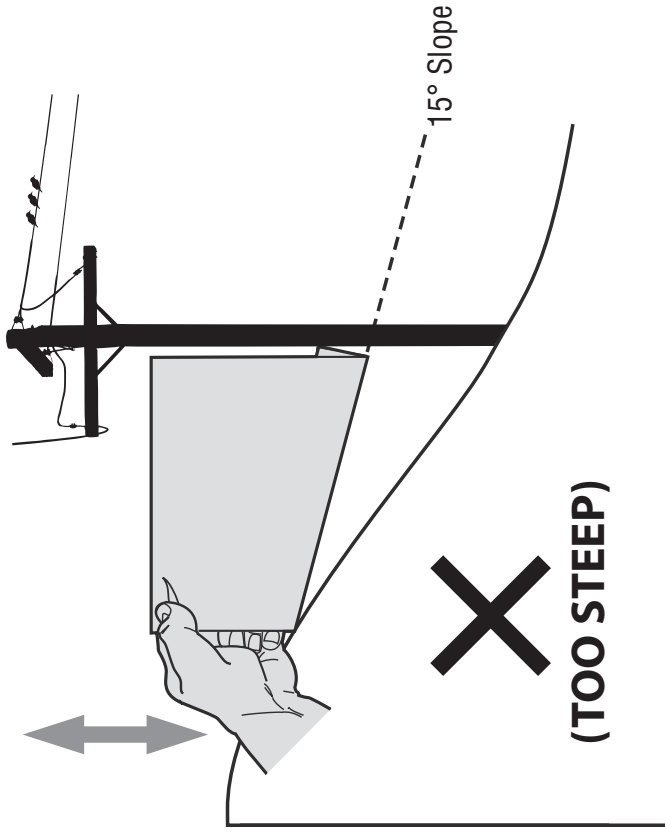


Figure 2

USE THIS SLOPE GAUGE TO DETERMINE

IF A SLOPE IS TOO STEEP FOR SAFE OPERATION!

To check the slope, proceed as follows:

1. Remove this page and fold along the dashed line.
2. Locate a vertical object on or behind the slope (e.g. a pole, building, fence, tree, etc.)
3. Align either side of the slope gauge with the object (See Figure 1 and Figure 2).
4. Adjust gauge up or down until the left corner touches the slope (See Figure 1 and Figure 2).
5. If there is a gap below the gauge, the slope is too steep for safe operation (See Figure 2 above).

15° dashed line



WARNING! Slopes are a major factor related to tip-over and roll-over accidents which can result in severe injury or death. Do not operate machine on slopes in excess of 15 degrees. All slopes require extra caution.

Always mow across the face of slopes, never up and down slopes.

Contents of Crate

- One RZT Tractor
- One Oil Drain Tube
- One Deck Wash Hose Coupler
- One Tractor Operator's Manual
- One Engine Operator's Manual
- One Hardware Pack

NOTE: This Operator's Manual covers several models. Tractor features may vary by model. Not all features in this manual are applicable to all tractor models and the tractor depicted may differ from yours.

Tractor Preparation

Manually Moving the Tractor

1. Engage the transmission bypass rods, one on each side of the tractor, to move the tractor manually without starting it. The transmission bypass rods are located on the rear of the tractor, just inside each rear wheel. Engage the bypass rods by pulling each one out (a) and to the right (b) to lock it into place. See Figure 3-1.

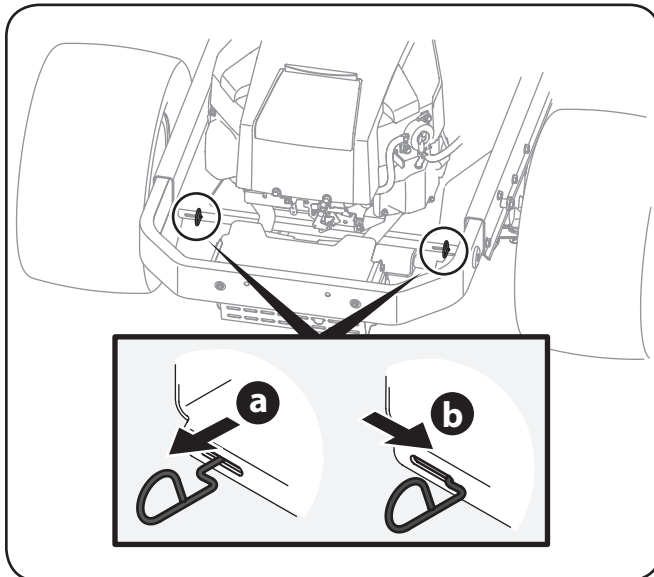


Figure 3-1

2. Disengage the bypass rods by reversing steps a & b after moving the tractor. See Figure 3-1.
3. Remove the deck wash system nozzle adapter from the manual bag and store for future use.

Install Operator's Seat

To install the seat proceed as follows:

NOTE: The seat is shipped with the seat switch and seat pan attached.

1. Cut any straps securing the seat assembly and the drive control levers to the tractor. Remove any packing material.

NOTE: Be careful not to cut the wiring harness connecting the seat and the seat switch.

2. Remove the two shoulder screws and lock nuts in the seat pan as shown in Figure 3-2.

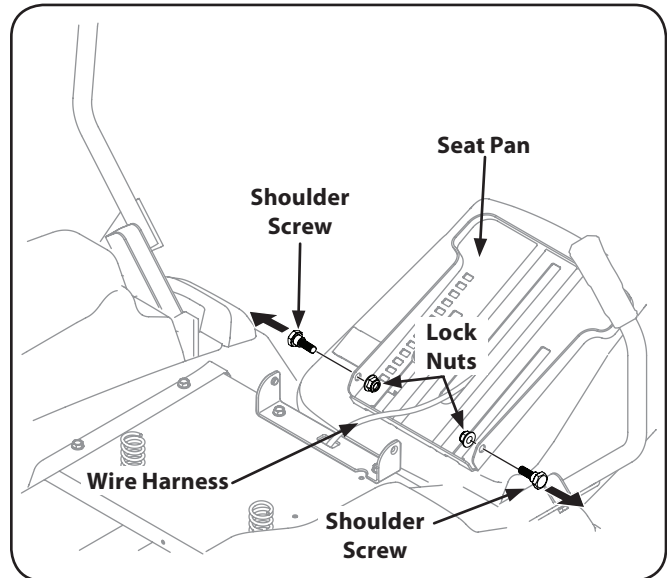


Figure 3-2

3. Rotate the seat into position and secure the seat into place with the previously removed shoulder screws and lock nuts. Be careful not to crimp or damage the wire harness while installing the seat. See Figure 3-3.

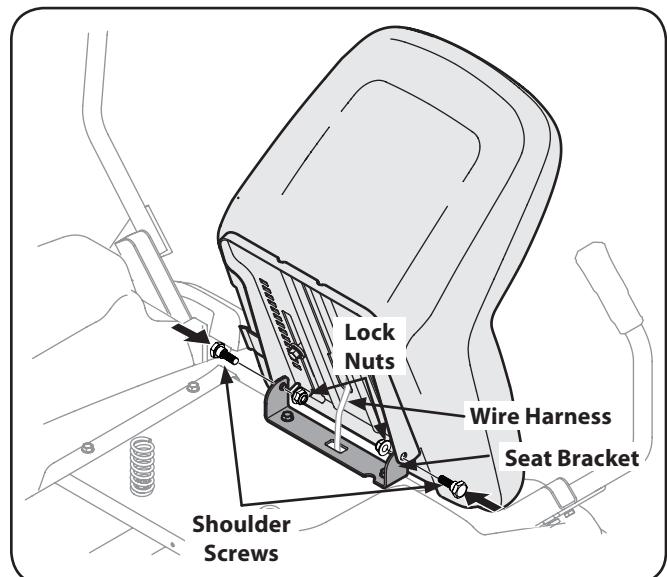


Figure 3-3

NOTE: Be sure to push the excess wire from the wire harness into the seat box hole before continuing.

Position Drive Control levers

The drive control levers of the tractor are lowered for shipping purposes. The hex screws and flat washers that normally secure the control levers in their operating position are in a hardware pack inside your manual bag. The control levers must be repositioned to operate the tractor. To reposition the control levers for operation, proceed as follows:

1. Remove the hex screws and flat washers from the hardware pack in your manual bag.
2. Lift and swing that control lever upward until the slotted hole in the lever bracket aligns with one of the holes in the pivot bracket. See Figure 3-4.

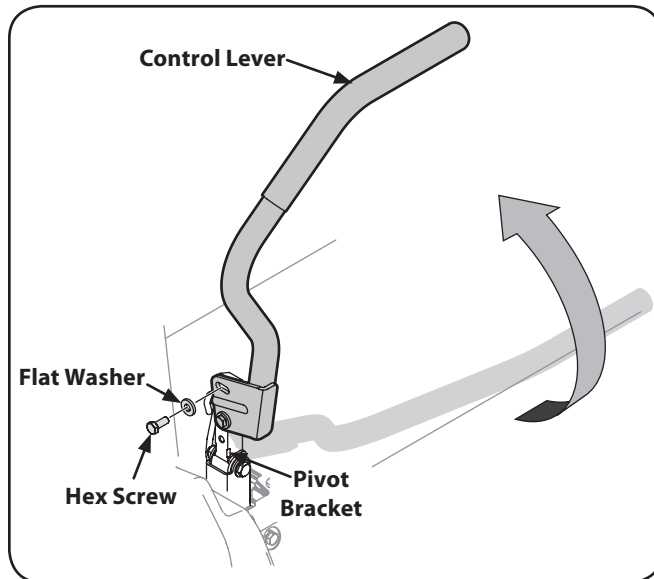


Figure 3-4

3. Slide the flat washer onto the hex screw. From the outside, insert the hex screw with washer through the control lever slot and the hole of the pivot bracket. See Figure 3-4. Using a ½" wrench snug the screw, but do not fully tighten.
4. Note the relative position of the control lever to the pivot bracket, then repeat the previous steps to reposition the other control lever in approximately the same position.



CAUTION: Torque the screws down tightly to prevent the control levers from slipping out of position.

5. Refer to "Adjusting the Drive Control Levers" in the Maintenance & Adjustments for instructions for the final adjustment of the levers.

Connecting the Battery Cables



CALIFORNIA PROPOSITION 65 WARNING!

Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.



CAUTION: When attaching battery cables, always connect the POSITIVE (Red) wire to its terminal first, followed by the NEGATIVE (Black) wire.

For shipping reasons, both battery cables on your equipment may have been left disconnected from the terminals at the factory. To connect the battery cables, proceed as follows:

NOTE: The positive battery terminal is marked Pos. (+). The negative battery terminal is marked Neg. (-).

NOTE: If the positive battery cable is already attached, skip ahead to step 2.

1. Remove the plastic cover, if present, from the positive battery terminal and attach the red cable to the positive battery terminal (+) with the bolt and hex nut. See Figure 3-5.

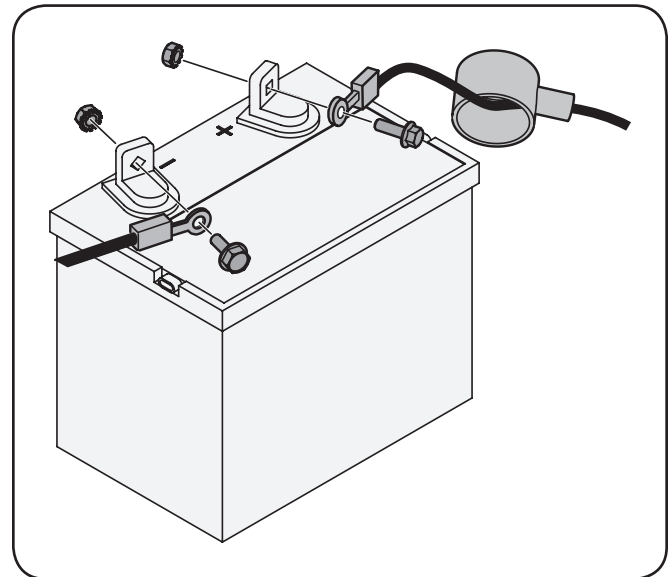


Figure 3-5

2. Remove the plastic cover, if present, from the negative battery terminal and attach the black cable to the negative battery terminal (-) with the bolt and hex nut. See Figure 3-5.
3. Position the red rubber boot over the positive battery terminal to help protect it from corrosion.

NOTE: If the battery is put into service after the date shown on top/side of battery, charge the battery as instructed in the Maintenance section your Operator's Manual prior to operating the tractor.

Lower Deck Discharge Chute Deflector



WARNING! Never operate the mower deck without the chute deflector installed and in the down position.

The discharge chute deflector must be installed before operating the mower.

1. Remove the keys that are attached with a zip tie to the chute bracket.
2. Remove the flange lock nuts from the deck. Do not remove the push nuts or carriage bolts, leaving them in place will aid in installing the chute. See Figure 3-6.

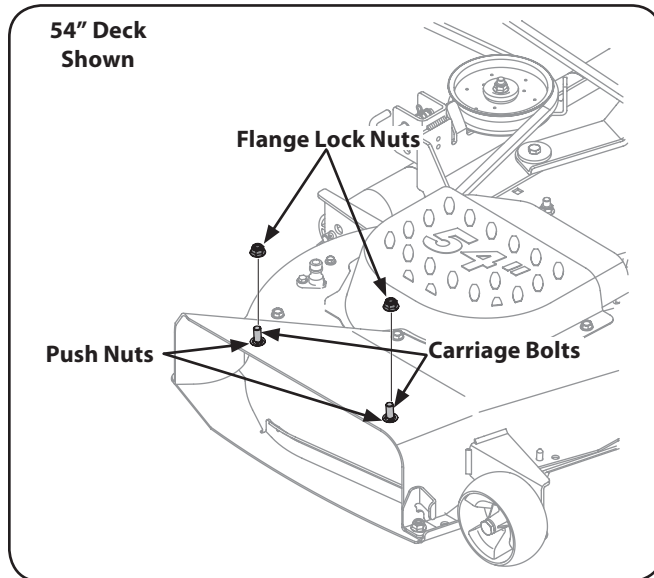


Figure 3-6

3. Install the discharge chute deflector using the carriage bolts, push nuts and flange lock nuts as shown in Figure 3-7 and securely tighten the hardware.

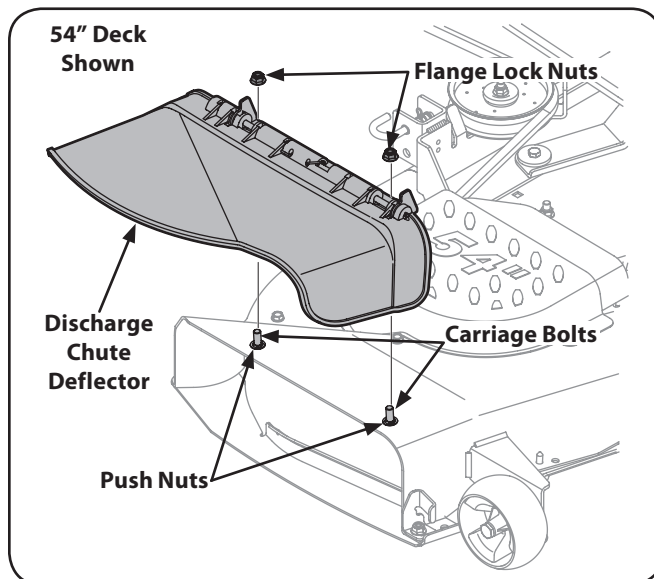


Figure 3-7

Adjusting the Seat

To adjust the position of the seat, pull up and hold the seat adjustment lever. Slide the seat forward or rearward to the desired position; then release the adjustment lever. Make sure seat is locked into position before operating the tractor. See Figure 3-8.


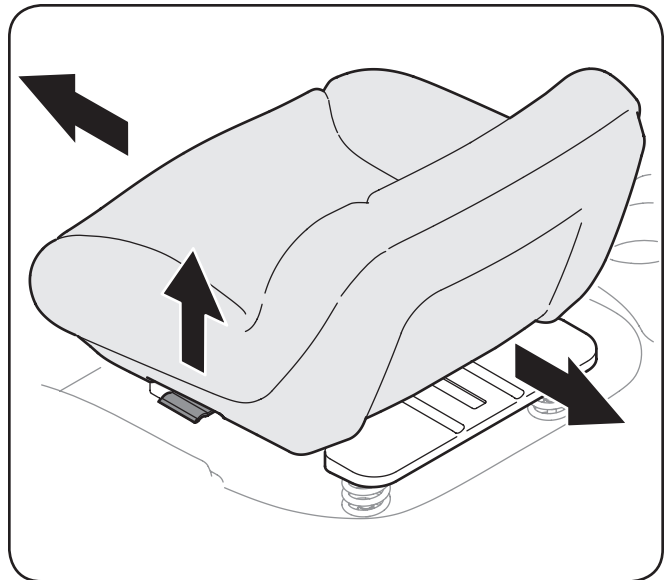


Figure 3-8

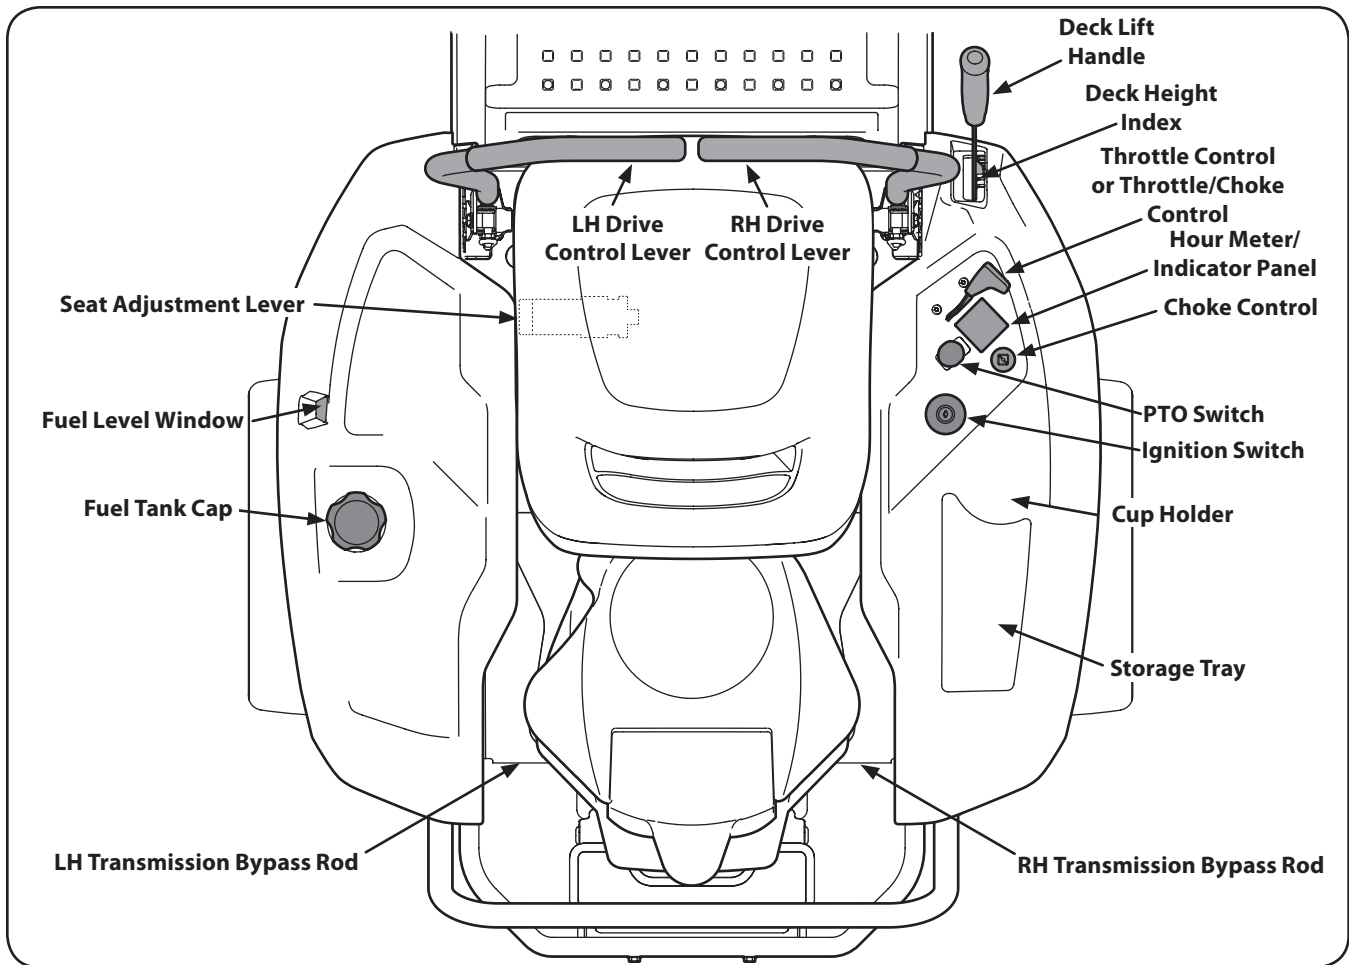

NOTE: This Operator's Manual covers several models. Tractor features may vary by model. Not all features in this manual are applicable to all tractor models and the tractor depicted may differ from yours.

NOTE: References to LEFT, RIGHT, FRONT, and REAR indicate that position on the tractor when facing forward while seated in the operator's seat.

RH and LH Drive Control Levers

The RH and LH control levers are located on each side of the operator's seat. These hinged levers pivot outward to open space to permit the operator to either sit in the tractor seat, or to dismount the tractor. The levers must be fully opened out and in the neutral position to start the tractor engine. When the levers are fully outward, the parking brake is also engaged.

Each lever controls the respective RH or LH transmission. Consequently, these levers control all of the movements of the tractor. Driving and steering utilizing these control levers is quite different from conventional tractors, and will take some practice to master. Refer to Operation for instructions on using the control levers.

Deck Height Index

The deck height index consists of eight index notches located on the front/right of the console. Each notch corresponds to a 1/2" change in the deck height position ranging from 1-1/2" at the lowest notch to 4" at the highest notch.

Deck Lift Handle


The deck lift handle is located on the front/right of the console, and is used to raise and lower the mower deck.

Pull the handle to the left out of the index notch and push downward to lower the deck, or pull upward to raise the deck. When the desired height is attained, move the lift handle to the right until fully in the index notch.



Ignition Switch

The ignition switch is located on the RH console to the rear of the PTO switch. The ignition switch has three positions as follows:

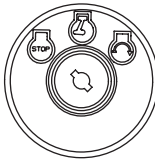

STOP — The engine and electrical system is turned off.

RUN — The tractor electrical system is energized.

START — The starter motor will turn over the engine. Release the key immediately when the engine starts


NOTE: To prevent accidental starting and/or battery discharge, remove the key from the ignition switch when the tractor is not in use.

Power Take-Off (PTO) Switch

The PTO switch is located on the RH console to the left of the hour meter/indicator panel.

The PTO switch operates the electric PTO clutch mounted on the bottom of the engine crankshaft. Pull the switch knob upward to engage the PTO clutch, or push the knob downward to disengage the clutch.

The PTO switch must be in the “disengaged” position when starting the engine.

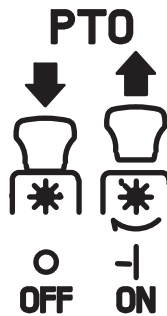

Transmission Bypass Rods

The transmission bypass rods (one for each the RH and LH transmission) are located on the rear of the tractor, just inside each rear wheel.

When engaged, the two rods open a bypass within the hydrostatic transmissions, which allows the tractor to be pushed short distances by hand. Refer to the Assembly & Set-Up section for instructions on using the bypass feature.



CAUTION: Never tow your tractor. Towing the tractor with the rear wheels on the ground may cause severe damage to the transmissions.

Cup Holder

The cup holder is located toward the middle of the RH console.

Storage Tray

The storage tray is located at the rear of the RH console.

Seat Adjustment Lever

The seat adjustment lever is located below the front/left of the seat. The lever allows for adjustment forward or backward of the operator's seat. Refer to the Assembly & Set-Up section for instructions on adjusting the seat position.

Fuel Tank Cap

The fuel tank cap is located near the middle of the LH console. Turn the fill cap approximately ¼ turn and pull upward to remove. The fuel cap is tethered to the tractor to prevent its loss. Do not attempt to remove the cap from the tractor. Fill tank to the bottom of the filler neck, allowing some space in the tank for fuel expansion. Do not overfill the tank.

Push the cap downward on the fuel tank fill neck and turn approximately ¼ turn clockwise to tighten. Always re-install the fuel cap tightly onto the fuel tank after removing.



WARNING! Never fill the fuel tank when the engine is running. If the engine is hot from recently running, allow to cool for several minutes before refueling. Highly flammable gasoline could splash onto the engine and cause a fire.

Fuel Level Window

The Fuel Level Window is located on the outer left side of the LH console and shows the level of fuel in the gas tank.

Throttle/Choke Control (If so equipped)

The throttle/choke control is located on the RH console to the left of the hour meter/indicator panel. When set in a given position, a uniform engine speed will be maintained.

- Push the throttle/choke control handle forward to increase the engine speed. The tractor is designed to operate with the throttle/choke control in the fast position (full throttle) when the tractor is being driven and the mower deck is engaged.
- Pull the throttle/choke control handle rearward to decrease the engine speed.
- When starting the engine, push the control handle fully forward into the “CHOKE” position.
- After starting and warming the engine, move the control handle rearward until you feel it move past the choke detent.



Throttle Control (If so equipped)

The throttle control is located on the RH console to the left of the hour meter/indicator panel. When set in a given position, a uniform engine speed will be maintained.


Push the throttle control handle forward to increase the engine speed. The tractor is designed to operate with the throttle control in the fast position (full throttle) when the tractor is being driven and the mower deck is engaged.

Pull the throttle control handle rearward to decrease the engine speed.



Choke Control (If so equipped)

The choke control is located on the RH console to the right of the hour meter/indicator panel. The choke control determines the position of the engine choke. Pull the knob out to choke the engine; push the knob in to open the choke.

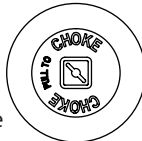

Hour Meter/Indicator Panel

The hour meter/indicator panel is located on the RH console to the right of the throttle or throttle/choke control.


Hour Meter Features

The hour meter records the hours that the tractor has been operated in the digital display (tenths of an hour - right most digit).

NOTE: The hour meter is activated whenever the ignition switch is turned to the "ON" position. Keep a record of the actual hours of operation to assure all maintenance procedures are completed according to the instructions in this manual and the engine manual.

When key is turned to the "ON" position, the battery indicator light briefly illuminates and the battery voltage is briefly displayed. The display then changes to the accumulated hours.

The Indicator Monitor will also remind the operator of maintenance intervals for changing the engine oil. The LCD will alternately flash, "CHG" ; "OIL" and the recorded hours for five minutes after every 50 hours of recorded operation. The maintenance interval lasts for two hours (from 50-52, 100-102, 150-152, etc.). The LCD will flash as described for five minutes every time the tractor's engine is started during this maintenance interval. Follow the oil change intervals provided in the engine manual.

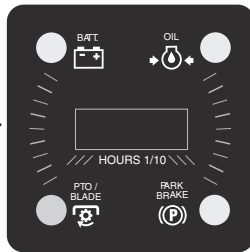

Indicator Panel Features

Battery Indicator

Illuminates and the battery voltage is displayed briefly when the ignition switch is turned to the "ON" position.

Illuminates to indicate the battery voltage has dropped below 11.5 (+0.5/-1.0) volts. The battery voltage is also displayed on the hour meter. If this indicator and display come on during operation, check the battery and charging system for possible causes and/or contact your dealer.

Oil Pressure Indicator (If Engine So Equipped)

This warning lamp indicates low engine oil pressure. If the indicator comes on while the engine is running, stop the engine immediately and check for possible causes. Do not run the engine while this indicator is illuminated. Contact your dealer to have the tractor and engine inspected.

NOTE: The oil pressure indicator may illuminate when the ignition switch is in the ON position, but should turn off when the engine is started.

PTO Engaged Indicator

This indicator illuminates when the PTO switch is pulled upward in the "ENGAGED" position and the ignition switch is turned to the "START" position. Check this indicator if the engine will not crank with the ignition switch in the "START" position. If necessary, move the PTO switch to the "DISENGAGED" position.

Parking Brake Engaged Indicator

This indicator illuminates when the parking brake is in the DISENGAGED position and the ignition switch is turned to the "START" position. Check this indicator if the engine will not crank with the ignition switch in the "START" position. If necessary, move the parking brake to the ENGAGED position.

This indicator also illuminates when the ignition switch is turned to the "START" position and the RH and/or LH drive control levers are in a position other than the fully out in neutral position. Move the control levers fully outward.

General Safety

- **RECEIVE INSTRUCTION** — Entirely read this operator's manual. Learn to operate this machine SAFELY. Do not risk INJURY or DEATH. Allow only those who have become competent in its usage to operate this tractor.
- Before starting the engine or beginning operation, be familiar with the controls. The operator should be in the operator's seat. The PTO switch must be in the disengaged position and the RH and LH drive control levers moved fully outward in the neutral position.
- Keep all shields in place. Keep away from moving parts.
- **NO RIDERS!** Keep all people and pets a safe distance away. Look behind and down to both sides of the tractor before and while backing up.
- **DO NOT** direct the mower discharge at people.
- Avoid slopes where possible. Never operate on slopes greater than 15°. Slopes with a greater incline present dangerous operating conditions. Tractors can be rolled over.
- Before leaving the operator's seat: Shut off the PTO, move the RH and LH drive control levers fully outward in the neutral position, shut off the engine and remove the ignition key. Wait for all movement to stop before servicing or cleaning.
- Operate the drive control levers smoothly and avoid any sudden movements of the levers when starting and stopping. Keep a firm grip on the control levers.
- Be careful when operating near roadways. Stop the tractor motion and wait for vehicles to pass before operating along the road.
- Do not operate the tractor with the mower deck removed. Removal of the deck will change the balance of the tractor, and could contribute to a tractor rollover.
- Avoid operation on traction surfaces that are unstable; use extreme caution if the surface is slippery.
- Slow down before turning and come to a complete stop before any zero turn maneuver.
- Do not stop the tractor or park the tractor over combustible materials such as dry grass, leaves, debris, etc.
- Do not fill the fuel tank when the engine is running or while the engine is hot. Allow the engine several minutes to cool before refueling. Tighten the fuel cap securely.

Before Operating Your Tractor

- Before you operate the tractor, study this manual carefully to familiarize yourself with the operation of all the instruments and controls. It has been prepared to help you operate and maintain your tractor efficiently.
- This engine is certified to operate only on clean, fresh, unleaded regular gasoline. For best results, fill the fuel tank with only clean, fresh, unleaded gasoline with a pump sticker octane rating of 87 or higher.

- Unleaded gasoline is recommended because it leaves less combustion chamber deposits and reduces harmful exhaust emissions. Leaded gasoline is not recommended and must not be used where exhaust emissions are regulated.

NOTE: Purchase gasoline in small quantities. Do not use gasoline left over from the previous season, to minimize gum deposits in the fuel system.

- Gasohol (up to 10% ethyl alcohol, 90% unleaded gasoline by volume) is an approved fuel. Other gasoline/alcohol blends are not approved.
- Methyl Tertiary Butyl Ether (MTBE) and unleaded gasoline blends (up to a maximum of 15% MTBE by volume) are approved fuels. Other gasoline/ether blends are not approved.
- Check the engine oil level.
- Clean the air cleaner element if necessary.
- Check the tire inflation pressures.
- Adjust the seat for operator's maximum comfort, visibility and for maintaining complete control of the tractor.

Safety Interlock System

This tractor is equipped with a safety interlock system for the protection of the operator. If the interlock system should ever malfunction, do not operate the tractor. Contact your authorized dealer.

- The safety interlock system prevents the engine from cranking or starting unless the RH and LH drive control levers are moved fully outward in the neutral position and the PTO is disengaged.
- The safety interlock system will shut off the engine if the operator leaves the seat with the PTO engaged.

NOTE: The PTO switch must be moved to the "STOP" position to restart the engine.

- The safety interlock system will shut off the PTO and the mower blades will stop if both drive control levers are moved into the reverse position. To re-engage the PTO, the levers must be in the neutral or forward drive position and the PTO switch must be placed in the OFF (disengaged) position and then returned to the ON (engaged) position.

Starting the Engine



WARNING! This tractor is equipped with a safety interlock system designed for the protection of the operator. Do not operate the tractor if any part of the interlock system is malfunctioning. Periodically check the functions of the interlock system for proper operation.



WARNING! For personal safety, the operator must be sitting in the tractor seat when starting the engine.

1. Operator must be sitting in the tractor seat with the control levers fully outward in neutral (parking brake on).
2. Make certain the PTO switch is in the disengaged (down) position. Refer to Figure 5-1.

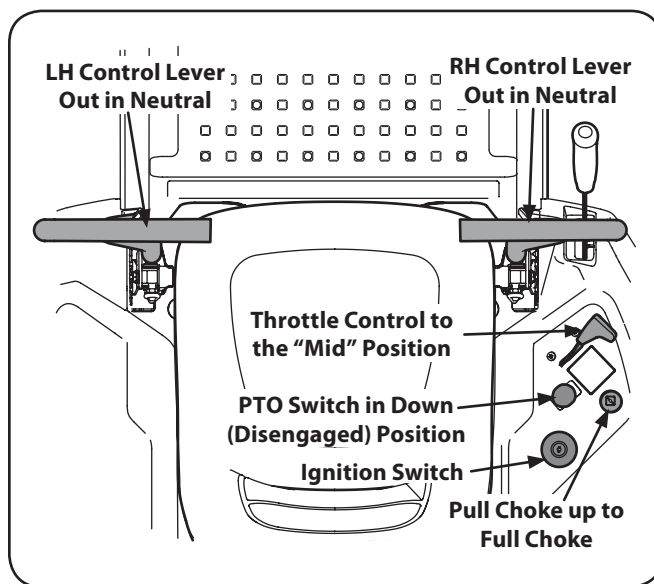


Figure 5-1

3. Move the choke control or throttle/choke control into the full choke position. Refer to Figure 5-1.
NOTE: If the engine is warmed up, it may not be necessary to place the choke or throttle/choke control in the choke position.
4. Move the throttle control to midway between its slow  and fast  positions on models with a separate choke control.
5. Insert the key into the ignition switch and turn the key clockwise to the start  position and release it as soon as the engine starts; however, do not crank the engine continuously for more than 5 seconds at a time. If the engine does not start within this time, turn the key to the stop  position and wait at least 15 seconds to allow the engine's starter motor to cool. Try again after waiting. If after a few attempts the engine fails to start, do not keep trying to start it with the choke closed as this will cause flooding and make starting more difficult.

6. As the engine warms up, gradually pull the throttle/choke control lever rearward past the choke detent position or slowly disengage the choke on models with a separate choke. Do not use the choke position to enrich the fuel mixture, except as necessary to start the engine.
7. Allow the engine to run for a few minutes at mid-throttle before putting the engine under load.
8. Observe the hour meter/indicator panel. If the battery indicator light or oil pressure light come on, immediately stop the engine. Have the tractor inspected by your dealer.

Cold Weather Starting

When starting the engine at temperatures near or below freezing, ensure the correct viscosity motor oil is used in the engine and the battery is fully charged. Start the engine as follows:

1. Be sure the battery is in good condition. A warm battery has much more starting capacity than a cold battery.
2. Use fresh winter grade fuel. Winter grade gasoline has higher volatility to improve starting. Do not use gasoline left over from summer.
3. Follow the previous instruction for Starting the Engine.

Using Jumper Cables To Start Engine



WARNING! Batteries contain sulfuric acid and produce explosive gasses. Make certain the area is well ventilated, wear gloves and eye protection, and avoid sparks or flames near the battery.

If the battery charge is not sufficient to crank the engine, recharge the battery. If a battery charger is unavailable and the tractor must be started, the aid of a booster battery will be necessary. Connect the booster battery as follows:

1. Connect the end of one cable to the disabled tractor battery's positive terminal; then connect the other end of that cable to the booster battery's positive terminal.
2. Connect one end of the other cable to the booster battery's negative terminal; then connect the other end of that cable to the frame of the disabled tractor, as far from the battery as possible.
3. Start the disabled tractor following the normal starting instructions previously provided; then disconnect the jumper cables in the exact reverse order of their connection.
4. Have the tractor's electrical system checked and repaired as soon as possible to eliminate the need for jump starting.

Stopping the Engine

1. Disengage the PTO.
2. Move the RH and LH drive control levers fully outward in the neutral position.
3. Move the throttle control to midway between the slow  and fast  positions.
4. Turn the ignition key to the stop  position and remove the key from the ignition switch.

NOTE: Always remove the key from the ignition switch to prevent accidental starting or battery discharge if the equipment is left unattended.

Practice Operation (Initial Use)

Operating a zero-turn tractor is not like operating a conventional type riding tractor. Although and because a zero turn tractor is more maneuverable, getting used to operating the control levers takes some practice.

It is strongly recommended that you locate a reasonably large, level and open “practice area” where there are no obstructions, pedestrians, or animals. You should practice operating the tractor for a minimum of 30 minutes.

Carefully move (or have moved) the tractor to the practice area. When performing the practice session, the PTO should not be engaged. While practicing, operate the tractor at approximately $\frac{1}{2}$ - $\frac{3}{4}$ throttle and at less than full speed in both forward and reverse.

Carefully practice maneuvering the tractor using the instructions in the following section “Driving the Tractor.” Practice until you are confident that you can safely operate the tractor.

Driving the Tractor



WARNING! Avoid sudden starts, excessive speed and sudden stops.

1. Adjust the operator’s seat to the most comfortable position that allows you to operate the controls. See seat adjustment in the Assembly & Set-Up section.
2. Move the RH and LH drive control levers inward in the neutral position which also disengages the parking brake. Refer to Figure 5-2.

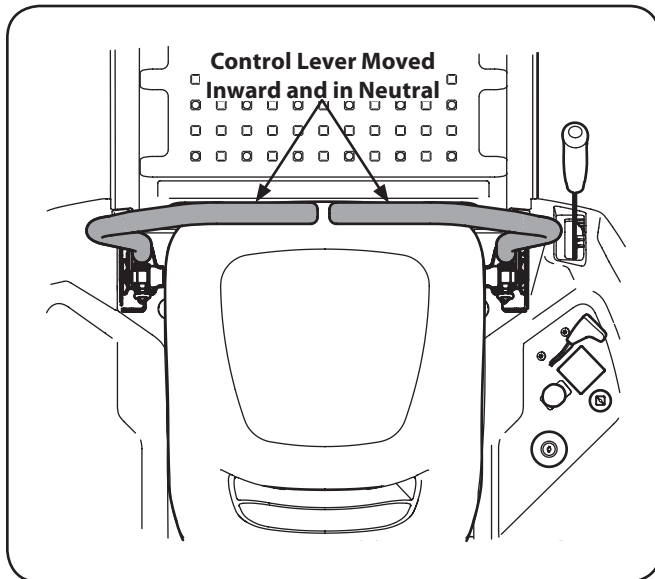


Figure 5-2

NOTE: Lap bars must be moved fully inward before pushing forward or backward to ensure brakes are fully disengaged. Parking the tractor on uneven terrain or a hill may cause the brakes to bind and not release fully. In this case the tractor will not drive when the lap bars are moved. If this happens, move the lap bar in the opposite direction slightly to take the load off the brakes and allow them to release fully.

NOTE: If the control levers are not even in the neutral position, refer to Maintenance & Adjustments for instructions to adjust the levers so that they are even.

3. Move the throttle control lever forward to the full throttle position.

NOTE: Although the tractor’s engine is designed to run at full throttle, when performing a practice session the tractor must be operated at less than full throttle. This only applies to practice.



WARNING! Always maintain a firm grip on the control levers. DO NOT release the control levers to slow or stop the tractor; move levers to neutral position using your hands.

4. To drive the tractor, firmly grasp the respective drive control levers with your right and left hands and continue with Driving the Tractor Forward on the following page.

Driving the Tractor Forward



WARNING! Keep all movement of the drive control levers slow and smooth. Abrupt movement of the control levers can affect the stability of the tractor and could cause the tractor to flip over, which may result in serious injury or death to the operator.

1. Slowly and evenly move both drive control levers forward. The tractor will start to move forward. See Figure 5-3.

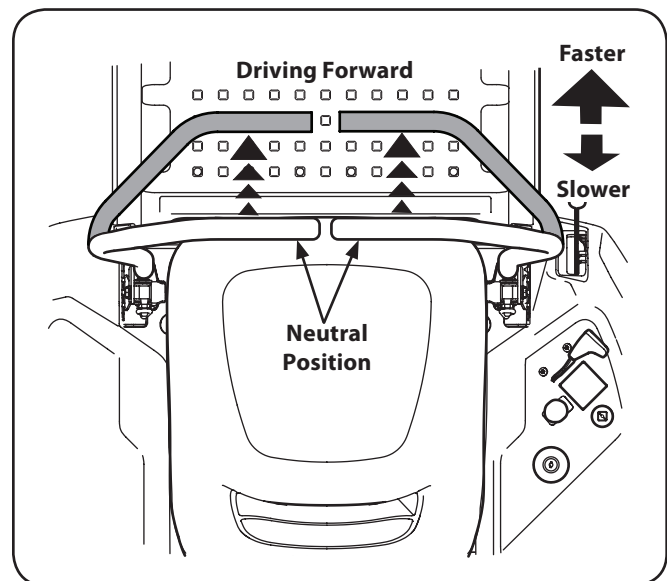


Figure 5-3

2. As the control levers are pushed farther forward the speed of the tractor will increase.
3. To slow the tractor move the controls lever rearward to attain the desired speed, or move the levers to the neutral position to stop the tractor.



WARNING! Always maintain your grasp on the drive control levers. Do not release the levers to slow the tractor or to return to neutral.

Turning the Tractor While Driving Forward



WARNING! When reversing the direction of travel, we recommend performing gradual 'U' turns where possible. Sharper turns increase the possibility of turf defacement, and could affect control of the tractor. ALWAYS slow the tractor before making sharp turns.

To turn the tractor while driving forward, move the control levers as necessary so that one lever is rearward of the other. The tractor will turn in the direction of the rearward control lever.

1. To turn to the left, move the left drive control lever rearward of the right lever. See Figure 5-4.

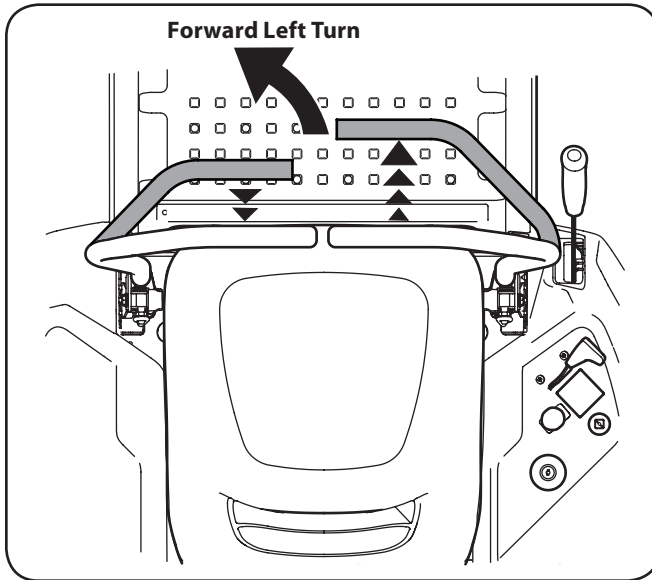


Figure 5-4

2. To turn to the right, move the right drive control lever rearward of the left lever. See Figure 5-5.

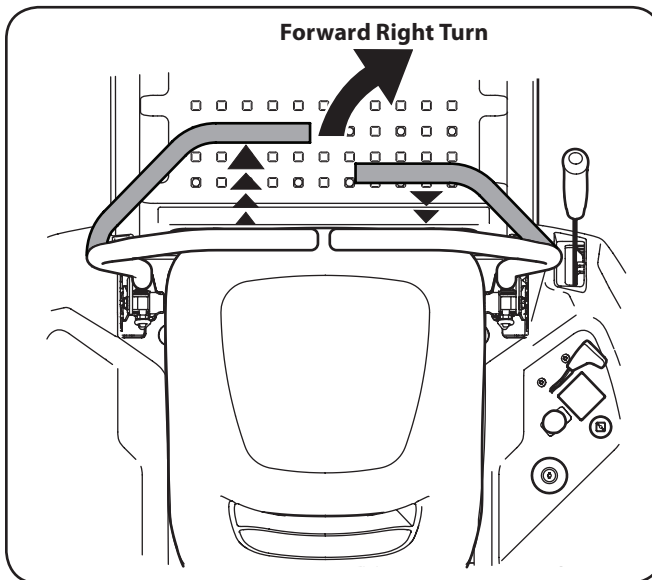


Figure 5-5

3. The greater the distance between the two levers, the sharper the tractor will turn.

4. To execute a "pivot turn," move the turn side drive control lever to the neutral position, while moving the other control lever forward.

NOTE: Making a "pivot turn" on grass will greatly increase the potential for defacement of the turf.

Driving the Tractor In Reverse



WARNING! Always look behind and down on both sides of the tractor before backing up. Always look behind while traveling in the reverse direction.

1. Slowly and evenly move both drive control levers rearward. The tractor will start to move in the reverse direction. See Figure 5-6.

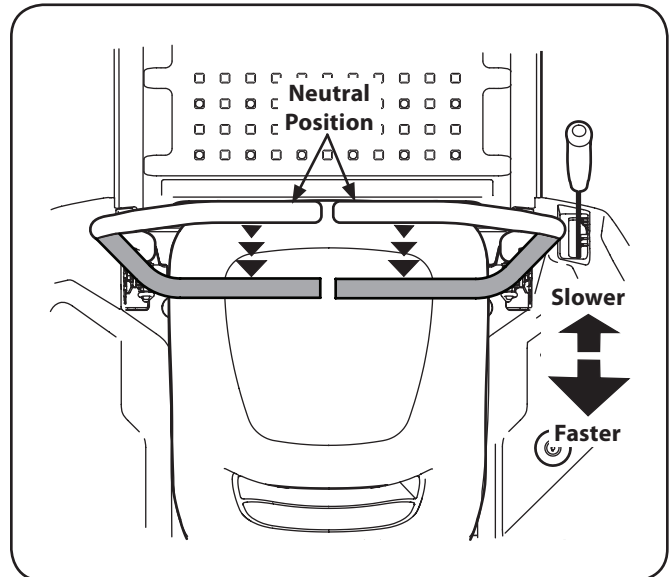


Figure 5-6

2. As the control levers are pushed farther rearward the speed of the tractor will increase.
3. To slow the tractor move the controls lever forward to attain the desired speed, or move the levers to the neutral position to stop the tractor.

Turning While Driving Rearward

To turn the tractor while driving rearward, move the control levers as necessary so that one lever is forward of the other. The tractor will turn in the direction of the forward control lever.

1. To turn to the left while traveling in reverse, move the left drive control lever forward of the right lever. See Figure 5-7.

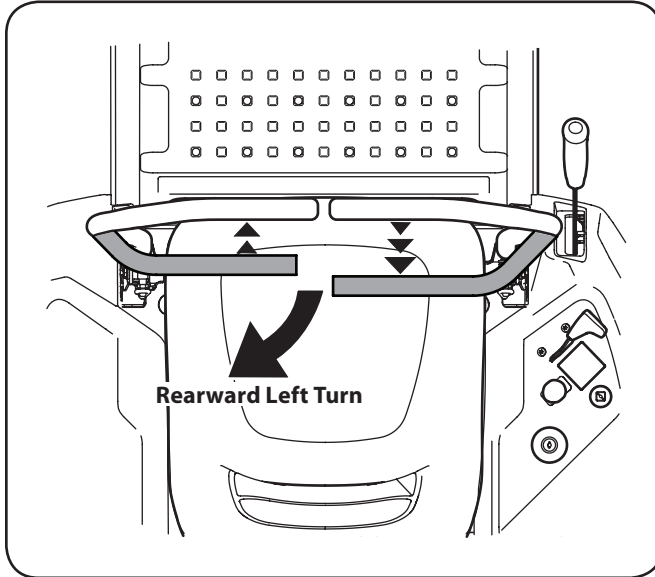


Figure 5-7

2. To turn to the right while traveling in reverse, move the right drive control lever forward of the left lever. See Figure 5-8.

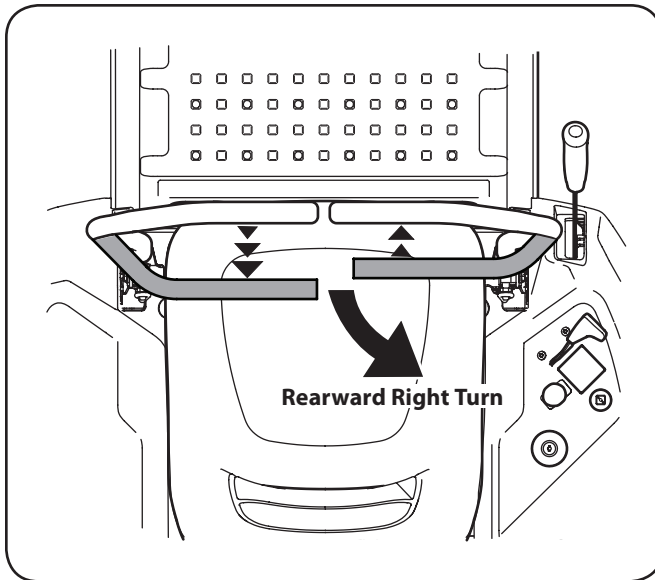


Figure 5-8

3. The greater the distance between the two levers, the sharper the tractor will turn.
4. To execute a "pivot turn," move the turn side drive control lever to the neutral position, while moving the other control lever rearward.

NOTE: Making a "pivot turn" on grass will greatly increase the potential for defacement of the turf.

Executing a Zero Turn



WARNING! When executing a zero turn, the tractor **MUST BE STOPPED**. Executing a zero turn while the tractor is moving can significantly reduce your control of the tractor and will cause severe turf defacement.

1. Stop the forward or reverse motion of the tractor by moving the two drive control levers to neutral.
2. To turn clockwise, move the left control lever forward while simultaneously moving the right control lever rearward. See Figure 5-9.

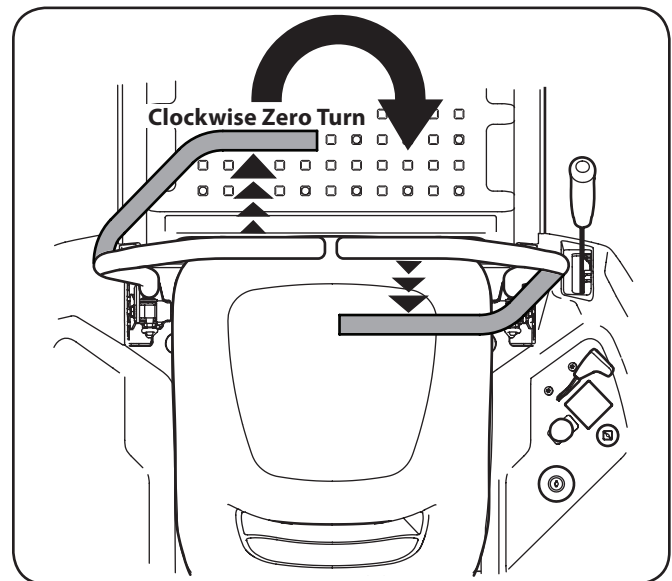


Figure 5-9

3. To turn counterclockwise, move the right control lever forward while simultaneously moving the left control lever rearward. See Figure 5-10.

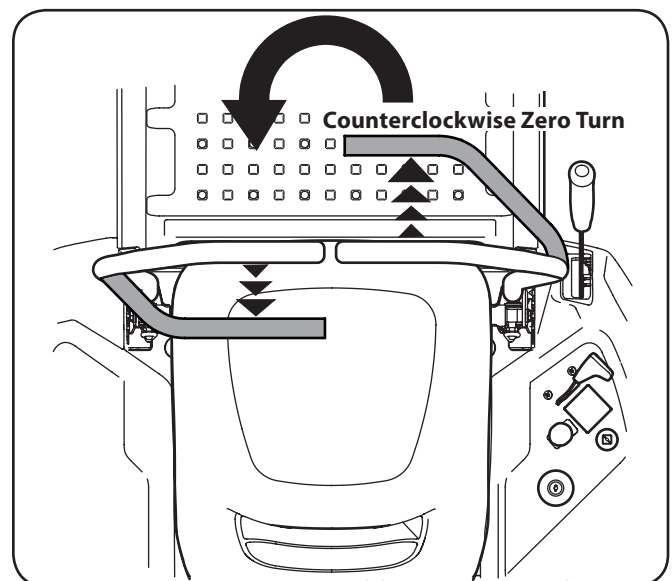


Figure 5-10

Stopping the Tractor

1. Move both drive control levers to the neutral position to stop the motion of the tractor.
2. Push the PTO switch downward to the disengaged position.
3. Use the deck lift handle to raise the deck to its highest position.
4. If dismounting the tractor, move the drive control handles fully outward in the neutral position which also engages the parking brake, move the throttle control lever to the fast  position, turn the ignition switch to stop  and remove the key from the switch.



WARNING! Do not leave the seat of the tractor without disengaging the PTO and moving drive control levers fully outward in the neutral/parking brake engaged position. If leaving the tractor unattended, turn the ignition key off and remove key.

Driving On Slopes

Refer to the slope gauge in the Safe Operation Section to help determine slopes where you may not operate safely.



WARNING! Do not operate on inclines with a slope in excess of 15 degrees (a rise of approximately 2-1/2 feet every 10 feet). The tractor could overturn and cause serious injury.

1. Always drive across slopes, never up and down. Control the speed and direction of the tractor using primarily the control lever on the downhill side of the tractor, with the uphill control lever remaining essentially in a fixed position.
2. Avoid turning downhill if possible. Start at the bottom of a slope and work upward. Always slow down before turning.
3. Use extra care and go slowly when turning downhill.

Operating The PTO

Operate the PTO clutch as follows:

1. Move the throttle control lever to approximately the mid throttle position.
2. Pull the PTO switch upward to the "ENGAGED" position.
3. Advance the throttle lever to the operating speed (full engine speed).
4. The operator must remain in the tractor seat at all times. If the operator should leave the seat without turning off the power take-off switch, the tractor's engine will shut off.
5. The PTO clutch cannot be operated when the tractor is driving in the reverse direction. The PTO will disengage when both drive control levers are moved to the reverse position. To re-engage the PTO, the levers must be in the neutral or forward drive position and the PTO switch must be placed in the OFF (disengaged) position and then returned to the ON (engaged) position.

Using the Mower Deck



WARNING! Make certain the area to be mowed is free of debris, sticks, stones, wire or other objects that can be thrown by the rotating blades.

NOTE: Do not engage the mower deck when lowered in grass. Premature wear and possible failure of the "V" belt and PTO clutch will result. Fully raise the deck or move to a non grassy area before engaging the mower deck.

1. Mow across slopes, not up and down. If mowing a slope, start at bottom and work upward to ensure turns are made uphill.
2. On the first pass pick a point on the opposite side of the area to be mowed.
3. Engage the PTO clutch using the PTO switch and move the throttle control or throttle/choke control to the fast  position.
4. Lower the mower deck to the desired height setting using the lift handle.
5. Slowly and evenly push the RH and LH drive control levers forward to move the tractor forward, and keep the tractor headed directly toward the alignment point.

NOTE: The speed of the tractor will affect the quality of the mower cut. Mowing at full speed will adversely affect the cut quality. Control the ground speed with the control levers.

6. When approaching the other end of the strip, slow down or stop before turning. A U-turn is recommended unless a pivot or zero turn is required.
7. Align the mower with an edge of the mowed strip and overlap approximately 3".
8. Direct the tractor on each subsequent strip to align with a previously cut strip.
9. To prevent rutting or grooving of the turf, if possible, change the direction that the strips are mowed by approximately 45° for the next and each subsequent mowing.



WARNING! Be careful when crossing gravel paths or driveways. Disengage the PTO and raise the deck to the highest position before crossing.

NOTE: When stopping the tractor for any reason while on a grass surface, always:

- Place the control levers in the neutral/parking brake engaged position,
- Shut engine off and remove the key.
- Doing so will minimize the possibility of having your lawn "browned" by hot exhaust from your tractor's running engine.

Checking the Safety Interlock Circuits

Periodically check the safety interlock circuits to ensure they are working properly. If a safety circuit is not working as designed, contact your dealer to have the tractor inspected. DO NOT operate the tractor if any safety circuit is not functioning properly. To check the safety circuits, proceed as follows:

1. Pull the PTO switch upward to the engaged position. Momentarily turn the ignition switch to the start position; the engine should not crank.
2. Move both control levers fully inward in the neutral position; then lift upward from the operator's seat. The engine should stop.
3. With both control levers fully outward in the neutral/parking brake engaged position, engage the PTO. Lift upward from the operator's seat; the engine should stop.
4. Start the tractor and move the control levers inward to the neutral operating position. Engage the PTO and move both control lever slowly into the slow reverse position; the PTO should disengage and the mower deck should stop.

Maintenance Schedule

	Before Each use	Every 10 Hours	Every 25 Hours	Every 50 Hours	Every 100 Hours	Prior to Storing
Check Engine Intake Screen/Cover	✓					
Clean Battery Terminals		✓				✓
Lube Front Wheels		✓				✓
Clean Engine Cooling Fins			✓			✓
Lube Front Deck Wheels			✓			✓

NOTE: This Operator's Manual covers several models. Tractor features may vary by model. Not all features in this manual are applicable to all tractor models and the tractor depicted may differ from yours.

Maintenance



WARNING! Before performing any maintenance or repairs, disengage the PTO, move the drive control levers fully outward in the neutral position, engage the parking brake, stop the engine and remove the key to prevent unintended starting.

Engine

Refer to the Engine Manual for all engine maintenance intervals, procedures, specifications and instructions.

Lubrication

- Using a pressure lubricating gun, lubricate the front castor wheel axles with 251H EP grease after every 10 hours of service.
- Periodically lubricate all other pivot points with a quality lubricating oil.

Cleaning the Spindle Pulleys

Once a month remove the belt covers to remove any accumulation of grass clippings from around the spindle pulleys and V-belt. Clean more often when mowing tall, dry grass.

Using the Deck Wash System



WARNING! When using the deck wash system, never engage the deck from any position other than the operator's seat of the tractor. Do not use an assistant or engage deck in the presence of any bystanders.

- Attach the nozzle adapter to a standard garden hose connected to a water supply.

- Move the tractor to an area within reach of the hose where the dispersal of wet grass clippings is acceptable to you. Disengage the PTO, engage the parking brake and stop the engine.



CAUTION: Make certain the tractor's discharge chute is directed AWAY from your house, garage, parked cars, etc.

- Pull back the lock collar of the nozzle adapter and push the adapter onto one of the deck wash nozzles at either end of the mower deck. Release the lock collar to lock the adapter on the nozzle. See Figure 6-1.

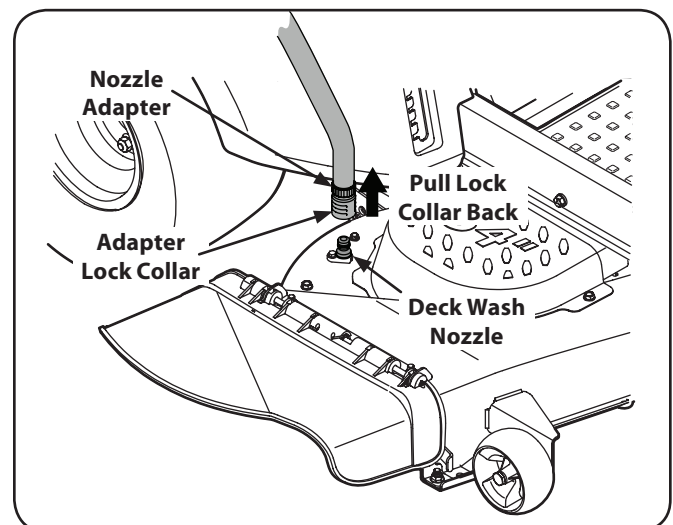


Figure 6-1

- Turn on the water supply.
- From the tractor operator's seat, start the engine and engage the PTO. Allow to run as needed. Disengage the PTO and stop the engine.

6. Turn off the water supply.
7. Pull back the lock collar of the nozzle adapter to disconnect the adapter from the nozzle.
8. Repeat the previous steps to clean the deck using the nozzle at the other end of the deck.

Tires

Check the tire air pressure after every 50 hours of operation or weekly. Keep the tires inflated to the recommended pressures. Improper inflation will shorten the tire service life. See the tire sidewall for proper inflation pressures. Observe the following guidelines:



WARNING! Never exceed the maximum inflation pressure shown on the sidewall of the tire.

Do not reinflate a tire that has been run flat or seriously under inflated. Have it inspected and serviced by a qualified tire mechanic.

General Battery Information



WARNING!

- Should battery acid accidentally splatter into the eyes or onto the skin, rinse the affected area immediately with clean cold water. If there is any further discomfort, seek prompt medical attention.
- If acid spills on clothing, first dilute it with clean water, then neutralize with a solution of ammonia/water or baking soda/water.
- NEVER connect (or disconnect) battery charger clips to the battery while the charger is turned on, as it can cause sparks.
- Keep all sources of ignition (cigarettes, matches, lighters) away from the battery. The gas generated during charging can be combustible.
- As a further precaution, only charge the battery in a well ventilated area.
- Always shield eyes and protect skin and clothing when working near batteries.
- Batteries contain sulfuric acid and may emit explosive gases. Use extreme caution when handling batteries. Keep batteries out of the reach of children.

Battery Maintenance

- The battery is filled with battery acid and then sealed at the factory. However, even a "maintenance free" battery requires some maintenance to ensure its proper life cycle.
- Spray the terminals and exposed wire with a battery terminal sealer, or coat the terminals with a thin coat of grease or petroleum jelly, to protect against corrosion.
- Always keep the battery cables and terminals clean and free of corrosion.
- Avoid tipping. Even a sealed battery will leak electrolyte when tipped.



WARNING! Batteries contain sulfuric acid and may emit explosive gases. Use extreme caution when handling batteries. Keep batteries out of the reach of children.

Battery Storage

1. When storing the tractor for extended periods, disconnect the negative battery cable. It is not necessary to remove the battery.
2. All batteries discharge during storage. Keep the exterior of the battery clean, especially the top. A dirty battery will discharge more rapidly.
3. The battery must be stored with a full charge. A discharged battery can freeze sooner than a charged battery. A fully charged battery will store longer in cold temperatures than hot.
4. Recharge the battery before returning to service. Although the tractor may start, the engine charging system may not fully recharge the battery.

Using the Transmission Bypass Rods

If for any reason the tractor will not drive or you wish to move the tractor, the two hydrostatic transmissions are equipped with a bypass rod that will allow you to manually move the tractor short distances.



WARNING! Do not tow the tractor, even with the bypass rod engaged. Serious transmission damage will result from doing so.

1. From the rear of the tractor, just inside the two rear tires, locate the transmission bypass rods. Refer to Figure 6-2.

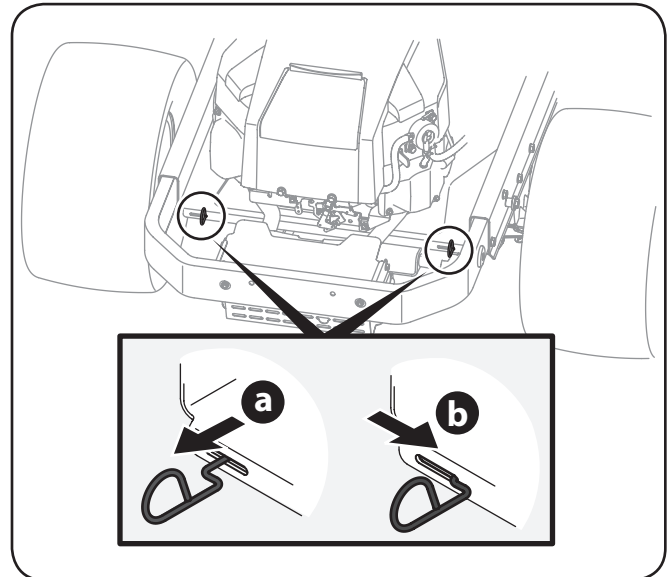


Figure 6-2

2. Engage the transmission bypass rods, one on each side of the tractor, to move the tractor manually without starting it. The transmission bypass rods are located on the rear of the tractor, just inside each rear wheel. Engage the bypass rods by pulling each one out (a) and to the right (b) to lock it into place. See Figure 6-2.
NOTE: The tractor will not drive with the bypass rods in the engage position.
3. Disengage the bypass rods by reversing steps a & b after moving the tractor. See Figure 6-2.

Hydrostatic Transmission

The hydrostatic transmission is sealed at the factory and is maintenance-free. The fluid level cannot be checked and the fluid cannot be changed.

Tractor Storage

If your tractor is not going to be operated for an extended period of time (thirty days to approximately six months), the tractor should be prepared for storage. Store the tractor in a dry and protected location. If stored outside, cover the tractor (including the tires) to protect it from the elements. The procedures outlined below should be performed whenever the tractor is placed in storage.

1. Change the engine oil and filter following the instructions provided in the engine manual packed with this manual.



WARNING! Never store the tractor with fuel in the tank indoors or in poorly ventilated enclosures, where fuel fumes may reach an open flame, spark or pilot light as on a furnace, water heater, clothes dryer, etc.

2. If storing the tractor for 30 days or more:
 - a. To prevent gum deposits from forming inside the engine's carburetor and causing possible malfunction of the engine, the fuel system must be either completely emptied, or the gasoline must be treated with a stabilizer to prevent deterioration.



WARNING! Fuel left in the fuel tank deteriorates and will cause serious starting problems.

- b. Using a fuel stabilizer such as **STA-BIL**® for storage between 30 and 90 days:
 - Read the product manufacturer's instructions and recommendations.
 - Add to clean, fresh gasoline the correct amount of stabilizer for the capacity (approximately 3 gallons) of the fuel system.
 - Fill the fuel tank with treated fuel and run the engine for 2-3 minutes to get stabilized fuel into the carburetor.
 - c. Emptying the fuel system for storage of more than 90 days:
 - Prior to putting the tractor in storage, monitor fuel consumption with the goal of running the fuel tank empty.
 - Run the engine until it begins to stall. Use the choke to keep the engine running until all fuel in the carburetor has been exhausted.

- Referring to the engine manual, drain the fuel from the carburetor bowl.
3. Clean the engine and the entire tractor thoroughly.
 4. Fully charge the battery, then disconnect the negative cable at the battery to prevent possible discharge. Recharge the battery periodically when in storage.
NOTE: Remove the battery if exposed to prolonged periods of sub-freezing temperatures. Store in a cool, dry location where temperatures are above freezing.
 5. Lubricate all lubrication points.

NOTE: Using a pressure washer or garden hose is not recommended for cleaning your tractor. It may cause damage to electrical components, spindles, pulleys, bearings or the engine. The use of water will result in shortened life and reduce serviceability.

Removing The Tractor From Storage

1. Check the engine oil.
2. Fully charge the battery and inflate the tires to the recommended pressure.
3. Fill the fuel tank with clean, fresh gasoline.
4. Start the engine and allow to idle for a few minutes to ensure engine is operating properly.
5. Drive the tractor without a load to make certain all the tractor systems are functioning properly.

Adjustments



WARNING! Shut the engine off, remove the ignition key and engage the parking brake before making adjustments. Protect your hands by using heavy gloves when handling the blades.

Adjusting RH & LH Drive Control Levers

The RH and LH drive control levers can be adjusted up or down and forward or backward for the comfort of the operator. The drive control levers can be placed in either of two height positions, and/or can be moved forward or rearward within the range of the slot in each lower arm..

To adjust the drive control lever height, proceed as follows:

1. Remove the upper hex screw and flat washer securing the lever to the pivot bracket.
2. While supporting the control lever to keep it from falling, remove the hex screw and flat washer from the bottom of the control lever and lower arm. Refer to Figure 6-3.
3. Reposition the control lever to align with the other set of holes in the lower arm and insert the hex screw through the flat washer and into the lower arm. Tighten the hex screw until snug.
4. Insert the hex screw through the flat washer and through the control lever slot and the lower arm. Do not tighten now.
5. If you are going to adjust the control levers forward or rearward, proceed to the next step. If not, fully tighten the hex screw.

To adjust the drive control levers forward/rearward, proceed as follows:

1. If not already loose, loosen the hex screw and rotate the control lever either forward or rearward to the desired position. See Figure 6-3.

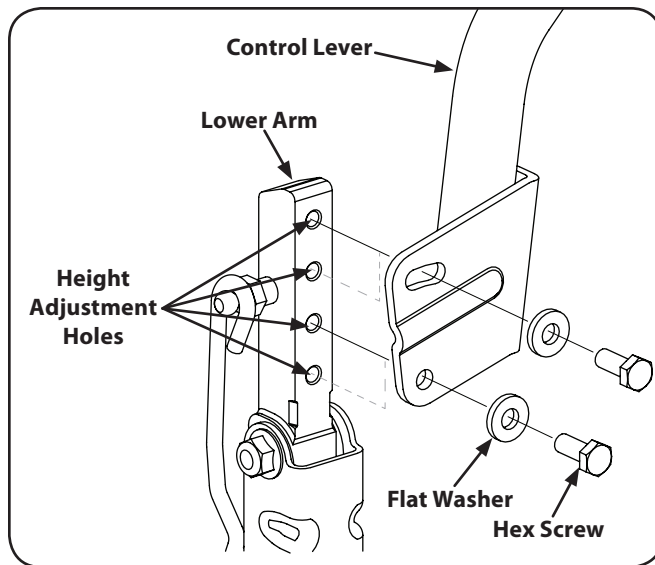


Figure 6-3

NOTE: If the control lever is too tight to move, slightly loosen the hex screw at the bottom of the control lever.

2. Tighten the hex screw to fix the control lever in the adjusted position
3. Repeat the above procedure to adjust the other control lever into the same position. Adjust so that both levers are even with each other when in the neutral position.

Deck Leveling

NOTE: Check the tractor's tire pressure before performing any deck leveling adjustments. Refer to Tires for information regarding tire pressure.



WARNING! Shut the engine off, remove the ignition key and engage the parking brake before making adjustments. Protect your hands by using heavy gloves when handling the blades.

Leveling the Deck (Side to Side)

NOTE: Check the tractor's tire pressure before performing any deck leveling adjustments. Refer to Tires for information regarding tire pressure. Always level the deck side to side before front to rear.

If the cutting deck appears to be mowing unevenly, a side to side adjustment can be performed. Adjust if necessary as follows:

1. With the tractor parked on a firm, level surface, place the deck lift handle in a middle mowing position and rotate both outside blades so that they are perpendicular with the tractor.
2. Measure the distance from the outside of the left blade tip to the ground and the distance from the outside of the right blade tip to the ground. Both measurements taken should be equal. If they're not, proceed to the next step.

3. Loosen, but do NOT remove, the hex bolt on the rear left deck hanger link. See Figure 6-4.

NOTE: The rear right deck hanger link is not adjustable and is used to help adjust the other hanger links.

4. Using a wrench, raise or lower the left side of the deck by turning the adjustment gear. See Figure 6-4.

The deck is properly leveled when both blade tip measurements are equal. Retighten the hex bolt on the front left deck hanger bracket when proper adjustment is achieved.

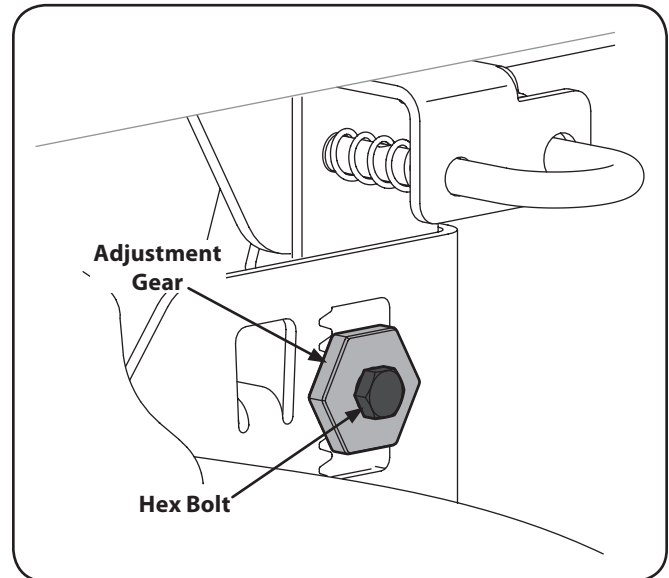


Figure 6-4

Leveling the Deck (Front To Rear)

NOTE: Check the tractor's tire pressure before performing any deck leveling adjustments. Refer to Tires on page 22 for information regarding tire pressure. Always level the deck side to side before front to rear.

The front of the deck should be between $\frac{1}{4}$ – $\frac{3}{8}$ " lower than the rear of the deck. Adjust if necessary as follows:

1. Park the tractor on a firm, level surface and place the deck lift handle in a middle position.
2. Rotate the blade nearest the discharge chute so that it is parallel with the tractor.
3. Measure the distance from the front of the blade tip to the ground and the rear of the blade tip to the ground. The first measurement taken should be between $\frac{1}{4}$ " and $\frac{3}{8}$ " less than the second measurement.
4. Determine the approximate distance necessary for proper adjustment and proceed, if necessary.

- Using a wrench, raise or lower the front of deck by turning lock nut on the front deck lift rod. See Figure 6-5.

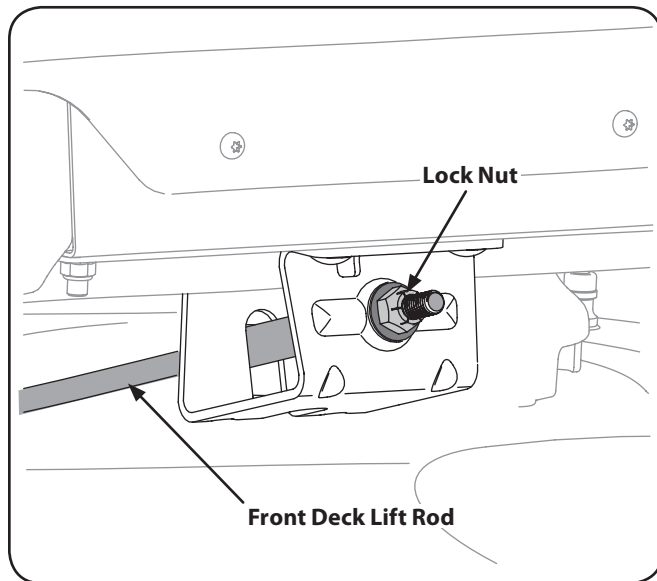


Figure 6-5

- The deck is properly leveled when the front tip of the blade is $\frac{1}{4}$ " lower than the rear tip. Retighten the hex bolt on the left rear deck hanger links when proper adjustment is achieved.

Adjusting the Front Gauge Wheels



WARNING!: Keep hands and feet away from the discharge opening of the cutting deck.

The front gauge wheels on the mower deck are an anti-scalp feature, and should not ride on the ground. The front gauge wheels should be approximately $\frac{1}{4}$ – $\frac{1}{2}$ " above the ground when the deck is set in the desired height setting.

Using the lift handle, set the deck in the desired height setting, then check the gauge wheel distance from the ground below. If necessary adjust the front gauge wheels as follows:

- Visually check the distance between the front gauge wheels and the ground. If the gauge wheels are near or touching the ground, they should be raised. If more than $\frac{1}{2}$ " above the ground, they should be lowered.
- Remove the lock nut securing one of the front gauge wheel shoulder screws to the deck. Remove the gauge wheel and shoulder screw. See Figure 6-6.
- Insert the shoulder screw into the one of four index holes in the front gauge wheel bracket that will give the gauge wheel a $\frac{1}{4}$ – $\frac{1}{2}$ " clearance with the ground.
- Note the index hole of the just adjusted wheel, and adjust the other front gauge wheel into the respective index hole of the other front gauge wheel bracket.

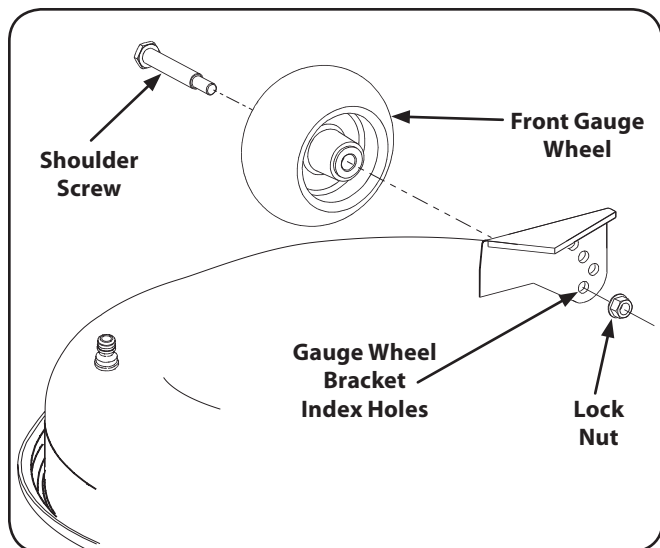


Figure 6-6

Adjusting the Rear Deck Rollers (If so equipped)

The rear deck rollers can be set in either the low or high position.

The position on the rear deck rollers is generally not changed. In the low position the rollers will roll the grass. In the high position, the rollers are in a storage position and do little or no rolling of the grass. Change the roller position as follows:

- Remove the cotter pin from the right end of the J-hook. See Figure 6-7.

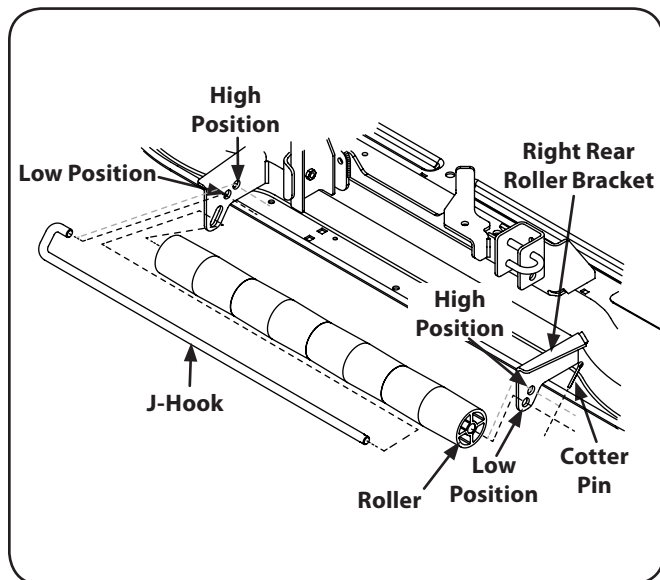


Figure 6-7

- Slide the J-hook to the left and remove the roller as the shaft is fully withdrawn from the left rear roller bracket. See Figure 6-7.
- Insert the J-hook back through the roller bracket hole. Slide the roller onto the shaft as you slide the J-hook to the right.
- Slide the J-hook through the desired position in the right roller bracket, line up the hooked end of the J-hook with the desired position and secure with the cotter pin once in place.

Off-Season Storage

Riding Mower Storage

If your riding mower is not going to be operated for an extended period of time (thirty days to approximately six months), the riding mower should be prepared for storage. Store the riding mower in a dry and protected location. If stored outside, cover the riding mower (including the tires) to protect it from the elements. The procedures outlined below should be performed whenever the riding mower is placed in storage.

1. Change the engine oil and filter following the instructions provided in the Engine Manual.



WARNING! Never store the riding mower with fuel in the tank indoors or in poorly ventilated enclosures, where fuel fumes may reach an open flame, spark or pilot light as on a furnace, water heater, clothes dryer, etc.

2. Service the engine as instructed in the separate engine manual.
3. Engines stored between 30 and 90 days need to be treated with a gasoline stabilizer such as **STA-BIL**® and engines stored over 90 days need to be drained of fuel to prevent deterioration and gum from forming in fuel system or on essential carburetor parts. If the gasoline in your engine deteriorates during storage, you may need to have the carburetor, and other fuel system components, serviced or replaced.



WARNING: Drain fuel only into an approved container outdoors, away from an open flame. Allow engine to cool. Extinguish cigarettes, cigars, pipes, and other sources of ignition prior to draining fuel.

4. Remove the spark plugs and pour approximately one ounce of oil into each cylinder. Crank the engine one or two turns to spread the oil evenly on the cylinder walls. Replace the spark plugs.
5. Clean the engine and the entire riding mower thoroughly.
NOTE: Use of a pressure washer or garden hose is not recommended to clean your riding mower. They may cause damage to electrical components, spindles, pulleys, bearings or the engine. The use of water will result in shortened life and reduce serviceability.
6. Sharpen the blades so that the mower will be ready to use when needed.
7. Protect the metal surfaces. Repair scratches with the appropriate touch-up spray paint. Brush a rust preventive oil on any unpainted surfaces including the pulleys and blades. (Be careful not to get any oil on the drive belts.)
8. Clean and fully charge the battery, then disconnect the negative cable at the battery to prevent possible discharge. Recharge the battery periodically when in storage.
NOTE: Remove the battery if exposed to prolonged periods of sub-freezing temperatures. Store in a cool, dry location where temperatures are above freezing.
9. Lubricate all lubrication points.
10. Jack the mower up and store it on blocks to take the weight off of the tires.

Removing the Riding Mower from Storage

1. Check the engine oil.
2. Fully charge the battery, lower riding mower off blocks, and inflate the tires to the recommended pressure.
3. Remove the spark plugs and wipe them off. Using the starter, crank the engine to pump the excess oil out of the spark plug holes. Replace the spark plugs and the ignition leads.
4. If drained before storing, fill the fuel tank with clean, fresh gasoline.
5. Check the level of the engine oil in the crankcase and the hydraulic reservoir tank.
6. Start the engine and allow to idle for a few minutes to ensure engine is operating properly.
7. Drive the riding mower without a load to make certain all the riding mower systems are functioning properly.

Battery Removal



WARNING! Battery posts, terminals and related accessories contain lead and lead compounds. Wash hands after handling.

The battery is located beneath the seat frame. To remove the battery:

1. Remove the hex washer screw securing the battery hold-down bracket to the frame. Then flip the battery hold-down bracket up to free the battery. See Figure 7-1.

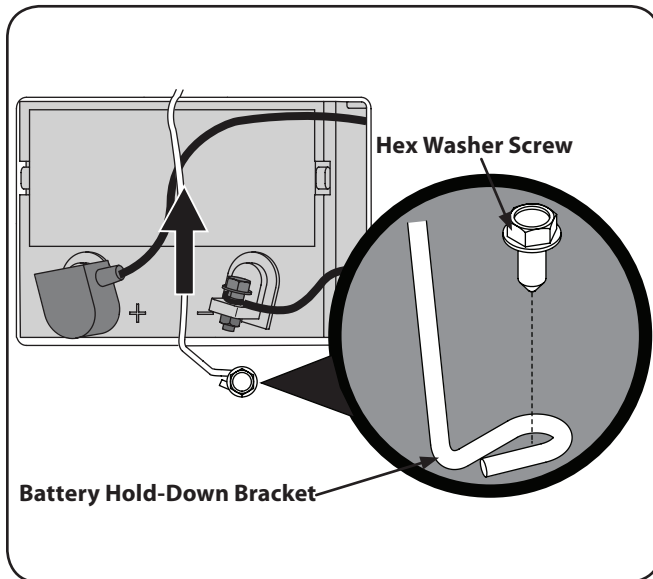


Figure 7-1

2. Remove the hex cap screw and sems nut securing the black negative battery lead to the negative battery post (marked NEG). Move the cable away from the negative battery post.
3. Remove the hex cap screw and sems nut securing the red positive battery lead to the positive battery post (marked POS).
4. Carefully lift the battery out of the tractor.
5. Install the battery by repeating the above steps in the reverse order.



WARNING! Always connect the positive lead to the battery before connecting the negative lead. This will prevent sparking or possible injury from an electrical short caused by contacting the tractor body with tools being used to connect the cables.

Charging the Battery

Test and, if necessary, recharge the battery after the tractor has been stored for a period of time.

- A voltmeter or load tester should read 12.6 volts (DC) or higher across the battery terminals. See Figure 7-2.

Voltmeter Reading	State of Charge	Charging Time
12.7	100%	Full Charge
12.4	75%	90 Min.
12.2	50%	180 Min.
12.0	25%	280 Min.

Figure 7-2

- Charge the battery with a 12-volt battery charger at a MAXIMUM rate of 10 amps.

Servicing Electrical System

A fuse is installed to protect the tractor's electrical system from damage caused by excessive amperage. Always use the same capacity fuse for replacement. If the electrical system does not function, check for a blown fuse.

If you have a recurring problem with blown fuses, have the tractor's electrical system checked by your Cub Cadet Service Dealer.

Relays and Switches

There are several safety switches in the electrical system. If a function of the safety interlock system described earlier is not functioning properly, have the electrical system checked by your Cub Cadet Service Dealer.

Deck Removal

Remove the mower deck from the tractor as follows:

1. Move the tractor to a level surface, disengage the PTO, stop the engine, and set the parking brake.
2. Move the deck gauge wheels or rollers to their highest setting (lowest deck setting).
3. Remove the 'V' belt from the PTO pulley, located on the bottom of the engine, using one of the following two methods.



WARNING! The muffler at the rear of the tractor may be extremely hot, and could cause serious burns. Use extreme caution when near the muffler. Allow the muffler to fully cool before removing the belt from the PTO pulley.

Releasing Belt Tension with the Idler Pulley

1. Using the deck lift handle, raise the deck to the position that provides the most horizontal run of the belt between the deck idler pulleys and the PTO pulley on the bottom of the engine. See Figure 7-3.

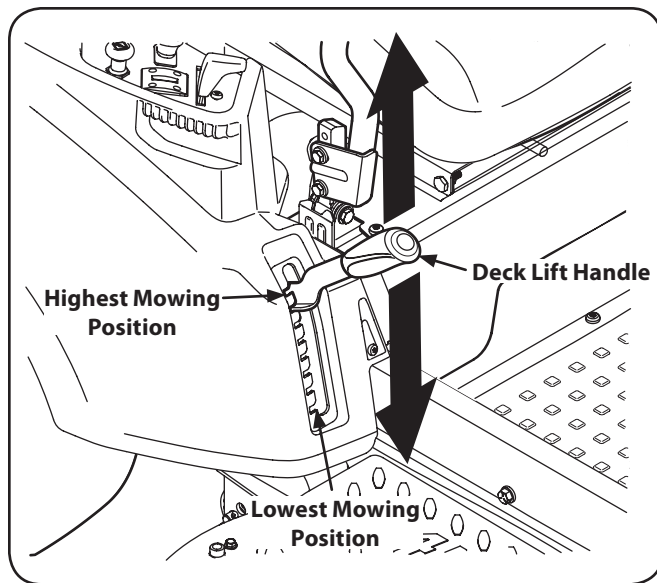


Figure 7-3

2. Working from the middle of the tractor, pivot the idler bracket and movable idler pulley rearward away from the backside of the "V" belt just far enough to lift the belt up and over the idler pulley. See Figure 7-4.

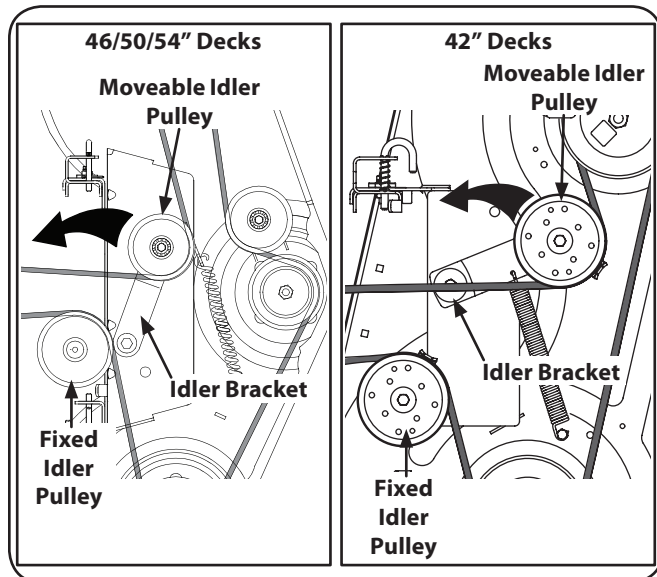


Figure 7-4

3. From beneath the rear of the tractor, slide the belt off of the PTO pulley on the bottom of the engine.

Rolling the Belt off the PTO Pulley

1. Using the deck lift handle, raise the deck to the position that provides the most horizontal run of the belt between the deck idler pulleys and the PTO pulley on the bottom of the engine.
2. Sitting behind the tractor facing forward, reach beneath the tractor to grasp the belt at the front of the PTO pulley.



WARNING! Use caution to avoid pinching your fingers when rolling the belt off the PTO pulley.

3. Pull the left side of the belt rearward and downward while manually turning the PTO pulley to the right until the belt rides out onto the edge of the lower sheave of the pulley.

NOTE: If pulling the right side of the belt, turn the pulley left.

4. While still holding the belt downward, continue turning the PTO pulley until the belt is rolled off the pulley. Refer to Figure 7-5.

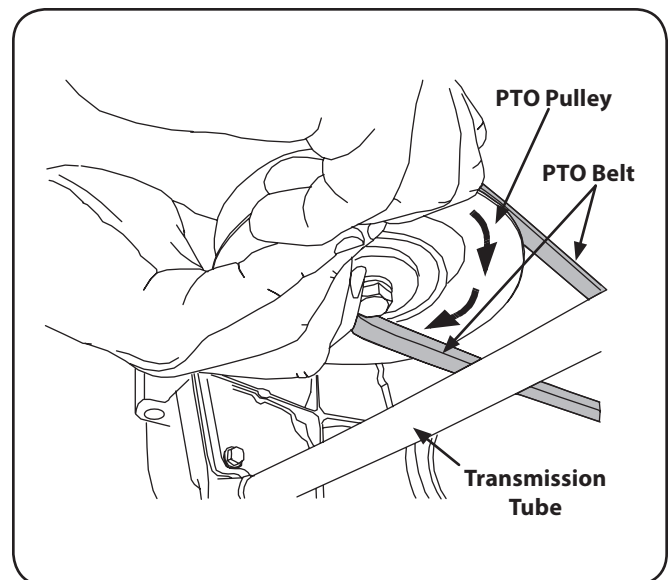


Figure 7-5

5. Lower the deck into the lowest position using the deck lift handle. See Figure 7-3.

6. Pull the cotter pin out of the front deck lift rod securing it to the deck. See Figure 7-6. Slide the deck lift rod out of the front hanger bracket.

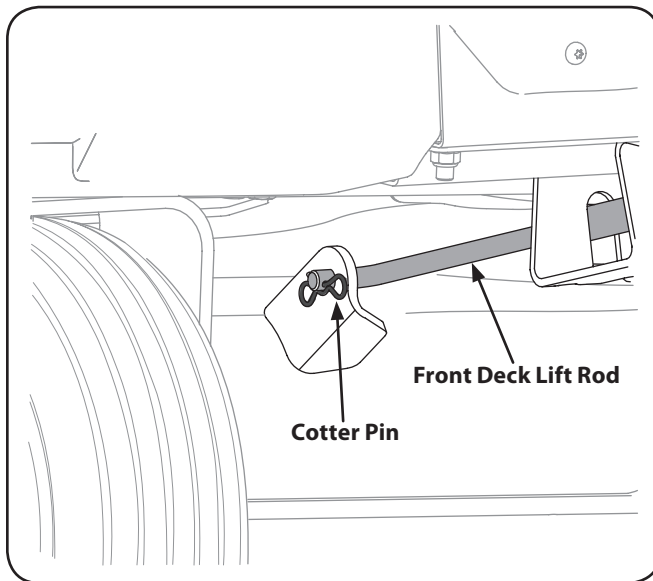


Figure 7-6

7. Locate the LH and RH deck release pins on each side of the deck. Pull the release pins outward and release the deck from the LH and RH deck lift arms. See Figure 7-7.

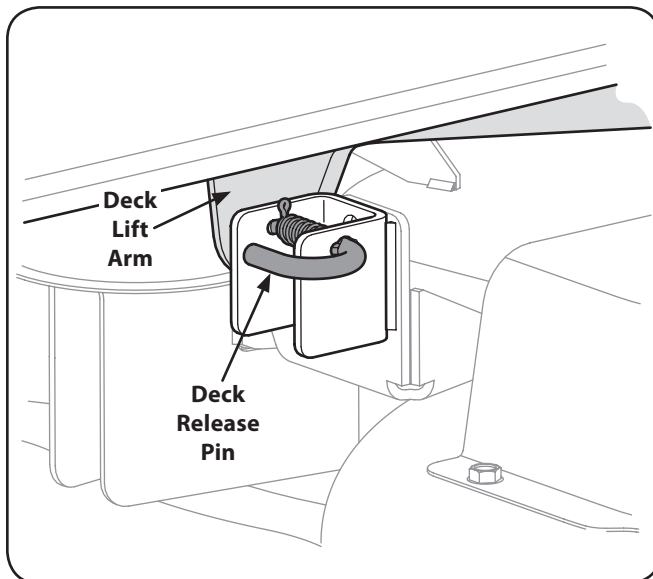


Figure 7-7

8. Place the deck lift handle into the highest mowing position and slide the deck out from beneath the tractor.

Deck Installation

Install the deck on the tractor as follows:

1. Place the deck lift handle in the highest mowing position See Figure 7-3.
2. Slide the deck under the tractor on the right side of the tractor lining up the deck hanger brackets and the deck lift arms..
3. Once the deck is under the tractor, move the deck lift handle to the lowest mowing position.

NOTE: To line the brackets up properly, it may be necessary to place a small block of wood under each side of the deck.

4. Pull the deck release pins outward and maneuver the deck as necessary to align the holes in the deck lift arms with the pins. Refer to Figure 7-7.
5. When aligned, push each pin fully inward through the lift arms to secure the arms in the rear hanger bracket slots.
6. Reinstall the front deck lift rod and secure in place with the cotter pin. Refer to Figure 7-6.
7. Make certain the 'V' belt is in the spindle pulleys on the deck; then route the belt rearward beneath the tractor frame, above the transmission tube(s), to the PTO pulley on the bottom of the engine.
8. Using the deck lift handle, raise the deck to the position that provides the most horizontal run of the belt between the deck idler pulleys and the PTO pulley on the bottom of the engine.
9. Make certain the belt is in the spindle pulleys of the deck, and that the backside of the belt is against both the fixed and movable idler pulleys.
10. Sitting behind the tractor, facing forward, make certain the belt is not twisted; then reach beneath the tractor to grasp the belt and pull it toward the PTO pulley.



WARNING! Use caution to avoid pinching your fingers when rolling the belt onto the PTO pulley.

11. Pull the right side of the belt rearward and place the narrow V side of the belt into the PTO pulley. See Figure 7-5.
12. While holding the belt and pulley together, rotate the pulley to the left (See Figure 7-5). Continue holding and rotating the pulley and belt until the belt is fully rolled into the PTO pulley.

NOTE: Before using the tractor double-check the belt routing to make sure that the belt has been routed properly.

Replacing the Belt

42" Deck

1. Remove the deck from beneath the tractor, (refer to Deck Removal on page 28).
2. Remove the hex washer screws securing the belt covers to the deck. See Figure 7-8.

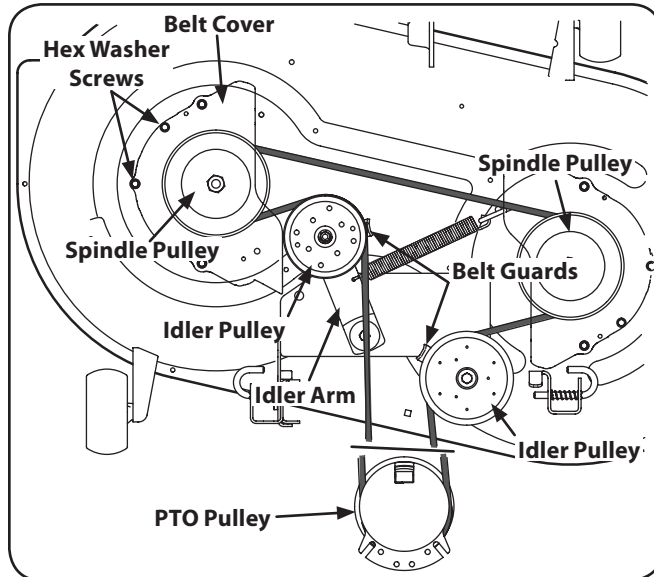


Figure 7-8

3. Remove the two idler pulleys by removing the hex screws and flange lock nuts that secure them to the deck and the idler arm. See Figure 7-9. Do not lose any of the hardware when removing the hex screw and flange lock nut.

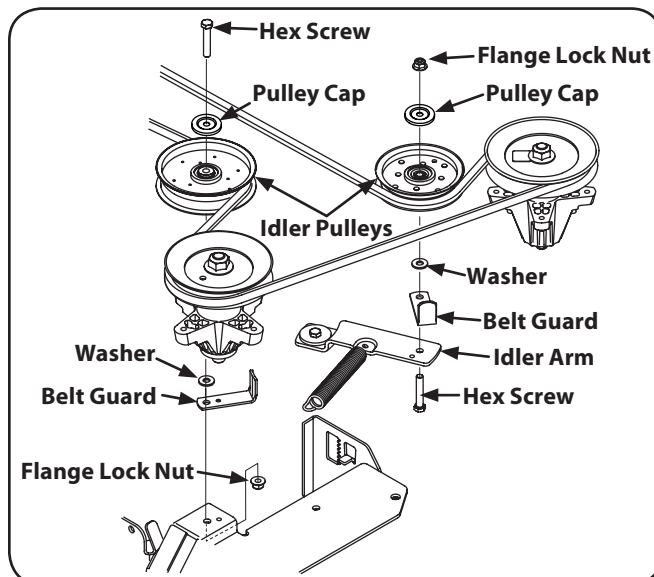


Figure 7-9

NOTE: Take note of the position of the belt guards to ensure they are properly re-installed.

4. Remove the belt from the spindle pulleys.
5. Install the new belt around the spindle pulleys as shown and reinstall the belt covers. See Figure 7-8.

6. Place the belt around the idler pulleys removed in step 3 with the "V" side facing in. Once in place, reinstall all the hardware and tighten the flange lock nut to secure the assembly. See Figure 7-8.
7. Route the belt as shown in Figure 7-8 and then reinstall the deck (refer to Deck Installation on page 30).

46" Deck

1. Remove the deck from beneath the tractor, (refer to Deck Removal on page 28).
2. Remove the hex washer screws securing the belt covers to the deck. See Figure 7-10.

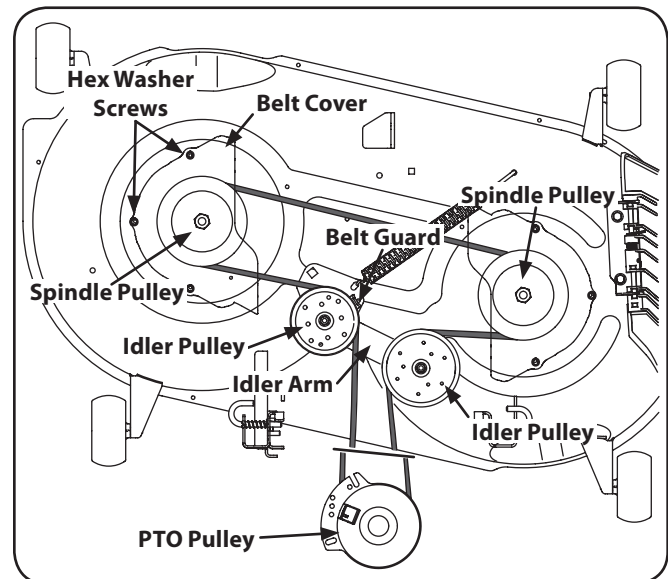


Figure 7-10

3. Remove the two idler pulleys by removing the hex screws and flange lock nuts that secure them to the deck and the idler arm. See Figure 7-11. Do not lose any of the hardware when removing the hex screw and flange lock nut.

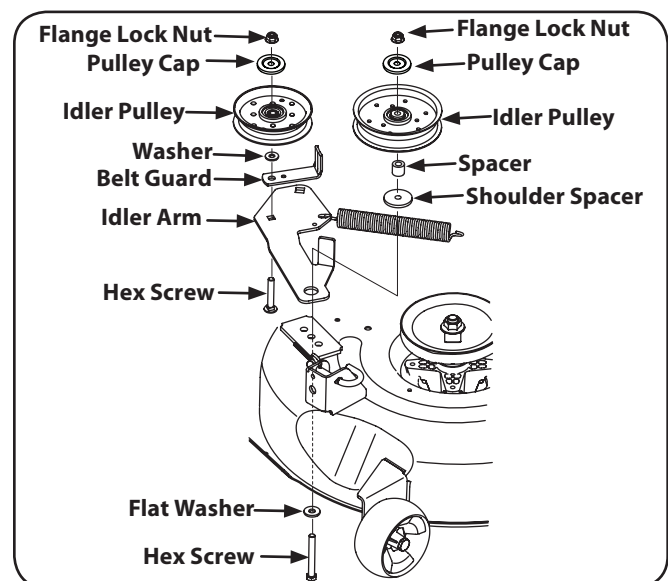


Figure 7-11

NOTE: Take note of the position of the belt guard to ensure they are properly re-installed.

4. Remove the belt from the spindle pulleys.
5. Install the new belt around the spindle pulleys as shown and reinstall the belt covers. See Figure 7-10.
6. Place the belt around the idler pulleys removed in step 3 with the "V" side facing in. Once in place, reinstall all the hardware and tighten the flange lock nut to secure the assembly. See Figure 7-11.
7. Route the belt as shown in Figure 7-10 and then reinstall the deck (refer to Deck Installation on page 30).

50" & 54" Deck

1. Remove the deck from beneath the tractor, (refer to Deck Removal on page 28).
2. Remove the hex washer screws securing the belt covers to the deck. See Figure 7-12.

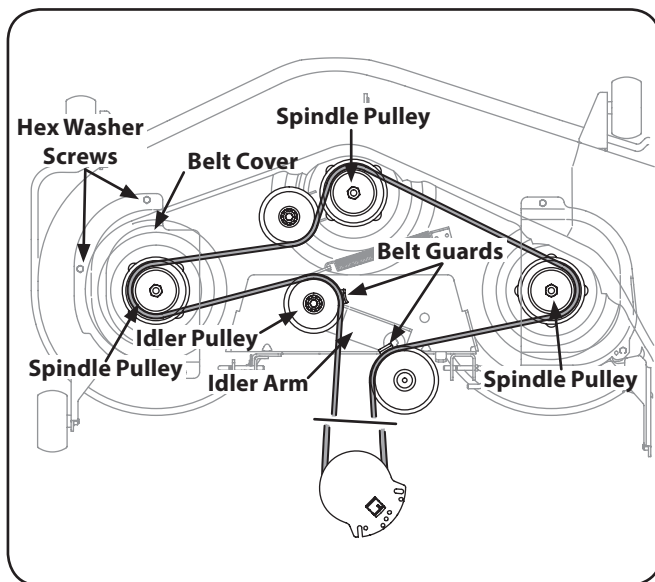


Figure 7-12

3. Remove the two idler pulleys by removing the hex screws and flange lock nuts that secure them to the deck and the idler arm. See Figure 7-13. Do not lose any of the hardware when removing the hex screw and flange lock nut.

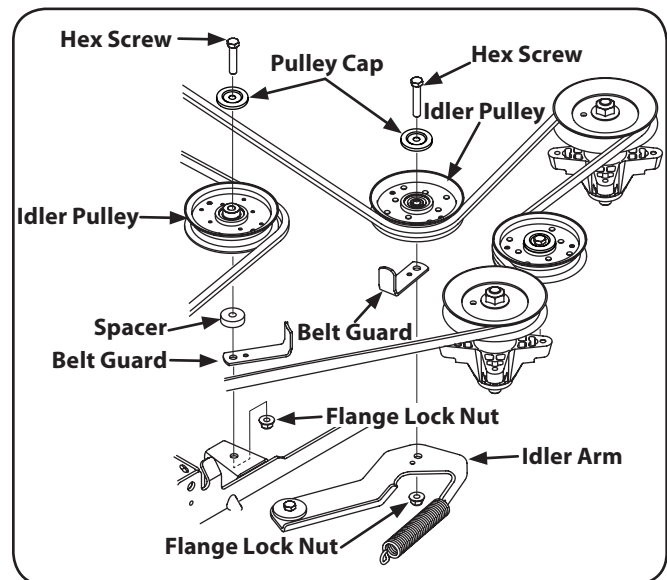


Figure 7-13

NOTE: Take note of the position of the belt guards to ensure they are properly re-installed.

4. Remove the belt from the spindle pulleys.
5. Install the new belt around the spindle pulleys as shown and reinstall the belt covers. See Figure 7-12.
6. Place the belt around the idler pulleys removed in step 3 with the "V" side facing in. Once in place, reinstall all the hardware and tighten the flange lock nut to secure the assembly. See Figure 7-13.
7. Route the belt as shown in Figure 7-12 and then reinstall the deck (refer to Deck Installation on page 30).

Mower Blade Care



WARNING! Before performing any maintenance, place the PTO switch in the "OFF" position, engage the parking brake lever, turn the ignition key to the "OFF" position and remove the key from the switch. Protect your hands by using heavy gloves when handling the blades. When servicing the mower deck, be careful not to cut yourself on the sharpened blades.

The cutting blades must be kept sharp at all times. Sharpen the cutting edges of the blades evenly so that the blades remain balanced and the same angle of sharpness is maintained.

If the cutting edge of a blade has already been sharpened many times, or if any metal separation is present, it is recommended that new blades be installed. New blades are available at your authorized dealer.

The blades may be removed as follows.

1. Remove the deck from beneath the tractor, (refer to Deck Removal on page 28) then gently flip the deck over to expose its underside.
2. Use a $\frac{15}{16}$ " wrench to hold the hex nut on top of the spindle assembly when loosening the hex nut securing the blade. A block of wood may be placed between the deck housing and the cutting edge of the blade to help in breaking loose the hex nut securing the blade. See Figure 7-14.

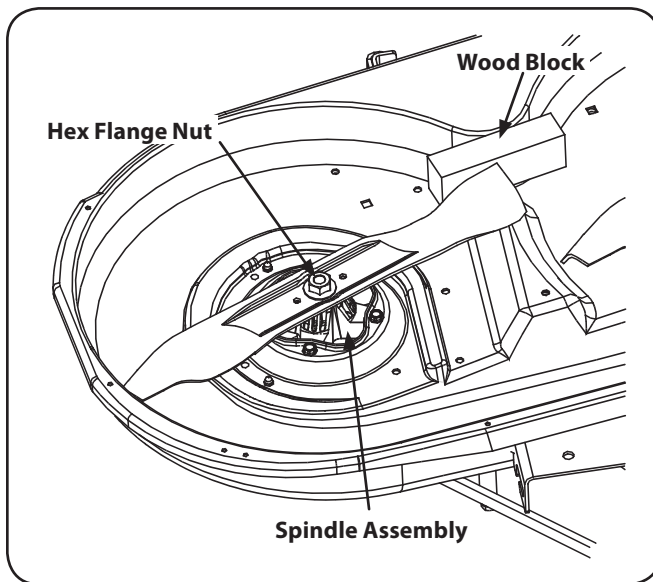


Figure 7-14

3. When reinstalling the blades, be sure they are installed so that the wings are pointing upward toward the top of the deck.
4. Tighten the blade nuts to 70-90 ft. lbs.
5. Reinstall the deck (refer to Deck Installation on page 30).






Changing the Transmission Drive Belt

Several components must be removed and special tools used in order to change the tractor's transmission drive belt. See your Cub Cadet dealer to have the transmission drive belt replaced.





Tractor Creeping

Creeping is the slight forward or backward movement of the mower when the throttle is on and the speed control levers are in the neutral position. If your mower creeps, see an authorized service dealer.

Problem	Cause	Remedy
Excessive vibration	1. Cutting blade loose or unbalanced. 2. Damaged or bent cutting blade.	1. Tighten blade and spindle. 2. Replace blade.
Uneven cut	1. Deck not leveled properly. 2. Dull blade. 3. Uneven tire pressure.	1. Perform side-to-side deck adjustment. 2. Sharpen or replace blade. 3. Check tire pressure in all four tires.
Mower will not mulch grass (If Equipped w/Mulching Kit)	1. Engine speed too low. 2. Wet grass. 3. Excessively high grass. 4. Dull blade.	1. Place throttle/choke control lever in FAST (rabbit) position. 2. Do not mulch when grass is wet. 3. Mow once at a high cutting height, then mow again at desired height or make a narrower cutting swath. 4. Sharpen or replace blade.

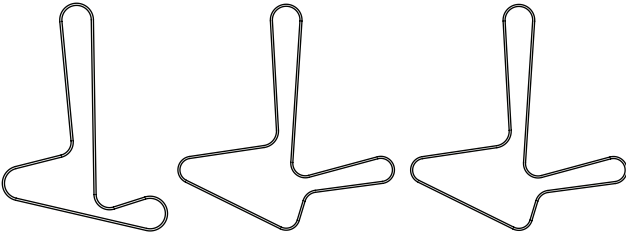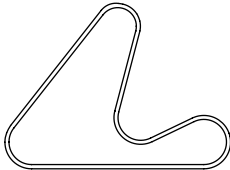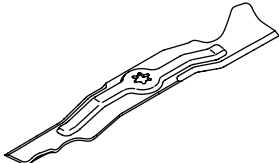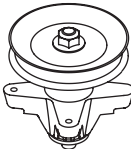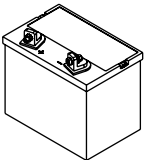Component	Part Number and Description
	954-04033A Deck Belt, RZT L42 954-05008 Deck Belt, RZT L50 954-04329 Deck Belt, RZT L54
	954-04317 Drive Belt
	942-04312 Deck Blade, RZT L42 942-04053C Deck Blade, RZT L50 942-05056 Deck Blade, RZT L54
	918-04822A Deck Spindle, RZT L42 918-04125B Deck Spindle, RZT L50 918-06978 Deck Spindle, RZT L54
	734-04155 Deck Wheel
	925-1707D Battery
	951-12179B Fuel Tank Cap

NOTE: Download a complete Parts Manual, refer to customer support on page 2. Be sure to have your model number and serial number ready. These can be found on the model plate located under the seat. Refer to page 2 for more information regarding locating your model and serial numbers.

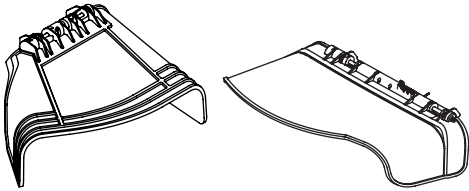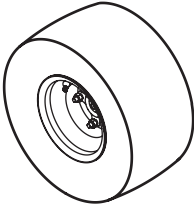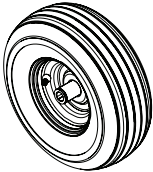Component	Part Number and Description
	946-1085A Choke Control Cable (w/ Kawasaki)
	946-04352A Throttle Control Cable (w/ Kawasaki)
	925-2054A Ignition Key
	631-04349 Discharge Chute Assy., RZT L42 631-05057 Discharge Chute Assy., RZT L50 & RZT L54
	634-04293-0931 Wheel Assembly, RZT L42 634-04128-0931 Wheel Assembly, RZT L50 & RZT L54
	634-04711 Caster Wheel Assy., RZT L42, RZT L50 & RZT L54

NOTE: Download a complete Parts Manual, refer to customer support on page 2. Be sure to have your model number and serial number ready. These can be found on the model plate located under the seat. Refer to page 2 for more information regarding locating your model and serial numbers.

The following attachments and accessories are compatible with your RZT L tractor. See your dealer or the retailer from which you purchased your tractor for information regarding price and availability.

Part Number		Part
19B70020	19B70020OEM	42" & 46" Twin Bagger
19A30006	19A30006OEM	42" Mulch Kit
19A70031	19A70031OEM	Rear Engine Guard
19A70025	19A70025100	Rear Hitch

FEDERAL and/or CALIFORNIA EMISSION CONTROL WARRANTY STATEMENT

YOUR WARRANTY RIGHTS AND OBLIGATIONS

MTD Consumer Group Inc, the United States Environmental Protection Agency (EPA), and for those products certified for sale in the state of California, the California Air Resources Board (CARB) are pleased to explain the evaporative emission control system (ECS) warranty on your 2013-2014 small off-road equipment (outdoor equipment). In California, new outdoor equipment must be designed, built and equipped to meet the State's stringent anti-smog standards (in other states, outdoor equipment must be designed, built, and equipped to meet the U.S. EPA small off-road spark ignition engine regulations). MTD Consumer Group Inc must warrant the ECS on your outdoor equipment for the period of time listed below, provided there has been no abuse, neglect, or improper maintenance of the outdoor equipment.

Your ECS may include parts such as fuel tanks, fuel lines, fuel caps, valves, canisters, filters, vapor hoses, clamps, connectors, and other associated emission-related components.

Where a warrantable condition exists, MTD Consumer Group Inc will repair your outdoor equipment at no cost to you including diagnosis, parts, and labor.

MANUFACTURER'S WARRANTY COVERAGE:

This emission control system is warranted for two years. If any emission-related part on your outdoor equipment is defective, the part will be repaired or replaced by MTD Consumer Group Inc.

OWNER'S WARRANTY RESPONSIBILITIES:

As the outdoor equipment owner, you are responsible for performance of the required maintenance listed in your owner's manual. MTD Consumer Group Inc recommends that you retain all receipts covering maintenance on your outdoor equipment, but MTD Consumer Group Inc cannot deny warranty solely for the lack of receipts.

As the outdoor equipment owner, you should however be aware that MTD Consumer Group Inc may deny you warranty coverage if your outdoor equipment or a part has failed due to abuse, neglect, improper maintenance, or unapproved modifications.

You are responsible for presenting your outdoor equipment engine to MTD Consumer Group Inc's distribution center or service center as soon as the problem exists. The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days. If you have a question regarding your warranty coverage, you should contact the MTD Consumer Group Inc Service Department.

In the U.S.A.: at 1-800-800-7310 or at <http://support.mtdproducts.com>.

In Canada: at 1-800-668-1238 or at <http://www.mtdcanada.com>

GENERAL EMISSIONS WARRANTY COVERAGE:

MTD Consumer Group Inc warrants to the ultimate purchaser and each subsequent purchaser that the outdoor equipment is: (1) designed, built, and equipped so as to conform with all applicable regulations; and (2) free from defects in materials and workmanship that cause the failure of a warranted part for a period of two years.

The warranty period begins on the date the outdoor equipment is delivered to an ultimate purchaser or first placed into service.

Subject to certain conditions and exclusions as stated below, the warranty on emission-related parts is as follows:

1. Any warranted part that is not scheduled for replacement as required maintenance in the written instructions supplied is warranted for the warranty period stated above. If the part fails during the period of warranty coverage, the part will be repaired or replaced by MTD Consumer Group Inc according to subsection (4) below. Any such part repaired or replaced under warranty will be warranted for the remainder of the period.
2. Any warranted part that is scheduled only for regular inspection in the written instructions supplied is warranted for the warranty period stated above. Any such part repaired or replaced under warranty will be warranted for the remaining warranty period.
3. Any warranted part that is scheduled for replacement as required maintenance in the written instructions supplied is warranted for the period of time before the first scheduled replacement date for that part. If the part fails before the first scheduled replacement, the part will be repaired or replaced by MTD Consumer Group Inc according to subsection (4) below. Any such part repaired or replaced under warranty will be warranted for the remainder of the period prior to the first scheduled replacement point for the part.
4. Repair or replacement of any warranted part under the warranty provisions herein must be performed at a warranty station at no charge to the owner.
5. Notwithstanding the provisions herein, warranty services or repairs will be provided at all of our distribution centers that are franchised to service the subject engines or equipment.
6. The outdoor equipment owner will not be charged for diagnostic labor that is directly associated with diagnosis of a defective, emission-related warranted part, provided that such diagnostic work is performed at a warranty station.
7. MTD Consumer Group Inc is liable for damages to other engine or equipment components proximately caused by a failure under warranty of any warranted part.
8. Throughout the off-road engine and equipment warranty period stated above, MTD Consumer Group Inc will maintain a supply of warranted parts sufficient to meet the expected demand for such parts.

9. Any replacement part may be used in the performance of any warranty maintenance or repairs and must be provided without charge to the owner. Such use will not reduce the warranty obligations of MTD Consumer Group Inc.
10. Add-on or modified parts that are not exempted by the Air Resources Board may not be used. The use of any non-exempted add-on or modified parts by the ultimate purchaser will be grounds for disallowing a warranty claim. MTD Consumer Group Inc will not be liable to warrant failures of warranted parts caused by the use of a non-exempted add-on or modified part.

WARRANTED PARTS:

The repair or replacement of any warranted part otherwise eligible for warranty coverage may be excluded from such warranty coverage if MTD Consumer Group Inc demonstrates that the outdoor equipment has been abused, neglected, or improperly maintained, and that such abuse, neglect, or improper maintenance was the direct cause of the need for repair or replacement of the part. That notwithstanding, any adjustment of a component that has a factory installed, and properly operating, adjustment limiting device is still eligible for warranty coverage. Further, the coverage under this warranty extends only to parts that were present on the off-road equipment purchased.

The following emission warranty parts are covered (if applicable):

1. Fuel Metering System
 - Fuel pump
 - Fuel tank
2. Evaporative Control
 - Fuel hose
 - Fuel hose clamps
 - Tethered fuel cap
 - Carbon canister
 - Vapor lines

NOTE: If you require warranty service in Canada and your product was sold by MTD Products Limited within Canada to the retailer you purchased it from in Canada then the MTD Consumer Group Inc portion of this warranty will be honored by MTD Products Limited in Canada.

063015CN Rev. A

CUB CADET LLC

MANUFACTURER'S LIMITED WARRANTY FOR RESIDENTIAL ZERO-TURN ("RZT") MOWERS

IMPORTANT: To obtain warranty coverage owner must present an original proof of purchase and applicable maintenance records to the servicing dealer. Please see the operator's manual for information on required maintenance and service intervals.

The limited warranty set forth below is given by Cub Cadet LLC with respect to new merchandise purchased or leased and used in the United States and/or its territories and possessions, and by MTD Products Limited with respect to new merchandise purchased or leased and used in Canada and/or its territories and possessions (either entity respectively, "Cub Cadet").

Cub Cadet warrants this product (excluding its *Normal Wear Parts, Batteries and Attachments* as described below) against defects in material and workmanship for a period of three (3) years or one hundred twenty (120) operation hours, whichever comes first, commencing on the date of original retail purchase or lease and will, at its option, repair or replace, free of charge, any part found to be defective in materials or workmanship.

Normal Wear Parts are warranted to be free from defects in material and workmanship for a period of thirty (30) days from the date of original purchase or lease. Normal wear parts include, but are not limited to items such as: belts, blades, blade adapters, grass bags, rider deck wheels, seats, and tires.

Batteries have a one-year prorated limited warranty against defects in material and workmanship, with 100% replacement during the first three months. After three months, the battery replacement credit is based on the months remaining in the twelve (12) month period dating back to the original date of original sale or lease. Any replacement battery will be warranted only for the remainder of the original warranty period.

Attachments — Cub Cadet warrants attachments for this product against defects in material and workmanship for a period of one (1) year, commencing on the date of the attachment's original purchase or lease. Attachments include, but are not limited to items such as: grass collectors and mulch kits.

This limited warranty shall only apply if this product has been operated and maintained in accordance with the Operator's Manual furnished with the product, and has not been subject to misuse, abuse, neglect, accident, improper maintenance, alteration, vandalism, theft, fire, water, or damage because of other peril or natural disaster. Damage resulting from the installation or use of any part, accessory or attachment not approved by Cub Cadet for use with the product(s) covered by this manual will void your warranty as to any resulting damage. In addition, Cub Cadet may deny warranty coverage if the hour meter, or any part thereof, is altered, modified, disconnected or otherwise tampered with.

HOW TO OBTAIN SERVICE: Warranty service is available, WITH PROOF OF PURCHASE AND APPLICABLE MAINTENANCE RECORDS, through your local authorized service dealer. To locate the dealer in your area:

In the U.S.A.:

Check your Yellow Pages, or contact Cub Cadet LLC at P.O. Box 361131, Cleveland, Ohio 44136-0019, call 1-877-282- 8684 or log on to our website at www.cubcadet.com.

In Canada:

Contact MTD Products Limited, Kitchener, ON N2G 4J1, call 1-800-668-1238 or log on to our website at www.mtdcanada.com.

Without limiting the foregoing, this limited warranty does not provide coverage in the following cases:

- a. Routine maintenance items such as lubricants, filters, blade sharpening, tune-ups, brake adjustments, clutch adjustments, deck adjustments, and normal deterioration of the exterior finish due to use or exposure.
- b. Service completed by someone other than an authorized service dealer.
- c. Cub Cadet does not extend any warranty for products sold or exported outside of the United States and/or Canada, and their respective possessions and territories, except those sold through Cub Cadet's authorized channels of export distribution.
- d. Replacement parts and/or accessories that are not genuine Cub Cadet parts.
- e. Transportation charges and service calls.

There are no implied warranties, including without limitation any implied warranty of merchantability or fitness for a particular purpose. No warranties shall apply after the applicable period of express written warranty above. No other express warranties beyond those mentioned above, given by any person or entity, including a dealer or retailer, with respect to any product, shall bind Cub Cadet. The exclusive remedy is repair or replacement of the product as set forth above. The terms of this warranty provide the sole and exclusive remedy arising from the sale and/or lease of the products covered hereby. Cub Cadet shall not be liable for any incidental or consequential loss or damage including, without limitation, expenses incurred for substitute or replacement lawn care services or for rental expenses to temporarily replace a warranted product.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

In no event shall recovery of any kind be greater than the amount of the purchase price of the product sold. **Alteration of safety features of the product shall void this warranty.** You assume the risk and liability for loss, damage, or injury to you and your property and/or to others and their property arising out of the misuse or inability to use the product.

This limited warranty shall not extend to anyone other than the original purchaser or to the person for whom it was purchased as a gift.

HOW LOCAL LAWS RELATE TO THIS WARRANTY: This limited warranty gives you specific legal rights, and you may also have other rights that vary in different jurisdictions.

Cub Cadet LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019, Phone: 1-877-282-8684
MTD Products Limited, Kitchener, ON N2G 4J1, Phone: 1-800-668-1238

GARANTIE LIMITÉE DU FABRICANT DES TONDEUSES À RAYON DE BRAQUAGE ZÉRO (« RZT ») POUR UNE UTILISATION À DES FINS RÉSIDENIELLES

CUB CADET LLC

IMPORTANT : Pour faire honorer la garantie, le propriétaire doit présenter une preuve originale de l'achat et les relevés d'entretien correspondant à la tondeuse à la station technique. Les renseignements concernant les opérations et intervalles des entretiens requis se trouvent dans la notice d'utilisation de la tondeuse.

La garantie limitée qui est énoncée ci-dessous est offerte par Cub Cadet LLC pour toutes les marchandises neuves achetées et utilisées aux États-Unis, dans ses possessions et territoires, et par MTD Products Limited, pour toutes les marchandises achetées et utilisées au Canada et/ou ses territoires (« l'une ou l'autre entité respectivement appelée « Cub Cadet »).

Cub Cadet garantit que ce produit (à l'exception des pièces à usure normale, des batteries et les accessoires comme décrits ci-dessous) est exempt de tout vice de matière et de fabrication pour une durée de trois (3) ans ou cent vingt (120) heures de fonctionnement, selon ce qui survient d'abord, à compter de la date de l'achat initial et s'engage à réparer ou à remplacer, gratuitement et à son choix, toute pièce qui s'avère défectueuse en raison d'un vice de matière ou de fabrication.

Les pièces ou composants à *usure normale* sont garantis exempts de tout vice de matière et de fabrication pour une période de 30 jours à compter de la date d'achat. Les pièces et composants à usure normale comprennent, sans s'y limiter, les batteries, courroies, lames, adaptateurs de lame, sacs à herbe, roues du plateau de coupe, sièges, patins de souffluses, roues de frottement, lames de raclage, le caoutchouc de la tarrière et pneus.

Les *batteries* sont couvertes par une garantie limitée contre tout vice de matière et de fabrication pour une durée proportionnelle d'un an et elles seront remplacées gratuitement pendant les trois premiers mois. Après cette période, le crédit de remplacement sera proportionnel au nombre de mois restant dans la période de garantie de douze (12) mois à compter de la date initiale de l'achat ou de la location-bail. La batterie de remplacement est garantie pour le solde de la période de la garantie initiale.

Accessoires – Cub Cadet garantit que les accessoires pour ce produit sont exempts de tout vice de matière et de main d'œuvre pendant une période de une (1) ans, à compter de la date de l'achat ou du bail initial. Les accessoires comprennent, sans s'y limiter, les colleteurs d'herbe et les ensembles de déchiquetage.

Cette garantie limitée n'est applicable que si ce produit a été utilisé et entretenu conformément aux instructions de la notice d'utilisation qui l'accompagne. De plus, le produit ne doit pas avoir fait l'objet d'un emploi incorrect ou abusif, d'une négligence, d'un accident, d'un entretien incorrect, d'une modification, d'un acte de vandalisme, d'un vol, d'un incendie, d'une inondation ou de tout autre dégât causé par tout incident ou désastre naturel. Les dégâts causés par l'installation ou l'utilisation d'une pièce, d'un accessoire ou d'un équipement annexe, dont l'emploi avec le produit faisant l'objet de la notice d'utilisation n'est pas homologué par MTD, rendront la garantie nulle et non avenue. Cub Cadet peut en outre refuser d'honorer la garantie si le compteur d'heures, ou toute pièce du compteur d'heures, a fait l'objet d'un changement, d'une modification, a été débanché ou altéré d'une façon quelconque.

POUR FAIRE HONORER LA GARANTIE : Présentez UNE PREUVE D'ACHAT ET LES RELEVÉS D'ENTRETIEN CORRESPONDANTS, à la station technique agréée de votre localité. Pour localiser une station technique agréée ou un concessionnaire dans votre région :

Aux États-Unis : Consultez les Pages Jaunes ou adressez-vous à Cub Cadet

- Sans se limiter à ce qui précède, cette garantie ne couvre pas :
- Les articles d'entretien courant tels que les lubrifiants, filtres, aiguilles-plates de lame et révisions, les réglages de frein, de l'embrayage ou du plateau de coupe et la détérioration normale de la finition du fait de l'utilisation de la machine ou de son exposition aux intempéries.
 - L'entretien ou les réparations effectuées par quiconque autre qu'une station technique agréée.
 - Cub Cadet ne garantit pas les produits vendus ou exportés hors des États-Unis et/ou du Canada, de leurs possessions et territoires respectifs, sauf si ces produits ont été vendus par l'intermédiaire des services d'exportation de Cub Cadet.
 - Les pièces de rechange si elles ne sont pas des pièces Cub Cadet authentiques.
 - Les frais de transport des machines et de déplacement des techniciens.

Aucune garantie tacite ne s'applique, y compris sans s'y limiter, toute garantie tacite de qualité marchande ou d'adaptabilité dans un but particulier. Aucune garantie ne s'applique après la période de vigueur applicable de la garantie écrite ci-dessus. Aucune autre garantie expresse, à l'exception des stipulations ci-dessus, n'engage Cub Cadet même si elle est offerte par toute personne ou entité, y compris un concessionnaire/revendeur, pour n'importe quel produit. La réparation ou le remplacement du produit dans les conditions ci-dessus constitue le recours unique et exclusif à la disposition du client. Les stipulations énoncées dans cette garantie offrent le seul recours à la suite de la vente ou de la location-bail des produits couverts par cette garantie. Cub Cadet ne peut être tenue responsable pour toute perte ou tout dommage accessoire ou matériellement, sans s'y limiter, les frais de remplacement ou de substitution des services d'entretien des pelouses ou les frais de location pour remplacer temporairement un produit sous garantie.

Certaines juridictions ne permettent pas l'inclusion ou la restriction des dommages accessoires ou matériels ou une limite à la durée de la garantie tacite. Par conséquent, les exclusions ci-dessus peuvent ne pas s'appliquer dans votre situation.

Le rembourquement ou remplacement quel qu'il soit ne sera en aucun cas supérieur au montant du prix d'achat du produit vendu. **Toute modification des caractéristiques de sécurité rendra la garantie nulle et non avenue.** L'utilisateur assume tout risque et toute responsabilité en cas de perte, de dommage matériel ou de blessure résultant de l'utilisation incorrecte du produit ou de l'incapacité de l'employer.

Cette garantie limitée n'est offerte qu'à l'acheteur initial ou à la personne à laquelle le produit a été offert en cadeau.

LES LOIS LOCALES ET CETTE GARANTIE : Cette garantie limitée vous accorde des droits juridiques spécifiques et vous pouvez bénéficier d'autres droits qui varient selon les juridictions.

IMPORTANT : Le propriétaire doit présenter le reçu original pour faire honorer la garantie.

Cub Cadet LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019, Phone: 1-877-282-8684
MTD Products Limited, Kitchen, ON N2G 4J1, Phone: 1-800-668-1238

9. Any replacement part may be used in the performance of any warranty maintenance or repairs and must be provided without charge to the owner. Such use will not reduce the warranty obligations of MTD Consumer Group Inc.
10. Add-on or modified parts that are not exempted by the Air Resources Board may not be used. The use of any non-exempted add-on or modified parts by the ultimate purchaser will be grounds for disallowing a warranty claim. MTD Consumer Group Inc will not be liable to warrant failures of warranted parts caused by the use of a non-exempted add-on or modified part.

WARRANTED PARTS:

The repair or replacement of any warranted part otherwise eligible for warranty coverage may be excluded from such warranty coverage if MTD Consumer Group Inc demonstrates that the outdoor equipment has been abused, neglected, or improperly maintained, and that such abuse, neglect, or improper maintenance was the direct cause of the need for repair or replacement of the part. That notwithstanding, any adjustment of a component that has a factory installed, and properly operating, adjustment limiting device is still eligible for warranty coverage. Further, the coverage under this warranty extends only to parts that were present on the off-road equipment purchased. The following emission warranty parts are covered (if applicable):

1. Fuel Metering System
 - Fuel pump
 - Fuel tank
2. Evaporative Control
 - Fuel hose
 - Fuel hose clamps
 - Tethered fuel cap
 - Carbon canister
 - Vapor lines

NOTE: If you require warranty service in Canada and your product was sold by MTD Products Limited within Canada to the retailer you purchased it from in Canada then the MTD Consumer Group Inc portion of this warranty will be honored by MTD Products Limited in Canada.

FEDERAL and/or CALIFORNIA EMISSION CONTROL WARRANTY STATEMENT YOUR WARRANTY RIGHTS AND OBLIGATIONS

MTD Consumer Group Inc, the United States Environmental Protection Agency (EPA), and for those products certified for sale in the state of California, the California Air Resources Board (CARB) are pleased to explain the evaporative emission control system (ECS) warranty on your 2013-2014 small off-road equipment (outdoor equipment). In California, new outdoor equipment must be designed, built and equipped to meet the State's stringent anti-smog standards (in other states, outdoor equipment must be designed, built, and equipped to meet the U.S. EPA small off-road spark ignition engine regulations). MTD Consumer Group Inc must warrant the ECS on your outdoor equipment for the period of time listed below, provided there has been no abuse, neglect, or improper maintenance of the outdoor equipment.

Your ECS may include parts such as fuel tanks, fuel lines, fuel caps, valves, canisters, filters, vapor hoses, clamps, connectors, and other associated emission-related components.

Where a warrantable condition exists, MTD Consumer Group Inc will repair your outdoor equipment at no cost to you including diagnosis, parts, and labor.

MANUFACTURER'S WARRANTY COVERAGE:

This emission control system is warranted for two years. If any emission-related part on your outdoor equipment is defective, the part will be repaired or replaced by MTD Consumer Group Inc.

OWNER'S WARRANTY RESPONSIBILITIES:

As the outdoor equipment owner, you are responsible for performance of the required maintenance listed in your owner's manual. MTD Consumer Group Inc recommends that you retain all receipts covering maintenance on your outdoor equipment, but MTD Consumer Group Inc cannot deny warranty solely for the lack of receipts.

As the outdoor equipment owner, you should however be aware that MTD Consumer Group Inc may deny you warranty coverage if your outdoor equipment or a part has failed due to abuse, neglect, improper maintenance, or unapproved modifications.

You are responsible for presenting your outdoor equipment engine to MTD Consumer Group Inc's distribution center or service center as soon as the problem exists. The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days. If you have a question regarding your warranty coverage, you should contact the MTD Consumer Group Inc Service Department.

In the U.S.A.: at 1-800-800-7310 or at <http://support.mtdproducts.com>.

In Canada: at 1-800-668-1238 or at <http://www.mtdcanada.com>





GENERAL EMISSIONS WARRANTY COVERAGE:

MTD Consumer Group Inc warrants to the ultimate purchaser and each subsequent purchaser that the outdoor equipment is: (1) designed, built, and equipped so as to conform with all applicable regulations; and (2) free from defects in materials and workmanship that cause the failure of a warranted part for a period of two years.







The warranty period begins on the date the outdoor equipment is delivered to an ultimate purchaser or first placed into service.

Subject to certain conditions and exclusions as stated below, the warranty on emission-related parts is as follows:

1. Any warranted part that is not scheduled for replacement as required maintenance in the written instructions supplied is warranted for the warranty period stated above. If the part fails during the period of warranty coverage, the part will be repaired or replaced by MTD Consumer Group Inc according to subsection (4) below. Any such part repaired or replaced under warranty will be warranted for the remainder of the period.
2. Any warranted part that is scheduled only for regular inspection in the written instructions supplied is warranted for the warranty period stated above. Any such part repaired or replaced under warranty will be warranted for the remaining warranty period.
3. Any warranted part that is scheduled for replacement as required maintenance in the written instructions supplied is warranted for the period of time before the first scheduled replacement date for that part. If the part fails before the first scheduled replacement, the part will be repaired or replaced by MTD Consumer Group Inc according to subsection (4) below. Any such part repaired or replaced under warranty will be warranted for the remainder of the period prior to the first scheduled replacement point for the part.
4. Repair or replacement of any warranted part under the warranty provisions herein must be performed at a warranty station at no charge to the owner.
5. Notwithstanding the provisions herein, warranty services or repairs will be provided at all of our distribution centers that are franchised to service the subject engines or equipment.
6. The outdoor equipment owner will not be charged for diagnostic labor that is directly associated with diagnosis of a defective, emission-related warranted part, provided that such diagnostic work is performed at a warranty station.
7. MTD Consumer Group Inc is liable for damages to other engine or equipment components proximately caused by a failure under warranty of any warranted part.
8. Throughout the off-road engine and equipment warranty period stated above, MTD Consumer Group Inc will maintain a supply of warranted parts sufficient to meet the expected demand for such parts.

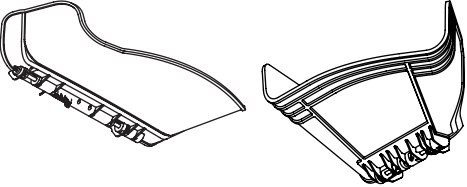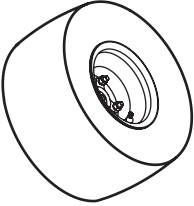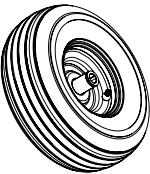No. de pièce et description	Component
946-01085A Câble de la volant de départ (avec Kawasaki)	
946-04352A Câble de l'obturateur (avec/ Kawasaki)	
925-2054A Clé du contact	
631-04349 Déflecteur complet, RZT L42 631-05057 Déflecteur complet, RZT L50 & RZT L54	
634-04293-0931 Ensemble de roue, RZT L42 634-04128-0931 Ensemble de roue, RZT L50 & RZT L54	
634-04711 Les roues pivotantes, RZT L42, RZT L50 & RZT L54	

REMARQUE: Vous pouvez télécharger un livret contenant la liste complète des pièces détachées adressées au «Service après-vente» à la page 2. Préparez le numéro de modèle et le numéro de série de votre machine. Vous les trouverez sur la plaque signalétique qui se trouve sous le siège. Voir les renseignements qui se trouvent à la page 2 pour localiser les numéros de modèle et de série de votre machine.

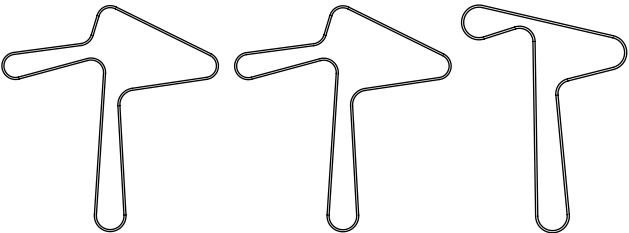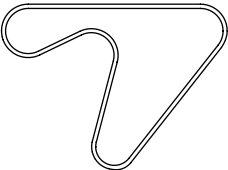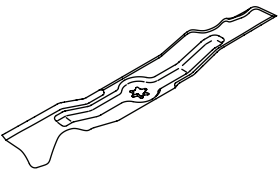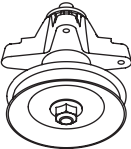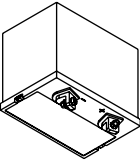Component		No. de pièce et description
		954-04033A 954-05008 954-04329 Courroie de plateau de coupe, RZT L42 Courroie de plateau de coupe, RZT L50 Courroie de plateau de coupe, RZT L54
		954-04317 Courroie d'entraînement
		942-04312 942-04053C 942-0677B Lame, RZT L42 Lame, RZT L50 Lame, RZT L54
		918-04822A 918-04125B 918-05137 Fusée de plateau de coupe, RZT L42 Fusée de plateau de coupe, RZT L50 Fusée de plateau de coupe, RZT L54
		734-04155 Roue de plateau de coupe
		925-1707D Batterie
		951-12428 Capuchon d'essence

REMARQUE: Vous pouvez télécharger un livret contenant la liste complète des pièces détachées adressées au «Service après-vente» à la page 2. Préparez le numéro de modèle et le numéro de série de votre machine. Vous les trouverez sur la plaque signalétique qui se trouve sous le siège. Voir les renseignements qui se trouvent à la page 2 pour localiser les numéros de modèle et de série de votre machine.

Problème	Cause	Solution
Vibrations excessives	1. La lame de coupe est desserrée ou déséquilibrée. 2. La lame est endommagée ou déformée.	1. Serrez la lame et la fusée. Équilibrez la lame. 2. Remplacez la lame.
La coupe est irrégulière	1. Plateau de coupe non équilibré correctement. 2. La lame est émoussée. 3. Pression inégale de pneu.	1. Faites le réglage latéral du plateau de coupe. 2. Aiguisiez ou remplacez la lame. 3. Vérifiez la pression de pneu dans chacun des quatre pneus.
La tondeuse ne déchiquette pas l'herbe (le cas échéant)	1. Vitesse du moteur trop bas. 2. L'herbe est mouillée. 3. L'herbe est trop haute. 4. La lame est émoussée.	1. Placez l'obturateur à la position FAST (rapide). 2. Ne tondez pas quand l'herbe est mouillée. Attendez qu'elle sèche. 3. Coupez l'herbe à un réglage élevé, puis tondez à nouveau à la hauteur voulue ou sur une largeur plus étroite. 4. Aiguisiez ou remplacez lame.

Accessoires et Équipement Annexe

Les accessoires et équipement annexe suivants peuvent être installés sur le tracteur RZT. Adressez-vous au concessionnaire ou au concessionnaire chez lequel vous avez acheté le tracteur pour tout renseignement concernant les prix et la disponibilité des accessoires.

Numéro de modèle	Description
19B70020100	Collecteur d'herbe, 42 po et 46 po avec pare-chocs
19B70004100	Collecteur d'herbe, 50 po avec pare-chocs
19A30006100	Ensemble de déchiquetage, 42 po
19A30005100	Ensemble de déchiquetage, 46 po
190-193-000	Ensemble de déchiquetage, 50 po
19A70031100	Garde moteur à l'arrière
490-850-B005	Outil de démontage la lame
490-290-0013	Pare-soleil
GDE-22258	32 oz. STA-BIL®

Entretien des lames



AVERTISSEMENT : Avant d'effectuer toute opération d'entretien, débrazez la prise de force, serrez le frein de stationnement, tournez la clé de contact à la position « OFF » (Arrêt) et enlevez la clé de contact. Faites très attention de ne pas vous couper avec les lames affûtées.

Les lames doivent toujours être bien affûtées. Affûtez les tranchants des lames de manière égale pour que les lames restent bien équilibrées et que le même angle d'affûtage soit conservé.

Si le tranchant d'une lame a déjà été aiguisé plusieurs fois, ou si une séparation du métal est visible, il est conseillé d'installer des lames neuves disponibles chez un concessionnaire agréé.

Démontez les lames comme suit :

1. Démontez le plateau de coupe du tracteur (voir la section Démontage du plateau de coupe à la page 28), puis basculez-le pour exposer les lames.
2. Avec une clé de 15/16es de po, tenez l'écrou à six pans sur le haut de la fusée en desserrant l'écrou à six pans qui retient la lame. Une cale en bois peut être placée entre l'habillage du plateau de coupe et le tranchant de la lame pour dégager l'écrou à six pans qui retient la lame. Voir laFigure 7-14.

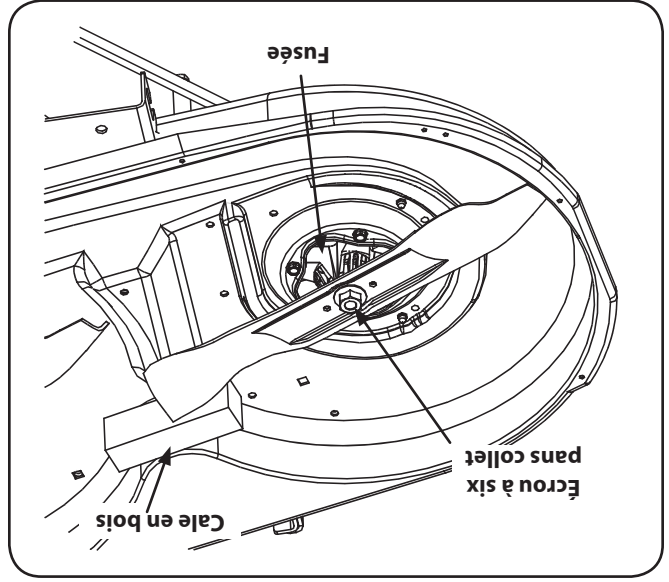


Figure 7-14

3. En remontant les lames, assurez-vous que les extrémités relevées pointent vers le haut du plateau de coupe.
4. Serrez l'écrou à bride à six pans sur la fusée de la lame à un couple de 70 pieds-livre à 90 pieds-livre.
5. Remontez le plateau de coupe (voir la section Installation du plateau de coupe à la page 30).

Changement de la courroie de transmission

Certaines pièces doivent être retirées et des outils spéciaux (clé pneumatique) doivent être utilisés pour remplacer les courroies de transmission du tracteur. Adressez-vous à une station technique agréée pour faire remplacer les courroies de transmission.

Déplacement rampant

Ceci décrit le déplacement très lent vers l'avant ou vers l'arrière du tracteur quand le moteur tourne à un ralenti élevé et que les leviers de direction sont au point mort. Si votre tondeuse « rampe », adressez-vous à une station technique agréée.

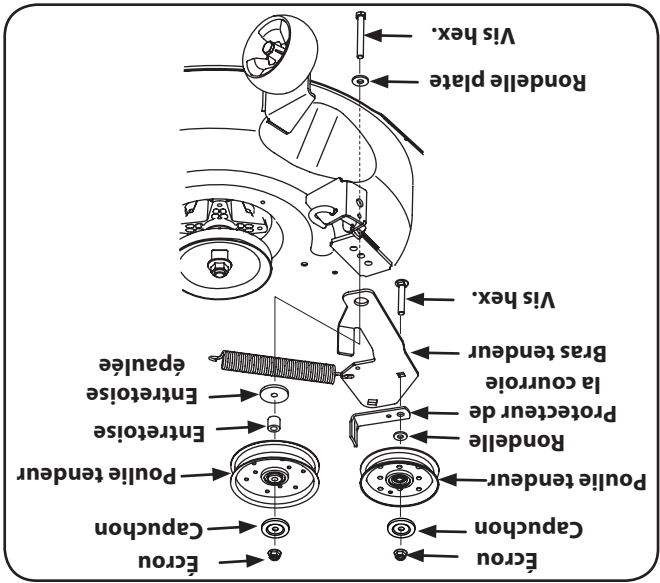


Figure 7-11

REMARQUE : Notez la position des carters des courroies pour garantir leur installation correcte plus tard.

4. Retirez la courroie des poulies à fusée.
5. Installez la courroie neuve sur les poulies à fusée, comme sur les illustrations. Remettez les carters des courroies en place. Voir la Figure 7-10.

6. Placez la courroie autour des poulies de tension enlevées au paragraphe 3, le côté en V vers l'intérieur. Ensuite, installez toute la boulonnerie et serrez le contre-écrou à bride pour bien maintenir l'ensemble. Voir la Figure 7-11.
7. Faites passer la courroie comme la Figure 7-10 le montre, puis remontez le plateau de coupe (Voir le chapitre « Installation du plateau de coupe », à la page 30).

Remplacement de la courroie 50 po et 54 po tablier

1. Démontez le plateau de coupe du tracteur (voir la section Démontage du plateau de coupe à la page 28).
2. Enlevez les vis hex, taraudeuses qui maintiennent les carters des courroies en place. Voir la Figure 7-12.

3. Démontez les deux poulies de tension en enlevant les vis hex, et les contre-écrous à bride qui les maintiennent sur le plateau de coupe et le bras de tension. Voir la Figure 7-13. Faites attention de ne pas perdre la boulonnerie en retirant la vis hex, et le contre-écrou à bride.

REMARQUE : Notez la position des carters des courroies pour garantir leur installation correcte plus tard.

4. Retirez la courroie des poulies à fusée.
5. Installez la courroie neuve sur les poulies à fusée, comme sur les illustrations. Remettez les carters des courroies en place. Voir la Figure 7-12.

6. Placez la courroie autour des poulies de tension enlevées au paragraphe 3, le côté en V vers l'intérieur. Ensuite, installez toute la boulonnerie et serrez le contre-écrou à bride pour bien maintenir l'ensemble. Voir la Figure 7-13.

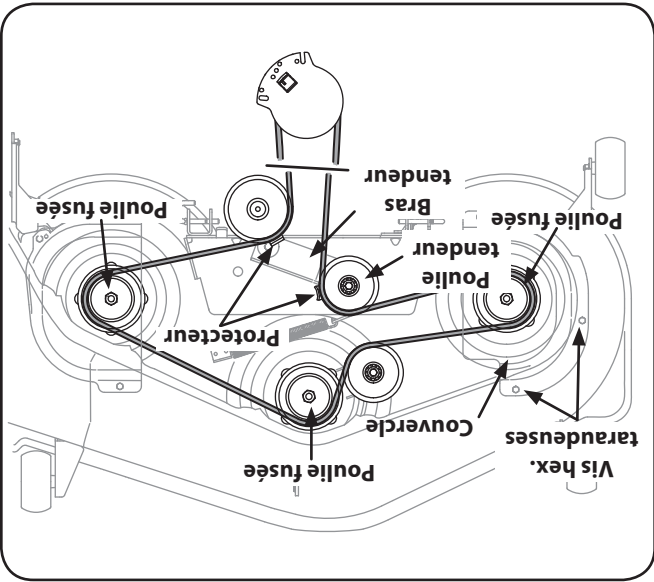


Figure 7-12

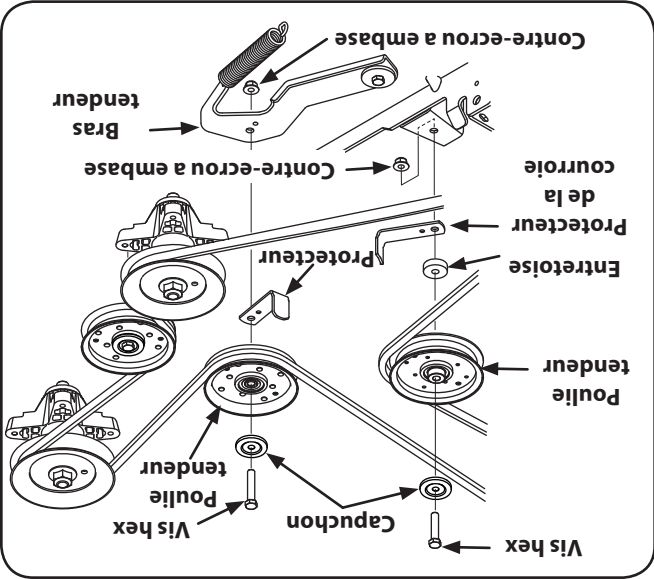


Figure 7-13

7. Faites passer la courroie comme la Figure 7-12 le montre, puis remontez le plateau de coupe (Voir le chapitre « Installation du plateau de coupe », à la page 30).

Remplacemement de la courroie Plateau de coupe de 42 po

1. Démontez le plateau de coupe du tracteur (voir le chapitre « Démontage du plateau de coupe » à la page 28).
2. Enlevez les vis hex. taraudeuses qui maintiennent les carters des courroies en place. Voir la Figure 7-8.

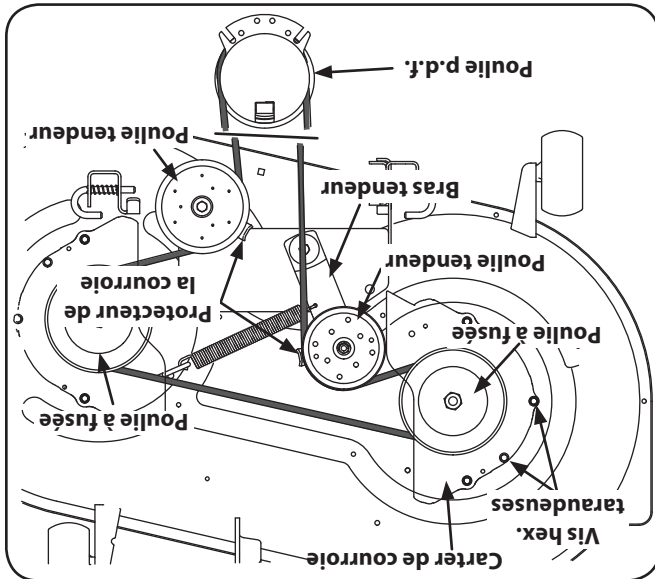


Figure 7-8

3. Démontez les deux poulies de tension en enlevant les vis hex. et les contre-écrous à bride qui les maintiennent sur le plateau de coupe et le bras de tension. Voir la Figure 7-9. Faites attention de ne pas perdre la boulonnerie en retirant la vis hex. et le contre-écrou à bride.

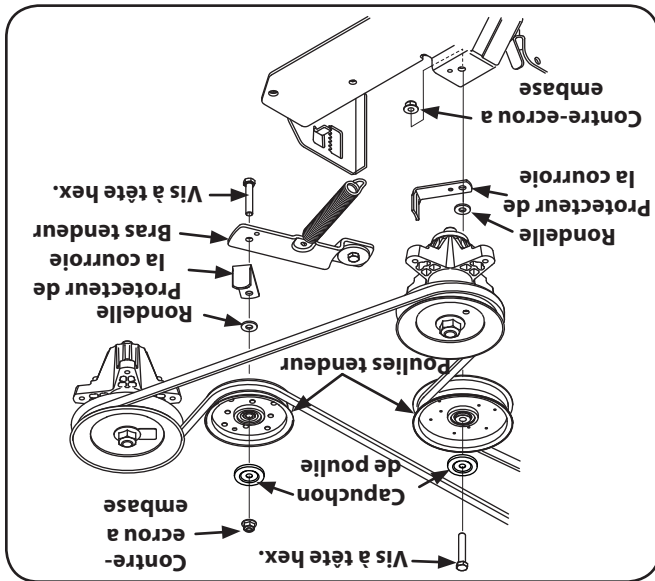


Figure 7-9

REMARQUE : Notez la position des carters des courroies pour garantir leur installation correcte plus tard.

Remplacemement de la courroie Plateau de coupe de 46 po

1. Démontez le plateau de coupe du tracteur (voir le chapitre « Démontage du plateau de coupe » à la page 28).
2. Enlevez les vis hex. taraudeuses qui maintiennent les carters des courroies en place. Voir la Figure 7-10.

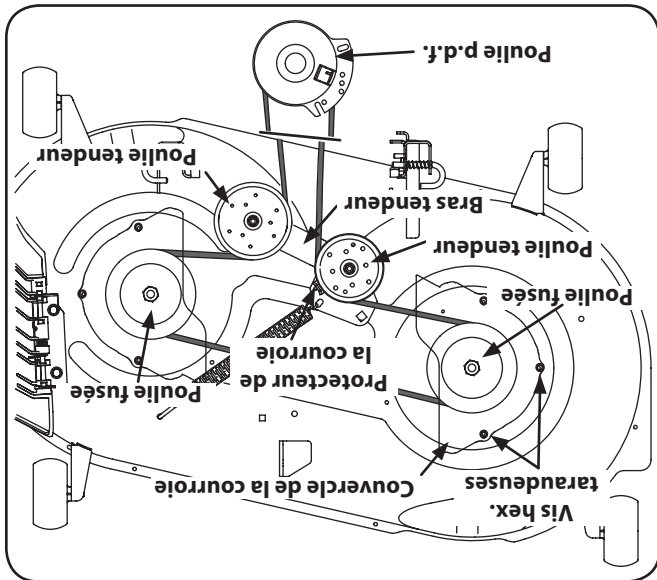


Figure 7-10

3. Démontez les deux poulies de tension en enlevant les vis hex. et les contre-écrous à bride qui les maintiennent sur le plateau de coupe et le bras de tension. Voir la Figure 7-11. Faites attention de ne pas perdre la boulonnerie en retirant la vis hex. et le contre-écrou à bride.

6. Sortez la goupille fendue de la tige de relevage avant du plateau de coupe qui maintient celle-ci sur le plateau de coupe. Voir la figure 7-6. Dégagez la tige de relevage du plateau de coupe du crochet de support avant.

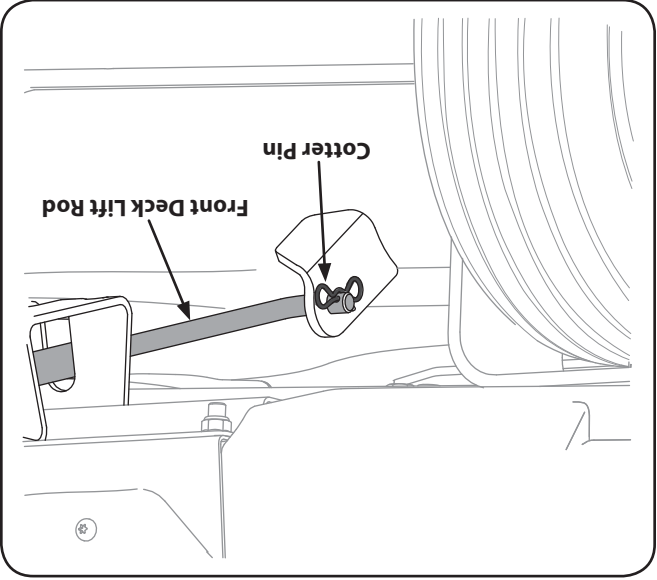


Figure 7-6

7. Localisez les goupilles de soutien de droite et de gauche du plateau de coupe de chaque côté du plateau de coupe. Sortez les goupilles et dégagez les bras de relevage droit et gauche du plateau de coupe. Voir la Figure 7-7.

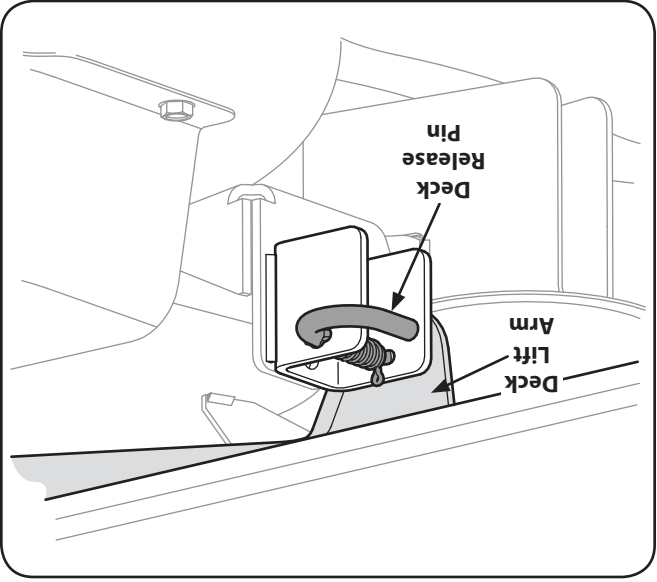


Figure 7-7

8. Placez la manette de relevage du plateau de coupe à la position de coupe la plus haute et dégagez le plateau de coupe du tracteur.

Procédez comme suit pour installer le plateau de coupe :

1. Placez les manette de relevage à la position la plus haute. Voir la figure 7-2.

2. Glissez la tablier sous le tracteur sur le côté droit du tracteur alignant les supports d'accrochage et les bras de relevage du plateau de coupe.
3. Une fois que le pont est sous le tracteur, déplacez la manette de relevage à la position la plus basse position de tonte.

REMARQUE: Pour aligner les supports correctement, il peut être nécessaire de placer un petit bloc de bois sous chaque côté du tablier.

4. Sortez les goupilles de soutien et manœuvrez le plateau de coupe pour aligner les trous des bras de relevage avec les goupilles. Voir la Figure 7-6.
5. Poussez alors chaque goupille dans les bras de relevage pour maintenir ceux-ci dans les fentes des supports d'accrochage arrière.

6. Réinstallez la tige de relevage avant du plateau de coupe et maintenez-la en place avec la goupille fendue. Voir la figure 7-6.

7. Vérifiez que la courroie trapézoïdale passe bien sur les poulies à fusée du plateau de coupe, puis amenez la courroie vers l'arrière, sous le châssis, et au-dessus des deux tubes des transmissions, de la poulie de prise de force sur la partie inférieure du moteur.

8. Utilisez la manette de relevage du plateau de coupe pour relever celui-ci à la position la plus haute qui procure la position la plus horizontale de la courroie entre les poulies de tension du plateau de coupe et la poulie de la prise de force à la base du moteur.

9. Vérifiez que la courroie trapézoïdale passe bien sur les poulies à fusée du plateau de coupe et que l'arrière de la courroie est bien appuyé contre les poulies de tension fixe et mobile. Voir la figure 7-3.
10. Placez-vous derrière le tracteur face à l'avant et vérifiez que la courroie n'est pas tordue, puis tirez la courroie vers la poulie de la prise de force.

AVERTISSEMENT : Faites très attention de ne pas vous pincer les doigts en dégageant la courroie de la poulie de la prise de force.



11. Tirez le côté droit de la courroie vers l'arrière et placez le côté en V de la courroie dans la gorge avant droite de la poulie de la prise de force. Voir la Figure 7-5.
12. Tenez la courroie et la poulie et faites tourner la poulie vers la gauche (Voir la Figure 7-5). Continuez à tenir et à faire tourner la poulie et la courroie jusqu'à ce que la courroie soit complètement installée sur la poulie de la prise de force.

REMARQUE: Avant d'utiliser le tracteur, vérifiez que la courroie est installée correctement.

Relâchement de la tension de la courroie avec la poulie de

tension

1. Utilisez la manette de relevage du plateau de coupe pour relever celui-ci à la position la plus haute qui procure la position la plus horizontale de la courroie entre les poulies de tension du plateau de coupe et la poulie de la prise de force à la base du moteur. Voir la Figure 7-3.

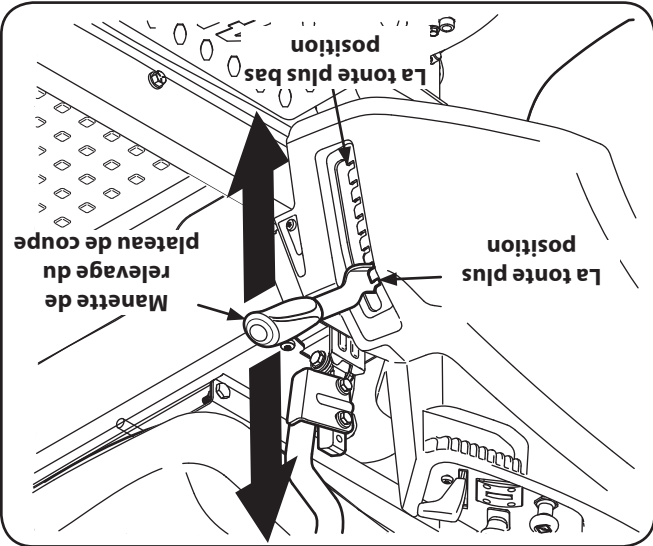


Figure 7-3

2. Du milieu du tracteur, faites pivoter le support de la poulie de tension et la poulie de tension mobile vers l'arrière pour l'éloigner suffisamment de l'arrière de la courroie et ainsi dégager la courroie de la poulie de tension. Voir la Figure 7-4.

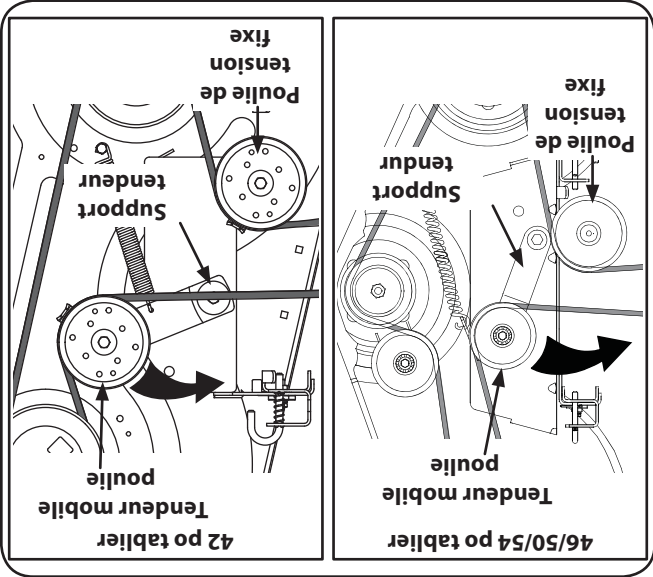


Figure 7-4

3. De l'arrière et par le dessous du tracteur, dégagez la courroie de la poulie de la prise de force sur la base du moteur.

Dégagement de la courroie de la poulie de la prise de force

1. Utilisez la manette de relevage du plateau de coupe pour relever celui-ci à la position la plus haute qui procure la position la plus horizontale de la courroie entre les poulies de tension du plateau de coupe et la poulie de la prise de force à la base du moteur.

2. Placez-vous derrière le tracteur face à l'avant et prenez la courroie, sous le tracteur, à l'avant de la poulie de la prise de force.



AVERTISSEMENT : Faites très attention de ne pas vous pincer les doigts en dégageant la courroie de la poulie de la prise de force.

3. Abaissez le côté gauche de la courroie vers l'arrière tout en tournant manuellement la poulie de la prise de force vers la droite jusqu'à ce que la courroie sorte de la gorge inférieure de la poulie.

REMARQUE : Si vous tirez sur le côté droit de la courroie, la poulie va tourner vers la gauche.

4. Tenez la courroie et continuez à tourner la poulie de la prise de force jusqu'à ce que la courroie soit complètement dégagée de la poulie. Voir la Figure 7-5.

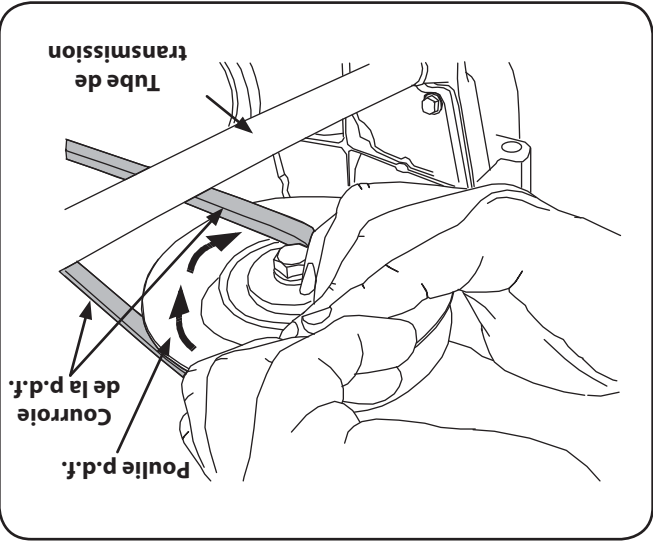


Figure 7-5

5. Abaissez le plateau de coupe au sol avec la manette de relevage du plateau. Voir la Figure 7-3.

Démontage de la batterie

AVERTISSEMENT : Les bornes et les accessoires de la batterie contiennent du plomb et des composantes de plomb. Lavez-vous les mains après avoir manipulé une batterie.



Démontage de la batterie

1. Enlevez la vis à rondelle hex. qui maintient le support de retenue de la batterie sur le châssis. Basculez le support de la batterie sous le siège du châssis. Pour la démonter :
- 7-1.

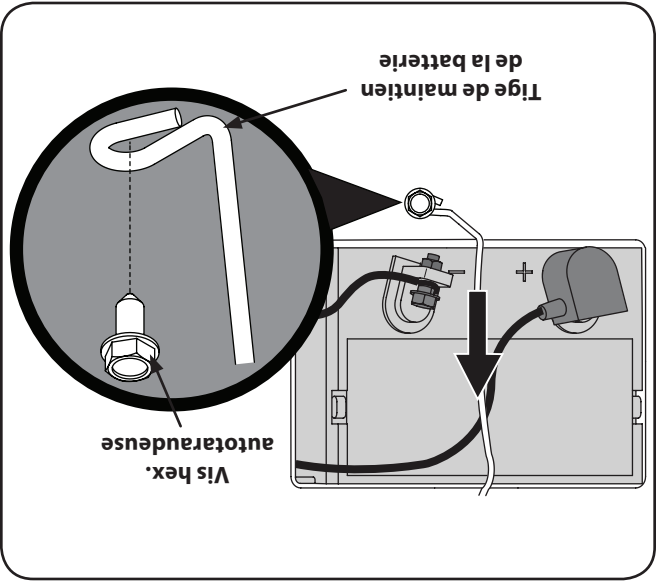


Figure 7-1

2. Enlevez la vis à chapeau hex. et l'écrou Sems qui retiennent le câble négatif noir et éloignez ce dernier de la borne négative (NEG.) de la batterie.
3. Enlevez la vis à chapeau hex. et l'écrou Sems qui retiennent le câble positif rouge sur la borne positive (POS.).
4. Dégagez la batterie du tracteur.
5. Installez la batterie en procédant dans l'ordre inverse.
- AVERTISSEMENT**: Branchez toujours le câble positif de la batterie avant de brancher le câble négatif pour éviter toute étincelle et blessure possible en cas de court-circuit provoqué par le contact des outils utilisés pour brancher les câbles avec le tracteur.



Charge de la batterie

- Testez et, au besoin, rechargez la batterie si le tracteur a été remis pendant une période prolongée.
- Un voltmètre doit donner un relevé de 12,6 volts (C. C.) ou plus aux bornes de la batterie. See Figure 7-2.

Relevé du voltmètre	Charge	Durée de charge
12,7	100%	Charge complète
12,4	75%	90 minutes
12,2	50%	180 minutes
12,0	25%	280 minutes

Figure 7-2

- Chargez la batterie avec un chargeur de 12 volts à un régime de charge de 10 A MAXIMUM.

Entretien du système électrique

Un fusible protège le système électrique du tracteur contre tout dégât provoqué par un ampérage excessif. Utilisez toujours un fusible de la même capacité. Si le système électrique ne fonctionne pas, vérifiez si un fusible a sauté.

Si des fusibles sautent fréquemment, faites vérifier le système électrique par le concessionnaire local.

Relais et commutateurs

Le système électrique compte plusieurs commutateurs de sécurité. Si l'une des fonctions du système de sécurité mentionnée plus haut ne fonctionne pas correctement, faites vérifier le système électrique par le concessionnaire local.

Démontage du plateau de coupe

Procédez comme suit :

- Placez le tracteur sur une surface plane, débrayez la prise de force, arrêtez le moteur et serrez le frein de stationnement.
 - Positionnez les roues de guidage du plateau de coupe à la position la plus haute (plateau de coupe à la plus basse position).
 - Démontez la courroie trapézoïdale de la poulie de la prise de force, qui se trouve sur le fond du moteur. Vous pouvez procéder de deux façons différentes.
- AVERTISSEMENT** : Le silencieux à l'arrière du tracteur peut être très chaud et causer des brûlures graves. Faites très attention en travaillant près du silencieux ou attendez que le silencieux ait complètement refroidi avant de démonter la courroie.



Préparation de la tondeuse à siège après le remisage

1. Vérifiez le niveau de l'huile à moteur.
2. Rechargez complètement la batterie, enlevez les cales qui se trouvent sous les roues et gonflez les pneus à la pression recommandée.
3. Débranchez les bougies et essayez-les. Faites tourner le moteur avec le démarreur pour évacuer l'excès d'huile des bougies par les trous des bougies. Remettez les bougies en place et rebranchez les fils.
4. Si le réservoir d'essence a été vidé avant le remisage, refaites le plein avec une essence propre et fraîche.
5. Vérifiez le niveau de l'huile à moteur dans le carter et dans le réservoir de l'huile hydraulique.
6. Mettez le moteur en marche et laissez-le tourner au ralenti pendant quelques minutes pour vous assurer qu'il fonctionne normalement.
7. Utilisez la tondeuse à siège sans charger son moteur pour vous assurer que tous les circuits fonctionnent correctement.

1. Changez l'huile à moteur et le filtre à huile selon les instructions fournies dans le chapitre « Service et Entretien » de cette notice d'utilisation.



AVERTISSEMENT: S'il reste du carburant dans le réservoir, ne remisez jamais la tondeuse à siège à l'intérieur ou dans un local mal aéré, en présence d'une flamme nue, d'étincelles ou d'une veilleuse comme celle d'un chauffe-d'eau, d'un calorifère, d'un sèche-linge ou d'un autre appareil à gaz.

2. Consultez la notice d'utilisation du moteur pour tout ce qui concerne l'entretien du moteur.

3. Les moteurs remisés pour une période de 30 à 90 jours devront être traités avec un agent de stabilisation de l'essence et un moteur remisé pendant plus de 30 jours doit être vidé de tout carburant pour empêcher toute détérioration et toute formation de gomme dans les conduites d'essence ou sur les pièces principales du carburateur. Si l'essence dans le moteur se détériore pendant le remisage, il sera peut-être nécessaire de faire examiner, et peut-être remplacer, le carburateur et les autres pièces par une station technique.



AVERTISSEMENT: Videz le carburant à l'extérieur dans un récipient homologué, à distance de toute flamme nue. Assurez-vous que le moteur a refroidi. Ne fumez pas et éteignez toute source de chaleur.

4. Démontez les bougies et versez une once d'huile à moteur dans chaque cylindre. Tournez manuellement le moteur plusieurs fois pour bien répartir l'huile. Remettez les bougies en place.

5. Nettoyez le moteur et la tondeuse à siège. Voir la section « Système de nettoyage du plateau de coupe ».

IMPORTANT : N'utilisez pas un appareil de nettoyage sous pression ou un boyau d'arrosage pour nettoyer votre unité.

qui Ceci risque d'endommager les roulements ou le moteur. L'emploi d'eau peut raccourcir la durée de vie du moteur et rendre son entretien plus difficile.

6. Aiguisiez les lames pour que la tondeuse soit prête pour la saison prochaine.

7. Protégez les surfaces métalliques. Retouchez les éraflures avec une peinture vaporisée appropriée. Appliquez une huile antirouille sur toute surface non peinte, y compris les poulies et les lames. (Faites attention de ne pas mettre de l'huile sur les courroies de la transmission.)

8. Nettoyez et chargez complètement la batterie, puis débranchez le câble négatif de la batterie pour empêcher la batterie pendant le remisage.

REMARQUE : Démontez la batterie si elle risque d'être exposée à des températures inférieures à 0°C pendant une période prolongée. Remisez-la dans un local sec à une température supérieure à 0°C.

9. Lubrifiez tous les points de lubrification.

10. Relevez la tondeuse à siège et remisez-la sur des cales pour que son poids ne repose pas sur les pneus.

2. Insérez la vis à épaulement dans l'un des quatre trous de l'indicateur qui assureront un dégagement de ¼ à ½ po du sol.

3. Prenez note du trou de repérage de la roue correctement ajustée et placez les autres roues de guidage à la même position respective sur les autres supports.

Ajustement des rouleaux arrière du plateau de coupe (le cas échéant)

Les rouleaux arrière du plateau de coupe peuvent être placés à la position haute ou basse.

La position des rouleaux arrière ne change généralement pas. À la position inférieure, les rouleaux touchent l'herbe. À la position supérieure, soit en position de remisage, ils ne roulent pas ou peu dans l'herbe. Pour modifier la position des rouleaux :

1. Dégagez la goupille fendue sur le côté droit de l'arbre des rouleaux. Voir la Figure 6-7.

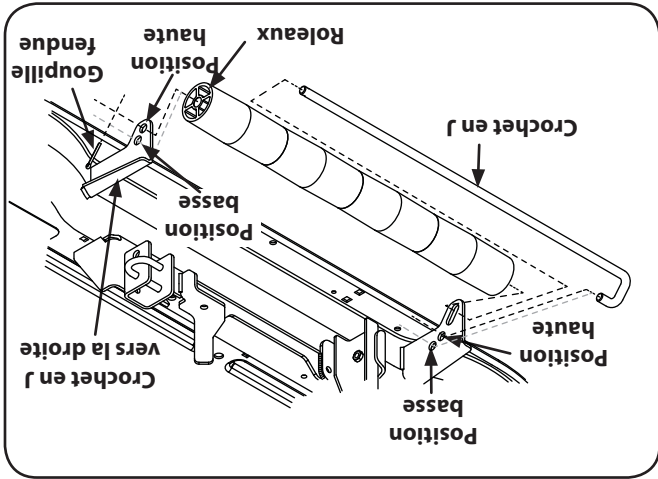


Figure 6-7

2. Glissez le crochet en J vers la gauche et dégagez le rouleau de l'arbre quand l'arbre est complètement hors de son support gauche. Voir la figure 6-7.

3. Insérez le crochet en J dans le trou du support du rouleau. Glissez le rouleau sur l'arbre en déplaçant le crochet en J vers la droite.

4. Glissez le crochet en J à la position voulue sur le support du rouleau droit, alignez l'extrémité courbée du crochet en J avec la position voulue et maintenez en place avec la goupille fendue.

Hors saison entreposage

Remisage de la tondeuse à siège

Si vous ne prévoyez pas d'utiliser la tondeuse à siège pendant une période prolongée (de 30 jours à 6 mois environ), il est recommandé de bien la préparer avant de la remiser dans un local sec et bien protégé. Si elle doit être remise à l'extérieur, recouvrez-la (ainsi que ses pneus) pour la protéger contre les intempéries. Suivez les instructions ci-dessous détaillant la préparation nécessaire avant de remiser la tondeuse à siège.

4. Utilisez une clé pour relever ou abaisser le côté gauche du plateau de coupe en tournant la roulette de réglage. Voir la Figure 6-5.

Le plateau de coupe est de niveau quand les mesures prises à la pointe des lames sont égales. Resserrez le boulon hex. sur le support du crochet avant gauche quand le bon ajustement est obtenu.

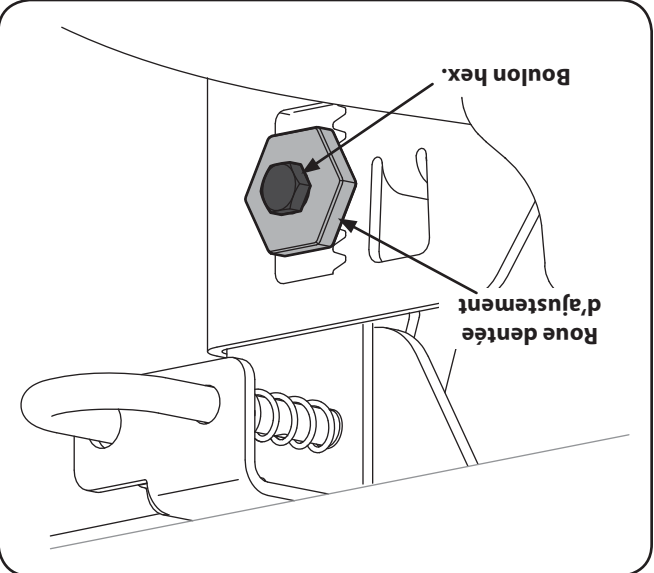


Figure 6-4
Mise à niveau d'avant en arrière

REMARQUE: Vérifiez la pression des pneus du tracteur avant de mettre le plateau de coupe de niveau. Reportez-vous à Pneus à la page 22 pour plus d'informations concernant la pression des pneus. Mettez toujours le plateau de niveau de chaque côté avant de mettre l'avant/arrière de niveau.

L'avant du plateau de coupe doit se trouver entre $\frac{1}{4}$ de po - $\frac{3}{8}$ de po plus bas que l'arrière. Ajustez comme suit :

1. Stationnez le tracteur sur une surface stable et plane et positionnez la manette de relevage du plateau de coupe dans l'encoche centrale.

2. Tournez la lame la plus proche de la goulotte d'éjection pour qu'elle soit parallèle au tracteur.
3. Mesurez la distance de l'extrémité avant de la lame au sol et l'extrémité arrière de la lame au sol. Le premier relevé doit mesurer de $\frac{1}{4}$ à $\frac{3}{8}$ des po de moins que le deuxième.
4. Déterminez la distance approximative nécessaire pour un bon ajustement, puis passez à l'étape suivante si besoin est.
5. Utilisez une clé pour relever ou abaisser l'avant du plateau de coupe en tournant le contre-écrou sur la tige de relevage avant du plateau de coupe. Voir la Figure 6-5.
6. Le plateau de coupe est de niveau lorsque l'extrémité avant de la lame est $\frac{1}{4}$ po plus bas que l'extrémité arrière. Resserrez le boulon hex. sur le crochet de support arrière gauche du plateau de coupe quand le plateau est de niveau.

Réglage des roues de guidage



AVERTISSEMENT: Éloignez vos pieds et mains de l'ouverture de la goulotte d'éjection sur le plateau de coupe.

Les roues de guidage n'arrachent pas l'herbe et ne sont pas conçues pour supporter le poids du plateau de coupe. La position des roues de guidage doit se trouver entre $\frac{1}{4}$ et $\frac{1}{2}$ po environ du sol quand le plateau est réglé à la position de coupe désirée.

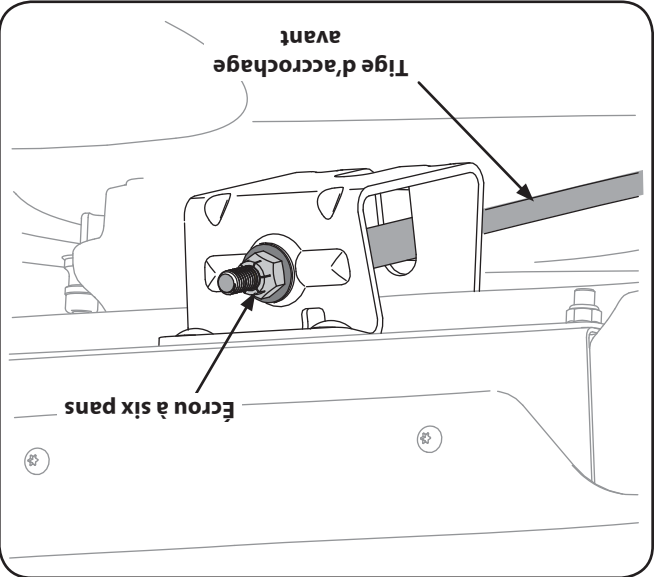


Figure 6-5

Utilisez la manette de relevage du plateau pour placer le plateau de coupe à la hauteur voulue, puis vérifiez les roues de guidage et ajustez comme suit :

1. Le plateau de coupe étant à la hauteur désirée, vérifiez la distance entre les roues de guidage et le sol. Relevez les roues de guidage si elles sont proches du sol ou si elles le touchent. Si les roues de guidage sont trop hautes, abaissez-les.

Enlevez le contre-écrou qui maintient l'une des vis à épaulement sur le plateau de coupe. Démontez la roue de guidage et la vis à épaulement. Voir la Figure 6-6.

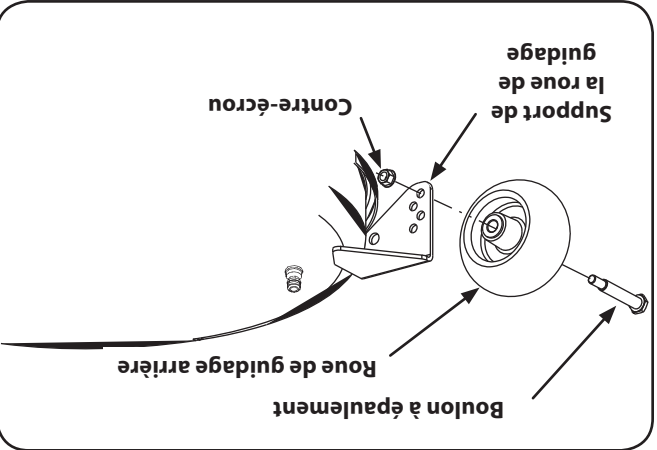


Figure 6-6

3. Nettoyez le moteur et tout le tracteur.
6. Chargez complètement la batterie, puis débranchez le câble négatif noir à la batterie pour l'empêcher de se décharger. Rechargez périodiquement la batterie pendant la période de remisage.
- REMARQUE :** Retirez la batterie si elle doit rester pendant des périodes prolongées à une température inférieure à 0°C. Gardez-la dans un local frais et sec où la température ne tombera pas en dessous de 0°C.
7. Lubrifiez tous les points de lubrification.
- REMARQUE :** Nous recommandons l'emploi d'un appareil de nettoyage sous pression ou d'un boyaux d'arrosage pour nettoyer le tracteur. Les composants électriques, fusées, poulies, roulements ou le moteur risquent d'être endommagés. L'emploi d'eau peut raccourcir la durée de vie du tracteur et rendre son entretien plus difficile.

Régages



AVERTISSEMENT! Arrêtez le moteur, enlevez la clé d'allumage et serrez le frein de stationnement avant de faire des réglages. Protégez vos mains en utilisant des gants épais en manipulant les lames.

Réglage du siège

Pour ajuster la position du siège consultez le chapitre « Assemblage et Montage ».

Ajustement des leviers de direction droit et gauche

Il est possible d'ajuster les positions verticale et horizontale des leviers de direction pour assurer le confort du conducteur. Ils peuvent être réglés à deux hauteurs différentes ou être avancés ou reculés en fonction de la fente aménagée dans le support de montage du levier.

Pour ajuster la hauteur des leviers de direction, procédez comme suit :

1. Démontez la vis hex. supérieure et la rondelle plate qui maintiennent le levier sur le support de pivotement.
 2. Retenez le levier de direction pour l'empêcher de tomber et enlevez la vis hex. et la rondelle plate de la base du levier de conduite et du bras inférieur. Voir la Figure 6-3.
 3. Repositionnez le levier de direction pour l'aligner avec les autres trous du bras inférieur et insérez la vis hex. à travers la rondelle plate et le bras inférieur. Serrez bien la vis.
 3. Enfoncez la vis hex. dans la rondelle plate puis à travers la fente du levier de direction et le bras inférieur. Ne serrez pas encore à fond.
 4. Si vous voulez ajuster la position horizontale des leviers, passez au paragraphe suivant. Sinon, serrez la vis hex.
 - Procédez comme suit pour ajuster la position horizontale des leviers de direction:
 5. Si elle n'est pas déjà desserrée, desserrez la vis hex. et tournez le levier de direction vers l'avant ou vers l'arrière, à la position voulue. Voir la Figure 6-3.
- REMARQUE :** Si le levier est trop serré et ne bouge pas, desserrez un peu la vis hex. à la base du levier de direction.

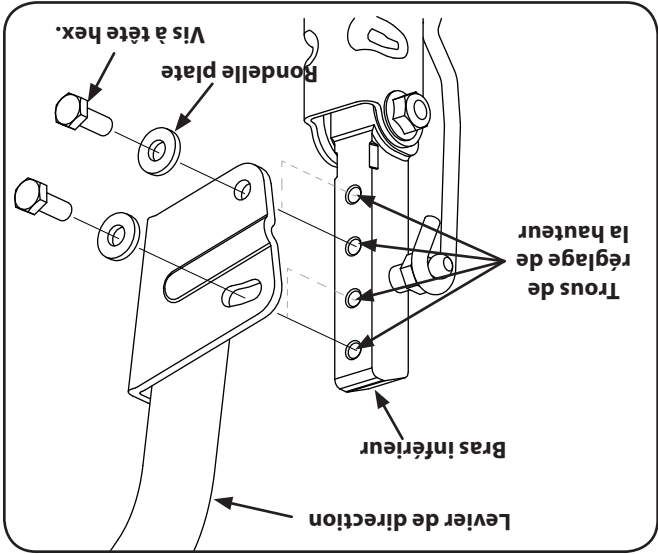


Figure 6-3

6. Serrez la vis hex. pour maintenir le levier de direction à la position voulue.
7. Répétez les étapes ci-dessus pour ajuster l'autre levier à la même position. Les deux leviers doivent être au même niveau au point mort.

Mise à niveau du plateau de coupe

REMARQUE : Vérifiez la pression des pneus du tracteur avant de mettre le plateau de coupe de niveau. Consultez les renseignements concernant la pression des pneus.

AVERTISSEMENT! Arrêtez le moteur, enlevez la clé d'allumage et serrez le frein de stationnement avant de faire des réglages. Protégez vos mains en utilisant des gants épais en manipulant les lames.



Mise à niveau latérale

REMARQUE : Vérifiez la pression des pneus du tracteur avant de mettre le plateau de coupe de niveau. Consultez les renseignements concernant la pression des pneus. Mettez toujours le plateau de niveau de chaque côté avant de mettre l'avant/arrière de niveau.

Si le plateau de coupe paraît tondre de façon inégale, il faudra peut-être effectuer un réglage latéral comme suit :

1. Placez le tracteur sur une surface plane et ferme, placez la manette de relevage du plateau de coupe dans l'encoche correspondant à la position intermédiaire et faites tourner les deux lames pour qu'elles soient perpendiculaires au tracteur.

2. Mesurez la distance entre l'extrémité extérieure de la lame gauche et le sol et la distance entre l'extrémité extérieure droite et le sol. Les distances doivent être les mêmes. Dans le cas contraire, procédez comme suit :

3. Desserrez, sans le retirer, le boulon hex. sur le crochet de support gauche arrière du plateau de coupe. Voir la Figure 6-4.

REMARQUE : Le crochet de support du plateau de coupe arrière droit ne peut pas être ajusté et il sert à faciliter l'ajustement des autres crochets de support.

Remisage de la batterie

1. Si le tracteur doit être remisé pour une période prolongée, débranchez le câble négatif de la batterie. Il n'est toutefois pas nécessaire de retirer la batterie.

2. Toutes les batteries perdent leur charge quand elles sont remises. Gardez l'extérieur de la batterie propre, surtout le dessus. Une batterie sale se décharge plus vite.
3. La batterie doit être remisee avec une charge complète. Une batterie à plat peut geler plus rapidement qu'une batterie chargée. Une batterie chargée est plus facile à remisé à des températures froides qu'à des températures élevées.
4. Rechargez la batterie avant de la remettre en service. Le tracteur peut démarrer, mais le système de charge du moteur ne rechargera pas complètement la batterie.

Utilisation des tiges de dérivation de la transmission

Si pour une raison quelconque, le tracteur n'avance pas ou si vous désirez déplacer le tracteur, les deux transmissions hydrostatiques sont munies de tiges de dérivation qui vous permettront de déplacer le tracteur manuellement sur de courtes distances.

AVERTISSEMENT : Ne remorquez jamais le tracteur même si les tiges de dérivation sont embrayées. Ceci peut causer des dégâts graves aux transmissions.

5. Placez-vous derrière le tracteur pour localiser les tiges de dérivation de la transmission qui se trouvent sur l'intérieur des deux roues arrière. Voir la Figure 6-2.

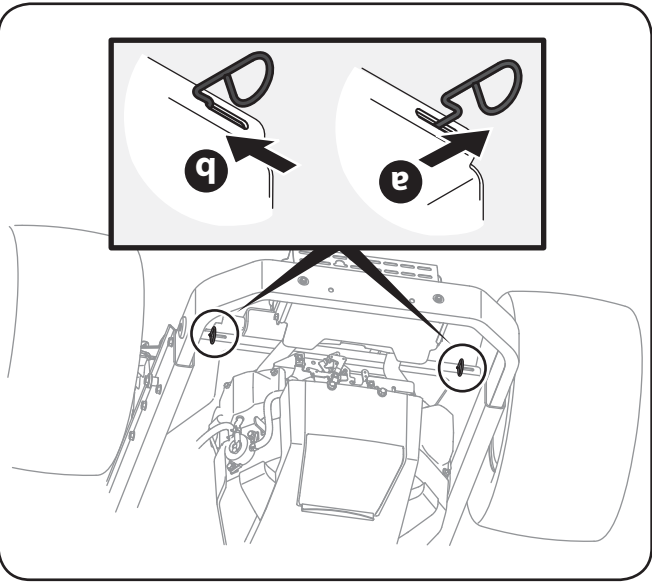


Figure 6-2

6. Embrayez les tiges de dérivation de la transmission de chaque côté du tracteur pour déplacer celui-ci sans le mettre en marche. Ces tiges se trouvent sur l'arrière du tracteur, sur l'intérieur de chaque roue arrière. Pour embrayer la tige de dérivation, tirez-la vers l'extérieur (a) et vers la droite (b) pour la bloquer. Voir la Figure 6-2.

REMARQUE: Le tracteur n'avancera pas si les tiges de dérivation sont embrayées.

7. Débrayez les tiges en inversant a et b après avoir déplacé le tracteur. Voir la Figure 6-2.

Transmission hydrostatique

La transmission hydrostatique est scellée à l'usine. Le niveau d'huile ne peut être vérifié et il n'est pas possible de vider ni d'ajouter de l'huile.

Remisage du tracteur

1. Changez l'huile à moteur et le filtre en suivant les instructions fournies dans le chapitre sur le moteur, à l'arrière de cette notice d'utilisation.
- AVERTISSEMENT :** Ne remisiez jamais le tracteur à l'intérieur s'il reste du carburant dans le réservoir ou dans un espace mal aéré si les vapeurs d'essence risquent d'entrer en contact avec une flamme nue, une étincelle ou la veilleuse d'une chaudière, d'un chauffe-eau ou d'un sèche-linge.

2. Remisage de 30 jours ou plus :

- c. Pour empêcher les dépôts de gomme dans le carburateur et, par conséquent, le mauvais fonctionnement du moteur, il est essentiel de vider l'essence avec un produit de stabilisation pour éviter qu'elle ne se détériore.

AVERTISSEMENT : Le carburant qui reste dans le réservoir se détériorera et causera de graves problèmes au démarrage.

- d. Utilisez un produit de stabilisation du carburant, comme STA-BIL, si le tracteur doit être remisé entre 30 et 90 jours.

- e. Lisez attentivement les instructions du fabricant du produit et ses recommandations.
- Ajoutez la quantité d'essence propre et fraîche à une quantité d'essence du système de carburant (environ 3 gallons).
- Faites le plein du réservoir et laissez tourner le moteur pendant 2 à 3 minutes pour que l'essence stabilisée atteigne le carburateur.
- Vidangez le système du carburant si le tracteur doit être remisé pendant plus de 90 jours.

- Avant de remisier le tracteur, notez la consommation d'essence pour essayer de tomber en panne d'essence.
- Laissez tourner le moteur quand il commence à hésiter et à caler. Utilisez le volet de départ pour aider le moteur à tourner jusqu'à ce que tout le carburant dans le carburateur ait été utilisé.
- Consultez la notice d'utilisation du moteur et videz le carburant de la cuvette du carburateur.

7. Tirez sur le collier d'arrêt de l'adaptateur afin de détacher l'adaptateur du jet.
8. Répétez les étapes précédentes en utilisant le jet sur l'autre côté du plateau de coupe.

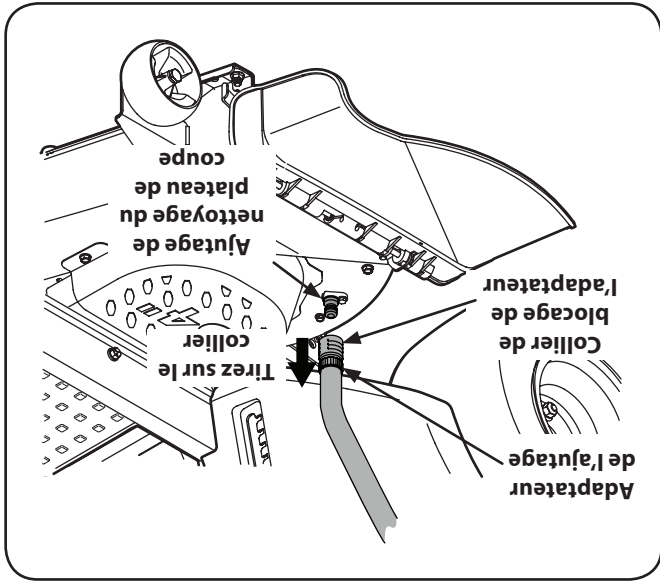


Figure 6-1

Entretien des pneus

- Vérifiez la pression des pneus toutes les 50 heures d'utilisation ou chaque semaine. Les pneus doivent toujours être gonflés à la pression recommandée. Une pression insuffisante raccourcit la durée de vie du pneu. Les pressions recommandées sont indiquées sur le flanc du pneu. Suivez les conseils ci-dessous :
- **AVERTISSEMENT:** Ne dépassez jamais la pression maximale indiquée sur le flanc du pneu.



Ne regonfiez pas un pneu qui a été utilisé à plat ou à une pression très insuffisante. Faites examiner le pneu par un mécanicien qualifié.

Renseignements sur les batteries



- **PROPOSITION 65 – Californie**
AVERTISSEMENT: Les gaz d'échappement de ce produit contiennent des produits chimiques reconnus dans l'État de Californie comme causant le cancer, des anomalies congénitales ou d'autres problèmes liés à la reproduction.



- En cas d'éclaboussures accidentelles de l'acide de la batterie dans les yeux ou sur la peau, rincez abondamment la zone touchée avec de l'eau froide et propre. En cas de problème, voyez un médecin.

AVERTISSEMENT



- La batterie contient de l'acide de batterie et a été scellée hermétiquement à l'usage. Cependant, même une batterie « sans entretien » exige un peu d'entretien de temps à autre pour garantir sa longue durée de vie.
 - Vaporisez les bornes et les fils nus avec un produit de protection des bornes ou enduisez les bornes d'une fine couche de graisse ou de vaseline pour les protéger de la corrosion.
 - Assurez-vous que les câbles et les bornes sont toujours propres et sans corrosion.
 - Évitez de faire basculer la batterie. L'électrolyte peut couler même d'une batterie étanche.
- AVERTISSEMENT :** Les batteries contiennent de l'acide sulfurique et dégagent des gaz explosifs. Vérifiez que la zone de travail est bien aérée, portez des gants et des lunettes ou un masque de protection et évitez d'approcher des flammes ou étincelles de la batterie.

Entretien de la batterie

- En cas d'éclaboussures d'acide sur des vêtements, diluez avec de l'eau propre, puis neutralisez avec une solution d'ammoniaque et d'eau ou de bicarbonate de soude et d'eau.
- Ne branchez (ou ne débrazchez) JAMAIS les pinces du chargeur à la batterie quand le chargeur est sous tension, car ceci peut provoquer des étincelles.
- Éloignez toute source d'allumage possible (cigarettes, allumettes, briquets) de la batterie. L'hydrogène dégage pendant la charge de la batterie peut être combustible.
- Par mesure de précaution supplémentaire, chargez la batterie dans un endroit bien aéré seulement.
- Protégez vos yeux, votre peau et vos vêtements quand vous manipulez une batterie. Les batteries contiennent de l'acide sulfurique et dégagent des gaz explosifs. Vérifiez que la zone de travail est bien aérée, portez des gants et des lunettes ou un masque de protection et évitez d'approcher des flammes ou étincelles de la batterie.

	Avant l'emploi	Toutes les 10 heures	Toutes les 25 heures	Toutes les 50 heures	Toutes les 100 heures	Avant le remisage
Vérifiez la crépine d'aspiration/le couvercle du moteur.	✓					
Nettoyage des bornes de la batterie		✓				✓
Lubrifiez les roue avant		✓				✓
Vérification des ailettes de refroidissement du moteur			✓			✓
Lubrification des roues avant du plateau de coupe			✓			✓

REMARQUE : La notice d'utilisation concerne plusieurs modèles. Les caractéristiques des tracteurs varient selon les modèles. Les caractéristiques mentionnées dans cette notice d'utilisation ne concernent pas tous les tracteurs et le tracteur représenté peut être différent du vôtre.

Entretien



AVERTISSEMENT : Avant d'effectuer tout réglage, lubrifier ou toute réparation, débrazez la prise de force, placez le sélecteur de vitesse au point mort, serrez le frein de stationnement, arrêtez le moteur et retirez la clé pour empêcher tout démarrage non intentionnel.

Moteur

Consultez la notice d'utilisation du moteur quant aux instructions d'entretien du moteur.

Lubrification

- Utilisez un pistolet graisseur sous pression pour lubrifier les essieux des roues pivotantes avant et l'essieu du pivot avec une graisse no. 251H-EP toutes les 10 heures d'utilisation.
- Lubrifiez périodiquement tous les points de pivotement avec une huile lubrifiante de qualité.

Nettoyage des poulies à fusée

Une fois par mois, éliminez toute accumulation de brins d'herbe autour des poulies à fusée et de la courroie trapézoïdale. Nettoyez plus souvent si vous coupez des herbes hautes et sèches.

Utilisation du système de nettoyage du plateau de coupe



AVERTISSEMENT : En utilisant le système de nettoyage du plateau de coupe, n'embrayez jamais le plateau de coupe d'une position autre que du poste de conduite. Ne demandez pas à quelqu'un de vous aider et n'embrayez pas le plateau de coupe si quelqu'un se trouve à proximité.

1. Placez l'adaptateur de l'ajutage sur un boyau d'arrosage ordinaire branché à un robinet.

2. Placez le tracteur sur une surface plane à un endroit facilement accessible par le boyau où les brins d'herbe mouillés ne poseront pas de problème. Débrazez la prise de force, serrez le frein de stationnement et arrêtez le moteur.



AVERTISSEMENT : Vérifiez que la goulotte d'éjection du tracteur n'est pas dirigée vers un bâtiment, des véhicules, etc.

3. Démarrez le moteur et embrayez la prise de force à partir du poste de conduite. Faites fonctionner le moteur aussi longtemps que nécessaire. Débrazez la prise de force et arrêtez le moteur.

4. Ouvrez le robinet d'eau.

5. Démarrez le moteur et embrayez la prise de force à partir du poste de conduite. Faites fonctionner le moteur aussi longtemps que nécessaire. Débrazez la prise de force et arrêtez le moteur.

6. Fermez le robinet d'eau.

Vérification des circuits du système de sécurité

Vérifiez périodiquement tous les circuits du système de sécurité pour vous assurer que le tracteur est en bon état de marche. Si un circuit ne fonctionne pas correctement, adressez-vous au concessionnaire local pour faire examiner le tracteur. N'utilisez PAS le tracteur si un circuit ne fonctionne pas bien. Procédez comme suit pour vérifier les circuits :

1. Embrayez la prise de force en relevant le commutateur. Tournez l'interrupteur de contact à la position « Start » (Démarrage). Le moteur ne doit pas tourner.
2. Placez les deux leviers de direction au point mort, puis relevez-les de la position de conduite. Le moteur doit s'arrêter.
3. Avec les deux leviers de direction au point mort et le frein de stationnement engagé, embrayez la prise de force. Levez-vous du siège du conducteur. Le moteur doit s'arrêter.
4. Mettez le tracteur en route ramenez les leviers de direction au point mort. Embrayez la prise de force et déplacez lentement les deux leviers de direction en position de marche arrière. La prise de force doit se débrayer et le plateau de coupe doit s'arrêter.

Pour arrêter le tracteur

- 1. Placez les deux leviers de direction au point mort pour arrêter le tracteur.

- 2. Débrayez la prise de force en abaissant le commutateur.

- 3. Relevez le plateau de coupe à la position la plus haute avec la manette de relevage.

- 4. Pour quitter le poste de conduite, poussez les deux leviers de direction à fond vers l'extérieur, au point mort, serrez le frein de stationnement. Placez la manette de commande des gaz à la position rapide . Placez le commutateur d'allumage à la position « Off » (Arrêt)  et retirez la clé de contact.



AVERTISSEMENT: Ne quittez pas le poste de conduite avant d'avoir débrayé la prise de force, poussez les leviers de direction à fond vers l'extérieur au point mort et serrez le frein de stationnement. Retirez la clé de contact si le tracteur reste sans surveillance.

Conduite sur une pente

Utilisez l'inclinomètre à la page 10 pour déterminer s'il est dangereux de travailler sur la pente.



AVERTISSEMENT: Ne travaillez pas sur une pente supérieure à 15° (soit une augmentation de 2 1/2 pi tous les 10 pieds). Le tracteur risque de se retourner et le conducteur peut être gravement blessé.

- 1. Travaillez toujours perpendiculairement aux pentes, jamais dans le sens de la pente. Maîtrisez la vitesse et la direction du tracteur en vous servant du levier de direction sur l'aval du tracteur, l'autre levier (en amont) devant rester essentiellement en position fixe.
- 2. Évitez de tourner vers l'aval dans la mesure du possible. Commencez à travailler en bas de la pente et ralentissez toujours avant de tourner.
- 3. Soyez très prudent et travaillez très lentement en tournant vers l'aval.

Utilisation de la prise de force

Procédez comme suit pour utiliser la prise de force :

- 1. Placez la manette de la commande des gaz à la position correspondant à un régime moyen.
- 2. Placez le commutateur de la prise de force à la position embrayée.
- 3. Placez la manette de la commande des gaz à la position correspondant à la vitesse de travail (plein régime).
- 4. Le conducteur doit toujours se trouver au poste de conduite. Si le conducteur quitte le poste de conduite sans débrayer la prise de force, le moteur du tracteur s'arrête. La prise de force ne peut pas être embrayée en marche arrière. Elle se débrayera si les deux leviers de direction sont placés en position de marche arrière et elle s'embrayera à nouveau quand l'un (ou les deux) leviers de direction retourneront au point mort ou en position de marche avant.

Utilisation du plateau de coupe



AVERTISSEMENT: Vérifiez que la zone de travail est bien dégagée, sans bâtons, cailloux, fils de fer ou autres objets, qui risquent d'être projetés par les lames.

REMARQUE: N'embrayez pas le plateau de coupe quand il est abaissé dans l'herbe. La courroie trapézoïdale et l'embrayage de la prise de force risquent de s'user prématurément. Relevez le plateau de coupe ou allez à un endroit sans herbe avant d'embrayer le plateau de coupe.

- 1. Travaillez perpendiculairement aux pentes, pas dans le sens de la pente. Pour travailler sur une pente, commencez au bas de la pente et travaillez en montant pour garantir que les virages se font vers l'amont.
- 2. Au premier passage, choisissez un endroit de l'autre côté de la zone à tondre.
- 3. Embrayez la prise de force avec le commutateur et placez la manette de la commande des gaz à la position rapide .
- 4. Abaissez le plateau de coupe à la hauteur voulue avec la manette de relevage.
- 5. Poussez lentement et uniformément les deux leviers de direction pour faire avancer le tracteur et dirigez le tracteur vers le point choisi.

REMARQUE: La vitesse de déplacement du tracteur affectera la qualité de la tonte. Tondre à une vitesse importante diminuera la qualité de la tonte. Contrôlez la vitesse de déplacement avec les leviers de direction. En approchant le point choisi, ralentissez ou arrêtez avant de tourner. Nous recommandons un virage en U sauf si un pivotement ou un virage sur place est nécessaire. Alignez la tondeuse avec un bord du passage tondue et chevauchez sur environ 3 pouces.- 8. Continuez à travailler en alignant le tracteur sur chaque bande précédemment tondue.
- 9. Pour éviter de laisser des traces sur la pelouse, changez la direction de travail pour les tontes ultérieures.



AVERTISSEMENT: Soyez très prudent en traversant des allées recouvertes de gravier. Débrayez la prise de force et relevez le plateau de coupe à la position la plus haute avant de traverser.

REMARQUE: Si pour une raison quelconque, vous devez arrêter le tracteur sur une surface recouverte d'herbe, procédez toujours comme suit :

- Placez le levier de vitesses au point mort,
- Serrez le frein de stationnement,
- Arrêtez le moteur et retirez la clé de contact.
- Vous minimiserez ainsi le risque de « brûler » la pelouse avec les gaz d'échappement si le moteur continue à tourner.

Pour tourner en marche arrière

1. Pour tourner en marche arrière, déplacez les leviers de direction de manière que l'un des leviers soit en retrait de l'autre. Le tracteur tourne dans le sens du levier le plus en avant.

gauche en avant du levier droit. Voir la Figure 5-7.

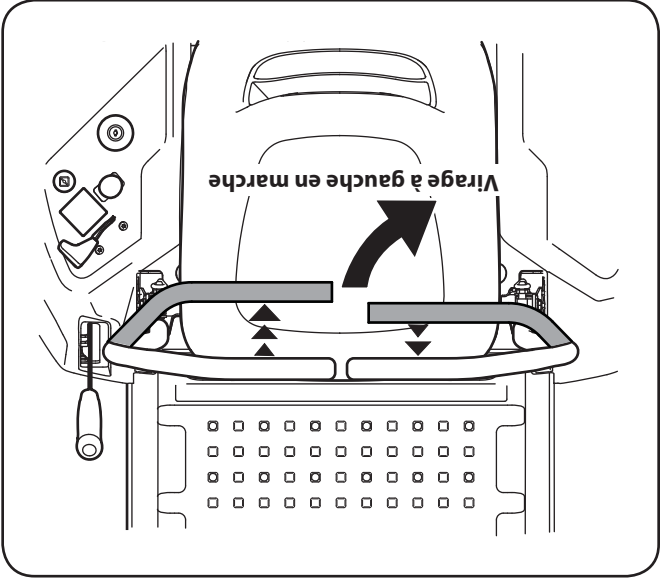


Figure 5-7

2. Pour tourner à droite en marche arrière, poussez le levier droit en avant du levier gauche. Voir la Figure 5-8.

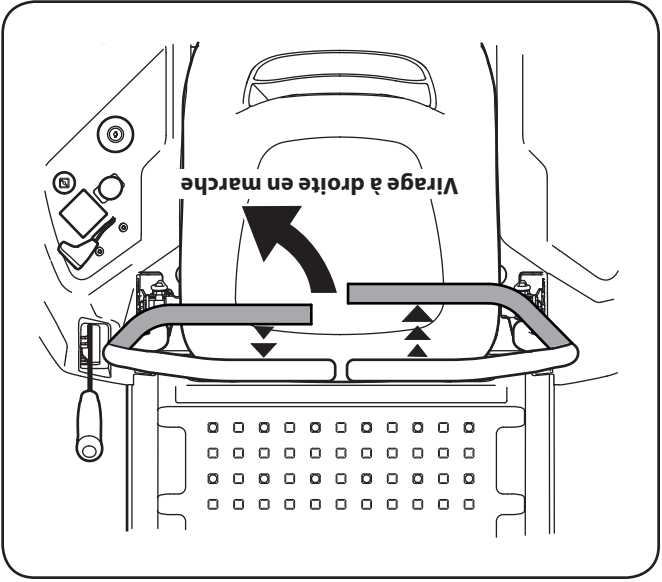


Figure 5-8

3. Le virage sera plus prononcé si la distance entre les deux leviers de direction est importante.
4. Pour tourner sur place, placez l'un des leviers au point mort tout en poussant l'autre levier, selon la direction choisie.

REMARQUE : Vous risquez davantage d'endommager la pelouse en effectuant un virage sur place sur de l'herbe.

Pour tourner sur place

AVERTISSEMENT: Pour tourner sur place, il est IMPÉRATIF D'ARRÊTER LE TRACTEUR. Un virage sur place quand le tracteur avance peut diminuer votre maîtrise du tracteur et endommager la pelouse.



1. Arrêtez le tracteur en plaçant les deux leviers de direction au point mort.
2. Pour tourner à droite, poussez lentement le levier gauche en tirant simultanément le levier droit vers l'arrière. Voir la Figure 5-9.

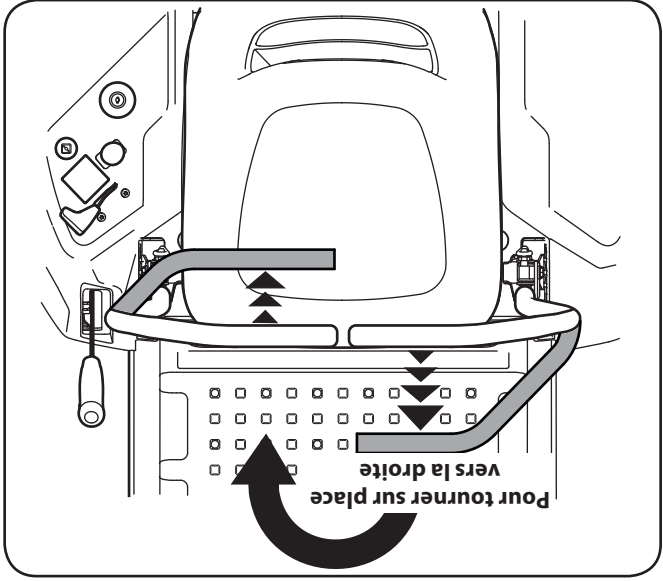


Figure 5-9

3. Pour tourner à gauche, poussez lentement le levier droit en tirant simultanément le levier gauche vers l'arrière. Voir la Figure 5-10.

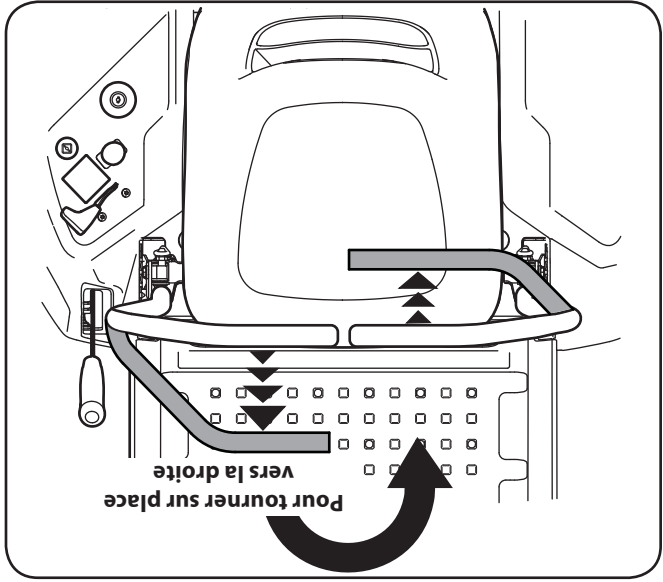


Figure 5-10

3. Tirez sur les leviers de direction vers vous pour ralentir le tracteur à la vitesse désirée ou placez-les au point mort pour arrêter le tracteur.

AVERTISSEMENT: Ne lâchez jamais les leviers de direction, surtout pour ralentir ou pour revenir au point mort.

Pour tourner le tracteur en avançant

AVERTISSEMENT: Pour faire demi-tour, nous vous recommandons d'effectuer un virage en U dans la mesure du possible. Un virage plus serré risque d'endommager la pelouse et peut réduire votre maîtrise du tracteur. Ralentissez TOUJOURS avant de changer de direction.

Pour tourner le tracteur en avançant, déplacez les leviers de direction selon le besoin, en poussant un levier et en tirant sur l'autre. Le tracteur tournera dans la direction du levier qui est tiré vers l'arrière.

Pour tourner à gauche, tirez le levier gauche en retrait du levier droit. Voir la Figure 5-4.

4. Pour tourner à droite, tirez le levier droit en retrait du levier gauche. Voir la Figure 5-5.
5. Le virage sera plus prononcé si la distance entre les deux leviers de direction est importante.
6. Pour tourner sur place, placez l'un des leviers au point mort tout en poussant l'autre levier, selon la direction choisie.

REMARQUE: Vous risquez d'avantage d'endommager la pelouse en effectuant un virage sur place sur de l'herbe.

REMARQUE: Vous risquez davantage d'endommager la pelouse en effectuant un virage sur place sur de l'herbe.

Figure 5-4


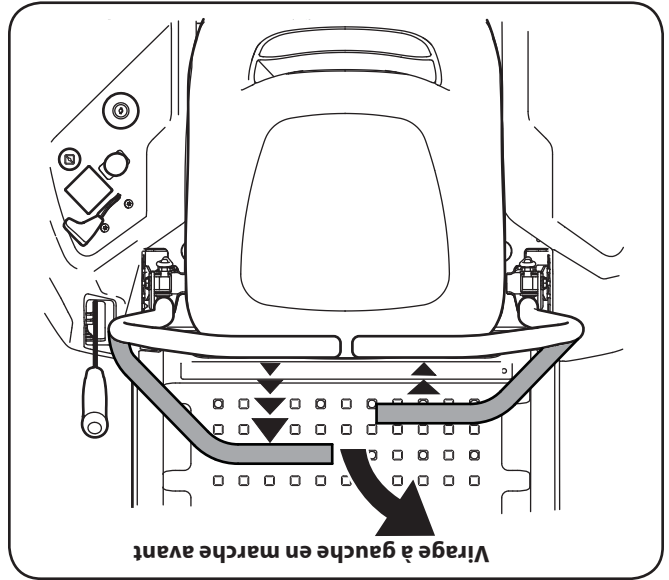


Figure 5-6

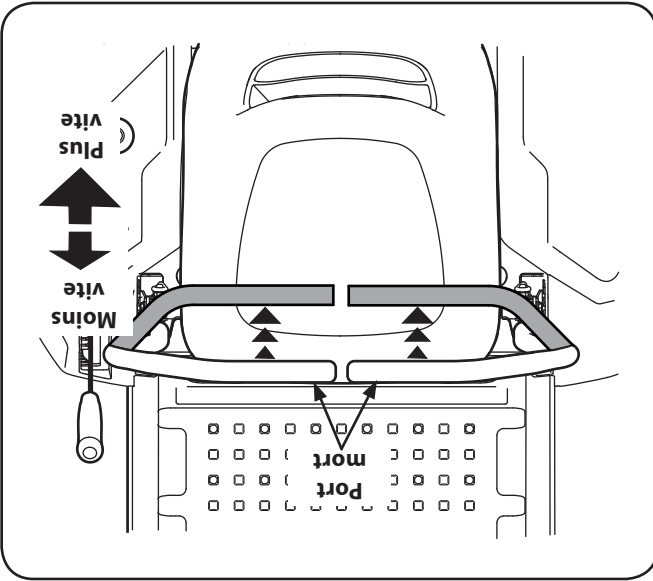


Conduite en marche arrière

AVERTISSEMENT: Regardez toujours derrière vous et par terre des deux côtés du tracteur avant de reculer. Regardez toujours derrière vous en reculant.

1. Tirez lentement sur les deux leviers de façon égale. Le tracteur commencera alors à reculer. Voir la Figure 5-6.
2. Plus les leviers sont tirés vers l'arrière, plus vite le tracteur recule.
3. Pour ralentir, poussez les leviers vers l'avant à la vitesse désirée ou placez les leviers au point mort pour arrêter le tracteur.

Figure 5-5

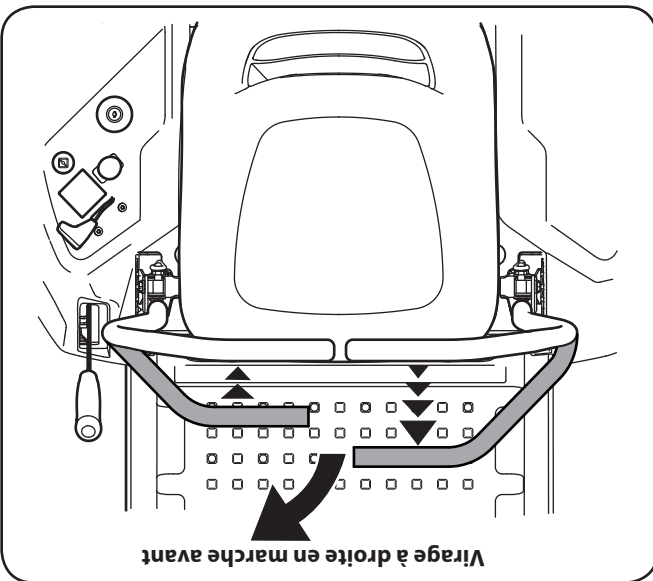

- 4. Faites vérifier et réparer le système électrique dès que possible pour éliminer le besoin de câbles volants.

Pour arrêter le moteur

- 1. Placez le commutateur de la prise de force à la position « OFF » (Arrêt).
 - 2. Poussez les leviers de direction droit et gauche à fond vers l'extérieur, au point mort.
 - 3. Déplacez la manette de commande des gaz à la position centrale entre la position SLOW « lente » et FAST « rapide ».
 - 4. Tournez la clé de contact à la position « OFF » (Arrêt) et retirez la clé de contact.
- REMARQUE :** Retirez toujours la clé de contact pour éviter tout démarrage accidentel ou pour empêcher la décharge de la batterie, si la machine n'est pas surveillée.

Utilisation initiale

La conduite d'un tracteur qui tourne sur lui-même est différente de la conduite d'un tracteur ordinaire. Il faut s'habituer à utiliser les leviers de direction, même si un tracteur qui tourne sur lui-même est beaucoup plus maniable qu'un tracteur ordinaire. Nous vous conseillons de choisir un endroit bien dégagé et plat, sans obstacles, piétons ou animaux, pour vous exercer pendant au moins 30 minutes.

Amenez doucement votre tracteur dans la zone choisie. La prise de force ne doit pas être embrayée pendant cette session. Réglez l'obturateur à un régime moyen et ne conduisez pas à la vitesse maximale en marche avant comme en marche arrière.

Suivez les instructions ci-dessous dans la section « Conduite du tracteur » pour vous habituer à manœuvrer le tracteur. Continuez à vous exercer jusqu'à ce que vous sentiez à l'aise pour conduire le tracteur en toute sécurité.



AVERTISSEMENT: Évitez les démarrages brusques, la vitesse excessive et les arrêts soudains.

- 1. Ajustez le siège à la position la plus confortable pour utiliser les commandes. Réglez le siège selon les instructions dans la section « RÉGLAGES ».
- 2. Tirez les leviers de direction droit et gauche vers l'intérieur, au point mort qui se dégage également le frein de stationnement. Refer to Figure 5-2.
- REMARQUE :** Si les leviers de direction ne sont pas au même niveau au point mort, consultez la entretien et ajustez les leviers.
- 3. Poussez la manette de la commande des gaz vers l'avant à la position plein gaz.
- REMARQUE :** Le moteur du tracteur a été conçu pour tourner à plein régime. Pour vous exercer, il est préférable de ne pas conduire le tracteur à plein régime mais seulement pendant la période d'apprentissage.



AVERTISSEMENT! Tenez toujours les manettes de commande bien en main. NE les relâchez PAS pour faire ralentir ou arrêter le tracteur ; placez manuellement les manettes au point mort.

- 4. Pour conduire le tracteur, tenez fermement les leviers de direction avec les mains droite et gauche respectivement et procédez comme suit :

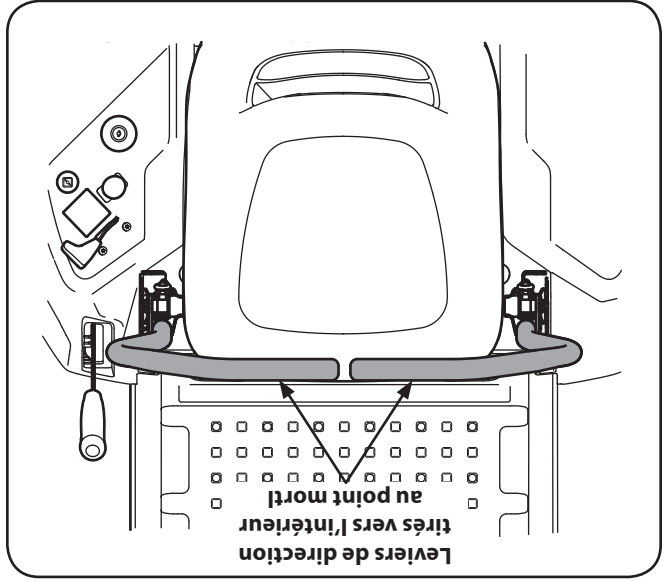


Figure 5-2

Conduite en marche avant



- 1. **AVERTISSEMENT:** Déplacez les leviers de direction lentement et en douceur. Un mouvement brusque des leviers de direction peut affecter la stabilité du tracteur et le faire se retourner, ce qui peut causer des blessures graves ou mortelles.
- Déplacez les deux leviers de direction lentement et en douceur vers l'avant. Le tracteur commencera à avancer. Voir la Figure 5-3.

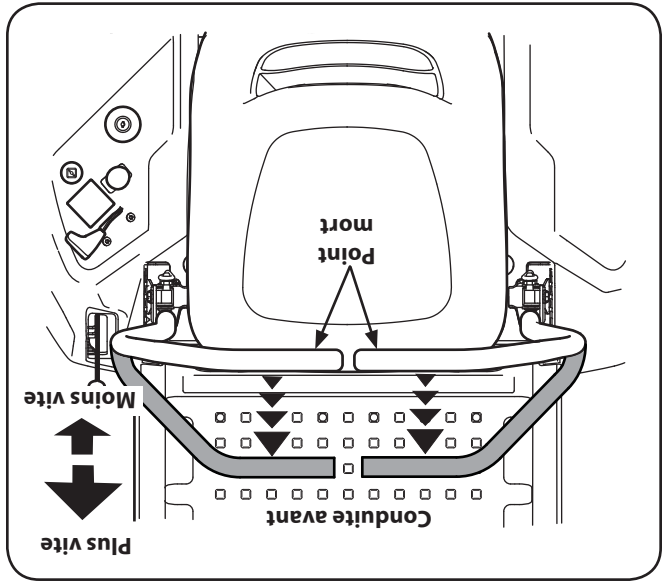


Figure 5-3

- 2. Plus on pousse les leviers de direction vers l'avant, plus le tracteur avance vite.

- Le système de sécurité débraye la prise de force et les lames de la tondeuse s'immobilisent si les deux leviers de direction sont placés en position de marche arrière. Pour embrayer à nouveau la prise de force, placez les deux leviers en position de marche avant ou au point mort. Le commutateur de la prise de force doit se trouver à la position « ARRÊT » (Débrayée), puis être placé à la position « MARCHE » (Embrayée).

Démarrage du moteur



AVERTISSEMENT: Ce tracteur est équipé d'un système de sécurité qui assure la protection du conducteur. N'utilisez pas le tracteur si un composant quelconque du système est défectueux. Vérifiez fréquemment le bon fonctionnement du système de sécurité.



AVERTISSEMENT: Par mesure de sécurité, le conducteur doit être assis au poste de conduite avant de mettre le moteur en route.

1. Le conducteur doit être assis au poste de conduite *(control levers fully outward in neutral (parking brake on))*. Serrez le frein de stationnement.

2. Vérifiez que le commutateur de la prise de force est à la position « Débrayée ». Voir la Figure 5-1.

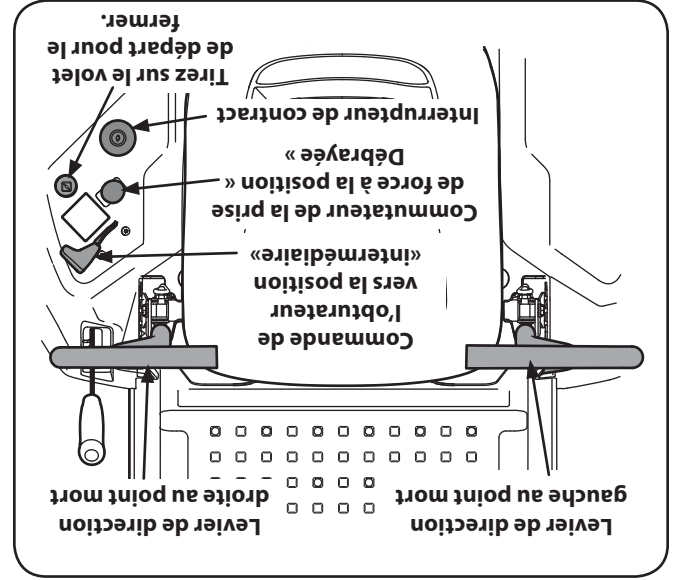


Figure 5-1

3. Déplacez la manette du volet de départ ou manette de la commande des gaz/volet de départ ou à la position « FULL CHOKE ». Voir la Figure 5-1.
4. Déplacez la manette de commande des gaz à la position centrale entre la position SLOW « lente » et FAST « rapide ».

REMARQUE: Si le moteur est chaud, il peut ne pas être nécessaire d'étrangler le carburateur du moteur.

1. Branchez une extrémité d'un câble sur la borne positive de la batterie à plat, puis branchez l'autre extrémité de ce câble sur la borne positive de la batterie d'appoint.
 2. Branchez une extrémité de l'autre câble sur la borne négative de la batterie d'appoint, puis branchez l'autre extrémité de ce câble sur le châssis du tracteur, le plus loin possible de la batterie.
 3. Faites démarrer le tracteur en panne selon les instructions fournies, puis débranchez les câbles volants dans l'ordre inverse.
- AVERTISSEMENT:** Les batteries contiennent de l'acide sulfurique et dégagent des gaz explosifs. Assurez-vous que la zone de travail est bien aérée, portez des gants et des lunettes ou un masque de protection et évitez d'approcher des flammes ou étincelles de la batterie.



Démarrage du moteur par câbles volants

1. Assurez-vous que la batterie est en bon état. Une batterie réchauffée démarre plus facilement qu'une batterie froide.
2. Utilisez une essence fraîche appropriée pour l'hiver. L'essence pour l'hiver est plus volatile et facilite les démarrages. N'utilisez pas de l'essence qui vous reste de l'été.
3. Suivez les instructions ci-dessus pour FAIRE DÉMARRER UN MOTEUR.

Démarrage par temps froid

5. Insérez la clé du tracteur dans le commutateur d'allumage et tournez la clé de contact vers la droite, à la position « START » (Démarrage) et relâchez-la dès que le moteur démarre ; ne faites pas tourner le moteur continuellement pendant plus de 5 secondes à la fois. Si le moteur ne démarre pas, tournez la clé à la position « OFF » (Arrêt) et attendez une minute avant de recommencer. Si, après plusieurs tentatives, le moteur ne démarre toujours pas, n'essayez plus de le faire démarrer avec le volet de départ fermé. Ceci peut noyer le moteur et rendre le démarrage difficile.
6. Quand le moteur commence à chauffer, abaissez le bouton pour ouvrir le volet de départ. N'utilisez pas le volet de départ pour enrichir le mélange de carburant, sauf pour faire démarrer le moteur.
7. Laissez le moteur tourner pendant quelques minutes à mi-régime avant de commencer à travailler.
8. Vérifiez le compteur d'heures/panneau d'affichage. Si le témoin lumineux de la batterie s'allume, arrêtez immédiatement le moteur. Adressez-vous au concessionnaire local.

Consignes de sécurité

- INSTRUCTIONS – Lisez la notice d'utilisation du tracteur. Apprenez à utiliser cette machine EN TOUTE SÉCURITÉ. Ne risquez pas des BLESSURES GRAVES ou MORTELLES. Seules les personnes qui se sont familiarisées avec le mode d'emploi de ce tracteur doivent être autorisées à l'utiliser.
- Familiarisez-vous avec les commandes avant de mettre le moteur en marche ou avant d'utiliser le tracteur. Le conducteur doit être assis au poste de conduite. La prise de force doit être débrayée, le frein de stationnement serré et les leviers de direction droit et gauche doivent être poussés à fond vers l'extérieur, au point mort.
- Laissez tous les dispositifs de protection en place. Ne vous approchez pas des pièces en mouvement.
- PAS DE PASSAGERS ! Éloignez tous les spectateurs et animaux de compagnie. Regardez derrière vous et des deux côtés du tracteur avant de reculer et pendant la manœuvre.
- NE dirigez PAS l'éjection de la tondeuse vers des spectateurs
- Dans la mesure du possible, évitez de travailler sur un terrain en pente. Ne conduisez jamais le tracteur sur une pente supérieure à 15°. Tout terrain plus pentu est dangereux car le tracteur peut se retourner.
- Avant de quitter le poste de conduite, débrayez la prise de force, poussez les leviers de commande à fond vers l'extérieur au point mort, serrez le frein de stationnement, arrêtez le moteur et retirez la clé de contact. Attendez que toutes les pièces en mouvement se soient immobilisées avant d'effectuer toute opération d'entretien ou de nettoyage.
- Déplacez les leviers de direction en douceur et évitez tout mouvement brusque, en particulier au démarrage et à l'arrêt.
- Soyez très prudent quand vous travaillez à proximité d'une route. Arrêtez le tracteur et attendez que les véhicules soient passés avant de continuer à travailler.
- N'utilisez pas le tracteur sans le plateau de coupe. En effet, l'équilibre du tracteur est différent sans le plateau de coupe et le tracteur risque de se retourner.
- Évitez de travailler sur une surface instable ou glissante. Ralentissez avant de tourner et arrêtez-vous complètement avant d'effectuer un virage sur place.
- N'arrêtez pas le tracteur et ne le stationnez pas sur des matériaux combustibles comme de l'herbe sèche, des feuilles mortes ou des débris, etc.
- Ne faites pas le plein du carburant pendant que le moteur tourne ou si le moteur est encore chaud. Attendez quelques minutes pour que le moteur refroidisse avant de faire le plein. Serrez le bouchon d'essence à fond.

Avant d'utiliser le tracteur

- Lisez attentivement la notice d'utilisation avant de conduire le tracteur pour la première fois. Cette notice a été préparée pour vous aider à utiliser et à entretenir convenablement votre tracteur.
- Ce moteur est conçu pour fonctionner uniquement avec une essence sans plomb propre fraîche ayant un indice d'octane de 87 ou plus. Une essence sans plomb est recommandée car elle laisse moins de dépôts dans la chambre de combustion et elle réduit les gaz polluants toxiques. L'essence à plomb est déconseillée et ne doit pas être utilisée dans les régions où les émissions de gaz polluants sont réglementées.
- **REMARQUE :** Achetez l'essence en petites quantités. N'utilisez pas de l'essence de l'année précédente afin de minimiser les dépôts de gomme dans le système.
- Vous pouvez utiliser un mélange d'essence-alcool (jusqu'à 10% d'alcool éthylique et 90% d'essence sans plomb). Les autres mélanges d'essence et d'alcool ne sont pas recommandés.
- Les mélanges de méthyl-tert-butyléthér (MTBE) et d'essence (jusqu'à un maximum de 15% de MTBE par volume) peuvent aussi être utilisés. Les autres mélanges d'essence et d'éther ne sont pas recommandés.
- Vérifiez le niveau d'huile dans le moteur.
- Nettoyez la cartouche du filtre à air si besoin est. Voir la notice d'utilisation du moteur.
- Vérifiez la pression des pneus.
- Ajustez le siège pour assurer un confort maximum au conducteur, une excellente visibilité et une maîtrise totale du tracteur.
- Ce tracteur est muni d'un système de sécurité qui assure la protection du conducteur. Si ce système ne fonctionne pas correctement, n'utilisez pas le tracteur et adressez-vous au concessionnaire le plus proche.
- Ce système empêche le moteur de tourner ou de démarrer si les leviers de direction droit ou gauche ne sont pas poussés à fond vers l'extérieur au point mort et si la prise de force est embrayée.
- Le système de sécurité arrête le moteur si le conducteur quitte le poste de conduite alors que la prise de force est embrayée.
- **REMARQUE :** Le commutateur de la prise de force doit être placé à la position « ARRÊT » (Débrayée) avant de remettre le moteur en marche.

Système de sécurité

Manette de la commande des gaz

(le cas échéant)

La commande de l'obturateur se trouve sur la console de droite, à gauche du compteur d'heures/panneau d'affichage. À une position donnée, le régime du moteur sera maintenu.

Poussez la manette de la commande des gaz pour augmenter le régime du moteur. Le moteur fonctionne mieux avec la manette à la position rapide (plein régime) quand le tracteur est conduit et que le plateau de coupe est embrayé.

Tirez sur la manette de commande des gaz pour diminuer le régime du moteur.

Manette du volet de départ

(le cas échéant)

Le bouton du volet de départ contrôle sa position. Tirez sur le bouton pour fermer le volet de départ et poussez-le pour ouvrir le volet de départ.

Compteur d'heures/

Panneau d'affichage

Le compteur d'heures/panneau d'affichage se trouve sur la console de droite, sur la droite de l'obturateur ou de la commande de l'obturateur.

Compteur d'heures



Il enregistre sur un affichage numérique les heures de fonctionnement du tracteur (en dixièmes d'heure – chiffre le plus à droite).

REMARQUE : Le compteur d'heures enregistre la durée quand l'interrupteur de contact se trouve à la position « ON » (Marche).

Notez les heures de fonctionnement réelles du tracteur pour vous assurer d'effectuer les entretiens nécessaires selon les instructions de cette notice d'utilisation et de celle du moteur. Quand la clé se trouve à la position « ON » (Marche), le témoin lumineux de la batterie s'allume et la tension de la batterie est brièvement affichée. L'affichage passe ensuite au nombre d'heures accumulées.

Le témoin lumineux rappelle aussi au conducteur les intervalles entre les vidanges d'huile. Le témoin clignote « CHG », « OIL » et le nombre d'heures pendant cinq minutes après toutes les 50 heures de fonctionnement enregistré. L'intervalle d'entretien est de deux heures (50 à 52 heures, 100 à 102 heures, 150 à 152 heures, etc.). Le témoin lumineux clignote pendant cinq minutes chaque fois que le moteur du tracteur est mis en route pendant cet intervalle d'entretien. Respectez les intervalles de vidange d'huile recommandés dans la notice d'utilisation du moteur.

Panneau des indicateurs

Indicateur de la batterie

Ce témoin s'allume et la tension de la batterie est brièvement affichée quand le commutateur d'allumage se trouve à la position « On » (Marche).

Ce témoin s'allume pour indiquer si la tension de la batterie est tombée à moins de 11,5 (+0,5/-1 volt). La tension de la batterie est aussi affichée sur le compteur d'heures. Si ce témoin et l'affichage s'allument pendant que le tracteur fonctionne, vérifiez la batterie et le système de charge pour déterminer les raisons possibles et/ou adressez-vous au concessionnaire.

Indicateur de la pression d'huile

Cet témoin d'alerte indique que la pression d'huile du moteur est trop basse. Dans le cas où l'indicateur s'allume alors que le moteur est en marche, arrêtez le moteur immédiatement et cherchez en les causes possibles. Ne laissez pas le moteur fonctionner lorsque cet indicateur est allumé. Contactez votre concessionnaire pour faire inspecter le tracteur et le moteur.

REMARQUE : L'indicateur de la pression d'huile peut s'allumer quand le commutateur de l'allumage se trouve à la position « ON », mais doit s'éteindre quand le moteur démarre.

Indicateur de la prise de force embrayée

Ce témoin s'allume quand le commutateur de la prise de force est relevé à la position « ENGAGED » (Embrayée) et quand l'interrupteur d'allumage se trouve à la position « START » (Démarriage). Vérifiez ce témoin si le moteur ne tourne pas quand l'interrupteur de contact se trouve à la position « START » (Démarriage). Au besoin, placez l'interrupteur de la prise de force à la position « DISENGAGED » (Débrayée).

Indicateur du frein de stationnement serré

Ce témoin s'allume quand le frein de stationnement se trouve à la position « DISENGAGED » (Desserré) et quand l'interrupteur de contact se trouve à la position « START » (Démarriage). Vérifiez ce témoin si le moteur ne tourne pas quand le commutateur d'allumage se trouve à la position « START » (Démarriage). Au besoin, serrez le frein de stationnement.

Ce témoin s'allume aussi quand le commutateur d'allumage se trouve à la position « START » et quand les leviers de direction droit et gauche se trouvent à une position autre que le point mort. Poussez les leviers de direction vers l'extérieur, se trouve à la position « START » (Démarriage). Au besoin, serrez le frein de stationnement.



Interrupteur de contact

Cet interrupteur se trouve sur la console droite, à la droite du poste de conduite. Vous noterez trois positions, à savoir :

- OFF (ARRÊT)** — Le moteur est arrêté et le système électrique est hors circuit.
- ON (MARCHÉ)** — Le système électrique du tracteur est sous tension.
- START (DÉMARRAGE)** — Le démarreur fait tourner le moteur. Lâchez immédiatement la clé pour que le moteur démarre.

REMARQUE : Pour éviter tout démarrage accidentel et/ou la décharge de la batterie, retirez la clé de contact quand le tracteur n'est pas utilisé.

Commutateur de la prise de force

Il se trouve sur la console droite, à la droite du siège du conducteur.

Le commutateur de la prise de force permet d'embrayer la prise de force électrique, installée à la base du vilebrequin du moteur. Relévez le bouton du commutateur pour embrayer la prise de force ou abaissez-le pour la débrayer. Le commutateur de la prise de force doit se trouver à la position « débrayée » au démarrage.

Commandes de dérivation de la transmission

Ces commandes (une pour chacune des transmissions) se trouvent sous la plate-forme du châssis, juste à côté de chaque roue arrière. Lorsqu'elles sont embrayées, les deux commandes ouvrent une dérivation dans les transmissions hydrostatiques qui permet de pousser le tracteur manuellement sur de courtes distances. Les instructions d'emploi de cette caractéristique se trouvent dans le Entretien.



AVERTISSEMENT: Ne remorquez jamais le tracteur. Remorquer le tracteur quand les roues arrière sont en contact avec le sol peut causer de graves dégâts aux transmissions.

Porte-gobelet

Il se trouve sur l'arrière de la console droite du siège du conducteur.

Plateau de rangement

Il se trouve sur l'arrière de la console droite.

Manette de réglage du siège

Elle se trouve sous le siège, sur l'avant et à gauche, et permet d'ajuster la position d'avant en arrière du siège. Voir les instructions dans le Entretien et Réglages.

Capuchon du réservoir d'essence

Il se trouve vers le milieu de la console de gauche. Tournez le capuchon d'un quart de tour environ et relevez-le pour le retirer. Pour qu'il ne se perde pas, le capuchon est attaché au tracteur. N'essayez pas de le détacher du tracteur. Enfoncez le capuchon sur le goulot de remplissage du réservoir et faites environ un quart de tour dans le sens des aiguilles d'une montre pour le serrer. Resserrez toujours bien le capuchon sur le réservoir.

AVERTISSEMENT: Ne faites jamais le plein d'essence pendant que le moteur tourne. Attendez que le moteur ait refroidi avant de refaire le plein. L'essence est un produit hautement inflammable et des étincelles sur un moteur chaud risque de provoquer un incendie.




Indicateur du niveau du carburant

Il se trouve sur la gauche du tableau de bord et indique la quantité de carburant dans le réservoir.

Manette de la commande des gaz/volet de départ (le cas échéant)

- Elle se trouve sur la console gauche, à la gauche du siège du conducteur. À une position donnée, le régime du moteur sera maintenu.
- Poussez la manette de la commande des gaz pour augmenter le régime du moteur. Le moteur fonctionne mieux avec la manette à la position rapide (plein régime) quand le tracteur est conduit et que le plateau de coupe est embrayé.
- Tirez sur la manette de commande des gaz pour diminuer le régime du moteur.
- Poussez la manette de commande des gaz à fond vers l'avant à la position « CHOKE » (Volet de départ) au démarrage.
- Quand le moteur tourne et qu'il s'est réchauffé, déplacez la manette de commande des gaz vers l'arrière jusqu'à ce que vous sentiez qu'elle a passé le point de résistance.



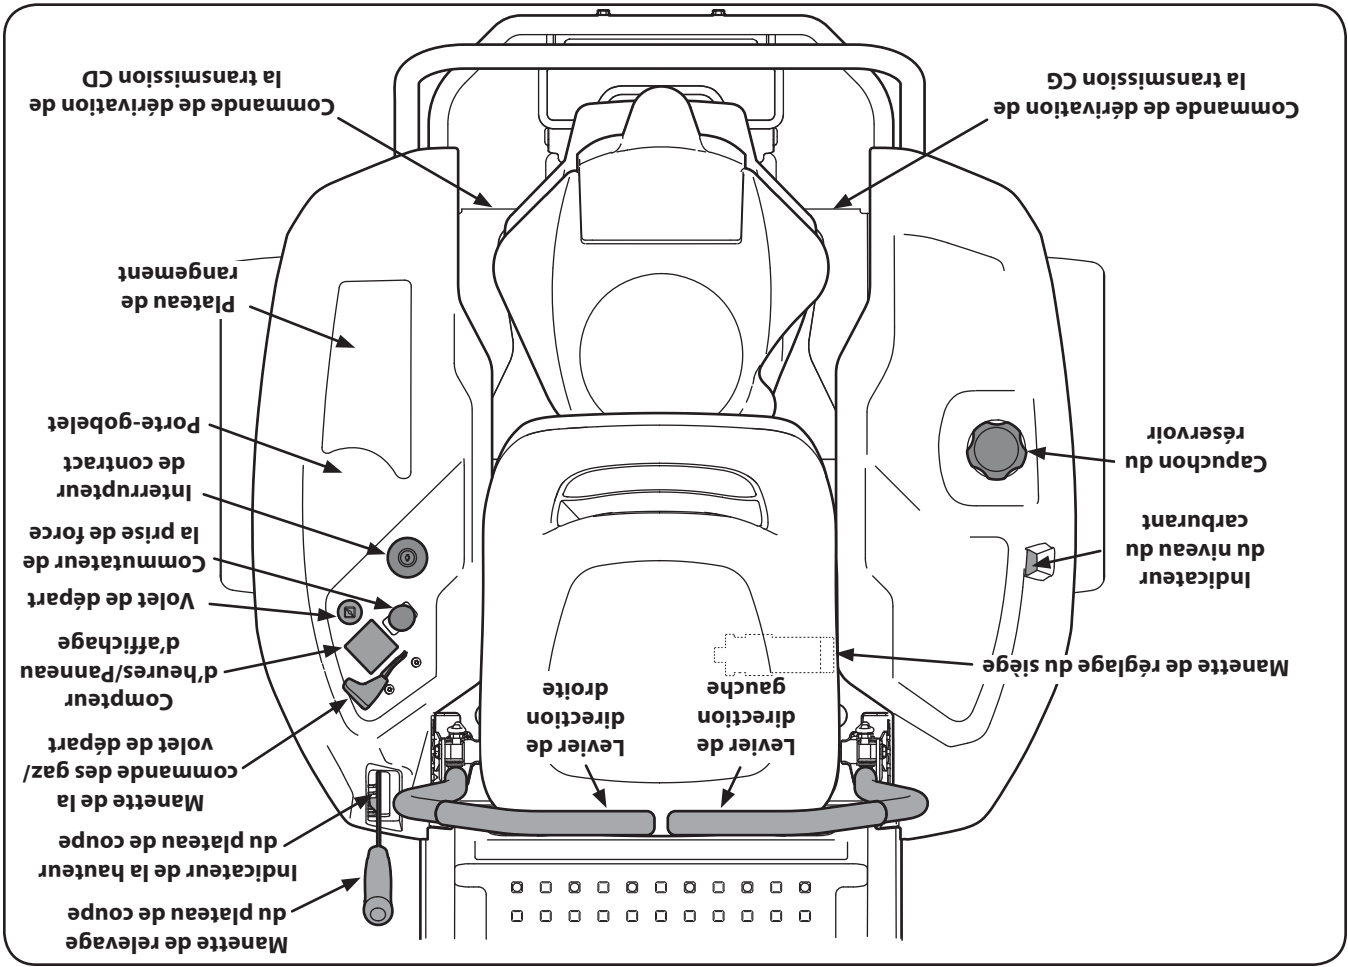

trouverez les instructions d'emploi de ces leviers dans le Utilisation

Indicateur de la hauteur du plateau de coupe

Il comporte six encoches et se trouve sur l'avant et à droite du cadre du siège. Chaque encoche représente une différence de 1/2 pouce de la hauteur du plateau de coupe, de 1 1/2 po (au plus bas) à 4 po (au plus haut).

Manette de relevage du plateau de coupe

Elle se trouve sur l'avant et à droite du cadre du siège et sert à relever ou à abaisser le plateau de coupe. Dégagez la manette de l'encoche en l'abaissant vers la gauche pour relever le plateau de coupe, ou soulevez-la pour relever le plateau de coupe. Quand le plateau de coupe se trouve à la position voulue, poussez la manette vers la droite pour la placer dans l'encoche correspondante.

Leviers de direction droit et gauche

REMARQUE : La notice d'utilisation concerne plusieurs modèles. Les caractéristiques des tracteurs varient selon les modèles. Les caractéristiques mentionnées dans cette notice d'utilisation ne concernent pas tous les tracteurs et le tracteur représenté peut être différent du vôtre.

REMARQUE : Les côtés GAUCHE, DROIT, AVANT et ARRIÈRE s'entendent de la position de direction, assis sur le siège.

Les leviers droit et gauche se trouvent de chaque côté du siège du conducteur. Ces leviers articulés peuvent être poussés vers l'extérieur au point mort, pour permettre au conducteur d'accéder au siège ou de le quitter. Les leviers doivent être poussés à fond vers l'extérieur au point mort pour pouvoir faire démarrer le moteur. Chaque levier contrôle la transmission de droite ou de gauche respectivement. Par conséquent, ils commandent toutes les manœuvres du tracteur. Il est en fait très différent de conduire un tracteur équipé de telles commandes par rapport à un tracteur ordinaire. Une certaine pratique est nécessaire. Vous

- Enlevez le couvercle en plastique, le cas échéant, de la borne négative de la batterie et attachez le câble noir à la borne négative de la batterie (-) avec le boulon et l'écrou à six pans. Voir la Figure 3-5.
 - Placez la gaine en caoutchouc rouge au-dessus de la borne positive de la batterie pour aider à la protéger contre la corrosion.
- REMARQUE:** Si la batterie est mise en service après la date indiquée sur le dessus de la batterie, chargez-la selon les instructions dans la chapitre «Entretien» dans cette notice d'utilisation avant d'utiliser le tracteur.
- Abaissez le déflecteur de la goulotte d'éjection du plateau de coupe.**
- AVERTISSEMENT :** N'utilisez jamais le plateau de coupe si le déflecteur de la goulotte d'éjection n'est pas installé et en position abaissée.
- Le déflecteur de la goulotte d'évacuation doit être installé avant d'utiliser la tondeuse.
- Retirez les clés attachées sur le support de la goulotte.
 - Retirez les contre-écrous à collet du plateau de coupe. Ne retirez pas les écrous capuchons ni les boulons ordinaires. Ils faciliteront l'installation de la goulotte. Voir la Figure 3-6.

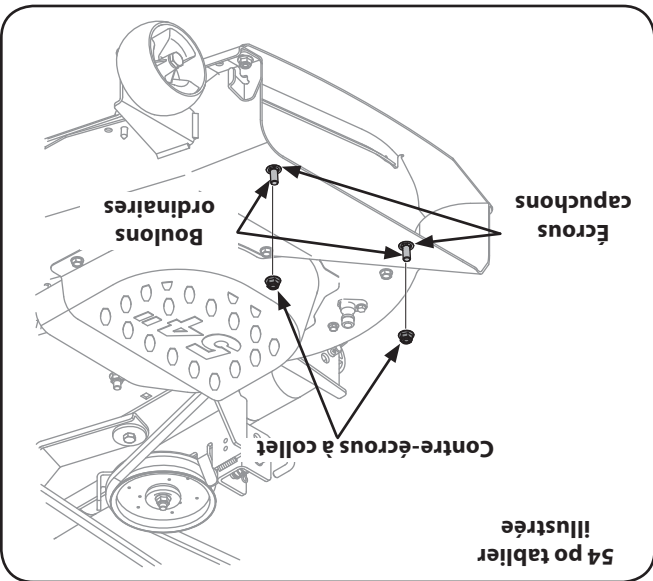


Figure 3-6

3. Installez le déflecteur de la goulotte d'éjection avec les boulons ordinaires, les écrous capuchons et les contre-écrous à collet comme à la Figure 3-7. Serrez toute la boulonnerie.

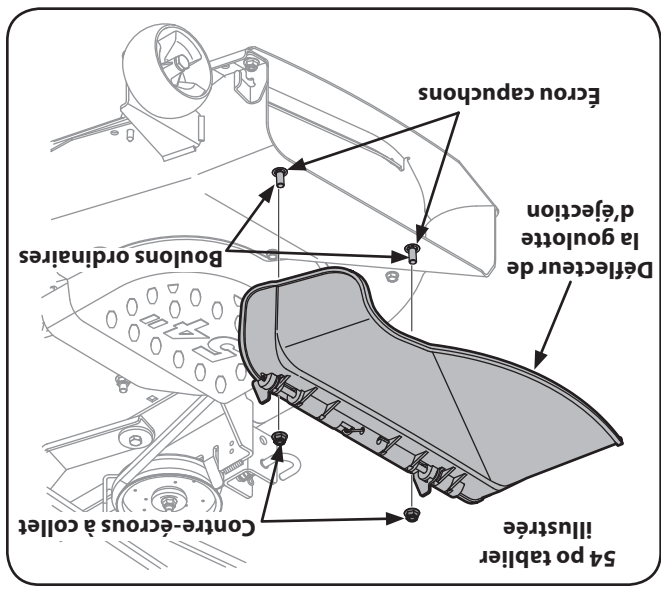
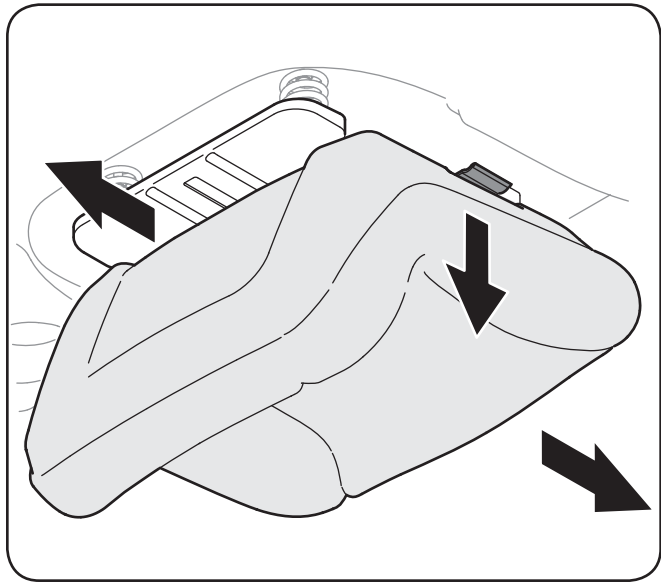


Figure 3-7

Réglage du siège

Pour régler la position du siège, tirez la manette de réglage du siège vers le haut et tenez-la. Glissez le siège vers l'avant ou l'arrière à la position désirée; puis lâchez la manette de réglage. Assurez-vous que le siège est fixé en place avant de mettre en marche le tracteur. Voir la Figure 3-8.



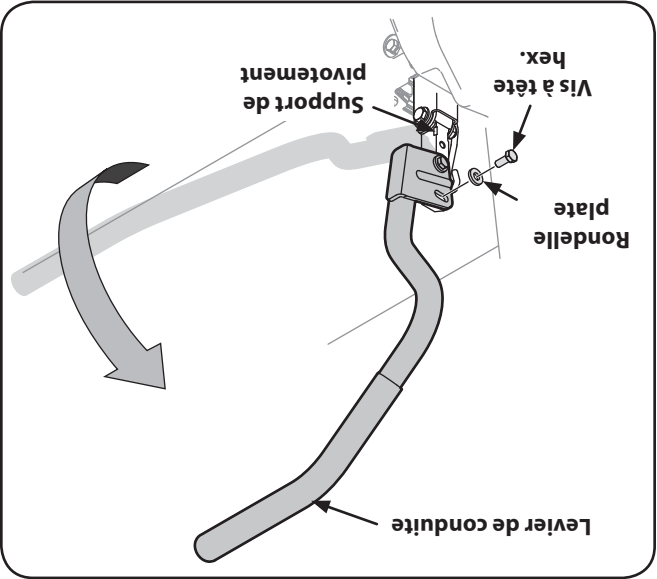


Figure 3-4

1. Retirez les vis à tête hexagonale et des rondelles plates de la sachet de boulonnerie dans votre sac manuel.
2. Redressez le levier de conduite jusqu'à ce que la fente du support soit alignée avec l'un des trous du support de pivotement. Voir la Figure 3-4.

Positionnement des leviers de direction

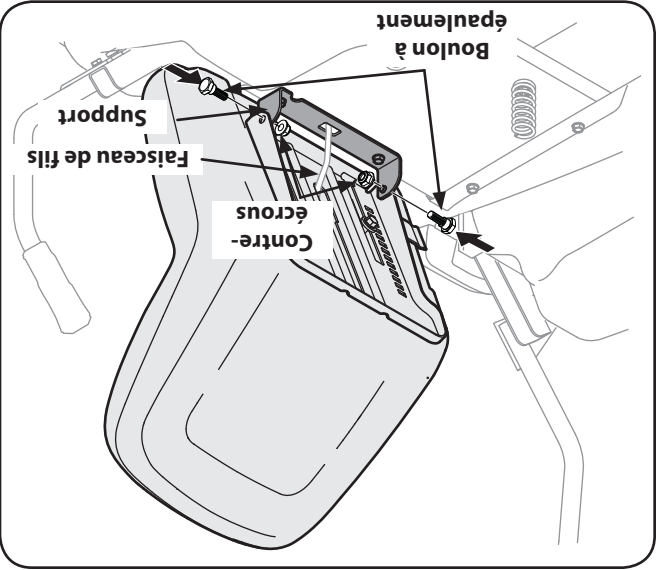


Figure 3-3

3. Glissez la rondelle plate sur la vis à tête hex. De l'extérieur, enfoncez la vis à tête hex. dans la fente du levier de direction et dans le trou du support de pivotement. Voir Figure 3-4. L'utilisation d'une clé à 1/2 po serrez la vis, mais ne serez pas complètement.
4. Notez la position relative du levier de direction par rapport au support de pivotement, puis répétez les étapes précédentes pour repositionner l'autre levier à la même position.
5. Consultez le chapitre «Ajustement des leviers de direction» dans le chapitre Entretien et Réglages pour obtenir plus de renseignements quant à l'ajustement final des leviers.

Installation des câbles de la batterie.

PROPOSITION 65 – Californie

AVERTISSEMENT: Les gaz d'échappement de ce produit contiennent des produits chimiques reconnus dans l'État de Californie comme causant le cancer, des anomalies congénitales ou d'autres problèmes liés à la reproduction.

AVERTISSEMENT : En attachant les câbles de la batterie, branchez toujours le câble POSITIF (rouge) sur la borne positive, puis le câble NÉGATIF (noir).

Pour des raisons d'expédition, les deux câbles de la batterie sur votre équipement ont pu avoir été laissés débranchés des bornes à l'usine. Pour brancher les câbles de la batterie, procédez comme suit :

REMARQUE: La borne positive de la batterie est identifiée par Pos. (+) et la borne négative par Nég. (-).

REMARQUE: Si le câble positif de la batterie est déjà installé, passez au paragraphe 2.

1. Enlevez le couvercle en plastique, le cas échéant, de la borne positive de la batterie (+) avec le boulon et l'écrou à six pans. Voir la Figure 3-5.

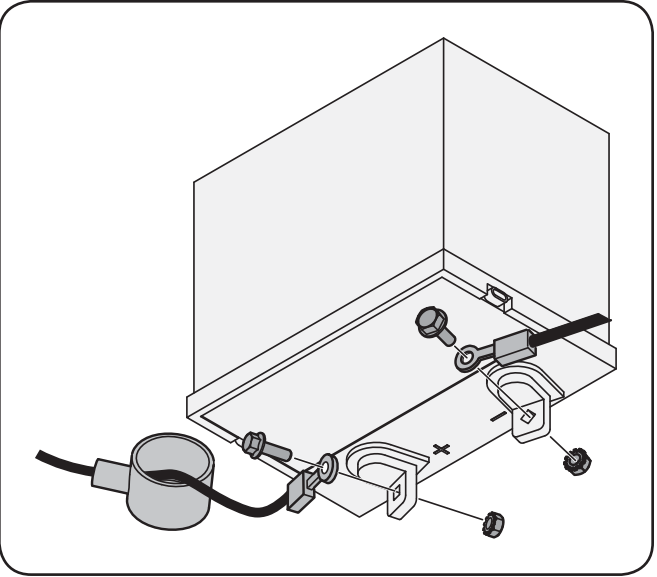


Figure 3-5

Contenu du carton

- Un tracteur de pelouse
- Un tube de vidange de l'huile
- Un ajutage du système de nettoyage du plateau de coupe
- Une notice d'utilisation du moteur
- Un sachet de boulonnerie

REMARQUE : La notice d'utilisation concerne plusieurs modèles. Les caractéristiques des tracteurs varient selon les modèles. Les caractéristiques mentionnées dans cette notice d'utilisation ne concernent pas tous les tracteurs et le tracteur représenté peut être différent du vôtre.

Préparation du tracteur

Déplacement manuel du tracteur

1. Embrayez les tiges de dérivation de la transmission de chaque côté du tracteur pour déplacer celui-ci sans le mettre en marche. Ces tiges se trouvent sur l'arrière du tracteur, sur l'intérieur de chaque roue arrière. Pour embrayer chaque tige de dérivation, tirez-la vers l'extérieur(a) et vers la droite (b) pour la bloquer. Voir la Figure 3-1

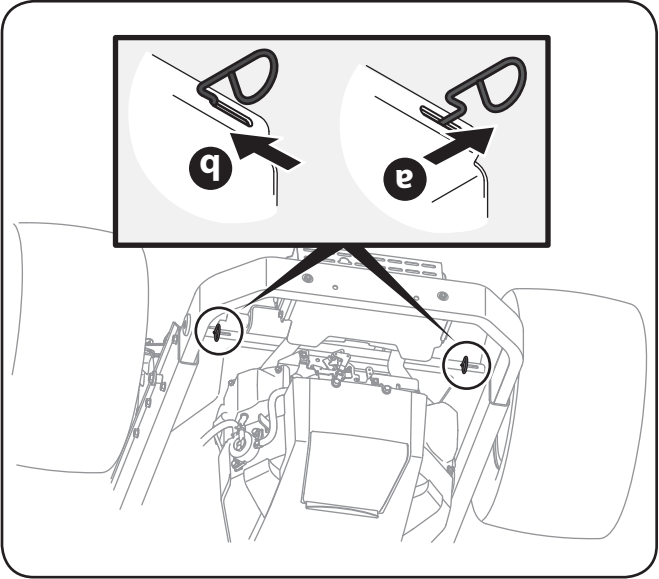


Figure 3-1

2. Débrayez les tiges en inversant a et b après avoir déplacé le tracteur. Voir la Figure 3-1
3. Sortez l'adaptateur de l'ajutage du système de nettoyage du plateau de coupe du sachet contenant la notice d'utilisation. Mettez-le de côté pour l'utiliser plus tard.

Installation du siège du conducteur

Procédez comme suit pour l'installer complètement :

REMARQUE : Le commutateur et la cuvette du siège sont attachés au siège pour l'expédition.

1. Coupez les sangles qui maintiennent le siège et les leviers de direction. Débarrassez-vous de tout emballage.

2. Enlevez les deux boulons à épaulement et les deux contre-écrous qui se trouvent sur la cuvette du siège, comme à la Figure 3-2.

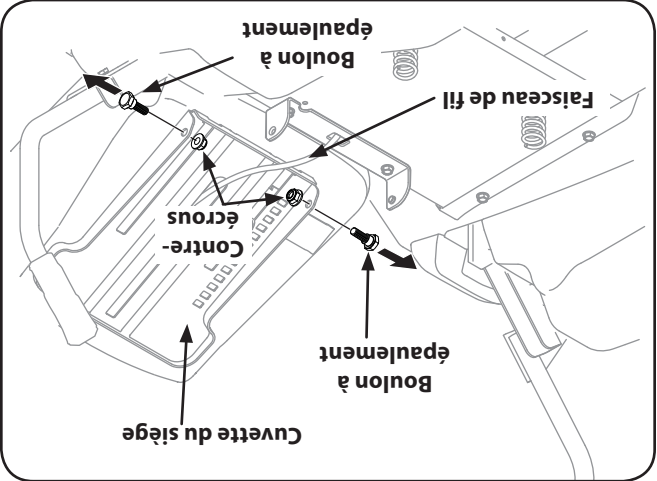


Figure 3-2

3. Positionnez le siège et maintenez-le en place avec les boulons à épaulement et les contre-écrous enlevés précédemment. Faites attention de ne pas pincer ni endommager le faisceau de fils lors de l'installation du siège. Voir la Figure 3-3.

REMARQUE : Pensez à enfoncer l'excès de fil du faisceau de fils dans le trou du socle du siège avant de continuer.

Inclinomètre

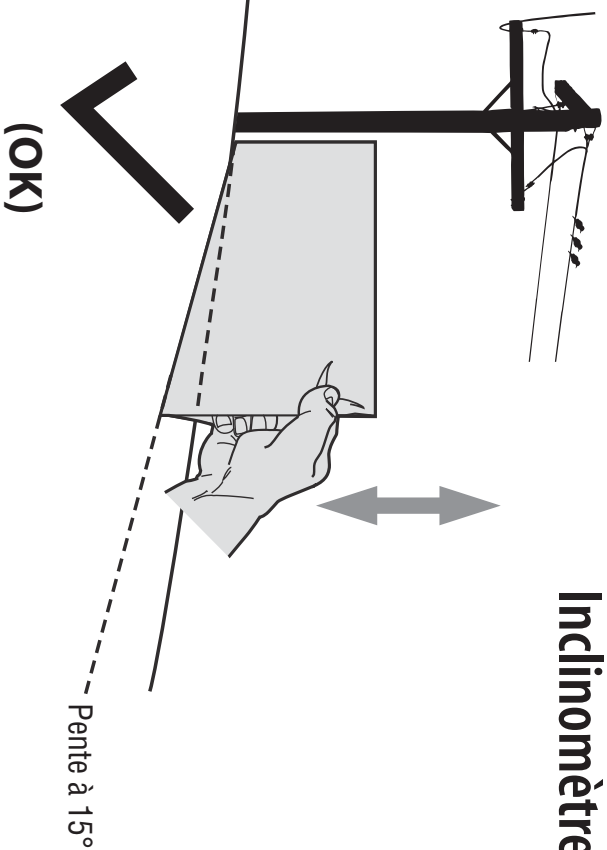


Figure 1

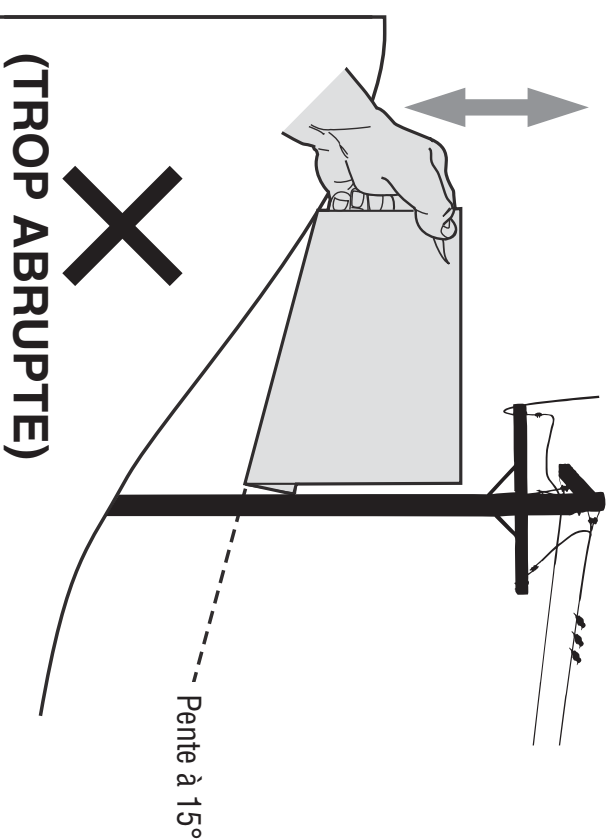


Figure 2

UTILISEZ CET INCLINOMÈTRE POUR DÉTERMINER SI UNE PENTE EST TROP ABRUPT POUR PERMETTRE L'UTILISATION SANS DANGER DE LA MACHINE.

Procédez comme suit pour vérifier la pente :

1. Détachez cette page et pliez-la en suivant la ligne pointillée.
2. Trouvez un objet vertical sur ou derrière la pente (un poteau téléphonique, une clôture, un arbre, etc.).
3. Alignez un côté de cette page avec l'objet (Voir les Figures 1 et 2).
4. Remontez ou abaissez l'inclinomètre jusqu'à ce que le coin gauche touche la pente (Voir les Figures 1 et 2).
5. S'il y a un espace sous l'inclinomètre, la pente est trop abrupte pour y travailler en toute sécurité. (Voir la Figure 2 ci-dessus).


Ligne pointillée à 15°



AVERTISSEMENT: Les accidents provoqués par des chutes et des glissades, qui surviennent souvent sur des pentes, peuvent causer des blessures graves. Travailler sur un terrain en pente demande des précautions supplémentaires. Si vous ne sentez pas à l'aise sur la pente, n'y travaillez pas.

Symboles de sécurité

Cette page illustre et explique les symboles de sécurité qui peuvent se trouver sur cette machine. Veuillez lire et suivre toutes les instructions sur la machine et vous assurer de bien les comprendre avant d'essayer d'assembler et d'utiliser la machine.

Symbole	Description
	VEUILLEZ LIRE LA OU LES NOTICES D'UTILISATION. Veuillez lire et suivre toutes les instructions sur la machine et vous assurer de bien les comprendre avant d'essayer d'assembler et d'utiliser la machine.
	AVERTISSEMENT – LAMES EN MOUVEMENT N'approchez pas les mains ni les pieds des pièces en mouvement et ne les placez pas sous le plateau de coupe. Tout contact avec les lames peut amputer les mains ou les pied.
	AVERTISSEMENT – OBJETS PROJÉTÉS Cette machine peut ramasser et projeter des objets, ce qui peut causer des blessures graves.
	AVERTISSEMENT – OBJETS PROJÉTÉS Cette machine peut ramasser et projeter des objets, ce qui peut causer des blessures graves.
	DANGER – SPECTATEURS Gardez les spectateurs, les animaux de compagnie et les enfants à une distance d'au moins 75 pieds de la machine quand elle est en marche
	AVERTISSEMENT — INCLINOMÈTRE Ne tondez pas sur des pentes supérieures à 15°.
	DANGER – LAMES EN MOUVEMENT Pour éviter les risques de blessures, n'approchez jamais les mains ni les pieds des pièces en mouvement. N'utilisez pas la machine si le déflecteur de la goulotte ou si le sac à herbe n'est pas en place. S'ils sont endommagés, remplacez-les immédiatement.

Entretien général

1. Ne faites jamais fonctionner la machine dans un local clos car les gaz d'échappement du moteur contiennent du monoxyde de carbone, un gaz inodore très dangereux.

2. Avant de nettoyer, de réparer ou d'examiner la machine, vérifiez que les lames et toutes les pièces mobiles se sont immobilisées. Débranchez le fil de la bougie et mettez-le à la terre contre le moteur pour empêcher tout démarrage accidentel.

3. Vérifiez régulièrement que les lames s'immobilisent dans les 5 secondes qui suivent l'utilisation de la commande de débryage des lames. Si elles ne s'arrêtent pas dans ce délai, faites examiner la machine par une station technique agréée.

4. Vérifiez souvent que les freins fonctionnent bien car ils peuvent s'user dans des conditions d'utilisation normales. Réglez-les selon le besoin.

5. Vérifiez souvent que les lames et les boulons de montage du moteur sont bien serrés. Examinez visuellement les lames pour détecter toute usure excessive, tout fendillement. Remplacez-les par des lames authentiques uniquement. «L'emploi de pièces non conformes aux caractéristiques de l'équipement d'origine peut causer des performances inférieures et réduire la sécurité.»

6. Les lames sont coupantes et peuvent causer des blessures graves. Enveloppez les lames avec un chiffon ou portez des gants et faites très attention en les manipulant.

7. Assurez-vous que tous les écrous, boulons et vis sont bien serrés pour que l'équipement soit toujours en bon état de marche.

8. Ne modifiez jamais les dispositifs de sécurité. Vérifiez souvent qu'ils fonctionnent bien.

9. Si vous heurtez un objet, arrêtez immédiatement le moteur, débranchez le fil de la bougie et examinez soigneusement la machine. Réparez les dégâts éventuels avant de remettre la machine en marche.

10. N'essayez jamais de faire des réglages ou des réparations quand le moteur tourne.

11. Les éléments du sac à herbe et le clapet de la goulotte d'éjection peuvent s'user et être endommagés et, par conséquent, exposer les pièces mobiles ou causer la projection de débris. Par mesure de sécurité, vérifiez souvent les éléments et remplacez-les immédiatement avec des pièces authentiques seulement. «L'emploi de pièces non conformes aux caractéristiques de l'équipement d'origine peut causer des performances inférieures et réduire la sécurité.»

12. Ne modifiez pas le réglage du régulateur et ne laissez pas le moteur s'emballer. Le régulateur maintient le moteur à son régime maximal de fonctionnement sans danger.



AVERTISSEMENT: Votre responsabilité. Cette machine ne doit être utilisée que par des personnes qui peuvent lire, comprendre et respecter les avertissements et instructions qui figurent dans cette notice et sur la machine

CONSERVEZ CES INSTRUCTIONS!



Pare-étincelles

Avis concernant les émissions de gaz

Les moteurs certifiés conformes aux normes réglementaires de la Californie et de l'agence EPA fédérales pour SORE (petit équipement hors route) sont certifiés pour fonctionner avec de l'essence sans plomb ordinaire et peuvent être dotés des systèmes de contrôle des émissions de gaz suivants : Engine Modification (EM) et Three Way Catalyst (TWC) le cas échéant.

Ne modifiez pas le moteur.

- 13. Prenez soin des étiquettes d'instructions et remplacez-les au besoin.
- 14. Respectez les règlements concernant l'élimination des déchets et liquides qui risquent de nuire à la nature et à l'environnement.
- 15. D'après la Consumer Products Safety Commission (CPSC - Commission sur la sécurité des produits de consommation) et la "U.S. Environmental Protection Agency" (EPA - Agence américaine de protection de l'environnement), ce produit a une durée de vie utile moyenne de sept (7) ans, ou 270 heures de fonctionnement. Au terme de cette durée de vie utile moyenne, achetez une machine neuve ou faites inspecter la machine chaque année par une station technique agréée pour vous assurer que tous les dispositifs mécaniques et de sécurité sont en bon état de marche et ne sont pas usés de façon excessive. Le non-respect de ces recommandations peut causer des accidents et des blessures graves ou mortelles..

AVERTISSEMENT : Cette machine est équipée d'un moteur à combustion interne et elle ne doit pas être utilisée sur un terrain non entretenu, recouvert de broussailles ou d'herbe si le système d'échappement du moteur n'est pas muni d'un pare-étincelles, conformément aux lois et règlements provinciaux ou locaux (le cas échéant).

Si un pare-étincelles est utilisé, il doit être maintenu en bon état de marche par l'utilisateur de la machine. La station technique agréée la plus proche peut vous fournir un pare-étincelles pour le pot d'échappement de cette machine.

6. Ne remorquez pas des accessoires lourds (remorque chargée, rouлеau, etc.) sur des pentes supérieures à 5°. Le poids supplémentaire a tendance à pousser le tracteur et peut causer la perte de contrôle du tracteur (le tracteur peut accélérer, le freinage et la direction peuvent être limités, l'accessoire peut se mettre en crabe et le tracteur peut se renverser).

Enfant

1. Un accident grave risque de se produire si le conducteur n'est pas toujours très vigilant en présence d'enfants. Les enfants sont souvent attirés par une machine et la toute de l'herbe. Ils ne se rendent pas compte des dangers. Ne supposez jamais qu'ils vont rester là où vous les avez vus. a. Eloignez les enfants de la zone de travail et placez-les sous la surveillance d'un adulte autre que le conducteur de la machine. b. Restez vigilant et arrêtez la machine si des enfants s'approchent de la zone de travail. c. Pour éliminer tout risque d'accident en marche arrière, regardez toujours derrière vous et par terre pour des petits enfants. d. Ne transportez jamais d'enfants, même si les lames ne tournent pas. Ils risquent de tomber et d'être grièvement blessés ou de gêner le fonctionnement sécuritaire de la machine. e. Faites très attention en vous approchant d'angles morts, de buissons, de portails, d'arbres et d'autres objets qui peuvent vous empêcher de voir un enfant. f. Ne laissez pas des enfants s'approcher d'un moteur chaud ou en marche. Ils risquent de se brûler. g. Retirez la clé de contact quand la machine n'est pas surveillée pour empêcher son utilisation non autorisée. 2. Ne permettez jamais à des enfants de moins de 14 ans d'utiliser la machine. Des enfants plus âgés doivent lire et comprendre le mode d'emploi de la machine et les consignes de sécurité. Ils doivent apprendre à utiliser la machine et s'en servir sous la surveillance étroite d'un adulte.

Remorquage

1. Ne remorquez qu'avec une machine équipée d'un attelage de remorquage. N'accrochez pas l'équipement remorqué ailleurs qu'au point d'attelage. 2. Respectez les recommandations du fabricant quant aux limites de poids de l'équipement remorqué et au remorquage sur pente. 3. Ne transportez jamais quiconque sur l'équipement remorqué. 4. Le poids de l'équipement remorqué peut entraîner la perte de traction et par conséquent de contrôle du tracteur sur des pentes. 5. Avancez lentement et prévoyez une distance supplémentaire pour vous arrêter. 6. Ne passez pas au point mort pour descendre une pente.

Entretien

Manipulation de l'essence:

1. Pour éviter toute blessure ou dégât matériel, faites très attention en manipulant de l'essence. Il s'agit d'un produit extrêmement inflammable et les vapeurs risquent d'exploser. Vous pouvez être grièvement blessé si des éclaboussures sur votre peau ou sur vos vêtements s'enflamment. Rincez votre peau et changez immédiatement de vêtements. a. Remisisez le carburant dans des bidons homologués seulement. b. Ne faites jamais le plein dans un véhicule, ni à l'arrière d'une camionnette dont le plancher est recouvert d'un revêtement en plastique. Placez toujours les bidons par terre et loin de votre véhicule avant de les remplir. c. Dans le mesure du possible, déchargez l'équipement motorisé de la remorque et faites le plein par terre. Si cela n'est pas possible, faites le plein avec un bidon plutôt que directement de la pompe à essence. d. Maintenez le gicleur en contact avec le bord du réservoir d'essence ou avec l'ouverture du bidon jusqu'à ce que le plein soit terminé. N'utilisez pas un gicleur équipé d'un dispositif de blocage en position ouverte. e. Éteignez toute cigarette ou pipe, tout cigare ou toute autre chaleur incandescente. f. Ne faites jamais le plein à l'intérieur. g. N'envlevez jamais le capuchon d'essence et n'ajoutez pas d'essence pendant que le moteur tourne ou s'il est chaud. Laissez le moteur refroidir pendant au moins deux minutes avant de faire le plein. h. Ne faites jamais déborder le réservoir. Laissez un espace d'un demi-pouce environ pour permettre l'expansion du carburant. i. Resserrez bien le capuchon d'essence. j. En cas de débordement, essuyez toute éclaboussure de carburant ou d'huile et enlevez tous les débris imbibés d'essence. Déplacez la machine à une autre endroit. Attendez 5 (cinq) minutes avant de mettre en marche le moteur. k. Limitez les risques d'incendie en débarrassant le moteur des brins d'herbe, feuilles et autres saletés. Essayez les éclaboussures de carburant ou d'huile et enlevez tous les débris imbibés d'essence. l. Ne remisiez jamais la machine ou les bidons d'essence à l'intérieur s'il y a une flamme, une étincelle (chauffe-eau à gaz, radiateur, sèche-linge, etc.). m. Laissez la machine refroidir pendant au moins 5 minutes avant de la remisier.

7. Ne remorquez pas des accessoires lourds (remorque chargée, rouлеau, etc.) sur des pentes supérieures à 5°. Le poids supplémentaire a tendance à pousser le tracteur et peut causer la perte de contrôle du tracteur (le tracteur peut accélérer, le freinage et la direction peuvent être limités, l'accessoire peut se mettre en crabe et le tracteur peut se renverser).

14. Faites attention à la circulation à proximité d'une route.
15. Cette machine ne doit pas être utilisée sur un chemin public.
16. Ne vous servez pas de la machine après avoir bu des boissons alcoolisées ou pris de médicaments.
17. Travaillez en plein jour ou avec un éclairage artificiel satisfaisant.
18. Ne transportez JAMAIS de passagers.
19. Reculez lentement. Regardez toujours derrière vous et au sol avant de reculer et en reculant pour éviter tout accident. Familiarisez-vous avec le système de sécurité qui arrête les lames en marche arrière. Si le dispositif de sécurité ne fonctionne pas correctement, adressez-vous à une station technique agréée pour le faire inspecter et réparer au besoin.
20. Ralentissez avant de tourner. Conduisez sans à-coups. Évitez une conduite saccadée et n'allez pas trop vite.
21. Débrayez les lames, serrez le frein de stationnement, arrêtez le moteur et attendez que les lames se soient immobilisées avant de retirer le sac à herbe ou de déboucher la goulotte, d'enlever de l'herbe ou des débris ou de faire un réglage quelconque.
22. Ne laissez jamais une machine en marche non surveillée.
23. Débrayez toujours les lames, mettez le levier de vitesses au point mort, serrez le frein de stationnement, arrêtez le moteur et enlevez la clé avant de quitter la machine.
24. Faites très attention en chargeant ou en déchargeant la machine d'une remorque ou d'un camion. Ne conduisez pas la machine sur un plan incliné pour la charger dans une remorque car elle peut basculer et causer des blessures graves. Poussez la machine à la main pour la charger ou la décharger.
25. Le silencieux et le moteur ont tendance à chauffer et risquent de causer des brûlures. Ne les touchez pas.
26. Vérifiez le dégagement vertical avant de passer sous des branches basses, des fils électriques, un portail ou dans toute autre situation où le conducteur risque d'être frappé et projeté de la machine et de se blesser grièvement.
27. Débrayez tous les embrayages des accessoires, réglez le frein de stationnement à la position « ON » et placez les manettes de conduite de droite et de gauche au point mort avant de mettre le moteur en marche.
28. Ce machine a été conçu pour tondre un gazon résidentiel normal ne mesurant pas plus de 10 po de haut. N'essayez pas de tondre de l'herbe très haute, de l'herbe sèche (dans un pré par exemple) ou une pile de feuilles sèches. Les débris peuvent s'accumuler sous le plateau de coupe ou entrer en contact avec le tuyau d'échappement du moteur, d'où un risque d'incendie.
29. N'utilisez que des accessoires et équipement annexe homologués par le fabricant de la machine. Veuillez lire, bien comprendre et suivre toutes les instructions qui accompagnent l'accessoire ou l'équipement annexe.
30. Ne coupez pas l'herbe si elle est mouillée. La réduction de traction peut faire dérapier le tracteur.
31. N'utilisez pas le sac à herbe sur des pentes raides.
32. Essayez pas de stabiliser la machine en mettant pied à terre.
33. Ne tondez pas près d'une falaise ou d'un talus. Une roue dans le vide ou l'affaïssissement soudain de l'accotement peut renverser la machine.
34. Ne tournez pas sur une pente à moins que cela soit nécessaire; tournez alors lentement et progressivement en descendant si possible.
35. Ne tondez pas près d'une falaise ou d'un talus. Une roue dans le vide ou l'affaïssissement soudain de l'accotement peut renverser la machine.
36. N'essayez pas de stabiliser la machine en mettant pied à terre.
37. Ne coupez pas l'herbe si elle est mouillée. La réduction de traction peut faire dérapier le tracteur.
38. Les statistiques disponibles révèlent que les conducteurs de plus de 60 ans sont impliqués dans un grand nombre d'accidents mettant en cause des tracteurs de jardin.
39. Nous recommandons par conséquent à ces conducteurs d'évaluer sérieusement leur aptitude à utiliser ce genre d'équipement en toute sécurité.
40. Faites toujours preuve de bon sens dans des situations qui n'ont pas été abordées dans cette notice d'utilisation. Adressez-vous au concessionnaire agréé en cas de besoin.
41. Les accidents provoqués par tomber et de glisser, qui se produisent souvent sur des pentes, peuvent causer des blessures graves. Travaillez sur un terrain en pente demande des précautions supplémentaires. Si vous ne sentez pas à l'aise sur la pente, n'y travaillez pas. Par mesure de sécurité utilisez l'inclinomètre fourni dans la notice d'utilisation pour mesurer la pente du terrain avant de commencer à travailler. Si selon l'inclinomètre, la pente est supérieure à 15°, n'utilisez pas la tondeuse pour éviter toute blessure grave.
42. Travaillez perpendiculairement à la pente, jamais parallèlement. Faites très attention en changeant de direction sur une pente.
43. Faites attention aux trous et ornières. La machine peut se retourner sur un terrain accidenté. Des herbes hautes peuvent cacher des obstacles.
44. Travaillez lentement. Utilisez une vitesse suffisamment lente pour ne pas avoir à vous arrêter sur la pente. Évitez d'avoir à vous arrêter et à redémarrer sur une pente. Si les pneus manquent de traction sur une pente, débrayez les lames et descendez lentement parallèlement à la pente.
45. Suivez les recommandations du fabricant quant aux poids des roues ou contrepois à utiliser pour améliorer la stabilité.
46. Faites très attention en utilisant les sacs à herbe ou autres accessoires. Ils peuvent modifier la stabilité de la machine. Déplacez-vous lentement et régulièrement sur les pentes. Ne changez pas brusquement de direction ou de vitesse. Un enclenchement rapide ou un coup de frein brusque peut soulever l'avant de la machine et la faire se retourner et causer des blessures graves.
47. À ne pas faire:
48. Ne tournez pas sur une pente à moins que cela soit nécessaire; tournez alors lentement et progressivement en descendant si possible.
49. Ne tondez pas près d'une falaise ou d'un talus. Une roue dans le vide ou l'affaïssissement soudain de l'accotement peut renverser la machine.
50. Essayez pas de stabiliser la machine en mettant pied à terre.
51. N'utilisez pas le sac à herbe sur des pentes raides.
52. Ne coupez pas l'herbe si elle est mouillée. La réduction de traction peut faire dérapier le tracteur.



AVERTISSEMENT: Ce symbole attire votre attention sur des consignes de sécurité importantes qui, si elles ne sont pas respectées, peuvent mettre en danger non seulement votre personne et vos biens, mais aussi ceux d'autrui. Prière de lire toutes les instructions figurant dans cette notice d'utilisation avant d'essayer de vous servir de cette machine. Le non-respect de ces instructions peut entraîner des blessures corporelles. RESPECTEZ L'AVERTISSEMENT QUI ACCOMPAGNE CE SYMBOLE!



AVERTISSEMENT: Les gaz d'échappement de ce produit contiennent des produits chimiques reconnus dans l'État de Californie comme causant le cancer, des anomalies congénitales ou d'autres problèmes liés à la reproduction.



AVERTISSEMENT : Les bornes et cosses de batterie et d'autres accessoires annexes contiennent du plomb et des mélanges à base de plomb, soit des produits chimiques reconnus cancérogènes et responsables d'anomalies congénitales ou autres par l'État de Californie. Il est impératif de bien se laver les mains après toute maintenance.



DANGER: Cette machine doit être utilisée conformément aux consignes de sécurité qui figurent dans la notice d'utilisation. Comme avec tout appareil motorisé, une négligence ou une erreur de la part de l'utilisateur peut entraîner des blessures graves. Cette machine peut amputer mains et pieds et projeter des débris. Par conséquent, le non-respect de ces consignes peut causer des blessures corporelles graves et même mortelles.

Fonctionnement

Utilisation en général

1. Assurez-vous de lire et de bien comprendre toutes les instructions qui figurent sur la machine et dans la notice d'utilisation avant de l'assembler et de la mettre en marche. Conservez cette notice d'utilisation à un endroit sûr pour toute consultation ultérieure et pour commander des pièces de rechange.
2. Familiarisez-vous avec les commandes et leur fonctionnement avant de vous en servir. Sachez comment arrêter la machine et débayer les commandes rapidement.
3. Ne permettez jamais à des enfants de moins de 14 ans de se servir de la machine. Des enfants plus âgés doivent lire et comprendre le mode d'emploi de la machine et les consignes de sécurité. Un adulte doit leur apprendre à se servir de cette machine et les surveiller.
4. Seuls des adultes responsables connaissant bien le fonctionnement de la machine doivent être autorisés à s'en servir.
5. Gardez les spectateurs, les animaux de compagnie et les enfants à une distance d'au moins 75 pieds de la machine quand elle est en marche. Arrêtez la machine si quelqu'un s'approche.
6. Examinez soigneusement la zone de travail. Ramassez tous les pierres, bâtons, fils métalliques, os, jouets et autres objets qui risquent d'être projetés par les lames. Les objets projetés par la machine peuvent causer des blessures graves.
7. Prévoyez de travailler en évitant de projeter l'herbe vers des rues, des trottoirs, des spectateurs, etc. Évitez d'éjecter l'herbe en direction d'un mur ou d'un obstacle. De cette façon, les débris éventuels ne risquent pas de ricocher et de blesser quelqu'un.
8. Portez toujours des lunettes de sécurité en utilisant la machine ou en effectuant un réglage ou une réparation. Les objets risquent de ricocher et de blesser grièvement quelqu'un dans les yeux.
9. Portez des chaussures robustes à semelle épaisse et des vêtements bien ajustés. Ne portez jamais des vêtements lâches ni des bijoux qui risquent de se prendre dans les pièces en mouvement. N'utilisez jamais la machine pieds nus ou en portant des sandales.
10. Vérifiez la direction de la goulotte d'éjection du tracteur et ne l'orientez jamais vers des personnes. N'utilisez jamais le tracteur si le sac à herbe ou le dispositif de protection n'est pas installé.
11. Ne placez jamais vos mains ou vos pieds près d'une pièce en mouvement ou sous le plateau de coupe. Les lames peuvent amputer mains et pieds.
12. L'absence du clapet de la goulotte d'éjection ou un clapet endommagé peut causer des blessures en cas de contact avec les lames ou projeter des objets.
13. Arrêtez les lames avant de traverser une allée recouverte de gravier, un trottoir ou une route et quand vous ne tondez pas.

Merci !

Tous les renseignements fournis ici sont les plus récents qui sont disponibles à propos de ce produit au moment de l'impression de cette notice d'utilisation. Consultez souvent cette notice d'utilisation pour vous familiariser avec la machine, ses caractéristiques et son fonctionnement. Sachez que cette notice peut mentionner une vaste gamme de spécifications techniques concernant différents modèles. Les caractéristiques et les avantages mentionnés et/ou illustrés dans cette notice peuvent

Table des matières	
3	Consignes de sécurité
9	Assemblage de montage.....
12	Commandes et caractéristiques
15	Fonctionnement.....
22	Entretien et réglages.....
29	Service technique
35	Dépannage
36	Pièces de rechange.....
38	Accessoires.....
39	Garantie
40	Déclaration de garantie
40	du système antipollution

Enregistrez les renseignements concernant la machine.

machine.

Avant de préparer et d'utiliser votre nouvelle machine, veuillez localiser la plaque signalétique et reporter les renseignements fournis sur la droite. La plaque signalétique se trouve sous le siège du conducteur. Ces renseignements seront nécessaires si vous avez besoin d'une aide technique soit par l'intermédiaire de notre site internet, soit auprès du concessionnaire de votre localité.

[illegible]

NUMÉRO DE SÉRIE

NUMÉRO DE MODÈLE

Service après-vente

Veillez NE PAS retourner la machine au détaillant qui vous l'a vendue, sans vous adresser d'abord au service après-vente.

Nos techniciens peuvent vous aider si vous avez des difficultés en assemblant cette machine ou si vous avez des questions concernant ses commandes, son fonctionnement ou son entretien. Choisissez parmi les options ci-dessous :


- ♦ Visitez notre site web à www.cubcadet.ca

- ◇ Rendez visite au concessionnaire le plus proche de chez vous en appelant le service après-vente au 1-800-668-1238.

- LES DISTRIBUTIONS RVI LIMITÉE RVI LIMITÉE, 29/55, Jean-Baptiste Deschamps, Lachine, Québec H8T 1C5 Téléphone: 1-800-361-5770
 Écrivez-nous à Cub Cadet, 97 Kent Ave., Kitchener, ON N2G 4J1 Phone: 1-800-668-1238 ou

Cub Cadet®

NOTICE D'UTILISATION

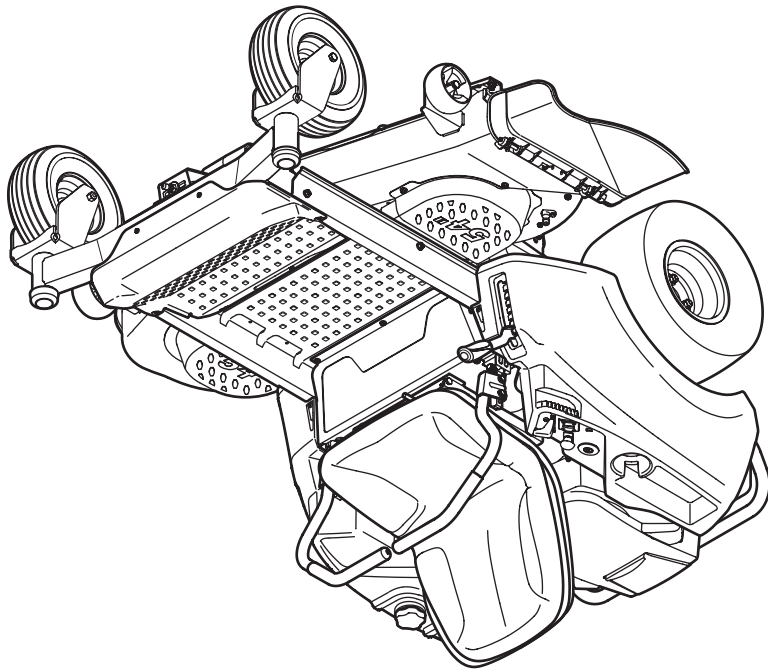

Tracteur à rayon de braquage zéro - Série L

⚠️ AVERTISSEMENT

**PRIÈRE DE LIRE TOUTES LES INSTRUCTIONS FIGURANT DANS CETTE NOTICE D'UTILISATION
AVANT D'ESSAYER DE VOUS SERVIR DE CETTE MACHINE. LE NON-RESPECT DE CES
INSTRUCTIONS PEUT ENTRAÎNER DES BLESSURES CORPORELLES.**

P. O. Box 1386, 97 Kent Avenue, KITCHENER, ONTARIO, CANADA N2G 4J1