EPSON® PowerLite® 720c/730c
Quick Setup

START HERE

Connect the projector to your laptop

For most setups, you'll need just these two cables:

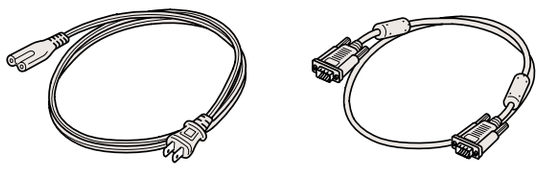

Power cord | Computer cable

1 Make sure your projector and laptop are turned off.

2 Connect one end of the computer cable to the **Computer/Component Video** port on the projector.

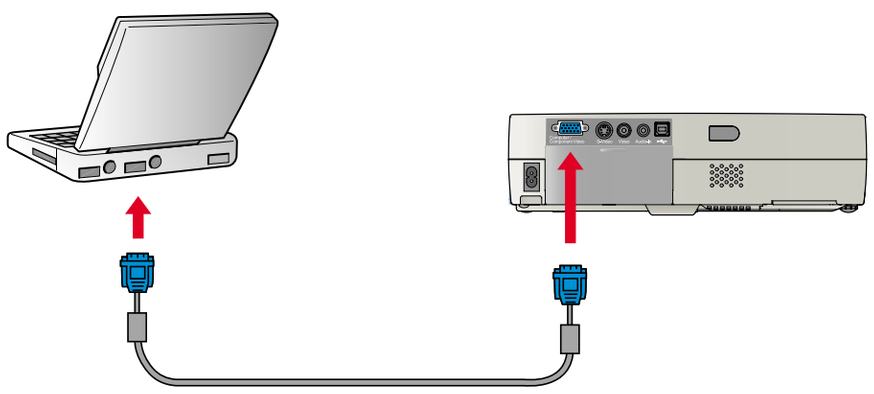

3 Connect the other end to your laptop's video or monitor port. If you can't connect the cable to your PowerBook®, you may need to use an adapter. See your *User's Guide* for instructions.

Follow these instructions to connect the projector to your laptop. To connect other devices, such as a VCR or desktop PC, see your *User's Guide*.

Turn on your equipment

1 Connect the power cord to your projector and plug the other end into an electrical outlet.

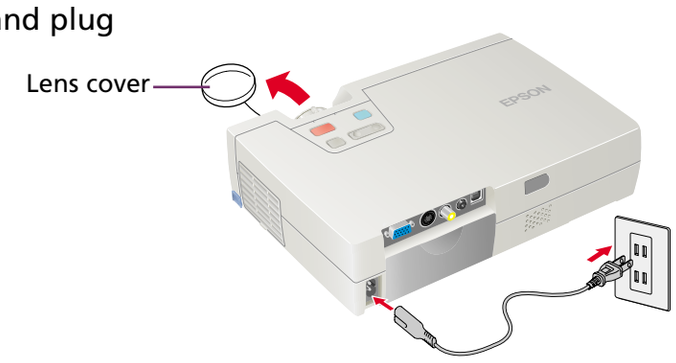

2 Remove the lens cover.

3 Press the red **Power** button. The power light flashes green, and then stays on.

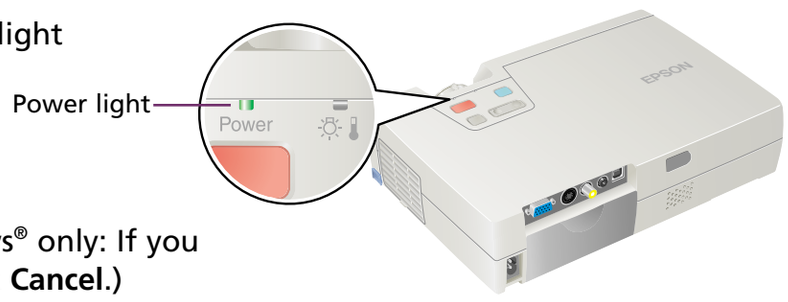

4 Turn on or restart your laptop. (Windows® only: If you see this Add New Hardware screen, click **Cancel**.)

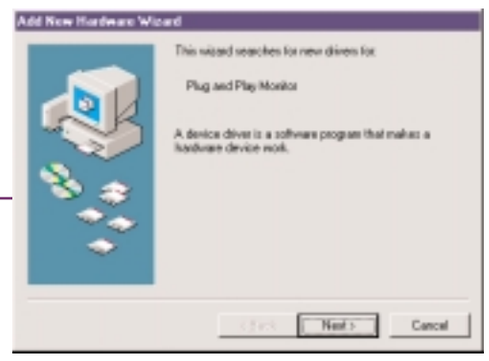

Caution: Before unplugging the projector...

To shut the projector down properly:

1. Press the red **Power** button twice. Let the projector cool while the ⏻ power light flashes orange (about 45 seconds).
2. Once the light stops flashing and stays on, it's safe to unplug the projector.

Never unplug the projector when the ⏻ power light is green or flashing orange.

Turn over

Quick Setup

EPSON® PowerLite® 720c/730c

Adjust the image

1 Rotate the focus ring to sharpen the image.

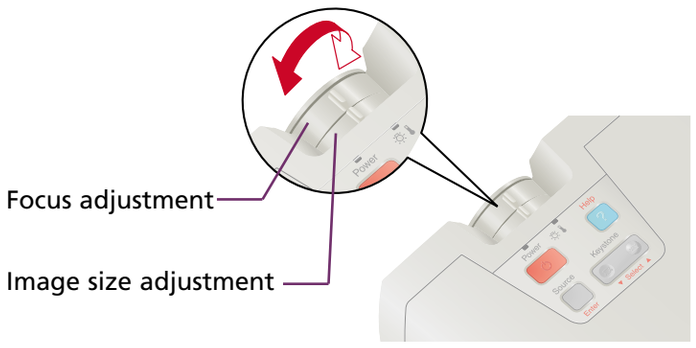

Note: If you see a blank screen after focusing, see the instructions to the right.

2 Rotate the zoom ring to reduce or enlarge the image. Turn to **W** (wide) to enlarge or **T** (tele) to reduce. (You can also move the projector closer to or farther from the screen.)

3 To raise the image, press the blue foot release levers inward and lift the front of the projector. Once the image is positioned where you want it, release the levers to lock the feet in position.

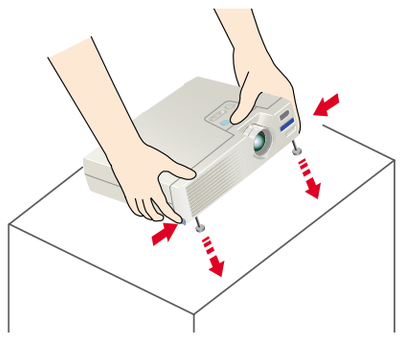

4 If your image looks like ▭ or ▭, you've placed the projector off to one side of the screen, at an angle. Move it directly in front of the center of the screen, facing the screen squarely.

5 If your image looks like ▭ or ▭, the Auto Keystone correction feature has been disabled. You can manually adjust the keystone correction value by pressing the ▱ or ▱ side of the **Keystone** button on the projector. Or, to enable Auto Keystone correction, refer to your *User's Guide*.

Where to get help

Telephone Support Services

To use the EPSON PrivateLine® Support service, call (800) 637-7661 and enter the PIN on the EPSON PrivateLine Support card included in your owner's kit. This service is available 6 AM to 6 PM, Pacific Time, Monday through Friday, for the duration of your warranty period. You may also speak with a projector support specialist by dialing one of these numbers:

U.S.: (562) 276-4394, 6 AM to 6 PM, Pacific Time, Monday through Friday
Canada: (905) 709-3839, 6 AM to 6 PM, Pacific Time, Monday through Friday

Toll or long distance charges may apply.

Electronic Support Services

EPSON provides technical assistance through electronic support services 24 hours a day at http://support.epson.com. For tips, templates, and training for developing successful presentations go to http://www.presentersonline.com.

If you see a blank screen

If you see a blank screen or the **No signal** message after turning on your laptop, check the following:

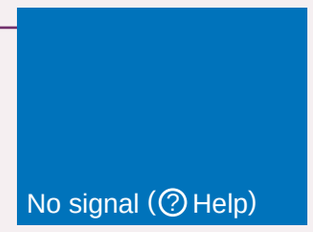

- Make sure the ⏻ power light is green and not flashing and the lens cover is off.
- Try turning off the laptop and restarting it.
- If you've connected more than one computer and/or video source, you may need to press the **Source** button on top of the projector. (Allow a few seconds for the projector to sync up after pressing it.)

If you're using a Windows laptop:

- Hold down the **Fn** button and press the function key that lets you display on an external monitor. It may have an icon such as 🖳/🖵, or it may be labelled **CRT/LCD**. Allow a few seconds for the projector to sync up after pressing it.

  On most systems, the 🖳/🖵 key lets you toggle between the LCD screen and the projector, or display on both at the same time.

- You might need to use the Display utility in the Control Panel to enable both the LCD screen and external monitor port. Check your laptop's manual or online help for details.

If you're using a Macintosh®:

1. From the Apple® menu, select **Control Panels**, then click **Monitors** or **Monitors and Sound**.

2. Click the **Arrange** icon.

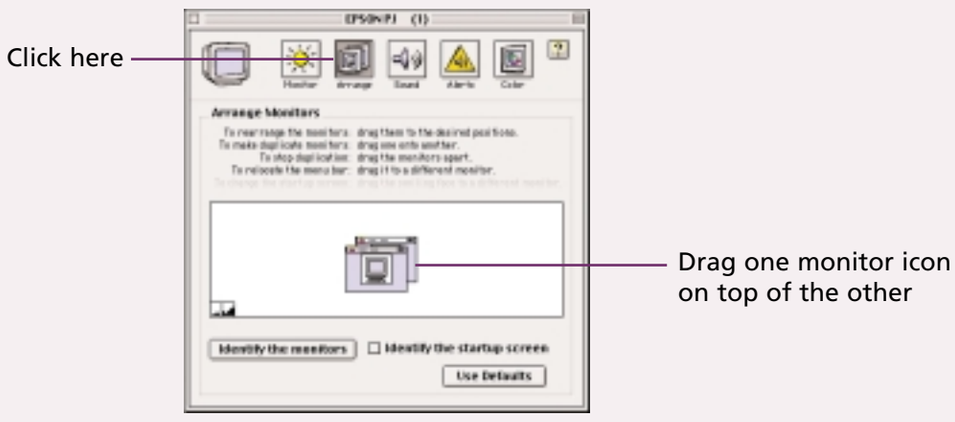

3. Drag one monitor icon on top of the other. This lets you display on the projector screen as well as the LCD screen.

   If the **Arrange** option isn't available, you may need to select one of the Simulscan resolution settings:

4. Click the **Monitor** icon.

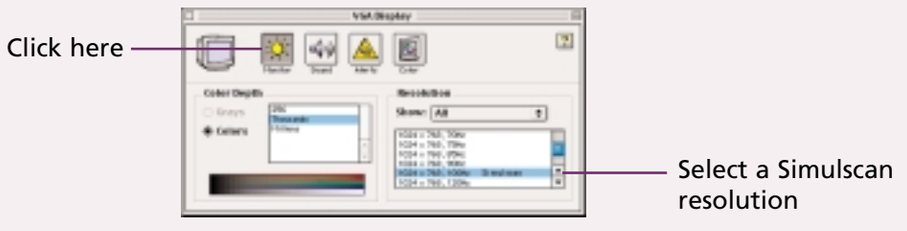

5. Select a **Simulscan** resolution as shown. (Allow a few seconds for the projector to sync up after making the selection.)

EPSON is a registered trademark of SEIKO EPSON CORPORATION. PowerLite and PrivateLine are registered trademarks of Epson America, Inc.
General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners.
EPSON disclaims any and all rights in those marks. Copyright © 2002 by Epson America, Inc. Printed in Japan. 5/02

CPD-13916R1