EPSON® PowerLite® 737c/745c Quick Setup

1 Turn On Your Equipment

1 Connect the power cord to the back of the projector and plug the other end into an electrical outlet.

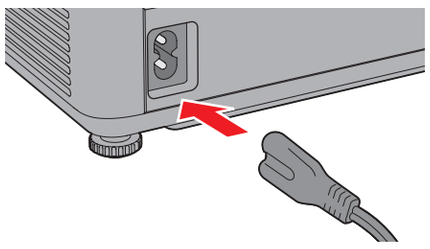

2 Remove the lens cover.

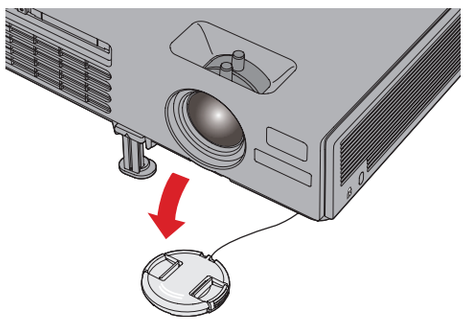

3 Remove the battery cover on the remote control. Locate the batteries that came with the projector and insert them as shown. Then replace the battery cover.

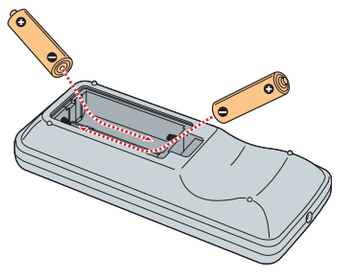

4 To turn the projector on, press the red ⏻ **Power** button on the projector or the remote control. The projector beeps once, and the projector's **Power** light flashes green and then stays on.

CAUTION: Before unplugging the projector...

Shut the projector down properly:

1. *Press the ⏻ **Power** button twice. Let the projector cool while the **Power** light flashes orange (about 20 seconds).*
2. *Once the light stops flashing and the projector beeps, it's safe to unplug the projector.*

2 Adjust the Image

1 To raise the image, press the blue foot release button for the front adjustable foot and lift the front. Release the button to lock the foot in position.

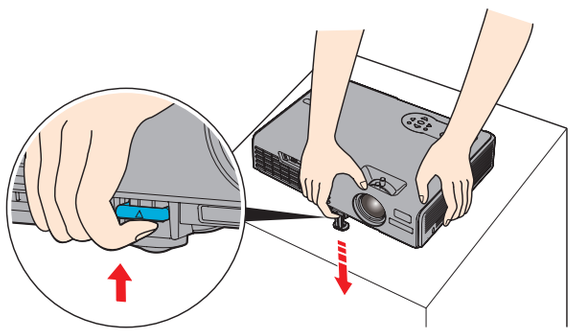

2 Turn the focus ring to sharpen the image.

Turn the zoom ring to reduce or enlarge the image.

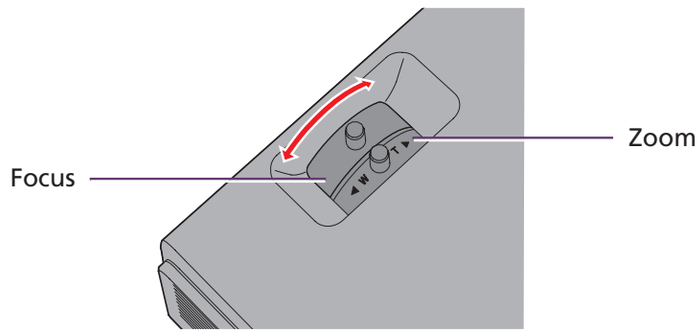

3 If your image looks like ▭ or ▭, you've placed the projector off to one side of the screen at an angle. Place it directly in front of the screen, facing the screen squarely.

4 If your image looks like ▭ or ▭, press the ▭ or ▭ buttons on the projector to correct it.

3 Choose a Presentation Method

How do you want to get images to the projector?

- To connect to a notebook, see "If connecting to a notebook" below.
- To project over an 802.11g/b network, see "If projecting wirelessly" on the back of this sheet.

  You must have installed the projector's EasyMP™ software and configured your projector and computer before you can project wirelessly. See your *User's Guide* for instructions.
- To give a presentation stored on a memory card, see Chapter 5 in your *User's Guide*.

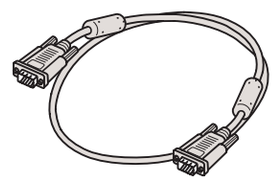

Computer cable

Wireless card

If connecting to a notebook...

1 Make sure you've turned on the projector and adjusted the image as described in sections 1 and 2.

2 Locate the computer cable that came with the projector. Connect one end to the projector's blue **Computer/Component Video** port.

Connect the other end to your notebook's video-out port or ▭ monitor port. If you can't connect the cable to your PowerBook®, you may need to use an adapter. See your *PowerLite 737c/745c User's Guide* for instructions.

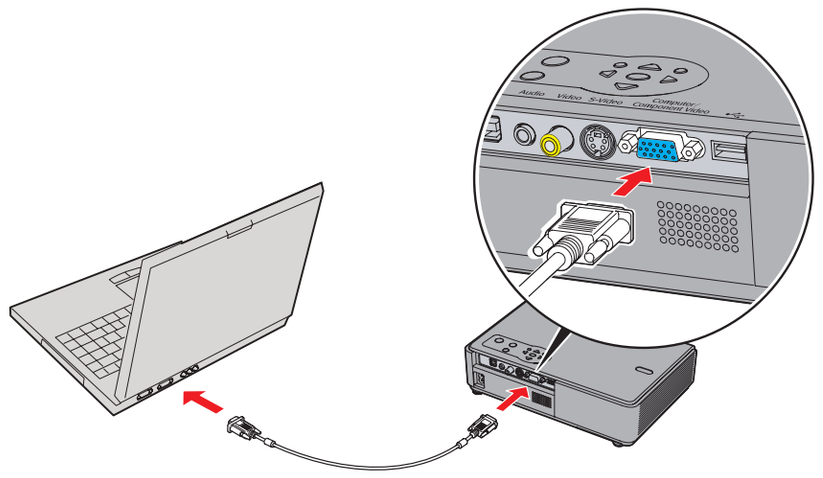

3 Press the **Source Search** button on the projector until your computer image is displayed.

Turn over

4 If you see a blank screen or you don't see the image you are trying to project from your computer, make sure the **Power** light on the projector is green and not flashing, and the lens cover is off. If the screen is still blank, restart your notebook, or press the **Source Search** button on the projector again.

Windows®: Hold down the **Fn** button on the keyboard and press the function key that lets you display on an external monitor. It may have an icon such as ⧉/▢, or it may be labeled **CRT/LCD**.

5 If your projector and notebook don't display the same image, do the following:

Windows: Try using the **CRT/LCD** or ⧉/▢ function key, as described above. If this doesn't work, double-click **Display** in the Windows Control Panel. Make sure both the LCD screen and monitor port are enabled. (Allow a few seconds for the projector to sync up.) See your Windows online help for details.

Macintosh® OS X: From the **Apple** menu, select **System Preferences**, then click **Displays**. Select the **VGA Display** or **Color LCD** dialog box, click the **Arrangement** (or **Arrange**) tab, and make sure **Mirror Displays** is checked.

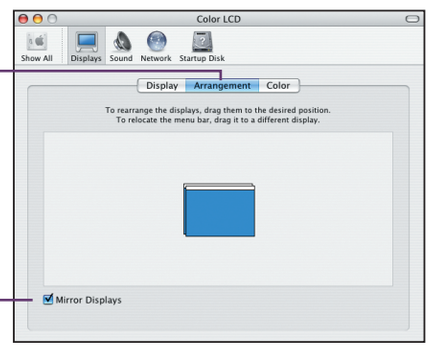

Macintosh OS 9 or earlier: From the **Apple** menu, select **Control Panels**, then click **Monitors** or **Monitors and Sound**. Click the **Arrange** icon, then drag one monitor icon on top of the other; this lets you display on both the projection screen and the LCD screen. If this option isn't available, click the **Monitor** icon and select a **Simulscan** resolution.

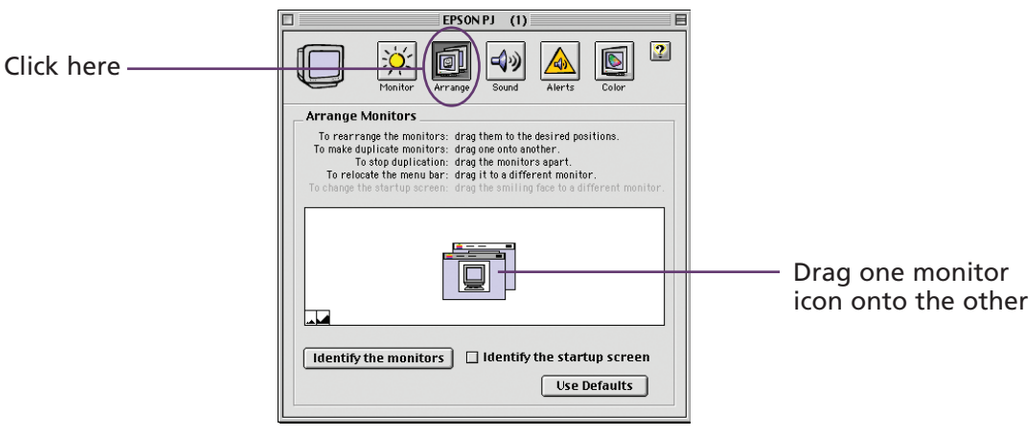

6 If you see an image but it's not displayed correctly, press the **Auto** button on the remote control to automatically readjust it.

If projecting wirelessly...

Follow the steps in this section to project over an 802.11g or 802.11b wireless network from a computer running Windows 98, 2000, Me, XP, or Macintosh OS X 10.2.4 or above.

NOTE: *You must have already installed the projector's EasyMP (EMP NS Connection) software and configured your projector and computer. See the* User's Guide *for instructions. Also, your computer must have an 802.11g or 802.11b network card or transmitter installed.*

1 Make sure you've turned on the projector and adjusted the image as described in sections 1 and 2 on the front of this sheet.

2 Select EasyMP as the source by pressing the **EasyMP** button on the remote control.

3 Insert the Epson 802.11g card with the label facing upward, as shown. When fully inserted, the end of the card will protrude.

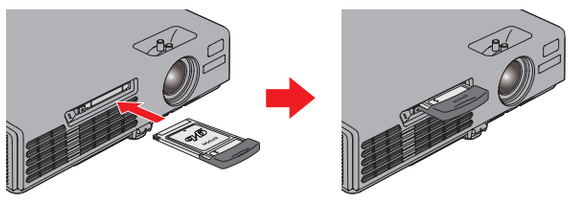

NOTE: *Use only the Epson 802.11g card. Other brands may not be compatible and are not guaranteed to work.*

Once the card is inserted, the projector displays a screen like this:

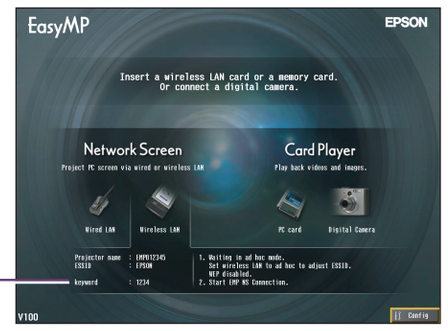

4 **Windows:** From the Start menu, select **EMP NS Connection**.

Macintosh OS X: Double-click the **EMP NS Connection** icon in your Applications folder.

5 If you see this screen, select the name and IP address for your computer's 802.11g or 802.11b wireless card and click **OK**.

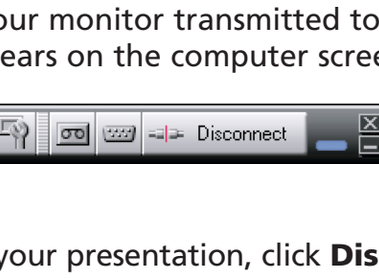

You see this screen:

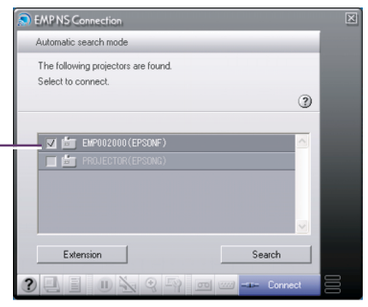

If the connection is working properly, you see your projector listed. If you don't see your projector listed, restart your computer. If it still doesn't appear, see the *User's Guide* for help.

6 Once the name of your projector appears, select it and click **Connect**.

7 If you see a message asking for a keyword, enter the four digits that appear on the EasyMP Network Screen and click **OK**. (See the screen at the top of this column to locate the projector keyword.)

You see the image on your monitor transmitted to the projector, and a floating control bar appears on the computer screen:

8 When you're done with your presentation, click **Disconnect** on the control bar.

Where To Get Help

Telephone Support Services
To use the Epson PrivateLine® Support service, call (800) 637-7661 and enter the PIN on the Epson PrivateLine Support card included in your *Start Here* kit. This service is available 6 AM to 6 PM, Pacific Time, Monday through Friday, for the duration of your warranty period. You may also speak with a projector support specialist by dialing one of these numbers:

U.S.: (562) 276-4394, 6 AM to 6 PM, Pacific Time, Monday through Friday
Canada: (905) 709-3839, 6 AM to 6 PM, Pacific Time, Monday through Friday

Toll or long distance charges may apply.

Electronic Support Services
Epson provides assistance through electronic support services 24 hours a day at http://support.epson.com. For tips, templates, and training for developing successful presentations go to http://www.presentersonline.com.

Don't forget to register!

Fill out the registration card included in your *Start Here* kit and mail it to Epson. Or register online at www.epson.com/webreg.

Epson is a registered trademark and EasyMP is a trademark of Seiko Epson Corporation. PowerLite and PrivateLine are registered trademarks of Epson America, Inc.

General Notice: Other product names are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

© 2005 Epson America, Inc. 1/05

CPD-19398
Printed in XXXXXXXXX