



For FAQs and more information, please visit:

www.eufylife.com




Cleaning

Quick Start Guide


RoboVac

Guía de inicio rápido

Using Your RoboVac

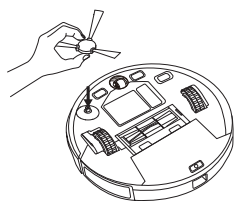


1

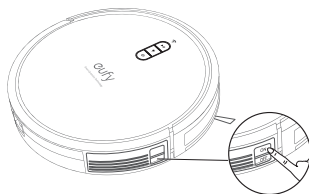


2



Remove the sticker next to the power switch, and the foam blocks beside the bumper before use.



3

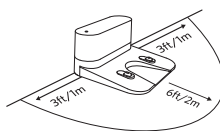


4




If you cannot remove the objects surrounding the Charging Base, check whether RoboVac can return without assistance; if not, contact eufy customer service for help.



- Always keep the Charging Base plugged in, otherwise RoboVac will not automatically return.
- When the Charging Base is connected to AC power, the LED indicator on the Charging Base is SOLID WHITE.

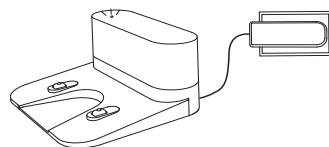

5

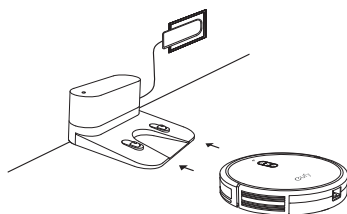


6



Fully charge RoboVac before use. The LED indicator on the  button breathes orange while charging, and turns solid blue when fully charged.



Download the EufyHome app and follow the in-app instructions to complete the Wi-Fi connection. You then will be able to control RoboVac via this app. Refer to the Owner's Manual for details.

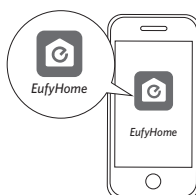


7

Download on the
App Store

GET IT ON
Google Play

Important Tips

When using for the first time, follow RoboVac to observe and resolve any problems that may occur.

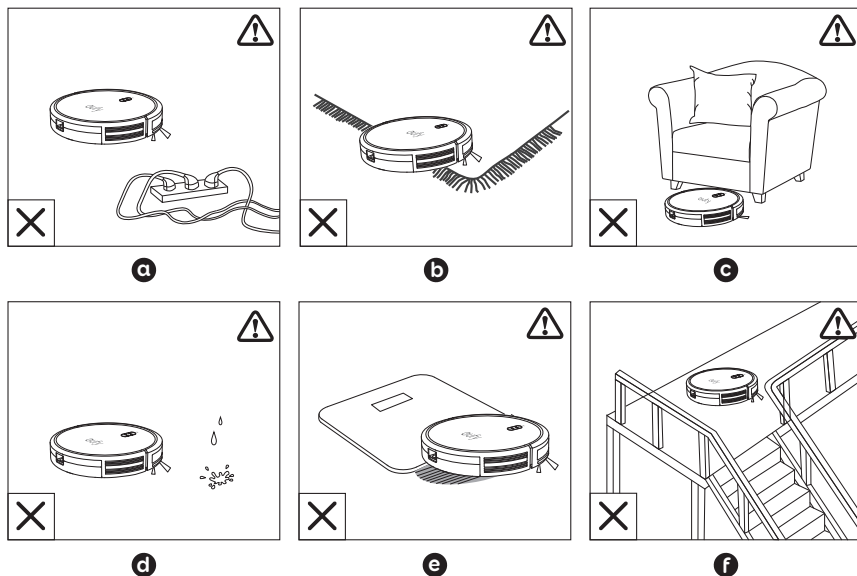


- a** Remove power cords and small objects from the floor that may entangle RoboVac.
- b** Fold tasseled edges of area rugs underneath to prevent tangling RoboVac. Avoid cleaning very dark-colored rugs or high-pile rugs thicker than 1.02 in/26 mm as they may cause RoboVac to malfunction.
- c** Keep RoboVac away from spaces lower than 2.87 in/73 mm to prevent RoboVac from getting stuck. If necessary, place a physical barrier to block off the problem areas.
- d** Keep RoboVac away from wet areas.
- e** RoboVac may climb on top of objects less than 0.63 in/16 mm in height. Remove these objects if possible.
- f** Anti-drop sensors will prevent RoboVac from tumbling down stairs and steep drops in most cases. Sensors are **less effective** if dirty or when used on carpeted/reflective/very dark-colored floors. It is recommended to place physical barriers to block off areas where RoboVac may fall.




Place physical barriers in front of fireplaces and areas that may cause damage to RoboVac if entered.

Uso del RoboVac

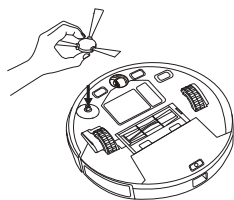


1

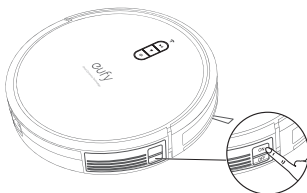


2



Quite el adhesivo que hay junto al interruptor principal y los bloques de espuma junto al paragolpes antes de usar el dispositivo.



3

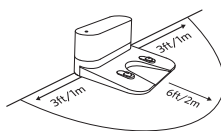


4




Si no puede retirar los objetos cercanos a la base de carga, compruebe que el RoboVac puede volver a la base de carga sin ayuda; de lo contrario, póngase en contacto con el servicio de atención al cliente de eufy para obtener asistencia.



- Mantenga siempre la base de carga enchufada. De lo contrario, el RoboVac no volverá automáticamente.
- Cuando la base de carga está conectada a la corriente alterna, el indicador LED de la base de carga se enciende de color BLANCO FIJO.

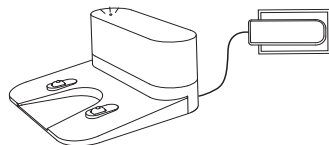

5

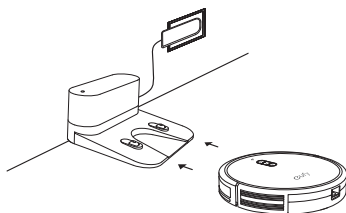


6



El indicador LED del botón  parpadea en color naranja durante la carga y cambia a azul fijo cuando está completamente cargado.



Descargue la aplicación EufyHome y siga las instrucciones de la aplicación para completar la conexión Wi-Fi. Una vez que haya establecido la conexión, podrá controlar el RoboVac a través de la aplicación. Consulte el manual del propietario para obtener más información.

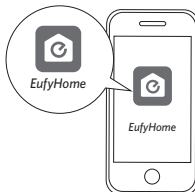


7

Download on the
App Store

GET IT ON
Google Play

Consejos importantes

La primera vez que utilice el RoboVac, sígalo para observarlo y resolver cualquier problema que pueda producirse.

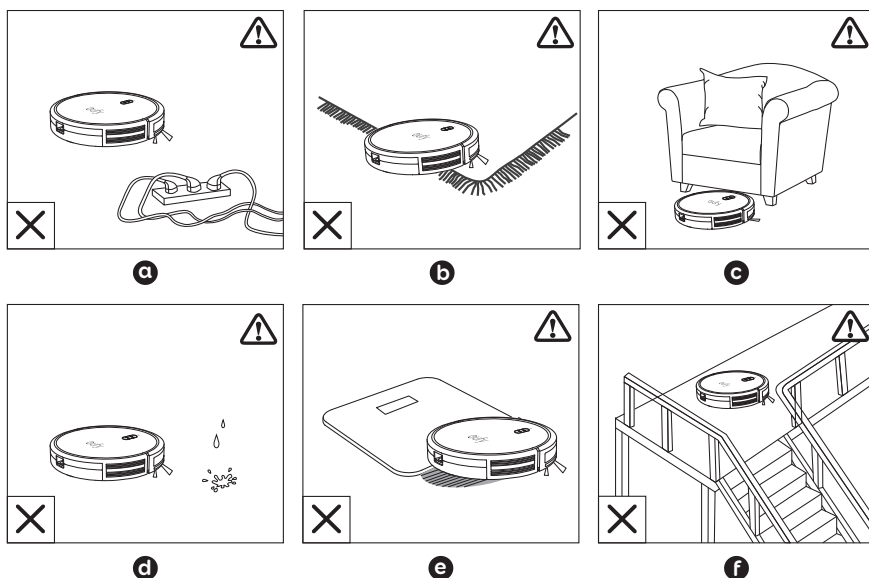

- a** Retire del suelo los cables de alimentación y los objetos pequeños que se puedan enredar con el RoboVac.
- b** Pliegue los bordes con flecos de las alfombras para evitar que el RoboVac se enrede. Evite limpiar alfombras de pelo largo, de colores muy oscuros o de un grosor superior a 26 mm, ya que el RoboVac podría no funcionar correctamente.
- c** No limpie espacios de menos de 73 mm de altura para evitar que el RoboVac se quede atascado. Si es necesario, coloque una barrera física para bloquear las zonas problemáticas.
- d** No permita que el RoboVac acceda a áreas mojadas.
- e** El RoboVac podría subirse a objetos de hasta 16 mm de altura. Retire estos objetos, de ser posible.
- f** Los sensores anticaiída evitarán que el RoboVac se caiga por escaleras y desniveles bruscos en la mayoría de los casos. Los sensores son menos eficientes si están sucios o cuando se usan en suelos con alfombras, reflectantes o de colores muy oscuros. Se recomienda colocar barreras físicas para bloquear las zonas por las que el RoboVac podría caer.



Coloque barreras físicas delante de chimeneas y zonas en las que el RoboVac podría sufrir daños al entrar.

