

Ibanez

TS808HWV2

OWNER'S MANUAL

- DEUTSCH / BEDIENUNGSANLEITUNG
 - FRANÇAIS / MANUEL DE L'UTILISATEUR
 - ESPAÑOL / MANUAL DEL USUARIO
 - ITALIANO / MANUALE D'ISTRUZIONI
 - NEDERLANDS / GEBRUIKERSHANDLEIDING
 - РУССКИЙ / РУКОВОДСТВО ПОЛЬЗОВАТЕЛЯ
 - POLSKI / INSTRUKCJA OBSŁUGI
 - PORTUGUÊS / MANUAL DO PROPRIETÁRIO
- <https://www.ibanez.com/world/support/manual/>



- ENGLISH / OWNER'S MANUAL
 - 日本語 / 取扱説明書
- <http://www.hoshinogakki.co.jp/pdf/ibanez/manual/en/electronics/TS808HWV2.pdf>



- 中国語 / 用户手册
- <http://www.hoshinogakki.co.jp/pdf/ibanez/manual/cn/electronics/TS808HWV2.pdf>



ENGLISH

Before using this device, be sure to read this manual thoroughly for safe use of it. After that, keep this manual in a safe place and read it whenever necessary.

Safety Precautions === Be sure to observe the following precautions ===	
In order to use this device properly, the contents to be observed are explained, classified as follows. ■ The severities of the injury and damage due to incorrect usage by ignoring the written contents are explained by the following classified indications.	
⚠ Warnings	Indicates a potentially hazardous situation which, if not avoided, will result in death or serious injury.
⚠ Cautions	Indicates a potentially hazardous situation which, if not avoided, will result in injury or property damage.

- The contents to be observed are explained, being classified by the following pictograms.
- ❗ ... This pictogram shows a compulsory action, something that you must do.
- 🚫 ... This pictogram shows a prohibition, something that you must not do.
- ⚠ ... This pictogram shows a notice, something that you need to be alerted to.

⚠ Warnings	
🚫	Never disassemble or modify the device.
⚠	In case of an abnormality such as smoke, burning smell or abnormal sound, immediately stop using the device.
🔌	Immediately unplug the AC adapter from the outlet.
🧴	Do not operate with wet hands. <<A short circuit or an electric shock may occur.>>

⚠ Cautions	
⚠	Be sure to use the specified AC adapter. <<Using an unspecified AC adapter may cause a fire or an electric shock.>>
🚫	Do not store or use the device in places such as a bath or outdoors where water splashes. Also do not use it in places of high humidity, places with a lot of dust, or at high temperatures. <<A fire, an electric shock or a failure may occur.>>
🚫	Do not store in places of excessive vibrations. <<It may cause a failure.>>
🔌	When not in use for a long time, be sure to unplug the AC adapter from the outlet for safety. <<A fire may occur.>>
🚫	Do not apply excess force, drop nor give strong physical impact. <<A failure or injury may occur.>>
🚫	Do not use thinner, alcohol, and the like for cleaning. <<It may cause a failure.>>

=== Observe the following instructions with a product that uses a battery ===

⚠ Warnings	
❗	Do not throw a battery into a fire. <<A burst, heat generation and a fire may occur.>>


⚠ Cautions	
❗	Mount a battery with its polarities +/- set correctly. <<It may cause a failure.>>
❗	Remove the battery when not in use for a long time. <<Liquid leak may cause a failure.>>

SPECIFICATIONS

Input Impedance	470k ohms
Output Impedance	180 ohms
Maximum Output Level	+16.1 dBu
Power Supply	One 9 V battery (006P) or external AC adapter (Use DC 9 - 18 V )
Required Current	7 mA @ 9 V, 11 mA @ 18 V
Size [mm]	77 (W) × 132 (D) × 60 (H)
Size [inch]	3.0" (W) × 5.2" (D) × 2.4" (H)
Weight	545 g, 1.2 lbs




OPERATION

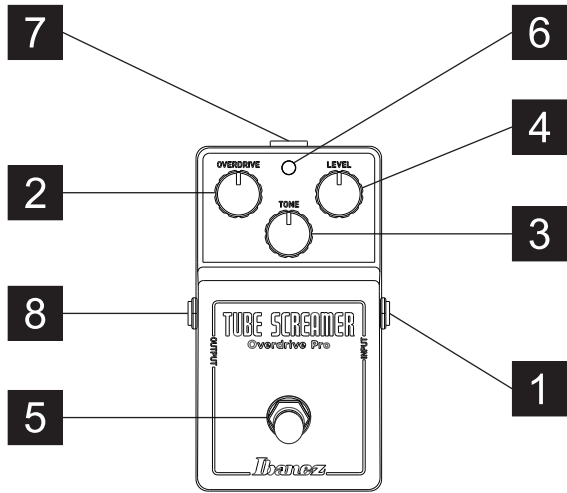

- 1 INPUT:**
Connects an instrument, such as a guitar or the output of another effect device, via a shielded cable. Plugging into this jack automatically puts power to the unit.
- 2 OVERDRIVE:**
Adjusts the amount of distortion.
- 3 TONE:**
Controls the amount of high frequency contour. Adds bite to the sound or makes it mellower.
- 4 LEVEL:**
Controls the level of the distorted signal.
- 5 On/off switch:**
Switches effect on/off.
- 6 LED Indicator:**
Lights when the effect is on. It also serves as a battery check. If this LED is dim or does not light, replace the battery.
- 7 EXT DC input:**
Be sure to use a center negative external DC power supply (AC/DC adapter etc.). When using this jack, an internal battery is switched off. This pedal allows you to use a DC 9-18 V power supply. "Regulated DC adapters only"
- 8 OUTPUT:**
Connects an amp or another effect pedal, via a shielded cable.

CHANGING THE BATTERY

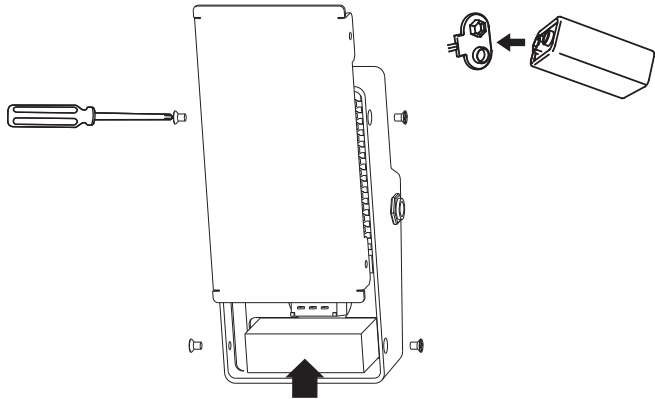

- Replace the battery with a 006P 9 volt battery ONLY.
- When opening the rear panel for battery replacement, make sure the AC adapter is not connected. When the rear panel is opened, electronic components appear. Do not touch them with a conductor such as metal or it may cause damage to the equipment or electric shock.
 1. Remove the four screws on the side of the chassis with a Phillips-head screwdriver.
 2. Connect the new battery and place it in the case.
- Unplug the instrument when not in use to prolong the battery life.
- You will hear some loss of level when the battery begins to run down.

Ibanez

TS808HWV2

取扱説明書

日本語	
機器を安全にご使用いただくため、ご使用前にこの取扱説明書を必ずお読みください。そのあとは大切に保管し、必要になったときにお読みください。	
安全上のご注意== 必ずお守りください ==	
機器を正しくご使用いただくために、必ずお守りいただくことを次のように区分して説明しています。 ■表示内容を無視して誤った使い方をしたときに生じる危害や損害の程度を次の表示で区分して説明しています。	
⚠ 警告	この表示の欄は、「人が死亡または重傷などを負う可能性が想定される」内容を示しています。
⚠ 注意	この表示の欄は、「傷害を負う可能性または物的損害が発生する可能性が想定される」内容を示しています。

■ お守りいただく内容の種類を、次の絵表示で区分して説明しています。
❗❗…この絵表示は、必ず実行していただく「強制」の内容を示しています。
⊘⊘⊘…この絵表示は、してはいけない「禁止」の内容を示しています。
⚠…この絵表示は、気をつけていただきたい「注意喚起」の内容を示しています。

⚠ 警告	
⊘	機器を絶対に分解・改造しないでください。
⚠	煙が出たり、異臭や異音がする場合、直ちに機器の使用を中止してください。 ❗ 直ちにコンセントから AC アダプターを抜いてください。
⊘	水滴のついた手で操作をしないでください。 《ショート・感電の恐れがあります。》


⚠ 注意	
⚠	必ず指定の AC アダプターをご使用ください。 《指定以外の AC アダプターを使用すると火災、感電の原因になることがあります。》
⊘	風呂場や屋外など水のかかる所、湿度が高いところ、ほこりの多い所、温度の高い所では保管や使用をしないでください。 《火災・感電や故障の原因になることがあります。》
⊘	振動の多い場所で保管しないでください。 《故障の原因になります。》
❗	長期間機器を使用しないときは、安全のため、必ず AC アダプターをコンセントから抜いてください。 《火災の原因になることがあります。》
⊘	本体に無理な力を加えたり、落としたり、強くぶつけたりしない。 《故障・けがの原因になります。》
⊘	お手入れにはシンナー・アルコール類は使用しない。 《故障の原因になります。》

==== 電池を使用する商品のみ、以下の指示を必ずお守りください ====

⚠ 警告	
❗	電池を火の中に入れない。 《破裂・発熱・発火の恐れがあります。》

⚠ 注意	
❗	電池は +/- を正しく装着する。 《故障の原因になります。》
❗	電池は長時間使用しないときは外す。 《漏液等で故障の原因になります。》

主な仕様	
Input Impedance	470k ohms
Output Impedance	180 ohms
Maximum Output Level	+16.1 dBu
Power Supply	One 9 V battery (006P) or external AC adapter (Use DC 9 - 18 V ⊕ ⊖ ⊖)
Required Current	7 mA @ 9 V, 11 mA @ 18 V
Size [mm]	77 (W) × 132 (D) × 60 (H)
Size [inch]	3.0" (W) × 5.2" (D) × 2.4" (H)
Weight	545 g, 1.2 lbs

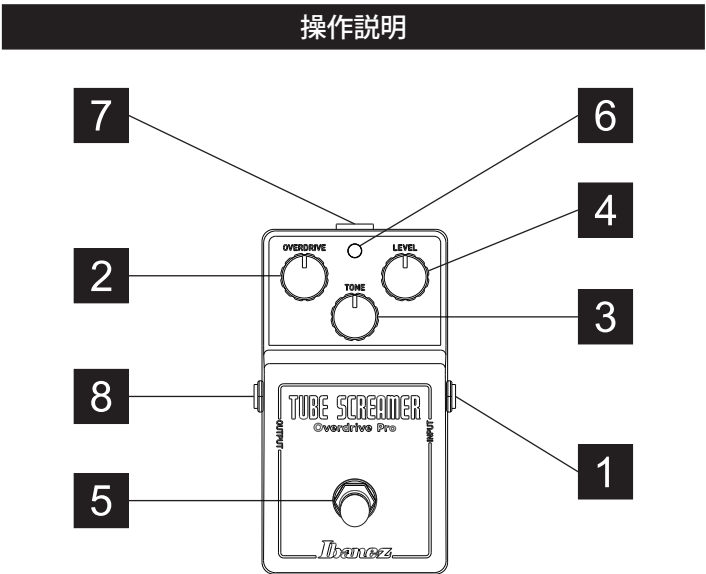

1 インプット：
ギター等の楽器や、他のエフェクターのアウトとシールド・ケーブルで接続します。プラグを挿すと電源が供給されます。

2 OVERDRIVE：
歪み（オーバードライブ）の量を調節します。

3 TONE：
高音域のレベルを調節します。
サウンドに鋭さを与えたり、柔らかな感じにします。


4 LEVEL：
歪み信号のレベルを調節します。

5 オン / オフスイッチ：
エフェクト オン / オフを切り替えます。

6 LED インジケーター：
エフェクトオンの時に点灯します。
LED が暗くなったり点灯しない場合は、電池を交換してください。

7 DC ジャック：
必ずセンターマイナスの外部 DC 電源（AC/DC アダプター等）をご使用ください。9 ～ 18V に対応しています。
必ず 18V 以下の出力に制御された電源をお使いください。このジャックの使用中は、内部の電池がオフになります。

8 アウトプット：
アンプや他のエフェクターのインプットにシールド・ケーブルで接続します。

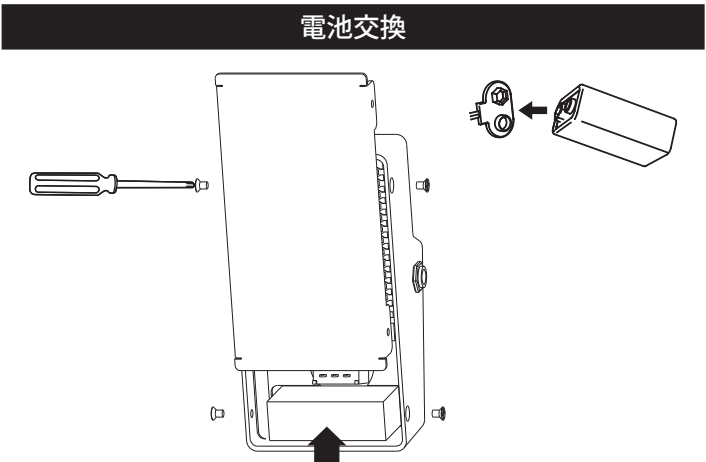

- 006P 型 9V 電池 1 本をお使いください。
- 電池交換のため裏蓋を開けるときは AC アダプターが接続されていないことを必ずご確認ください。また裏蓋を開けた際、電子部品に金属など電気が導通するものを接触させないようにしてください。機器の破損や感電する恐れがあります。
 1. 本体の側面に取り付けてある4本のビスを、+ドライバーで取りはずします。
 2. 電池にスナップを接続し、ケースに納めます。
- 使用しない時はインプット・ジャックからプラグを抜いておいてください。プラグを挿したままにすると、電池が消耗してしまいます。
- 電池が消耗すると、レベルがある程度低下します。

Ibanez 製品保証書	
フリガナ ご氏名	
ご住所 〒	TEL
製品名： TS808HWV2	保証期間： お買い上げ日 年 月 日より 1ヵ年
販売店名・住所・TEL	
●枠欄に記載漏れがある場合は保証書が無効となりますので、記入の有無をご確認ください。 ●本保証書は下記記載の保証規定に基づき、お買い上げの日より1年間無償修理を行うことをお約束するものです。 ●本書は再発行致しませんので大切に保管してください。	

保証規定	
1. 当保証書は、取扱説明書の指示内容に従った適切なご使用にも関わらず本製品が故障した場合においてのみ、ご購入日より1年間の無償修理をお約束するものです。 保証修理をご希望の場合は、お買い求め頂いた販売店様に当保証書と一緒に本製品をお持ち込みの上、ご依頼下さい。尚、インターネット等通信販売ご利用の場合も同様に、お買い求め頂いた販売店様が受付窓口になります。 2. 本製品を販売店様に持ち込まず、販売店様へ送付される場合、それに要する費用は保証期間内であってもお客様のご負担となります。又、輸送中に生じた損傷、故障に関しては保証対象外となりますのでご注意ください。 3. 保証期間内であっても以下の場合には有償修理となります。 ①当保証書の提示が無い場合。 ②お買上げ年月日、お客様名、販売店名等が無記入のもの、または記入事項が改ざんされたもの。もしくは偽造されたもの。 ③不適切な使用方法(取扱説明書の指示内容に反する誤った取扱い等)や過酷な使用・保管状況(気温・湿度・日照等)、およびお客様側の不注意(転倒・落下等)により生じた損傷ならびに故障。 ④故障の原因が本製品および付属品以外の接続機器や使用環境に求められる場合。 ⑤弊社以外による修理、改造加工等が原因の場合。 ⑥電池や弦、真空管など消耗品の劣化によるもの。 ⑦天災(地震・洪水・突風他)、人災(火事・浸水他)、交通事故等により生じた損傷ならびに故障。 ⑧中古品、並行輸入品、個人売出品。 4. 当保証書は再発行いたしませんので、紛失しないよう本製品と一緒に大切に保管してください。 5. 当保証書は他人に譲渡できません。 6. 本製品に初期不良が疑われる場合は、使用を中止して速やかにお買い求め頂いた販売店様までご連絡ください。 7. 本製品の故障、またはその使用によって生じた直接、間接の損害については当社はその責任を負いません。 8. 当保証書は日本国内においてのみ有効です。(This warranty card is valid only in Japan.) 9. その他ご不明な点に関しましては、お買い求め頂いた販売店様にご相談ください。 ※当保証書は、お買い求めいただいた本製品に対し弊社から適正なアフターサービスを提供する事を目的に作成されており、記載いただいたお客様の個人情報第三者に開示、譲渡、貸与することはありません。ただし下記の場合を除きます。 *あらかじめお客様の同意が得られている場合。 *お客様からのお問い合わせに対する回答を目的に、星野楽器販売株式会社の関連会社や販売店等に開示することが必要と認められる場合。 *統計データとしてお客様個人を識別できない状態に加工した場合。	