



For more information go to logi.com/support/pop. © 2016 Logitech. All rights reserved. Logitech, Logi and other Logitech marks are owned by Logitech and may be registered. The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Logitech is under license. All other trademarks are the property of their respective owners.

Pour plus d'informations, rendez-vous sur le site logi.com/support/pop. © 2016 Logitech. Tous droits réservés. Logitech, Logi et les autres marques Logitech sont la propriété de Logitech et sont susceptibles d'être déposées. La marque et les logos *Bluetooth*® sont des marques déposées détenues par Bluetooth SIG, Inc. et sont utilisés par Logitech sous licence. Toutes les autres marques sont la propriété exclusive de leurs détenteurs respectifs.


620-007208.004

POP HOME SWITCH

Add-on Switch Setup Guide

INTERRUPTEUR POP

Guide d'installation
d'un interrupteur supplémentaire

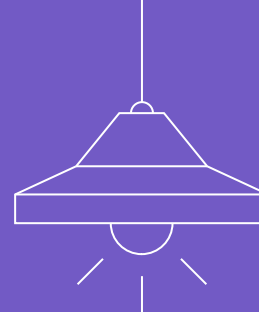

THINGS YOU'LL NEED TO BEGIN

Logitech Pop Home Switch Starter Kit (sold separately)

Wi-Fi internet connection

iOS or Android™ phone:

- iPhone 5 or later and iPod 5th Gen or later with iOS 9 or higher
- Android phone with Android 4.4 or higher and *Bluetooth®* Smart

SETTING UP YOUR POP HOME SWITCH

Download the Logitech Pop app from the App Store or Google Play.

Launch the app and login. Tap the pencil icon in the upper right corner. Then tap the “+” sign on the bottom of the screen for a guided setup.

EASY INSTALL — NO TOOLS OR WIRES

Use your Pop Home Switch anywhere in your home. You can mount your Pop Home Switch to a wall or countertop. Just stick the double-sided mounting tape on a clean, smooth surface and then place your Pop Home Switch on the tape, hold it in place for 20 seconds, and you're done. It's easy to move your Pop Home Switch — just twist to pull the switch off the wall.

To clean your Pop Home Switch, use a damp cloth with soap and water or rubbing alcohol.

POINTS À CONNAÎTRE POUR COMMENCER

Kit de démarrage pour interrupteur Logitech Pop (vendu séparément)

Connexion Internet Wi-Fi

Téléphone iOS ou Android™:

- iPhone 5 ou version ultérieure et iPod 5G ou version ultérieure avec iOS 9 ou version ultérieure
- Téléphone Android avec Android 4.4 ou version ultérieure et *Bluetooth®* Smart

CONFIGURATION DE VOTRE INTERRUPTEUR POP

Téléchargez l'application Logitech Pop à partir de l'App Store ou de Google Play.

Lancez l'application et connectez-vous. Appuyez sur l'icône en forme de crayon dans l'angle supérieur droit. Puis appuyez sur l'icône + au bas de l'écran pour une installation guidée.

INSTALLATION FACILE: SANS OUTILS NI CÂBLES

Utilisez votre interrupteur Pop partout chez vous. Vous pouvez installer votre interrupteur Pop sur un mur ou un comptoir. Il vous suffit d'appliquer l'adhésif de fixation double-face sur une surface propre et lisse, puis de placer l'interrupteur sur l'adhésif et de le maintenir en place pendant 20 secondes. Votre interrupteur Pop est facile à déplacer, il vous suffit de le pivoter pour le décrocher du mur.

Pour nettoyer votre interrupteur Pop, utilisez un chiffon humide avec du savon et de l'eau, ou de l'alcool.