

Mantis[®] Tiller/Cultivator

Motobêche-bineuse



MODEL 7940A
MODÈLE 7940A

Operator's Manual and Safety Instructions for
Tiller/Cultivator

Manuel de l'utilisateur et consignes de
sécurité pour la motobêche-bineuse

MAN 802-0007

Rev. B 5/2025

OPERATOR'S/PARTS MANUAL
MANUEL DE L'UTILISATEUR / PIÈCES DÉTACHÉES



Welcome to the World of Mantis Gardening

Here's your new MANTIS Tiller . . . the lightweight wonder that's Changing the Way Americans Garden.®

Unlike big tillers, your MANTIS Tiller weighs only 24 lbs. (Model 7940A), so it lifts easily, handles smoothly, and tills and weeds precisely. And unlike other small tillers, it features serpentine tines that churn soil to 10" deep, creating a soft, smooth seed bed, even in problem soil.

Once you know how to use your tiller correctly, we guarantee you'll love it. So first, please read this manual. It shows, step by step, how to use your tiller safely.

ATTENTION MANTIS PRODUCT OWNERS!

Get maintenance tips for your Mantis product on our web site at www.mantis.com

IMPORTANT MESSAGE

Thank you for purchasing this Schiller Grounds Care, Inc. product. You have purchased a world-class product, one of the best designed and built anywhere.

This machine comes with Operation and Safety instructions, Parts and Service instructions, and Engine instructions. The useful life and good service you receive from this machine depends to a large extent on how well you read and understand these manuals. Treat your machine properly, lubricate and adjust it as instructed, and it will give you many years of reliable service.

Your safe use of this Schiller Grounds Care, Inc. product is one of our prime design objectives. Many safety features are built in, but we also rely on your good sense and care to achieve accident-free operation. For best protection, study the manuals thoroughly. Learn the proper operation of all controls. Observe all safety precautions. Follow all instructions and warnings completely. Do not remove or defeat any safety features, and make sure those who operate this machine are as well informed and careful in its use as you are.

See a Schiller Grounds Care, Inc. dealer for any service or parts needed. Schiller Grounds Care, Inc. service ensures that you continue to receive the best results possible from Schiller Grounds Care, Inc. products. You can trust Schiller Grounds Care, Inc. replacement parts, because they are manufactured with the same high precision and quality as the original parts.

Schiller Grounds Care, Inc. designs and builds its equipment to serve many years in a safe and productive manner. For longest life, use this machine only as directed in the manuals, keep it in good repair, and follow all safety warnings and instructions. You'll always be glad you did.

Schiller Grounds Care, Inc.
1028 Street Road
Southampton, PA 18966-4217
PHONE (800) 366-6268 • FAX (215) 956-3855

TABLE OF CONTENTS

SAFETY RULES & WARNINGS

Special Safety Information.....	3
Safety & Warnings	3
Safety Decal Information	3
Warning Dos	4
Warning Don'ts	5
Engine/Fuel Warning Dos.....	5
Engine/Fuel Warning Don'ts	5
ASSEMBLY	6
Lower Handle	7
Upper Handle Assembly	8
Tines	8-9
Kickstand	9

FUELING & STARTING

4-Cycle Fueling & Oil Only	10
4-Cycle Starting Only	10
OPERATION.....	11-12
TRANSPORTATION	13
STORAGE	13
MAINTENANCE	14-16
TROUBLESHOOTING	17
MANTIS TILLER ASSEMBLY & PARTS LIST	18-19
LIMITED WARRANTY INFORMATION	BACK PAGE



This Operator's/Parts Manual is part of the machine. Suppliers of both new and second-hand machines must make sure that this manual is provided with the machine.

Safety Rules & Warnings

You will notice Safety Rules and Important Notes throughout this Operator's Manual. Make sure you understand and obey these warnings for your own protection.

I. SPECIAL SAFETY INFORMATION

WARNING

Attention: This symbol points out our important safety instructions. When you see this symbol,  heed it's warning!! Stay alert!!

WARNING

To reduce the potential for accidents, comply with the safety instructions in this manual. Failure to comply may result in serious personal injury, and/or equipment and property damage.

II. SAFETY & WARNINGS

WARNING

Improper use or care of this tiller or failure to wear proper protection can result in serious injury. Read and understand the rules for safe operation and all instructions in this manual. Wear hearing and eye protection.

WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

III. SAFETY DECAL INFORMATION

An important part of the safety system incorporated in this tiller is the warning and information decals found on various parts of the tiller. These decals can degrade in time due to abrasion, etc. It is your responsibility to replace these decals when they become hard to read. Please review and familiarize yourself with each of the following decals:



P/N 430057



Cutting hazard; keep feet and hands away from rotating tines.



Do not carry the tiller in this position.



Read owner's manual before using tiller, or performing any repair or maintenance. Keep owners manual in a safe place.



Don't operate indoors



Don't fuel, refuel, or check fuel while smoking, or near an open flame or other ignition source.



P/N 400631



Wear ear and eye Protection.



Caution: when assembling the handles, make sure fuel tank faces away from operator. This is the rear of the tiller, refer to assembly instruction on page 8-9.



Incorrect assembly.

⚠ WARNING

If the tiller is used improperly or safety precautions are not followed, the users risk serious injury to themselves and others.

Read and understand this manual before attempting to operate this tiller.

⚠ WARNING

Operation of this equipment may create sparks that can start fires around dry vegetation. A spark arrestor is installed. The operator should contact local fire agencies for laws or regulations relating to fire prevention requirements.

IV. WARNINGS - DO

Read and understand the owner's manual. Pay particular attention to all sections regarding safety.

1. **Always keep a firm grip** on both handles while the tines are moving and/or the engine is running. **BE AWARE!** The tines may continue to spin after throttle trigger is released and continue to pose a hazard. Make sure tines have come to a complete stop and engine is off before letting go of the tiller.
2. **Always maintain a firm footing** and good balance. Do not overreach while operating the tiller. Before you start to use the tiller, check the work area and remove any obstacles that might cause you to lose your footing, balance, or control of the machine.
3. **Thoroughly inspect the area** where equipment is to be used and remove all objects that can be thrown by the machine.
4. **Always keep area clear** of children, pets, and bystanders.
5. **Always stay alert.** Watch what you are doing and use common sense. Do not operate unit when fatigued.
6. **Always dress properly.** Do not wear loose clothing or jewelry that could get caught in moving parts. Use sturdy gloves to reduce the transmission of vibration to your hands, as prolonged exposure to vibration can cause numbness and other ailments.
7. **Always wear** substantial footwear and long trousers while working. Do not operate the equipment when barefoot or wearing open-toe sandals.
8. **Always wear** ear and eye protection. Eye protection must meet applicable CE or ANSI standards. To avoid hearing damage, we recommend hearing protection be worn whenever using the equipment.
9. **Keep** the engine and petrol/gas storage area free of vegetative material and excessive grease to reduce fire hazard.
10. **Start the engine carefully,** according to all manufacturer's instructions and with feet well away from tool(s).
11. **Keep** all nuts, bolts and screws tight to be sure the equipment is in safe working condition.
12. **Use extreme caution** when reversing the tine direction or pulling the machine toward you.
13. **Work only in daylight** or with good artificial light.
14. **Always be sure** of your footing on slopes.
15. **Exercise extreme caution** when changing direction on slopes.
16. **Always keep a safe distance** between two or more people when working together.
17. **Always inspect your tiller** before each use. Tighten all loose hardware to be sure the equipment is in safe working condition.
18. **Always visually inspect** to ensure that the tools are not worn or damaged. Before using your tiller, replace worn or damaged elements and bolts in sets to preserve balance.
19. **Always maintain and examine** your tiller with care. Follow maintenance instructions given in manual.
20. **Always store tiller** in a sheltered area (a dry place) not accessible to children.
21. **Always remember** the operator or user is responsible for accidents or hazards occurring to other people or their property.

Safety Rules & Warnings

V. WARNINGS - DON'T

Don't use tiller with one hand. While the tines are moving or engine is running, keep both hands on handles with fingers and thumbs encircling the handles.

Don't run with the machine, walk.

Don't work on steep slopes.

Never attempt to clear tines while they are moving, or the engine is running. Switch the engine off and make sure the tines have stopped completely before removing jammed material.

Don't allow children or people unfamiliar with these instructions to use the machine. Local regulations can restrict the age of operator.

Don't let others operate tiller without proper training.

Never store the tiller or its fuel in a house.

Don't operate while under the influence of alcohol or drugs.

Don't attempt to repair this tiller. Have repairs made by a qualified dealer or repairman. See that only original Mantis parts are used.

Don't overreach. Keep a good footing at all times.

Don't stand in front of tiller when tines are rotating or engine is running.

WARNING

Handle fuel with care, it is highly flammable. Fueling a hot engine or near an ignition source can cause a fire and result in serious personal injury and/or property damage.

VI. ENGINE/FUEL WARNINGS - DO

Always use fresh gasoline. Stale gasoline can cause damage.

Always store fuel in containers specifically designed for this purpose.

Always add fuel before starting the engine.

Always replace all fuel tank and container caps securely.

Always pull starter cord slowly until resistance is felt to avoid kickback and prevent arm or hand injury.

Always operate engine with spark arrestor installed and operating properly.

Stop the engine whenever you leave the machine and before refueling. Allow the engine to cool before storing in any

enclosure. Replace worn or damaged parts for safety.

Only drain the fuel tank outdoors. To reduce the potential of fire. Keep the engine and fuel storage area free of vegetative material and excessive grease.

VII. ENGINE/FUEL WARNINGS - DON'T

Never pick up or carry a machine while the engine is running or the tines are turning.

Don't fuel, refuel, or check fuel while smoking, or near an open flame or other ignition source. Stop engine and be sure it is cool before refueling.

Don't leave the engine running while the tiller is unattended. Stop the engine when carrying out maintenance and cleaning operations, when changing tools, or when being transported by any means other than under the tiller's own power.

Never remove the fuel cap or add fuel while the engine is running or when the engine is hot.

Don't refuel, start, or run this tiller indoors or in an improperly ventilated area.

Don't run engine if electrical system causes sparks outside the cylinder. During periodical checks of the spark plug, keep plug a safe distance from cylinder to avoid burning evaporated fuel from cylinder.

Don't check for spark with spark plug or plug wire removed. Use an approved tester.

Don't crank engine with spark plug removed unless spark plug wire is disconnected. Sparks can ignite fumes.

Don't run engine when the odor of gasoline is present or other explosive conditions exist.

Don't attempt to start the engine if fuel is spilled. Move the machine away from the area of spillage and avoid creating

any spark or source of ignition until fuel vapors have dissipated or spill has been cleared.

Don't operate your tiller if there is an accumulation of debris around the muffler or cooling fins.

Don't touch hot mufflers, cylinders or cooling fins contact may cause serious burns.

Don't change the engine governor setting or over throttle the engine.


Don't attempt to remove spark plug while engine is hot. Removing a spark plug from a hot engine can cause irreparable damage to the engine and will void your warranty.

Don't use starter fluids they will cause permanent engine damage.



Assembly


Picture of Model 7940A

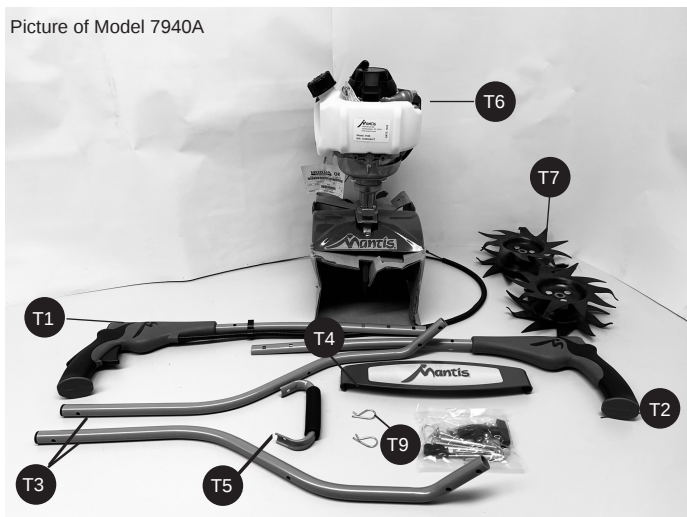

⚠ WARNING

Improper assembly of this tiller can result in serious injury. Make sure to follow all instructions carefully. If you have any questions, contact our factory at 1-800-366-6268 or an authorized Mantis dealer.

Hardware Bag Contents

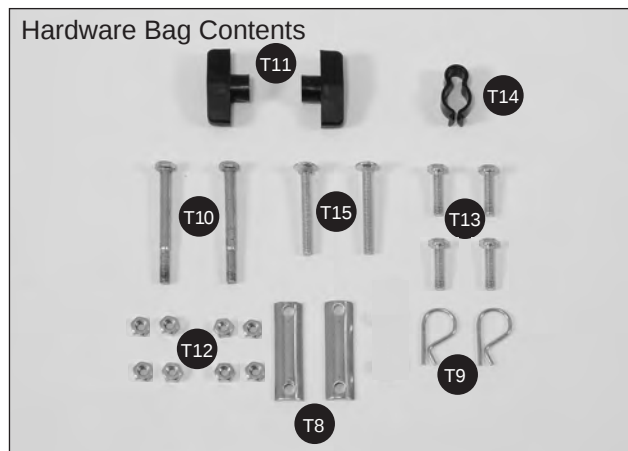

WHAT COMES IN THE BOX

Key	Qty.	Part No.	Description
T1	1		Upper Handle Throttle Side Assembly
T2	1		Upper Handle Assembly, Left
T3	2		Lower Handles W/Plug
T4	1		Handle Brace Assembly
T5	1		Carrying Handle with Foam Grip
T6	1		Engine Assembly (includes Fender Guard & Worm Gear Transmission)
T7	1		Pair Tiller/Cultivator Tines
	1		Bag of Hardware
T8	2		Handle Clamps
T9	2		Tine Retaining Pins
T10	2		Bolts (3" long)
T11	2		Knobs
T12	8		Lock Nuts
T13	4		Cap Screws
T14	1		Throttle Clip
T15	1		Carriage Bolts
T16	2		Kickstand, Stand Assembly
T17	1		Kickstand, Bracket and Hardware Bag
Not Shown	1	400206	4-cycle oil



WHAT YOU WILL NEED TO ASSEMBLE THE TILLER

Prior to removing the contents and assembling, it is important to:

- Have a clean work area
- Have two 7/16" wrenches
- Make sure all necessary tools are handy
- Have a 3/8" wrench for kickstand assembly

Assembly

LET'S BEGIN

- With the box upright, open the box and remove the tine box and the loose parts at the top of the tiller box. Do not remove any other parts from the box.
- Lay the box on one side and open the bottom flaps.
- Return the box to an upright position (as shown in Figure A) and pull the box straight up.
- Leave the engine and throttle handle in the cradle to assist in the assembly.
- Lay everything out so you can easily identify the parts (see parts image and list on page 6).

Figure A

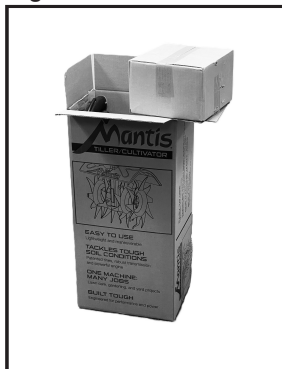


Figure B



NOTE: Some of the photos in this manual do not represent your tiller engine. They are for assembly purposes only.

LOWER HANDLE ASSEMBLY

See page 6 to identify part numbers.

1



- For ease of assembly and stability, it is important that you keep the engine assembly in its cardboard cradle.

2



- Lay all handle parts within easy reach. You'll need one of the handle clamps (T8) and one of the lower handles (T3). Note that the lower handles have a short leg on one end.
- Fit the handle clamp along the outside of the short leg as shown. Line up the holes on the clamp and the leg.

3



- Choose one of the two 3-inch bolts (T10). Slide it through the first set of holes near the elbow where the lower handle curves. (Pictures 2 & 3)
- Now slide the other lower handle onto the 3-inch bolt. Fit the other clamp onto the other handle's short leg. Add a lock nut (T12) and tighten "finger tight" (as tight as you can make them without the use of a tool). (Picture 3)

4



- Locate recessed channels below the engine.

5



- Slide the lower handles that you've just put together into the two recessed channels.
- Make sure you insert them from the rear of the tiller (**gasoline tank faces away from the operator**) so the bolt fits along the back of the housing.

6



- Slide the second 3-inch bolt (T10) through the second set of holes in the short legs. Add a lock nut (T12) and tighten finger tight until you've completed assembly.

NOTE: THE LOCK NUTS ARE STAMPED. FINGER TIGHT IS APPROXIMATELY 1/2 TO 1-1/2 TURNS UNTIL YOU'VE COMPLETED ASSEMBLY.

Assembly (Continued)

UPPER HANDLE ASSEMBLY




- Place the carry handle (T5) between the lower handles. Line up the holes and insert the cap screws and nut and alternate tightening each side.



- Lift the upper handle until the holes line up with the lower handle.
- Insert carriage bolt (T15) from outside in.
- Screw on knob (T11) and fully tighten the knob at the pivot point.



- Cap the exposed bolt with an lock nut (T12) and tighten with your 7/16" wrench until snug. Do not over tighten.

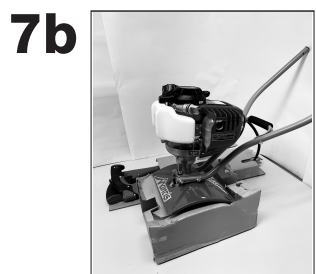

- Your Mantis tiller will look like this when the lower handle assembly is complete.




- Repeat steps 8 and 9 to install the other upper handle onto the other lower handle.
- Use throttle clip (T14) to secure the throttle cable and wire in place on the lower handle.




- Line it up holes on handle brace (T4) with the holes on the upper handles. Insert a cap screw (T13) and a lock nut (T12) on either side.
- Use a wrench to tighten cap screws and lock nuts.
- Use wrench to tighten all nuts and bolts firmly and securely.

TINE ASSEMBLY

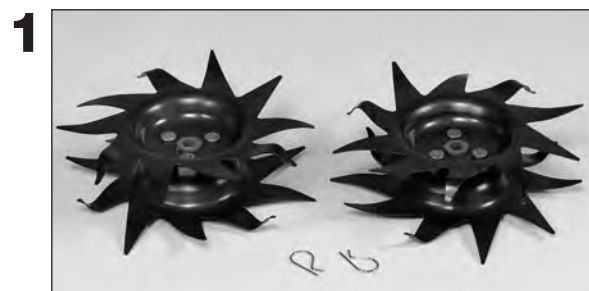

- You will need the two tines and two retaining pins.

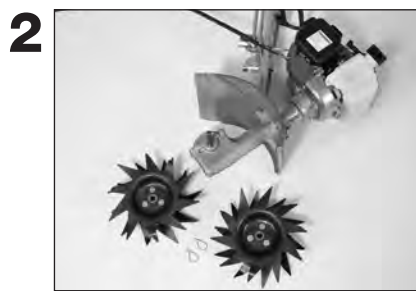

- Remove the unit from the cardboard cradle and lay the unit on its side.




- You will notice that one side of the tine has a circular hole, while the other has a D-shaped hole.

Assembly (Continued)

TINE ASSEMBLY (Continued)



- Attach the tine so that the circular hole slides onto the axle first.

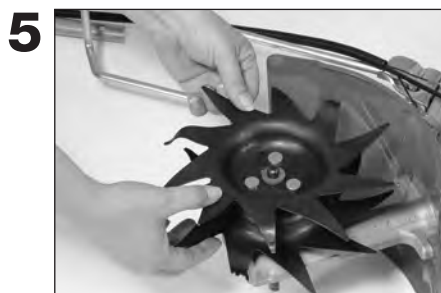


- When the axle protrudes from the other side it will line up perfectly with the D-shaped hole.



- Slide a tine retaining pin (T9) through the hole in the axle to secure the tine.
- Repeat steps for the other side.

KICKSTAND ASSEMBLY

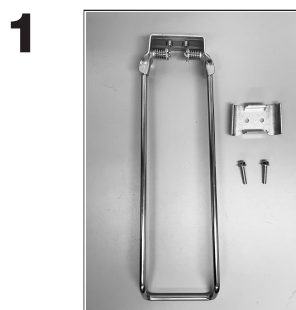

- Position the kickstand brace just above the bend of the lower handles.
- Position the kickstand under the lower handles, line up the holes, and thread the kickstand brace bolts into the kickstand.
- Tighten with the 3/8" wrench.



- Your Mantis tiller will look like this when lower handle assembly and kickstand are complete.



Position any extra throttle cable length as shown above.



WARNING

Improper Throttle installation can cause tines to rotate unexpectedly.

IMPORTANT NOTE:

Make sure you have installed the handles properly. When you stand behind your tiller, holding the handles, the fender warning label should face you.

IMPORTANT NOTE:

Before you use your MANTIS Tiller, read the Safety Rules & Warnings on pages 3-5

IMPORTANT NOTE:

Be sure you have proper throttle movements and that the throttle cable is not wrapped or twisted around the handle bar. Hold down the lockout lever, fully squeeze the throttle trigger and let go. The throttle triangle must click in both directions. If there is any doubt, remove air filter and visually check that the throttle triangle hits both the idle screw and the full open stop. **THIS MUST BE DONE BEFORE STARTING THE ENGINE.**



4-Cycle Tiller Fueling & Starting

4-CYCLE TILLER FUELING AND OIL ONLY

IMPORTANT!

It is normal for your 4 stroke engine to smoke for the first minute or two of operation. It is not necessary for this to occur every time. This is a result of the oil being pulled through the engine for lubrication.


- Rock the tiller forward so that it rests on the fuel tank.
- It is important to position the tiller as shown in **Figure 1** so the oil will properly fill the crankcase. Failure to do so will cause engine damage.
- Remove the oil plug.
- Pour in 2.7 fl. oz. of approved, 4-cycle engine oil.
- **Always check the oil level before each use.** The oil level should reach the inner first thread of the reservoir. Do not overfill.
- Replace the oil plug.
- Return the unit to the upright position and put the kickstand down.



Figure 1

Fueling your tiller is easy. Unscrew the gas cap and fill the tank about four-fifths of the way with 89 octane unleaded gasoline. Remember to always drain the gas when transporting the unit from one location to another.

Choke Lever

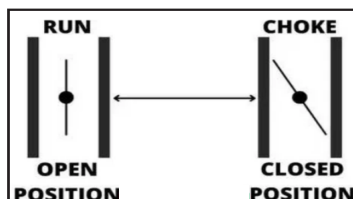

4-CYCLE TILLER STARTING ONLY

Starting the engine for the first time, or “cold starting”, is easy.

- Make sure the start/stop switch on the throttle handle is in the start position, which is indicated by the “I” symbol.
- Close the choke by moving the choke lever to the up (closed) position.
- Press the primer bulb approximately 6 times until the bulb is filled with gas. Once it is filled, press it two more times.
- Pull the starter cord lightly until you feel resistance, then give it a short, brisk pull. Your tiller should start immediately. Do not pull the cord all the way out, and do not let it snap back into the starter housing.
- Once it is running, move the choke to the down (open) position.
- To stop the engine, simply push the start/stop switch to the stop position, which is indicated by the “O” symbol.
- To start a warm engine, follow the same procedure, but leave the choke lever in the down position and do not pump the primer bulb.
- Before using the tiller, let the engine run for a minute to warm up. Before shutting it down, let the engine run idle briefly to cool down.



Switch

IMPORTANT NOTE:

Check the oil level in the engine before each use. If oil is low see your 4 Stroke Tiller Engine Manual and information at left for details.

Never use starting fluids, as they will cause permanent engine damage, and void the warranty. Before you use the tiller, read the Safety & Warning rules on pages 3-5.

⚠ WARNING • DANGER ⚠

ALTERNATIVE FUELS, SUCH AS E-15 (20% ETHANOL), E-85 (85% ETHANOL) OR ANY FUELS NOT MEETING HONDA REQUIREMENTS ARE NOT APPROVED FOR USE IN GASOLINE ENGINES. USE OF ALTERNATIVE FUELS MAY CAUSE PERFORMANCE PROBLEMS, LOSS OF POWER, OVERHEATING, FUEL VAPOR LOCK AND UNINTENDED MACHINE OPERATION, INCLUDING, BUT NOT LIMITED TO, IMPROPER CLUTCH ENGAGEMENT. ALTERNATIVE FUELS MAY ALSO CAUSE PREMATURE DETERIORATION OF FUEL LINES, GASKETS, CARBURETORS AND OTHER ENGINE COMPONENTS.

⚠ WARNING

Do not operate the engine in a confined space where dangerous carbon monoxide fumes can collect.

⚠ WARNING

Fuel is extremely flammable. Handle it with care. Keep away from ignition sources. Do not smoke while fueling your equipment

⚠ WARNING


Avoid accidental blade engagement. Do not squeeze the throttle trigger when starting. Maintain proper idle speed adjustment (2500-3100 rpm)



4-Cycle Tiller Operation

! WARNING

If engine does not stop when switch is put in the stop position, release the throttle and allow engine to idle. Put the tiller down and slide the choke lever to the cold start (closed) position. Do not use again before product is serviced.

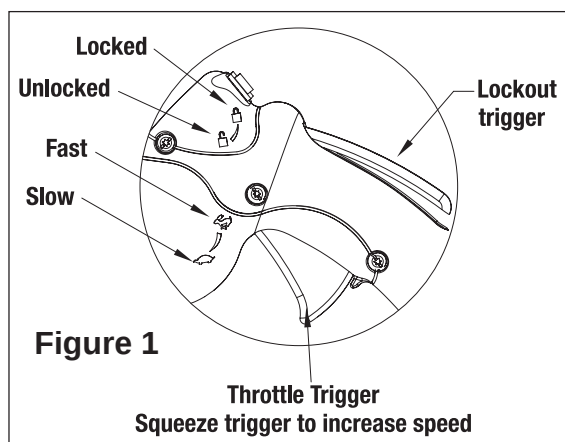

A SPECIAL FEATURE

Note: With the idle set properly and the engine running

Even when the engine is running, the tines won't turn unless you squeeze the throttle trigger on the handlebars. When you release the throttle trigger, the tines will stop.

A TIP FOR EXTENDING YOUR ENGINE'S LIFE

After you start the engine, let your tiller warm up for two to three minutes before you use it. Then, before you put your

tiller away, let it idle for a minute to give the engine a chance to cool down.

OPERATION

With engine running, and both hands on the handles, hold down the throttle lockout trigger (**Figure 1**), then squeeze the throttle trigger gradually to increase the engine speed and engage the tines.

NOTE: This step must be repeated each time your tiller trigger is released.

! WARNING

Read the instructions carefully. Be familiar with the controls and the proper use of the equipment.

NOW YOU'RE READY TO USE YOUR MANTIS TILLER.

If you've used other tillers, your MANTIS Tiller may surprise you. It tills best when you pull it backward! When you pull your MANTIS Tiller backward, you give extra resistance to the tines, so they dig deeper. (**Figure 2**)

In addition, when you go backward, you erase your footprints, so your soil stays light and fluffy. With other tillers, by contrast, you walk right over the soil you've just tilled, packing it down, so it's less plantable.

RUN YOUR MANTIS TILLER LIKE A VACUUM CLEANER

Place your Tiller at the head of the row or area you want to till, and start it up. Begin with an easy rocking motion, and pull the Tiller backward. Then repeat rocking motion, and pull it backward again. Then, let it move forward just a little bit, before pulling it



Figure 2

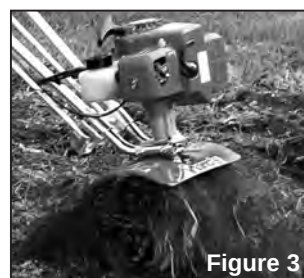


Figure 3



Figure 4

backward again. This will help you till deeper. Keep repeating these steps until you've tilled an entire row, then start again on the next row. It's much like running a vacuum cleaner! (**Figure 3**)

You can even control depth.

For deeper tilling:

Move your Tiller slowly back and forth, as you would a vacuum cleaner. Work the same area over and over until you've dug to your desired depth. (**Figure 4**)

For shallow tilling:

Switch the tines to the cultivating position (See page 12 to learn how). Then move your Tiller quickly over your soil surface.

For Big Weeds or Tough Roots:

Let your Tiller rock back and forth over the tough spot until the tines slice through the weed or root.

Your MANTIS Tiller Handles Special Tilling Projects:

Want to turn part of your lawn into a colorful flower border? Your MANTIS Tiller makes it easy! Just run your Tiller back and forth until the sod begins to break up. Then continue tilling. Your Tiller will chop the clumps of sod until they're fine then work them into the soil. Pretty soon, you'll have a soft, fresh planting bed.

! WARNING !

ALWAYS MAKE SURE THE HANDLE KNOBS ARE SECURE BEFORE STARTING YOUR MANTIS TILLER.

4-Cycle Tiller Operation (Continued)

WARNING

Never try to remove an obstruction while the engine is running. Serious injury can result. If your tines get jammed or entangled, shut off the engine at once. Remove the obstruction while the engine is off.

WARNING

The operator of this tiller is responsible for accidents or hazards occurring to himself, other people or their property.



Figure 1

YOUR MANTIS TILLER MAKES WEEDING A PLEASURE!

As a tiller, your MANTIS Tiller works the soil down to 10" (25.4 cm) deep. But, as a cultivator it gently cultivates the surface to just 2" to 3" (5.09 cm to 7.62 cm) deep.

To change to cultivating mode, switch the tines to the weeding (or cultivating) position as described at right. This takes less than a minute.


In this configuration, your MANTIS Tiller's sharp "tine teeth" will slice up those pesky weeds, burying them as you go along. And since the tines in this position won't dig too deep, they won't hurt your plants' precious root systems.

The result? Your Tiller will cut your weeding time in half and turn a tiresome chore into a pleasure.

HOW TO SWITCH FROM TILLING TO CULTIVATING POSITION

1. Make sure your Tiller is off.
2. Remove the retaining pins from the tines.
3. Remove the tines from the axle.
4. Place the right-side tine onto the left-side axle, then place the left side tine onto the right-side axle. The "D" hole should be to the outside when the tines are positioned correctly.
5. Reinsert the pins. **(Figure 1)**

Tilling Position

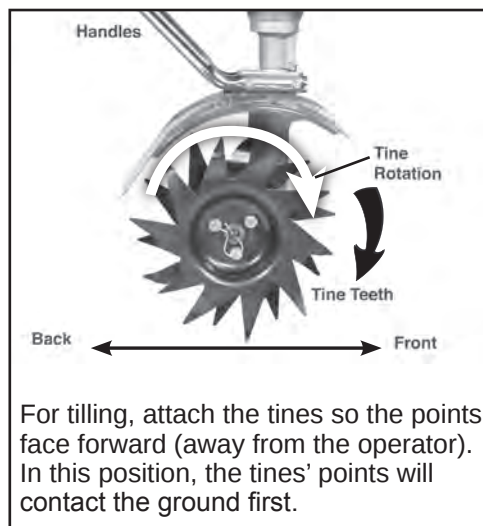

Cultivating Position

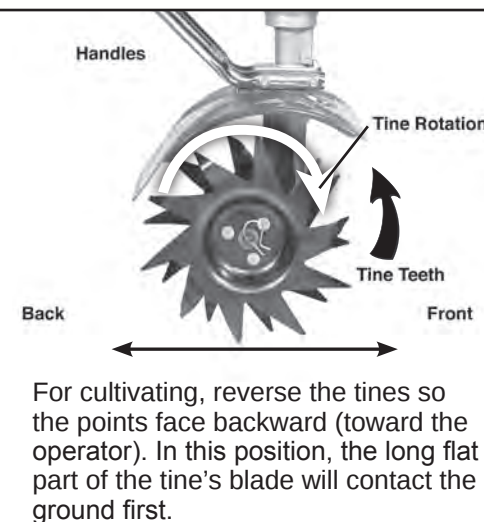


Figure 1

4-Cycle Tiller Transportation & Storage

4-CYCLE TILLER TRANSPORTATION

Transporting your Tiller is easy. It's light and easy to carry using the carrying handle.

Or with it running, you can walk it by gently squeezing the throttle until it moves at a comfortable pace. Your Tiller is also easily transported in the back of a car or truck. Be sure to empty the fuel tank (This is crucial)! Then stow your tiller in the trunk of your car or truck.

CAUTION: You must empty your Tiller's fuel tank before placing it in a car or truck.



Figure 1

⚠ WARNING ⚠

NEVER CARRY YOUR TILLER AS THE PERSON IN FIGURE 1 IS DOING. IF YOU DO, YOU WILL SUFFER SERIOUS INJURY.

TILLER STORAGE

⚠ WARNING

Never store the equipment with fuel in the tank or in an area where fumes may accumulate and breach an open flame or spark

Before storing your Mantis Tiller for any long period, be sure to take these measures:

1. Do not store your Tiller with fuel still in it. Even under ideal conditions, stored fuel containing ethanol or MTBE can start to go stale in 30 days. Stale fuel has a high gum content and can clog the carburetor, restricting fuel flow. **When you're ready to store your Tiller, or will not be using it for more than two weeks, drain the fuel tank completely.**
2. To make sure no fuel is left in the carburetor, restart the engine. Then run the engine until it stops. This will prevent gum deposits from forming inside of the carburetor and possibly damaging the engine.
3. Disconnect spark plug wire and remove the spark plug. Apply a couple of drops of clean engine oil into the cylinder. Install the top cover temporarily. Pull the starter grip several times to distribute the oil in the cylinder.
4. Inspect the spark plug. If necessary, clean it. Replace it with a NGK-CMR5H spark plug if damaged or badly fouled, if the sealing washer is in poor condition or if the electrode is worn.
5. Replace the spark plug, but leave the spark plug wire disconnected.
6. Wipe the tines with oil or spray them with WD-40 to prevent rusting.
7. Oil the throttle cable and all visible moving parts. (Do not remove the engine cover.)
8. Clean or replace the air filter.
9. Inspect the fuel filter. If the fuel filter is dirty, wash it gently with non-flammable or high flash point solvent. If the fuel filter is excessively dirty, replace it.
10. Check the grease level in the worm gear housing. Add grease if needed.
11. Store your Tiller in an upright position in a clean, dry place. You can hang it using the handle brace, or store with the handles in an extended position or folded down. To fold the handles down, loosen the lower two-pronged knobs until you can pivot the upper handles down. **(Figure 2)**
12. If you have fuel left over from last season, dispose of it properly. Buy fresh oil and gasoline next season.
13. Remove Tilling tines or attachments and lightly oil tine shaft at least once a year.



Figure 2

IMPORTANT:

It is important to store your 4-Cycle Mantis Tiller in an upright position. Laying the Tiller on its side will cause the oil to leak out of the engine through the air cleaner case.

IMPORTANT:

Avoid placing the Tiller with the top cover (engine head) down. This can allow oil from the crankcase to enter the combustion chamber and cause hard starting or a locked piston.




4-Cycle Tiller Maintenance

Your 4-Cycle Tiller will require some basic maintenance to keep it performing year after year.

If you are storing your Tiller for longer than 30 days, it is very important to empty the fuel tank to prevent engine damage.

Check engine oil level, air filter and fuel filter.

Refer to your Honda® engine manual for more details.

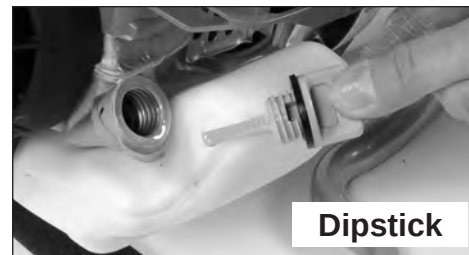

4-CYCLE CORRECTIVE ACTION: OVERFILLED ENGINE OIL

If the engine is overfilled, oil will enter the crankcase and will not simply pour out of the oil fill opening. The excessive oil must be pumped out as the engine runs. Check the oil level and drain any excess between multiple 30-second running intervals to bring the oil back to the proper level.


If you suspect the engine oil is overfilled, the following procedure should remove the excess oil from the crankcase and valve cover.

1. Place the engine on a level surface (resting flat on the fuel tank) and remove the oil fill cap/dipstick. Use a bucket to collect oil that overflows from the oil fill opening.
2. Replace the oil fill cap/dipstick and run the engine for approximately 30 seconds, then repeat step one.
3. Continue steps 1 & 2 until oil no longer overflows when the oil fill cap/dipstick is removed.
4. Once the overfilled oil is removed, continue to run the engine. It may continue to smoke for several minutes while the residual oil burns off.

4-CYCLE PROPER OIL FILL/ LEVEL CHECK POSITION



This position does not allow for a proper oil level reading and may cause overfilling.

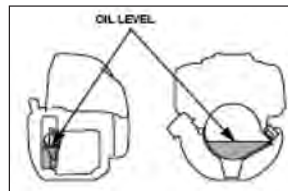

Engine must be resting on the fuel tank on a flat surface



4-Cycle Tiller Maintenance (Continued)

AIR FILTER MAINTENANCE

A wet or dirty air filter can affect the way your engine starts, performs, and wears. Check your air filter once a month or after every 10 hours of use.

Note: If you work in dusty soil, check your filter more often (for instance, before each use). Be sure to replace it if its worn out or damaged.

How to Check, Clean, and Change the Air Filter

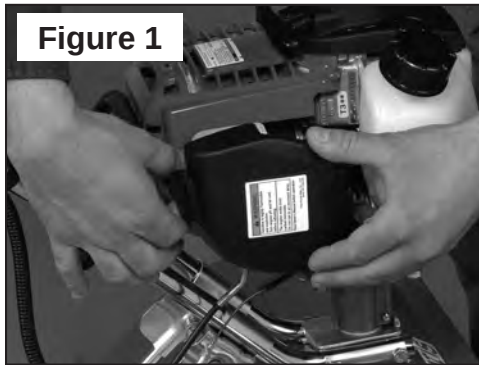


Figure 1

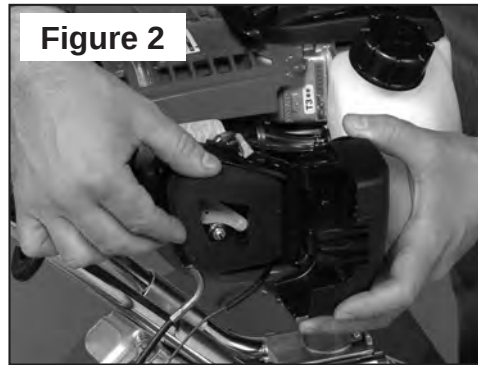


Figure 2

1. The air filter is held in the air cleaner in a black housing on the side of the Tiller, behind the gas tank cap.
2. Squeeze the two locking tabs at the rear of the air cleaner cover (**Figure 1**) and swing the cover toward the front of the engine to open it.
3. The air filter is the dark, sponge-like material on the inside of the air cleaner.
4. If the air filter needs to be cleaned (i.e. if it is soiled or moist), or no longer fits properly, simply remove it by carefully peeling it out of the air cleaner. (**Figure 2**)
5. To clean the air filter
 - a. Clean the filter element in warm, soapy water then rinse and allow to dry thoroughly. It also can be cleaned with a non-flammable solvent.
 - b. Dip the filter element in clean engine oil then squeeze out any excess oil. Note: The engine will smoke when started if too much oil is left in the element.
 - c. Wipe dirt from the air cleaner body and cover using a moist rag. Note: Be careful to prevent dirt from entering the carburetor.
6. Replace the clean filter inside the air cleaner.

IMPORTANT:

Make sure the filter is “seated” properly in the cover. The filter must fit snugly inside the opening that holds the filter in place. Installing the filter incorrectly will cause engine damage and void the warranty. Fit the cover back over the air cleaner and snap the two locking tabs.

IMPORTANT NOTE:

A dirty air cleaner will restrict air flow to the carburetor, reducing engine performance. If you operate the engine in very dusty areas, clean the air filter element more often than specified in the Maintenance section.

IMPORTANT NOTE:

Operating the engine without an air filter element, or with a damaged air filter element, will allow dirt to enter the engine, causing rapid engine wear. This type of damage is not covered by the Limited Warranty

IMPORTANT NOTE:

Check the lip on the Air Cleaner Cover. If the lip is chipped or cracked, it should be replaced. This will prevent dirt from being drawn through the carburetor into the inside of the engine.

4-Cycle Tiller Maintenance (Continued)

HOW TO RESEAT THE FLANGE


If the tines won't turn when you press the throttle, it may mean the engine isn't seated all the way down on the worm gear housing.

If you have been using your Tiller for several years or if you have removed the engine for use with our hedge trimmer attachment and then replaced it, the flange bolt may have come loose and lifted the engine up.


In this case you'll notice a gap between the bottom of the engine clutch case and the top of the worm gear housing. **(Figure 1)**

To eliminate the gap, loosen the flange bolt and take the engine off the worm gear housing. Notice the hex head on top of the drive shaft and locate the clutch drum inside the clutch case. Make sure the hex head lines up with the clutch drum inside the clutch case. **(Figure 5)**

Next, put the engine back on the worm gear housing, making sure the plastic carrying handle is not under the fuel tank.

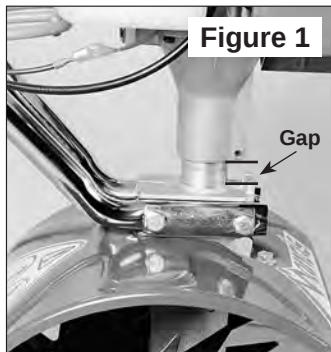

Note how the engine doesn't sit all the way down on the transmission.

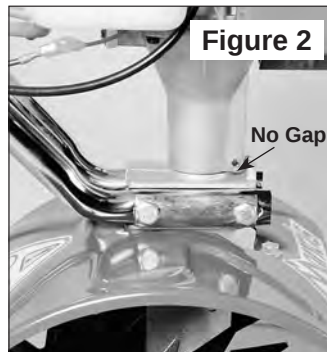

Note how the engine sits all the way down on the transmission.



If you've followed these steps properly, there will be no gap between the clutch case and the worm gear housing. **(Figure 2)** Finally, make sure to tighten the flange bolt.


All other engine maintenance issues are addressed in the Honda® Engine Manual included in your Tiller package.

TRANSMISSION CARE

Note: Check the transmission grease level after the first 10 hours of use, then check yearly.

With the tines off, remove the transmission plate **(Figure 3)** and gasket to see if the grease level is up to the plate flange **(Figure 4)**. If it is not, you will need to add lithium zero or lithium one grease.

Wipe off any excess grease and replace the transmission gasket and plate.

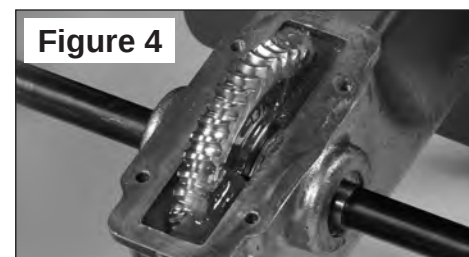


Troubleshooting

Problem	Cause	Remedy
1. Tines don't turn when throttle is depressed	Engine is not seated properly on the gear housing.	Re-install engine following the instructions on page 16 "How to reseat the flange."
2. Engine fails to start	O/I switch is in "O" position. - No fuel in tank - Fuel strainer clogged - Fuel line clogged - Spark plug shorted or fouled - Spark plug is broken (cracked porcelain or electrodes broken). - Ignition lead wire shorted, broken or disconnected from spark plug. - Ignition inoperative	- Move switch to "I" - Fill tank. - Replace strainer. - Clean fuel line. - Install new spark plug. - Replace spark plug. - Replace lead wire or attach to spark plug. - Contact your local authorized dealer.
3. Engine hard to start.	- Water in gasoline - Gasket leaks (carburetor or cylinder base gasket). - Weak spark at spark plug	- Drain entire system and refill with fresh fuel. - Replace gaskets. - Contact your local authorized dealer.
4. There is black smoke coming from exhaust	The muffler screen is clogged.	- Clean carbon from muffler screen. - See engine manual.
5. Engine misses.	- Dirt in fuel line or carburetor - Carburetor improperly adjusted - Spark plug fouled, broken or incorrect gap setting - Weak or intermittent spark at spark plug	- Remove and clean. - See "Carburetor Adjustment" in engine manual. - Clean or replace spark plug - set gap to .024-.028 in. (0.6-0.7 mm). - Contact your local authorized dealer.
6. Engine lacks power.	- Air filter clogged - Muffler clogged - Spark Arrestor Clogged - Poor compression	- Clean or replace air filter (page 15). - Clean carbon from muffler, see engine manual. - Clean Spark Arrestor; see engine manual. - Contact your local authorized dealer.
7. Engine overheats.	Air flow obstructed	- Clean flywheel cylinder fins and screen. - See engine manual.
8. Engine noisy or knocking.	- Spark plug in incorrect heat range - Bearings, piston ring or cylinder walls are worn.	- Replace with plugs specified for engine. - Contact your local authorized dealer.
9. Engine stalls under load.	Engine overheats.	Remove dust and dirt from between fins.



4-Cycle Tiller Assembly

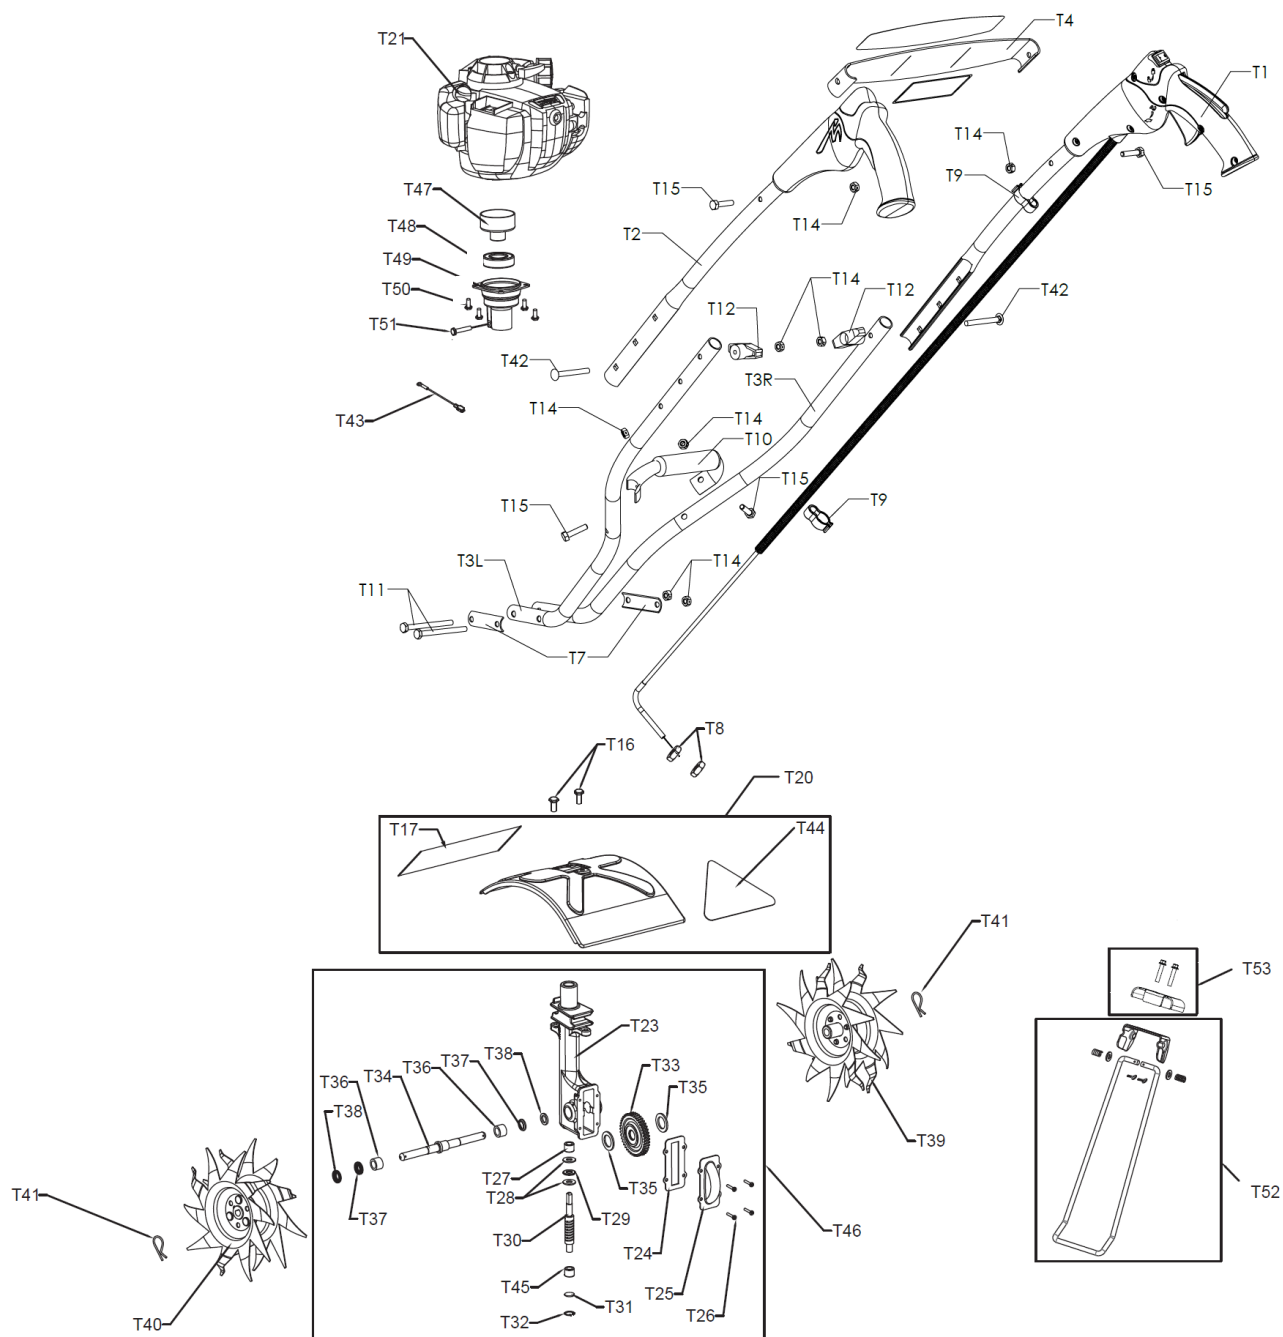

Parts List

Key	Qty.	Part No.	Description
T30	1	400010	Worm Shaft
T31	1	400010	Worm Disk
T32	1	400010	Retaining Ring
T33	1	400010	Worm Gear
T34	1	400010	Tine Shaft
T35	2	400010	Worm Gear Thrust Washer
T36	2	400010	Worm Gear Bearing
T37	2	400010	Bearing Seal
T38	2	400010	Bearing Seal Retainer
T39	1	438RA	Tine Assembly, Right
T40	1	438LA	Tine Assembly, Left
T41	2	418-1	Tine Retaining Pin
T42	2	94018-37	Carriage Bolt 1/4-20 X 2.25"
T43	1	430043	Ground Wire Jumper, 4 Cycle Engine
T44*	1	400631	Triangle Warning Label (4 Cycle Engine)
T45	1	400010	Roller Bearing
T46	1	400010	Transmission Assembly
T47	1	920-0013	Clutch Drum
T48	1	920-0013	Bearing
T49	1	920-0013	Engine Flange
T50	4	94262-037	M6 X 12 Flange Bolt
T51	1	920-0013	Hex Head 10-32 X 1" Flange Bolt
T52	1	410158	Kickstand, Stand Assembly
T53	1	410113	Kickstand, Bracket And Hardware

Key	Qty.	Part No.	Description
T1	1	940-0002	Trigger Handle Assembly, 4 Cycle Engine, Right
T2	1	940-0002	Handle Assembly, Left
T3	2	940-0002	Lower Handle W/Plug
T4	1	940-0002	Handle Brace Assembly
T7	2	377	Handle Clamp
T8	2	940-0002	M6 Jam Nut
T9	2	940-0002	Throttle Clip
T10	1	940-0002	Carry Handle
T11	2	940-0002	Bolt 1/4-20 X 3"
T12	2	940-0002	Knob, Two Prongs, Female
T14	8	94151-17	1/4-20 Two-Way Lock Nut
T15	4	94123-269	1/4-20 X 1.125 Hex Head Cap Screw
T16	2	94123-106	Bolt 1/4-20 X 3/8" Long
T17*	1	430058	Mantis Logo Label
T20	1	430207	Fender Guard with Label
T21	1	400911	Engine Assembly-25Cc Honda1
T22**	1	468	Drive Shaft
T23	1	400010	Worm Gear Housing
T24**	1	436SH	Gasket
T25**	1	437A	Gear Housing Cover
T26**	4	651	#8 Self Tapping Screw
T27	1	400010	Roller Bearing
T28	2	400010	Worm Bearing Race
T29	1	400010	Worm Thrust Bearing

* Included in key T20

**Included in key T46

Mantis Warranty Statement

Limited Warranty

Products Covered by This Warranty	LENGTH OF WARRANTY: FROM DATE OF ORIGINAL PURCHASE
Mantis 7000 Series Tiller/Cultivator	2 years
Mantis 3000 Series Electric Tiller/Cultivator	1 year
Mantis Composters	2 years
Mantis Battery Operated Blower	1 year
Mantis Battery Operated String Trimmer w/o battery	1 year
Mantis Blower and String Trimmer Combo w/ battery	1 year
Mantis Attachments (for 7000 Series Tillers)	90 days

Mantis products are warranted against defects in materials and workmanship for a period of time shown in the above table from the date of purchase from an authorized dealer or retailer (as shown on mantis.com) by the original purchaser only, and under the following terms and conditions. Schiller Grounds Care's responsibility under this limited warranty is restricted to repairing or replacing, at its option, any covered part found to be defective in material or workmanship during the warranty period. All parts replaced under warranty will be considered as part of the original product and any warranty on the replaced parts will expire coincidentally with the original product warranty.

SCHILLER GROUNDS CARE, INC. MAKES NO EXPRESS OR IMPLIED WARRANTIES, REPRESENTATIONS, OR PROMISES EXCEPT THOSE CONTAINED HEREIN. THERE ARE NO OTHER WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. ALL WARRANTIES OTHER THAN THE EXPRESS WARRANTY SET FORTH ABOVE ARE SPECIFICALLY DISCLAIMED. THE DURATION OF ANY IMPLIED WARRANTY, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IS LIMITED TO THE DURATION OF THIS WRITTEN LIMITED WARRANTY.

To Obtain Warranty Service - If you think your Mantis Product is defective in material or workmanship, use the following information to determine your solution. Warranty service must be performed by an authorized Mantis service dealer or authorized service center. *Note: authorized Mantis service dealers and service centers are under NO OBLIGATION to perform warranty work on products not sold through their business.*

Mantis Product Purchased From:	Contact Instructions
Online Retailer (all except Mantis.com)	Contact Customer Support for the Online Retailer
Mantis.com	Schiller Grounds Care, Inc. (888)240-4765 www.mantis.com/contact-us www.mantis.com/mantis-owners-product-support/
Retail Store	Contact Customer Support for the Retail Store
Authorized Mantis Dealership	Contact the Mantis Dealership

ABOUT YOUR WARRANTY

The warranty period begins on the date of purchase by the original customer from an authorized Mantis dealer, retailer, or from Mantis.com and is not transferable. Warranty service must be performed by an authorized Mantis service dealer or authorized service center. If a warranty replacement becomes necessary, the authorized dealer or service center must be prepared to provide the physical component for verification (freight prepaid) upon request from Schiller Grounds Care. Warranty service will be performed without charge to the original purchaser for parts and labor. The original purchaser is responsible for the expense of delivering the equipment, part, or accessory to and from an authorized dealer's service center. The purchaser is responsible for any premium charged for overtime labor requested by the purchaser and for any service and/or maintenance not directly related to any defect covered under this limited warranty. Proof of purchase will be required to substantiate any warranty claim. Without proof of the initial purchase date from an authorized dealer or seller, the manufacturing date of the product will be used to establish the warranty period. Warranty communication and transactions are limited to the authorized service center staff and Schiller Grounds Care.

Mantis Warranty Statement

EXCLUSIONS

This warranty only covers defects in materials or workmanship.

Engines and Other Manufacturers - Schiller Grounds Care makes no warranty with respect to engines or engine parts such as spark plugs, lubricants, starters, and carburetors. The engine warranty is covered by the engine manufacturer. Consult the Operator's Manual for the engine provided with your product or ask an authorized dealer for the terms and conditions of these warranties. Schiller Grounds Care makes no warranty with respect to other parts not of its manufacture such as tires, batteries, gearboxes, or similar. These other parts may be covered by the warranties of their respective manufacturers.

Wear Items - This limited warranty does not cover damages or defects from normal wear and tear. This limited warranty does not include routine maintenance and normal maintenance parts, including but not limited to wheels, blades, tines, handles, housing, panels, gears, legs, cables, bearings, or accessories.

Negligence and Improper Maintenance or Repair - This limited warranty does not cover any equipment that has been subject to lack of reasonable and proper maintenance, misuse, lack of proper storage, or accidents. This limited warranty does not cover any damage to the equipment that is caused by a freight carrier or is the result of failure to follow the operating instructions within the Owner's Manual. This limited warranty does not cover any defects due to repairs, modifications, or alternations made to the product by anyone other than Schiller Grounds Care, Inc. or its authorized dealers or authorized service centers. In addition, this limited warranty does not cover repairs made necessary due to a lack of proper protection during storage. This limited warranty does not cover damage caused by the use of parts, supplies, or accessories, including, without limitation, filters, spark plugs, carburetors, ignition, drive belts, brakes, gasoline, fuel, oil, or lubricants, which in the reasonable judgment of Schiller Grounds Care, are either incompatible with the product, adversely affect its operation, performance, durability or are other than as recommended in the Operator's Manual or other operational instructions provided by Schiller Grounds Care.

Improper Use - This limited warranty does not cover any Mantis Product, part, or accessory that (i) has been subject to misuse, abuse, neglect, negligence, or accident, or that has not been assembled, operated, or maintained in accordance with the operating or maintenance instructions specified in the Operator's Manual; or (ii) has been altered or modified so as to adversely affect its operation, performance or durability, or that has been altered or modified in ways not approved by Schiller Grounds Care. To the extent permitted by law, neither Schiller Grounds Care nor any company affiliated with it makes any warranties, representations, or promises as to the quality, performance, or freedom from defect of the Mantis Product, part, or accessory covered by this limited warranty. The authorized dealer makes no warranty of its own and such dealer has no authority to make any representation, warranty, or promise on behalf of Schiller Ground Care or to modify the terms or limitations of this limited warranty in any way.

Other Exclusions - This limited warranty does not include reconditioned, refurbished, used, or demonstration equipment. This limited warranty excludes failures due to acts of nature beyond the manufacturer's control.

Extended Warranty - Schiller Grounds Care disclaims responsibility for any separately purchased extended warranty. ALL WARRANTIES OTHER THAN THE EXPRESS WARRANTY SET FORTH ABOVE ARE SPECIFICALLY DISCLAIMED. THE DURATION OF ANY IMPLIED WARRANTY, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IS LIMITED TO THE DURATION OF THIS WRITTEN LIMITED WARRANTY.

Disclaimer of Consequential Damage - Schiller Grounds Care disclaims any responsibility for incidental or consequential damages including, but not limited to, the expense for gasoline, the expense of delivering the product to an authorized service dealer, the expense of returning the product to the purchaser, mechanic's travel time, telephone charges, rental of a like product during the repair timeframe, travel, loss of revenue, loss of time, or inconvenience. SCHILLER GROUNDS CARE, INC. DISCLAIMS ALL LIABILITY FOR INDIRECT, INCIDENTAL, AND/OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE MANTIS PRODUCTS COVERED BY THIS LIMITED WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

Mantis®

Motobêche-bineuse



MODÈLE 7940A

Manuel de l'utilisateur et consignes de
sécurité pour la motobêche-bineuse

MAN 802-0007

Rev. D 08/2024

MANUEL DE L'UTILISATEUR / PIÈCES DÉTACHÉES



Bienvenue dans le monde du jardinage Mantis

Voici votre nouvelle motobêche MANTIS... la petite merveille de légèreté qui « Change notre manière de jardiner ».

Contrairement aux grosses motobêches, la motobêche MANTIS ne pèse que 10,9 kg (24 lb) (modèle 7940A). Elle est facile à soulever, se manie avec souplesse et bine et désherbe avec précision. En outre, contrairement aux autres petites motobêches, elle comporte des fraises en serpent qui travaillent la terre jusqu'à 25 cm de profondeur, produisant un lit de semence léger et uniforme, même dans des sols difficiles.

Une fois que vous saurez comment utiliser votre motobêche, vous l'adorerez, soyez-en assurés. Mais veuillez d'abord lire ce manuel. Il explique, étape par étape, comment utiliser la motobêche en toute sécurité.

À L'ATTENTION DES PROPRIÉTAIRES DE PRODUITS MANTIS !

Consultez les conseils d'entretien pour votre produit Mantis sur notre site Web à www.mantis.com

MESSAGE IMPORTANT

Merci d'avoir choisi ce produit Schiller Grounds Care, Inc. Vous avez acheté un produit de classe mondiale, de conception et de fabrication quasiment sans égales.

Cette machine est fournie avec des instructions d'utilisation et de sécurité, des instructions de réparation et de pièces détachées et des instructions relatives au moteur. La durabilité et le bon fonctionnement de cette machine dépendent en grande partie de la manière dont vous avez lu et compris ce manuel. Veuillez à traiter la machine correctement, à la graisser et la régler comme indiqué et elle vous offrira de nombreuses années de service fiable.

La sécurité d'utilisation de ce produit Schiller Grounds Care, Inc. est l'un de nos principaux objectifs de conception. Nous intégrons de nombreux dispositifs de sécurité mais comptons aussi sur votre bon sens et votre attention pour éviter les accidents. Pour assurer une protection optimale, lisez les manuels avec attention. Apprenez à utiliser correctement toutes les commandes. Observez toutes les mesures de sécurité. Respectez toutes les instructions et mises en garde. Ne démontez ou ne neutralisez aucun des dispositifs de sécurité et assurez-vous que tous les utilisateurs de la machine sont aussi bien informés et prudents dans son emploi que vous.

Pour le service après-vente et les pièces détachées, adressez-vous à un concessionnaire Schiller Grounds Care, Inc. Le service après-vente Schiller Grounds Care, Inc. est l'assurance que vous obtiendrez toujours les meilleurs résultats possibles de votre produit. Vous pouvez faire confiance aux pièces de rechange Schiller Grounds Care, Inc. parce qu'elles sont fabriquées avec le même degré de précision et de qualité que les pièces d'origine.

Schiller Grounds Care, Inc. conçoit et fabrique son matériel de manière à offrir de nombreuses années de service sûr et productif. Pour optimiser la durée de service, utilisez impérativement cette machine conformément aux instructions des manuels, maintenez-la en bon état et respectez toutes les mises en garde et consignes de sécurité. Vous ne le regretterez jamais.

Schiller Grounds Care, Inc.

1028 Street Road

Southampton, PA 18966-4217 États-Unis

TÉLÉPHONE (800) 366-6268 • TÉLÉCOPIEUR (215) 956-3855

TABLE DES MATIÈRES

RÈGLES DE SÉCURITÉ ET AVERTISSEMENTS

Informations spéciales sur la sécurité	3
Sécurité et avertissements	3
Identification des autocollants de sécurité	3
Avvertissements - À faire	4
Avvertissements - À ne pas faire	5
Avvertissements moteur/carburant - À faire	5
Avvertissements moteur/carburant - À ne pas faire	5
ASSEMBLAGE	6
Demi-guidon inférieur	7
Demi-guidon supérieur	8
Fraises	8-9
Béquille	9

PLEIN DE CARBURANT ET DÉMARRAGE

Plein de carburant et d'huile 4 temps	10
Démarrage 4 temps seulement	10
FONCTIONNEMENT	11-12
TRANSPORT	13
RANGEMENT	13
ENTRETIEN	14-16
DÉPANNAGE	17
MOTOBÊCHE MANTIS ET LISTE DES PIÈCES	18-19
GARANTIE LIMITÉE	COUVERTURE ARRIÈRE



Ce manuel de l'utilisateur / pièces détachées fait partie de la machine. Les fournisseurs de machines neuves et d'occasion doivent s'assurer que ce manuel est remis avec la machine.

Règles de sécurité et avertissements

Le présent manuel de l'utilisateur contient un certain nombre de règles de sécurité et d'avis importants. Pour la protection de tous, veiller à bien comprendre et respecter ces mises en garde.

I. INFORMATIONS SPÉCIALES SUR LA SÉCURITÉ



AVERTISSEMENT

Attention : Ce symbole attire l'attention sur d'importantes consignes de sécurité. Lorsque ce symbole ⚠ est présent, respecter la mise en garde ! Rester vigilant !



AVERTISSEMENT

Pour réduire les risques d'accident, respecter les consignes de sécurité figurant dans ce manuel. Le non-respect de ces consignes peut entraîner des dommages corporels et matériels graves.

II. SÉCURITÉ ET AVERTISSEMENTS



AVERTISSEMENT

Pour écarter les risques de blessure grave, utiliser et entretenir cette motobèche de façon appropriée et porter une protection adaptée. Lire et comprendre les consignes de sécurité et toutes les instructions de ce manuel. Porter protection auditive et oculaire.



AVERTISSEMENT

L'échappement du moteur de ce produit contient des produits chimiques déclarés par l'État de la Californie responsables de cancer, malformations congénitales ou autres anomalies de la reproduction.

III. IDENTIFICATION DES AUTOCOLLANTS DE SÉCURITÉ

Les autocollants de mise en garde et d'information apposés sur les différentes parties de la motobèche constituent une part importante du système de sécurité de la machine. Ces autocollants peuvent se dégrader avec le temps en raison de l'abrasion, etc. Il incombe à l'utilisateur de remplacer ces autocollants lorsqu'ils deviennent difficiles à lire. Veiller à examiner et à se familiariser avec chacun des autocollants suivants :



Réf. 430057



Danger de coupure ; garder les mains et les pieds à l'écart des fraises en rotation.



Ne pas porter la motobèche dans cette position.



Lire le manuel avant d'utiliser la motobèche, d'effectuer son entretien ou de la réparer. Conserver le manuel de l'utilisateur dans un endroit sûr.



Ne pas utiliser la machine à l'intérieur



Ne pas faire le plein ni vérifier le niveau de carburant en fumant une cigarette ou à proximité d'une flamme nue ou de toute autre source d'inflammation.



Réf. 400631



Porter une protection auditive et oculaire.



Attention : lors de l'assemblage du guidon, s'assurer que le réservoir de carburant est tourné dans la direction opposée à l'utilisateur. Ceci est l'arrière de la motobèche, voir les instructions d'assemblage aux pages 8 à 9.



Assemblage incorrect.



AVERTISSEMENT

Pour écarter les risques blessures graves à soi-même et à d'autres, veiller à utiliser la motobèche de façon correcte et à respecter les consignes de sécurité. Lire et comprendre ce manuel avant de tenter d'utiliser la motobèche.



AVERTISSEMENT

L'utilisation de ce matériel peut produire des étincelles susceptibles de provoquer des incendies en présence de végétation sèche. La machine est équipée d'un pare-étincelle. L'utilisateur est invité à se renseigner sur la réglementation en matière de prévention auprès des autorités compétentes locales.

IV. AVERTISSEMENTS - À FAIRE

Veiller à lire et à comprendre le manuel de l'utilisateur. Accorder une attention particulière à toutes les sections portant sur la sécurité.

1. **Toujours maintenir une prise ferme** sur les deux poignées pendant la rotation des fraises et/ou du moteur. FAIRE PREUVE DE VIGILANCE ! Il est possible que les fraises continuent de tourner une fois que la commande d'accélérateur est relâchée et qu'elles continuent de poser un danger. S'assurer que les fraises sont à l'arrêt complet et que le moteur est coupé avant de lâcher la motobèche.
2. **Toujours maintenir une posture stable** et un bon équilibre. Ne pas se pencher excessivement durant l'utilisation de la motobèche. Avant de commencer à utiliser la motobèche, vérifier la zone à travailler et éliminer tout obstacle susceptible de faire perdre l'équilibre ou le contrôle de la machine.
3. **Soigneusement contrôler la zone** où le matériel doit être utilisé et enlever tous les objets susceptibles d'être projetés par la machine.
4. **Toujours tenir** les enfants, les animaux et les curieux **à l'écart**.
5. **Toujours faire preuve de vigilance.** Faire preuve d'attention et de bon sens. Ne pas utiliser la machine lorsqu'on est fatigué.
6. **Toujours porter une tenue adaptée.** Ne pas porter de bijoux ni de vêtements amples susceptibles d'être happés par les pièces en mouvement. Porter des gants épais pour réduire la transmission des vibrations aux mains, car l'exposition prolongée aux vibrations peut provoquer un engourdissement et d'autres problèmes.

7. **Toujours porter** des chaussures solides et un pantalon long durant l'utilisation. Ne pas utiliser la machine pieds nus ou avec des sandales ouvertes à l'avant.
8. **Toujours porter** une protection auditive et oculaire. La protection oculaire doit être conforme aux normes CE ou ANSI en vigueur. Pour éviter les lésions auditives, il est conseillé de porter une protection antibruit chaque fois que la machine est utilisée.
9. **Éviter** éviter l'accumulation de matières végétales et de graisse sur le moteur et à l'endroit où est rangée l'essence afin de réduire le risque d'incendie.
10. **Démarrer le moteur avec précaution**, en conformité avec toutes les instructions du fabricant et en gardant les pieds bien à l'écart de l'outil.
11. **Maintenir** tous les écrous, boulons et vis bien serrés pour assurer un fonctionnement sans danger de la machine.
12. **Faire preuve de grande prudence** lors des changements de sens de rotation des fraises ou en tirant la machine vers soi.
13. **Ne travailler qu'à la lumière du jour** ou sous une bonne lumière artificielle.
14. **Toujours garder** le pied ferme dans les pentes.
15. **Faire preuve de grande prudence** pour changer de direction dans une pente.
16. **Toujours maintenir une distance sûre** entre plusieurs personnes qui travaillent ensemble.

17. **Toujours contrôler la motobèche** avant chaque utilisation. Resserrer toute la visserie desserrée pour assurer un fonctionnement sans danger de la machine.
18. **Toujours vérifier visuellement** que les outils ne sont pas usés ni endommagés. Avant toute utilisation, remplacer les éléments usés ou endommagés et leur boulons par jeu complet pour maintenir l'équilibre.
19. **Toujours entretenir et examiner** la motobèche avec soin. Suivre les instructions d'entretien figurant dans le manuel.
20. **Toujours ranger la motobèche** dans un endroit abrité (sec) inaccessible aux enfants.
21. **Toujours garder à l'esprit** que l'utilisateur est responsable des accidents ou des dangers qu'il fait courir aux autres ou à leurs biens.

Règles de sécurité et avertissements

V. AVERTISSEMENTS - À NE PAS FAIRE

Ne pas conduire la motobèche d'une seule main. Lorsque les fraises sont en mouvement et que le moteur est en marche, garder les deux mains sur le guidon en serrant les doigts autour des poignées.

Ne pas courir avec la machine, marcher.

Ne pas travailler sur des pentes abruptes.

Ne jamais tenter de désobstruer les fraises alors qu'elles sont en mouvement ou que le moteur est en marche. Mettre le moteur à l'arrêt et de s'assurer que les fraises sont à l'arrêt

complet avant de retirer une obstruction.

Ne pas permettre aux enfants ni aux personnes n'ayant pas pris connaissance de ces instructions d'utiliser la machine. La réglementation locale peut restreindre l'âge de l'utilisateur.

Ne pas laisser d'autres personnes utiliser la motobèche sans instructions appropriées.

Ne jamais ranger la motobèche ni le carburant à l'intérieur d'une habitation.

Ne pas utiliser la machine alors qu'on est

sous l'emprise de l'alcool ou de stupéfiants.

Ne pas tenter de réparer cette motobèche. Confier les réparations à un technicien ou revendeur qualifié. Veiller à utiliser exclusivement des pièces Mantis d'origine.

Ne pas se pencher excessivement. Conserver le pied ferme en permanence.

Ne pas se tenir devant la motobèche lorsque les fraises sont en rotation ou que le moteur est en marche.



AVERTISSEMENT

Le carburant est très inflammable, le manipuler avec précaution. Pour écarter les risques d'incendie et de dommages corporels et matériels graves, ne pas remplir le réservoir si le moteur est chaud ou s'il se trouve à proximité d'une source d'inflammation.

VI. AVERTISSEMENTS MOTEUR/CARBURANT - À FAIRE

Toujours utiliser de l'essence fraîche. L'essence périmée peut causer des dommages.

Toujours conserver le carburant dans des bidons spécialement prévus à cet effet.

Toujours ajouter de l'essence avant de démarrer le moteur.

Toujours bien remettre en place les capuchons du réservoir et du bidon de carburant.

Toujours tirer le cordon du démarreur lentement jusqu'à sentir une résistance afin d'éviter les rebonds susceptibles de blesser le bras ou la main.

Toujours utiliser le moteur avec un pare-étincelles en place et en bon état de marche.

Arrêter le moteur chaque fois qu'on s'éloigne de la machine et avant de refaire le plein. Laisser le moteur refroidir avant de ranger la machine dans un endroit fermé. Pour plus

de sécurité, changer les pièces usées ou endommagées.

Toujours vidanger le réservoir de carburant à l'extérieur. Pour réduire le risque d'incendie, éviter l'accumulation de matières végétales et de graisse sur le moteur et à l'endroit où est conservée l'essence.

VII. AVERTISSEMENTS MOTEUR/CARBURANT - À NE PAS FAIRE

Ne jamais soulever ni porter une machine alors que le moteur est en marche ou que les fraises sont en rotation.

Ne pas faire le plein ni vérifier le niveau de carburant en fumant une cigarette ou à proximité d'une flamme nue ou de toute autre source d'inflammation. Arrêter le moteur et s'assurer qu'il est froid avant de refaire le plein.

Ne pas laisser la motobèche sans surveillance avec le moteur en marche. Arrêter le moteur avant toute opération d'entretien et de nettoyage, avant de changer d'outil et avant tout déplacement autrement qu'avec le propre moteur de la motobèche.

Ne jamais enlever le capuchon d'essence ni verser d'essence avec le moteur en marche ou s'il est encore chaud.

Ne pas faire le plein ni démarrer ou faire tourner la motobèche à l'intérieur ou dans un

endroit mal aéré.

Ne pas faire tourner le moteur si le système électrique produit des étincelles à l'extérieur du cylindre. Durant les vérifications périodiques de la bougie, maintenir la bougie à une distance suffisante du cylindre pour éviter d'enflammer le carburant s'évaporant du cylindre.

Ne pas vérifier la formation d'étincelle avec la bougie ou le fil de bougie enlevé. Utiliser un dispositif d'essai homologué.

Ne pas lancer le moteur avec la bougie déposée, sauf si le fil de bougie est débranché. Les étincelles peuvent enflammer les vapeurs d'essence.

Ne pas faire tourner le moteur en présence d'une odeur d'essence ou d'autres risques d'explosion.

Ne pas tenter de démarrer le moteur suite à un déversement accidentel d'essence.

Éloigner la machine du déversement et éviter de créer une quelconque source d'inflammation jusqu'à la dissipation des vapeurs ou le nettoyage du déversement.

Ne pas faire fonctionner la motobèche en cas d'accumulation de débris autour du silencieux ou des ailettes de refroidissement.

Ne pas toucher le silencieux, les cylindres ou les ailettes de refroidissement chauds afin d'éviter les brûlures graves.


Ne pas modifier le réglage du régulateur du moteur et ne pas faire tourner le moteur en surrégime.

Ne pas tenter de déposer la bougie alors que le moteur est chaud. La dépose de la bougie d'un moteur chaud peut provoquer des dommages irréparables du moteur et a pour effet d'annuler la garantie.

Ne pas utiliser de liquide de démarrage sous peine de dommages irréversibles au moteur.

Assemblage


Photo du modèle 7940A

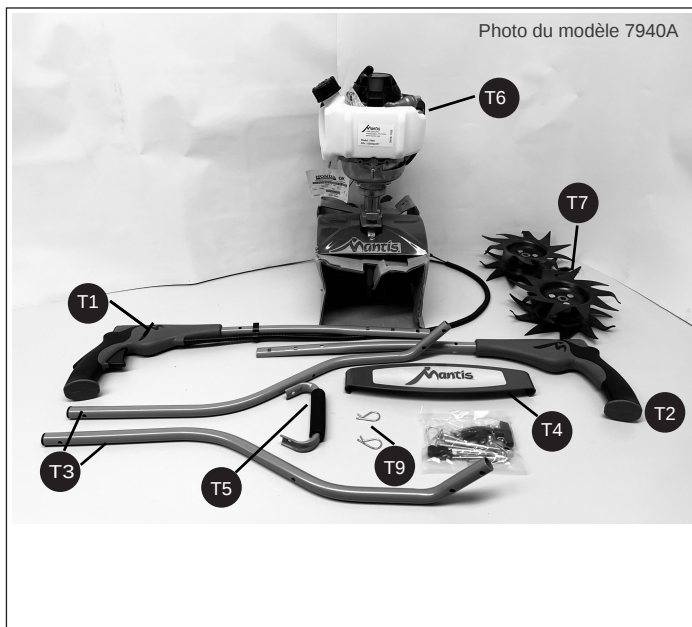

AVERTISSEMENT


L'assemblage incorrect de cette motobêche peut provoquer des blessures graves. Veiller à suivre toutes les instructions avec attention. Pour toute question, contacter notre usine au 1-800-366-6268 ou un concessionnaire Mantis agréé.

Contenu du
sachet

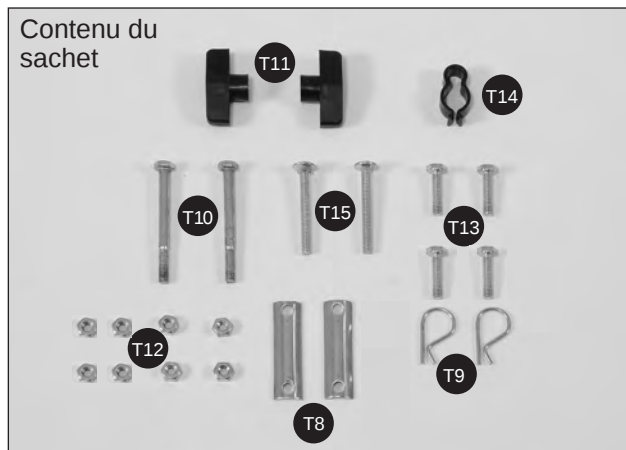

CONTENU DU CARTON

Repère	Qté	N° réf.	Description
T1	1		Demi-guidon supérieur à accélérateur
T2	1		Demi-guidon supérieur gauche
T3	2		Montants inférieurs de guidon avec bouchon
T4	1		Entretoise de guidon
T5	1		Poignée de transport en plastique
T6	1		Moteur (comprend le garde-boue et le réducteur à vis sans fin)
T7	1		Paire de fraises de bêchage/binage
	1		Sachet de visserie
T8	2		Brides de guidon
T9	1		Goupilles de retenue des fraises
T10	2		Boulons de 76 mm (3 po) de long
T11	2		Boutons de serrage
T12	8		Écrous-freins
T13	4		Vis à tête
T14	1		Clip de câble d'accélérateur
T15	2		Boulons de carrosserie
T16	1		Béquille
T17	1		Étrier et sachet de visserie de béquille
Non représenté	1	400206	Huile pour moteur 4 temps

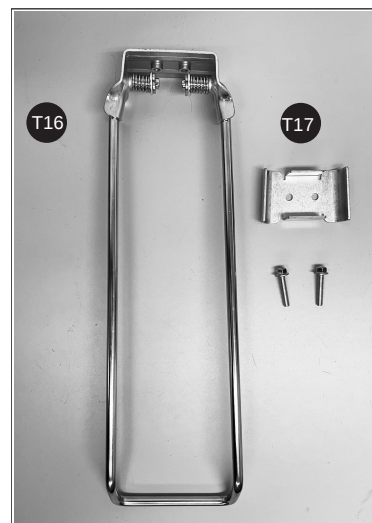

CE QUI EST NÉCESSAIRE POUR ASSEMBLER LA MOTOBÊCHE

Avant de sortir le contenu de l'emballage et d'assembler :

- Avoir une surface de travail propre
- Avoir deux clés de 7/16 po (11 mm) à disposition
- Vérifier que tous les outils nécessaires sont à portée de main
- Avoir une clé de 3/8 po (10 mm) pour l'assemblage de la béquille

Assemblage

POUR COMMENCER

- Placer la caisse debout, l'ouvrir et sortir la boîte de fraises et les pièces détachées placées dans le haut de la caisse. Ne sortir aucune autre pièce de la caisse.
- Coucher la caisse sur le côté et ouvrir le fond.
- Remettre la caisse en position verticale (comme sur la Figure A) et la tirer tout droit vers le haut.
- Laisser le moteur et la commande d'accélérateur dans le socle pour faciliter l'assemblage.
- Étaler toutes les pièces pour pouvoir les identifier facilement (voir l'illustration et la liste des pièces à la page 6).

Figure A

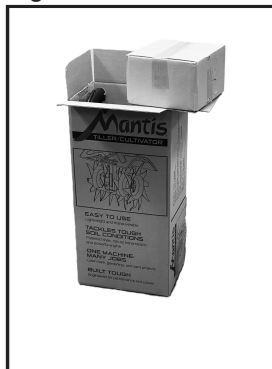


Figure B



ASSEMBLAGE DU GUIDON INFÉRIEUR

Se reporter aux numéros de repère des pièces à la page 6.

REMARQUE : Certaines photos dans ce manuel ne représentent pas le moteur de la motobèche dans l'emballage. Elles sont incluses pour les fins de l'assemblage seulement.

1



- Pour des raisons de facilité d'assemblage et de stabilité, il est important de laisser le moteur dans son socle en carton.

2



- Poser toutes les pièces du guidon à portée de main. Prendre l'une des brides de guidon (T8) et l'un des montants inférieurs de guidon (T3). Noter que les montants inférieurs du guidon comportent une partie courte à une extrémité.
- Placer la bride de guidon sur l'extérieur de la partie courte, comme sur l'illustration. Aligner les trous de la bride et ceux du montant.

3



- Prendre l'un des deux boulons de 76 mm (T10). L'enfiler à travers la première série de trous – près du coude du montant de guidon (photos 2 et 3).
- Enfiler ensuite l'autre montant inférieur de guidon sur le boulon de 76 mm. Placer l'autre bride sur la partie courte de l'autre montant de guidon. Poser un écrou-frein (T12) et le serrer à la main (serrer aussi fort que possible sans utiliser d'outil) (Figure 3).

4



- Trouver les gorges sous le moteur.

5



- Enfiler les montants inférieurs qui viennent d'être assemblés dans les deux gorges.
- Veiller à les enfiler depuis l'arrière de la motobèche (**réservoir d'essence du côté opposé à l'utilisateur**) de manière à ce que le boulon se loge le long de l'arrière du carter.

6



- Enfiler le deuxième boulon de 76 mm (T10) à travers la deuxième série de trous dans les parties courtes. Poser un écrou-frein (T12) et le serrer à la main seulement, jusqu'à ce que l'assemblage soit terminé.

REMARQUE : LES ÉCROUS-FREINS SONT ESTAMPES. LES SERRER À LA MAIN, C'EST-A-DIRE DE 1/2 À 1-1/2 TOURS ENVIRON, JUSQU'À CE QUE L'ASSEMBLAGE SOIT TERMINÉ.

Assemblage (suite)

ASSEMBLAGE DU GUIDON SUPÉRIEUR

7a



- Placez la poignée de transport (T5) entre les poignées inférieures. Alignez les trous et insérez les vis à tête (T13) et l'écrou-frein (T12) et serrez alternativement de chaque côté.

8



- Relever le guidon supérieur pour aligner les trous avec le guidon inférieur.
- Enfiler le boulon de carrosserie (T15) depuis l'extérieur.
- Poser le bouton (T11) et le serrer complètement au point d'articulation.

9



Couvrir le bout du boulon avec un écrou-freins (T12) et serrer avec la clé de 7/16 po (11 mm). Ne pas forcer.

11



Aligner les trous de l'entretoise de guidon (T4) et les trous des montants supérieurs de guidon. Enfiler une vis à tête (T13) et un écrou-frein (T12) des deux côtés.

- Serrer les vis à tête et les écrou-freins à l'aide d'une clé.
- Serrer fermement tous les boulons et écrous avec une clé.

7b



- Voici à quoi ressemble la motobêche Mantis une fois que le guidon inférieur est assemblé.

10



Répéter les étapes 8 et 9 pour monter l'autre montant supérieur de guidon sur l'autre montant inférieur.

- Utiliser le clip de câble d'accélérateur (T14) pour tenir le câble d'accélérateur et le fil de terre en place sur le guidon inférieur.


POSE DES FRAISES

1



- Cette opération nécessite les deux fraises et les deux goupilles de retenue.

2

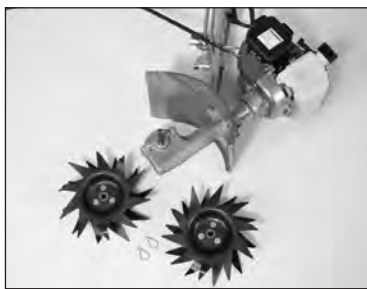

- Sortir la machine du socle en carton et la coucher sur le côté.


3




- Noter que le moyeu de fraise comporte un trou circulaire d'un côté et un trou en forme de D de l'autre.

Assemblage (suite)

POSE DES FRAISES (suite)

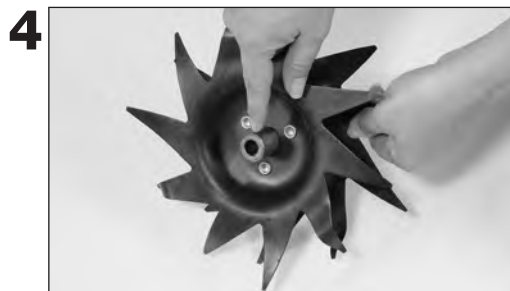

- Poser la fraise en enfilant le trou circulaire en premier sur l'axe.

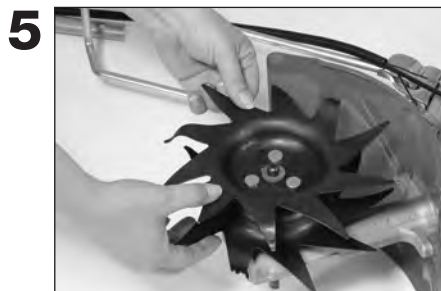


- Lorsque l'axe ressort de l'autre côté du moyeu, il s'aligne parfaitement sur le trou en D.




- Enfiler une goupille de retenue (T41) à travers le trou percé dans l'axe pour bloquer la fraise.
- Répéter l'opération de l'autre côté.

ASSEMBLAGE DE LA BÉQUILLE

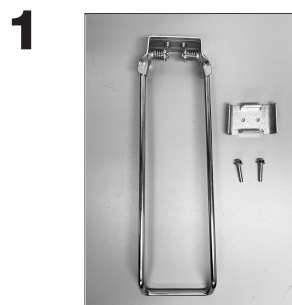

- Placer l'étrier de béquille juste au-dessus du cintrage au bas du guidon.
- Placer la béquille sous le bas du guidon, aligner les trous et visser les boulons de l'étrier dans la béquille.
- Serrer avec la clé de 3/8 po (10 mm).

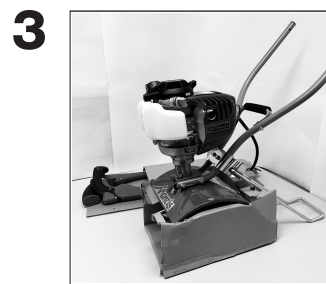

- Voici à quoi ressemble la motobèche Mantis une fois que le guidon inférieur et la béquille sont assemblés.



AVERTISSEMENT

Une pose incorrecte de la commande d'accélérateur peut provoquer une rotation intempestive des fraises.

REMARQUE IMPORTANTE :

Vérifier que le guidon a été monté correctement. Lorsqu'on se tient derrière la motobèche en tenant les poignées, on doit faire face à l'autocollant de mise en garde sur le garde-boue.

REMARQUE IMPORTANTE :

Avant d'utiliser la motobèche MANTIS, lire les Règles de sécurité et avertissements aux pages 3 à 5.

REMARQUE IMPORTANTE :

Vérifier que l'accélérateur s'actionne librement et que son câble n'est pas enroulé ni vrillé autour du guidon. Appuyer sur le levier de blocage, serrer complètement la commande d'accélérateur et relâcher. Le triangle d'accélérateur doit cliqueter dans les deux sens. En cas de doute, déposer le filtre à air et vérifier visuellement que le triangle d'accélérateur touche à la fois la vis de ralenti et la butée d'ouverture complète. EFFECTUER CE CONTRÔLE AVANT CHAQUE DÉMARRAGE DU MOTEUR.

Plein et démarrage de la motobêche 4 temps

PLEIN DE CARBURANT ET D'HUILE DE LA MOTOBÊCHE 4 TEMPS

IMPORTANT !

Il est normal que le moteur 4 temps dégage de la fumée pendant les quelques premières minutes de marche. Cela n'est toutefois pas forcément toujours le cas. C'est le résultat de l'aspiration d'huile à travers le moteur à des fins de graissage.

- Basculer la motobêche vers l'avant pour l'appuyer sur le réservoir d'essence.
- Il est important de placer la motobêche comme sur la **Figure 1** pour que l'huile remplisse correctement le carter. Cela évite d'endommager le moteur.
- Retirer le bouchon d'huile.
- Verser 2,7 oz (80 ml) d'huile moteur 4 temps homologuée.
- **Toujours vérifier le niveau d'huile avant chaque utilisation.** Le niveau d'huile doit atteindre le bas du filetage à l'intérieur du réservoir. Ne pas trop remplir.
- Remettre le bouchon d'huile en place.
- Remettre la machine en position verticale et abaisser la béquille.




Le plein d'essence de la motobêche est facile à effectuer. Dévisser le bouchon d'essence et remplir le réservoir aux quatre cinquièmes environ d'essence sans plomb d'indice d'octane 89. Penser à toujours vidanger le réservoir d'essence avant de transporter la machine d'un endroit à un autre.

LEVIER DU VOLET DE DÉPART

OUVERT

FERMÉ

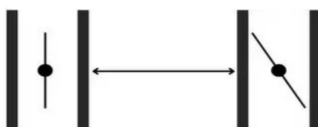

DÉMARRAGE DE LA MOTOBÊCHE 4 TEMPS SEULEMENT

Le démarrage initial du moteur, ou démarrage « à froid », est facile.

- Vérifier que l'interrupteur de marche/arrêt, sur la poignée de commande d'accélérateur, est en position de marche, indiquée par le symbole « I ».
- Placer le levier du volet de départ en position haute pour fermer le volet.
- Appuyer six fois environ sur la poire d'amorçage, pour remplir la poire d'essence. Une fois que la poire est pleine, appuyer deux fois de plus.
- Tirer lentement le cordon de démarreur jusqu'à sentir une résistance, puis tirer d'un coup sec et court. La motobêche doit démarrer immédiatement. Ne pas dérouler complètement le cordon et ne pas le laisser se rembobiner brutalement dans le logement du démarreur.
- Une fois le moteur en marche, ramener le levier de départ en position basse (ouvert).
- Pour arrêter le moteur, il suffit de placer l'interrupteur de marche/arrêt en position d'arrêt, indiqué par le symbole « O ».
- Pour démarrer un moteur chaud, suivre la même procédure, mais laisser le levier du volet de départ en position basse et ne pas pomper la poire d'amorçage.
- Avant d'utiliser la motobêche, laisser le moteur tourner pendant une minute pour le chauffer. Avant de l'éteindre, laisser le moteur tourner quelques instants pour le refroidir.



Interrupteur

REMARQUE IMPORTANTE :

Vérifier le niveau d'huile du moteur avant chaque utilisation. Si le niveau est bas, voir les détails dans le manuel du moteur 4 temps et ci-contre à gauche.

Ne jamais utiliser de liquide de démarrage sous peine de dommages irréversibles au moteur et d'annulation de la garantie. Avant d'utiliser la motobêche, lire les instructions de la rubrique Règles de sécurité et avertissements aux pages 3 à 5.

⚠ Avertissement • DANGER ⚠

LES CARBURANTS DE SUBSTITUTION, TELS QUE L'E-15 (20 % D'ÉTHANOL), L'E-85 (85 % D'ÉTHANOL) OU TOUT CARBURANT NON CONFORME AUX NORMES HONDA NE SONT PAS UTILISABLES DANS LES MOTEURS À ESSENCE. L'UTILISATION DE CARBURANTS DE SUBSTITUTION PEUT CAUSER PROBLÈMES DE FONCTIONNEMENT, PERTE DE PUISSANCE, SURCHAUFFE, BOUCHON DE VAPEUR DE CARBURANT ET MARCHÉ INTÉMPÊTIVE DE LA MACHINE, NOTAMMENT ENGAGEMENT INCORRECT DE L'EMBRAYAGE. LES CARBURANTS DE SUBSTITUTION PEUVENT ÉGALEMENT PROVOQUER UNE DÉTÉRIORATION PRÉMATURÉE DES CONDUITES DE CARBURANT, DES JOINTS, DU CARBURATEUR ET AUTRES PIÈCES DU MOTEUR.

⚠ Avertissement

Ne pas faire fonctionner le moteur dans un espace fermé où de dangereuses vapeurs de monoxyde de carbone peuvent s'accumuler.

⚠ Avertissement

L'essence est extrêmement inflammable. La manipuler avec précaution. La tenir à l'écart de toute source d'inflammation. Ne pas fumer pendant le remplissage du réservoir de carburant.


⚠ Avertissement

Éviter d'engager les fraises par accident. Ne pas serrer la commande d'accélérateur durant le démarrage. Maintenir un réglage correct du ralenti (2 500 à 3 100 tr/min).

Utilisation de la motobèche 4 temps

AVERTISSEMENT

Si le moteur ne s'arrête pas lorsque l'interrupteur est en position d'arrêt, relâcher l'accélérateur et laisser le moteur revenir au ralenti. Poser la motobèche et pousser le levier du volet de départ jusqu'en position de démarrage à froid (fermé). Ne pas réutiliser le produit avant de l'avoir fait réparer.

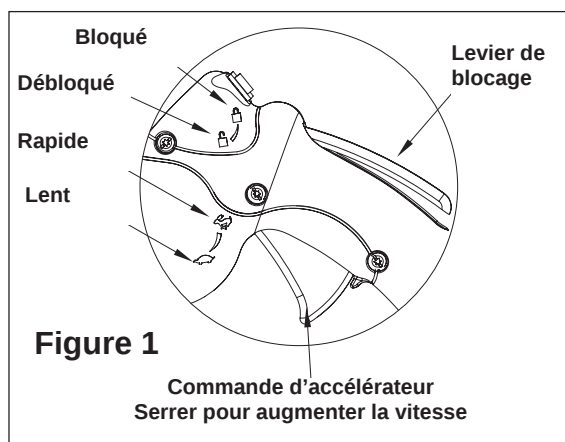

FUNCTION SPÉCIALE

Remarque : Ralenti correctement réglé et moteur en marche.

Même lorsque le moteur est en marche, les fraises ne tournent pas sauf si la commande d'accélérateur sur le guidon est enfoncée. Lorsqu'on relâche la commande d'accélérateur, les fraises s'arrêtent.

POUR PROLONGER LA DURÉE DE SERVICE DU MOTEUR

Après avoir démarré le moteur, le laisser chauffer pendant deux à trois minutes

avant d'utiliser la machine. Avant de ranger la motobèche, la laisser tourner au ralenti pendant une minute pour permettre au moteur de refroidir.

FUNCTIONNEMENT

Le moteur étant en marche et avec les deux mains sur le guidon, tenir le levier de blocage enfoncé (**Figure 1**) et serrer progressivement la commande d'accélérateur pour augmenter le régime du moteur et engager les fraises.

REMARQUE : Répéter cette étape chaque fois que la commande d'accélérateur est relâchée.

 **AVERTISSEMENT**
 Lire les instructions avec attention. Veiller à se familiariser avec les commandes et la bonne utilisation du matériel.

LA MOTOBÈCHE MANTIS PEUT À PRÉSENT ÊTRE UTILISÉE.

La motobèche MANTIS ne manquera pas de surprendre ceux qui ont utilisé d'autres machines. Elle bêche de façon optimale lorsqu'on la tire vers l'arrière ! Lorsqu'on tire la motobèche MANTIS en marche arrière, cela produit une résistance supplémentaire sur les fraises, qui creusent alors plus profondément. (**Figure 2**)

En outre, lorsqu'on travaille en reculant, on efface ses traces de pas et le sol reste meuble et léger. Avec d'autres motobèches, par contre, on marche directement sur le sol qui vient d'être retourné, ce qui le rend moins meuble.

MANIÈRE LA MOTOBÈCHE MANTIS COMME UN ASPIRATEUR

Placer la motobèche en tête de la rangée ou de la section à travailler et la démarrer. Commencer par un léger va-et-vient puis tirer la motobèche vers l'arrière. Répéter le mouvement de va-et-vient puis la tirer à nouveau vers l'arrière. La laisser



Figure 2

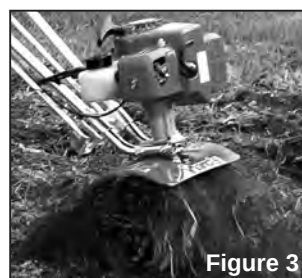


Figure 3



Figure 4

ensuite repartir très légèrement vers l'avant avant de la tirer à nouveau vers l'arrière. Cela permet de travailler plus en profondeur.

Répéter ces étapes sur toute la longueur de la rangée, puis recommencer sur la rangée suivante. C'est très semblable à l'utilisation d'un aspirateur. (**Figure 3**)

On peut même contrôler la profondeur de bêchage.

Pour un bêchage plus profond :

Déplacer la motobèche d'un lent va-et-vient, comme avec un aspirateur. Repasser sur la même section jusqu'à atteindre la profondeur souhaitée. (**Figure 4**)

Pour un bêchage peu profond :

Inverser les fraises pour les mettre en position de binage (voir les instructions à la page 12). Déplacer ensuite la motobèche rapidement sur la surface du sol.

Herbes hautes ou racines tenaces :

Repasser la motobèche en va-et-vient sur la partie difficile jusqu'à ce que les fraises tranchent les mauvaises herbes ou les racines.

La motobèche MANTIS permet les travaux spéciaux de bêchage :

Transformer une partie de la pelouse en un magnifique parterre de fleurs ? Rien de plus facile avec la motobèche MANTIS. Il suffit de passer la motobèche d'un mouvement de va-et-vient jusqu'à ce que le gazon commence à se fractionner. Continuer ensuite à bêcher. La motobèche hache les mottes de gazon puis les enfouit dans le sol. On obtient rapidement une plate-bande de terre meuble et fraîche.

 **AVERTISSEMENT** 
 TOUJOURS VÉRIFIER QUE LES BOUTONS DE SERRAGE DU GUIDON SONT BIEN SERRÉS AVANT DE DÉMARRER LA MOTOBÈCHE.

Utilisation de la motobêche 4 temps (suite)

AVERTISSEMENT

Ne jamais tenter de retirer une obstruction avec le moteur en marche. Cela peut provoquer des blessures graves. Si les fraises sont coincées ou enchevêtrées, arrêter immédiatement le moteur. Retirer l'obstruction alors que le moteur est arrêté.

AVERTISSEMENT

L'utilisateur de cette motobêche est responsable des accidents et des dangers qu'il fait courir à lui-même, aux autres et à leurs biens.



Figure 1

AVEC LA MOTOBÊCHE MANTIS, DÉSHERBER EST UN VRAI PLAISIR !

Dans sa configuration motobêche, la MANTIS travaille jusqu'à 25 cm de profondeur. Par contre, dans sa configuration bineuse, elle travaille la terre délicatement en surface, sur une profondeur de 5 à 7,5 cm seulement.

Pour la mettre en mode de binage, inverser les fraises pour les mettre en position de désherbage (ou binage) comme décrit ci-contre à droite. Cette opération prend moins d'une minute.


Dans cette configuration, les dents tranchantes des fraises de la motobêche MANTIS peuvent alors déchiqueter les mauvaises herbes tenaces et les enfouir dans le sol au fur et à mesure. Et, comme dans cette position les fraises ne creusent pas très profondément, elles n'abîment pas les précieuses racines des plantes.

Le résultat? La motobêche coupe le temps de désherbage de moitié et fait de cette tâche fastidieuse une vraie partie de plaisir.

PASSER DE LA CONFIGURATION DE BÊCHAGE À LA CONFIGURATION DE BINAGE

1. S'assurer que la motobêche est à l'arrêt.
2. Retirer les goupilles de retenue des fraises.
3. Retirer les fraises de leur axe.
4. Placer la fraise de droite sur l'axe gauche, puis placer la fraise de gauche sur l'axe droit. Lorsque les fraises sont en position correcte, le trou en forme de D doit se trouver vers l'extérieur.
5. Remettre les goupilles en place. **(Figure 1)**

Configuration de bêchage

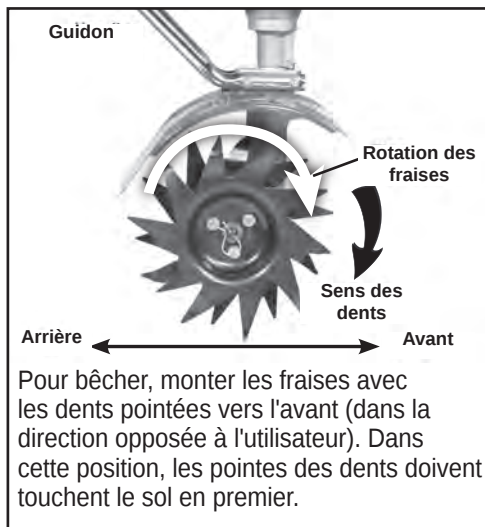

Configuration de binage

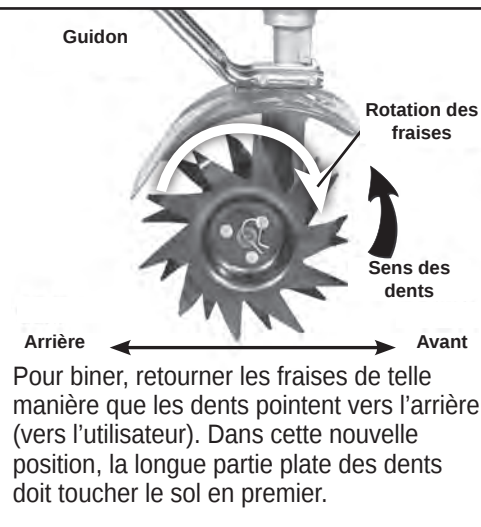


Figure 1

Transport et entreposage de la motobêche 4 temps

TRANSPORT DE LA MOTOBÈCHE 4 TEMPS

La motobêche est facile à transporter. Elle est légère et facile à porter à l'aide de la poignée de transport, comme sur la **Figure 1**.

Ou bien, lorsqu'elle est en marche, appuyer légèrement sur la commande d'accélérateur de manière à la faire avancer à une vitesse de marche confortable. La motobêche est facile à transporter à l'arrière d'une voiture ou d'un camion. Veiller à bien vidanger le réservoir de carburant (cela est crucial)! Attacher ensuite la motobêche dans le coffre de la voiture ou sur le camion.

ATTENTION : Le réservoir de carburant de la motobêche doit être vidé avant de la placer dans une voiture ou un camion.



Figure 1

RANGEMENT DE LA MOTOBÈCHE

AVERTISSEMENT

Ne jamais entreposer la machine avec du carburant dans le réservoir ou dans un endroit où les vapeurs peuvent s'accumuler et atteindre un flamme nue ou une étincelle.

Avant de ranger la motobêche pendant une période prolongée, veiller à prendre les mesures suivantes :

1. Ne pas ranger la motobêche avec du carburant dans le réservoir. Même dans des conditions idéales, du carburant contenant de l'éthanol ou du MTBE peut commencer à se vicier au bout de 30 jours. Le carburant vicié a une forte teneur en gomme et peut encrasser le carburateur et restreindre la circulation du carburant. **Au moment de ranger la motobêche, ou si elle ne pas être utilisée pendant plus de deux semaines, veiller à vidanger complètement le réservoir de carburant.**
2. Redémarrer le moteur pour éliminer le reste de carburant dans le carburateur. Faire ensuite tourner le moteur jusqu'à ce qu'il s'arrête. Cela évitera les dépôts de gomme à l'intérieur du carburateur et les dommages possibles au moteur.
3. Débrancher le fil de la bougie et déposer la bougie. Verser quelques gouttes d'huile moteur propre dans le cylindre. Mettre provisoirement le capot supérieur en place. Tirer plusieurs fois sur la poignée du démarreur pour répartir l'huile dans le cylindre.
4. Contrôler la bougie. La nettoyer, le cas échéant. La remplacer par une bougie NGK-CMR5H si elle est endommagée ou très encrassée, si la rondelle d'étanchéité est en mauvais état ou si l'électrode est usée.
5. Remonter la bougie, mais laisser son câble débranché.
6. Essuyer les fraises avec un chiffon huilé ou les vaporiser d'huile WD-40 pour les empêcher de rouiller.
7. Huiler le câble d'accélérateur et toutes les pièces mobiles visibles. (Ne pas déposer le capot du moteur.)
8. Nettoyer ou changer le filtre à air.
9. Contrôler le filtre à carburant. Si le filtre à essence est sale, le laver avec précaution avec un solvant ininflammable ou de point d'éclair élevé. Si le filtre à essence est très sale, le changer.
10. Vérifier le niveau de graisse à l'intérieur du carter de la vis sans fin. Ajouter de la graisse comme il se doit.
11. Ranger la motobêche en position verticale dans un endroit propre et sec. Elle peut être accrochée par l'entretoise de guidon ou rangée avec le guidon déployé ou replié. Pour replier le guidon, desserrer les boutons à ailes jusqu'à pouvoir pivoter le demi-guidon supérieur. (**Figure 2**)
12. S'il reste de l'essence de la saison précédente, l'éliminer comme il se doit. Acheter de l'huile et de l'essence fraîches la saison suivante.
13. Déposer les fraises et autres accessoires et huiler légèrement l'arbre de fraise au moins une fois par an.

AVERTISSEMENT

NE JAMAIS TRANSPORTER LA MOTOBÈCHE COMME LA PERSONNE DE LA FIGURE 1. CELA PEUT ENTRAÎNER DES BLESSURES GRAVES.



Figure 2

IMPORTANT :

Il est important de ranger la motobêche Mantis 4 temps en position verticale. Si la motobêche est couchée sur le côté, l'huile peut s'écouler du moteur à travers l'épurateur d'air.

IMPORTANT :

Éviter de poser la motobêche avec le capot supérieur (culasse du moteur) en bas. L'huile du carter peut pénétrer dans la chambre de combustion et causer un démarrage difficile ou un blocage du piston.

Entretien de la motobêche 4 temps

La motobêche 4 temps nécessite un certain entretien de base pour bien fonctionner année après année.

Si la motobêche doit être remise pour plus de 30 jours, il est très important de vidanger le réservoir de carburant afin de ne pas endommager le moteur.

Contrôler le niveau d'huile moteur, le filtre à air et le filtre à essence.

Voir les détails dans le manuel du moteur Honda®.



Filtre à air



Jauge



Filtre à essence

MESURE CORRECTIVE 4 TEMPS : TROP D'HUILE DANS LE MOTEUR

Si le moteur est trop rempli, l'huile entre dans le carter de vilebrequin et ne peut pas simplement être versée par l'orifice de remplissage d'huile. L'excédent d'huile doit être pompé hors du moteur durant la marche. Contrôler le niveau d'huile et vidanger tout excédent sur plusieurs intervalles de marche de 30 secondes afin de ramener l'huile au niveau correct.


Si le moteur est suspecté contenir trop d'huile, la procédure suivante permet d'éliminer l'excédent d'huile du carter et du couvercle des soupapes.

1. Poser le moteur sur une surface horizontale à plat sur le réservoir d'essence et ouvrir le bouchon-jauge du réservoir d'huile. Prévoir un seau pour recueillir tout débordement d'huile du réservoir.
2. Remettre le bouchon d'huile en place et faire tourner le moteur pendant 30 secondes environ puis répéter l'étape 1.
3. Poursuivre les étapes 1 et 2 jusqu'à ce que l'huile ne déborde plus lorsque le bouchon-jauge d'huile est enlevé.
4. Une fois que l'excédent d'huile a été éliminé, laisser tourner le moteur. Il peut continuer de fumer pendant plusieurs minutes jusqu'à ce que toute l'huile résiduelle ait brûlé.

POSITION CORRECTE POUR CONTRÔLER/ COMPLÉTER LE NIVEAU D'HUILE DU 4 TEMPS



Cette position ne permet pas de mesurer correctement le niveau d'huile et peut causer son débordement.

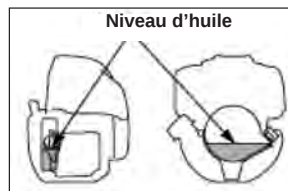

Le moteur doit être posé sur une surface plane sur son réservoir d'essence



Entretien de la motobêche 4 temps (suite)

ENTRETIEN DU FILTRE À AIR

Un filtre à air humide ou sale peut influencer sur le démarrage, le fonctionnement et l'usure du moteur. Contrôler le filtre une fois par mois ou toutes les 10 heures d'utilisation.

Remarque : En cas de conditions de travail poussiéreuses, contrôler le filtre à air encore plus souvent (avant chaque utilisation, par exemple). Veiller à le changer s'il est usé ou endommagé.

Vérification, nettoyage et changement du filtre à air

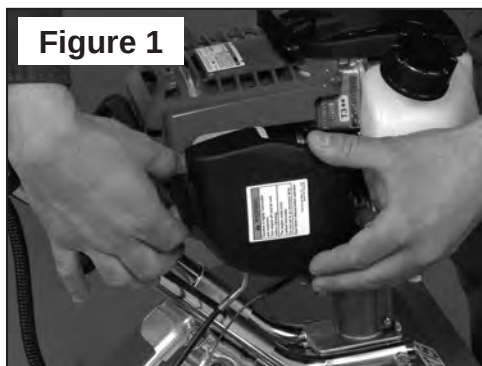


Figure 1

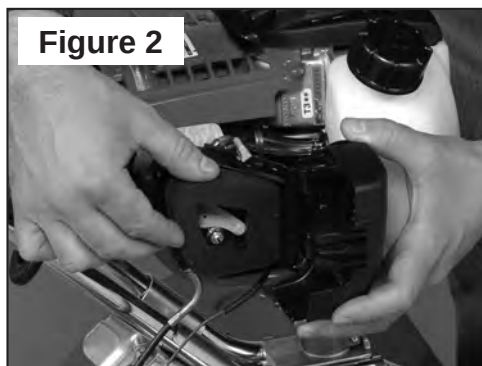


Figure 2

1. Le filtre à air se trouve dans l'épurateur d'air, un boîtier noir sur le côté de la motobêche, derrière le capuchon du réservoir d'essence.
2. Pincer les deux languettes de blocage à l'arrière du capot d'épurateur d'air (**Figure 1**) et basculer le capot vers l'avant du moteur pour l'ouvrir.
3. Le filtre à air est l'élément en matériau éponge sombre à l'intérieur de l'épurateur.
4. Si le filtre à air doit être nettoyé (c'est-à-dire s'il est sale ou humide) ou s'il n'est plus utilisable, il suffit de le tirer hors de l'épurateur d'air. (**Figure 2**)
5. Pour nettoyer le filtre à air
 - a. Nettoyer l'élément filtrant dans de l'eau tiède savonneuse, le rincer et le laisser sécher complètement. Il peut également être nettoyé avec un solvant inflammable.
 - b. Tremper l'élément filtrant dans de l'huile moteur propre, puis en essorer tout l'excédent d'huile. Remarque : Le moteur fume au démarrage s'il reste trop d'huile dans l'élément.
 - c. Essuyer la saleté du corps et du capot de l'épurateur d'air avec un chiffon humide. Remarque : Prendre garde de ne pas laisser de saleté pénétrer dans le carburateur.
6. Remettre le filtre propre à l'intérieur de l'épurateur d'air.

IMPORTANT :

S'assurer que le filtre est bien « calé » dans le capot. Le filtre doit passer tout juste à l'intérieur de l'ouverture qui le tient en place. Une pose incorrecte du filtre aurait pour effet d'endommager le moteur et d'annuler la garantie. Remettre le capot en place sur l'épurateur d'air et encliqueter les deux languettes de blocage.

REMARQUE IMPORTANTE :

Un épurateur d'air sale limitera le débit d'air vers le carburateur, ce qui réduit le rendement du moteur. Si le moteur est utilisé dans des endroits très poussiéreux, nettoyer le filtre à air plus souvent que préconisé dans la section Entretien.

REMARQUE IMPORTANTE :

L'utilisation du moteur sans l'élément filtrant ou avec un élément filtrant endommagé permet la pénétration de saleté et résulte en une usure rapide du moteur. Ce type de dommage n'est pas couvert par la garantie limitée.

REMARQUE IMPORTANTE :

Vérifier le rebord du capot de l'épurateur d'air. Si le rebord est écaillé ou fissuré, le capot doit être changé. Cela évite que la saleté soit aspirée dans le moteur par le carburateur.

Entretien de la motobêche 4 temps (suite)

REMISE EN PLACE CORRECTE DE LA BRIDE


Si les fraises ne tournent pas lorsqu'on enfonce la commande d'accélérateur, il est possible que le moteur ne soit pas complètement engagé sur le carter de vis sans fin.

Si la motobêche n'a pas été utilisée pendant plusieurs années ou si le moteur a été démonté pour être utilisé avec notre accessoire taille-haies puis remonté, il est possible que le boulon de la bride se soit desserré et laissé le moteur se soulever.


Dans ce cas, on observe un espacement entre le bas du carter d'embrayage du moteur et le dessus du carter de vis sans fin. (Figure 1)

Pour éliminer cet espacement, desserrer le boulon de bride et détacher le moteur du carter de vis sans fin. Noter la tête hexagonale au bout de l'arbre d'entraînement et le tambour d'embrayage à l'intérieur du carter d'embrayage. Veiller à aligner la tête hexagonale et le tambour d'embrayage à l'intérieur du carter d'embrayage. (Figure 5)

emettre ensuite le moteur en place sur le carter de vis sans fin, en s'assurant que la poignée de transport en plastique ne se trouve pas sous le réservoir de carburant.

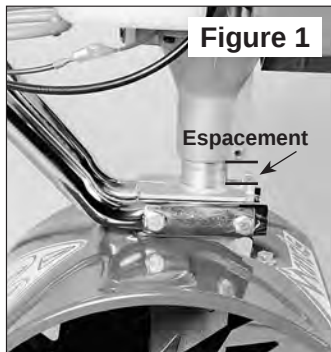

Le moteur n'est pas complètement engagé sur le réducteur.

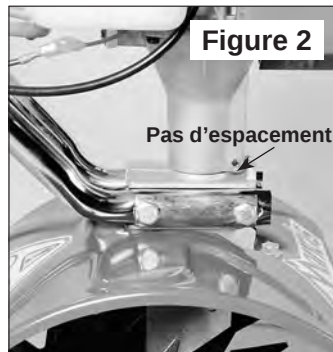

Le moteur est engagé jusqu'au fond sur le réducteur.



Si ces étapes ont été effectuées correctement, il n'y a aucun espacement entre le carter d'embrayage et le carter de vis sans fin. (Figure 2) Enfin, veiller à bien resserrer le boulon de la bride.


Toutes les autres questions d'entretien du moteur sont décrites dans le manuel du moteur Honda® fourni avec la motobêche.

ENTRETIEN DU RÉDUCTEUR

Remarque : Vérifier le niveau de graisse du réducteur après les 10 premières heures d'utilisation puis le vérifier chaque année.

Les fraises étant démontées, déposer la plaque du réducteur (Figure 3) et son joint pour voir si le niveau de graisse atteint la bride de plaque (Figure 4). Si ce n'est pas le cas, ajouter de la graisse au lithium de grade zéro ou un.


Essuyer tout excédent de graisse et remonter la plaque et le joint du réducteur.

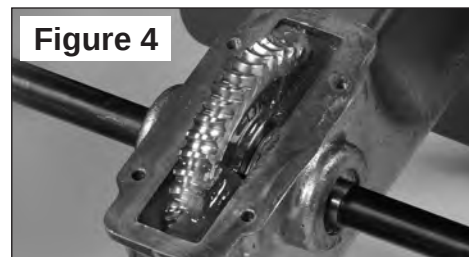

Dépannage

Problème	Cause	Correction
1. Les fraises ne tournent pas lorsque l'accélérateur est enfoncé.	Le moteur n'est pas complètement engagé sur le carter de réducteur.	Remonter le moteur en suivant les instructions de la page 16, « Remise en place correcte de la bride ».
2. Le moteur ne démarre pas.	- L'interrupteur O/I est en position O. - Le réservoir est vide - Le filtre-tamis à carburant est obstrué - La conduite de carburant est obstruée - La bougie est en court-circuit ou encrassée - La bougie est cassée (porcelaine fissurée ou électrodes cassées). - Le câble de bougie est en court-circuit, sectionné ou débranché de la bougie. - L'allumage ne fonctionne pas.	- Placer l'interrupteur en position I. - Remplir le réservoir. - Changer le filtre-tamis. - Nettoyer la conduite de carburant. - Poser une bougie neuve. - Changer la bougie. - Changer le câble de bougie ou le brancher sur la bougie. - Consulter le distributeur agréé local.
3. Le moteur est difficile à démarrer.	- Présence d'eau dans l'essence - Fuite de joint (carburateur ou base du cylindre). - Étincelle de bougie insuffisante	- Vidanger tout le circuit et refaire le plein avec du carburant frais. - Changer les joints. - Consulter le distributeur agréé local.
4. Dégagement de fumée noire à l'échappement	La grille de silencieux est obstruée	Nettoyer les dépôts de carbone de la grille de silencieux. Voir le manuel du moteur.
5. Le moteur a des ratés.	- Saleté dans la conduite de carburant ou le carburateur - Carburateur mal réglé - Bougie encrassée ou cassée ou écartement mal réglé - Étincelle de la bougie faible ou intermittente	- Déposer et nettoyer. - Voir le réglage du carburateur dans le manuel du moteur. - Nettoyer ou changer la bougie; régler l'écartement entre 0,6 et 0,7 mm. - Consulter le distributeur agréé local.
6. Le moteur manque de puissance.	- Filtre à air encrassé - Silencieux obstrué - Pare-étincelles obstrué - Compression insuffisante	- Nettoyer ou remplacer le filtre à air (page 15). - Nettoyer les dépôts de carbone du silencieux, voir le manuel du moteur. - Nettoyer le pare-étincelles ; voir le manuel du moteur. - Consulter le distributeur agréé local.
7. Le moteur surchauffe.	Écoulement d'air obstrué.	Nettoyer le volant, les ailettes de cylindre et la grille. Voir le manuel du moteur.
8. Le moteur est bruyant ou cliquète.	- Plage de température de la bougie incorrecte - Paliers, segment du piston ou parois du cylindre usés.	- Remplacer par une bougie indiquée pour le moteur. - Consulter le distributeur agréé local.
9. Le moteur cale sous la charge.	Le moteur surchauffe.	Éliminer la poussière et la saleté des ailettes du cylindre.

Motobêche 4 temps

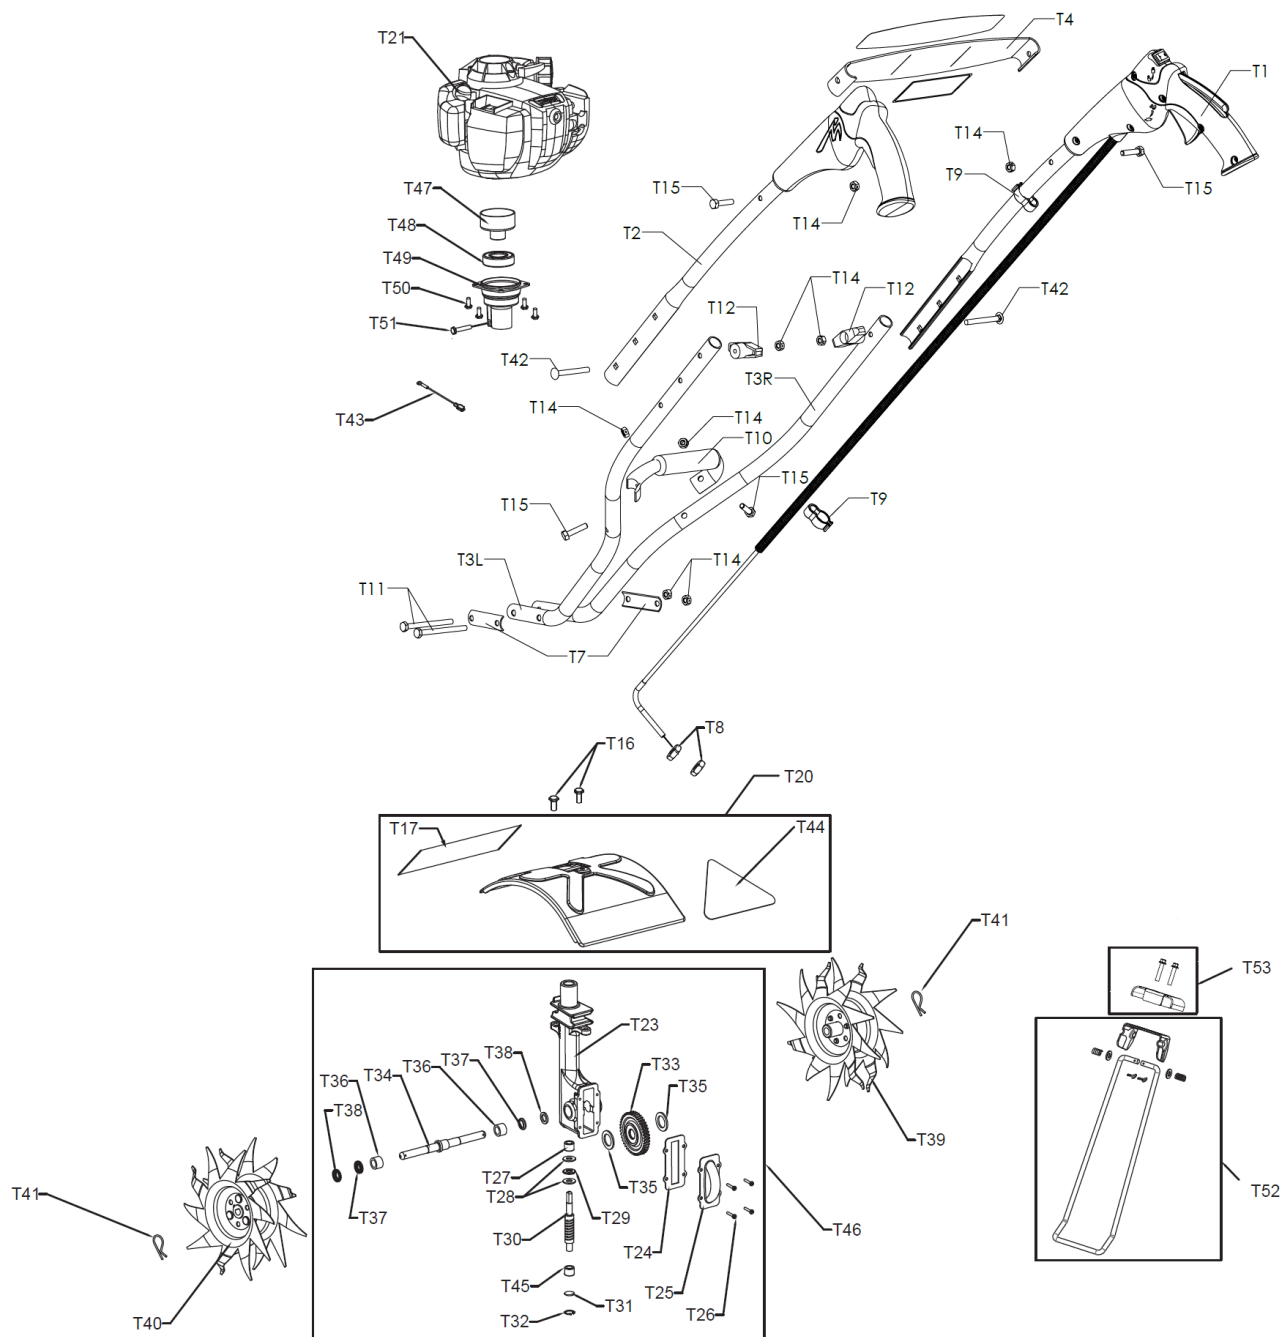

Liste des pièces

Rep.	Qté	N° de réf.	Description
T30	1	400010	Arbre de vis sans fin
T31	1	400010	Disque de vis sans fin
T32	1	400010	Bague de retenue
T33	1	400010	Pignon de vis sans fin
T34	1	400010	Arbre de fraise
T35	2	400010	Rondelle de butée de pignon
T36	2	400010	Palier de pignon de vis sans fin
T37	2	400010	Joint de palier
T38	2	400010	Bague de retenue de joint de palier
T39	1	438RA	Fraise droite
T40	1	438LA	Fraise gauche
T41	2	418-1	Goupille de retenue de fraise
T42	2	94018-37	Boulon de carrosserie 1/4-20 X 2,25 po
T43	1	430043	Fil de masse, moteur 4 temps
T44*	1	400631	Autocollant triangulaire de mise en garde (moteur 4 temps)
T45	1	400010	Roulement à rouleaux
T46	1	400010	Réducteur
T47	1	920-0013	Tambour d'embrayage
T48	1	920-0013	Palier
T49	1	920-0013	Bride de moteur
T50	4	94262-037	Boulon de bride M6 x 12
T51	1	920-0013	Boulon de bride 10-32 X 3/4 po
T52	1	410158	Béquille
T53	1	410113	Étrier et visserie de béquille

Rep.	Qté	N° de réf.	Description
T1	1	940-0002	Poignée de guidon avec accélérateur, moteur 4 temps, droite
T2	1	940-0002	Poignée de guidon gauche
T3	2	940-0002	Montant inférieur de guidon avec bouchon
T4	1	940-0002	Entretoise de guidon
T7	2	377	Bride de guidon
T8	2	940-0002	Contre-écrou M6
T9	2	940-0002	Clip de câble d'accélérateur
T10	1	940-0002	Poignée de transport
T11	2	940-0002	Boulon 1/4-20 X 3 po
T12	2	940-0002	Bouton à ailes femelle
T14	8	94151-17	Écrou-frein bidirectionnel 1/4-20
T15	4	94123-269	Vis à tête hexagonale 1/4-20 X 1,125
T16	2	94123-106	Boulon 1/4-20 x 3/8 po de long
T17*	1	430058	Étiquette logo Mantis
T20	1	430207	Garde-boue avec l'étiquette
T21	1	400911	Moteur Honda 25 cc
T22*	1	468	Arbre d'entraînement
T23	1	400010	Carter de vis sans fin
T24**	1	436SH	Joint
T25**	1	437A	Capot de carter d'engrenage
T26**	4	651	Vis autotaraudeuse n° 8
T27	1	400010	Roulement à rouleaux
T28	2	400010	Bague de roulement de vis sans fin
T29	1	400010	Palier de butée de vis sans fin

* Aussi dans T20
** Aussi dans T46

Mantis Warranty Statement

Limited Warranty

Products Covered by This Warranty	LENGTH OF WARRANTY: FROM DATE OF ORIGINAL PURCHASE
Mantis 7000 Series Tiller/Cultivator	2 years
Mantis 3000 Series Electric Tiller/Cultivator	1 year
Mantis Composters	2 years
Mantis Battery Operated Blower	1 year
Mantis Battery Operated String Trimmer w/o battery	1 year
Mantis Blower and String Trimmer Combo w/ battery	1 year
Mantis Attachments (for 7000 Series Tillers)	90 days

Mantis products are warranted against defects in materials and workmanship for a period of time shown in the above table from the date of purchase from an authorized dealer or retailer (as shown on mantis.com) by the original purchaser only, and under the following terms and conditions. Schiller Grounds Care's responsibility under this limited warranty is restricted to repairing or replacing, at its option, any covered part found to be defective in material or workmanship during the warranty period. All parts replaced under warranty will be considered as part of the original product and any warranty on the replaced parts will expire coincidentally with the original product warranty.

SCHILLER GROUNDS CARE, INC. MAKES NO EXPRESS OR IMPLIED WARRANTIES, REPRESENTATIONS, OR PROMISES EXCEPT THOSE CONTAINED HEREIN. THERE ARE NO OTHER WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. ALL WARRANTIES OTHER THAN THE EXPRESS WARRANTY SET FORTH ABOVE ARE SPECIFICALLY DISCLAIMED. THE DURATION OF ANY IMPLIED WARRANTY, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IS LIMITED TO THE DURATION OF THIS WRITTEN LIMITED WARRANTY.

To Obtain Warranty Service - If you think your Mantis Product is defective in material or workmanship, use the following information to determine your solution. Warranty service must be performed by an authorized Mantis service dealer or authorized service center. *Note: authorized Mantis service dealers and service centers are under NO OBLIGATION to perform warranty work on products not sold through their business.*

Mantis Product Purchased From:	Contact Instructions
Online Retailer (all except Mantis.com)	Contact Customer Support for the Online Retailer
Mantis.com	Schiller Grounds Care, Inc. (888)240-4765 www.mantis.com/contact-us www.mantis.com/mantis-owners-product-support/
Retail Store	Contact Customer Support for the Retail Store
Authorized Mantis Dealership	Contact the Mantis Dealership

ABOUT YOUR WARRANTY

The warranty period begins on the date of purchase by the original customer from an authorized Mantis dealer, retailer, or from Mantis.com and is not transferable. Warranty service must be performed by an authorized Mantis service dealer or authorized service center. If a warranty replacement becomes necessary, the authorized dealer or service center must be prepared to provide the physical component for verification (freight prepaid) upon request from Schiller Grounds Care. Warranty service will be performed without charge to the original purchaser for parts and labor. The original purchaser is responsible for the expense of delivering the equipment, part, or accessory to and from an authorized dealer's service center. The purchaser is responsible for any premium charged for overtime labor requested by the purchaser and for any service and/or maintenance not directly related to any defect covered under this limited warranty. Proof of purchase will be required to substantiate any warranty claim. Without proof of the initial purchase date from an authorized dealer or seller, the manufacturing date of the product will be used to establish the warranty period. Warranty communication and transactions are limited to the authorized service center staff and Schiller Grounds Care.

Mantis Warranty Statement

EXCLUSIONS

This warranty only covers defects in materials or workmanship.

Engines and Other Manufacturers - Schiller Grounds Care makes no warranty with respect to engines or engine parts such as spark plugs, lubricants, starters, and carburetors. The engine warranty is covered by the engine manufacturer. Consult the Operator's Manual for the engine provided with your product or ask an authorized dealer for the terms and conditions of these warranties. Schiller Grounds Care makes no warranty with respect to other parts not of its manufacture such as tires, batteries, gearboxes, or similar. These other parts may be covered by the warranties of their respective manufacturers.

Wear Items - This limited warranty does not cover damages or defects from normal wear and tear. This limited warranty does not include routine maintenance and normal maintenance parts, including but not limited to wheels, blades, tines, handles, housing, panels, gears, legs, cables, bearings, or accessories.

Negligence and Improper Maintenance or Repair - This limited warranty does not cover any equipment that has been subject to lack of reasonable and proper maintenance, misuse, lack of proper storage, or accidents. This limited warranty does not cover any damage to the equipment that is caused by a freight carrier or is the result of failure to follow the operating instructions within the Owner's Manual. This limited warranty does not cover any defects due to repairs, modifications, or alternations made to the product by anyone other than Schiller Grounds Care, Inc. or its authorized dealers or authorized service centers. In addition, this limited warranty does not cover repairs made necessary due to a lack of proper protection during storage. This limited warranty does not cover damage caused by the use of parts, supplies, or accessories, including, without limitation, filters, spark plugs, carburetors, ignition, drive belts, brakes, gasoline, fuel, oil, or lubricants, which in the reasonable judgment of Schiller Grounds Care, are either incompatible with the product, adversely affect its operation, performance, durability or are other than as recommended in the Operator's Manual or other operational instructions provided by Schiller Grounds Care.

Improper Use - This limited warranty does not cover any Mantis Product, part, or accessory that (i) has been subject to misuse, abuse, neglect, negligence, or accident, or that has not been assembled, operated, or maintained in accordance with the operating or maintenance instructions specified in the Operator's Manual; or (ii) has been altered or modified so as to adversely affect its operation, performance or durability, or that has been altered or modified in ways not approved by Schiller Grounds Care. To the extent permitted by law, neither Schiller Grounds Care nor any company affiliated with it makes any warranties, representations, or promises as to the quality, performance, or freedom from defect of the Mantis Product, part, or accessory covered by this limited warranty. The authorized dealer makes no warranty of its own and such dealer has no authority to make any representation, warranty, or promise on behalf of Schiller Ground Care or to modify the terms or limitations of this limited warranty in any way.

Other Exclusions - This limited warranty does not include reconditioned, refurbished, used, or demonstration equipment. This limited warranty excludes failures due to acts of nature beyond the manufacturer's control.

Extended Warranty - Schiller Grounds Care disclaims responsibility for any separately purchased extended warranty. ALL WARRANTIES OTHER THAN THE EXPRESS WARRANTY SET FORTH ABOVE ARE SPECIFICALLY DISCLAIMED. THE DURATION OF ANY IMPLIED WARRANTY, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IS LIMITED TO THE DURATION OF THIS WRITTEN LIMITED WARRANTY.

Disclaimer of Consequential Damage - Schiller Grounds Care disclaims any responsibility for incidental or consequential damages including, but not limited to, the expense for gasoline, the expense of delivering the product to an authorized service dealer, the expense of returning the product to the purchaser, mechanic's travel time, telephone charges, rental of a like product during the repair timeframe, travel, loss of revenue, loss of time, or inconvenience. SCHILLER GROUNDS CARE, INC. DISCLAIMS ALL LIABILITY FOR INDIRECT, INCIDENTAL, AND/OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE MANTIS PRODUCTS COVERED BY THIS LIMITED WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

