

momcozy

5.5" Full HD Wireless Baby Monitor

User Guide

BM03



Before using the Video Baby Monitor please read this user manual carefully and keep it in a safe place for future reference

Rev:A1

Release date:Jan 15th,2025

CONTENTS

EN	02
DE	26

→ **English**

Scan the QRcode to obtain instruction
manuals in other languages



NL BE PT FI NO DA SV CS


Table of Contents

Safety Instructions	03
CAUTION	04
Package Contents	05
Feature Introduction	06
Installing SD Card	08
Charging the Monitor	09
Powering the Camera	09
Adding Camera to Monitor	10
Camera Installation	11
Monitor Menu Settings	13
Menu Icons	17
Specifications	17
Compliance Statement	19
Warning Instructions	19
Warning	20
Warranty & Customer Service	25
WEEE COMPLIANCE	25

Momcozy and its affiliates ("Momcozy") own independent intellectual property rights to the functions, structure, software, appearance design, user interface (GUI), LOGO, external packaging, and decoration of this product. These rights are protected by relevant intellectual property laws, including patent law, trademark law, and copyright law. Momcozy reserves the right to pursue legal liability for any use beyond reasonable scope and without written permission from Momcozy regarding the aforementioned rights.

Safety Instructions

- Strangulation Hazard—Children may be STRANGLED by cords. Keep this cord out of the reach of children (more than 3 ft (0.9 m) away). Do not remove this tag.

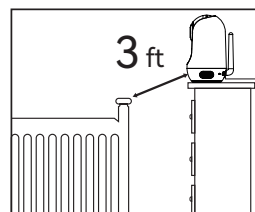






- NEVER place the camera or cord in or near the crib or playpen.
- NEVER mount the camera directly above the crib or playpen to avoid the risk of injury.
- Only use the AC adapters provided.
- Never use the unit near water, including bathtubs, sinks, washing machine hoses, damp basements, etc.

- Do not install near any heat sources such as radiators, heat registers, stoves, or other devices that produce heat.
- Only use attachments and accessories specified by the manufacturer.
- Unplug this device when unused for long periods of time.

CAUTION

- NOT a toy. Do not allow children to play with it.
- This product is NOT intended to replace the proper supervision of children.
You MUST regularly check on your child's activities.
- This product is not intended for use as a medical camera and its use should not replace adult supervision.
- Unplug the product during lightning storms.
- Please check the operating range and condition of the camera carefully at the initial installation, and on a regular basis after that.
- Check the status of the interface regularly. Test the camera before use and after changing its location.
- For indoor use only.
- Clean the camera with a dry cloth only.
- Do not block any ventilation openings.
- Microphone feedback might occur when the monitor is too close to the camera. Please keep them at least 1.5 m / 4.9 ft apart.

Package Contents


		
Baby Camera	Baby Monitor	Wall Mount
 US EU UK		
Camera + Monitor Power Adapter (5V 2A)	Camera Power Cable (2.5m)	Monitor Power Cable (1.5m)
		
Mounting Screws	User Guide	SD Card



Note: Power adapters may vary due to regional specifications.

Feature Introduction


Monitor

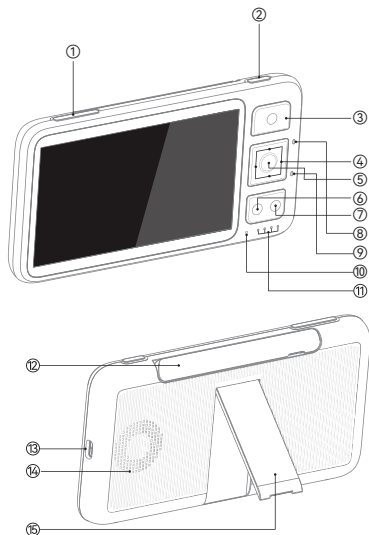

- | | |
|------------------------------|-------------------------------|
| ① Volume Button | ⑨ Signal Connection Indicator |
| ② Power Button | ⑩ Microphone |
| ③ Menu Button | ⑪ Sound Status Indicator |
| ④ Navigation Button | ⑫ Monitor Antenna |
| ⑤ OK/ZOOM Button | ⑬ Charging Port |
| ⑥ Back/Talk Button | ⑭ Speaker |
| ⑦ Video/Photo Button | ⑮ Monitor Support Stand |
| ⑧ Charging/Warning Indicator | |

- ① Volume Button: Press + / - to adjust the monitor volume.
- ② Power Button: Long press the button for 3 seconds to power on/off. Short press to turn on/off the screen.
- ③ Menu Button: Short press the Menu button to enter/exit the main menu.
- ④ Navigation Button: In the video screen, press up/down/left/right to control camera rotation. In the menu interface, it's used for menu selection.
- ⑤ OK/ZOOM Button: In the interface, short press the button to control 1X, 2X, 4X zoom. In the menu interface, short press the button to confirm menu selections.
- ⑥ Back/Talk Button: In the menu interface, short press the Back/Talk button to return to the previous interface. In any interface, long press the Back/Talk button to enable voice intercom.
- ⑦ Video/Photo Button: When the camera is inserted with a memory card, short press to capture a photo; long press for 3 seconds to enter/exit video recording.
- ⑧ Charging/Warning Indicator:
 - Steady white light indicates: Charging.
 - White light off: fully charged/Power disconnected.
 - Steady red light indicates: Low battery.
 - Flashing red light indicates: Temperature/sound warnings.
- ⑨ Signal Connection Indicator:
 - Slow flashing blue light indicates: Waiting for pairing
 - Steady blue light indicates: Pairing successful (light goes off after 3 minutes of successful pairing).
- ⑩ Microphone
- ⑪ Sound Status Indicator: The indicator light flashes to represent the sound level at the camera end; the more lights, the louder the sound.
- ⑫ Monitor Antenna: It can be opened to enhance the signal when the signal is weak.
- ⑬ Charging Port
- ⑭ Speaker
- ⑮ Monitor Support Stand


Camera

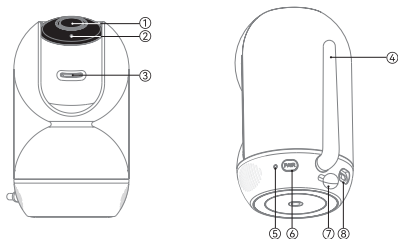

- ① Camera Lens
- ② Microphone
- ③ SD Slot: Please do not remove the SD card to avoid affecting the recall/storage function.
- ④ Camera Antenna
- ⑤ Signal Indicator Light
Slow flashing blue light indicates: Signal searching.
Fast flashing blue light indicates: Signal pairing.
Steady blue light indicates: Pairing successful (light goes off after 3 minutes of successful pairing).
- ⑥ Camera Pairing Button: Long press the button for 1 second, and the camera emits a "beep" sound, indicating the start of pairing (please place the devices at an appropriate distance during pairing).
- ⑦ Temperature Sensor
- ⑧ Charging Port

Installing SD card

1. Remove the SD card.
2. Install the SD card into the SD card slot of the baby camera.

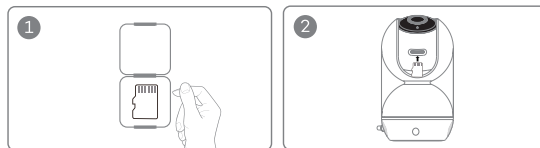

Charging the Monitor


Please ensure the monitor is fully charged before use. Charging Method:

1. Connect one end of the Type-C (1.5m) cable to the Baby Monitor and the other end to the power adapter (5V $\equiv$ 2A).
2. Plug the adapter into a power outlet.



Powering the Camera

1. Connect one end of the Type-C (2.5m) cable to the Camera and the other end to the power adapter (5V $\equiv$ 2A).
2. Plug the adapter into a power outlet.

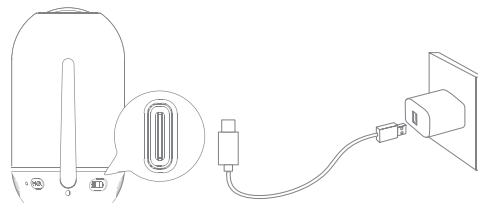




After fully charging the Monitor and providing power to the Camera, you can use the camera and monitor.

Adding Camera To Monitor



Upon the initial use of the baby monitor, the devices on both ends will automatically pair and connect. If you need to add an additional camera or perform a factory reset, please follow these.

1. Press the Menu button to open the menu interface, select **[Camera Settings]** → **[Add Camera]**, and press **[OK]** to add the Camera.
2. Hold the pairing button on the back of the Camera for 1 second until you hear a "beep" prompt.

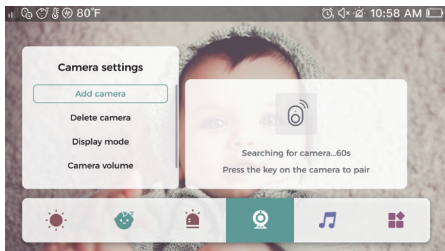

- When you have multiple cameras connected, long press the **[OK]** button for 2 seconds to quickly switch between screens. Alternatively, in the **[Camera Settings]** - **[Display mode]**

interface, set the camera to loop play or split-screen play mode.

- If you need to manually record a specific camera screen, use the **[Navigation Button]** to select the screen, then press the **[Video/Photo Button]** to take photos and record videos. Short press for a photo, long press for 3 seconds to start recording, and long press again for 3 seconds to stop recording.



Note:


- Please ensure that the version of the Baby Monitor matches the version of the Baby Camera when connecting.
- When the volume of the monitor is too high, the monitor will start to distort loudly when it gets too close to the camera. This is normal and can be avoided by moving the monitor away from the camera.

Camera Installation

Camera Placement Distance:


1. It is recommended to place the camera at a height of 2.5ft (0.75m) from the ground.
2. The recommended distance between the camera and the baby is at least 4.9ft (1.5 meters).

Note: When installing and using, ensure that the power cord of the camera is placed where the baby cannot see it.

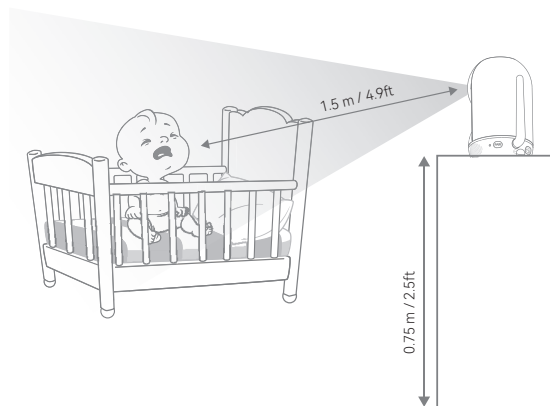


Installing the Camera (Corner Mount):

1. Choose for the installation location.
2. Place the support stand on the upper wall at the installation location and mark the screw holes with a pencil.
3. Drill 6.0mm holes in the wall, then insert the expansion plugs into the holes.
4. Pass the screws through the installation holes of the support stand, then screw them into the expansion plugs.
5. Align the camera and place it on the support stand, then tighten the screws securely.
6. After installation, use the monitor to control and adjust the camera's up/down and left/right angles to find the appropriate angle for monitoring.
7. Note: Ensure that the camera is correctly installed and securely fixed.

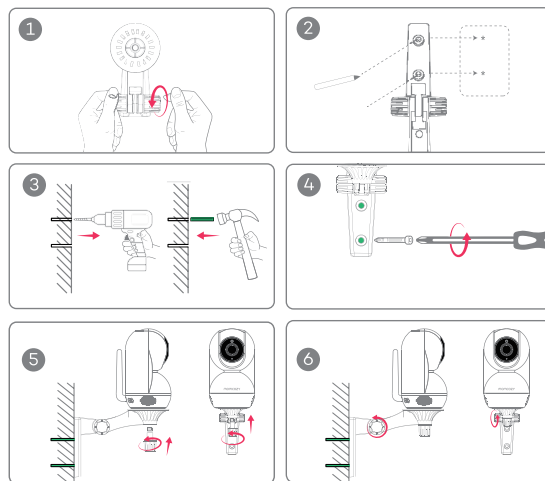

Monitor Menu Settings

1. Long press the **[Power Button]** for 3 seconds to power on.
2. Press the Menu button to open the main menu.

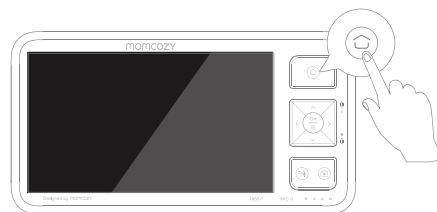

Menu Options	Description
	Adjust the brightness of the monitor screen with 10 levels of brightness.
	1. [VOX mode]: When [VOX mode] is selected, The Baby Monitor's screen and audio activate if noise exceeds your preset level. Sensitivity can be adjusted from 1 to 5, with the default being 3. 2. [Power-saving]: When you enable power-saving, the monitor will enter power saving mode. Note: When your device enters power saving mode, your screen may light up and the signal may be slightly delayed.
	1. [Sound alarm]: You can enable the [Sound Detection] function to alert you if there is an abnormal sound coming from nearby your baby; when the sound around the camera exceeds your set value, the monitor will sound an alarm to alert you. Note: Surrounding noise may cause false alarms. 2. [Temperature Detection]: When the ambient temperature is higher/lower than your set temperature, the monitor will sound an alarm. Note: Alarm volume and duration can be set according to your needs; the default alarm volume is 2 and alarm time is 5 seconds.
	1. [Add camera]: Each baby monitor can connect up to 4 cameras simultaneously. 2. [Delete camera]

	3. [Display mode]: You can choose [Full screen], [Split-screen], or [Auto cycle]. 4. [Camera volume]: Adjust the sound volume emitted by the camera. 5. [Auto record]: Choose [Off], [Continuous recording], or [Motion detection recording]. When [Motion detection recording] is selected, the camera will automatically record for 10 minutes when it detects dynamic movement from the baby. Recording is disabled if the picture remains still. 6. [Playback]: View historical videos and images on the monitor. Note: • Note: Only supports Class 10 memory cards; recommended to use the official brand's matching memory card. • The larger the memory card capacity, the more videos/images can be stored; when exceeding storage space, historical videos/images will be automatically cleared. • This function needs to be used with the camera in a connected state. 7. [SD card settings]: View memory card capacity information or format the memory card. 8. [Screen flip]: When you select [Reverse 180°], the image coming from the camera will be rotated 180°.
	Choose the desired lullaby to help the baby sleep. Adjust the volume using the Lullaby volume bar. Note: When the lullaby function is enabled, the sound alarm will be automatically disabled. Warning: The sound of the lullaby may mask the baby's cries.



1. **[Alarm]:** You can set three alarms, each alarm can be enabled, the alarm time, and repeat reminder time as needed.
2. **[Screen off]:** You can set the duration to 1min/3min/5min/Always on.
3. **[Night Vision]:** Choose [Auto] or [Off]. When you choose [Auto], the camera will switch to day or night mode based on ambient brightness.
4. **[Time]:** Set the date and time on the monitor.
5. **[Language]:** Set the language on the monitor.
6. **[Temp unit]:** Choose between °C and °F temperature units.
7. **[Anti-flicker screen]:** If the baby monitor's screen is flickering, switch to another lighting frequency mode.
8. **[Reset]:** Reset all settings to default.
9. **[Contact Us]:** Contact Information.



Note:

- Each warning interval is 1 minute. If a new warning is triggered within this period, there will be no sound prompt.

Menu Icons

ICON	Icon Descriptions/Introductions
	Wireless signal strength
	Camera connection status icon: When this icon appears, it indicates that the camera is connected.
	Vox mode enabled
	Night vision function enabled
	Alarm clock enabled icon
	Alarm icon
80°F	Ambient temperature display
10:58 AM	Time display
	Battery level status

Specifications

Monitor

Connectivity	2.4GHz ISM Band
Image Aspect	16: 9
Image Compression	MJPEG
Operating Range	1500ft (line of sight, no obstructic)
Temperature Alert	Yes
Volume Control	8 levels

Brightness	10 levels
Input	5V $\overline{\text{---}}$ 2A
Zoom	Zoom In (2X) Zoom In (4X)
Two-Way Talk	Yes
Multi-Camera	Max. 4 cameras
Storage Temperature	-20°C to 60°C/-4F to 140F
Operation Temperature	0°C to 40°C/32F to 104F

Camera

Connectivity	2.4GHz ISM Band
Input	5V $\overline{\text{---}}$ 2A
Zoom	Zoom In (2X) Zoom In (4X)
Night Vision	Black & white image
Light Sensor	Yes
Two-Way Talk	Yes
Storage Temperature	-20°C to 60°C/-4F to 140F
Operation Temperature	0 °C to 40 °C/32 F to 104 F

Compliance Statement

1. Please use the supplied AC Power Chargers and USB C Charging Cables.
2. Do not use the device in environments with extreme temperatures, and avoid exposing the device to strong sunlight or overly humid conditions.
3. The appropriate ambient temperature for S6-M and accessories is -20° C to 45° C.
4. The appropriate ambient temperature for S6-C and accessories is -20° C to 40° C.
5. Place the device in a normal room temperature and well-ventilated environment during charging. It is recommended to charge the device within the temperature range of 0° C to 45° C.

Warning Instructions

1. Choking hazard: Power cords can pose a risk of strangulation for children. Keep the cord out of reach of children (more than 3ft (0.9m) away).
2. Note: Illustrations of products, accessories, interfaces, etc., in the manual are for reference only and are schematic. Due to product updates and upgrades, there may be slight differences between the actual product and the illustrations. Please refer to the actual product.
3. 1)Please use the dedicated adapter provided in the product packaging. Using any other adapter may cause damage to the product.
2)The adapter provided with the product must not be used for charging other devices; otherwise, it may cause damage to those other devices
3) When the product is not in use, please remove the adapter and place it in a place where children cannot reach.
4) The adapter must not come into contact with water or any other liquids.
5)If the adapter fails to supply power properly, please contact the professional after-sales team for handling. Do not attempt to disassemble and repair the device yourself.

4.Operation Frequency:
802.11b/g/n HT20:2412-2472MHz
802.11n HT40:2422-2462MHz

Max.RF output power:
Camera:17.84dBm Max.
Monitor:17.73dBm Max.

Warning

Video Baby Monitor(Camera)

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20 cm between the radiator and your body, and fully supported by the operating and installation.

IC Warning

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device has been evaluated to meet general RF exposure requirement. To maintain compliance with RSS-102 — Radio Frequency (RF) Exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

le dispositif a été évalué à répondre général rf exposition exigence.pour maintenir la conformité avec les directives d'exposition du RSS-102-Radio Fréquence (RF). ce matériel doit être installé et exploité à une distance minimale de 20 cm entre le radiateur et votre corps.

CAN ICES-003(B) / NMB-003(B)

Video Baby Monitor(Monitor)

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The SAR limit of USA(FCC) is 1.6 W/kg averaged over one gram of tissue. Device types Video Baby Monitor(Monitor) with BM03 (FCC ID: 2A6UA-BM03-B) has also been tested against this SAR limit. The highest reported SAR values for body-worn is 0.801W/kg. This device was tested for typical body-worn operations with the back of the handset kept 0mm from the body. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

IC Warning

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device has been evaluated to meet general RF exposure requirement. To maintain compliance with RSS-102 — Radio Frequency (RF) Exposure guidelines. The SAR limit of IC is 1.6 W/kg averaged over one gram of tissue. Device types Video Baby Monitor(Monitor) with BM03 (IC: 29085-BM03B) has also been tested against this SAR limit. The highest reported SAR values for body-worn is 0.801W/kg. This equipment should be installed and operated with a minimum distance of 0mm between the radiator and your body.

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. Maintenir la conformité aux directives RSS-

102 — Exposition aux radiofréquences (RF). La limite DAS de la CI est de 1,6 W/kg en moyenne sur un gramme de tissu. Les types d'appareils avec BM03 (IC : 29085-BM03B) ont également été testés par rapport à cette limite SAR. Les valeurs DAS les plus élevées signalées pour les appareils portés sur le corps sont de 0.801W/kg. Cet équipement doit être installé et utilisé avec une distance minimale de 0 mm entre le radiateur et votre corps.

CAN ICES-003(B) / NMB-003(B)

Warning

Hereby, the licensed company declares that this BM03 product is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU.

Environmentally friendly disposal

You can help protect the environment!

Please remember to respect the local regulations: hand in non-functioning electrical equipment to an appropriate waste disposal center.

Warning: Batteries or battery packs installed must not be exposed to excessive heat such as sunshine, fire or similar.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED WITH AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

The radio frequencies 2412-2472MHz can be used in Europe without restriction.

This product is intended for sale and application in a business environment.

For the complete CE DOC, please check on this link: <https://momcozy.com/pages/declaration-of-conformity-momcozy>

Warranty & Customer Service

12 months guarantee (contact information can be found on the monitor or on the cover of this user manual)



WEEE COMPLIANCE

DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS " — " This symbol indicates DC voltage

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. The user has the choice to give their product to a competent recycling organization or to the retailer when they buy a new electrical or electronic equipment. EU Compliance Statement: Hong Kong Lute Technology Co., Limited hereby declares that this device is in compliance with the essential requirements and other relevant provisions of the Directive 2014/53/EU.

Manufacturer: HongKong Lute Technology Co.,Limited

Address: Room 02,21/F,HipKwan Commercial Building,38 Pitt Street,Yau Ma Tei,Kowloon, Hongkong

EU Authorised Representative:Lutejiacheng Maternal and Child Products GmbH

Address:Betriebsstätte c/o Sonnenberg Services GmbH, Sternstraße 67, 40479 Düsseldorf, Deutschland





Katalog

→ **Deutsch**

Inhalt der Farbbox	29
Funktionserklärungen	30
Installation der SD-Karte	32
Monitor-Lademethode	33
Stromversorgung der Kamera	33
Hinzufügen der Kamera zum Monitor	34
Installation der Kamera	35
Einstellungen im Monitormenü	37
Menü-Icons	41
SPEZIFIKATIONEN	41
Konformitätserklärung	43
Warnhinweise	43
GARANTIE UND KUNDENDIENST	43
Warnung	44
WEEE-Richtlinie	45

Momcozy und seine Tochtergesellschaften („Momcozy“) besitzen unabhängige geistige Eigentumsrechte an den Funktionen, der Struktur, der Software, dem Erscheinungsbild, der Benutzeroberfläche (GUI), dem LOGO, der äußeren Verpackung und der Dekoration dieses Produkts. Diese Rechte sind durch die einschlägigen Gesetze zum Schutz des geistigen Eigentums geschützt, einschließlich des Patentrechts, des Markenrechts und des Urheberrechts. Momcozy behält sich das Recht vor, jede Nutzung, die über den angemessenen Rahmen hinausgeht und ohne schriftliche Genehmigung von Momcozy erfolgt, hinsichtlich der vorgenannten Rechte juristisch zu verfolgen.

Inhalt der Farbbox


		
Babykamera	Babyphone	Wandhalterung
 US  EU  UK		
Kamera + Monitor Netzadapter (5V 2A)	Kamera-Netzkabel (2,5m)	Monitor- Netzkabel (1,5 m)
		
Montageschrauben	Dokumente	SD-Karte



Hinweis: Die Netzteile können aufgrund regionaler Spezifikationen

Funktionserklärungen

Babyfon

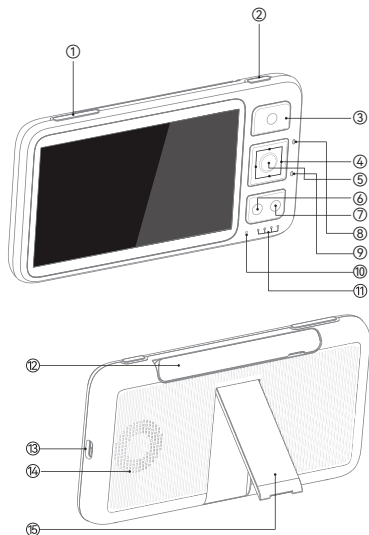


- ① Lautstärketaste
- ② Power-Taste
- ③ Menu Button
- ④ Navigationstaste
- ⑤ OK/ZOOM-Taste
- ⑥ Zurück/Sprechen-Taste
- ⑦ Video/Foto-Taste
- ⑧ Lade-/Warnungsanzeige

- ⑨ Signalverbindungs-Anzeige
- ⑩ Mikrophon
- ⑪ Tonstatus-Anzeige
- ⑫ Monitor-Antenne
- ⑬ Ladeanschluss
- ⑭ Lautsprecher
- ⑮ Monitorständer

- ① Lautstärketaste: Drücken Sie [+] / [-], um die Lautstärke des Monitors einzustellen.
- ② Power-Taste: Halten Sie die Taste 3 Sekunden lang gedrückt, um den Monitor ein-/auszuschalten.
- ③ Menü-Taste: Drücken Sie kurz auf die Home-Taste, um das Hauptmenü zu öffnen/verlassen.
- ④ Navigationstaste: Drücken Sie auf dem Videobildschirm nach oben/ unten/links/rechts, um die Kameradrehung zu steuern. In der Menüoberfläche wird sie für die Menüauswahl verwendet.
- ⑤ OK/ZOOM-Taste: Drücken Sie im Videobildschirm kurz auf die Taste, um den 1X, 2X, 4X Zoom zu steuern. Drücken Sie in der Menüoberfläche kurz auf die Taste, um Menüauswahlen zu bestätigen.
- ⑥ Zurück/Sprechen-Taste: Drücken Sie in der Menüleiste kurz auf die Taste [Zurück/Sprechen], um zur vorherigen Oberfläche zurückzukehren. Drücken Sie in einer beliebigen Oberfläche lange auf die Taste [Zurück/ Sprechen], um die Gegensprechfunktion zu aktivieren.
- ⑦ Video/Foto-Taste: Wenn in die Kamera eine Speicherkarte eingesetzt wurde, drücken Sie kurz, um ein Bild aufzunehmen; drücken Sie 3 Sekunden lang, um eine Videoaufnahme zu starten/zu beenden.
- ⑧ Lade-/Warnungsanzeige:
 - Ein weißes Dauerlicht signalisiert: Ladevorgang.
 - Weißes Licht ausgeschaltet: vollständig aufgeladen/Stromzufuhr unterbrochen.
 - Stetiges rotes Licht zeigt an: Schwacher Akkustand.
 - Blinkendes rotes Licht zeigt an: Temperatur-/Tonwarnungen
- ⑨ Signalverbindungs-Anzeige:
 - Langsam blinkendes blaues Licht zeigt an: Wartet auf Pairing
 - Stetiges blaues Licht zeigt an: Pairing erfolgreich (das Licht erlischt nach 3 Minuten bei erfolgreichem Pairing).
- ⑩ Mikrophon
- ⑪ Tonstatus-Anzeige: Die Anzeige blinkt, um den Tonpegel an der Kameraseite anzuzeigen; je mehr Lichter, desto lauter der Ton.
- ⑫ Monitor-Antenne: Sie kann geöffnet werden, um das Signal zu verbessern, wenn das Signal schwach ist.
- ⑬ Ladeanschluss
- ⑭ Lautsprecher
- ⑮ Monitorständer


Kamera

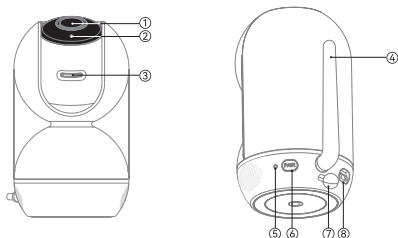

- ① Kameraobjektiv
- ② Mikrofon
- ③ SD-Steckplatz: Entfernen Sie bitte nicht die SD-Karte, um die Abruf-/Speicherfunktion nicht zu beeinträchtigen.
- ④ Kamera-Antenne
- ⑤ Signal-Anzeigeleuchte
Langsam blinkendes blaues Licht zeigt an: Signal wird gesucht.
Schnell blinkendes blaues Licht zeigt an: Signal wird gepairt.
Stetiges blaues Licht zeigt an: Pairing erfolgreich (das Licht erlischt nach 3 Minuten bei erfolgreichem Pairing).
- ⑥ Kamera-Pairingstaste: Halten Sie die Taste 1 Sekunde lang gedrückt. Die Kamera gibt einen Piepton ab, der den Beginn des Pairings anzeigt (bitte stellen Sie die Geräte während des Pairings in einem angemessenen Abstand auf).
- ⑦ Temperatursensor
- ⑧ Ladeanschluss

Installation der SD-Karte

1. SD-Karte entfernen.
2. Setzen Sie die SD-Karte in den SD-Kartenschlitz der Babykamera ein.

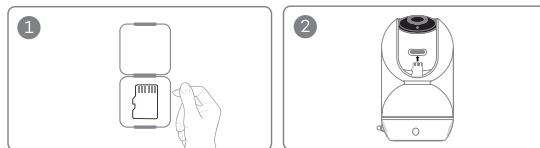

Monitor-Lademethode

Bitte vergewissern Sie sich, dass der Monitor vor der Verwendung vollständig aufgeladen ist. Lademethode:


1. Verbinden Sie ein Ende des Typ-C-Kabels (1,5 m) mit dem Babyphone und das andere Ende mit dem Netzadapter (5 V $\Rightarrow$ 2 A).
2. Stecken Sie den Adapter in eine Steckdose.



Beachten Sie die Abbildung oben (ähnliches Diagramm).

Stromversorgung der Kamera

1. Verbinden Sie ein Ende des Typ-C-Kabels (2,5 m) mit der Kamera und das andere Ende mit dem Netzadapter (5 V $\Rightarrow$ 2 A).
2. Stecken Sie den Adapter in eine Steckdose.

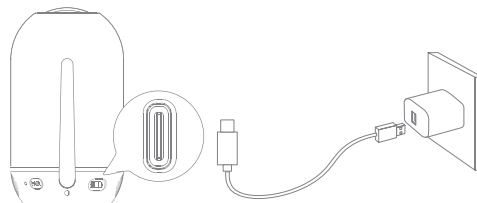

Beachten Sie die Abbildung oben (ähnliches Diagramm).




Nachdem Sie den Monitor vollständig aufgeladen und die Kamera mit Strom versorgt haben, können Sie die Kamera und den Monitor verwenden.

Hinzufügen der Kamera zum Monitor



Bei der ersten Verwendung des Babyphones werden die Geräte auf beiden Seiten automatisch gepairt und verbunden. Wenn Sie eine weitere Kamera hinzufügen oder das Gerät auf die.

1. Drücken Sie die Taste **[Home]**, um die Menüoberfläche zu öffnen, wählen Sie „**Kameraeinstellungen**“ → „**Kamera hinzufügen**“, und drücken Sie **[OK]**, um die Kamera hinzuzufügen.
2. Halten Sie die Pairing-Taste auf der Rückseite der Kamera 1 Sekunde lang gedrückt, bis Sie einen Signalton hören.

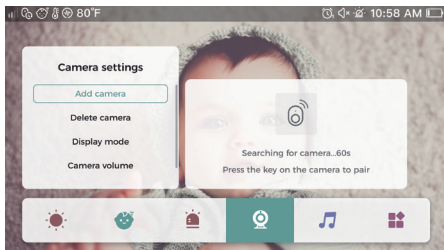

- Wenn Sie mehrere Kameras angeschlossen haben, halten Sie die Taste **[OK]** für 2 Sekunden gedrückt, um schnell zwischen den Bildschirmen zu wechseln. Alternativ können Sie in der

Benutzeroberfläche **[Kameraeinstellungen]** - **[Anzeige]** die Kamera auf Schleifenwiedergabe oder Split-Screen-Wiedergabemodus einstellen.

- Wenn Sie einen bestimmten Kamerabildschirm manuell aufnehmen möchten, verwenden Sie die **[Richtungstaste]**, um den Bildschirm auszuwählen, und drücken Sie dann die **[Foto/Video-Taste]**, um Bilder und Videos aufzunehmen. Drücken Sie kurz für ein Foto, halten Sie die Taste 3 Sekunden lang gedrückt für eine Videoaufnahme und halten Sie sie erneut 3 Sekunden lang gedrückt, um die Aufnahme zu beenden.




Hinweis:

- Bitte stellen Sie sicher, dass die Version des Babyphones mit der Version der Babykamera übereinstimmt, wenn Sie es anschließen.
- Wenn das Babyphone auf hohe Lautstärke eingestellt ist, kann es zu lauten Geräuschen.

Installation der Kamera

Abstand zur Kamera:


1. Es wird empfohlen, die Kamera in einer Höhe von 0,75 m über dem Boden zu platzieren.
 2. Der empfohlene Abstand zwischen der Kamera und dem Baby beträgt mindestens 1,5 m.
- Hinweis: Achten Sie bei der Installation und Verwendung darauf, dass das Netzkabel der Kamera so angebracht wird, dass das Baby es nicht sehen kann.

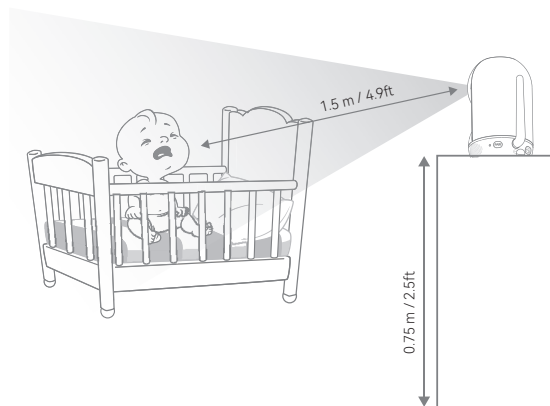

Installieren der Kamera (Eckmontage):


1. Bestimmen Sie den Installationsort.
2. Stellen Sie den Ständer an der oberen Wand am Installationsort auf und markieren Sie die Schraubenlöcher mit einem Bleistift.
3. Bohren Sie 6,0 mm große Löcher in die Wand und setzen Sie dann die Spreizdübel in die Löcher ein.
4. Führen Sie die Schrauben durch die Montagelöcher des Ständers und schrauben Sie sie dann in die Spreizdübel.
5. Richten Sie die Kamera aus, setzen Sie sie auf den Ständer und ziehen Sie die Schrauben fest an.
6. Verwenden Sie nach der Installation den Monitor, um die Kamera zu kontrollieren und die Winkel nach oben/unten und links/rechts einzustellen, um den besten Winkel für die Überwachung zu finden.

Hinweis: Vergewissern Sie sich, dass die Kamera korrekt installiert und sicher befestigt ist.

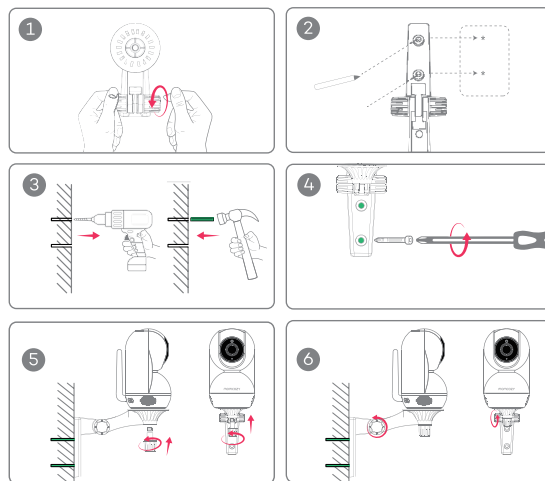

Einstellungen im Monitormenü

1. Halten Sie die **[Power-Taste]** 3 Sekunden lang gedrückt, um das Gerät einzuschalten.
2. Drücken Sie die **[Home-Taste]**, um das Hauptmenü zu öffnen.

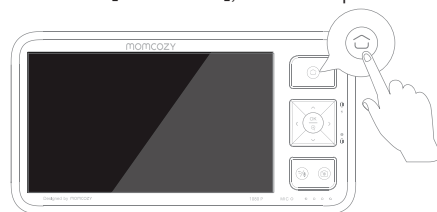

Menü Optionen	Beschreibung
	Stellen Sie die Helligkeit des Bildschirms mit 10 Helligkeitsstufen ein.
	1. [VOX-Modus]: Sie können das Babyphone [VOX-Modus] auf den offenen Zustand einstellen. Wenn der Bildschirm des Babyphones ausgeschaltet ist, wird das Audiosignal des Monitors aktiviert, sobald ein Geräusch erkannt wird, das den von Ihnen eingestellten Pegel überschreitet, und der Bildschirm wird automatisch eingeschaltet. Die Empfindlichkeit kann von 1 bis 5 eingestellt werden, wobei die Standardeinstellung „Stufe 3“ ist. 2. [Nur Audio]: Wenn Sie die Funktion [Nur Audio] einstellen, schaltet sich der Bildschirm automatisch aus und zeigt das Bild nicht aktiv an, während das Audiosignal von der Kameraseite in Echtzeit übertragen wird. Hinweis: Wenn Sie die Funktion [Nur Audio] verwenden, wird die VOX-Funktion deaktiviert, wählen Sie sie also sorgfältig aus.
	1. [Tonalarm]: Sie können die Funktion [Tonalarm] so einstellen, dass Sie gewarnt werden, sollte es in der Umgebung Ihres Babys ungewöhnliche Geräusche geben. Wenn die Geräusche in der Umgebung der Kamera den von Ihnen eingestellten Wert überschreiten, gibt der Monitor einen Alarm aus, um Sie zu benachrichtigen. Hinweis: Umgebungsgeräusche können zu Fehlalarmen führen. 2. [Alarm bei hoher/niedriger Temperatur]: Wenn die Umgebungstemperatur höher/niedriger ist als die von Ihnen eingestellte Temperatur, gibt der Monitor einen Alarm aus. Alarmlautstärke und -dauer können nach Ihren Bedürfnissen eingestellt werden; die Standard-Alarmlautstärke ist „Stufe 2“, die Alarmdauer beträgt „10 Sekunden“.
	1. [Kamera hinzufügen]: An jedes Babyphone können bis zu 4 Kameras gleichzeitig angeschlossen werden. 2. [Kamera löschen] 3. [Anzeige-Einstellungen]: Stellen Sie [Vollbildanzeige], [Zwei-

	Bildschirm-Anzeige] oder [Schleifenmodus] ein. 4. [Kameraausrichtungseinstellungen]: Wenn diese Option ausgewählt ist, wird das von der entsprechenden Kamera übertragene Bild um 180° gedreht. 5. [Kamera-Toneinstellungen]: Stellen Sie die Lautstärke des von der Kamera ausgegebenen Tons ein. 6. [Kamera-Aufnahmemodus]: Stellen Sie auf [Automatische Aufnahme aus], [24-Stunden-Aufnahme] oder [Bewegungserkennungsaufnahme]. Wenn [Bewegungserkennungsaufnahme] ausgewählt ist, nimmt die Kamera automatisch für 10 Minuten auf, wenn sie eine dynamische Bewegung des Babys erkennt. Es wird keine Aufnahme gemacht, wenn das Baby still liegt. 7. [Bildwiedergabe]: Betrachten Sie historische Videos und Bilder auf dem Monitor. Hinweis: • Hinweis: Unterstützt nur Speicherkarten der Klasse 10; es wird empfohlen, die passende Speicherkarte der offiziellen Marke zu verwenden. • Je größer der Speicherplatz auf der Speicherkarte ist, desto mehr Videos/Bilder können gespeichert werden; wenn der Speicherplatz überschritten wird, werden die historischen Videos/Bilder automatisch gelöscht. • Diese Funktion muss verwendet werden, wenn sich die Kamera im angeschlossenen Zustand befindet. [Speicherkartenstatus]: Zeigt Informationen zur Speicherkartenkapazität an und formatiert die Speicherkarte.
	Wählen Sie das gewünschte Schlaflied, um dem Baby beim Einschlafen zu helfen. Stellen Sie die Lautstärke mit der Lautstärkeleiste für das Schlaflied ein. Hinweis: Wenn die Schlafliedfunktion aktiviert ist, wird der Tonalarm automatisch deaktiviert. Warnung: Die Lautstärke des Schlafliedes könnte die Schreie des Babys überdecken.



1. **[Wecker-Einstellungen]:** Umfasst die drei Alarmer **[Fütterung]**, **[Windelwechsel]** und **[Sonstiges]**. Sie können für jeden Alarm die Aktivierung, die Alarmzeit und die Erinnerungszeit einstellen.
2. **[Nachtsichtmodus]:** Wählen Sie **[Nur Tagesmodus]** oder **[Automatisch aktivieren]** des Nachtsichtmodus. Wenn Sie sich für **[Nachtsichtmodus automatisch aktivieren]** entscheiden, schaltet die Kamera je nach Umgebungshelligkeit in den Tag- oder Nachtmodus.
3. **[Systemzeit-Einstellungen]:** Stellen Sie das Datum und die Uhrzeit auf dem Monitor ein.
4. **[Temperatureinheit-Einstellungen]:** Wählen Sie zwischen °C und °F Temperatureinheiten.
5. **[One-Touch Foto/Video-Einstellungen]:** Setzt alle Einstellungen auf die Standardeinstellungen zurück.
6. **[Spracheinstellungen]:** Legen Sie fest, ob die One-Touch-Foto-/Videofunktion unterstützt werden soll. Wenn diese Funktion ausgeschaltet ist, ist die **[Foto/Video-Taste]** auf dem Tastenende nicht mehr verwendbar. Sie können auch festlegen, ob der Ton bei der Aufnahme von Bildern ausgeschaltet werden soll.

Hinweis: Diese Funktion kann nur verwendet werden, wenn eine Speicherkarte in die Kamera eingelegt ist; andernfalls ist das Aufnehmen von Bildern und die Aufnahme nicht möglich.
7. **[Blitzanpassung]:** Wenn der Bildschirm des Babyphones flackert, wechseln Sie zu einem anderen Beleuchtungsfrequenzmodus.
8. **[Zurücksetzen auf Werkseinstellungen]:** Setzt alle Einstellungen auf die Standardeinstellungen zurück.
9. **[Kontakt]:** Kontaktinformationen!



Hinweis:

- Jedes Warnintervall beträgt 1 Minute. Wenn innerhalb dieses Zeitraums eine neue Warnung ausgelöst wird, ertönt keine akustische Meldung.

Menü-Icons

ICON	Icon Beschreibungen/Einführungen
	Drahtlose Signalstärke
	Icon für den Verbindungsstatus der Kamera: Wenn dieses Icon erscheint, ist die Kamera verbunden.
	VOX-Funktion aktiviert
	Nachtsichtfunktion aktiviert
	Wecker aktiviert Icon
	Alarm Icon
80°F	Anzeige der Umgebungstemperatur
10:58 AM	Zeit Datumsanzeige
	Akkustatus

SPEZIFIKATIONEN

Babyfon

Konnektivität	2.4GHz FHSS
Eingang	5V 2A
Zoom	Vergrößern (2X) Vergrößern (4X)
Gegensprechen	Ja
Multi-Kamera	Max. 4 Kameras

Lagertemperatur	-20 °C bis 70 °C
Betriebstemperatur	0 °C bis 40 °C

Kamera

Konnektivität	2.4GHz FHSS
Eingang	5V  2A
Zoom	Vergrößern (2X) Vergrößern (4X)
Nachtsicht	Schwarz-Weiß-Bild
Lichtsensoren	Ja
Gegensprechen	Ja
Lagertemperatur	-20 °C bis 70 °C
Betriebstemperatur	0 °C bis 40 °C

Konformitätserklärung

1. Bitte verwenden Sie die mitgelieferten AC-Netzladegeräte und USB-C-Ladekabel.
2. Verwenden Sie das Gerät nicht in Umgebungen mit extremen Temperaturen und vermeiden Sie es, das Gerät starker Sonneneinstrahlung oder zu hoher Luftfeuchtigkeit auszusetzen.
3. Die geeignete Umgebungstemperatur für das S6-M und das Zubehör ist -20° C bis 45° C.
4. Die geeignete Umgebungstemperatur für das S6-C und das Zubehör ist -20° C bis 40° C.
5. Stellen Sie das Gerät während des Ladevorgangs in eine Umgebung mit normaler Raumtemperatur und guter Belüftung. Es wird empfohlen, das Gerät innerhalb des Temperaturbereichs von 0° C bis 45° C aufzuladen.

Warnhinweise

1. Erstickungsgefahr: Netzkabel können eine Strangulationsgefahr für Kinder darstellen. Bewahren Sie das Kabel außerhalb der Reichweite von Kindern auf (in einem Abstand von mehr als 0,9 m).
2. Hinweis: Die Abbildungen von Produkten, Zubehör, Schnittstellen usw. in diesem Handbuch dienen nur als Referenz und sind schematisch. Aufgrund von Produktaktualisierungen und Upgrades kann es zu leichten Abweichungen zwischen dem tatsächlichen Produkt und den Abbildungen kommen. Bitte beziehen Sie sich auf das tatsächliche Produkt.

3. 1)Bitte verwenden Sie den im Produktpaket enthaltenen speziellen Adapter.Die Verwendung eines anderen Adapters kann das Produkt beschädigen.
- 2)Der mit dem Produkt gelieferte Adapter darf nicht zum Aufladen anderer Geräte verwendet werden, da dies diese Geräte beschädigen kann.
- 3)Wenn das Produkt nicht verwendet wird, entfernen Sie bitte den Adapter und bewahren Sie ihn an einem für Kinder unzugänglichen Ort auf.
- 4)Der Adapter darf nicht mit Wasser oder anderen Flüssigkeiten in Kontakt kommen.5)Wenn der Adapter die Stromversorgung nicht ordnungsgemäß bereitstellt, wenden Sie sich bitte an das professionelle Kundendienstteam. Versuchen Sie nicht, das Gerät selbst zu öffnen oder zu reparieren.

Warning

Hiermit erklärt das lizenzierte Unternehmen, dass dieses BM03-Produkt mit den grundlegenden Anforderungen und anderen relevanten Bestimmungen der Funkanlagenrichtlinie 2014/53/EU übereinstimmt.

Umweltschonende Entsorgung

Sie können dabei helfen, die Umwelt zu schützen!

Bitte denken Sie daran, die örtlichen Vorschriften zu beachten: Geben Sie nicht mehr funktionierende Elektrogeräte bei einer entsprechenden Entsorgungsstelle ab.

Achtung: Eingebaute Akkus oder Akkupacks dürfen nicht übermäßiger Hitze wie Sonnenschein, Feuer oder Ähnlichem ausgesetzt werden.

ACHTUNG: WENN DIE BATTERIE DURCH EINEN FALSCHEN TYP ERSETZT WIRD, BESTEHT EXPLOSIONSGEFAHR.

ENTSORGEN SIE VERBRAUCHTE BATTERIEN ENTSPRECHEND DEN ANWEISUNGEN

Die Funkfrequenzen 2412-2472MHz können in Europa ohne Einschränkung genutzt werden.

Dieses Produkt ist für den Verkauf und die Anwendung in einem geschäftlichen Umfeld bestimmt.

Für das vollständige CE-Dokument, bitte überprüfen Sie diesen Link: <https://momcozy.com/pages/declaration-of-conformity-momcozy>

GARANTIE UND KUNDENDIENST

12 Monate Garantie (Kontaktinformationen finden Sie auf dem Babyfon oder auf der Vorderseite dieses Benutzerhandbuchs)



WEEE-Richtlinie

ENTSORGEN SIE VERBRAUCHTE BATTERIEN GEMÄSS DEN ANWEISUNGEN

„—“ Das Symbol steht für Gleichspannung.

Dieses Produkt trägt das Symbol für die selektive Sortierung von Elektro- und Elektronik-Altgeräten (WEEE). Dies bedeutet, dass dieses Produkt gemäß der europäischen Richtlinie 2012/19/EU gehandhabt werden muss, um recycelt oder zerlegt zu werden, um die Auswirkungen auf die Umwelt zu minimieren. Der Verbraucher kann sein Produkt bei einer zuständigen Recyclingstelle oder beim Kauf eines neuen elektrischen oder elektronischen Geräts beim Händler abgeben.

EU-Konformitätserklärung: Hong Kong Lute Technology Co., Limited. erklärthiermit, dass sich dieses Gerät in Übereinstimmung mit den grundlegenden Anforderungen und anderen relevanten Bestimmungen der Richtlinie 2014/53/EU befindet.

Hersteller: HongKong Lute Technology Co., Limited

Adresse: Raum 02, 21. Etage, HipKwan Commercial Building, 38 Pitt Street, Yau Ma Tei, Kowloon, Hongkong EU-Bevollmächtigter: Lutejiacheng

EU-Bevollmächtigten: Lutejiacheng Maternal and Child Products GmbH

Adresse: Betriebsstätte c/o Sonnenberg Services GmbH, Sternstraße 67, 40479 Düsseldorf, Deutschland