

Mount Adapter
FTZ II
User's ManualEn Mount Adapter
User's Manual

Before using this product, carefully read both this document and the documentation provided with the camera and lens.

- This mount adapter allows Nikon F-mount NIKKOR lenses to be mounted on Nikon Z-mount mirrorless cameras.
- This mount adapter cannot be mounted on Nikon F-mount digital SLR cameras or Z-mount advanced cameras with interchangeable lenses (Nikon 1 cameras).
- This mount adapter cannot be used with NIKKOR i-Lenses.
- Update the camera firmware to the latest version. With earlier versions, the camera may fail to detect the lens or adapter correctly and some features may not be available. The latest version of the camera firmware can be downloaded from the Nikon Download Center.
- Note that depending on the lens, the adapter may limit autofocus or other camera features. For more information, see *Compatible F-mount Lenses*, available from the Nikon Download Center.

Nikon Download Center
<https://downloadcenter.nikonimglib.com/>

For Your Safety

To prevent damage to property or injury to yourself or to others, read "For Your Safety" in its entirety before using this product.

After reading these safety instructions, keep them readily accessible for future reference.

▲ WARNING: Failure to observe the precautions marked with this icon could result in death or severe injury.

▲ CAUTION: Failure to observe the precautions marked with this icon could result in injury or property damage.

- Do not disassemble or modify this product.**
- Do not touch internal parts that have been exposed as the result of a fall or other accident.** Failure to observe these precautions could result in electric shock or other injury.
- Should you notice any abnormalities such as the product producing smoke, heat, or unusual odors, immediately disconnect the camera power source.** Continued operation could result in fire, burns or other injury.

- Keep dry.**
- Do not handle with wet hands.** Failure to observe these precautions could result in fire or electric shock.

- Do not use this product in the presence of flammable dust or gas such as propane, gasoline or aerosols.** Failure to observe this precaution could result in explosion or fire.

- Keep this product out of reach of children.** Failure to observe this precaution could result in injury or product malfunction. In addition, this small parts constitute a choking hazard. Should a child swallow any part of this product, seek immediate medical attention.

- Do not handle with bare hands in locations exposed to extremely low or low temperatures.** Failure to observe this precaution could result in burns or frostbite.

- Do not leave the product where it will be exposed to extremely high temperatures, for an extended period such as in an enclosed automobile or in direct sunlight.** Failure to observe this precaution could result in fire or product malfunction.

Notices for Customers in Europe

This symbol indicates that electrical and electronic equipment is to be collected separately. The following apply only to users in European countries:

- This product is designated for separate collection at an appropriate collection point.
- Separate collection and recycling helps conserve natural resources and prevent negative consequences for human health and the environment that might result from incorrect disposal.
- For more information, contact the retailer or the local authorities in charge of waste management.

The Mount Adapter

Parts of the Adapter (Figure 1)

A Lens Mount

- Nikon F-mount (attaches to lens)
- Lens signal contacts
- Lens-mount marking
- Lens-release button

B Camera Mount

- Adapter mounting mark
- Nikon Z-mount (attaches to camera)
- CPU contacts

Attachment and Removal

Turn the camera off before attaching the adapter or to removing it from the camera or attaching lenses to or removing lenses from the adapter. Choose a location out of direct sunlight and be careful to prevent dust from entering the devices. While attaching lenses, avoid pressing the camera or adapter lens-release button.

Attaching the Adapter and Lens (Figure 2)

- Remove the body and rear lens caps and the adapter and the body cap from the camera.
- Attach the adapter to the camera.
 - Keeping the adapter mounting mark aligned with the mounting mark on the camera body (a-①), position the adapter on the camera and then rotate it counterclockwise until it clicks into place (a-②).
- Remove the rear lens cap.

Attach the lens to the adapter.

- Keeping the lens mounting mark aligned with the lens mounting mark on the adapter (b-①), position the lens on the adapter and then rotate it counterclockwise until it clicks into place (b-②).

Detaching the Lens and Adapter (Figure 3)

- Detach the lens.
 - Press and hold the adapter lens-release button (a-①) while turning the lens clockwise (a-②).
 - Attach the front and rear caps to the lens after removal.
- Detach the adapter.
 - Press and hold the camera lens-release button (b-①) while turning the adapter clockwise (b-②).
 - After removing the adapter, attach the front and rear caps to the adapter and the body cap to the camera.

- ✓ CPU Lenses with Aperture Rings** Select manual aperture (the highest f-number) before attaching CPU lensmount with aperture rings.

- ✓ Incompatible Lenses and Accessories** The following lenses and accessories cannot be used. Attempting to forcibly attach any of this equipment could damage the adapter or the lens. Individual variations may make lenses other than those listed below incompatible; do not use these if you encounter resistance when attempting to attach a lens to:
 - Non-AI lenses
 - i-Lenses
 - TC-16A teleconverter
 - Lenses that require the AL1-1 focusing unit (400mm f/4.5, 600mm f/5.6, 800mm f/8, 1200mm f/11)
 - AF 28mm f/2.8 (AF 28mm f/2.8, AF 28mm f/2.8, AF 200mm f/3.5 ED, TC-16 teleconverter)
 - PC 35mm f/2.8 (series 180000 or later)
 - PC 35mm f/3.5 (old type)
 - Reflex 100mm f/6.3 (analog type)
 - NIKKOR-H Auto 2.8mm f/3.5 (28mm f/3.5) lenses with serial numbers below 362000
 - NIKKOR-S Auto 5.5mm f/2.8 (35mm f/2.8) lenses with serial numbers below 362000
 - NIKKOR-S Auto 13.5mm f/3.5 (135mm f/3.5) lenses with serial numbers below 753000
 - Micro-NIKKOR 5.5mm f/3.5
 - Medical-NIKKOR Auto 200mm f/5.6
 - Auto NIKKOR telephoto-Zoom 85–250mm f/4.4–4.5
 - Auto NIKKOR telephoto-Zoom 200–600mm f/5.5–10.5

- ✓ Incompatible Lenses and Accessories** The following lenses and accessories cannot be used. Attempting to forcibly attach any of this equipment could damage the adapter or the lens. Individual variations may make lenses other than those listed below incompatible; do not use these if you encounter resistance when attempting to attach a lens to:
 - Non-AI lenses
 - i-Lenses
 - TC-16A teleconverter
 - Lenses that require the AL1-1 focusing unit (400mm f/4.5, 600mm f/5.6, 800mm f/8, 1200mm f/11)
 - AF 28mm f/2.8 (AF 28mm f/2.8, AF 200mm f/3.5 ED, TC-16 teleconverter)
 - PC 35mm f/2.8 (series 180000 or later)
 - PC 35mm f/3.5 (analog model)
 - Reflex 100mm f/6.3 (analog model)
 - NIKKOR-H Auto 2.8mm f/3.5 (28mm f/3.5) lenses with serial numbers below 362000
 - NIKKOR-S Auto 5.5mm f/2.8 (35mm f/2.8) lenses with serial numbers below 362000
 - NIKKOR-S Auto 13.5mm f/3.5 (135mm f/3.5) lenses with serial numbers below 753000
 - Micro-NIKKOR 5.5mm f/3.5
 - Medical-NIKKOR Auto 200mm f/5.6
 - Auto NIKKOR telephoto-Zoom 85–250mm f/4.4–4.5
 - Auto NIKKOR telephoto-Zoom 200–600mm f/5.5–10.5

- ✓ Incompatible Lenses and Accessories** The following lenses and accessories cannot be used. Attempting to forcibly attach any of this equipment could damage the adapter or the lens. Individual variations may make lenses other than those listed below incompatible; do not use these if you encounter resistance when attempting to attach a lens to:
 - Non-AI lenses
 - i-Lenses
 - TC-16A teleconverter
 - Lenses that require the AL1-1 focusing unit (400mm f/4.5, 600mm f/5.6, 800mm f/8, 1200mm f/11)
 - AF 28mm f/2.8 (AF 28mm f/2.8, AF 200mm f/3.5 ED, TC-16 teleconverter)
 - PC 35mm f/2.8 (series 180000 or later)
 - PC 35mm f/3.5 (analog model)
 - Reflex 100mm f/6.3 (analog model)
 - NIKKOR-H Auto 2.8mm f/3.5 (28mm f/3.5) lenses with serial numbers below 362000
 - NIKKOR-S Auto 5.5mm f/2.8 (35mm f/2.8) lenses with serial numbers below 362000
 - NIKKOR-S Auto 13.5mm f/3.5 (135mm f/3.5) lenses with serial numbers below 753000
 - Micro-NIKKOR 5.5mm f/3.5
 - Medical-NIKKOR Auto 200mm f/5.6
 - Auto NIKKOR telephoto-Zoom 85–250mm f/4.4–4.5
 - Auto NIKKOR telephoto-Zoom 200–600mm f/5.5–10.5

- ✓ Incompatible Lenses and Accessories** The following lenses and accessories cannot be used. Attempting to forcibly attach any of this equipment could damage the adapter or the lens. Individual variations may make lenses other than those listed below incompatible; do not use these if you encounter resistance when attempting to attach a lens to:
 - Non-AI lenses
 - i-Lenses
 - TC-16A teleconverter
 - Lenses that require the AL1-1 focusing unit (400mm f/4.5, 600mm f/5.6, 800mm f/8, 1200mm f/11)
 - AF 28mm f/2.8 (AF 28mm f/2.8, AF 200mm f/3.5 ED, TC-16 teleconverter)
 - PC 35mm f/2.8 (series 180000 or later)
 - PC 35mm f/3.5 (analog model)
 - Reflex 100mm f/6.3 (analog model)
 - NIKKOR-H Auto 2.8mm f/3.5 (28mm f/3.5) lenses with serial numbers below 362000
 - NIKKOR-S Auto 5.5mm f/2.8 (35mm f/2.8) lenses with serial numbers below 362000
 - NIKKOR-S Auto 13.5mm f/3.5 (135mm f/3.5) lenses with serial numbers below 753000
 - Micro-NIKKOR 5.5mm f/3.5
 - Medical-NIKKOR Auto 200mm f/5.6
 - Auto NIKKOR telephoto-Zoom 85–250mm f/4.4–4.5
 - Auto NIKKOR telephoto-Zoom 200–600mm f/5.5–10.5

- ✓ Incompatible Lenses and Accessories** The following lenses and accessories cannot be used. Attempting to forcibly attach any of this equipment could damage the adapter or the lens. Individual variations may make lenses other than those listed below incompatible; do not use these if you encounter resistance when attempting to attach a lens to:
 - Non-AI lenses
 - i-Lenses
 - TC-16A teleconverter
 - Lenses that require the AL1-1 focusing unit (400mm f/4.5, 600mm f/5.6, 800mm f/8, 1200mm f/11)
 - AF 28mm f/2.8 (AF 28mm f/2.8, AF 200mm f/3.5 ED, TC-16 teleconverter)
 - PC 35mm f/2.8 (series 180000 or later)
 - PC 35mm f/3.5 (analog model)
 - Reflex 100mm f/6.3 (analog model)
 - NIKKOR-H Auto 2.8mm f/3.5 (28mm f/3.5) lenses with serial numbers below 362000
 - NIKKOR-S Auto 5.5mm f/2.8 (35mm f/2.8) lenses with serial numbers below 362000
 - NIKKOR-S Auto 13.5mm f/3.5 (135mm f/3.5) lenses with serial numbers below 753000
 - Micro-NIKKOR 5.5mm f/3.5
 - Medical-NIKKOR Auto 200mm f/5.6
 - Auto NIKKOR telephoto-Zoom 85–250mm f/4.4–4.5
 - Auto NIKKOR telephoto-Zoom 200–600mm f/5.5–10.5

- ✓ Incompatible Lenses and Accessories** The following lenses and accessories cannot be used. Attempting to forcibly attach any of this equipment could damage the adapter or the lens. Individual variations may make lenses other than those listed below incompatible; do not use these if you encounter resistance when attempting to attach a lens to:
 - Non-AI lenses
 - i-Lenses
 - TC-16A teleconverter
 - Lenses that require the AL1-1 focusing unit (400mm f/4.5, 600mm f/5.6, 800mm f/8, 1200mm f/11)
 - AF 28mm f/2.8 (AF 28mm f/2.8, AF 200mm f/3.5 ED, TC-16 teleconverter)
 - PC 35mm f/2.8 (series 180000 or later)
 - PC 35mm f/3.5 (analog model)
 - Reflex 100mm f/6.3 (analog model)
 - NIKKOR-H Auto 2.8mm f/3.5 (28mm f/3.5) lenses with serial numbers below 362000
 - NIKKOR-S Auto 5.5mm f/2.8 (35mm f/2.8) lenses with serial numbers below 362000
 - NIKKOR-S Auto 13.5mm f/3.5 (135mm f/3.5) lenses with serial numbers below 753000
 - Micro-NIKKOR 5.5mm f/3.5
 - Medical-NIKKOR Auto 200mm f/5.6
 - Auto NIKKOR telephoto-Zoom 85–250mm f/4.4–4.5
 - Auto NIKKOR telephoto-Zoom 200–600mm f/5.5–10.5

- ✓ Incompatible Lenses and Accessories** The following lenses and accessories cannot be used. Attempting to forcibly attach any of this equipment could damage the adapter or the lens. Individual variations may make lenses other than those listed below incompatible; do not use these if you encounter resistance when attempting to attach a lens to:
 - Non-AI lenses
 - i-Lenses
 - TC-16A teleconverter
 - Lenses that require the AL1-1 focusing unit (400mm f/4.5, 600mm f/5.6, 800mm f/8, 1200mm f/11)
 - AF 28mm f/2.8 (AF 28mm f/2.8, AF 200mm f/3.5 ED, TC-16 teleconverter)
 - PC 35mm f/2.8 (series 180000 or later)
 - PC 35mm f/3.5 (analog model)
 - Reflex 100mm f/6.3 (analog model)
 - NIKKOR-H Auto 2.8mm f/3.5 (28mm f/3.5) lenses with serial numbers below 362000
 - NIKKOR-S Auto 5.5mm f/2.8 (35mm f/2.8) lenses with serial numbers below 362000
 - NIKKOR-S Auto 13.5mm f/3.5 (135mm f/3.5) lenses with serial numbers below 753000
 - Micro-NIKKOR 5.5mm f/3.5
 - Medical-NIKKOR Auto 200mm f/5.6
 - Auto NIKKOR telephoto-Zoom 85–250mm f/4.4–4.5
 - Auto NIKKOR telephoto-Zoom 200–600mm f/5.5–10.5

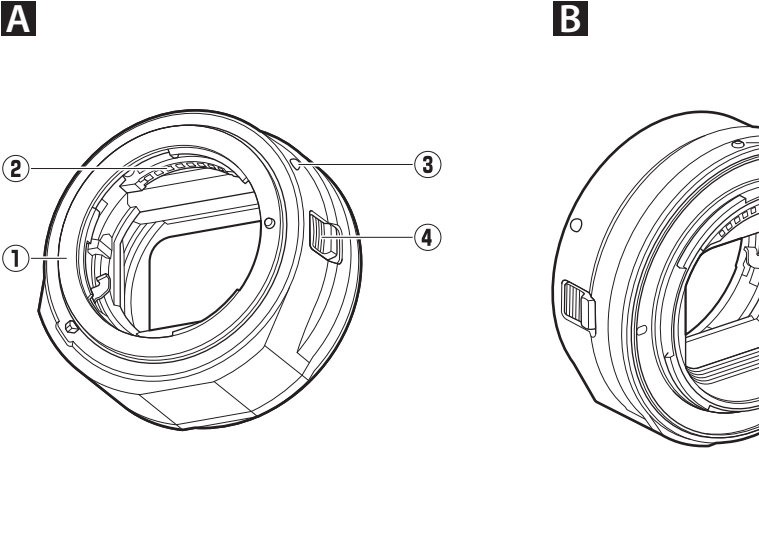


Figure 1/Abbildung 1/Figure 1/Figur 1/Bild 1

Using the Mount Adapter

- Autofocus may not function as expected when the adapter is used with an F-mount NIKKOR lens. If the camera has trouble focusing, set the AF-area mode to single point and select the center focus area, or focus manually.
- With some lenses, the camera vibration reduction feature may not function as expected or may cause vignetting or a drop in peripheral illumination.

Precautions for Use

- When using the adapter with lenses weighing over 1300 g (2 lb 13.9 oz), support the lens when holding the camera and do not use the camera strap. Failure to observe these precautions could damage the camera lens mount.
- Keep the CPU and lens signal contacts clean.
- Do not leave the adapter in humid locations or in locations in which it may be exposed to moisture. Rusting of the internal mechanism can cause irreparable damage.
- Do not leave the adapter next to open flames or in other extremely hot locations. Extreme heat could damage or warp the adapter.

Caring for the Adapter

- Do not touch the interior of the mount adapter. Use a blower or soft brush to remove dust, being careful not to rub or scratch the inside of the adapter.
- When cleaning the adapter, use a blower to remove dust and lint and then wipe the adapter gently with a soft, dry cloth.
- Never use organic solvents such as paint thinner or benzene to clean the adapter.
- Do not store with naphtha or camphor moth balls or in direct sunlight. If the adapter will not be used for an extended period, store it in a cool, dry location to prevent mold and rust.

Accessories

- Supplied Accessories**
 - BF-1 Body Cap
 - LF-N1 Lens Cap (rear cap)

Specifications

Type	Mount adapter
Supported cameras	Nikon Z-mount mirrorless cameras
Dimensions (W × H × D)	Approx. 70 × 70 × 36 mm (2.8 × 2.8 × 1.5 in.), excluding projections
Weight	Approx. 125 g (4.5 oz)

Nikon reserves the right to change without the appearance, specifications, and performance of this product at any time and without prior notice.

De Bajonettadapter
Benutzerhandbuch

Bitte lesen Sie vor dem Verwenden dieses Produkts aufmerksam dieses Dokument sowie die Kamera und Objektiv gefolgende Dokumentation. Die neueste Version der Kamera-Firmware kann im Nikon Download-Center heruntergeladen werden.

- Dieser Bajonettadapter ermöglicht es, NIKKOR-Objektive mit Nikon-F-Bajonett an Spiegelkameras mit Nikon-Z-Bajonett anzuschließen.
- Dieser Bajonettadapter lässt sich nicht an Nikon-D-SLR-Kameras mit F-Bajonett oder digitalen Systemkameras mit I-Bajonett (Nikon-1-Kameras) anbringen.
- Dieser Bajonettadapter kann nicht mit 1-NIKKOR-Objektiven verwendet werden.
- Stellen Sie sicher, dass auf der Kamera die neueste Firmware-Version installiert ist. Mit älteren Versionen erkennt die Kamera möglicherweise das Objektiv oder den Adapter nicht korrekt und manche Funktionen stehen eventuell nicht zur Verfügung. Die neueste Version der Kamera-Firmware kann im Nikon Download-Center heruntergeladen werden.
- Beachten Sie, dass der Adapter in Abhängigkeit vom Objektiv möglicherweise den Autofokus oder andere Kamerafunktionen einschränken kann. Nähere Informationen finden Sie im Dokument „Geeignete Objektive mit F-Bajonettanschluss“, welches im Nikon Download-Center heruntergeladen werden kann.

Nikon Download-Center
<https://downloadcenter.nikonimglib.com/>

Sicherheitshinweise

Lesen Sie die Sicherheitshinweise vor der Inbetriebnahme dieses Produkts vollständig durch, um Sach- oder Personenschäden zu verhindern.

Bewahren Sie diese Sicherheitshinweise nach dem Lesen zum späteren Nachschlagen griffbereit auf.

▲ WARNING: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Verletzungen oder zum Tod führen.

▲ VORSICHT: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Sach- oder Personenschäden führen.

▲ WARNING: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Verletzungen oder zum Tod führen.

▲ VORSICHT: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Sach- oder Personenschäden führen.

▲ WARNING: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Verletzungen oder zum Tod führen.

▲ VORSICHT: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Sach- oder Personenschäden führen.

▲ WARNING: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Verletzungen oder zum Tod führen.

▲ VORSICHT: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Sach- oder Personenschäden führen.

▲ WARNING: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Verletzungen oder zum Tod führen.

▲ VORSICHT: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Sach- oder Personenschäden führen.

▲ WARNING: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Verletzungen oder zum Tod führen.

▲ VORSICHT: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Sach- oder Personenschäden führen.

▲ WARNING: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Verletzungen oder zum Tod führen.

▲ VORSICHT: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Sach- oder Personenschäden führen.

▲ WARNING: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Verletzungen oder zum Tod führen.

▲ VORSICHT: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Sach- oder Personenschäden führen.

▲ WARNING: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Verletzungen oder zum Tod führen.

▲ VORSICHT: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Sach- oder Personenschäden führen.

▲ WARNING: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Verletzungen oder zum Tod führen.

▲ VORSICHT: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Sach- oder Personenschäden führen.

▲ WARNING: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Verletzungen oder zum Tod führen.

▲ VORSICHT: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Sach- oder Personenschäden führen.

▲ WARNING: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Verletzungen oder zum Tod führen.

▲ VORSICHT: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Sach- oder Personenschäden führen.

▲ WARNING: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Verletzungen oder zum Tod führen.

▲ VORSICHT: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Sach- oder Personenschäden führen.

▲ WARNING: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Verletzungen oder zum Tod führen.

▲ VORSICHT: Das Missachen der Warnhinweise, die so gekennzeichnet sind, könnte zu Sach- oder Personenschäden führen.

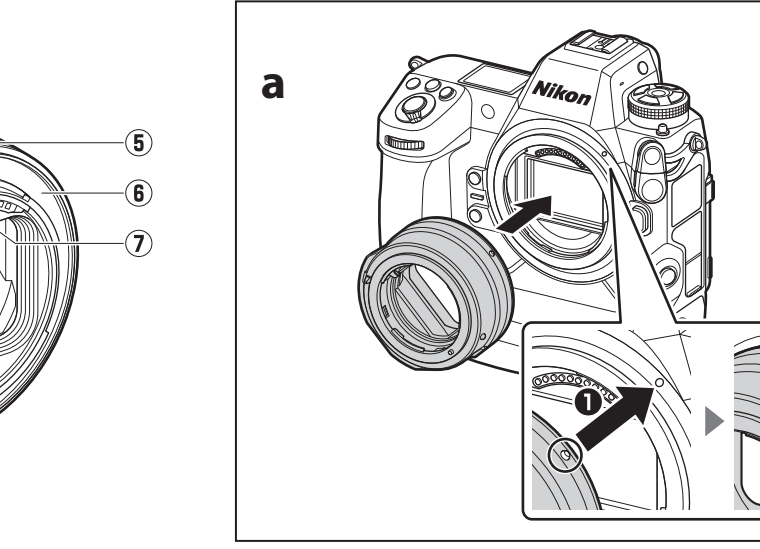


Figure 2/Abbildung 2/Figure 2/Figur 2/Bild 2

Un des Adapter et das Objektiv anbringen (Abbildung 2)

- Entfernen Sie den vorderen und hinteren Deckel vom Adapter und den Gehäusedeckel von der Kamera.
- Bringen Sie den Adapter an der Kamera an.
 - Halten Sie den Adapter an der Kamera, richten Sie die Markierung für die Ausrichtung des Adapters an der Ausrichtungsmarkierung auf dem Kameragehäuse (a-①) aus und drehen Sie ihn dann entgegen der Uhrzeigersichtung, bis Sie einen Klick hören (a-②).
- Nehmen Sie den hinteren Objektivdeckel vom Objektiv ab.
- Bringen Sie das Objektiv am Adapter an.
 - Halten Sie das Objektiv an den Adapter, richten Sie die Markierung für die Ausrichtung des Objektivs an der Markierung für die Ausrichtung des Objektivs am Adapter (b-①) aus und drehen Sie es dann entgegen der Uhrzeigersichtung, bis Sie einen Klick hören (b-②).

Das Objektiv und den Adapter abnehmen (Abbildung 3)

- Nehmen Sie das Objektiv ab.
 - Drücken und halten Sie die Objektivverriegelung des Adapters (a-①) und drehen Sie den Adapter in Uhrzeigersichtung (b-②).
 - Bringen Sie nach Abnehmen des vorderen und hinteren Deckel auf dem Objektiv an.
- Nehmen Sie den Adapter ab.
 - Drücken und halten Sie die Objektivverriegelung der Kamera (b-①) und drehen Sie den Adapter in Uhrzeigersichtung (a-②).
 - Bringen Sie nach Abnehmen des Adapters den vorderen und hinteren Deckel am Kameragehäuse ab.

- ✓ CPU-Objektiv mit Blendenelementen** Stellen Sie die Blendenelemente (Blendenblende) ein, bevor Sie ein CPU-Objektiv anbringen, das mit einem Blendenelement ausgestattet ist.
- ✓ Nicht kompatible Objektive und Zubehör** Die folgenden Objektiv- und Zubehörartikel sind nicht verwendet werden. Beim Versuch, eines dieser Produkte mit Gewalt anzubringen, kann der Adapter oder das Objektiv beschädigt werden. Aus ungeklärten Gründen erweisen sich unter Umständen auch andere Objektiv- wie die unten aufgeführten als ungeeignet, werden Sie keine Gewalt an, wenn Sie beim Versuch ein Objektiv anzubringen einen Widerstand verspüren.

- IX-NIKKOR**
- IX-NIKKOR TC-16A**
- Objektiv mit Einstellplatz AL1-1000 mm f/4.5, 600mm f/5.6, 800mm f/8, 1200mm f/11
- PC 28mm f/2.8 (series 180000 or later)
- Fisheye-Objektiv (6 mm f/5.6, 7.5 mm f/5.6, 8 mm f/8, 10 mm f/16)
- 2.1 cm f/4.4
- 2.1 cm f/4.4
- 180–600 mm f/11 ED (Seriennummer 174041–174180)
- 360–1200 mm f/11 ED (Seriennummer 174041–174180)
- 200–600 mm f/5.5 (Seriennummer 280001–304000)
- AF-Objektiv für F3AF (AF 80mm f/2.8, AF 200mm f/3.5 ED, AF-telekonverter TC-16)
- PC 35mm f/2.8 (series 180000 or later)
- PC 35mm f/3.5 (analog type)
- Reflex 100mm f/6.3 (analog type)
- Objektiv NIKKOR-H Auto 2.8mm f/3.5 (28mm f/3.5) mit Seriennummern niedriger als 362000
- Objektiv NIKKOR-S Auto 5.5mm f/2.8 (35mm f/2.8) mit Seriennummern niedriger als 362000
- Objektiv NIKKOR-S Auto 13.5mm f/3.5 (135mm f/3.5) mit Seriennummern niedriger als 753000
- Micro-NIKKOR 5.5mm f/3.5
- Medical-NIKKOR Auto 200mm f/5.6
- Auto NIKKOR telephoto-Zoom 85–250mm f/4.4–4.5
- Auto NIKKOR telephoto-Zoom 200–600mm f/5.5–10.5

- ✓ CPU-Objektiv mit Blendenelementen** Stellen Sie die Blendenelemente (Blendenblende) ein, bevor Sie ein CPU-Objektiv anbringen, das mit einem Blendenelement ausgestattet ist.

- ✓ Nicht kompatible Objektive und Zubehör** Die folgenden Objektiv- und Zubehörartikel sind nicht verwendet werden. Beim Versuch, eines dieser Produkte mit Gewalt anzubringen, kann der Adapter oder das Objektiv beschädigt werden. Aus ungeklärten Gründen erweisen sich unter Umständen auch andere Objektiv- wie die unten aufgeführten als ungeeignet, werden Sie keine Gewalt an, wenn Sie beim Versuch ein Objektiv anzubringen einen Widerstand verspüren.

- IX-NIKKOR**
- IX-NIKKOR TC-16A**
- Objektiv mit Einstellplatz AL1-1000 mm f/4.5, 600mm f/5.6, 800mm f/8, 1200mm f/11
- PC 28mm f/2.8 (series 180000 or later)
- Fisheye-Objektiv (6 mm f/5.6, 7.5 mm f/5.6, 8 mm f/8, 10 mm f/16)
- 2.1 cm f/4.4
- 2.1 cm f/4.4
- 180–600 mm f/11 ED (Seriennummer 174041–174180)
- 360–1200 mm f/11 ED (Seriennummer 174041–174180)
- 200–600 mm f/5.5 (Seriennummer 280001–304000)
- AF-Objektiv für F3AF (AF 80mm f/2.8, AF 200mm f/3.5 ED, AF-telekonverter TC-16)
- PC 35mm f/2.8 (series 180000 or later)
- PC 35mm f/3.5 (analog type)
- Reflex 100mm f/6.3 (analog type)
- Objektiv NIKKOR-H Auto 2.8mm f/3.5 (28mm f/3.5) mit Seriennummern niedriger als 362000
- Objektiv NIKKOR-S Auto 5.5mm f/2.8 (35mm f/2.8) mit Seriennummern niedriger als 362000
- Objektiv NIKKOR-S Auto 13.5mm f/3.5 (135mm f/3.5) mit Seriennummern niedriger als 753000
- Micro-NIKKOR 5.5mm f/3.5
- Medical-NIKKOR Auto 200mm f/5.6
- Auto NIKKOR telephoto-Zoom 85–250mm f/4.4–4.5
- Auto NIKKOR telephoto-Zoom 200–600mm f/5.5–10.5

- ✓ CPU-Objektiv mit Blendenelementen** Stellen Sie die Blendenelemente (Blendenblende) ein, bevor Sie ein CPU-Objektiv anbringen, das mit einem Blendenelement ausgestattet ist.

- ✓ Nicht kompatible Objektive und Zubehör** Die folgenden Objektiv- und Zubehörartikel sind nicht verwendet werden. Beim Versuch, eines dieser Produkte mit Gewalt anzubringen, kann der Adapter oder das Objektiv beschädigt werden. Aus ungeklärten Gründen erweisen sich unter Umständen auch andere Objektiv- wie die unten aufgeführten als ungeeignet, werden Sie keine Gewalt an, wenn Sie beim Versuch ein Objektiv anzubringen einen Widerstand verspüren.

