

Oral-B

BY BRAUN

取扱説明書

保証書付

ご使用前に必ずお読みのうえ、正しくご使用ください。巻末に保証書が添付されておりますので、大切に保管してください。

Charger Type 3757

Handle Type 3756



90054658

Internet:

www.oralb.com

www.braun.com

www.service.braun.com

Braun GmbH
Frankfurter Str. 145
61476 Kronberg/Germany

Charger type 3757

Handle type 3756

90054658/VII-21


JP/EN

2分で分かる! 簡単・使い方ガイド

詳しくは説明書をご覧ください。

▶ご使用前に

- 初めて使う際、お急ぎの場合は、1時間程度充電すれば約2分間ブラッシングが可能です。
- フル充電には、最大22時間必要です。
- 充電後、本体にブラシを差し込んで、On/Offスイッチを押すと動き始めます。

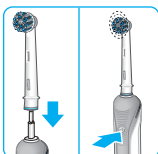

▶磨く前に


- 歯みがき粉は、米粒大程度のごく少量で充分です。
- 歯みがき粉が飛び散らないよう、お口の中でスイッチを入れ、お口から出す前にスイッチを切ってください。



※正しい磨き方に関しては、ページ下部をご覧ください。


▶お手入れ方法

- ブラッシング後、ブラシを本体につけたまま下向きにして、流水でブラシをよくすすぎます。
- その後、本体からブラシを取り外し、流水で洗います。本体の水気をよく拭き取ってください。
- 防水加工が施されていますので、本体が水に濡れても心配ありません。



▶ブラシ交換について

- 交換の目安は約3ヵ月です。
- 替えブラシのお求めは、お近くのオーラルB製品取扱店へ。
- インターネットでもお買い求めいただけます。




購入サイトへは

オーラルB 替えブラシ

検索

2分で磨ける! 正しいブラッシング早わかり。

～ 正しく磨けば、効果最大! ～

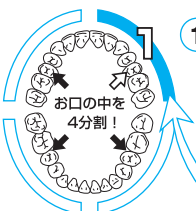


1 お口の中を4分割して均等に磨きます。

使い始めは、振動がくすぐったかったり、激しく感じたりすることがありますが、徐々に慣れてきます。もちろん歯ぐきにもやさしく、身体への影響もありません。

2 ブラシは歯に軽く当て、歯の一本一本を意識して、外側・内側・上面をそれぞれ10秒ずつなぞりましょう。

手磨きのように小刻みに手を動かさないのがコツ。ブラシは、力を入れすぎないように「歯に軽く当ててなぞるだけ」です。

軽くなぞるだけ!

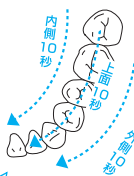

3 側面を磨く際、ブラシは左図のように歯に対して斜め45度に当てると、歯と歯ぐきの間の歯垢が効果的に除去できます。

前歯の内側を磨くときは、ブラシを立てて使用すると効果的です。



4 上記の30秒ブラッシングを4箇所分、繰り返してください。

磨いた後、舌の先で歯の表面をなぞると、ツルツルになっているはず。

さらに指でこすってみるとキュッキュとなるほど歯垢がすっかり落ちています。

オーラルB PROシリーズは、お客様に安全で効果的な全く新しい歯みがきを体験して頂けるよう細心の注意をもって作られています。ご使用にあたっては安全に関する注意事項をよくご確認のうえ、正しくお使いください。

安全上のご注意

- ご使用の前に、この「安全上のご注意」をよくお読みのうえ、正しくお使い下さい。
- ここに示した注意事項は、製品を安全に正しくお使い頂き、あなたや他の人々への危害や損害を未然に防止するためのものです。また、注意事項は、危険の度合いを明示するために、次のように区分しています。

いずれも安全に関する重要な内容ですので、必ず守ってください。

⚠警告：人が死亡又は重傷を負う可能性が想定される内容。

⚠注意：人が傷害を負う可能性及び物的損害の発生が想定される内容。

お読みになった後は、お使いになる方がいつでも見られるところに必ず保管してください。

■絵表示の例



△記号は、警告・注意を促す内容があることを告げるものです。図中に具体的な注意内容(左図の場合は感電注意)が描かれています。



⊘記号は、禁止行為であることを告げるものです。図中や近くの箇所に具体的な禁止内容(左図の場合は分解禁止)が描かれています。



●記号は、行為を強制したり指示したりする内容を告げるものです。図中に具体的な指示内容(左図の場合は電源プラグをコンセントから抜く)が描かれています。

⚠ 警 告



- 交流100～110V以外では使用しない。

火災・感電の原因となります。

- 電源コードを傷付けたり、無理に曲げたり、引っ張ったり、ねじったり、たばねたり、高温部に近づけたり、重い物を載せたり、挟み込んだり、加工したりしない。

電源コードが破損し、火災・感電の原因となります。

- 電源コードや電源プラグが傷んだり、コンセントの差込みが緩いときは使用しない。

感電・ショート・発火の原因になります。



- 改造はしない。また修理技術者以外は、分解・修理をしない(製品の廃棄の際に充電池を取り出すときを除く)。

火災・感電・けがの原因となります。この製品は、交換不能な充電池を内蔵しています。修理はお買い上げの販売店又はブラウンリペアセンターにご相談ください。



- 電源プラグや充電器を水につけたり、水をかけたりしない。また、水中に落下するようなおそれのある位置に設置しない。

ショート・感電・発煙・発火・漏電火災等や故障のおそれがあります。



- 電源プラグや充電器を浴室、シャワー室のような湿気の多い場所では使用しない。

ショート・感電・発煙・発火・漏電火災等や故障のおそれがあります。



- 濡れた手で電源プラグをコンセントから抜き差ししない。

感電やけがをすることがあります。



- お手入れの際は必ずスイッチを切り、電源プラグをコンセントから抜く。また、充電器を水中に落とした場合も、水中の充電器に触れず、すぐに電源プラグを抜く。

感電やけがをすることがあります。



- 異常・故障時には、直ちに使用を中止する。

そのまま使用すると火災・感電・けが・故障に至るおそれがあります。直ちにスイッチを切り、電源プラグを抜いて、ブラウンリペアセンターへ点検・修理を依頼してください。

- 電源プラグ使用の際は、必ず電極部の水を完全に拭き取る。

ショート・感電・発煙・発火・漏電火災等や故障のおそれがあります。


⚠ 注 意

	●子どもだけで使わせたり、お手入れさせたりしない。子どもの手の届くところに置かない。 事故やけがのおそれがあります。子どもや介助が必要な方が使用する際は、必ず保護者や責任者の監督下でお使いください。 ●本製品を3歳未満の子供に使用しない。 ●歯みがき以外の目的には使用しない。 製品の消耗を早め、事故の原因になります。 ●電源プラグに金属、ほこり、水滴等を付着させない。 ショート・感電・発煙・発火・漏電火災等や故障のおそれがありますので定期的に掃除してください。 ●歯ぐきにブラシやノズルを強く当てすぎない。 歯ぐきを傷める事があります。歯周病のひどい人などは歯科医にご相談ください。 ●廃棄時に充電電池を取り出す際は⊕⊖端子をショートさせない。 ●遊び等、歯磨き以外の用途に使用したり、ブラシを噛んだりしない。 大人の指導・監督の下で使用してください。
	●ご使用の前にブラシやノズルにガタツキや変形がないか確認する。 歯ぐきや口唇を傷つけることがあります。また、必ずブラシをハンドルに装着して使用してください。 ●製品を落としたりした場合、外見上破損が見られなくても、ブラシやノズルを交換する。 歯みがき中に破損して口腔内にケガをするおそれがあります。 ●歯科治療中、または義歯を使用している場合は、使用の前に歯科医に相談する。 ●本体又は充電器の開口部にものを差し込まない。 ●本体ハンドル下部の白い点は押したり、とがったもので突かない。 ハンドル内に水が入るのを防ぎ、ハンドル内に万が一水蒸気が生じた場合に外部に逃がす役目があります。 ●オーラルB正規品以外の充電器や付属品は使用しない。 ●電源プラグを抜くときは、電源コードを持たずに必ず先端の電源プラグを持って引き抜く。 感電やショートして発火し、火災に至ることがあります。 ●本製品は「屋内用」です。 ●ブラシは3ヶ月毎に交換してください。万が一毛先が開いた場合は、すぐに交換してください。 ●使用後はブラシヘッドを洗ってください。（詳しくは、<ご使用後のお手入れのしかた>をご覧ください。） 正しくお手入れをすることで、歯ブラシが長持ちします。 ●必ず付属の充電器を使う。
	●充電器使用時以外は、電源プラグをコンセントから抜く（長期不在の場合等は特に注意）。 けがや火傷、絶縁劣化による感電や漏電火災の原因になります。


❗ 子供が本製品を遊びに使わないよう、お気をつけください。

❗ 本製品は個人用です。歯科医等で複数の患者に使用することは避けてください。


各部の名称

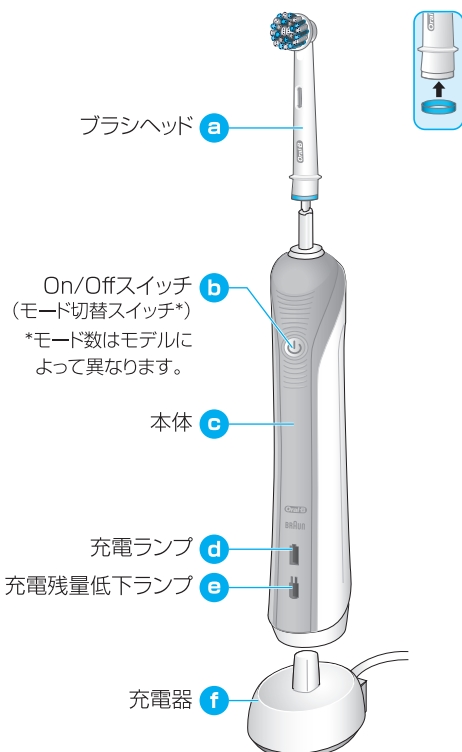

ブラシホルダー

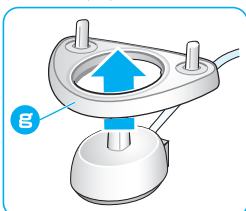

トラベルケース

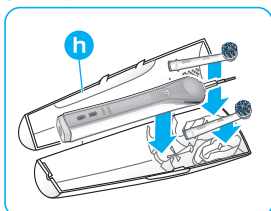

※付属品はモデルによって異なります。


仕様

振動	振動数 (最大スピードの場合)	上下振動	左右反転振動
	クリーン	約20,000回/分	約8,800回/分
電源	充電式		
充電時間	最大22時間		
定格	AC 100～110V / 50-60Hz / 0.9W		
使用時間	最大10日間(1日2回、各2分間使用した場合)		
寸法	本体… W27 × D34 × H195mm(本体のみ) 充電器… W46.5 × D63.5 × H24.5mm		
質量	本体:131g 充電器:118g		
付属品	<D16.513.UX> マルチアクションブラシ、充電器、トラベルケース 各1個 <D16.523.1U AW> マルチアクションブラシ、ホワイトニングブラシ、充電器 各1個		

接続と充電のしかた

歯ブラシ本体は防水仕様となっており、浴室でも安全にお使いいただけます。ただし、本体内部に水が入らないようにご注意ください。故障の原因になります。

- ▶ 充電器**f**の電源プラグをコンセントに差し込み、歯ブラシ本体**c**を充電器にセットします。(ブラシホルダー**g**が付属している場合は、充電器にセットしてお使いいただけます。)
- ▶ 充電中は充電ランプ**d**が緑に点滅します。充電が完了すると、ランプは消えます。フル充電には、最大22時間かかり、フル充電の状態では、最大10日間ブラッシングをすることができます。(1日2回、各2分間使用した場合)長い間充電していなかった場合は、充電ランプが点滅を開始するのに時間がかかることがあります。(10～15分)
- ▶ 充電残量が低下すると、スイッチをOn/Offした時に充電残量低下ランプ**e**が、赤く点滅します。
- ▶ 毎日ご使用される場合には、常に本体を充電器にセットすることで、フル充電状態を保つことができます。過充電の恐れはありません。
- ▶ 本体の充電式電池の寿命を長持ちさせる為に、少なくとも6ヶ月毎に、ブラシ本体の充電が完全に無くなるまで使用することをお勧めします。
- ▶ 本体ハンドル下部の白い点は押したり、とがったもので突かないでください。故障の原因になります。(ハンドル内に水が入るのを防ぎ、ハンドル内に万が一水蒸気が生じた場合に外部に逃がす役目があります。)

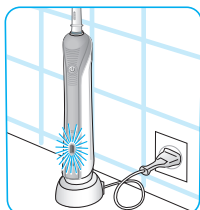


使いかた

効果的な磨き方

ブラシをぬらして歯みがき粉をつけてからお使いください。どんな種類の歯みがき粉もご使用になれます。水しぶきの飛び散りを防ぐ為に、ブラシを口の中に入れてから本体のスイッチを入れてください。



丸型回転式ブラシを使用するときには、ブラシを軽く歯に当てて一本一本ゆっくりと移動させます。ブラシを歯に2～3秒当てた後、次の歯に移ります。

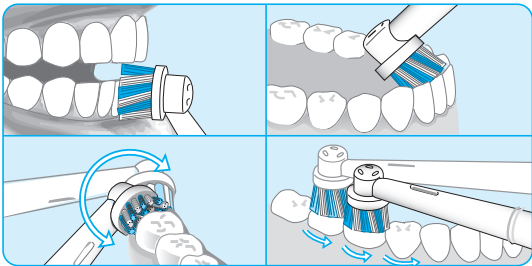

どのブラシを使用する際も、まず外側の歯からはじめて、内側に移り、最後に歯の噛み合わせ部分を磨きます。口腔内を4分割した部分をそれぞれ均等に磨きます。ブラシを歯に強く押し付けたりせず、ブラシを歯に軽く当てるだけでブラッシングできます。

歯科医に、あなたの歯に合った正しいブラッシングのしかたを相談してみるのもお勧めです。

電動歯ブラシを使用し始めてから数日間は、若干歯ぐきから出血することがあります。通常、その場合の出血は数日で止まりますが、出血が2週間以上続く場合は使用を中止して、歯科医の診断を受けてください。

歯や歯ぐきが敏感な場合は、＜やわらかクリーンモード＞*および＜やわらか極細毛ブラシ＞のご使用をお勧めします。

*PR0500-600には搭載されていません。

ブラッシングモード

(モデルによって搭載モードは異なります。PR0500-600はクリーンモードのみの搭載となります。)

＜クリーン＞…………… 毎日の歯磨きに。

＜やわらかクリーン＞… 歯や歯ぐきの状態が気になるときに。やさしくすっきりと磨き上げます。

＜ホワイトニング＞…… ステイン(着色汚れ)を除去して自然な白い歯に。


On/Offスイッチ **b** を押すと、自動的に＜クリーンモード＞で始動します。他のモードに切り替えるには、続けてOn/Offスイッチを押します。やわらかクリーンモード等から電源を切りたいときは、動作が止まるまでOn/Offスイッチを長押ししてください。

押し付け防止機能

過剰なブラッシングから歯と歯ぐきを守る為に、この歯ブラシには押し付け防止機能が搭載されています。ブラッシングの力が強すぎると、過圧センサーが作動し、自動的に上下振動をストップし、反転運動のみのブラッシングとなります。またその際には、ブラッシングの音が変わってお知らせします。

タイマー

口腔内を4分割した部分を均等に磨きやすいよう、タイマーが30秒ごとに短めのシグナル(一時的に回転が止まる)で次の部位に移るタイミングをお知らせします。推奨の2分間のブラッシングが終了すると、長めのシグナルでお知らせします。ブラッシング中に短時間電源を切っても、ブラッシング経過時間は記憶されるので、再び電源をいれてブラッシングを続けることが出来ます。電源を切った状態が30秒以上続くと、タイマーはリセットされます。

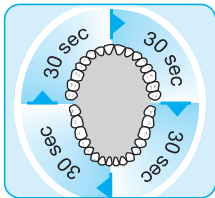

ブラシについて

オーラルBはオーラルB電動歯ブラシに使用できる、様々な替えブラシをご用意しております。

(付属ブラシに関しては、P.5の付属品の欄をご参照ください)



やわらか極細毛ブラシ(EB60):歯の表面をしっかりと磨ける毛先と、歯ぐきのキワをやさしく磨ける極細毛のコンビネーションで、すみすみまでスッキリやさしく磨けます。



マルチアクションブラシ(EB50/EB50 BK):オーラルB最高峰のブラシヘッド。角度のついた毛先が歯垢を浮かせて取り除きます。



ベーシックブラシ(EB20):歯や歯ぐきを守りながらしっかりとやさしく磨きます。カーブ型の毛先で歯の一本一本を包み込むようにし、歯間の奥にまで届いて、すみずみまで磨き上げます。



歯間ワイパー付ブラシ(EB25):ソフトラバー製の黄色い歯間ワイパーが、やさしく歯と歯の奥まで入り込み、こびりついたしつこい汚れまでしっかりきれいに磨き取ります。




ホワイトニングブラシ(EB18):美白ラバーカップがあなたの気になる黄ばみや黒ずみを、しっかり落として自然な白い歯に磨きあげます。12歳以下のお子様の歯みがきにはホワイトニングブラシをご使用にならないでください。

ブラシは、3ヵ月毎に交換してください。また、オーラルBの替えブラシの多くは、青色の毛の部分白くなってブラシの交換時期をお知らせします。正しい方法で一日2回2分間のブラッシングをしていると約3ヵ月で青色の毛先が白く変色します。ブラシの色が変わる前に毛先が開いた場合は、歯や歯ぐきに強くあてすぎている可能性があります。

注意: ●歯列矯正器を装着されている場合には、歯間ワイパー付ブラシ、ホワイトニングブラシのご使用をお勧めしません。

ご使用後のお手入れのしかた

ブラッシング後、スイッチをONにしたまま、流水で数秒間すすぎます。次にスイッチを切り、ブラシを取り外して、別々に流水ですすいだ後、水気を拭き取ってから装着しなおしてください。お手入れの際は、必ず充電器の電源プラグをコンセントから抜いてください。ブラシホルダー**e**は、食器洗浄器に入れて洗うことができます。充電器**f**、トラベルケース**h**は、湿らせた布でのお手入れのみとしてください。トラベルケースに本体及びブラシヘッドを収納する際には、洗浄し良く乾かしてから収納してください。

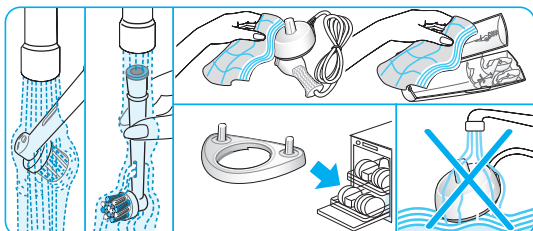

非正規品ブラシヘッド(替えブラシ)使用に関して

オーラルBのものではないブラシヘッドを使用したことが電動歯ブラシの故障理由として考えられるときは、オーラルBの保証書は無効となりますのでご注意ください。オーラルBは、非正規品のブラシヘッドの使用をお勧めしません。

- オーラルBは、非正規品のブラシヘッドの品質に関して全く関知していません。したがって、非正規品のブラシヘッドを使用した場合は、オーラルB電動歯ブラシ購入時にお約束したブラッシングの性能に関しても保証することができません。
- オーラルBは、非正規品のブラシヘッドがオーラルB電動歯ブラシ本体にきちんと装着できるか保証することができません。
- オーラルBは、非正規品のブラシヘッドを使用した場合の、長期的にわたって電動歯ブラシ本体に与える影響を予測できません。

全てのオーラルB替えブラシには、オーラルBロゴが印刷されており、オーラルBの高い品質基準をクリアしています。オーラルBは、替えブラシや本体部品を他のブランド名のもとで販売することはありません。


本書の内容は予告なしに変更されることがあります。

廃棄時の充電式電池の取り外し

充電式電池を破棄するとき以外は、商品を分解しないでください。取り外す前に電池を使い切ってください。充電式電池を処分するときには、保護アイテム(手袋、安全ゴーグルなど)をご使用いただき、電池漏れが肌に接触しないようにしてください。電池のプラスとマイナスをショートさせないよう注意してください。プラスとマイナスを絶縁(テープなどで)し、ビニールの袋に入れてリサイクルボックスを設置している最寄りの協力店、または回収窓口へお持ちください。

以下図の手順で本体を分解して、充電式電池を取り外し、本体はお住いの地域の規則に従って処理してください。

警告: 製品の廃棄以外の目的では絶対に本体底部を分解しないでください。修復は不可能になり、保証対象外になります。

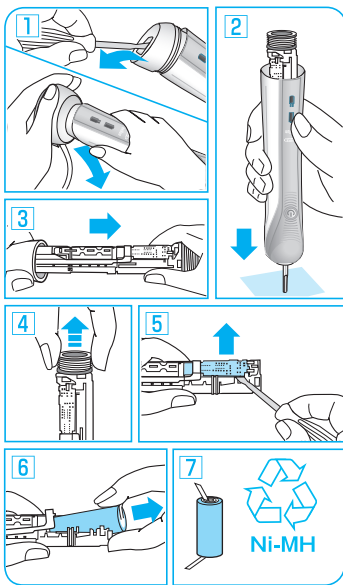

- 1 歯ブラシ本体の底部を充電器にセットし、図 1 の方向に力をいれて本体底部を開けます。お手持ちのドライバー等を使って開けることも出来ます。
- 2 硬い板の上でヘッドの金属部分を下にして、本体を押し付けてください。内部部品が本体底部から出てきます。
- 3 モーターと電池が組み込まれた内部部品を引き出します。
- 4 ワイヤー付きのプラスチック部品を電池全体が見えるまで引き出します。
- 5 お手持ちのドライバー等で端子部分を折るなどして回路基板を持ち上げてください。
- 6 電池を取り出す際はプラス・マイナス端子をショートさせないよう充分ご注意ください。
- 7 取り外した使用済み電池は、リサイクルボックスを設置している最寄りの協力店、または特定の回収窓口へお持ちください。

製品を廃棄するときのお願い



充電式電池リサイクルにご協力を



警告










●製品を廃棄するとき以外は絶対に分解しない。
火災・感電・けがの原因になります。

この製品にはニッケル水素電池を使用しております。ニッケル水素はリサイクル可能な貴重な資源です。ご使用済みの製品を廃棄する際は、必ず電源プラグをコンセントから抜き、スイッチオン状態にて製品が動作しなくなるまで完全に放電させた後、製品の取扱説明書に従って充電式電池を外してください。取り出した廃棄電池はプラス・マイナス端子をショートさせないよう十分注意し、小形二次電池リサイクル協力店にお持ちください。

最寄りのリサイクル協力店について

詳細は、一般社団法人JBRCのホームページをご参照ください。

<http://www.jbrc.com>

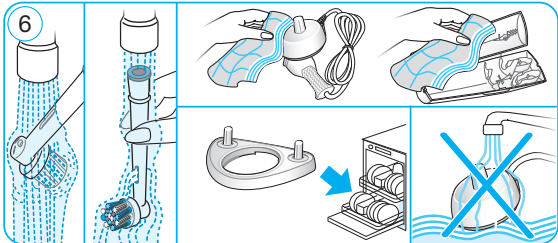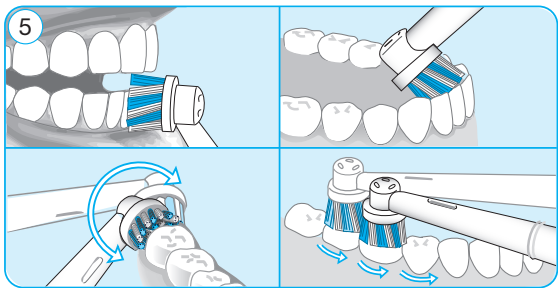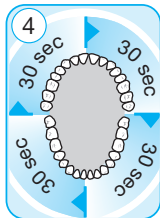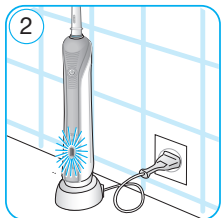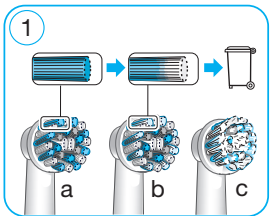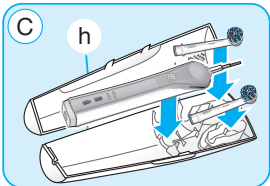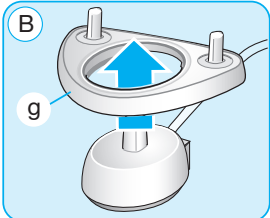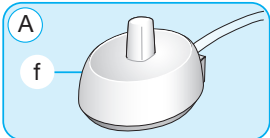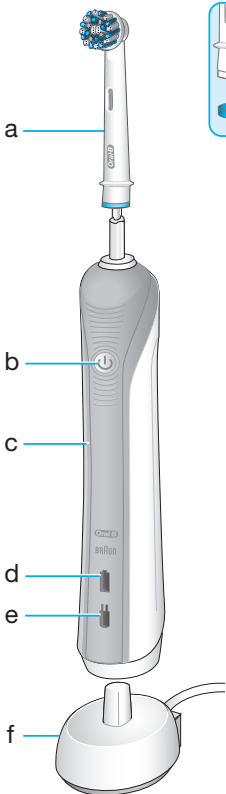

Welcome to Oral-B!

Before operating this toothbrush, please read these instructions and save this manual for future reference.

IMPORTANT

- Periodically check the entire product/cord/accessories for damage. A damaged or non-functioning unit should no longer be used. If the product/cord/accessories is damaged, take it to an Oral-B Service Centre. Do not modify or repair the product. This may cause fire, electric shock or injury.
- Never insert any object into any opening of the appliance.
- Usage by children under age 3 is not recommended. Toothbrushes can be used by children and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and maintenance shall not be performed by children without supervision.
- Children shall not play with the appliance.
- Use this product only for its intended use as described in this manual. Do not use attachments which are not recommended by the manufacturer.
- For tooth brushing only. Do not chew or bite on brush. Do not use as a toy or without adult supervision.
- Only use charger provided with your appliance.

WARNING

- Do not place the charger/charging stand, power supply or charging travel case in water or liquid or store where it can fall or be pulled into a tub or sink. Do not reach for it when fallen into water. Unplug immediately.
- This appliance contains batteries that are non-replaceable. Appliance has no user serviceable parts. Do not open and disassemble device except when disposing of the battery. Use handling and disposal instructions of the battery/device as described in this manual.
- When unplugging, always pull the power plug instead of the cord. Do not touch the power plug with wet hands. This can cause an electric shock.
- If you are undergoing treatment for any oral care condition, consult your dental professional prior to use.
- This toothbrush is a personal care device and is not intended for use on multiple patients in a dental practice or institution.
- Small parts may come off, keep out of reach of children.

To avoid brush head breakage which may generate a small parts choking hazard or damage teeth:

- Prior to each use, ensure the brush head fits well. Discontinue use of the toothbrush, if brush head no longer fits properly. Never use without a brush head.
- If the toothbrush handle is dropped, the brush head should be replaced before the next use even if no damage is visible.
- Replace brush head every 3 months or sooner if brush head becomes worn.
- Clean brush head properly after each use (see «Cleaning recommendations» paragraph). Proper cleaning ensures the safe use and functional life of the toothbrush.

Description

- a Brush head
- b On/off button (mode selection)
- c Handle
- d Charge indicator light
- e Low charge indicator light
- f Charger

Accessories (depending on model):

- g Brush head holder
- h Travel case (design may vary)

Note: Content may vary based on the model purchased.

Specifications

For voltage specifications refer to the bottom of the charging unit.
Noise level: ≤ 65 dB (A)

Charging and Operating

Your toothbrush has a waterproof handle, is electrically safe and designed for use in the bathroom.

- Plug the charger (f) or the assembled charging unit (g) into an electrical outlet and place the toothbrush handle (c) on the charger.
- The green charge indicator light (d) flashes while the handle is being charged. Once it is fully charged, the light turns off. A full charge typically takes 22 hours and enables up to 10 days of regular brushing (twice a day, 2 minutes) (picture 2). Note: After deep discharge, the green light might not flash immediately; it can take up to 10–15 minutes.

- If the rechargeable battery is low the red charge indicator light (e) is flashing for some seconds when turning your toothbrush on/off.
- For everyday use, the toothbrush handle can be stored on the charger to maintain it at full power. Overcharging is impossible.
- To maintain the maximum capacity of the rechargeable battery, unplug the charging unit and fully discharge the handle with regular use at least every 6 months.

Using your toothbrush

Brushing technique

- Wet brush head and apply any kind of toothpaste. To avoid splashing, guide the brush head to your teeth before switching on the appliance (picture 3).
- When brushing your teeth with one of the Oral-B oscillating-rotating brush heads guide the brush head slowly from tooth to tooth, spending a few seconds on each tooth surface.
- With any brush head start brushing the outsides, then the insides and finally the chewing surfaces. Brush all four quadrants of your mouth equally. Do not press too hard, simply let the brush do all the work (picture 4). You may also consult your dentist or dental hygienist about the right technique for you.
- In the first days of using any electric toothbrush, your gums may bleed slightly. In general, bleeding should stop after a few days. Should it persist after 2 weeks, please consult your dentist or dental hygienist.
- If you have sensitive teeth/gums, Oral-B recommends using the «Sensitive» mode (depending on model) (optional in combination with an Oral-B «Sensitive Clean» brush head).

Brushing modes (depending on model)

- «Daily Clean» – Standard mode for daily mouth cleaning
- «Sensitive» – Gentle, yet thorough cleaning for sensitive areas
- «Whitening» – Exceptional polishing for occasional or everyday use

How to switch between modes:

Your toothbrush automatically starts in the «Daily Clean» mode. To switch to other modes, successively press the on/off button. Switch off the toothbrush by holding the on/off button until the motor stops.

Pressure Sensor

To promote optimal brushing your toothbrush has a pressure control feature installed. If too much pressure is applied, the movement of the brush head will continue but its pulsation will stop. In addition, you will also hear a different sound while brushing.

Professional Timer

A short stuttering sound at 30-second intervals reminds you to brush all four quadrants of your mouth equally (picture 4). A long stuttering sound indicates the end of the professionally recommended 2-minute brushing time. If the toothbrush is turned off during brushing, the reached brushing time will be memorised for 30 seconds. When pausing longer than 30 seconds the timer resets.


Brush heads

Oral-B offers you a variety of different Oral-B brush heads that fit your Oral-B toothbrush handle.



Oral-B CrossAction brush head

Our most advanced brush head. Angled bristles for a precise clean. Lifts and powers away plaque.



Oral-B Sensitive Clean brush head

features a combination of regular bristles to clean teeth surfaces and ultrathin bristles for a gentle brushing experience on the gumline.



Oral-B Precision Clean brush head

cups each tooth with a curved bristle trim and reaches deep between teeth at the same time.



Oral-B FlossAction brush head

features micropulse bristles that allow for an outstanding plaque removal in the interdental areas.



Oral-B 3D White brush head

features a special polishing cup to naturally whiten your teeth. Please note that children under 12 years old should not use the Oral-B «3D White» brush head.

Most Oral-B brush heads feature INDICATOR® bristles to help you monitor brush head replacement need. With thorough brushing, twice a day for two minutes, the colour will fade approximately within 3 months, indicating the need to exchange your brush head. If the bristles splay before the colour recedes, you may exert too much pressure on teeth and gums (picture 1).

We do not recommend using the Oral-B «FlossAction» or Oral-B «3D White» brush head with braces. You may use the Oral-B «Ortho» brush head, specifically designed to clean around braces and wires.

Cleaning recommendations

After brushing, rinse your brush head under running water with the handle switched on. Switch off and remove the brush head. Clean handle and brush head separately; wipe them dry before reassembling. Unplug the charger before cleaning. Brush head holder (g) is dishwasher-safe. Charger (f) and travel case (h) should be cleaned with a damp cloth only (picture 6). Store the clean and dry toothbrush/brush heads in the travel case.

Subject to change without notice.

Environmental Notice







Product contains batteries and/or recyclable electric waste. For environment protection do not dispose in household waste, but for recycling take to electric waste collection points provided in your country.



Battery removal at the end of the product's useful life

Do not disassemble the product except when disposing of the battery. Run down battery before removing. When taking out the battery for disposal, use protective clothing (gloves, safety glasses, etc.) to omit skin contact whilst leaking batteries.

Use caution not to short the positive (+) and negative (-) terminals. Insulate terminals (e.g. with tape) and put the battery in a plastic bag for disposal.

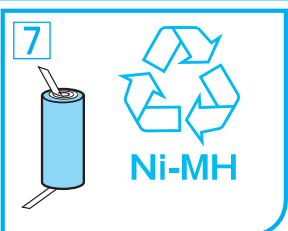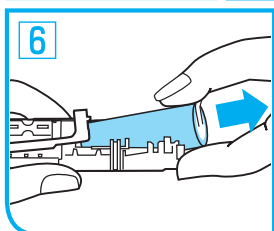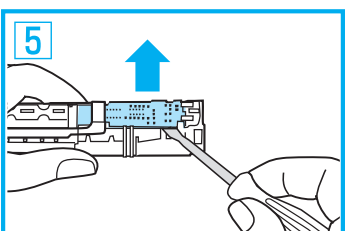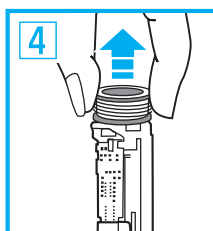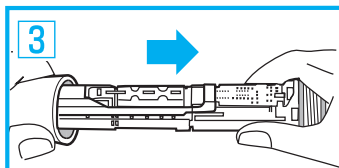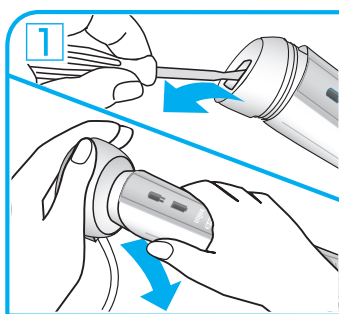

Open the handle as shown, remove the battery and dispose of it according to local environmental regulations.

Caution! Opening the handle will destroy the appliance and invalidate the guarantee.

Guarantee

We grant 1 year guarantee on the product commencing on the date of purchase. Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose. Depending on availability replacement of a unit might result in a different colour or an equivalent model.

This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor. This guarantee does not cover: damage due to improper use, normal wear or use, especially regarding the brush heads, as well as defects that have a negligible effect on the value or operation of the appliance. The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun/Oral-B parts are not used.

To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Braun Oral-B Service Centre.

Warranty replacement brush heads

Oral-B warranty will be voided if electric rechargeable handle damage is found to be attributed to the use of non-Oral-B replacement brush heads. Oral-B does not recommend the use of non-Oral-B replacement brush heads.

- Oral-B has no control over the quality of non-Oral-B replacement brush heads. Therefore, we cannot ensure the cleaning performance of non-Oral-B replacement brush heads, as communicated with the electric rechargeable handle at time of initial purchase.
- Oral-B cannot ensure a good fit of non-Oral-B replacement brush heads.
- Oral-B cannot predict the long-term effect of non-Oral-B replacement brush heads on handle wear.
- All Oral-B replacement brush heads carry the Oral-B logo and meet Oral-B's high quality standards. Oral-B does not sell replacement brush heads or handle parts under any other brand name.

無料修理規定

- 1. 取扱説明書、本体添付ラベル等の注意書に従った使用状態で、保証期間内に故障した場合には、無料にて修理をさせていただきます。
- 2. 保証期間内に無料修理をお受けになる場合には、製品と保証書をご持参、ご提示のうえ、お買い上げ販売店またはブラウンリペアセンターにお申し付けください。
- 3. ご転居の場合は、事前にお近くの販売店、またはブラウンリペアセンターにご相談ください。
- 4. ご贈答などで、本保証書に記入してあるお買い上げ販売店に修理がご依頼できない場合には、ブラウンリペアセンターにご相談ください。
- 5. 保証期間内でも次の場合は有料修理になります。
 - 使用上の誤り及び不当な修理や改造による故障ならびに損傷。
 - お買い上げ後の移動、輸送、落下等による故障ならびに損傷。
 - 火災、地震、水害、落雷、その他の天災地変、異常電圧、指定外の使用電源（電圧や周波数）等による故障ならびに損傷。
 - 一般家庭以外（業務用等での長時間利用等）に使用された場合の故障ならびに損傷。
 - 保証書の提示がない場合。
 - 保証書にお買い上げの年月日、お客様名、販売店名の記入または販売店から発行される同等の証明書のない場合、あるいは字句を書き換えられた場合。
 - 消耗品の磨耗や損傷。
 - 当社が認可していない店舗等で修理を行った場合。
 - 当社正規品以外の付属品を使用した場合。
- 6. 保証書は再発行いたしませんので紛失しないよう大切に保管してください。

修理メモ

※この保証書は、本書に明示した期間、条件のもとにおいて無料修理をお約束するものです。従ってこの保証書によって、保証を発行している者（保証責任者）、およびそれ以外の事業者に対するお客様の法律上の権利を制限するものではありません。保証期間経過後の修理について不明の場合は、お買い上げの販売店またはブラウンリペアセンターにお問い合わせください。

オーラルB PROシリーズ 保証書

持込修理

本書は、無料修理規定の内容で無料修理を行うことをお約束するものです。お買い上げの日から下記期間中に故障が発生した場合は本書をご提示のうえ、お買い上げの販売店に修理をご依頼ください。お客様にご記入いただいた保証書の記載内容は、保証期間内のサービス活動及びその後の安全点検活動のために利用させていただく場合がございますので、ご了承ください。

品 名	電動歯ブラシ	型 番	D16.513.UX D16.523.1UAW
保 証 内 容	対 象 部 分	期 間 (お買い上げの日より)	
	本体／充電器 (但し替えブラシは除く)	1 年	
お買い上げ日	年 月 日		
お客様ご芳名			
ご 住 所			
販売店・住所			

(販売店名及びお買い上げ日の記入なきものは無効です。)

P&Gジャパン合同会社

〒651-0088 神戸市中央区小野柄通7-1-18

BRAUN
D16.513.UX
D16.523.1UAW