


## Wireless Neckband Speaker

## Enceinte sans fil portable

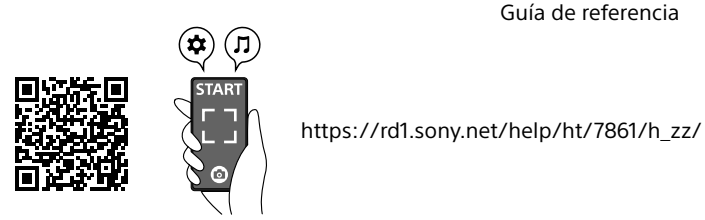

https://rd1.sony.net/help/ht/7861/h\_zz/

BRAVIA Theatre U

Model, Modèle: YY7861E

©2024 Sony Corporation  
Printed in China / Imprimé en Chine  
https://www.sony.net/



\* 5 0 5 6 1 9 8 1 3 \* (1)

English

Wireless Neckband Speaker

Model: YY7861E

The term "product" in this document refers to the unit or its accessories.

**FOR UNITED STATES CUSTOMERS. NOT APPLICABLE IN CANADA, INCLUDING IN THE PROVINCE OF QUEBEC.**  
**POUR LES CLIENTS DES ÉTATS-UNIS. NE S'APPLIQUE PAS AU CANADA, Y COMPRIS DANS LA PROVINCE DE QUÉBEC.**  
**PARA CLIENTES DE ESTADOS UNIDOS. NO VÁLIDO EN CANADÁ, INCLUIDA LA PROVINCIA DE QUEBEC.**

### Owner's Record

Record the model and serial numbers in the spaces provided below and store them safely. Refer to them whenever you call your Sony dealer regarding this product.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

The model and serial numbers to be recorded are located in the following places.

- Model No.: the bottom of the unit
- Serial No.: behind the USB cap

The nameplate and important information concerning safety are attached in the following locations:

- the bottom of the unit

Do not expose the batteries (battery pack or batteries installed) to excessive heat, such as sunshine, fire or the like, for a long time.  
Do not subject the batteries to extreme low temperature conditions that may result in overheating and thermal runaway.  
Do not dismantle, open, or shred secondary batteries.  
In the event of a secondary battery leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.  
Secondary batteries need to be charged before use. Always refer to the manufacturer's instructions or product manual for proper charging instructions.  
After extended periods of storage, it may be necessary to charge and discharge the secondary batteries several times to obtain maximum performance.  
Dispose of properly.

Do not install the product in a confined space, such as a bookcase or built-in cabinet.

**For customers in the U.S.A. and Canada**  
**Pour les clients aux États-Unis et au Canada**  
**Para clientes en EE. UU. y Canadá**

DISPOSAL OF RECHARGEABLE BATTERIES  
You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.  
For more information regarding recycling of rechargeable batteries, visit [www.sony.com/ecotrade](http://www.sony.com/ecotrade)  
Caution: Do not handle damaged or leaking rechargeable batteries.

This unit complies with FCC/ISED radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the ISED radio frequency (RF) Exposure rules as this unit has very low levels of RF energy.

**IMPORTANT**  
The voice guidance for this unit is only available in English.  
The voice guidance can be heard from the unit in the following situations:

- When the remaining battery level is low and recharge is recommended: "Low battery"
- When automatically turning off due to low battery: "Battery is empty"
- When checking the remaining battery level by pressing the POWER button while the unit turns on: "Battery fully charged" / "Battery about 80%" / "Battery about 60%" / "Battery about 40%" / "Battery about 20%"
- When entering pairing mode: "Pairing"
- When operating the headset to turn on the microphone for calls: "Mic On"
- When operating the headset to turn off the microphone for calls: "Mic Off"

**FOR UNITED STATES CUSTOMERS. NOT APPLICABLE IN CANADA, INCLUDING IN THE PROVINCE OF QUEBEC.**  
**POUR LES CLIENTS DES ÉTATS-UNIS. NE S'APPLIQUE PAS AU CANADA, Y COMPRIS DANS LA PROVINCE DE QUÉBEC.**  
**PARA CLIENTES DE ESTADOS UNIDOS. NO VÁLIDO EN CANADÁ, INCLUIDA LA PROVINCIA DE QUEBEC.**

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this unit.

**NOTE:**  
This unit has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.  
However, there is no guarantee that interference will not occur in a particular installation. If this unit does cause harmful interference to radio or television reception, which can be determined by turning the unit off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the unit and receiver.
- Connect the unit into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This unit must not be co-located or operated in conjunction with any other antenna or transmitter.

**If you have any questions about this product:**

**Visit:** <https://www.sony.com/electronics/support>  
**Contact:** Sony Customer Information Service Center at 1-800-222-7669  
Supplier's Declaration of Conformity

Trade Name: SONY  
Model: YY7861E  
Responsible Party: Sony Electronics Inc.  
Address: 16535 Via Espirillo, San Diego, CA 92127 U.S.A.  
Telephone Number: 858-942-2230

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

### For customers in Canada

This unit contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This unit may not cause interference; and
- (2) This unit must accept any interference, including interference that may cause undesired operation of the unit.

If water or foreign matter enters the unit, it may result in fire or electric shock. If water or foreign matter enters the unit, stop use immediately and consult your nearest Sony dealer. In particular, be careful in the following cases.

- When using the unit near a sink or liquid container  
Be careful that the unit does not fall into a sink or container filled with water.
- When using the unit in the rain or snow, or in humid locations

This product has magnet(s) which may interfere with pacemakers, programmable shunt valves for hydrocephalus treatment, or other medical devices. Do not place this product close to persons who use such medical devices. Consult your doctor before using this product if you use any such medical device.

Never insert the USB plug when the main unit or charging cable is wet. If the USB plug is inserted while the main unit or charging cable is wet, a short circuit may occur due to liquid (tap water, seawater, soft drink, etc.) or foreign matter on the main unit or charging cable, and cause abnormal heat generation or malfunction.

High volume may adversely affect your hearing.

Do not use the unit while walking, driving, or cycling. Doing so may cause traffic accidents.

Do not use in hazardous areas unless the surrounding sound can be heard.

Note about static electricity  
If you use the unit when the air is dry, you may experience discomfort due to static electricity accumulated on your body. This is not a malfunction of the unit. You can reduce the effect by wearing clothes made of natural materials that do not easily generate static electricity.

For information on product self repair, please visit: [www.sony.com/repair-country](http://www.sony.com/repair-country)

### Licenses

- This product contains software that Sony uses under a licensing agreement with the owner of its copyright. We are obligated to announce the contents of the agreement to customers under requirement by the owner of copyright for the software. Please access the following URL and read the contents of the license.  
<https://rd1.sony.net/help/ht/sl/24/>
- The software included in this product contains copyrighted software that is licensed under the GPL/LGPL and other licenses which may require access to source code. You may find a copy of the relevant source code as required under the GPL/LGPL (and other licenses) at the following URL.  
You may obtain the source code as required by the GPL/LGPL on a physical medium from us for a period of three years after our last shipment of this product by applying through the form at the following URL.  
This offer is valid to anyone in receipt of this information.  
<https://oss.sony.net/Products/Linux/>  
Please note that Sony cannot answer or respond to any inquiries regarding the content of this source code.
- Dolby, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation.
- Services offered by third parties may be changed, suspended, or terminated without prior notice. Sony does not bear any responsibility in these sorts of situations.

## Notes on water resistant feature (Read before using the unit)

The supplied accessories are not water resistant.

### On water resistant performance of the unit

With the cap securely closed, this unit has a water resistant performance equivalent to IPX4, which is a "protection against ingress of water" rating defined by IEC 60529 "Degrees of protection provided by enclosures (IP Code)" for electrical equipment.


Note that malfunctions as a result of water immersion or dust intrusion caused by misuse by the customer are not covered by the warranty.

### To maintain water resistant performance

Carefully note the precautions below to ensure proper use of the unit.

- This unit does not have a design that is resistant to water pressure. Do not put the unit in the water or directly under the water gushing out of the faucet to avoid a malfunction.
- Do not pour high-temperature water or blow hot air from a hair dryer or any other appliance on the unit directly. Also never use the unit in a place subject to high temperatures, such as in a sauna or near a heat source.

**CAUTION** : Handle the cap with care. The cap plays a very important role in maintenance of the water resistant performance. When using the unit, make sure that the cap is closed completely. When closing the cap, be careful not to allow foreign objects inside. If the cap is not closed completely the water resistant performance may deteriorate and may cause a malfunction of the unit as a result of water entering the unit.

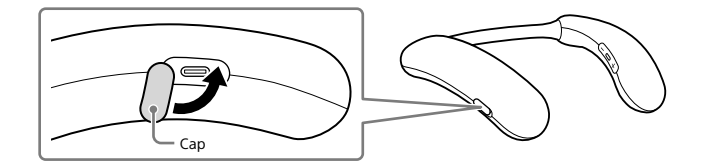

## Precautions

### On placement

- To eliminate the risk of malfunctions, avoid the following locations when placing or leaving this unit.
  - A place subject to high temperatures, such as under direct sunlight or lighting equipment, near a heat source, or in a sauna
  - Inside a vehicle with the windows closed (especially in summertime)
  - A place where cosmetics, such as a sunscreen, as well as chemical products, such as a bug spray, are stored
- Place this unit on a flat, level surface. When placed on a sloped surface, the unit may fall over or fall off the surface due to its own vibration, resulting in injuries, malfunctions, or performance degradation.
- This unit is not anti-magnetic. Keep objects susceptible to magnetism (recorded tapes, watches, cash cards and credit cards with magnetic coding, etc.) away from the unit. When you carry around the unit, keep this in mind as well.

### How to care for the unit

You can use the unit more comfortably and for a longer period of time by following the maintenance procedure below.

- Keep the unit from being exposed to chemical ingredients of a product, such as a bug spray or a tanning oil. When the unit is soiled on the surface, remove the soil by gently dabbing at it with a dry, soft cloth or a well-wrung cloth dipped in tap or lukewarm water before the surface is stained with the soil. Depending on the type of soils, however, this may fail to remove the soil.

**Note**

- If the surface of the unit gets dirty, do not use detergent, thinner, benzine, etc. to clean the unit because it will affect the water repellent function of the unit.
- If sand grains, etc. enter the fabric or other part of the unit, remove them carefully. Never use a vacuum cleaner, etc. on the unit. It may cause damage of the speaker section or other part of the unit.

### On BLUETOOTH® communications

- Microwaves emitting from a BLUETOOTH device may affect the operation of electronic medical devices. Turn off this unit and other BLUETOOTH devices in the following locations, as it may cause an accident:
  - in hospitals, near priority seating in trains, locations where inflammable gas is present, near automatic doors, or near fire alarms.
- When charging, the unit cannot be turned on and the Bluetooth function cannot be used.

### Other notes

- Do not use or leave the unit in an extremely cold or hot environment (temperature outside the range of 5 °C - 35 °C (41 °F - 95 °F)). If the unit is used or left in outside the above range, the unit may automatically stop to protect internal circuitry.
- Even if you do not intend to use the unit for a long time, charge the battery to its full capacity once every 6 months to maintain its performance.
- Make sure to close the USB port cover securely after charging. Perspiration or water may cause damage.
- If you experience discomfort while using the unit, stop using it immediately.
- Be sure to stay awake while wearing the unit.
- If you experience a skin problem, such as itchiness, a rash, or redness, while wearing the unit, stop use of the unit. If wearing the unit seems to disagree with your skin, stop use of the unit early on and consult with your doctor or dealer.
- Wear the unit in a proper manner where you do not feel the vibrations of the unit on the sides of your neck to avoid a health issue or poor health.
- If you have any questions or problems concerning this unit that are not covered in this manual, please consult your nearest Sony dealer.

## Trademarks

- The BLUETOOTH® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony Group Corporation and its subsidiaries is under license.
- USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.
- LDAC and LDAC logo are trademarks of Sony Group Corporation or its affiliates.

All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, ™ and ® marks are not specified.

## Specifications

### Wireless Neckband Speaker (YY7861E)

#### Amplifier section

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:  
With 4 ohms loads, both channels driven, from 100 Hz - 10 000 Hz; rated 0.9 W per channel  
minimum RMS power in stereo mode, with no more than 1% total harmonic distortion from 250 mW to rated output.

#### BLUETOOTH section

Communication system  
BLUETOOTH Specification version 5.2  
Frequency band  
2.4 GHz band (2.400 0 GHz - 2.483 5 GHz)

#### General

Power  
Built-in lithium-ion rechargeable battery  
DC 5 V 1.5 A: When charged using USB  
Power consumption  
Provided that a USB AC adaptor capable of delivering an output current of 1.5 A is used for battery charging connection.  
Approx. 5 W (while charging the built-in lithium-ion battery)  
Lithium-ion battery life (with playback via a BLUETOOTH connection)  
Approx. 12 hours\*1  
– Volume level: 20  
Approx. 5 hours\*1  
– Volume level: 31 (MAX.)  
Time required for charging the built-in rechargeable battery  
Approx. 4 hours\*2  
Approx. 60 minutes of music playback (10 minutes of charging)\*1  
– Volume level: 20  
Operating temperature  
5 °C - 35 °C (41 °F - 95 °F)  
Mass (approx.)  
268 g (10 oz)  
Including battery

### Included items

Wireless Neckband Speaker (1)  
USB Type-C® cable (USB-A to USB-C® / Max. 1.5 A) (1)  
A charging cable exclusively designed for the unit. Do not use the cable for any other purposes.  
Dedicated audio cable (1)  
Dedicated audio adaptor (1)  
Documents (1 set)

### System requirements for charging battery using USB

Using a commercially-available USB AC adaptor capable of feeding in DC 5 V 1.5 A.  
Do not use a USB AC adaptor or USB port that exceeds the maximum output of 15 W (5 V, 3 A).

Design and specifications are subject to change without notice.

- \*1 The built-in battery life above is measured using our specified music source. Actual performance time may vary from the listed time due to the volume, songs played, surrounding temperature, and usage conditions.
- \*2 Time required for the empty battery to be fully charged (100%) while the unit is powered off.

### Français

### Enceinte sans fil portable

Modèle: YY7861E

Le terme « produit » dans ce document désigne l'appareil ou ses accessoires.

La plaque signalétique et les informations importantes concernant la sécurité sont fixées aux endroits suivants :

- le bas de l'appareil

N'exposez pas les piles (bloc-batterie ou piles installées) à une chaleur excessive, telle que le soleil, un feu ou autre, pendant une longue période.  
Ne soumettez pas les batteries à des conditions de température extrêmement basses qui pourraient entraîner une surchauffe et un emballement thermique.  
Ne démontez pas, n'ouvrez pas et ne détruisez pas les batteries rechargeables.  
En cas de fuite d'une batterie rechargeable, ne laissez pas le liquide entrer en contact avec la peau ou les yeux. Si un contact a été établi, lavez la zone touchée avec de grandes quantités d'eau et consultez un médecin.  
Les batteries rechargeables doivent être chargées avant d'être utilisées. Reportez-vous toujours aux instructions du fabricant ou au manuel du produit pour obtenir des instructions de chargement pertinentes.  
Après de longues périodes de stockage, il peut être nécessaire de charger et de décharger les batteries rechargeables plusieurs fois pour obtenir une performance maximale.  
Mettez au rebut correctement.

N'installez pas le produit dans un espace clos, comme une bibliothèque ou une armoire encastrée.

#### Pour les clients aux États-Unis et au Canada

MISE AU REBUT DES ACCUMULATEURS RECHARGEABLES  
Vous pouvez aider à préserver l'environnement en rapportant les accumulateurs usagées dans un point de collection et recyclage le plus proche de chez vous.  
Pour plus d'informations sur le recyclage des accumulateurs, visitez [www.sony.com/ecotrade](http://www.sony.com/ecotrade)  
Avertissement: Ne pas utiliser des accumulateurs rechargeables qui sont endommagés ou qui fuient.

Cet appareil est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles les radioélectriques (RF) de la FCC lignes directrices d'exposition et d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'ISDE puisque cet appareil a un niveau tres bas d'énergie RF.

#### IMPORTANT

Le guidage vocal pour cet appareil est uniquement disponible en anglais.  
Le guidage vocal peut se faire entendre en provenance de l'appareil dans les situations suivantes :  
• Lorsque le niveau restant de la batterie est faible et qu'une recharge est recommandée : « Low battery » (Batterie faible)  
• Lors de la mise en arrêt automatique en raison de la batterie faible : « Battery is empty » (La batterie est vide)  
• Lors de la vérification du niveau restant de la batterie en appuyant sur le bouton d'alimentation pendant que l'appareil se met en marche : « Battery fully charged » / « Battery about 80% » / « Battery about 60% » / « Battery about 40% » / « Battery about 20% » (Batterie entièrement chargée / Batterie environ 80% / Batterie environ 60% / Batterie environ 40% / Batterie environ 20%)  
• Lorsque l'appareil passe en mode de jumelage : « Pairing » (Jumelage)  
• Quand vous utilisez le casque d'écoute pour activer le microphone pour les appels : « Mic On » (Micro actif)  
• Quand vous utilisez le casque d'écoute pour désactiver le microphone pour les appels : « Mic Off » (Micro désactivé)

#### Pour les clients au Canada

L'émetteur/récepteur exempt de licence contenu dans la présente unité est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux deux conditions suivantes :  
1) l'unité ne doit pas produire de brouillage ;  
2) l'utilisateur de l'unité doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

Si de l'eau ou des corps étrangers pénètrent dans l'appareil, cela pourrait provoquer un incendie ou un choc électrique. Si de l'eau ou un corps étranger pénètre dans l'appareil, cessez immédiatement de l'utiliser, puis consultez votre revendeur Sony le plus proche. En particulier, faites attention dans les cas suivants :

- Lors de l'utilisation à côté d'un évier ou d'un récipient de liquide  
Veillez à ce que l'appareil ne tombe pas dans un évier ou un récipient rempli d'eau.
- Lors de l'utilisation sous la pluie, la neige ou dans des lieux humides

Ce produit est doté d'un ou plusieurs aimants qui peuvent interférer avec le fonctionnement des stimulateurs cardiaques, robinets de dérivation programmables pour traitement d'hydrocéphalie ou autres appareils médicaux. Ne placez pas ce produit près des personnes qui utilisent de tels appareils médicaux. Consultez votre médecin avant d'utiliser ce produit si vous utilisez de tels appareils médicaux.

N'insérez jamais la fiche USB lorsque l'appareil principal ou le câble de charge est humide. Si vous insérez la fiche USB quand l'appareil principal ou le câble de charge est humide, vous risquez de provoquer un court-circuit à cause du liquide (eau du robinet, eau de mer, soda, etc.) ou de la présence d'un corps étranger sur l'appareil principal ou le câble de charge, ce qui génère une chaleur anormale ou un dysfonctionnement.

Un volume élevé peut nuire à votre audition.

N'utilisez pas l'appareil lorsque vous marchez, conduisez ou faites du vélo. Cela pourrait provoquer des accidents de la circulation.

N'utilisez pas l'appareil dans des zones dangereuses à moins que les bruits environnants puissent être entendus.

Remarque concernant l'électricité statique  
Si vous utilisez l'appareil lorsque l'air est sec, vous pouvez ressentir une gêne due à l'électricité statique accumulée sur votre corps. Il ne s'agit pas d'un dysfonctionnement de l'appareil. Vous pouvez réduire cet effet en portant des vêtements en matériaux naturels qui ne génèrent pas facilement d'électricité statique.

Pour plus d'informations sur l'auto-réparation du produit, veuillez visiter: [www.sony.com/repair-country](http://www.sony.com/repair-country)

#### Licences

- Ce produit contient des logiciels utilisés par Sony dans le cadre d'un contrat de licence conclu avec le propriétaire de ses droits d'auteur. Nous sommes tenu d'annoncer le contenu du contrat aux clients, conformément à l'accord passé avec le propriétaire des droits d'auteur du logiciel. Veuillez cliquer sur le lien et lire le contenu de la licence.  
<https://rd1.sony.net/help/ht/sl/24/>
- Le logiciel inclus dans ce produit contient un logiciel protégé par le droit d'auteur et couvert par une licence GPL/LGPL et d'autres licences qui peuvent nécessiter un accès au code source. Conformément à la GPL/LGPL, vous trouverez une copie du code source correspondant (et d'autres licences) à l'adresse suivante.  
Conformément à la GPL/LGPL, vous pouvez obtenir le code source sur un support physique, pendant une période de trois ans suivant la sortie de la dernière version de ce produit, en formulant votre demande à l'adresse suivante.  
Cette offre est valable pour toute personne recevant ces informations.  
<https://oss.sony.net/Products/Linux/>  
Veuillez noter que Sony ne peut pas répondre aux demandes de renseignements portant sur le contenu du code source.
- Dolby, Dolby Atmos et le symbole double-D sont des marques déposées de Dolby Laboratories Licensing Corporation.
- Les services proposés par des tiers peuvent être modifiés, suspendus ou clôturés sans avis préalable. Sony n'assume aucune responsabilité dans ce genre de situation.

## Remarques sur la résistance à l'eau (A lire avant d'utiliser l'appareil)

Les accessoires fournis ne sont pas résistants à l'eau.

### Performances relatives à la résistance à l'eau de l'appareil

Avec le capuchon fermé correctement, cet appareil possède une performance de résistance à l'eau égale à IPX4 qui est un indice de « protection contre la pénétration d'eau » défini par la norme IEC 60529 « Degré de protection fourni par des boîtiers (code IP) » des équipements électriques.


N'oubliez pas que la garantie ne couvre pas les défaillances consécutives à l'immersion dans l'eau ou l'intrusion de poussières provenant d'un mauvais emploi par l'utilisateur.

### Pour préserver les performances de résistance à l'eau

Veillez observer les précautions ci-dessous pour assurer une utilisation correcte de l'appareil.

- De par sa conception, cet appareil ne résiste pas à la pression de l'eau. Ne mettez pas l'appareil dans l'eau ou directement sous l'eau du robinet pour éviter tout dysfonctionnement.
- Ni versez pas d'eau très chaude et ne soufflez pas de l'air chaud provenant d'un sèche-cheveux ou d'un autre appareil, directement sur l'appareil. En outre, n'utilisez jamais l'appareil dans un endroit soumis à des températures élevées, tel qu'à proximité d'une source de chaleur ou dans un sauna.

**⚠ MISE EN GARDE** : Manipulez le capuchon avec soin. Le capuchon joue un rôle très important pour préserver la résistance à l'eau. Lorsque vous utilisez l'appareil, assurez-vous que le capuchon est complètement fermé. Quand vous fermez le capuchon, veillez à ne laisser aucun corps étranger pénétrer à l'intérieur. Si le capuchon n'est pas complètement fermé, la résistance à l'eau risque de se détériorer et de provoquer une défaillance de l'appareil en raison de la pénétration de l'eau à l'intérieur de celui-ci.

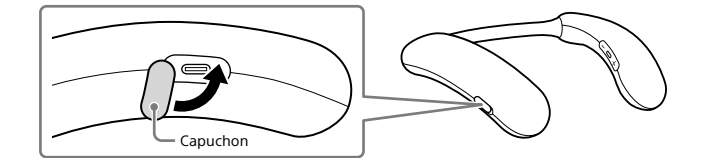

## Précautions

### Rangement

- Pour éviter tout risque de dysfonctionnement, évitez les emplacements ci-dessous lors du placement ou du rangement de cet appareil :
  - un endroit soumis à des températures élevées, tel que sous la lumière directe du soleil, sous un dispositif d'éclairage, à proximité d'une source de chaleur ou dans un sauna ;
  - à l'intérieur d'un véhicule dont les vitres sont fermées (surtout en été) ;
  - un endroit où sont stockés des produits cosmétiques, tels qu'une crème solaire, ainsi que des produits chimiques, tels qu'un insecticide.
- Placez cet appareil sur une surface plane et de niveau. Lorsqu'il est placé sur une surface inclinée, l'appareil peut se renverser ou tomber de la surface en raison de ses propres vibrations, entraînant des blessures, des dysfonctionnements ou une dégradation des performances.
- Cet appareil n'est pas antimagnétique. Veuillez éloigner les objets sensibles à un rayonnement magnétique (cassettes enregistrées, montres, cartes de paiement, cartes de crédit avec codage magnétique, etc.) de l'appareil. N'oubliez pas ces recommandations lorsque vous transportez l'appareil.

### Comment prendre soin de l'appareil

Vous pourrez utiliser l'appareil plus confortablement et plus longtemps si vous suivez la procédure d'entretien ci-dessous.

- Évitez que l'appareil ne soit exposé aux ingrédients chimiques d'un produit, comme un insecticide ou une huile de bronzage. Lorsque la surface de l'appareil est sale, retirez la saleté en tamponnant doucement avec un chiffon sec et doux ou un chiffon bien essoré trempé dans l'eau du robinet ou dans l'eau tiède avant que la surface ne soit tachée par la saleté. Toutefois, selon le type de saleté, cette méthode peut ne pas réussir à l'éliminer.

#### Remarque

- Si la surface de l'appareil est sale, n'utilisez pas de détergent, diluant, benzène, etc. pour nettoyer l'appareil, sous peine d'affecter la fonction qui repousse l'eau de l'appareil.
- Si des grains de sable, etc. pénètrent dans la partie en tissu ou toute autre partie de l'appareil, enlevez-les avec soin. N'utilisez jamais un aspirateur, etc. sur l'appareil. Cela pourrait endommager le haut-parleur ou toute autre partie de l'appareil.

### Concernant les communications BLUETOOTH®

- Les micro-ondes émises par un périphérique BLUETOOTH risquent de perturber le fonctionnement d'appareils médicaux électroniques. Éteignez cet appareil et tout autre périphérique BLUETOOTH dans les lieux indiqués ci-dessous car leur fonctionnement risque de provoquer un accident :
  - Dans les hôpitaux, à proximité des sièges réservés aux personnes handicapées dans les trains, dans les lieux où un gaz inflammable est présent, à proximité des portes automatiques ou des alarmes incendie.
- Pendant la charge, l'appareil ne peut pas être allumé et la fonction Bluetooth ne peut pas être utilisée.

### Autres remarques

- N'utilisez ou ne laissez pas l'appareil dans un environnement extrêmement froid ou chaud (température à l'extérieur de la plage de 5 °C - 35 °C (41 °F - 95 °F)). Si l'appareil est utilisé ou laissé à une température à l'extérieur de cette plage, il pourrait s'arrêter automatiquement pour protéger le circuit interne.
- Même si vous envisagez de ne pas utiliser l'appareil pendant une période prolongée, chargez entièrement la batterie tous les 6 mois pour maintenir son niveau de performance.
- Assurez-vous de fermer correctement le capuchon du port USB après le chargement.

