

SONY.**AUTO SOURCE SELECTOR****XA-39****OPERATING INSTRUCTIONS****MODE D'EMPLOI**

English

Before making connections, please read this manual thoroughly and retain it for future reference.

The XA-39 is an auto source selector, which can select the sound source between the Sony CD player and the cassette car stereo.

HOW TO SWITCH THE SOUND SOURCE FROM THE TAPE SOUND TO THE CD SOUND

Turn on the CD player; the cassette car stereo is not turned off, but the sound source is changed to the CD sound.

FROM THE CD SOUND TO THE TAPE SOUND


Turn off the CD player, then turn on the cassette car stereo.

SPECIFICATIONS

Inputs	LINE IN 1 (CD player input) (phono jacks)
	LINE IN 2 (cassette car stereo input) (phono jacks)
Outputs	LINE OUT (phono jacks)
Dimensions	Approx. 130 × 72.5 × 40 mm (w/h/d) (5 ¹ / ₈ × 2 ⁷ / ₈ × 1 ³ / ₈ inches)
Weight	430 g (15.2 oz)
Accessories supplied	Tapping screws (4)
	Cord connector (1)

Design and specifications subject to change without notice.

CONNECTIONS

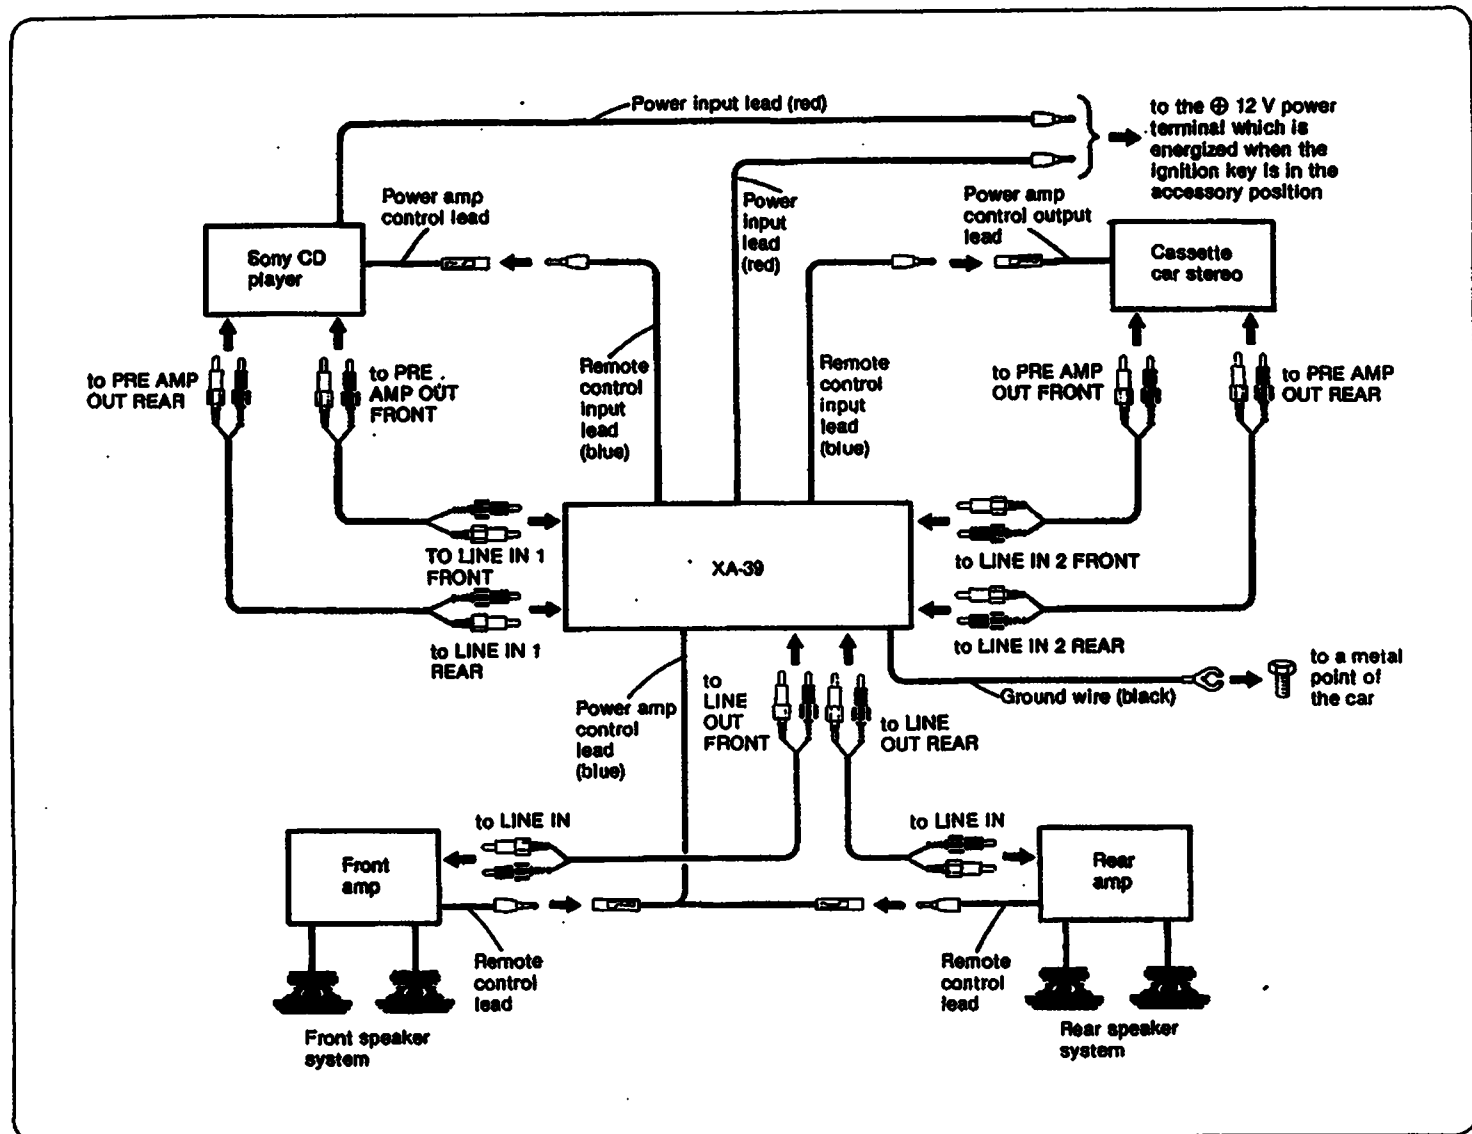


Note

- Connect the LINE OUT cords of the Sony CD player to the LINE IN 1 of the XA-39, and those of the cassette car stereo to the LINE IN 2.

- When both your cassette car stereo and your CD player have remote control input leads (gray), those leads can be connected to the remote control output leads (gray) of the XA-39. In this connection, if you turn on one unit, the other unit will be automatically turned off. But if one of the units has no remote control input lead, do not use that of the other unit.

HOW TO USE THE CORD CONNECTOR

You can connect the power input lead (red) of the XA-39 to that of the CD player using the supplied cord connector, as illustrated below.

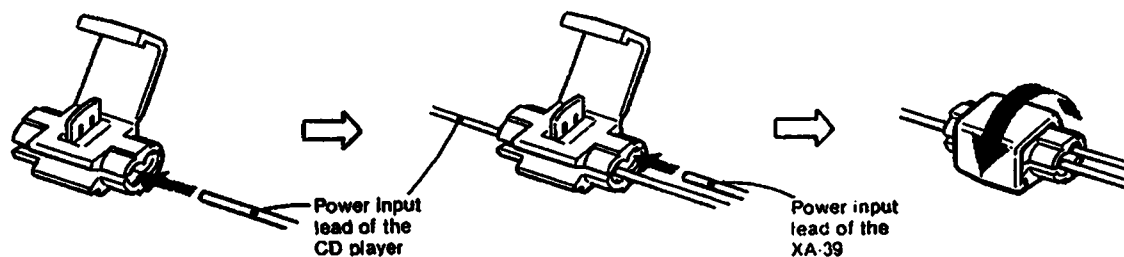

Avant de procder aux branchements, prire de lire attentivement ce mode d'emploi et le conserver  titre de rfrence ultrieure.

Le XA-39 est un slecteur de source pour automobile qui permet de choisir entre la source sonore d'un lecteur de compact disc Sony et d'une platine  cassette stro pour automobile.

COMMUTATION DE LA SOURCE SONORE

DU SON DE LA BANDE AU SON DU LECTEUR CD

Mettre le lecteur CD sous tension; la platine  cassette n'est pas mise hors tension, mais la source sonore passe au son du lecteur CD.

DU SON DU LECTEUR CD AU SON DE LA BANDE


Mettre le lecteur CD hors tension, puis mettre la platine  cassette sous tension.

SPECIFICATIONS

Entres	LINE IN 1 (entre lecteur CD) (prises coaxiales phono) LINE IN 2 (entre platine cassette) (prises coaxiales phono)
Sorties	LINE OUT (prises coaxiales phono)
Dimensions	Env. 130 x 72,5 x 40 mm (l/h/p) (5 1/8 x 2 7/8 x 1 5/8 pouces)
Poids	430 g (15,2 onces)
Accessoires fournis	Vis taraudeuses (4) Connecteur de cordon (1)

La conception et les spcifications sont sujettes  des modifications sans pravis.

BRANCHEMENTS

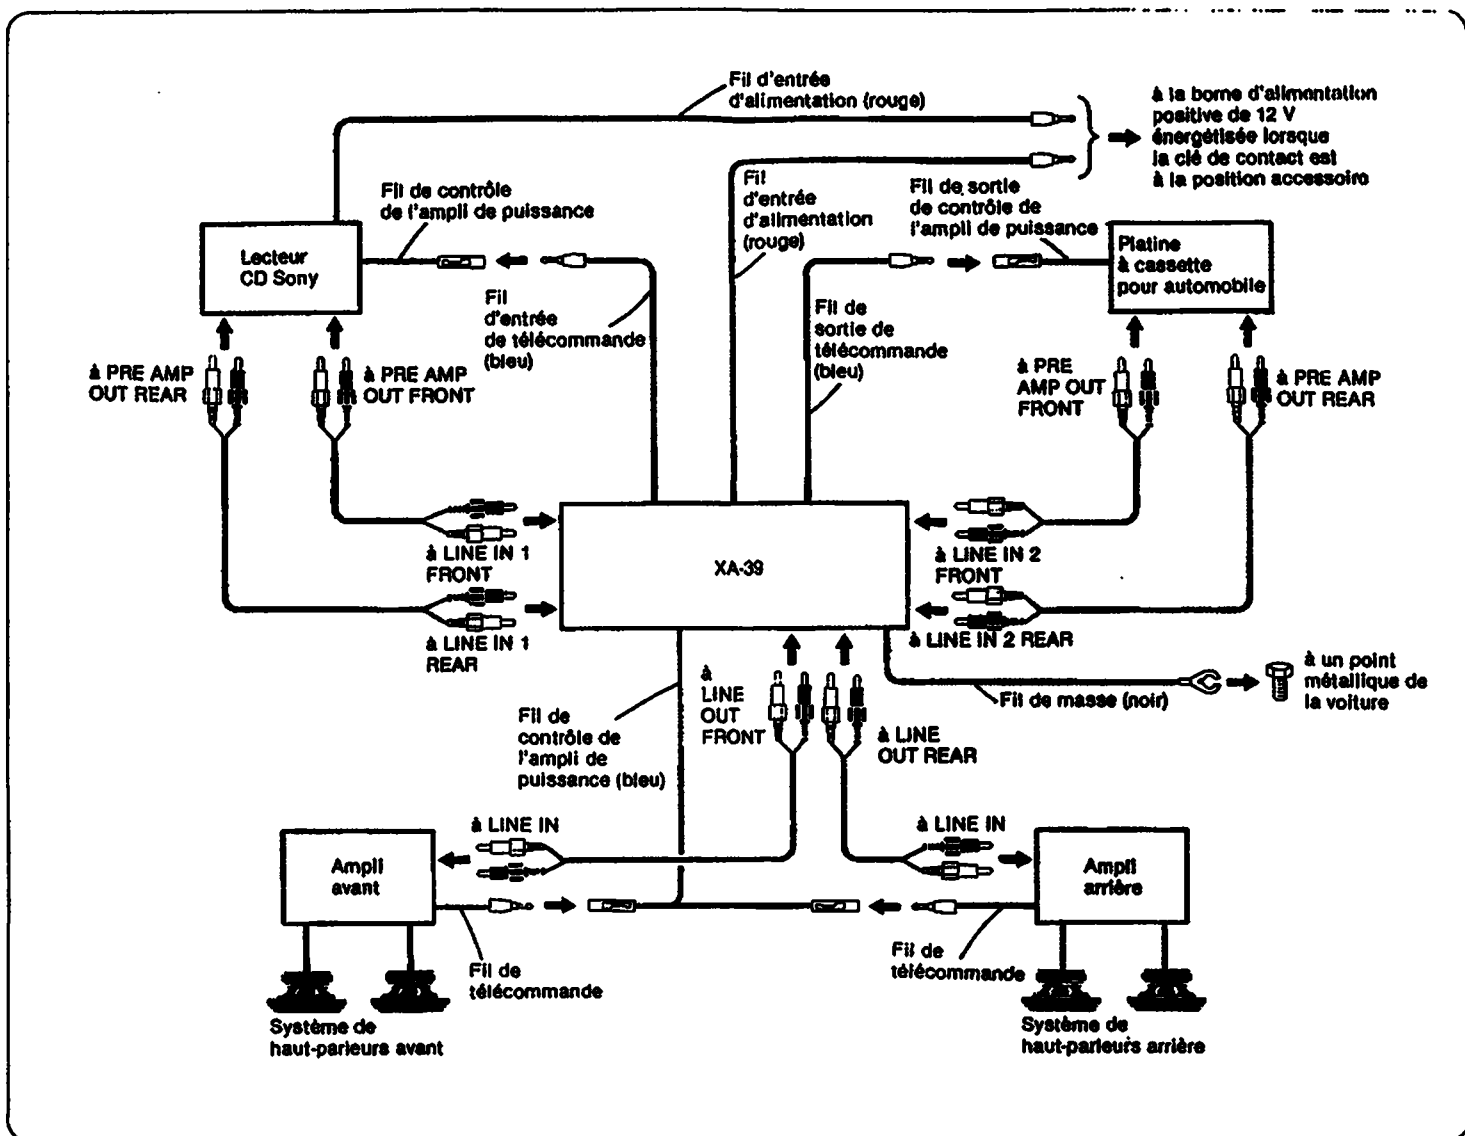

Remarques

- Brancher les cordons LINE OUT du lecteur CD Sony à LINE IN 1 du XA-39 et ceux de la platine à cassette pour automobile, à LINE IN 2.

- Si le lecteur CD et la platine à cassette sont tous deux munis de fils d'entrée de télécommande (gris), ceux-ci peuvent être connectés aux fils de sortie de télécommande (gris) du XA-39. Avec ce branchement, si l'on met un appareil sous tension, l'autre est automatiquement mis hors tension. Remarque que si l'un des appareils ne possède pas de fil d'entrée de télécommande, ne pas utiliser ceux de l'autre appareil.

UTILISATION DU CONNECTEUR

Il est possible de raccorder le fil d'entrée d'alimentation (rouge) du XA-39 à celui du lecteur CD à l'aide du connecteur fourni, comme illustré.

