AMCREST SmartHome

Quick Start Guide

1080P Detterent
Outdoor Wi-Fi Security Camera

Model: **ADC2W**



We'd Love to Hear From You!

We wanted to personally reach out and thank you for purchasing from our Amazon store. Selling on Amazon is what we do to support our family, and product reviews are the lifeblood of our business. It would mean the world to us if you could take one minute of your time to help share the love by leaving us an honest review using the link below:

www.amazon.com/ryp

Thank you again for being one of our amazing customers!

Sincerely,
Amcrest Team

How can we help?

We are dedicated to providing the highest quality support to our customers and are available 7 days a week.

Online Video Tutorial & Quick Start Guide
amcrest.com/support

Need help?
amcrest.com/contactus
1-888-212-7538

01 Setting Up the Camera

The Amcrest Smart Home app connects your Amcrest camera to your Android or iOS mobile device, ensuring you are always connected to what matters most.

To get the app, search for **"Amcrest Smart Home"** in the Google Play or App Store.

AMCREST SmartHome

Download on the App Store

GET IT ON Google Play

Note: To add the device on the **Amcrest View Pro** app you must complete setup on the **Amcrest Smart Home** app first. Then follow the link below: amcrest.com/usingviewpro

Connecting to the Smart Home app

Open the Amcrest Smart Home app and tap **"Register"** to register an account. After registering an account, log into the app and tap **"Add Device"**.

You will need to allow all notification and location permissions to allow the camera to connect to your mobile device.

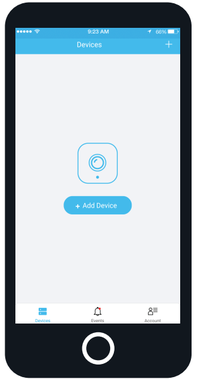

Scan the QR Code or Manually Enter the S/N

Scan the QR code located on the side of your camera.

If you are unable to scan the QR code you can manually enter the serial number by tapping **"Manually enter SN"**.



Setting Up the Camera

Locate the indicator light on the front of the camera and ensure it is blinking green. This indicates the camera is ready to be connected.

Tap **"Next"** to continue and follow the in app instructions to continue setting up your camera.

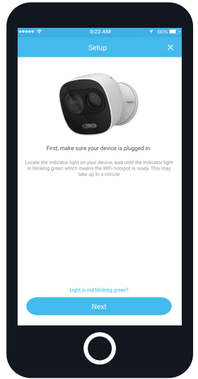

Note: Once the camera has been successfully connected, the indicator light on the front of the camera will be solid green and ready for use.

02 How to Use the Camera

Devices
Displays added devices in the app.

Events
Provides quick access to motion events and alerts.

Account
Manage account settings and information.

The main screen on the Amcrest Smart Home app will be your **Devices** menu. This menu displays all of your added devices.

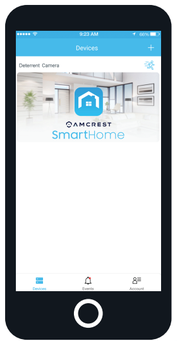

Active Deterrents

The Amcrest Deterrent camera comes equipped with security deterrents that can be activated manually or by motion. The live view menu allows you quick access to these functions so you can turn them on or off with ease.

SIREN
Tap this button to manually turn the camera's built-in siren on or off.

LIGHT
Tap this button to manually turn the light on or off.

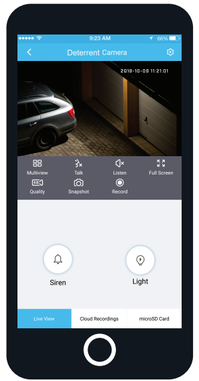

Two-Way Talk

Use the built-in microphone and speaker to listen to what matters most, anytime, anywhere.

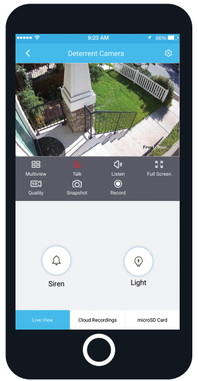

Motion Detection

Motion Detection allows you to receive alerts and automatically record anytime your camera detects motion.

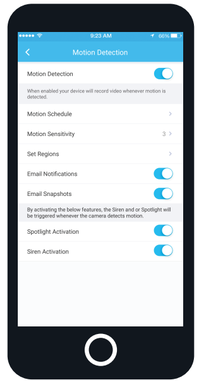

Storage Options

Use the Amcrest Smart Home premium cloud service to view, record and playback events from a secure, offsite location.

A MicroSD card can also be used to record and playback events locally.

Note:
The MicroSD card must be class 10 or higher and formatted to FAT32.

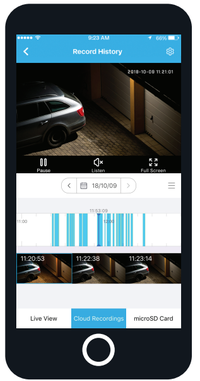

Smart Notifications

Receive Email and push notifications directly to your smartphone using the Amcrest Smart Home app.

Note:
To learn more about Smart Notifications visit:
amcrest.com/smartnotifications

