Amcrest IP4M-1046EW / IP4M-1046EB
4MP POE 4MP AI Bullet Camera
User Manual

Version 1.0.0
Revised June 16th, 2022

Contents

Welcome 3
Important Security Warning 3
Important Safeguards and Warnings 3
Features and Specifications 4
Overview 4
Features 4
Device Overview 5
Connection & Installation 5
Installation Guide 5
MicroSD Card Installation Guide 7
Basic Wiring Overview 7
Camera Access Setup 7
Default Username and Password 7
How to Setup the Camera 8
App Setup 8
Desktop Access Setup 13
Operation and Interface 15
Live 15
Playback 16
Setup 17
Camera 18
Event 34
Storage 69
Destination 72
System 76
Information 80
Alarm 81
Logout 82
Remote Web Access Setup 82
Amcrest Cloud Desktop Setup 84
Web Access Setup (AmcrestView.com) 85
FAQs/Troubleshooting 86
Glossary of Terms 87
FCC Statement 89
IC Warning Statement 89
Appendix A: Toxic or Hazardous Materials or Elements 90

Welcome

Thank you for purchasing an Amcrest camera!

This user manual is designed to be a reference tool for the installation and operation of your AI camera.
Here you can find information about the camera's features, functions, and information to aid in troubleshooting.

Many of the setup and installation sections below have corresponding videos on YouTube
To access the setup videos, please go to http://amcrest.com/videos

For access to the quick start guide and other support information, go to http://amcrest.com/support
To contact Amcrest support, please do one of the following:

Visit http://amcrest.com/contacts

Important Security Warning

To keep your Amcrest camera secure and prevent unauthorized access, please make sure to follow the steps below:



- Always make sure that your camera has the latest firmware as listed on www.amcrest.com/firmware
- Never use the default password for your camera. Always ensure that your password is at least 810 characters long and contains a combination of lowercase characters, uppercase characters as well as numbers.

Important Safeguards and Warnings

1. Electrical Safety

All installation and operation should conform to your local electrical safety codes.
The product must be grounded to reduce the risk of electric shock.
We assume no liability or responsibility for any fires or electrical shock caused by improper handling or installation.

2. Transportation Security

Heavy stress, violent vibrations, and excess moisture should not occur during transportation, storage, and installation of the device.

3. Installation

Handle the device with care. Keep the device right side up.
Do not apply power to the camera before completing installation.
Do not place objects on top of the camera.

4. Repair Professionals

All the examination and repair work should be done by qualified service engineers. We are not liable for any problems caused by unauthorized modifications or user-attempted repair.

5. **Environment**

The camera should be kept in a cool, dry place away from direct sunlight, flammable materials, explosive substances, etc.

This product should be transported, stored, and used only in the specified environments as stated above. Do not aim the camera at a strong light source, as it may cause overexposure of the picture, and may affect the longevity of the camera's sensors.

Ensure that the camera is in a well-ventilated area to prevent overheating.

6. Operation and Maintenance

Do not touch the camera sensor or lens directly.

To clean dust or dirt from the lens, use an air blower or a microfiber cloth.

7. Accessories

Be sure to use only the accessories recommended by manufacturer.

Before installation, please open the package and check to ensure that all the components are present. Contact the retailer that you purchased from, or Amcrest directly if anything is broken or missing in the package.

Features and Specifications

Overview

Amcrest provides an excellent digital surveillance product that can be useful to a wide variety of users. This camera connects uses an internet connection to allow the user to access all its features. It's easy to use and can be viewed on a computer via the built-in web user interface or on your smartphone using the Amcrest View Pro app.

This camera adopts a high-quality design to achieve high levels of reliability and security. It can be configured to work locally, as well as on a network. This camera works using a POE connection and interfaces with most networks through the Ethernet port of your router, POE injector or POE switch.

Features

This camera has the following features:

- **Network Access**

  The camera can be accessed remotely from a wide variety of internet connected devices, including PCs, Mac, iOS, and Android devices.

- **Cloud Storage Functionality**

  Amcrest offers premium cloud storage options to enable long-term storage. Amcrest Cloud also allows the user to easily locate and view recordings for playback from any internet connected computer or smartphone (iOS/Android).

- **Advanced Network Protocol Support**

  This camera is UPnP compatible, and includes functionality for use with DDNS, and other protocols to allow remote and local connection with a large variety of network hardware.

Device Overview

The image below shows the structure of the camera:

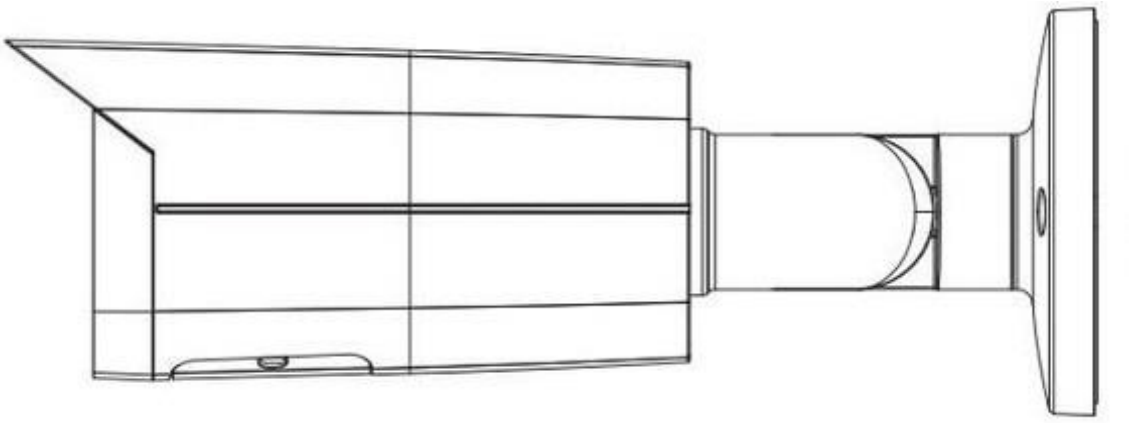

The images below show the dimensions for the camera. The measurements are in millimeters (mm):

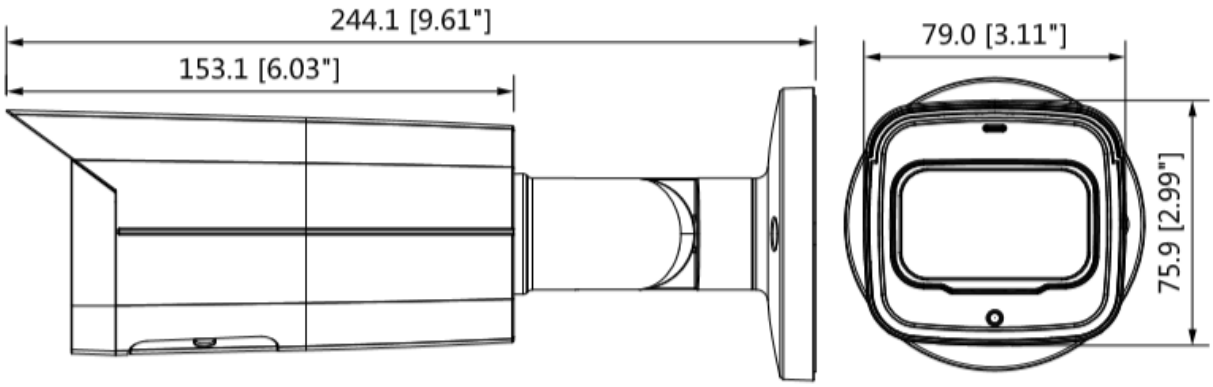

To access the reset button and to adjust the camera angle, use the included Torx/Hex wrench. The reset button and microSD card slot can be accessed by removing the 2 screws located on the security hatch on the bottom of the camera.

For reference, a Torx/Hex screwdriver tip looks like this: 

Connection & Installation

This section provides information about the connection and installation of your camera.

Installation Guide

Follow the steps and use the diagram in this section to install your camera.

Note: Prior to installation ensure that the installation environment can support at least 3 times the weight of the camera.

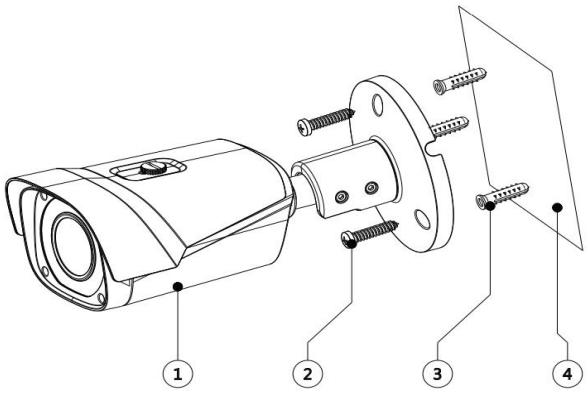

1.	**Network Camera**
2.	**Mounting Screws**
3.	**Wall Anchors**
4.	**Install Template**

Installation Guide

1. Stick the installation sticker on the installation surface.
2. Drill through the holes provided on the installation sticker. A 1” paddle bit can also be used if installing wires through an installation surface.
3. Insert the included wall anchors into the newly drilled holes.
4. Align the bottom bracket of the camera to the installation holes. Then using a Phillips head screwdriver, secure the camera to the installation surface.
5. To adjust the camera up, down, or side to side, use the included torx wrench to loosen the lock and unlock bracket bolt on the bottom bracket.
6. When adjusted, turn the lock and unlock bolt to secure the camera in place.

Note: If a junction box or pole mount is needed for the installation of your device the camera is compatible with an AMCPFA121 junction box, or a AMCPFA121 + AMCPFA152 pole mount.

Junction Mount	Pole Mount
AMCPFA121	AMCPFB121 + AMCPFA152
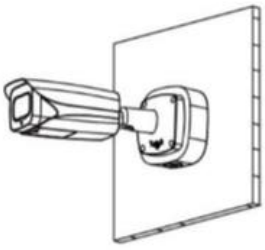	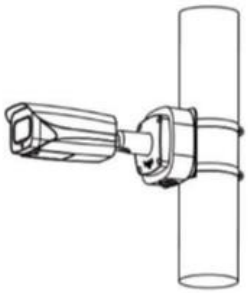

MicroSD Card Installation Guide

To Install a microSD card into your camera, please refer to the step by step guide below:

1. Remove the security hatch cover located on the bottom of the camera with the included torx wrench.
2. Locate the provided microSD card slot and insert the microSD card into the slot, (**Gold pins down)**.
3. Push the microSD card into the slot and release, the microSD card will then be locked into place and ready for use.

Basic Wiring Overview

On your device you will notice a **pre-attached wire pigtail containing 5 wiring connections**. These connections contain a power adapter connection, an Ethernet connection, audio wires (I/O), and alarm wiring. This device comes equipped with audio capabilities; the audio wiring is featured in the wire pigtail **attached to this device**. **There are no built-in speakers or microphones on this device. All audio for this device will be provided using external third-party devices such as microphones and speakers.**

Power	The camera can use a basic 12V DC power adapter as a secondary power.
Ethernet Port	This connection is used to transmit data from the router to the device via an Ethernet cable.
AUDIO IN	This connection allows for the connection of a single channel, external RCA microphone to be utilized for this device.
AUDIO OUT	This connection allows for the utilization of a single channel, RCA speaker.
ALARM	This connection provides alarm in and alarm out features to an external alarm or security system. The basic overview of these wires are as follows: **1. Brown: Alarm_Out, 2. Green: Alarm_Out_Ground, 3. Blue: Alarm_In1, 4. Gray: Alarm_In_Ground**

Camera Access Setup

This section will provide information on how to setup and access your camera through the following methods:

- Local PC (Web User Interface (Web UI), Amcrest Surveillance Pro, etc.)
- Amcrest View Pro app
- Amcrest Surveillance Pro
- Amcrest Cloud

Default Username and Password

To login to the system for the first time, use one of the following default username/password combinations. Once you have successfully logged in, it is highly recommended to change the password for security reasons.

Username: admin

Password: admin

Note: Logging in for the first time will prompt the user to change the password to the admin account.

How to Setup the Camera

To make your experience with your Amcrest camera easy and simple, we've provided multiple ways to set up, view, and operate your camera depending on your needs. Please follow the instructions on this page to set up your camera in the way that works best for you.

Setting up Your Camera for the First Time

If you are setting up your camera for the first time, or you are setting up your camera for mobile viewing. Using the Amcrest Cloud app or Amcrest View app on your smartphone or tablet, you can view your camera live from anywhere, and access features such as taking snapshots, creating recordings, and more.

For Configuring Advanced Settings on Your Camera

If you would like to configure your camera to enable advanced features such as motion direction, e-mail alerts, FTP, image adjustments, scheduling and more.

For Cloud Storage and Playback

Amcrest Cloud is our optional premium cloud storage solution which allows you to access recorded footage from any device. We offer free storage plans as well as continuous recording and motion detection storage plans. For more information on Amcrest Cloud please visit amcrest.com/cloud

For Quick Web Access to Your Cameras

AmcrestView.com is a web portal that allows you to view your cameras and recordings quickly and easily from anywhere in the world using a web browser. Use AmcrestView.com if you need to simply check-in at a moment's notice. If you would like to use AmcrestView.com.

App Setup

Amcrest cameras can be used on your mobile device using the following apps:

- Amcrest Cloud
- Amcrest View Pro

Both apps are free and available in the App Store and Google Play store. Please note, each app requires an iOS 6.0 or later version. Android will require a 3.0 or later version OS to run these apps.

For purposes of this guide, we will use iOS, though both apps. The App Interface may differ slightly from the screenshots below as updates are released. Below, you'll find instructions on how to set up your camera up on the Amcrest cloud app as well as the Amcrest View Pro app.

Amcrest Cloud App Setup

Amcrest Cloud allows you to access your device from anywhere in the world. Please note, you will need an Amcrest Cloud account to proceed with Amcrest Cloud app setup. You can register for a cloud account in the Amcrest Cloud app or from the Amcrest Cloud website at amcrestcloud.com

- Please make sure your camera is plugged into a power source and your Ethernet cable is connected from the camera to your router.

- Make sure your camera and mobile device are on the same network during setup.
- To ensure the camera connects to the cloud, a reboot of your camera is recommended.

To add your camera onto the Amcrest Cloud app, follow these steps:

1. Download and open the Amcrest Cloud app from the App Store or Play Store.

Download on the App Store | GET IT ON Google Play

Note: Connect your mobile device to the same network that your camera is on.

2. Register for an Amcrest Cloud account. To register click on **Sign Up** and fill out the form to complete registration.

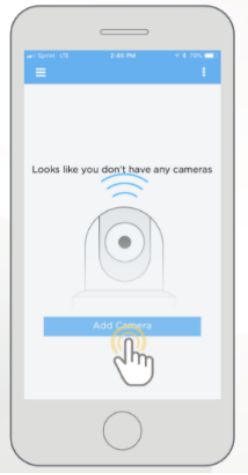	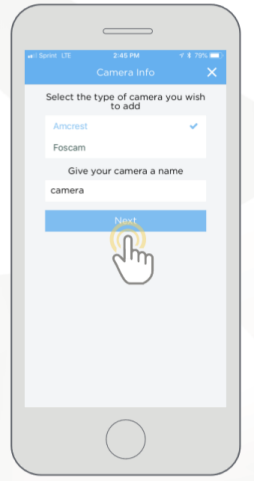
3. Tap on **Add Camera**	4. Give your camera a name (Ex. Garage, Living Room, Kitchen, etc.) and tap **Next** to continue.
	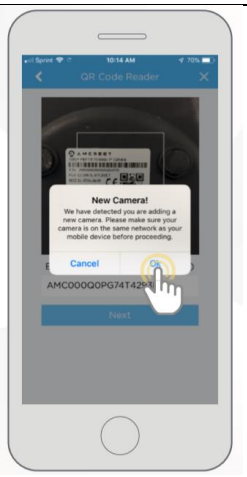
5. Scan the QR code on the back/side/bottom of the camera or manually enter the camera's serial number into the **Enter camera S/N (serial number)** field. Press **Next** to continue.	6. If you are adding a new camera that does not have a set password the app will automatically detect that a new camera is being added. Tap **OK** to proceed.

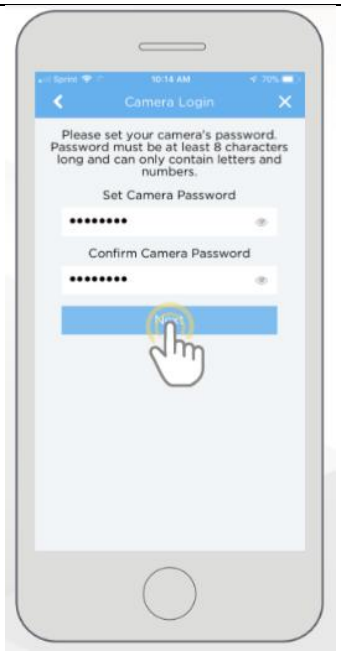	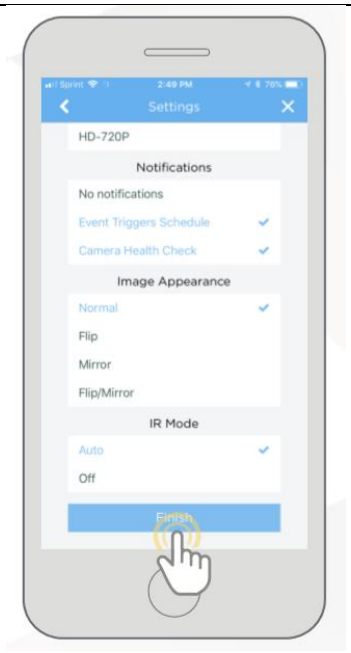
7. Set a new password for your camera. The password must be between 8 to 32 characters long and contain only letters and numbers. When you have finished setting the password for your camera, enter the password again in the **Confirm Camera Password** section. Tap **Next** to continue.	8. Confirm and adjust any needed settings for your camera. When all settings have been confirmed, tap **Finish**.

For more information about the Amcrest Cloud app and its features, visit amcrest.com/support

Amcrest View Pro Setup

To add your PoE camera to the Amcrest View Pro app follow these steps:

- Make sure your camera is plugged into a power source and your Ethernet cable is connected from the camera to your router.
- Make sure your camera and mobile device are on the same network during setup.

1. Download and open the Amcrest View Pro app from the App Store or Play Store.



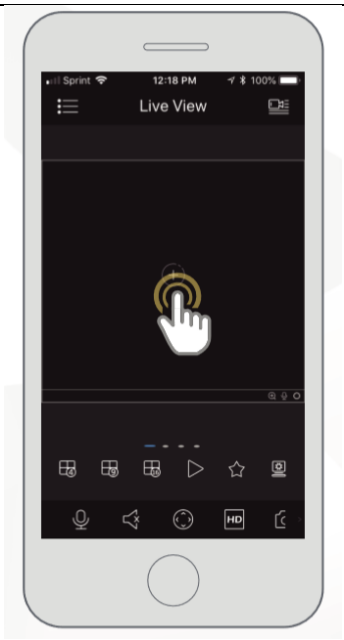	
2. Open the app and tap on the + symbol in the middle of the screen to begin adding your PoE device.	3. Tap on **Add Device** to add a new device to your app.
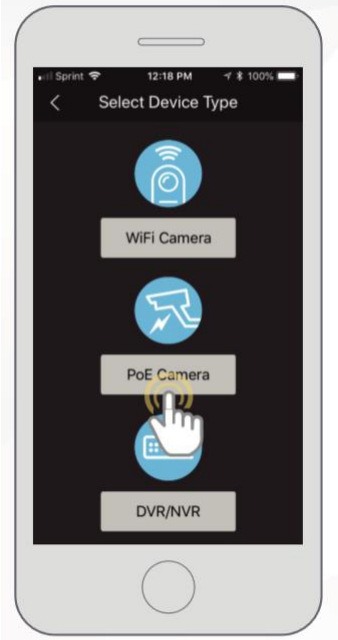	
4. Tap on **PoE Camera**	5. Next, select a connection type. Since we will be setting up a basic P2P connection with the device, tap on **"P2P Connection"** to continue.

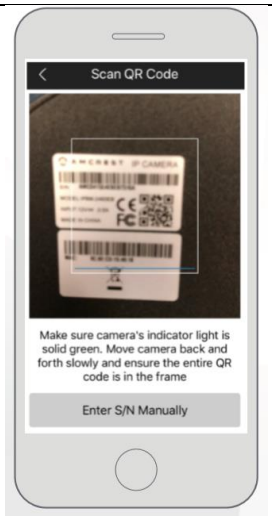	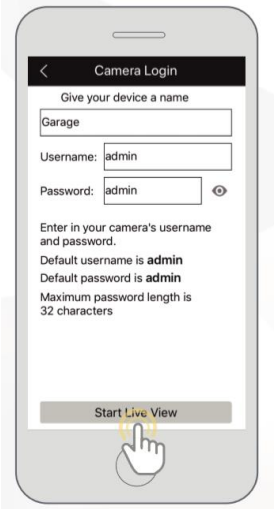
6. Scan the QR code on the back/side/bottom of the camera or manually enter the camera's serial number into the **Enter camera S/N (serial number)** field. Press **Next** to continue.	7. Give the camera a name (e.g. Garage, Kitchen, Living Room, etc.) and provide the username and password for your camera. The default username and will be **admin**. Tap **Start Live View** to continue. **Note:** You can tap on the icon to verify the password.

Note: Android users, tap on **Scan QR Code** to access the QR code reader.

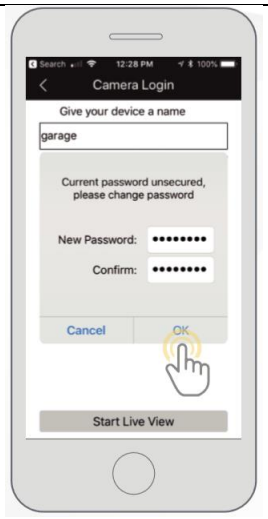	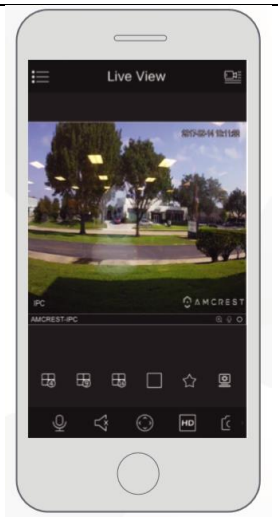
8. The app will prompt you to change the password. Enter a password between 8 and 32 characters and confirm the password. Press **OK** to continue.	9. Your camera is now set up and ready for use on the Amcrest View Pro app.

For more information about Amcrest View Pro and its functionalities visit amcrest.com/support

Desktop Access Setup

The AI features associated with your camera are only accessible and customizable using the built-in web user interface via a web browser.

This camera features the latest in JS technology which allows you to access your camera via a wide variety of web browsers including, Google Chrome, Firefox, Safari and other mainstream web browser via your PC or Mac computer**. For the most optimal experience with your AI features it is highly recommended to use Internet Explorer since it is the most compatible.** For more information on how to access your camera from your computer please refer to the information below.

To access your camera from your computer you will need to first locate the camera's IP address. To locate the camera's IP address is it highly recommended to download our free Amcrest IP Config Tool software. The Amcrest IP Config Tool can be downloaded at the following web page: amcerest.com/downloads

In the **All Downloads** menu, click on **IP Config Software** to begin the free download. Once the download has completed installing, locate the IP address associated with the device you would like to view in the browser.

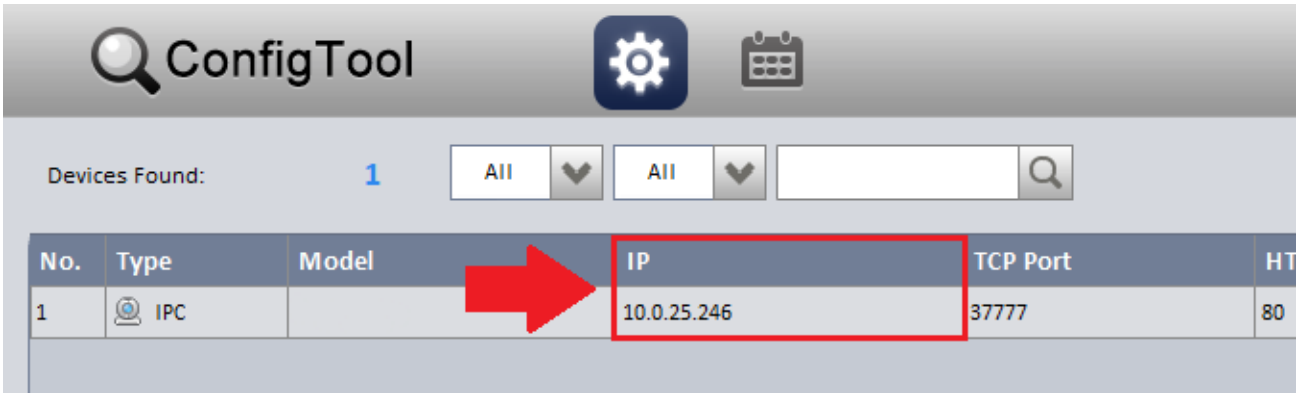

Open the web browser and enter this IP address into browser. Press enter to access the web user interface.

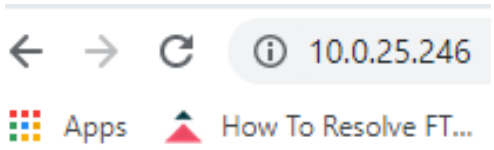

In the web user interface, enter the login credentials for your device. If this is the first time accessing the device, the username and password will both be **admin.** Click on **Login**.



If this is the first-time logging into your device, you will be prompted to modify the password for your device. To modify the password, enter the new password you would like to use in the **New Password** field and confirm. The password used should be between 8 and 32 characters long with a combination of letters and numbers.

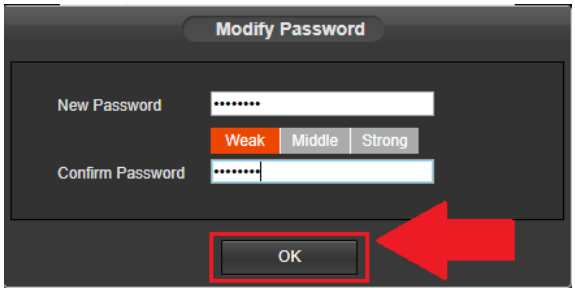

Click **OK** when and allow the stream to load.

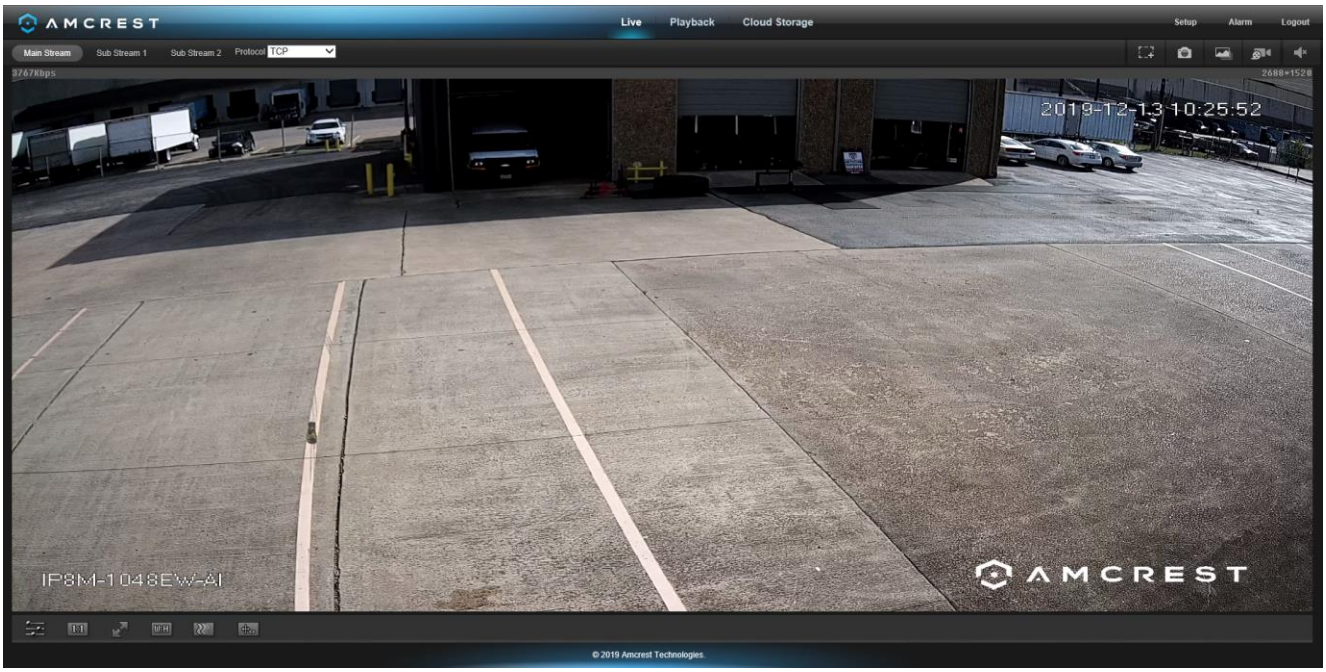

Operation and Interface

This section will show you the basic operation and interfaces of the web user interface for your camera.

Live

By default, the interface opens on the Live tab. The live view tab allows the user to see a live video feed from the camera. The live view tab has five main sections:

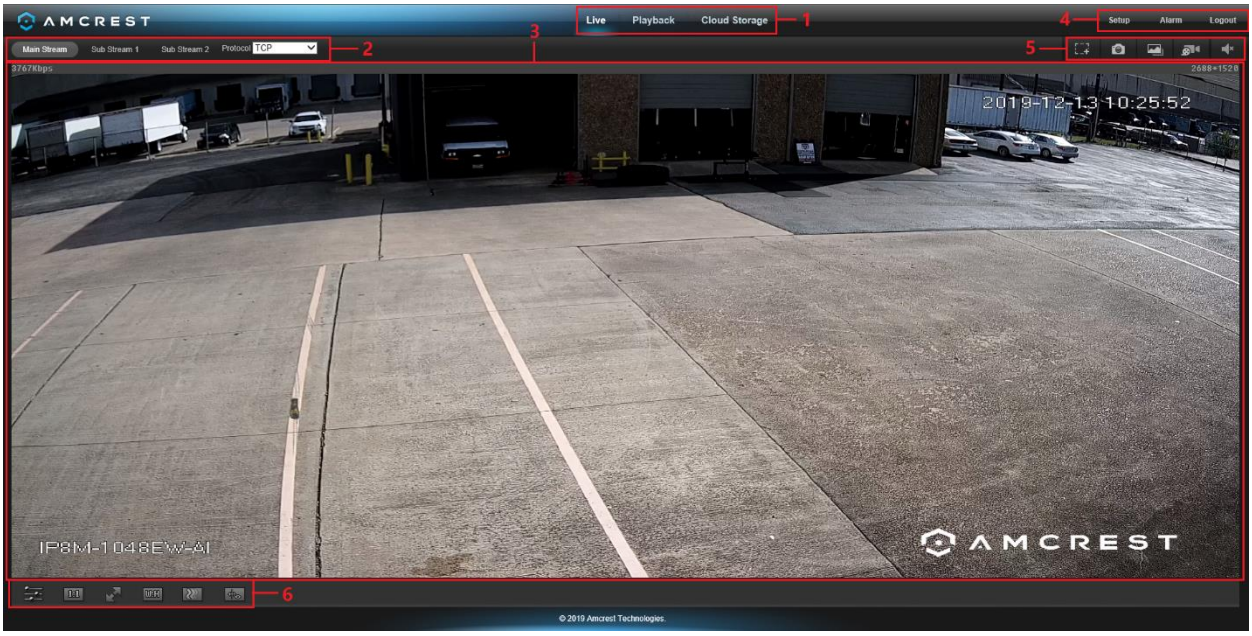

Section 1: These options allow the user quick access to the live view screen, playback, as well as to the Amcrest Cloud.
Section 2: This section allows the user to switch between Mainstream and Sub stream resolutions.
Section 3: This is the live view feed from the camera.
Section 4: This section allows the user to access setup options, alarm, and logout the interface.
Section 5: This section allows the user to perform different camera functions while in live mode. See the table below for an explanation of the different functions available:

Button	Function Name	Function Description
	Digital Zoom	Click this button to activate the zone selection function. This allows the user to use the mouse to select a zone to zoom in on.
	Snapshot	Click this button to take a screenshot of the live feed.
	Triple Snapshot	Click this button to take 1 screenshot per second for 3 seconds.
	Manual Record	Click this button to manually record video.
	Speaker	Click this button to listen to audio from an external audio source.

Section 6: This bar allows the user to change video settings for the live playback screen. See the below table for an explanation of the video settings:

Button	Function Name	Function Description
	Image Adjustment	This button opens the image adjustment toolbar, which allows the user to adjust brightness, contrast, saturation, and hue for the live feed's picture.
	Adapt/Original Size	This button allows the user to switch between displaying the original size of the stream in its set resolution, or to adapt to the size of the monitor display the feed is being viewed on.
	Full Screen	This button allows the user to make the live feed go into full screen mode. Double click the mouse or click the ESC button to exit full screen mode.
	Width/Height Ratio	This button allows the user to change the width/height ratio for the live feed. The options are Original and Adaptive. Original uses the aspect ratio of the stream's set resolution, and adaptive fits the feed to the aspect ratio of the monitor display the feed is being viewed on.
	Stream Fluency	This button allows the user to change the stream fluency. There are 3 options. Realtime reduces delay and decreases fluency, and Fluency has a larger delay, but the video stream becomes more fluid.
	IVS Rule Overlay Enable/Disable	This button allows the user to show or hide IVS rules drawn by the user on the live view screen.

Playback

The Playback tab allows the user to playback the camera's recorded video. Below is a screenshot of the Playback tab:

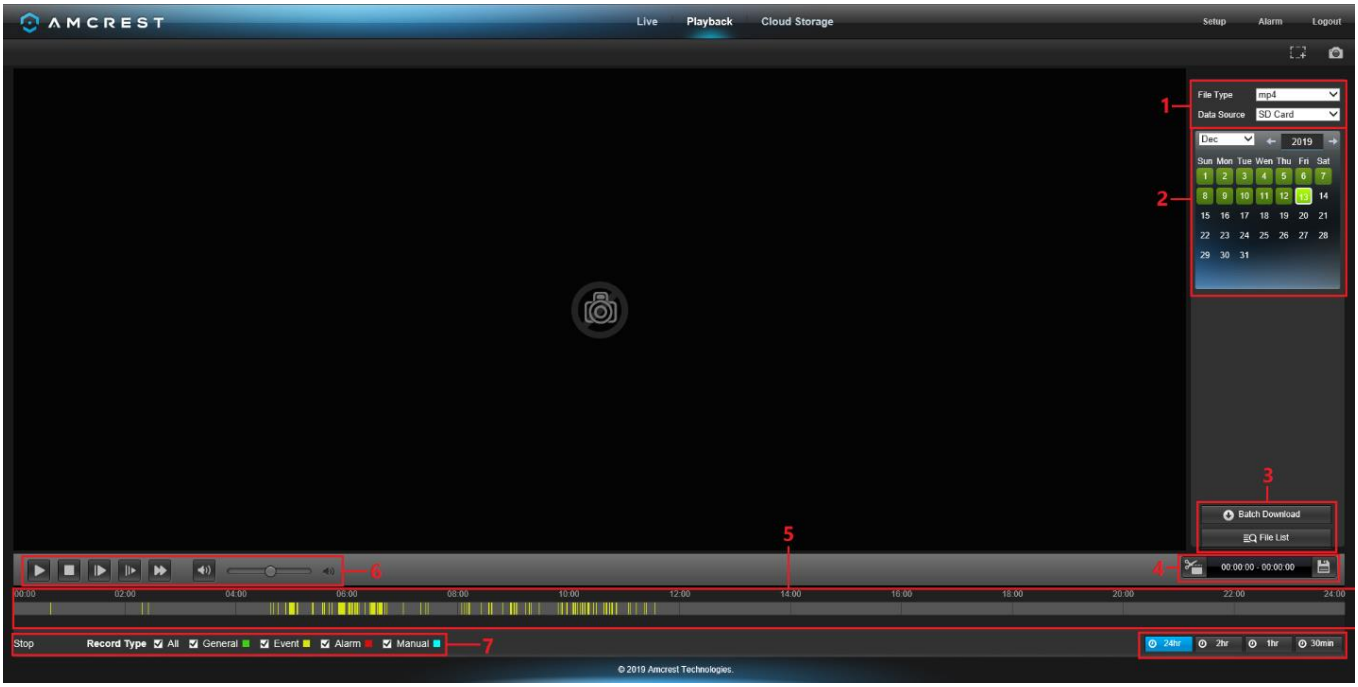

This is the interface for the playback menu. There are 7 main sections:

Section 1: Allows the user to filter between video (.mp4) or snapshots (.jpg)
Section 2: Allows the user to playback events based on calendar dates. If events are detected via the microSD card the days will be highlighted indicating recordings are available for that day.
Section 3: These options allow the user to access/download recordings to their computer. Recordings can be downloaded via a batch download, where multiple recordings can be downloaded simultaneously, or by accessing the File List where recordings can be viewed and downloaded one by one.
Section 4: This section allows the user to trim playback videos for downloading. It allows the device to specify time stamps which can be trimmed and downloaded using the Save icon.
Section 5: This panel allows the user to specify what type of video they would like to playback and it also allows the user to select where to start playback from. The buttons on the bottom right allow the user to select a zoom level.
Section 6: This panel allows the user to control playback. It also allows the user to control playback speed, and playback volume.
Section 7: These options allow the user to filter between recording types such as, General, Motion, Alarm, or Manual events. The "All" option will select all recording types in the interface.

Cloud Storage

The Cloud Storage tab allows the user quick access to the Amcrest Cloud website.



At this website (amcrestcloud.com) users can register for new accounts as well as view or modify existing accounts.
For more information on Amcrest Cloud visit: amcrest.com/cloud

Setup

The Setup tab allows the user to change different camera settings. Below is a screenshot of the setup tab:

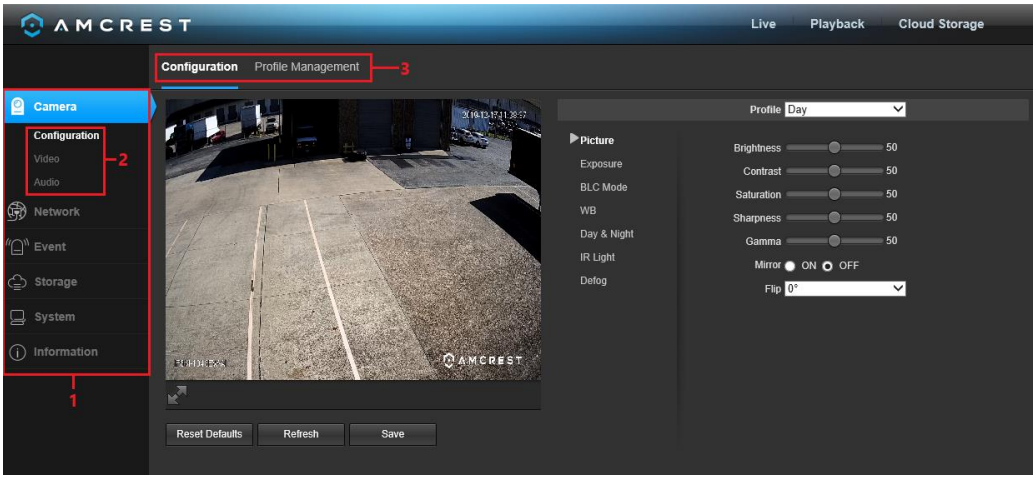

There are 3 main sections to note in the Setup tab:

1. **Menu Bar**: The menu bar is composed of menu sections, which when clicked display any menu items that fall under their category.
2. **Menu Items**: These menu items each open a different menu that allows the user to change specific settings for the camera.
3. **Menu Tab**: These tabs open menu options for certain menu items.

Camera

This menu section allows the user to change different camera settings for video and to manage image profiles.

Configuration

This menu allows the user to configure image profiles for normal, day, and night usage.

Below is a screenshot that shows the Configuration tab in the Configuration menu item:

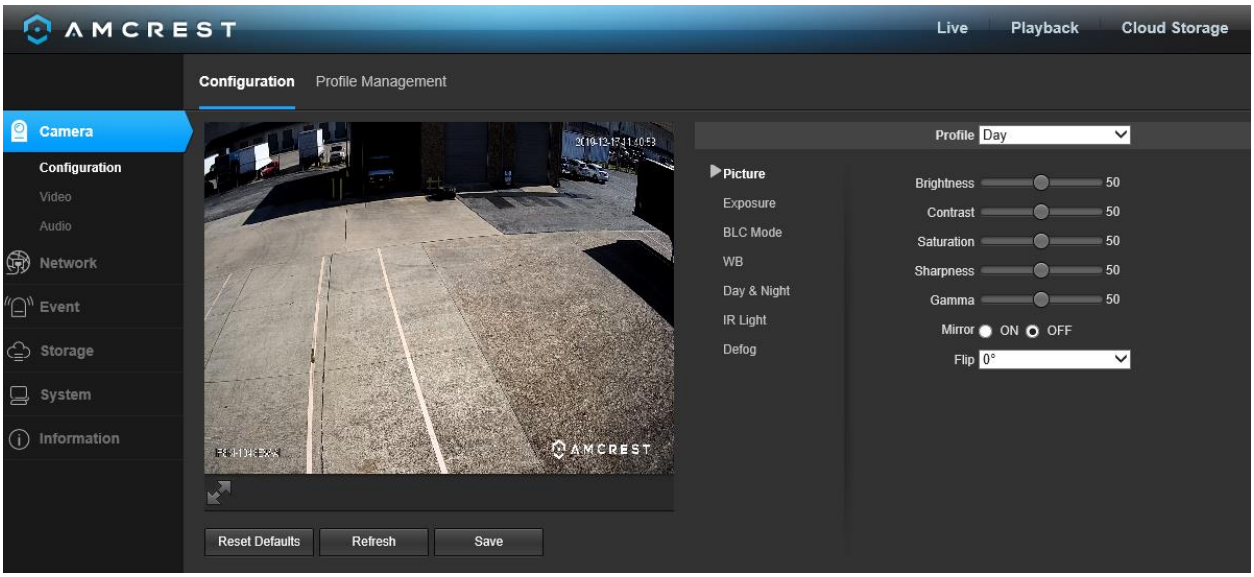

Below is an explanation for each of the fields on the Configuration tab in the Configuration menu item:

Picture

- **Profile**: This dropdown box allows the user to select which profile to modify. The 3 options are Day, Night, and Normal.
- **Brightness**: This slider is used to adjust playback and recorded video window brightness. The value ranges from 0 to 100. The default value is 50. The larger the number, the brighter the video is. When you input the value here, the bright section and the dark section of the video will be adjusted accordingly. You can use this function when the whole video is too dark or too bright. Please note the video may become hazy if the value is too high. The recommended value ranges from 40 to 60.
- **Contrast**: This slider is used to adjust playback and recorded video window contrast. The value ranges from 0 to 100. The default value is 50. The larger the number is, the higher the contrast is. You can use this function when the whole video brightness is OK but the contrast is not correct. Please note the video may become hazy if the

value is too low. If this value is too high, the dark section may lack brightness while the bright section may over expose. The recommended value ranges from 40 to 60.

- **Saturation**: This slider is used to adjust playback and recorded video window saturation. The value ranges from 0 to 100. The default value is 50. The larger the number, the stronger the color is. This value has no effect on the general brightness of the whole video. The video color may become too strong if the value is too high. For the grey part of the video, distortion may occur if the white balance is not accurate. Please note the video may not be clear if the value is too low. The recommended value ranges from 40 to 60.
- **Sharpness**: This slider is used to adjust the sharpness of the video. The value ranges from 0 to 100. The larger the value is, the clearer the edges are and vice versa. Note: The higher the value, the higher likelihood of picture noise occurring. The default value is 50 and the recommended value ranges from 40 to 60.
- **Gamma**: This slider is used to adjust the gamma of the video. The larger the number, the brighter the video is. The default value is 50 and the recommended value ranges from 40 to 60.
- **Mirror**: This radio button allows the user to turn the mirroring feature on or off. Turning mirroring on will mirror the picture.
- **Flip**: This dropdown box allows the user to flip the video feed picture. Flipping the picture is recommended only if the camera is mounted upside down.

Exposure

This menu allows the user to select the exposure type for the video feed.

Below is a screenshot of the exposure menu:

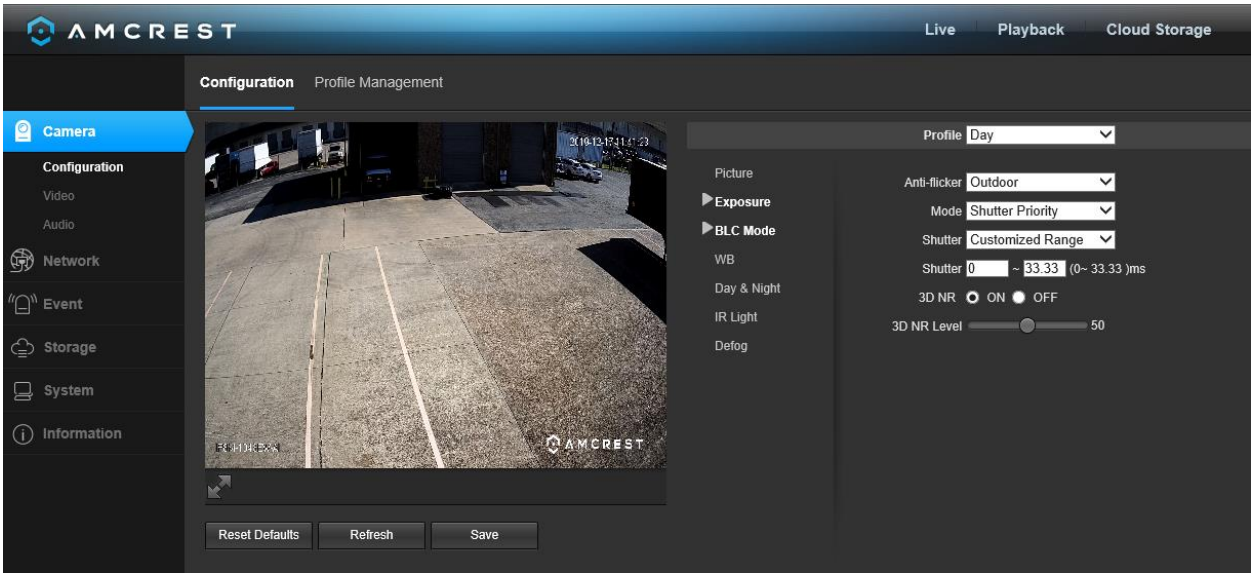

- **Profile**: This dropdown box allows the user to select which profile to modify. The 3 options are Day, Night, and Normal.
- **Anti-Flicker**: These options allow the user to select what type of anti-flicker technology should be used for the video feed. The three options are 50 Hz, 60 Hz, and Outdoor. The desired option should offset any flickering effect caused by the electrical current used in the specific area.
- **Mode**: This dropdown menu allows the user to modify certain exposure settings related to the device such as, gain priority, shutter priority or setting a manual gain setting.

- **gainFirst** - This setting will maximize the gain for the ideal exposure. Low Noise Basically turns up the ISO to the best setting without sacrificing exposure timing.
- **Shutter Priority** - This setting will maximize the fastest shutter speed and will sacrifice the gain in return.
- **Manual** - This setting lets you select your shutter speed and have the gain adjust automatically. Selecting customized range will let you both the shutter speed an adjust the gain manually.
- **Shutter**: These options allow the user to select shutter speed ranges from 1/30 ~ 1/100000ms. A customizable range can also be selected for the shutter which can range between 0 ~ 33.33ms.
- **3D NR**: Allows the user to enable or disable 3D noise reduction.
- **3D NR Level**: This slider allows the user to specify the 3D Noise Reduction level. The value ranges from 1-100.

To reset to default settings, click the **Reset Defaults** button. To refresh the screen, click on Refresh. To save the settings, click the **Save** button.

BLC Mode

This menu allows the user to select Back Light Compensation. The values are Off, BLC (Auto), WDR, and HLC. This feature should only be used in black lit environments. Below is a screenshot of this menu:

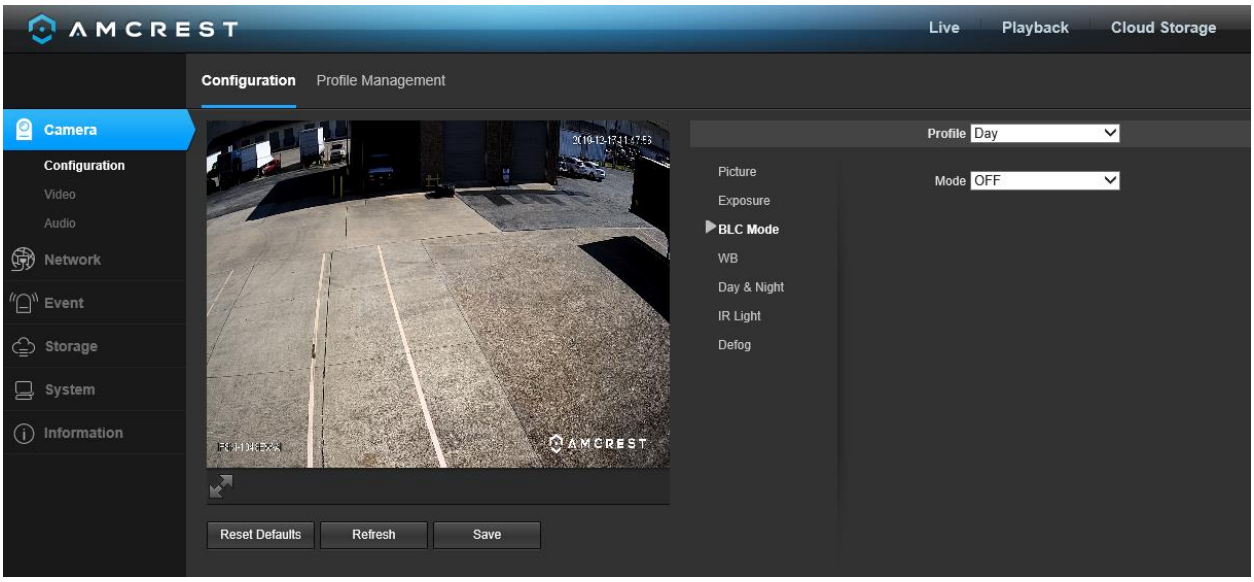

- **BLC:** backlight compensation: Default will use the whole image to balance the lighting settings, and Customized will allow you to balance the lighting settings from the target area.
- **WDR:** Wide Dynamic Range makes multiple scans of a scene to provide one balanced and unwashed image that is clear for the user.
- **HLC:** Highlight compensation is a feature that came out of necessity due to overexposure from strong light sources like headlights or spotlights.

To reset to default settings, click the **Reset Defaults** button. To refresh the screen, click on Refresh. To save the settings, click the **Save** button.

WB

This dropdown box allows the user to select the white balance for the video feed. The different options are Auto, Sunny, Night, Outdoor, Customized and Regional Custom.

Selecting customized opens a menu that allows the user to set specific red or blue values. Regional custom allows the user to select an area (region) on the live view screen in which white balance will be most applicable.

Below is a screenshot of this menu:

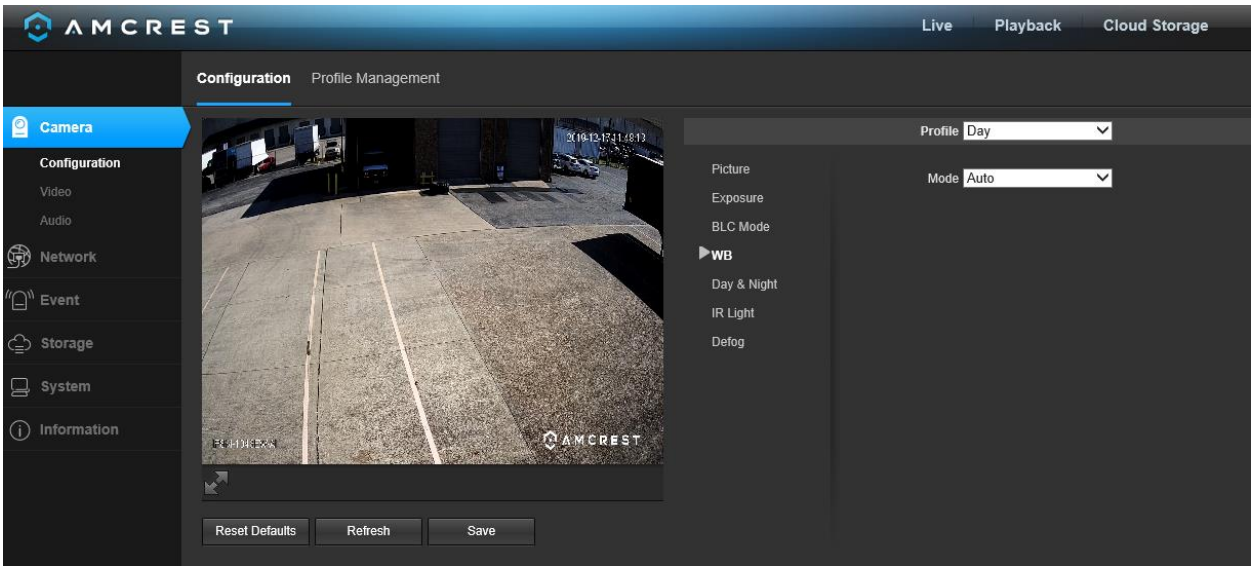

To reset to default settings, click the **Reset Defaults** button. To refresh the screen, click on Refresh. To save the settings, click the **Save** button.

Day & Night

Day & Night profiles are used to determine when black and white mode is turned on in a dark environment.

Below is a screenshot of this menu:

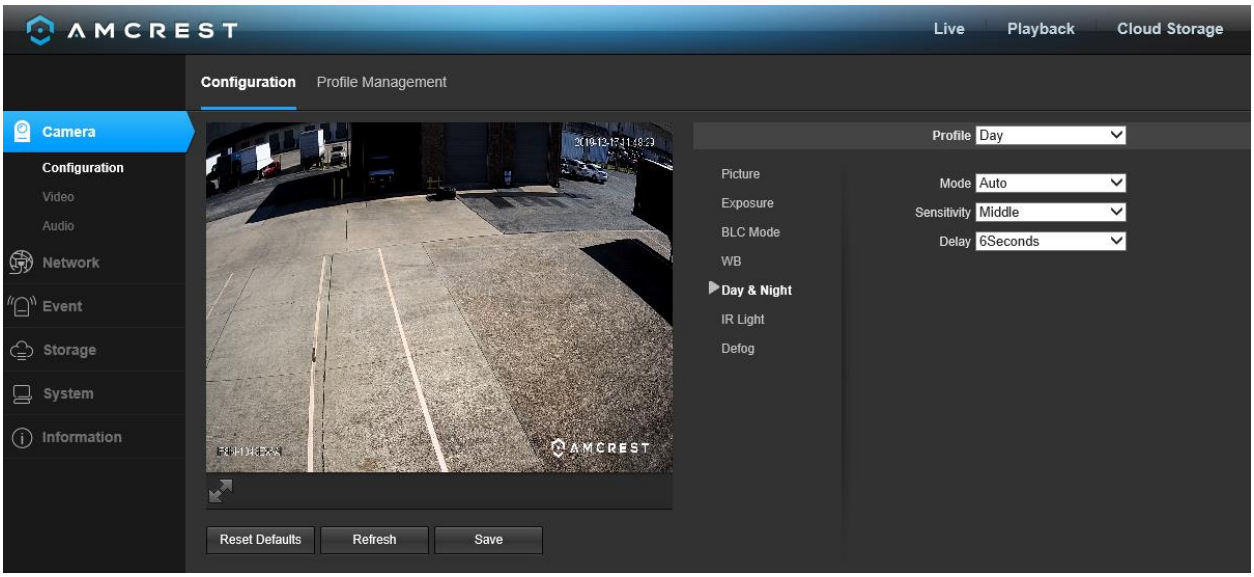

- **Profile:** This dropdown box allows the user to select which profile to modify. The 3 options are Day, Night, and Normal.
- **Mode:** This dropdown box allows the user to select different Day & Night balance modes. The 3 options are Auto, Color, and B&W.
- **Auto** - Uses D&N Sensitivity setting to change between color mode and infrared and black and white mode.
- **Color -** Preset which allows the camera to compensate color in day or night profiles.
- **B&W -** Sets the picture to black and white, however when illumination is too dark it switches on IR mode.
- **Sensitivity**: This option allows the user to change the Day/Night Sensitivity of the camera. The three options are Low, Middle, and High. The higher the sensitivity, the quicker the camera will change into another mode depending on the light levels.
- **Delay**: This dropdown box allows the user to set a delay in seconds for how long it takes to switch between Day and Night modes. The values range from 2 seconds to 10 seconds.

To reset to default settings, click the **Reset Defaults** button. To refresh the screen, click on Refresh. To save the settings, click the **Save** button.

IR Light

This menu allows the user to select whether the IR lights for night vision are on or off for the selected profile.

Below is a screenshot of this menu:

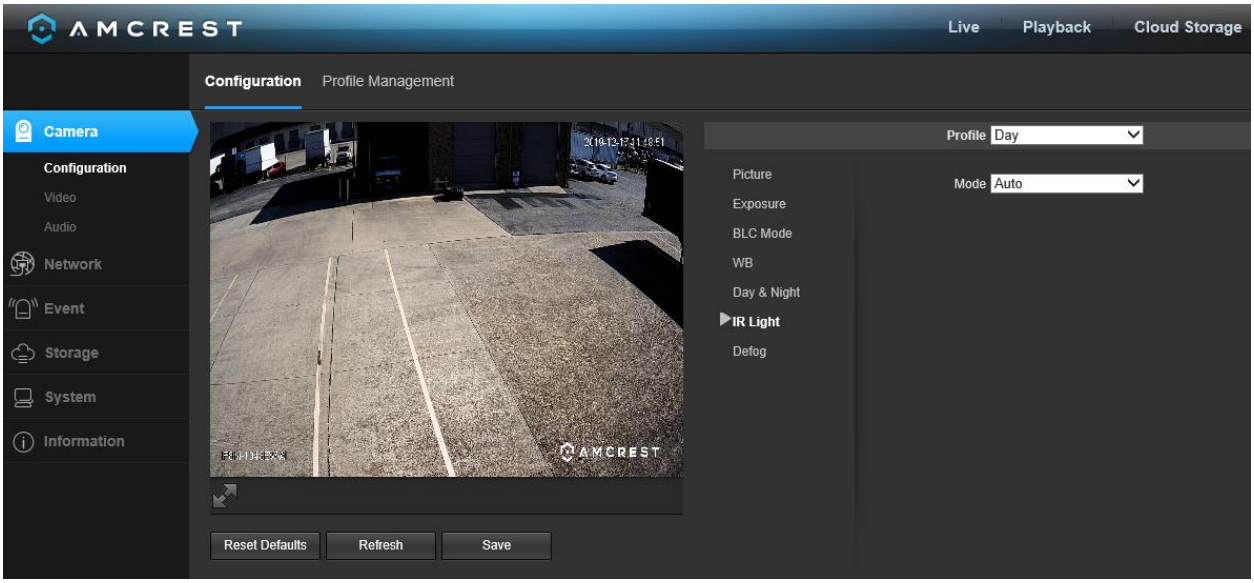

- **Profile**: This dropdown box allows the user to select which profile to modify. The 3 options are Day, Night, and Normal.
- **Mode**: This dropdown box allows the user to select whether to turn the IR light on or off. Auto can also be set to automatically set the camera's IR lights on and off based on Day & Night conditions. This setting is usually set by default within the camera.

To reset to default settings, click the **Reset Defaults** button. To refresh the screen, click on Refresh. To save the settings, click the **Save** button.

Defog

This menu allows the user to set defog settings which can be useful in foggy or hazy weather.

Below is a screenshot of the Defog menu.

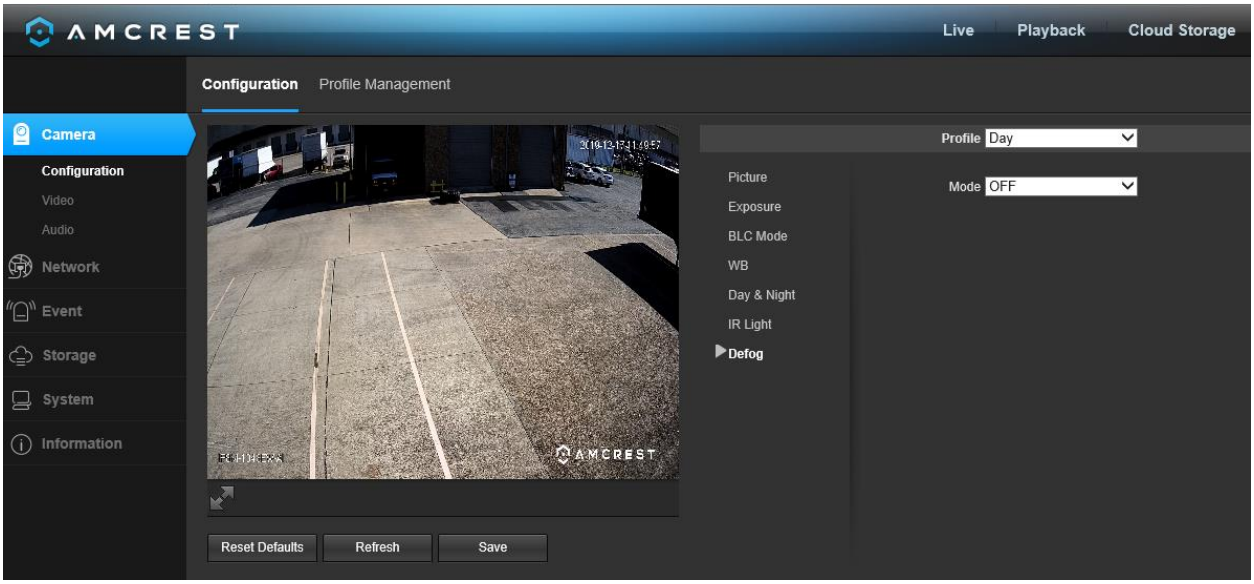

Profile: This dropdown box allows the user to select which profile to modify. The 3 options are Day, Night, and Normal.
Mode: Allows the user to adjust defog settings. **OFF:** Allows the user to turn off defog mode, **Manual:** Allows the user to manually control defog settings, **Auto**: Allows the user to let the camera automatically detect defog settings.

To reset to default settings, click the **Reset Defaults** button. To refresh the screen, click on Refresh. To save the settings, click the **Save** button.

Profile Management

Below is a screenshot that shows the Profile Management tab in the Configuration menu item:

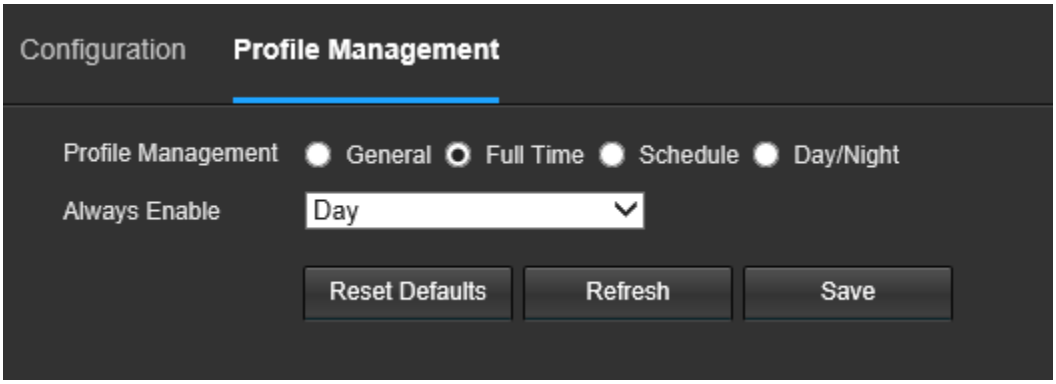

Below is an explanation for each of the fields on the Profile Management tab in the Configuration menu item:

Profile Management: This set of radio buttons allow the user to set what basis the profile management settings run on. There are 4 options: General, Full Time, Schedule, and Day/Night. General means that the system can automatically alternate between night and day based on the profiles for each.

Full Time means that the system sticks to one profile the entire time it is running. Schedule allows the user to dictate which times of the day are designated for the day profile and the night profile. Day/Night means that the system maintains one profile (Day or Night) for each mode set by the user.

To reset to default settings, click the **Reset Defaults** button. To refresh the screen, click on Refresh. To save the settings, click the **Save** button.

Video

This section allows the user to change video settings for the camera's video feed. There are 4 tabs in this menu item: Video, Snapshot, Overlay, and Path.

Video

Below is a screenshot that shows the Video tab in the Video menu item:

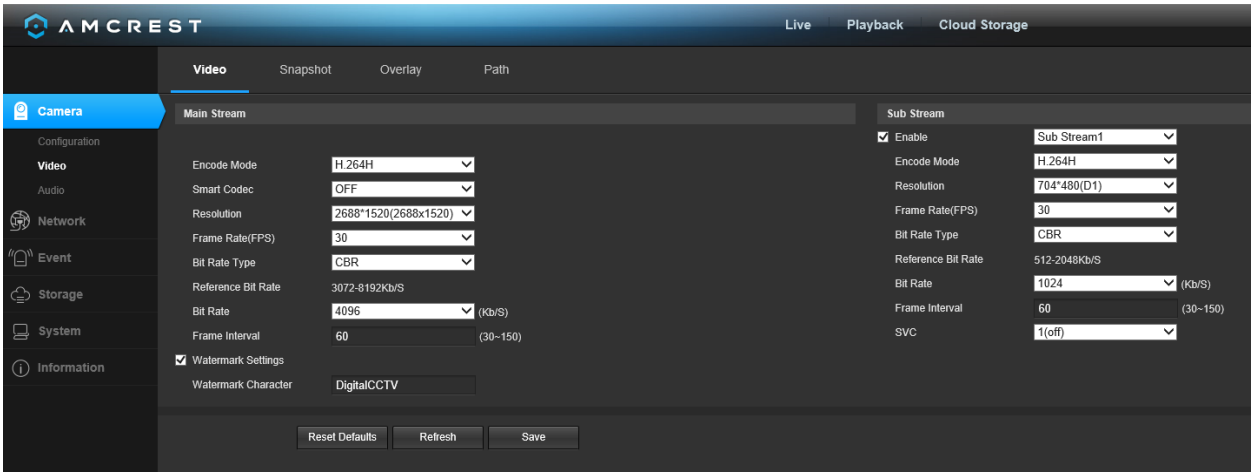

Below is an explanation for each of the fields on the Video tab in the Video menu item:

- **Encode Mode**: This dropdown box allows the user to select a compression protocol. The system supports H.264 and MJPEG video compression protocols.
- **Resolution**: This dropdown box allows the user to set the resolution. The system supports various resolutions and they can be selected from this dropdown list.
- **Frame Rate (FPS)**: This dropdown box allows the user to select a frame rate. Frame rate settings are measured in frames per second (FPS) and can range from 1f/s to 25f/s in PAL mode and 1f/s to 30f/s in NTSC mode.
- **Bit Rate Type**: This dropdown box allows the user to select a bit rate type. The system supports two bit rate types: CBR and VBR. In VBR mode, video quality can be set.
- **Reference Bit Rate**: This is the recommended bit rate value according to the resolution and frame rate selected.
- **Bit Rate**: This dropdown box allows the user to select a bit rate.
- **Frame Interval**: This field allows the user to set the P frame amount between two I frames. The value ranges from 1 to 150 seconds. Default value is 50. Recommended value is frame rate *2.

- **Watermark Settings**: This function allows the user to verify if the video has been tampered with.
- **Watermark Character**: This field allows the user to set the watermark's text. The default string is Digital CCTV. The maximum length is 85 characters. This string can only include numbers, characters, and underscores.

Sub Stream is a lower quality stream that allows the feed to take up less resources and bandwidth when streaming. The Mainstream and the Sub Stream have the same fields. Sub Stream can be enabled by checking the box next to Enable.

To reset to default settings, click the **Reset Defaults** button. To refresh the screen, click on Refresh. To save the settings, click the **Save** button.

Snapshot

Below is a screenshot that shows the Snapshot tab in the Video menu item:

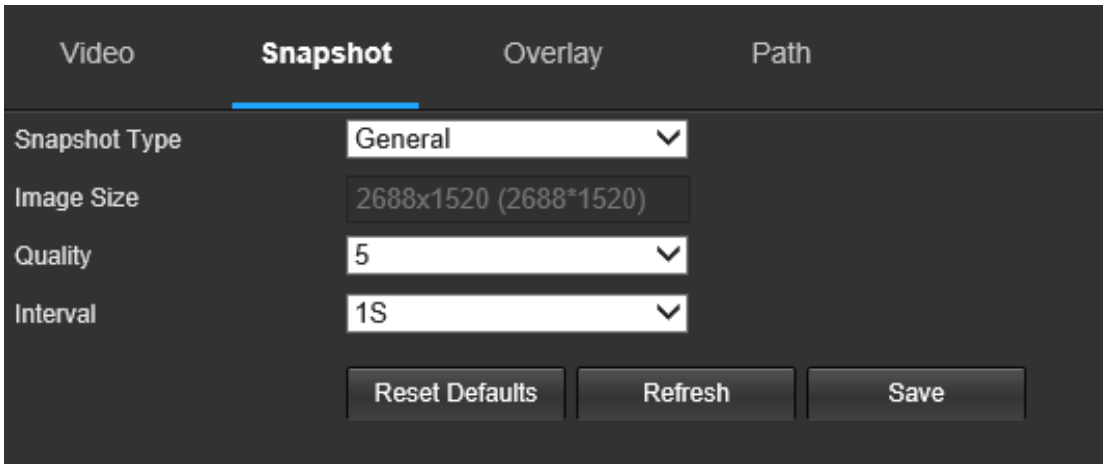

Below is an explanation for each of the fields on the Snapshot tab in the Video menu item:

- **Snapshot Type**: This dropdown box allows the user to select a snapshot mode. There are two snapshot modes: General: Snapshots are taken as scheduled.
- Event: Snapshots occur when a motion detection alarm or tampering alarm is triggered
- **Image Size**: This dropdown box shows the image size. By default, the screenshot size is the same size as the video feed's resolution.
- **Quality**: This dropdown box allows the user to select image quality. Quality is adjusted on a scale of 1-6.
- **Interval**: This is to set snapshot frequency. The value ranges from 1 to 7 seconds. The maximum setting for a customized interval is 3600s/picture.

To reset to default settings, click the **Reset Defaults** button. To refresh the screen, click on Refresh. To save the settings, click the **Save** button.

Overlay

Below is a screenshot that shows the Overlay tab in the Video menu item:

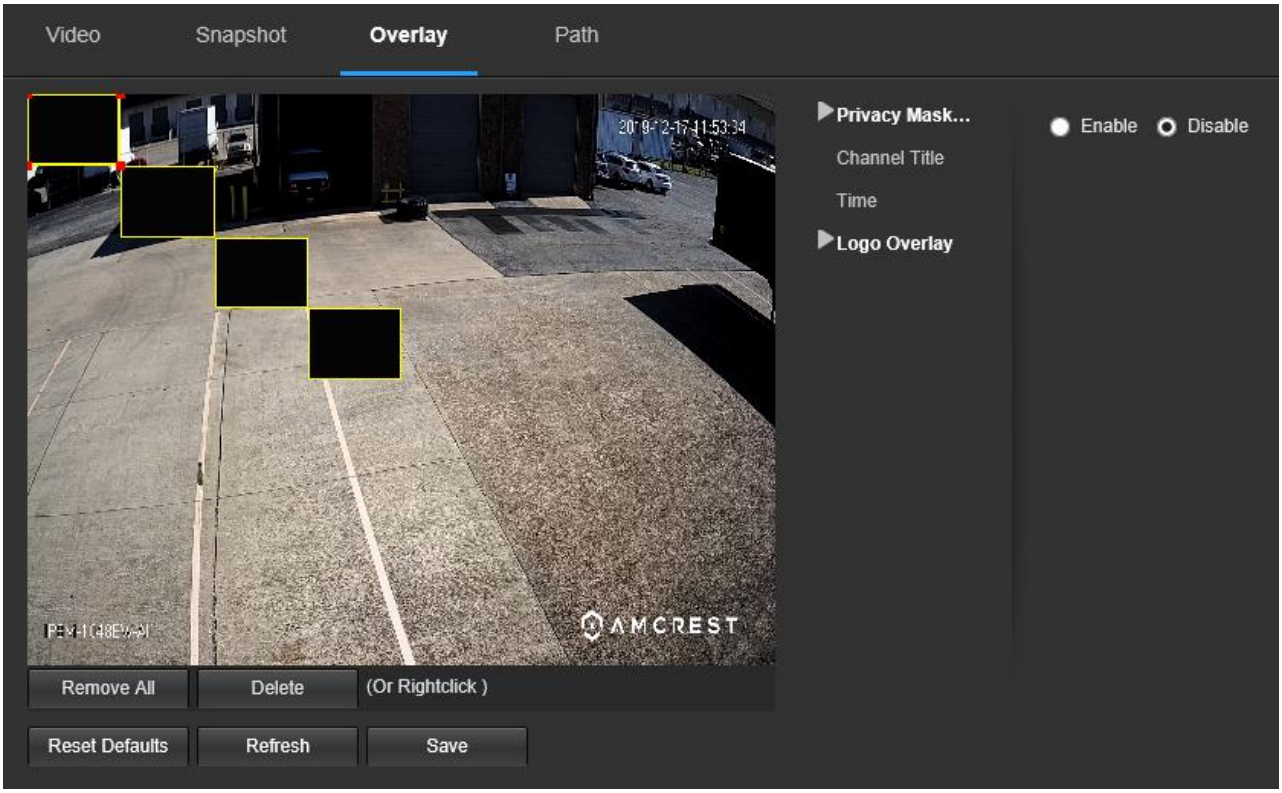

The menu on the left allows the user to select which overlay to modify. Privacy Masking, Channel Title, Time, and Text Overlay can all be modified in this menu.

For **Privacy Masking**, the radio button enables or disables the feature. To set a privacy mask, click one of the boxes in the live view window, and position or resize it as needed. To remove a box, click on it, then click the delete button. To remove all privacy filter boxes, click the remove all button.

For **Channel Title**, the radio button enables or disables the feature. The Input Channel Title field allows the channel title to be modified.

For **Time**, the radio button enables or disables the feature. Clicking the Display Weekdays checkbox will show the weekday at the end of the timestamp.

For **Logo Overlay,** the radio button enables or disabled the Amcrest logo from the live view screen.

To reset to default settings, click the **Reset Defaults** button. To refresh the screen, click on Refresh. To save the settings, click the **Save** button.

Path

The Path menu allows the user to set a download path from their camera to their computer.
Below is a screenshot of the Path menu:

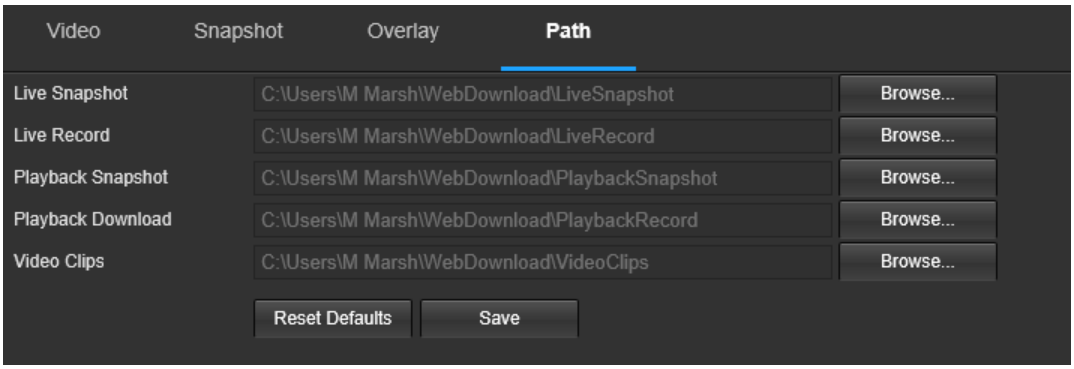

- The **Live Snapshot** field allows the user to select where to save live snapshots to. Click the Browse button to select a different destination folder.
- The **Live Record field** allows the user to select where to save live recordings to. Click the Browse button to select a different destination folder.
- The **Playback Snapshot** field allows the user to select where to save playback snapshots to. Click the Browse button to select a different destination folder.
- The **Playback Download** field allows the user to select where to save playback video downloads to. Click the Browse button to select a different destination folder.
- The **Video Clips** field allows the user to select where to save video clips to. Click the Browse button to select a different destination folder.

To reset to default settings, click the **Reset Defaults** button. To refresh the screen, click on Refresh. To save the settings, click the **Save** button.

Audio

This menu allows the user to modify audio settings for the camera. Below is an explanation for each of the fields on the Audio menu:

- **Enable**: This checkbox allows the user to enable audio recording.
- **Encode Mode**: This dropdown box allows the user to select what audio format the audio should be recorded in.
- **Sampling Frequency**: This dropdown box allows the user to select a sampling frequency for the audio. The options are 8k and 16k. 16k audio sampling allows for higher sound quality.
- **Audio in Device**: Displays the method in which the audio is being provided to the camera. The default will be Line In indicating audio will be coming from an external source via the audio in dongle connection.
- **Noise Filter**: This dropdown box allows the user to enable or disable the audio noise filter function. This function provides cleaner audio quality when enabled.
- **Microphone Volume**: This slider allows the user to select the microphone volume. The value ranges from 0 to 100. The default value is 50.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Network

This menu section allows the user to change network settings for the camera.

TCP/IP

The TCP/IP menu item has two tabs: TCP/IP and P2P.

TCP/IP

TCP/IP stands for Transmission Control Protocol/Internet Protocol and it is the language/protocol that allows communication between internet connected devices, whether on a local network, or a on the Internet at large. This screen allows for TCP/IP settings to be modified for the camera to establish a connection to the network. Below is a screenshot of the TCP/IP settings tab:

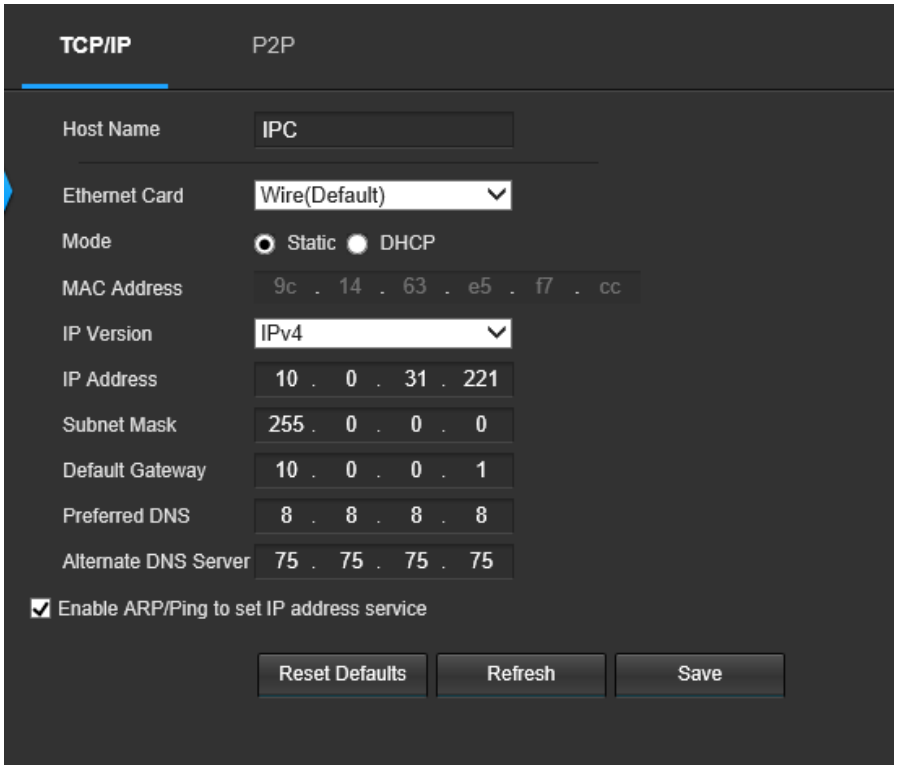

Below is an explanation of the fields on the TCP/IP settings tab:

- **Host Name**: This text field allows the user to change the host device name for the camera. This field supports a maximum of 15 characters.
- **Ethernet Card**: This dropdown box allows the user to select which internet access device to use. If the device is connected to a wired connection and a wireless one at the same time, then this box will have options to pick either of the connections. The Set as Default button allows the user to select one of the connection methods as the default one.
- **Mode**: Static vs DHCP: This radio button allows the user to choose between a static IP address, and a dynamic IP address. DHCP stands for Dynamic Host Configuration Protocol, and this enables the camera to automatically obtain an IP address from another network device such as a server or more commonly, a router. When the DHCP function is enabled, the user cannot modify the IP address, Subnet Mask, or Default Gateway, as these values are obtained from the DHCP function. To view the current IP address, DHCP needs to be disabled. Note: When PPPoE is enabled, modification of the IP Address, Subnet Mask, and Gateway becomes prohibited.
- **MAC Address**: This field shows the camera's MAC address, which is unique to this device. This number is read only and is used to access a local area network (LAN).

- **IP Version**: This dropdown allows the user to select the IP version. The two options are IPV4 and IPV6.
- **IP Address**: This field allows the user to enter a custom IP address.
- **Subnet Mask**: This field allows the user to enter a custom subnet mask.
- **Default Gateway**: This field allows the user to enter a custom default gateway.
- **Preferred DNS Server**: This field allows the user to enter the preferred DNS server IP address.
- **Alternate DNS Server**: This field allows the user to enter the alternate DNS server IP address.
- **Enable ARP/Ping to set IP Address Service**: This checkbox allows the user to enable the ARP/Ping service to change the IP address service. For more information on this feature, click the help button while on the TCP/IP settings tab.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

P2P

The P2P settings screen is where users can use a QR code to connect their smartphone or tablet to the camera. This feature needs to be enabled for use with the Amcrest View app, Amcrest Cloud, or AmcrestView.com. Below is a screenshot of the P2P settings tab:

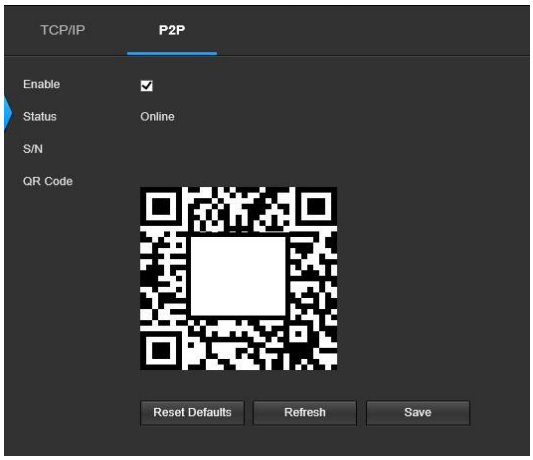

Below is an explanation of the fields on the P2P settings tab:

Enable: This checkbox allows the user to enable the P2P feature for the camera. This feature must be enabled for the camera to connect to a smartphone or tablet via the Amcrest View app. It is enabled by default.

- **Status**: This field displays the status of the P2P connection. Once the camera is connected to a device, this field should display the word Online.
- **S/N**: This field displays the Token ID for the camera. The Token ID can be used to manually enter the camera's information on a mobile or tablet device in case the QR code scanning feature cannot be used.
- **QR Code**: This image is a Quick Response (QR) code. By scanning this image using the Amcrest View app, this camera can establish a connection with the app.

To reset to default settings, click the Reset Defaults button. To refresh the page, click the Refresh button. To save the settings, click the Save button.

Connection

The Connection tab is where users can configure port connections.

Below is a screenshot of the Port settings tab:

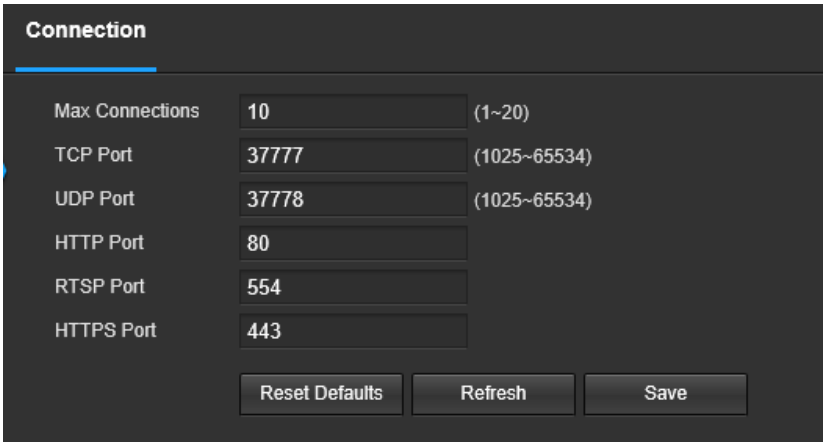

Below is an explanation of the fields on the Connection settings tab:

Max Connections: This field allows the user to specify the maximum number of users that can be connected to the camera at the same time. The maximum number of users the camera can support at one time is 20.
TCP Port: This field designates the Transmission Control Protocol (TCP) port number. The default value is 37777.
UDP Port: This field designates the User Datagram Protocol (UDP) port number. The default value is 37778.
HTTP Port: This field designates the Hypertext Transfer Protocol (HTTP) port number. The default value is 80.
RTSP Port: This field designates the Real Time Streaming Protocol (RTSP) port number. The default value is 554.
HTTPS: This field enables the use of the HTTPS protocol for accessing the camera.
HTTPS Port: This field designates the Hypertext Transfer Protocol Secure (HTTPS) port number. The default value is 443.

To reset to default settings, click the Reset Defaults button. To refresh the page, click the Refresh button. To save the settings, click the Save button.

DDNS

DDNS stands for Dynamic Domain Name Server. This technology is used to automatically update name servers in real time to help the camera maintain a persistent address despite changes in location or configuration. What this means is that even when the camera is restarted, moved, or reconfigured, it can keep the same IP address, thus allowing remote users uninterrupted access to the camera, rather than having to request a new IP address to use for remote access anytime a change is made.

To use this feature, users will need to setup an account with a DDNS service. The camera supports a variety of DDNS services such as AMCRESTDDNS, NO-IP DDNS, CN99 DDNS, and Dyndns DDNS. Based on which service is selected, different options may show on this screen. For purposes of this guide, AmcrestDDNS will be used. AmcrestDDNS is a free DDNS service provided by Amcrest, and it must be renewed every year. A renewal reminder email will be sent to the email entered in the username field below.

Below is a screenshot of the DDNS settings screen, configured to AmcrestDDNS:

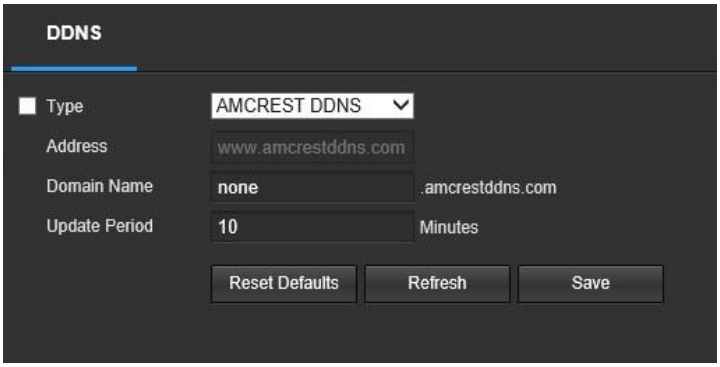

To reset to default settings, click the Reset Defaults button. To refresh the page, click the Refresh button. To save the settings, click the Save button.

IP Filter

This screen allows for the filtering of IP addresses, either blocking them, or granting them access to the camera. This feature helps make the camera more secure by limiting remote access only to approved users. Below is a screenshot of the IP Filter screen:

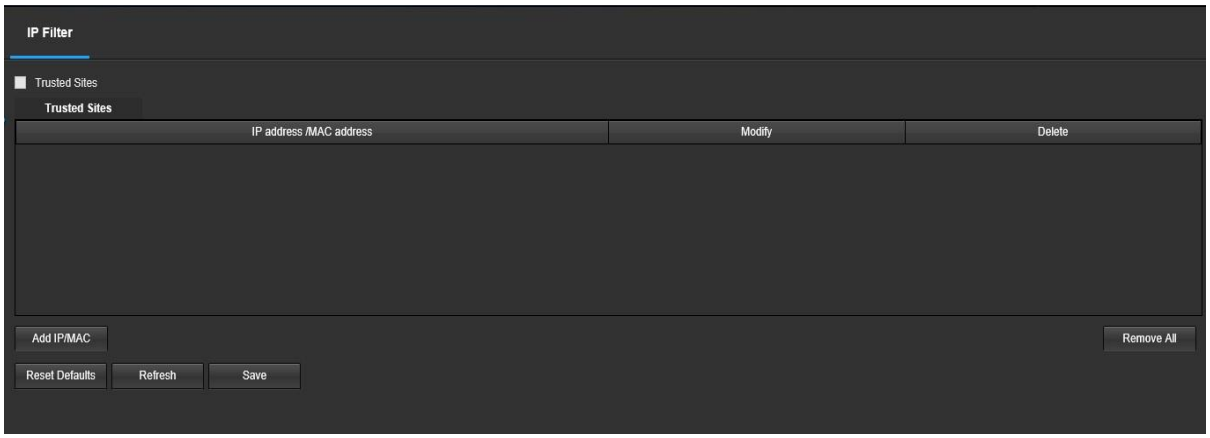

Below is an explanation of fields on the IP Filter settings screen:

- **Trusted Sites**: This checkbox allows the user to enable the IP Filter feature for trusted sites.
- **Add IP/MAC**: This button opens a popup that allows the user to add IP or MAC addresses to the trusted site list. Note: When accessing the camera externally, please add the MAC address of the router on the PC end.
- **Remove All**: This button allows the user to remove all sites from the trusted IP/MAC list.

To reset to default settings, click the Reset Defaults button. To refresh the page, click the Refresh button. To save the settings, click the Save button.

SMTP (Email)

This screen allows for the configuring of email settings to permit the camera to send emails when an alarm is triggered. Below is a screenshot of the email settings screen:

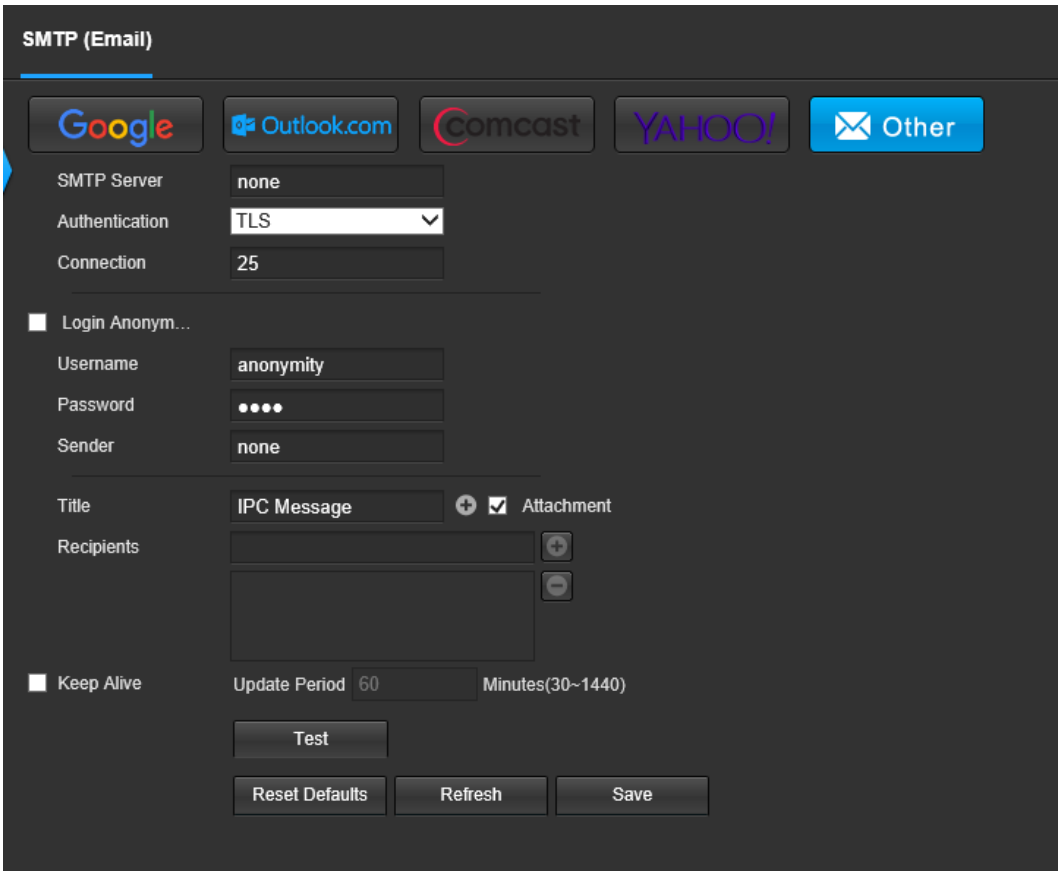

Below is an explanation of fields on the SMTP (Email) settings screen:

- **SMTP Server**: SMTP stands for Simple Mail Transfer Protocol. This field allows the user to enter the SMTP server used by the email service.
- **Port**: This field allows the user to enter the port that corresponds to the selected SMTP server.
- **Login Anonymously**: This checkbox allows the user to anonymously login to the server.
- **Username**: This field allows the user to enter the SMTP username.
- **Password:** This field allows the user to enter the password associated with the SMTP username.
- **Sender:** This field allows the user to enter the sender email address. This email address will be the one that sends out all emails pertaining to the alerts and alarm emails sent by the camera.
- **Authentication:** This dropdown box allows the user to select an encryption type. There are two types of email encryption protocols that are available.
- **SSL:** Secure Socket Layer
- **TLS:** Transport Layer Security
- **Subject:** This field allows the user to define the subject line of the email that is sent to the receivers.
- **Recipients:** This field allows the user to enter the receiver email address. These email addresses are the ones that will receive any emails pertaining to alert and alarm emails sent by the camera. Up to 3 email addresses can be entered in this field.
  Interval: This field allows the user to define, in seconds, how long the system should wait between sending emails. This prevents multiple emails from being sent out.
- **Keep Alive:** This checkbox allows the user to enable a function to periodically check in with the SMTP server to ensure it can connect correctly.
-

- **Email Test:** This button causes the system to automatically send out an email to test the connection is OK or not. Prior to the email test, please save the email setup information.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

UPnP

UPnP stands for Universal Plug and Play, and it is a protocol used to easily connect devices to the internet. In the case of this camera, it allows the camera to connect to the router in an easy manner to quickly allow for remote access. Below is a screenshot of the UPnP settings screen:

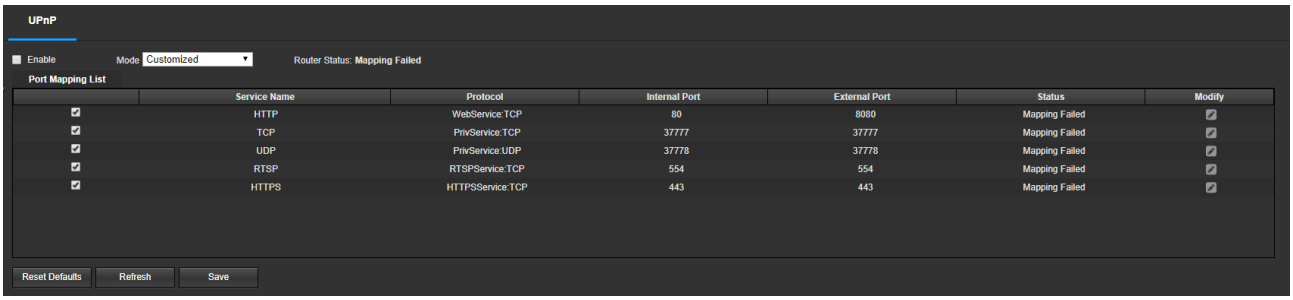

Below is an explanation of fields on the UPnP settings screen:

- **Enable**: This checkbox allows the user to enable the UPnP function.
- **Router State**: This field shows the UPnP status and has two options: **Unknown**: This means that UPnP mapping has failed. **Successful**: This means that UPnP mapping has succeeded.
- **Port Mapping List**: This table is used to show how the ports for each protocol listed below have been remapped by the UPnP protocol.
  - The first column shows the checkboxes to enable the corresponding service on the table.
  - The second column shows the name of the services. To edit this, double click on the service line item.
  - The third column shows the name of the protocol used by that service. To edit this, click the pencil button in the modify column for that line item.
  - The fourth column shows the Internal Port used by that service to establish communication from the router to the camera. To edit this, click the pencil button in the modify column for that line item.
  - The fifth column shows the External Port used by that service to establish communication from the router to the internet. To edit this, click the pencil button in the modify column for that line item.
  - The sixth column shows the status of the protocol. If the protocol was mapped successfully, this field will say "Mapping Succeeded".
  - The seventh column allows the user to open a dialog box and edit the service's information.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

HTTPS

This menu allows the user to enable and create HTTPS certificates. Below is a screenshot of this menu:

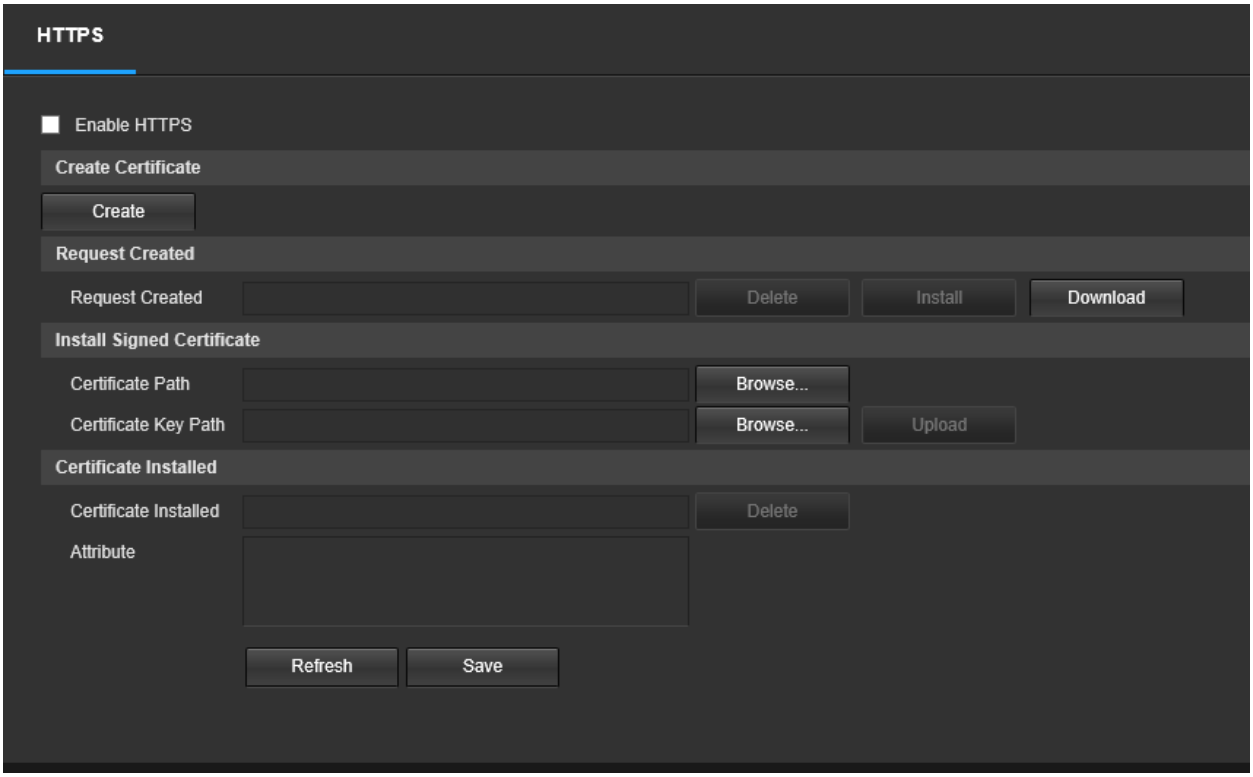

Before you create certificate or download certificate, from main window->Setup->Network->Connection, set the HTTPS port values and then check the box to enable HTTPS.

For more information on how to setup HTTPS in the web user interface visit:
https://www.youtube.com/watch?v=gkjlaf-Iuso

Event

This menu section allows the user to change different settings for triggering events.

Video Detection

The video detection menu has two tabs: Motion Detect and Video Tamper.

Motion Detect

This tab allows the user to modify motion detection settings. Below is a screenshot of the Motion Detect tab:

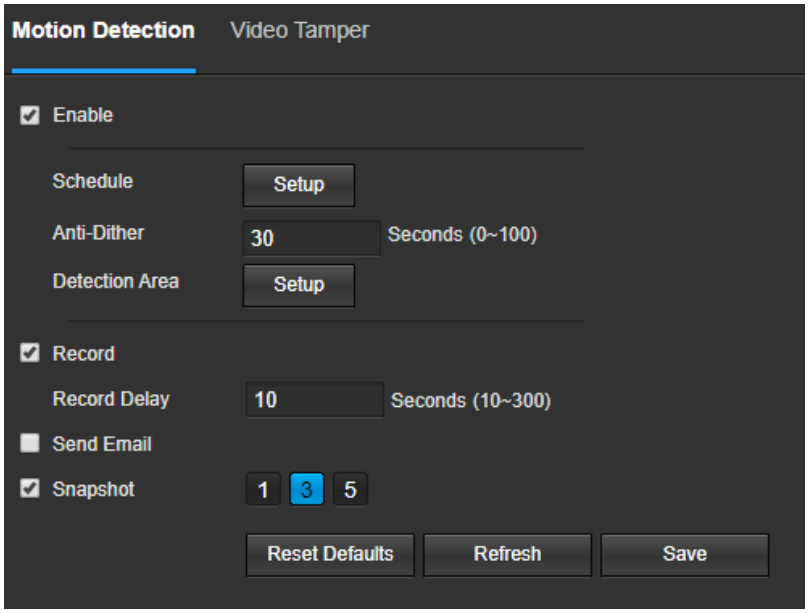

Below is an explanation of the fields on the Motion Detect tab:

Enable: This checkbox enables motion detection for the camera.
Schedule: Clicking this button opens a weekly schedule that can be used to set times.

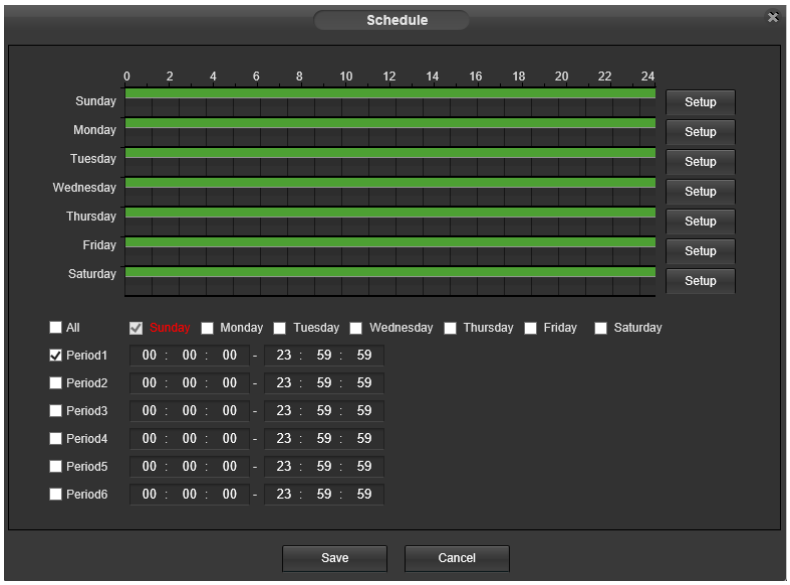

- Click and drag to set motion detection for certain days of the week. Also, periods of motion detection can be set for each day and enabled using the period settings on the bottom half of the screen. There are a total of 6 periods that can be set.
  Anti-Dither: This field allows the user to set the anti-dither time. The values in this field can range from 5 to 600 seconds. This time value controls how long the alarm signal lasts. Based on motion detection, a buzzer can go off, a tour can begin, , a snapshot can be taken, or the camera can begin recording.
- For example, if the anti-dither time is set to 10 seconds, each alarm may last 10 seconds if the local alarm is activated. During the process, if the system detects another local alarm signal at the fifth second, the buzzer, tour,

snapshot, record channel functions will begin another 10 seconds while the screen prompt, alarm upload, email will not be activated again. After 10 seconds, if system detects another alarm signal, it can generate a new alarm since the anti-dither time has expired.

- **Detection Area**: Clicking this button opens a pop-up screen that can be used to set detection areas.

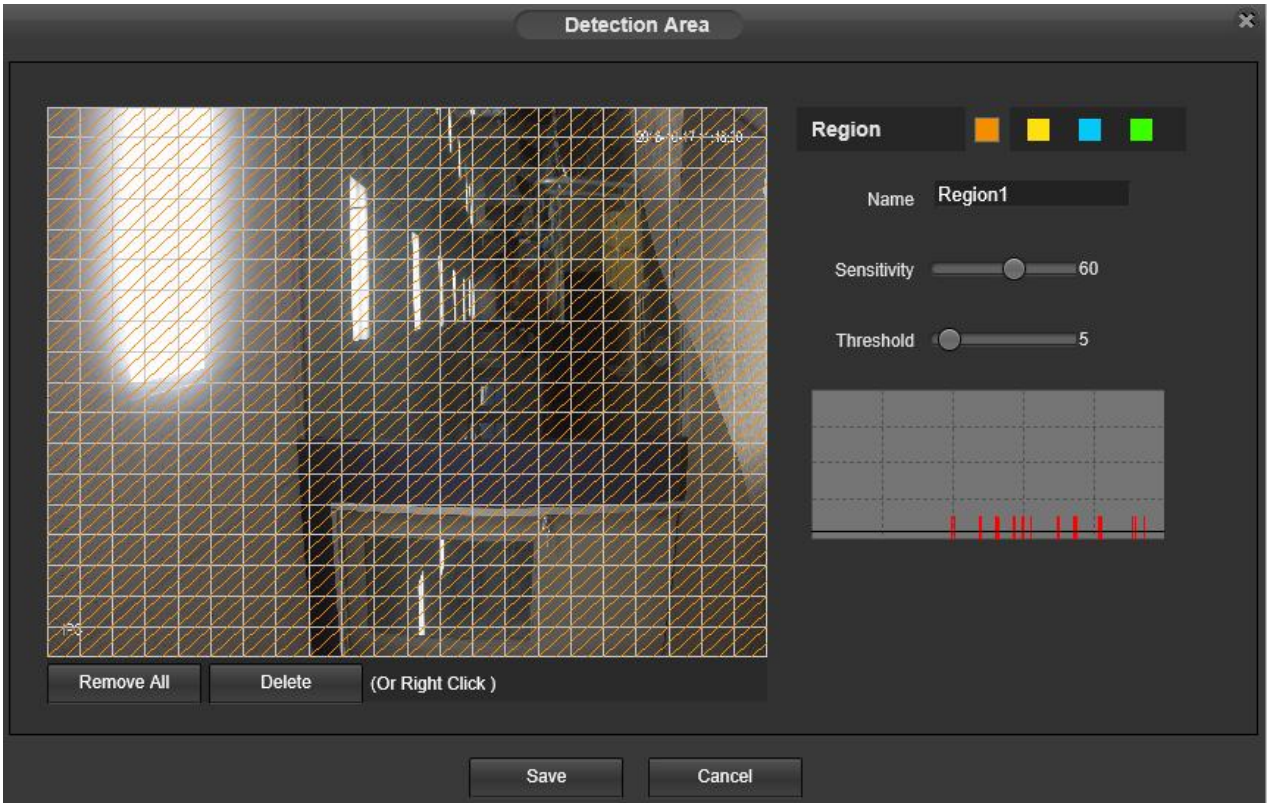

- When the setup button is clicked, a live stream of the video is shown. The user can then set up to 4 regions, each with their own region name, sensitivity (1-100), and threshold (1-100). Each region has a specific color, and the region selector tool is displayed when the mouse is moved to the top of the screen.

- Sensitivity is the amount of change required to increase the motion detected by a percentage. The lower the sensitivity, the more movement is required to trigger an alarm.
- Threshold is the level that the motion detection needs to reach to trigger an alarm. The lower the threshold, the more likely that motion will trigger an alarm.
- To designate a zone, click and drag the mouse over the area desired. When a colored box is displayed over the live feed, that area is now enabled for motion detection.
  After the motion detection zone is set, click the enter button to exit the motion detection screen.
  Remember to click the save button on the motion detection settings screen, otherwise the motion detection zones will not go into effect. Clicking the cancel button to leave the motion detection zone and will not save the zone setup.

- **Record**: This checkbox allows the user to enable the camera to record video when a motion detection alarm is triggered.
- **Record Delay**: This field specifies in seconds how long the delay between alarm activation and recording should be.
- **Relay Out**: This checkbox allows the user to enable the camera to trigger a connected alarm (connected to the alarm port on the back of the camera) when a motion detection alarm is triggered.

- **Alarm Delay**: This field specifies in seconds how long the delay between alarm activation and Relay alarm activation should be.
- **Send Email**: This checkbox allows the user to enable the camera to send an email when a motion detection alarm is triggered.
- **Snapshot**: This checkbox allows the user to enable the camera to take a snapshot when a motion detection alarm is triggered.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Video Tamper

This tab allows the user to modify video tamper settings. Below is a screenshot of the Video Tamper tab:

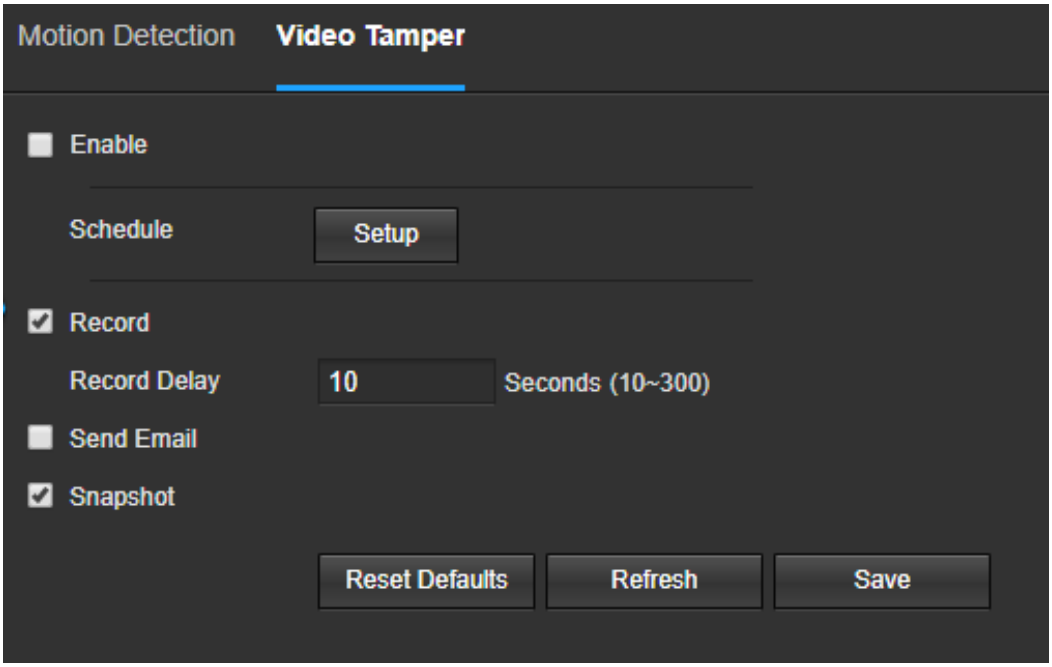

Below is an explanation of the fields on the Video Tamper tab:

- **Enable**: This checkbox enables a video tamper alarm for the camera.
- **Schedule**: Clicking this button opens a weekly schedule that can be used to set times.

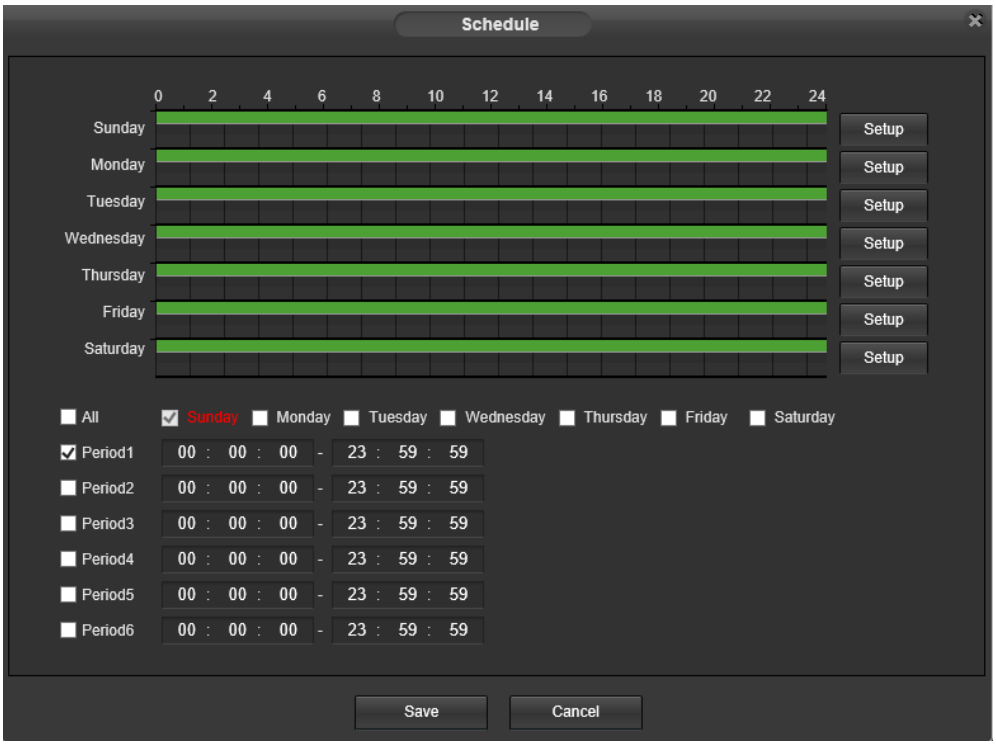

○ Click and drag to set video tampering for certain days of the week. Also, periods of video tampering can be set for each day and enabled using the period settings on the bottom half of the screen. There are a total of 6 periods that can be set.

- **Record**: This checkbox allows the user to enable the camera to record video when a video tampering alarm is triggered.
- **Record Delay**: This field specifies in seconds how long the delay between alarm activation and recording should be.
- **Relay Out**: This checkbox allows the user to enable the camera to trigger a connected alarm (connected to the alarm port on the back of the camera) when a video tamper alarm is triggered.
- **Alarm Delay**: This field specifies in seconds how long the delay between alarm activation and Relay alarm activation should be.
  Send Email: This checkbox allows the user to enable the camera to send an email when a video tampering alarm is triggered.
- **Snapshot**: This checkbox allows the user to enable the camera to take a snapshot when a video tampering alarm is triggered.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Audio Detection

This menu allows the user to modify audio detection settings. Below is a screenshot of the Audio Detect screen: Below is an explanation of the fields on the Audio Detection tab:

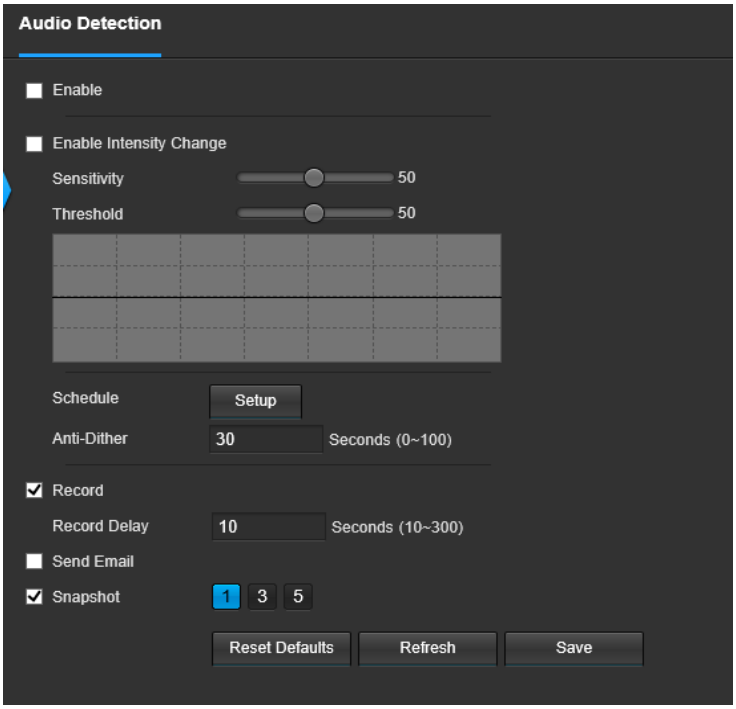

- **Enable**: This checkbox enables an audio detection alarm for the camera. Enable Intensity Change: This checkbox enables intensity change for the camera audio. o Sensitivity is the amount of change required to increase the audio detected by a percentage. The lower the sensitivity, the more audio variance is required to trigger an alarm.
- **Enable Intensity Change**: This checkbox enables the user to adjust sensitivity and threshold settings for audio detection.

o **Sensitivity**: The higher the sensitivity, the more likely that audio will trigger an alarm.

o **Threshold**: The lower the threshold, the more likely that audio will trigger an alarm.

- **Schedule**: Clicking this button opens a weekly schedule that can be used to set times.



Click and drag to set audio tampering for certain days of the week. Also, periods of audio detection can be set for each day and enabled using the period settings on the bottom half of the screen. There are a total of 6 periods that can be set. 93.

- **Anti-Dither**: This field allows the user to set the anti-dither time. The values in this field can range from 5 to 600 seconds. This time value controls how long the alarm signal lasts. Based on audio detection, a buzzer can go off, a tour can begin, PTZ can be activated, a snapshot can be taken, or the camera can begin recording.
  For example, if the anti-dither time is set to 10 seconds, each alarm may last 10 seconds if the local alarm is activated. During the process, if the system detects another local alarm signal at the fifth second, the buzzer, tour, PTZ activation, snapshot, record channel functions will begin another 10 seconds while the screen prompt, alarm upload, email will not be activated again. After 10 seconds, if system detects another alarm signal, it can generate a new alarm since the anti-dither time has expired.
- **Record**: This checkbox allows the user to enable the camera to record video when an audio detection alarm is triggered.
- **Record Delay**: This field specifies in seconds how long the delay between alarm activation and recording should be.
- **Send Email**: This checkbox allows the user to enable the camera to send an email when an audio detection alarm is triggered.
- **Snapshot:** This checkbox allows the user to enable the camera to take a snapshot when an audio detection alarm is triggered.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Smart Plan

A smart plan acts as the “master switch” for all AI features available in your camera. These features included, IVS, People Counting, and Heat map.

Below is a screenshot of the Smart Plan menu:

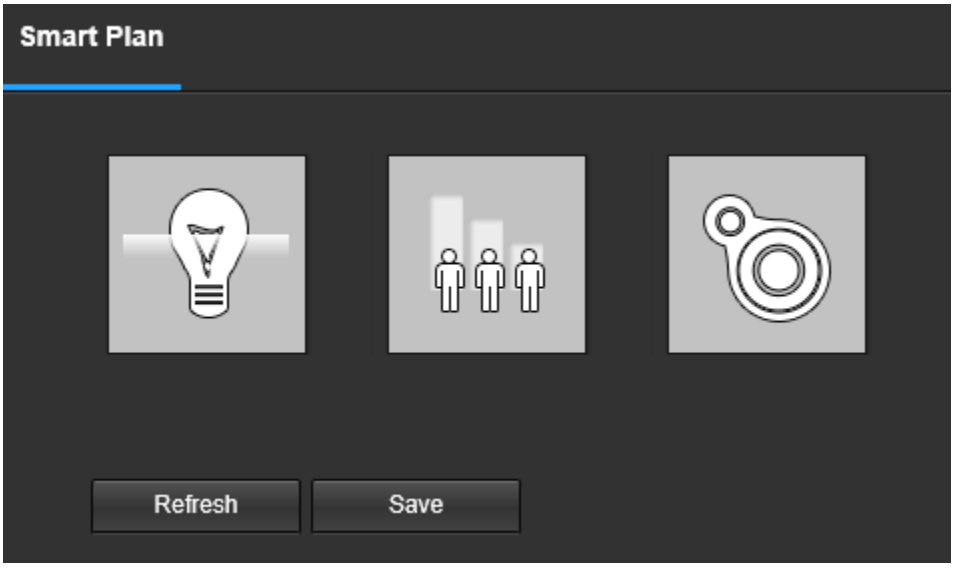

Note: A Smart Plan must be saved first to use any AI features in your camera. Both IVS and Heat Map settings can be activated simultaneously, however, People Counting will only function if IVS and Heat Map as disabled.

Below is a description of the features listed in the Smart Plan menu:

IVS: IVS stands for stands for intelligent video system analytics and is the basis for all the AI rules associated with your camera.
People Counting: People Counting allows the camera to automatically monitor how many people enter and exit a certain area. This is useful for constant and consistent monitoring of flow rate in a certain area.
Heat Map: Heat Map provides a general reporting of crowd density statistics based on color levels detected by the camera.

To refresh the menu to its original format, click the **Refresh** button. To save a smart plan to your camera, click the **Save** button.

IVS

IVS stands for stands for intelligent video system analytics and is the basis for all the AI rules associated with your camera. The IVS menu allows the user to customize and set IVS rules which allows the camera to produce general behavior analytics and reporting directly from the web user interface.

Below is a screenshot of the IVS menu:

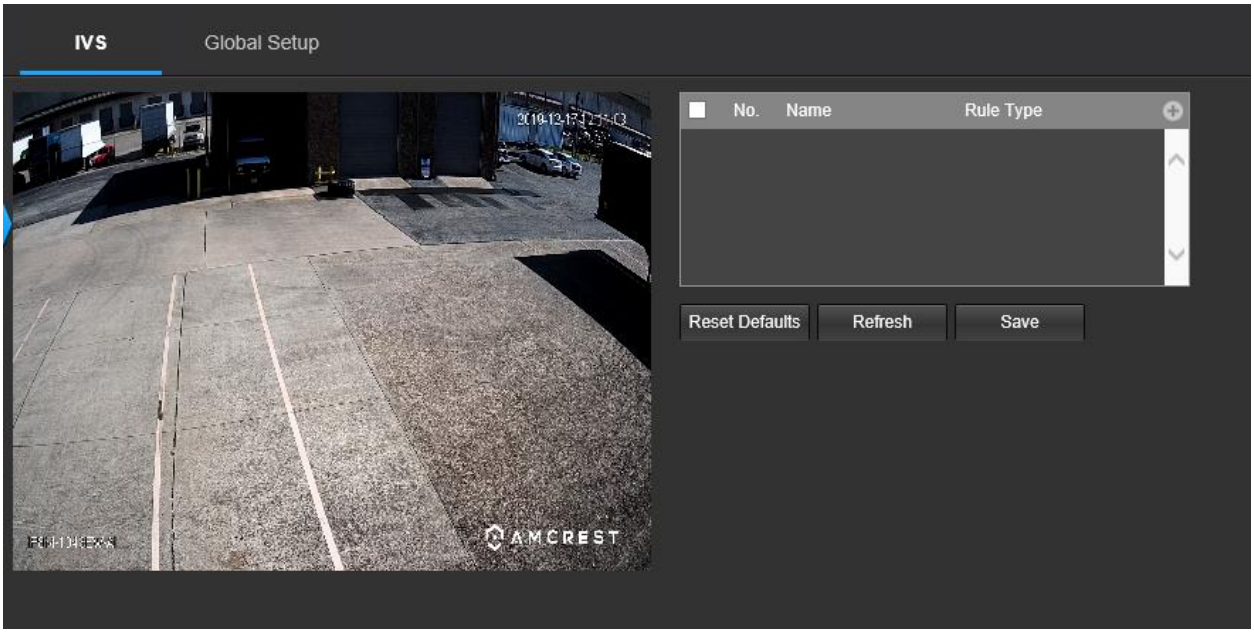

Setting an IVS Rule

All IVS rules can only be set and/or modified using the web user interface. They can not be set using the Amcrest View Pro app or any other platforms associated with your device. For more information on setting IVS rule, refer to the information below.

1. Ensure a Smart Plan has been activated in the Smart Plan menu for IVS.
2. Access the IVS menu and click on the Add ( ) icon to begin customizing IVS rules.
3. Use the dropdown menu in the Rule Type column to select which IVS rule you want to use.

Tripwire

Tripwire allows the camera to trigger an event if an object, such as a human or vehicle, crosses the set tripwire line. Below is a screenshot of the Tripwire menu:

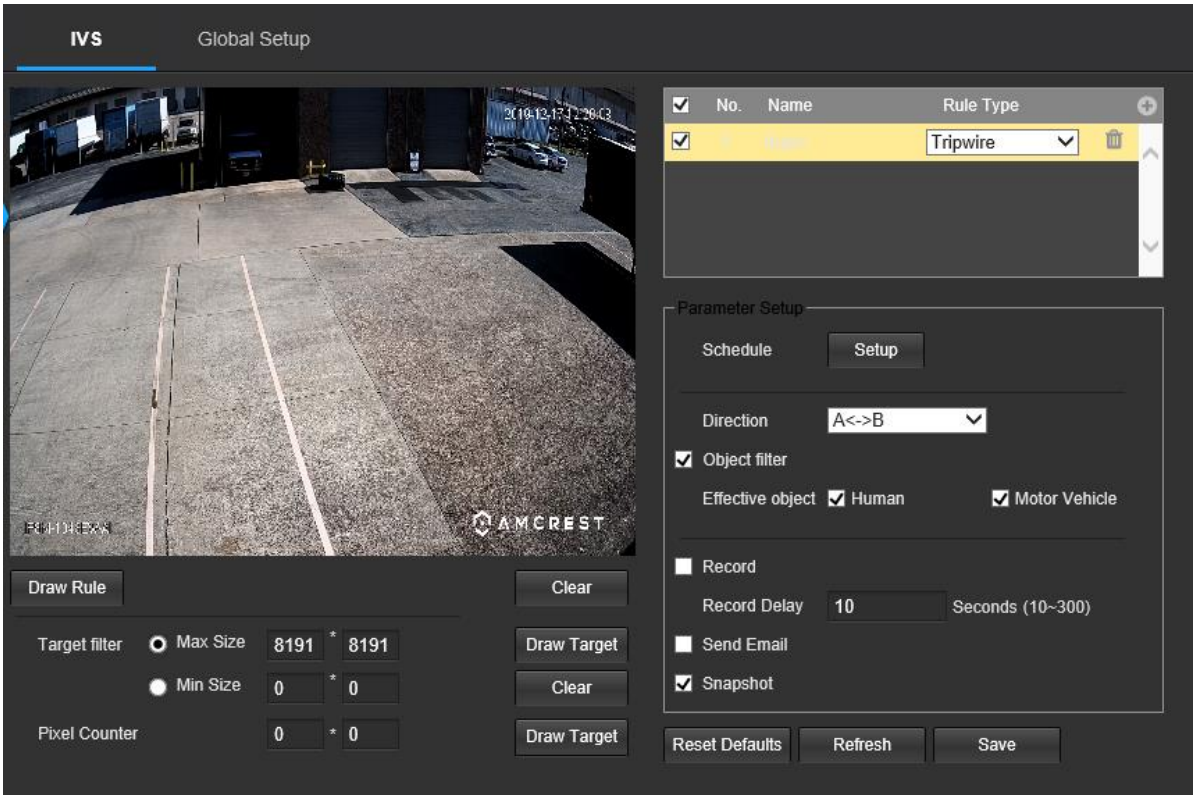

Below is a description of the features in this menu:

No.: Provides the order in which the IVS rules will be displayed in the menu.
Name: Allows the user to customize a name for their rule. Double click the name in the Rule column to modify.
Schedule: Allows the user to set a schedule in which the IVS rule will be triggered. **A Schedule must be set for IVS rules to function**.
Direction: This dropdown menu allows the user to set which direction the object will be going for the tripwire to be triggered. It can be set left, right, or in both directions (A<->B).
Object filter: The object filter checkboxes allow the camera to be triggered only when a specific object, such as a human or car, is detected by the camera. Both effective object checkboxes can be activated at the same time.

Human: This checkbox allows the camera to be triggered only when a human figure is detected.

Motor Vehicle: This checkbox allows the camera to be triggered only when a vehicle has been detected.

Record: This checkbox allows the user to enable the camera to record video when an IVS event is triggered.
Record Delay: This field specifies, in seconds, how long the delay between IVS events should be. The default is 10 seconds however this can be modified between 10~300 seconds.
Send Email: This checkbox allows the user to enable the camera to send an email when an IVS event is triggered.
Snapshot: This checkbox allows a snapshot of the IVS event to be sent via Email when triggered.
Draw Rule: This option allows the user to use their mouse to customize (draw) a rule/area on the screen. This will be the area or line in which an IVS rule will be triggered.
Clear: This option is used to clear the drawn rule set on the live monitor screen.
Target filter: Sets a maximum and minimum size in which an event will be triggered.

Draw Target: Allows the user to set a target area on the live monitor screen. **An IVS event will not occur outside the target box.**
Clear: Clears the modified target area to draw the target area on the live monitoring screen.
Pixel Counter: Used to measure and set the number of pixels in the target area on the live monitoring screen.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Setting a Tripwire

1. Select Tripwire from the Rule Type menu. Set a name for the rule by double clicking the mouse over the Name of the rule.
2. Click on **Setup** to set a schedule, set your periods (if any) and click **Save** to continue.
3. In the Direction menu, choose which direction the object will be going for the tripwire to be triggered.
4. An optional object filter can be set for tripwire that will allow the rule only to be triggered if it detects an effective object such as a human or vehicle. You can choose both filters if needed.
5. Enable the Record checkbox to record the event.
6. Check the Send Email and Snapshot checkboxes if you would like a snapshot of the event emailed to you. A valid Email address must be established in the camera prior to enabling this setting.
7. Click the **Draw Rule** option and use your mouse to draw the rule on the live monitoring screen. Once the rule has been drawn click the monitoring screen to finish setting the rule. The drawn line will turn blue/green when set depending on the browser you are using.

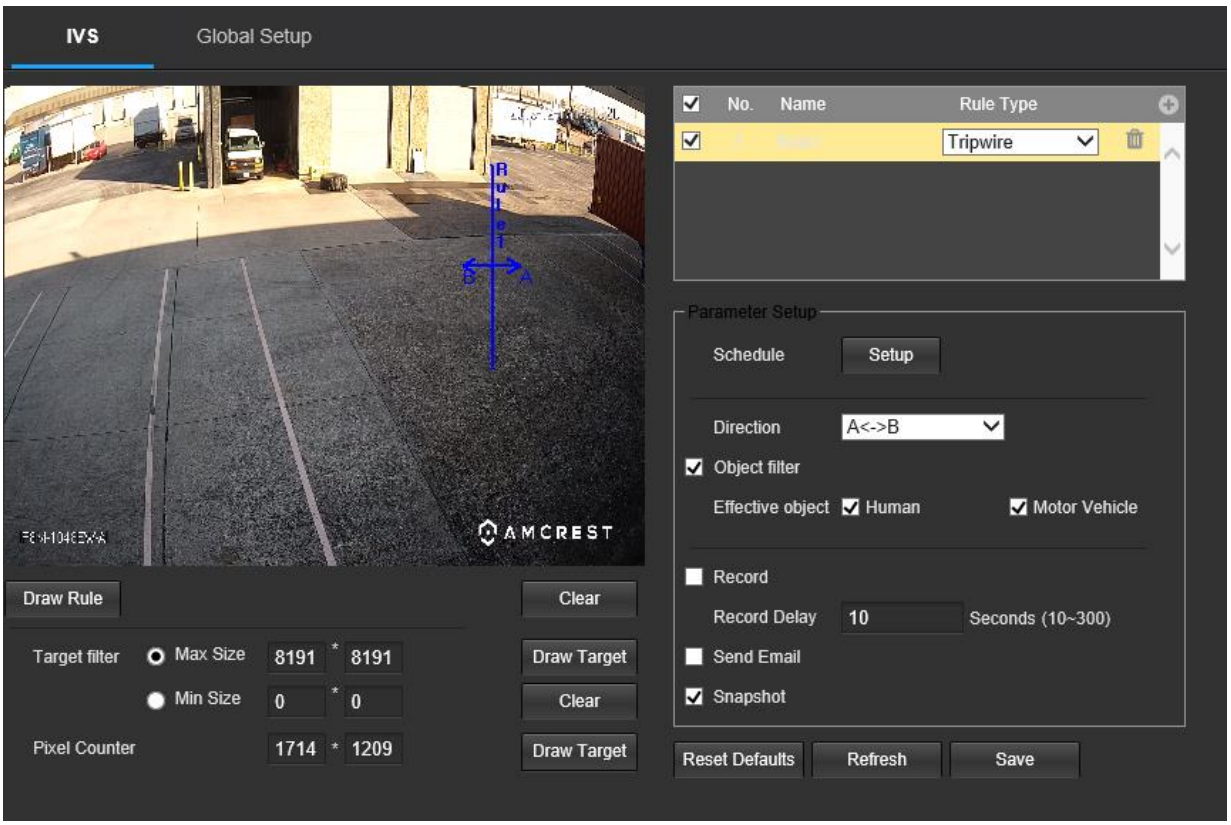

Note: The target filtering and pixel counter can be used to refine the set rule however for optimal experience it is highly recommended to leave these settings as default

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Intrusion

Intrusion allows the camera to trigger an event if an object, such as a human or vehicle, appears or crosses a set intrusion area set by the user . Below is a screenshot of the Intrusion menu:

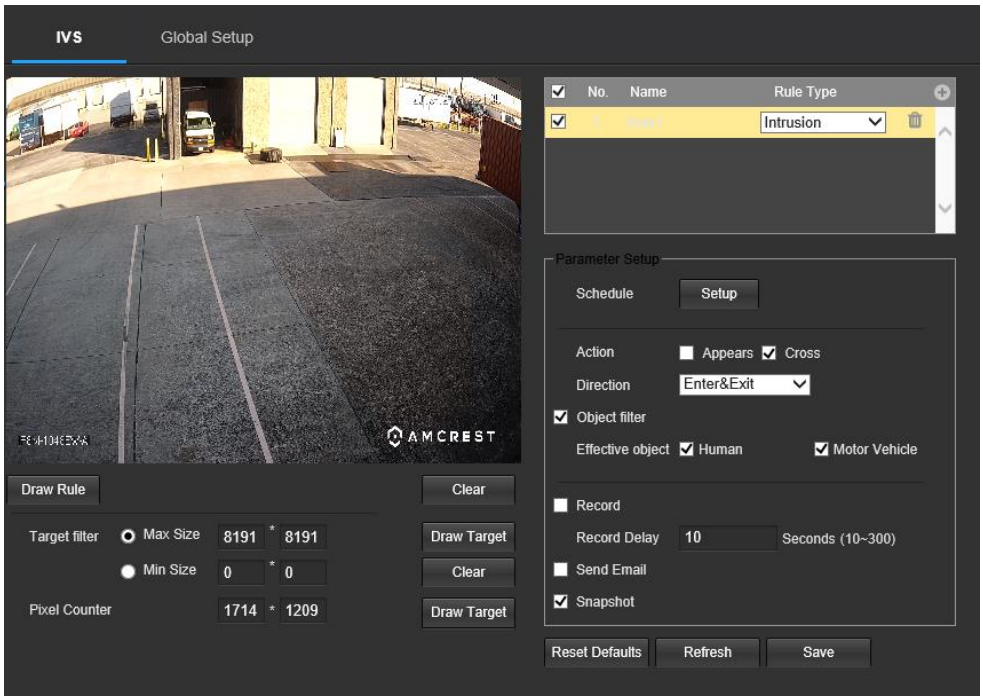

Below is a description of the features in this menu:

No.: Provides the order in which the IVS rules will be displayed in the menu.
Name: Allows the user to customize a name for their rule. Double click the name in the Rule column to modify.
Schedule: Allows the user to set a schedule in which the IVS rule will be triggered. **A Schedule must be set for IVS rules to function**.
Action: These checkboxes allow the user to choose a parameter filter that will activate a trigger if an object were to cross or appear in the set intrusion area.

Cross: The rule will trigger when a target enters or exits the area.

Appears: The rule will trigger when a target appears inside the area.

Direction: This dropdown menu allows the user to choose whether the rule will be triggered if an object enters, exits, or enters & exits a set line or area.
Object filter: The object filter checkboxes allow the camera to be triggered only when a specific object, such as a human or car, is detected by the camera. Both effective object checkboxes can be activated at the same time.

Human: This checkbox allows the camera to be triggered only when a human figure is detected.

Motor Vehicle: This checkbox allows the camera to be triggered only when a vehicle has been detected.

Record: This checkbox allows the user to enable the camera to record video when an IVS event is triggered.
Record Delay: This field specifies, in seconds, how long the delay between IVS events should be. The default is 10 seconds however this can be modified between 10~300 seconds.
Send Email: This checkbox allows the user to enable the camera to send an email when an IVS event is triggered.

Snapshot: This checkbox allows a snapshot of the IVS event to be sent via Email when triggered.
Draw Rule: This option allows the user to use their mouse to customize (draw) a rule/area on the screen. This will be the area or line in which an IVS rule will be triggered.
Clear: This option is used to clear the drawn rule set on the live monitor screen.
Target filter: Sets a maximum and minimum pixel size in which an event will be triggered.
Draw Target: Allows the user to set a target area on the live monitor screen. **An IVS event will not occur outside the target box.**
Clear: Clears the modified target area to draw the target area on the live monitoring screen.
Pixel Counter: Used to measure and set the number of pixels in the target area on the live monitoring screen.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Setting an Intrusion Area

1. Select Intrusion from the Rule Type menu. Set a name for the rule by double clicking the mouse over the Name of the rule.
2. Click on **Setup** to set a schedule, set your periods (if any) and click **Save** to continue.
3. In the **Action** menu, choose whether the rule will be triggered if an object appears or crosses the set region. Both options can be enabled at the same time if needed.
3. In the **Direction** menu, choose if the rule will be triggered if the object enters only, exits only, or enters & exits a set region.
4. An optional object filter can be set that will allow the rule only to be triggered if it detects an effective object such as a human or vehicle. You can choose both filters if needed.
5. Enable the **Record** checkbox to record the event.
6. Check the **Send Email** and **Snapshot** checkboxes if you would like a snapshot of the event emailed to you. A valid Email address must be established in the camera prior to enabling this setting.
7. Click the **Draw Rule** option and right click on the live monitoring screen. Use the mouse to draw your initial line. Once the initial line is set, right click the mouse again to continue drawing the region. Repeat the process and left click the mouse to complete the region. Right click on the live monitoring screen when finished to set the rule.

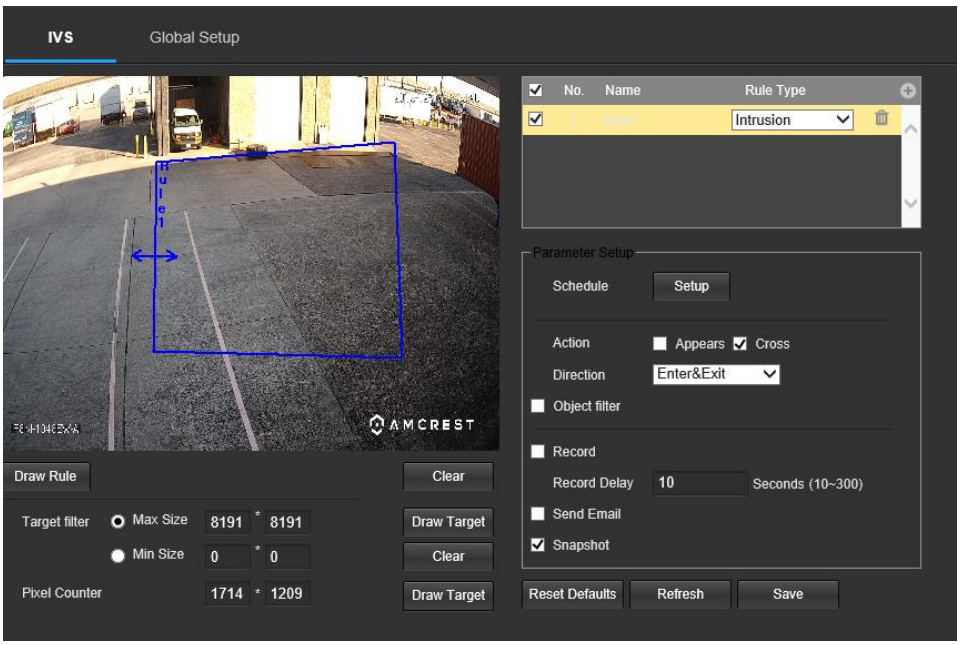

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Abandoned Object

Abandoned Object allows the camera to trigger an event if an object is placed in a set area for a specified amount of time. Below is a screenshot of the Abandoned Object menu:

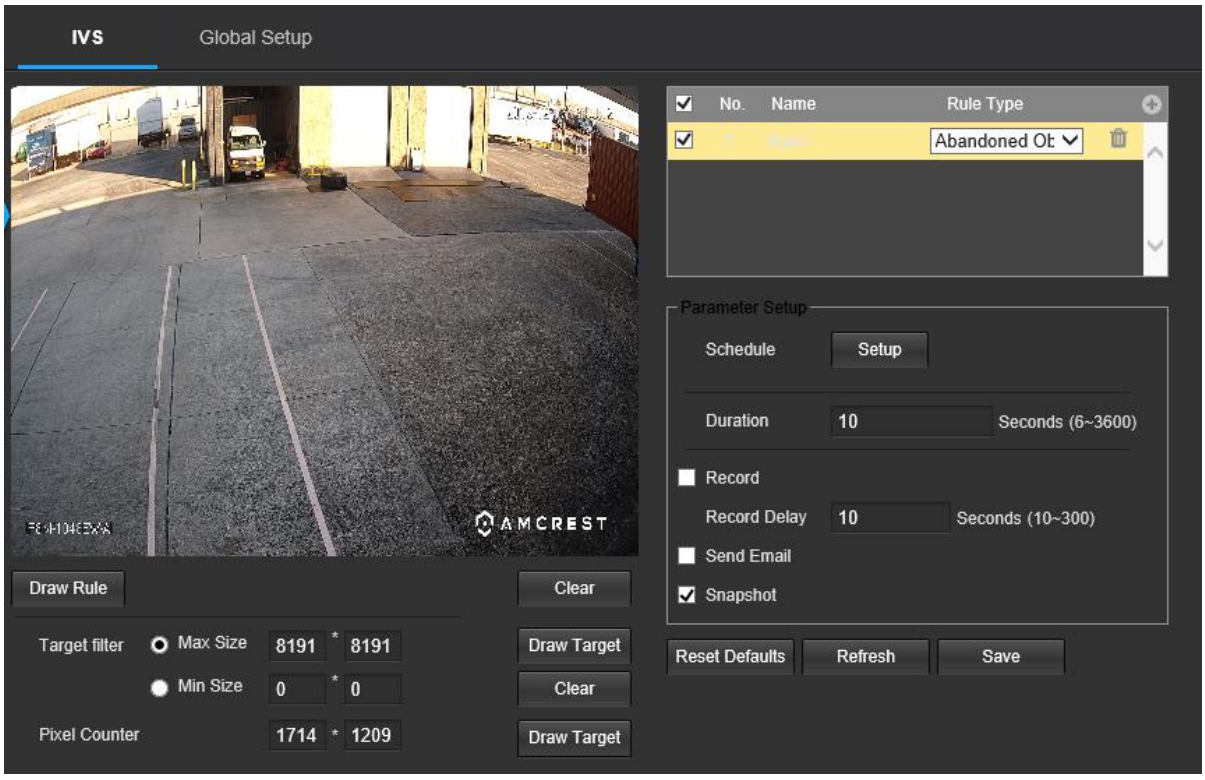

Below is a description of the features in this menu:

No.: Provides the order in which the IVS rules will be displayed in the menu.
Name: Allows the user to customize a name for their rule. Double click the name in the Rule column to modify.
Schedule: Allows the user to set a schedule in which the IVS rule will be triggered. **A Schedule must be set for IVS rules to function**.
Duration: Allows the user to set a specific time before the abandoned object triggers an event. The default is 10 seconds however it can be modified up to 3600 seconds.
Record: This checkbox allows the user to enable the camera to record video when an IVS event is triggered.
Record Delay: This field specifies, in seconds, how long the delay between IVS events should be. The default is 10 seconds however this can be modified between 10~300 seconds.
Send Email: This checkbox allows the user to enable the camera to send an email when an IVS event is triggered.
Snapshot: This checkbox allows a snapshot of the IVS event to be sent via Email when triggered.
Draw Rule: This option allows the user to use their mouse to customize (draw) a rule/area on the live monitoring screen. This will be the area or line in which an IVS rule will be triggered.
Clear: This option is used to clear the drawn rule set on the live monitor screen.
Target filter: Sets a maximum and minimum pixel size in which an event will be triggered.

Draw Target: Allows the user to set a target area on the live monitor screen. **An IVS event will not occur outside the target box.**
Clear: Clears the modified target area to draw the target area on the live monitoring screen.
Pixel Counter: Used to measure and set the number of pixels in the target area on the live monitoring screen.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Setting an Abandoned Object Rule

1. Select Abandoned Object from the Rule Type menu. Set a name for the rule by double clicking the mouse over the Name of the rule.
2. Click on **Setup** to set a schedule, set your periods (if any) and click **Save** to continue.
3. In the Duration menu, type in the number of seconds you would like to have before an abandoned object triggers an event. For best results, it is recommended to keep this option as default (10 seconds).
4. Enable the **Record** checkbox to record the event.
5. Enable the **Send Email** and **Snapshot** checkboxes if you would like a snapshot of the event emailed to you. A valid Email address must be established in the camera prior to enabling this setting.
6. Click the **Draw Rule** option and right click on the live monitoring screen. Use the mouse to draw your initial line. Once the initial line is set, right click the mouse again to continue drawing the region. Repeat the process and left click the mouse to complete the region. Right click on the live monitoring screen when finished to set the rule.

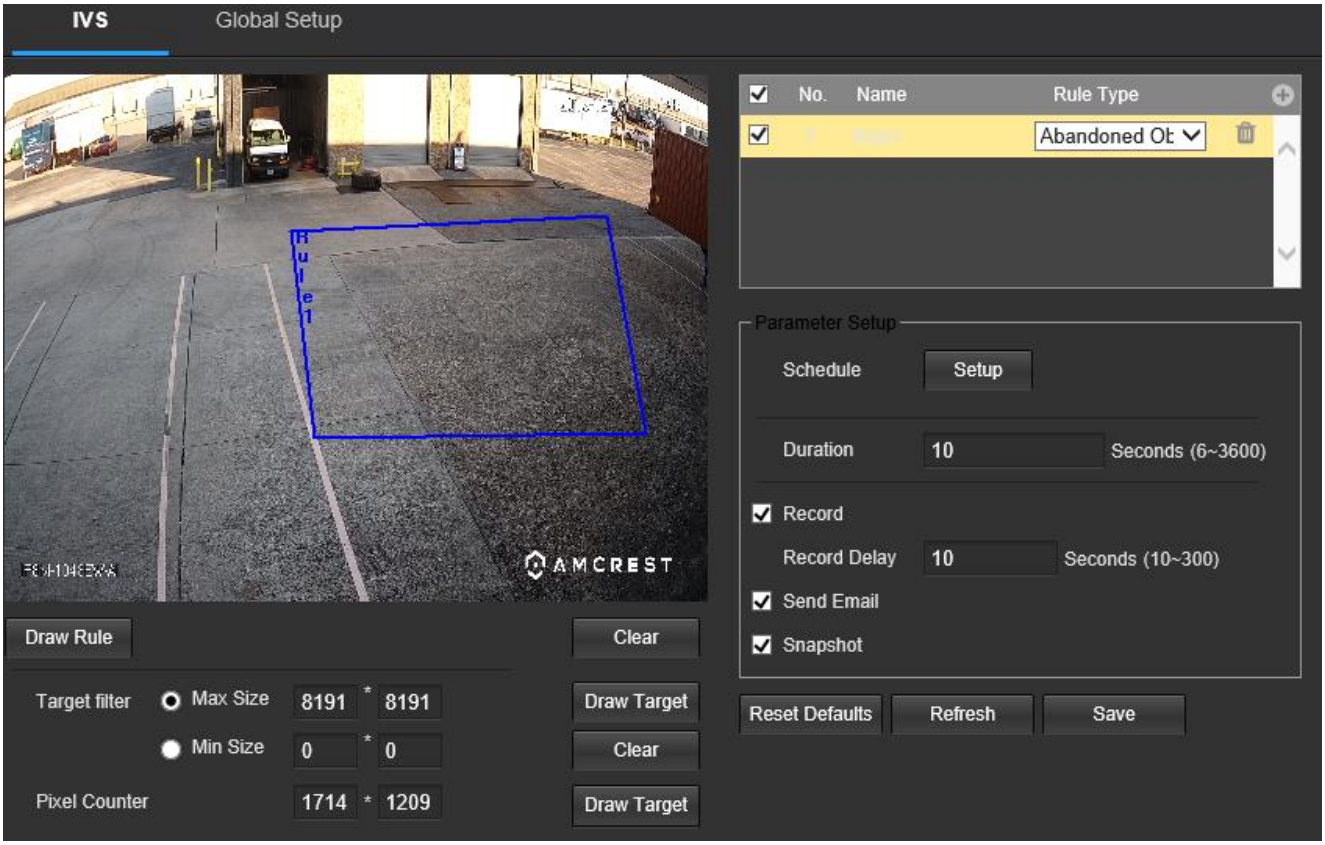

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Fast-Moving

Fast-Moving allows the camera to trigger an event if an object, such as a human or vehicle, quickly moves in an area set by the user . Below is a screenshot of the Fast-Moving menu:

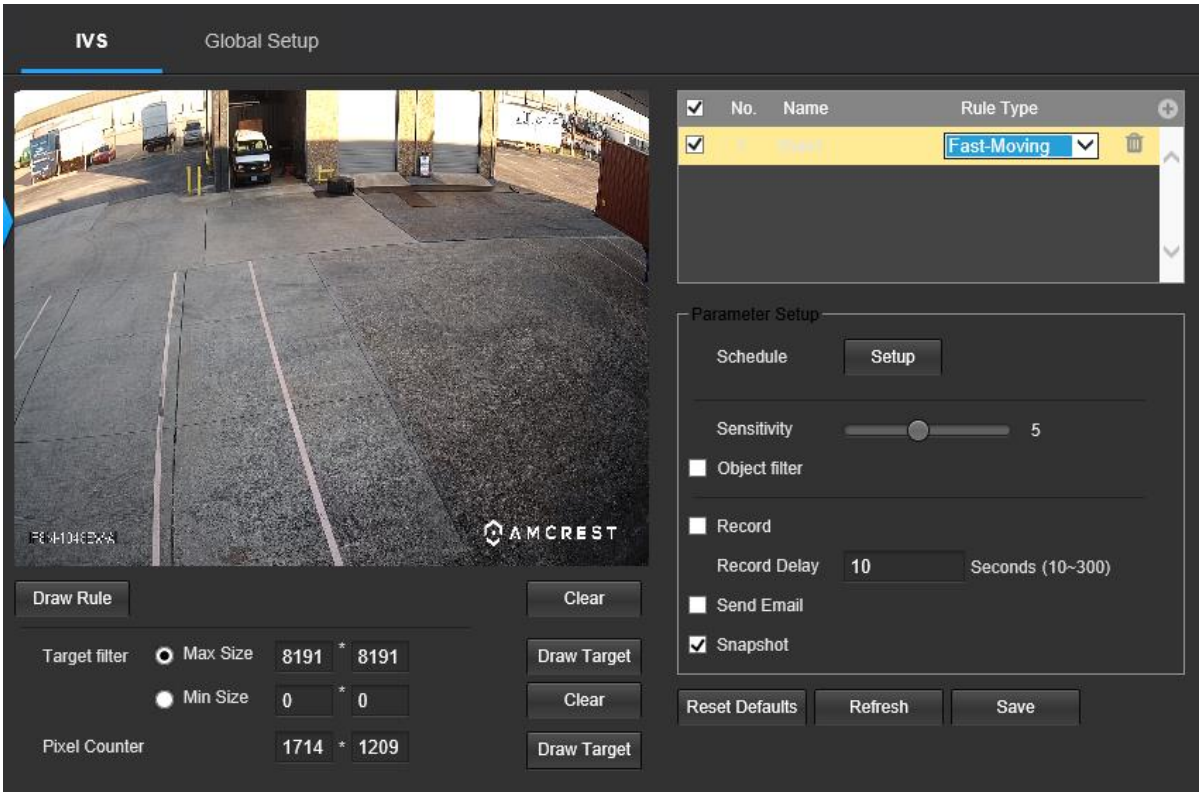

Below is a description of the features in this menu:

No.: Provides the order in which the IVS rules will be displayed in the menu.
Name: Allows the user to customize a name for their rule. Double click the name in the Rule column to modify.
Schedule: Allows the user to set a schedule in which the IVS rule will be triggered. **A Schedule must be set for IVS rules to function**.
Sensitivity: This slider allows the user to adjust the sensitivity of the rule being triggered. The default sensitivity is 5 however it can range from 1 ~ 11.
Object filter: The object filter checkboxes allow the camera to be triggered only when a specific object, such as a human or car, is detected by the camera. Both effective object checkboxes can be activated at the same time.

Human: This checkbox allows the camera to be triggered only when a human figure is detected.
Motor Vehicle: This checkbox allows the camera to be triggered only when a vehicle has been detected.

Record: This checkbox allows the user to enable the camera to record video when an IVS event is triggered.
Record Delay: This field specifies, in seconds, how long the delay between IVS events should be. The default is 10 seconds however this can be modified between 10~300 seconds.
Send Email: This checkbox allows the user to enable the camera to send an email when an IVS event is triggered.
Snapshot: This checkbox allows a snapshot of the IVS event to be sent via Email when triggered.
Draw Rule: This option allows the user to use their mouse to customize (draw) a rule/area on the screen. This will be the area or line in which an IVS rule will be triggered.
Clear: This option is used to clear the drawn rule set on the live monitor screen.
Target filter: Sets a maximum and minimum pixel size in which an event will be triggered.

Draw Target: Allows the user to set a target area on the live monitor screen. **An IVS event will not occur outside the target box.**
Clear: Clears the modified target area to draw the target area on the live monitoring screen.
Pixel Counter: Used to measure and set the number of pixels in the target area on the live monitoring screen.
To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Setting a Fast-Moving Rule

1. Select Fast-Moving from the Rule Type menu. Set a name for the rule by double clicking the mouse over the Name of the rule.
2. Click on **Setup** to set a schedule, set your periods (if any) and click **Save** to continue.
3. Set the sensitivity of the rule by adjusting the sensitivity slider. For optimal use, it is recommended to leave this slider at its default of 5.
4. An optional object filter can be set that will allow the rule only to be triggered if it detects an effective object such as a human or vehicle. You can choose both filters if needed.
5. Enable the **Record** checkbox to record the event.
6. Check the **Send Email** and **Snapshot** checkboxes if you would like a snapshot of the event emailed to you. A valid Email address must be established in the camera prior to enabling this setting.
7. Click the **Draw Rule** option and right click on the live monitoring screen. Use the mouse to draw your initial line. Once the initial line is set, right click the mouse again to continue drawing the region. Repeat the process and left click the mouse to complete the region. Right click on the live monitoring screen when finished to set the rule.

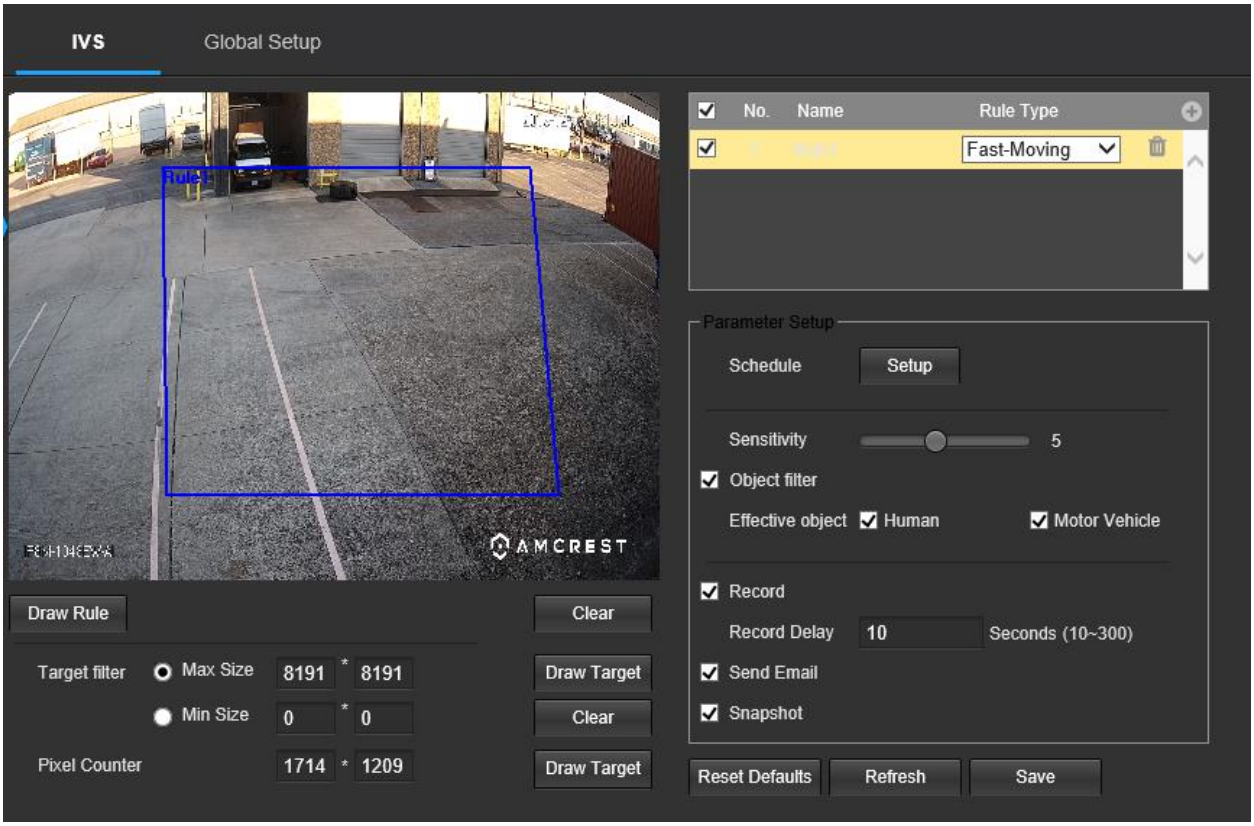

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Parking Detection

Parking Detection allows the camera to trigger an event if an object, such as a motor vehicle is parked in a set area for a specified amount of time. Below is a screenshot of the Parking Detection menu:

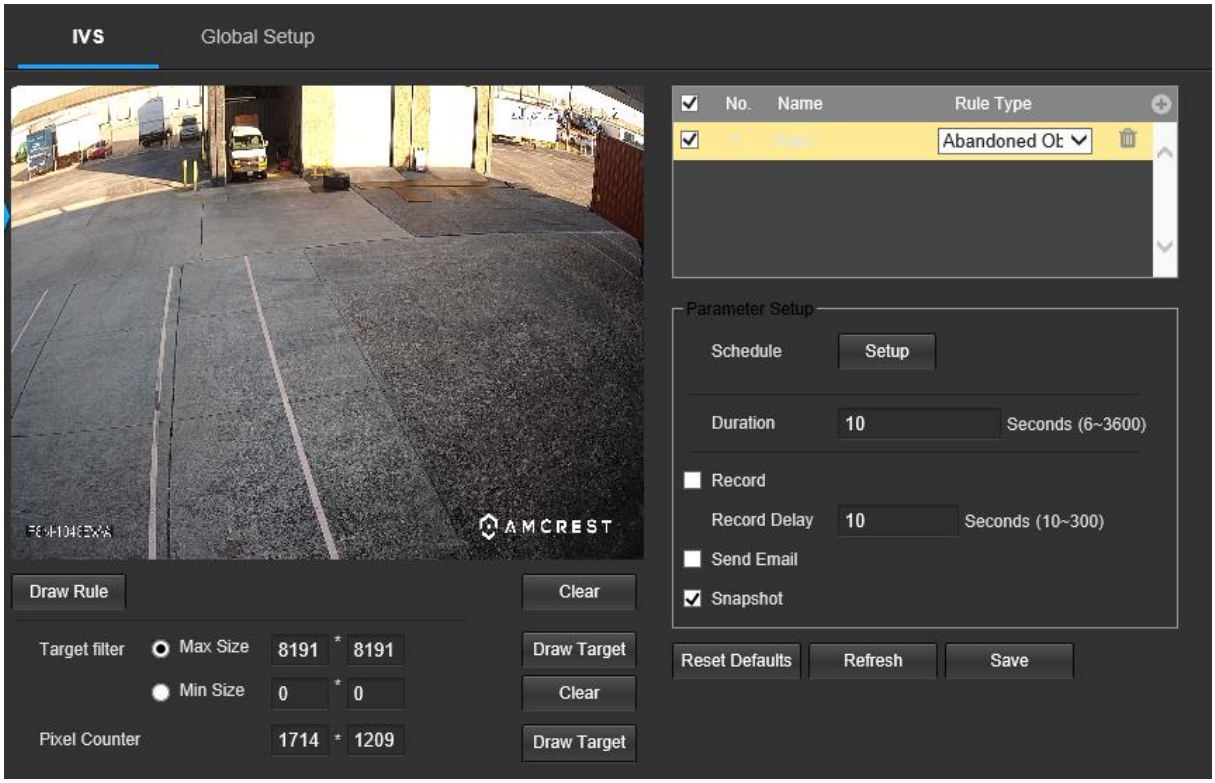

Below is a description of the features in this menu:

No.: Provides the order in which the IVS rules will be displayed in the menu.
Name: Allows the user to customize a name for their rule. Double click the name in the Rule column to modify.
Schedule: Allows the user to set a schedule in which the IVS rule will be triggered. **A Schedule must be set for IVS rules to function**.
Duration: Allows the user to set a specific time before the abandoned object triggers an event. The default is 6 seconds however it can be modified up to 300 seconds.
Record: This checkbox allows the user to enable the camera to record video when an IVS event is triggered.
Record Delay: This field specifies, in seconds, how long the delay between IVS events should be. The default is 10 seconds however this can be modified between 10~300 seconds.
Send Email: This checkbox allows the user to enable the camera to send an email when an IVS event is triggered.
Snapshot: This checkbox allows a snapshot of the IVS event to be sent via Email when triggered.
Draw Rule: This option allows the user to use their mouse to customize (draw) a rule/area on the live monitoring screen. This will be the area or line in which an IVS rule will be triggered.
Clear: This option is used to clear the drawn rule set on the live monitor screen.
Target filter: Sets a maximum and minimum pixel size in which an event will be triggered.
Draw Target: Allows the user to set a target area on the live monitor screen. **An IVS event will not occur outside the target box.**
Clear: Clears the modified target area to draw the target area on the live monitoring screen.
Pixel Counter: Used to measure and set the number of pixels in the target area on the live monitoring screen.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Setting a Parking Detection Rule

1. Select Parking Detection from the Rule Type menu. Set a name for the rule by double clicking the mouse over the Name of the rule.
2. Click on **Setup** to set a schedule, set your periods (if any) and click **Save** to continue.
3. In the **Duration** menu, type in the number of seconds you would like to have before the event is triggered For best results, it is recommended to keep this option as default (6 seconds).
4. Enable the **Record** checkbox to record the event.
5. Enable the **Send Email** and **Snapshot** checkboxes if you would like a snapshot of the event emailed to you. A valid Email address must be established in the camera prior to enabling this setting.
6. Click the **Draw Rule** option and right click on the live monitoring screen. Use the mouse to draw your initial line. Once the initial line is set, right click the mouse again to continue drawing the region. Repeat the process and left click the mouse to complete the region. Right click on the live monitoring screen when finished to set the rule.

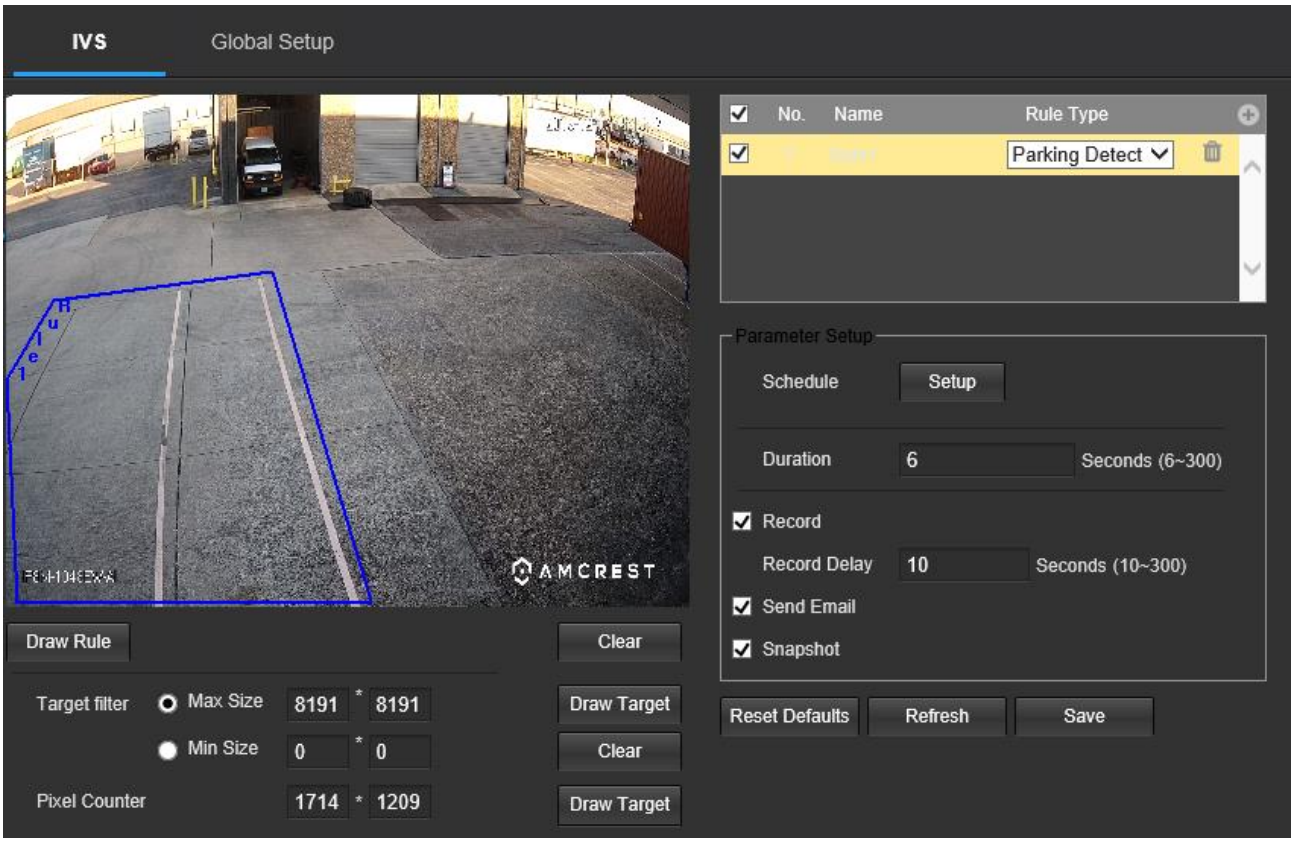

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Crowd Gathering Estimation

Crowd Gathering Estimation is used to detect a group of people that enter or exit a specific area set by the user on the live view screen. Below is a screenshot of the Crowd Gathering Estimation menu:

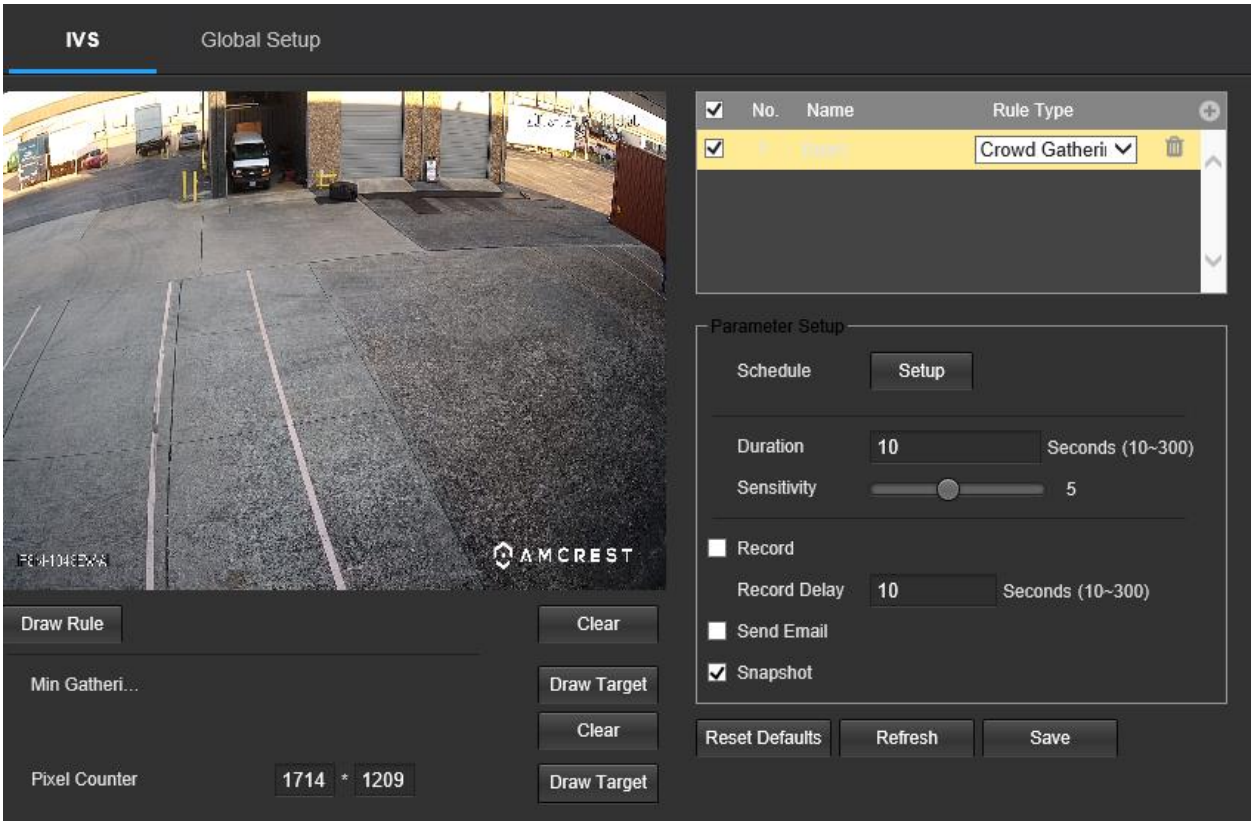

Below is a description of the features in this menu:

No.: Provides the order in which the IVS rules will be displayed in the menu.
Name: Allows the user to customize a name for their rule. Double click the name in the Rule column to modify.
Schedule: Allows the user to set a schedule in which the IVS rule will be triggered. **A Schedule must be set for IVS rules to function**.
Duration: Allows the user to set a specific time before the trigger is activated. The default is 10 seconds however it can be modified up to 300 seconds.
Sensitivity: This slider allows the user to adjust the sensitivity of the rule being triggered. The default sensitivity is 5 however it can range from 1 ~ 11.
Record: This checkbox allows the user to enable the camera to record video when an IVS event is triggered.
Record Delay: This field specifies, in seconds, how long the delay between IVS events should be. The default is 10 seconds however this can be modified between 10~300 seconds.
Send Email: This checkbox allows the user to enable the camera to send an email when an IVS event is triggered.
Snapshot: This checkbox allows a snapshot of the IVS event to be sent via Email when triggered.
Draw Rule: This option allows the user to use their mouse to customize (draw) a rule/area on the live monitoring screen. This will be the area or line in which an IVS rule will be triggered.
Clear: This option is used to clear the drawn rule set on the live monitor screen.
Draw Target: Allows the user to set a target area on the live monitor screen. **An IVS event will not occur outside the target box.**
Clear: Clears the modified target area to draw the target area on the live monitoring screen.
Pixel Counter: Used to measure and set the number of pixels in the target area on the live monitoring screen.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Setting a Crowd Gathering Rule

1. Select Crowd Gathering from the Rule Type menu. Set a name for the rule by double clicking the mouse on the Name of the rule.
2. Click on **Setup** to set a schedule, set your periods (if any) and click **Save** to continue.
3. In the **Duration** menu, type in the number of seconds you would like to have before the event is triggered. For best results, it is recommended to keep this option as default.
4. Use the sensitivity slider to adjust the sensitivity of the rule. A general formula for the Crowd Gathering Estimation is as follows:

11 – [Sensitivity Value] x 3 = # of people required to trigger an event.

Sensitivity Value	1	2	3	4	5	6	7	8	9	10	11
# of People	30	27	24	21	18	15	12	9	6	3	1

4. Enable the **Record** checkbox to record the event.
5. Enable the **Send Email** and **Snapshot** checkboxes if you would like a snapshot of the event emailed to you. A valid Email address must be established in the camera prior to enabling this setting.
6. Click the **Draw Rule** option and right click on the live monitoring screen. Use the mouse to draw your initial line. Once the initial line is set, right click the mouse again to continue drawing the region. Repeat the process and left click the mouse to complete the region. Right click on the live monitoring screen when finished to set the rule.

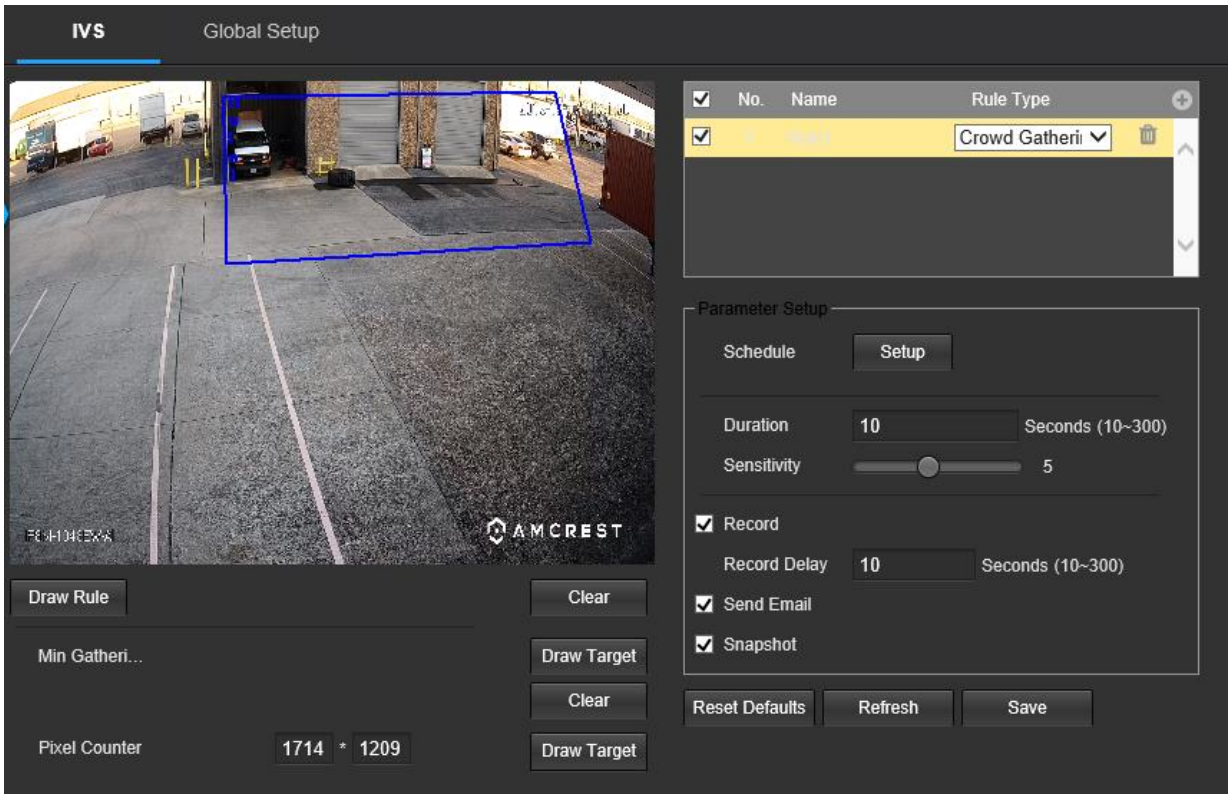

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Missing Object

Missing Object allows the user to set a region around an object and if the object is moved or missing from the set region an alarm will be triggered. Below is a screenshot of the Missing Object menu:

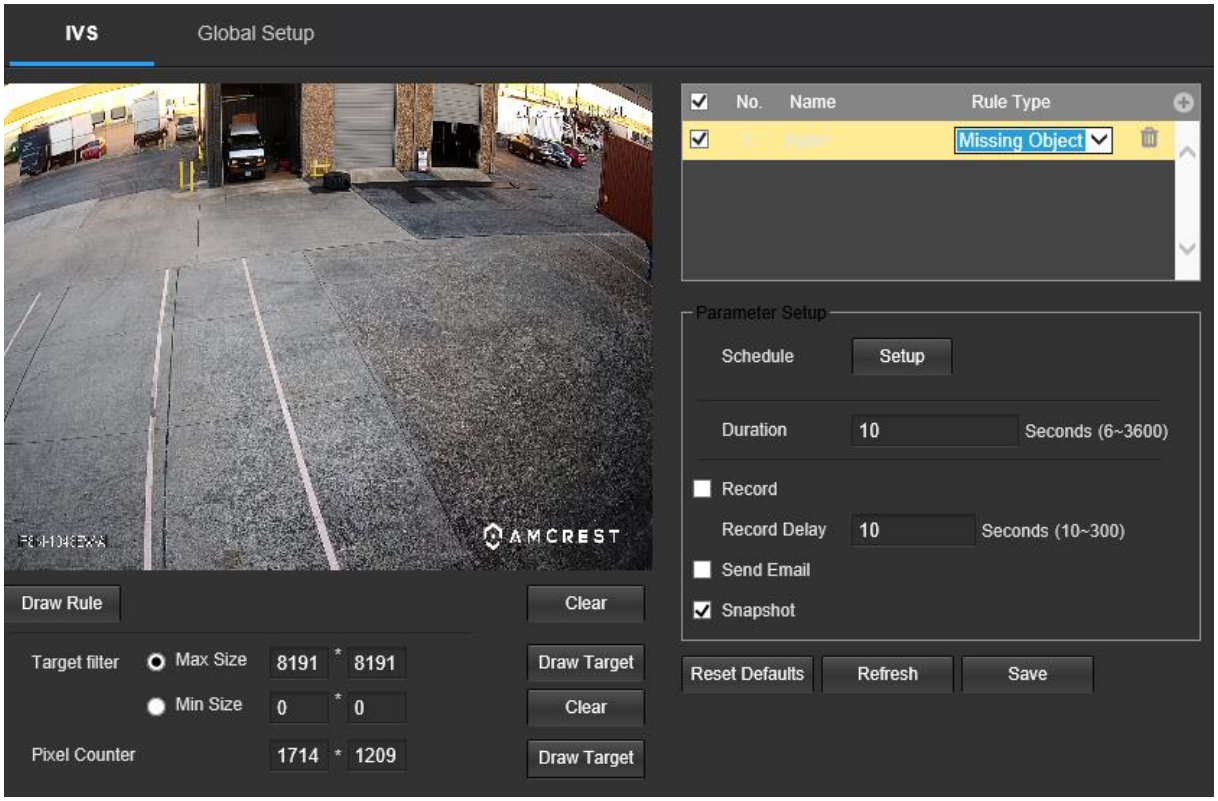

Below is a description of the features in this menu:

No.: Provides the order in which the IVS rules will be displayed in the menu.
Name: Allows the user to customize a name for their rule. Double click the name in the Rule column to modify.
Schedule: Allows the user to set a schedule in which the IVS rule will be triggered. **A Schedule must be set for IVS rules to function**.
Duration: Allows the user to set a specific time before the missing object triggers an event. The default is 10 seconds however it can be modified up to 3600 seconds.
Record: This checkbox allows the user to enable the camera to record video when an IVS event is triggered.
Record Delay: This field specifies, in seconds, how long the delay between IVS events should be. The default is 10 seconds however this can be modified between 10~300 seconds.
Send Email: This checkbox allows the user to enable the camera to send an email when an IVS event is triggered.
Snapshot: This checkbox allows a snapshot of the IVS event to be sent via Email when triggered.
Draw Rule: This option allows the user to use their mouse to customize (draw) a rule/area on the live monitoring screen. This will be the area or line in which an IVS rule will be triggered.
Clear: This option is used to clear the drawn rule set on the live monitor screen.
Target filter: Sets a maximum and minimum pixel size in which an event will be triggered.
Draw Target: Allows the user to set a target area on the live monitor screen. **An IVS event will not occur outside the target box.**
Clear: Clears the modified target area to draw the target area on the live monitoring screen.
Pixel Counter: Used to measure and set the number of pixels in the target area on the live monitoring screen.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Setting a Missing Object Rule

1. Select Missing Object from the Rule Type menu. Set a name for the rule by double clicking the mouse over the Name of the rule.
2. Click on **Setup** to set a schedule, set your periods (if any) and click **Save** to continue.
3. In the **Duration** menu, type in the number of seconds you would like to have before an abandoned object triggers an event. For best results, it is recommended to keep this option as default (10 seconds).
4. Enable the **Record** checkbox to record the event.
5. Set the number of seconds the event will be delayed in between triggers. It is recommended to leave this as default.
6. Enable the **Send Email** and **Snapshot** checkboxes if you would like a snapshot of the event emailed to you. A valid Email address must be established in the camera prior to enabling this setting.
7. Click the **Draw Rule** option and right click on the live monitoring screen. Use the mouse to draw your initial line. Once the initial line is set, right click the mouse again to continue drawing the region around the object. Repeat the process and left click the mouse to complete the region. Right click on the live monitoring screen when finished to set the rule.

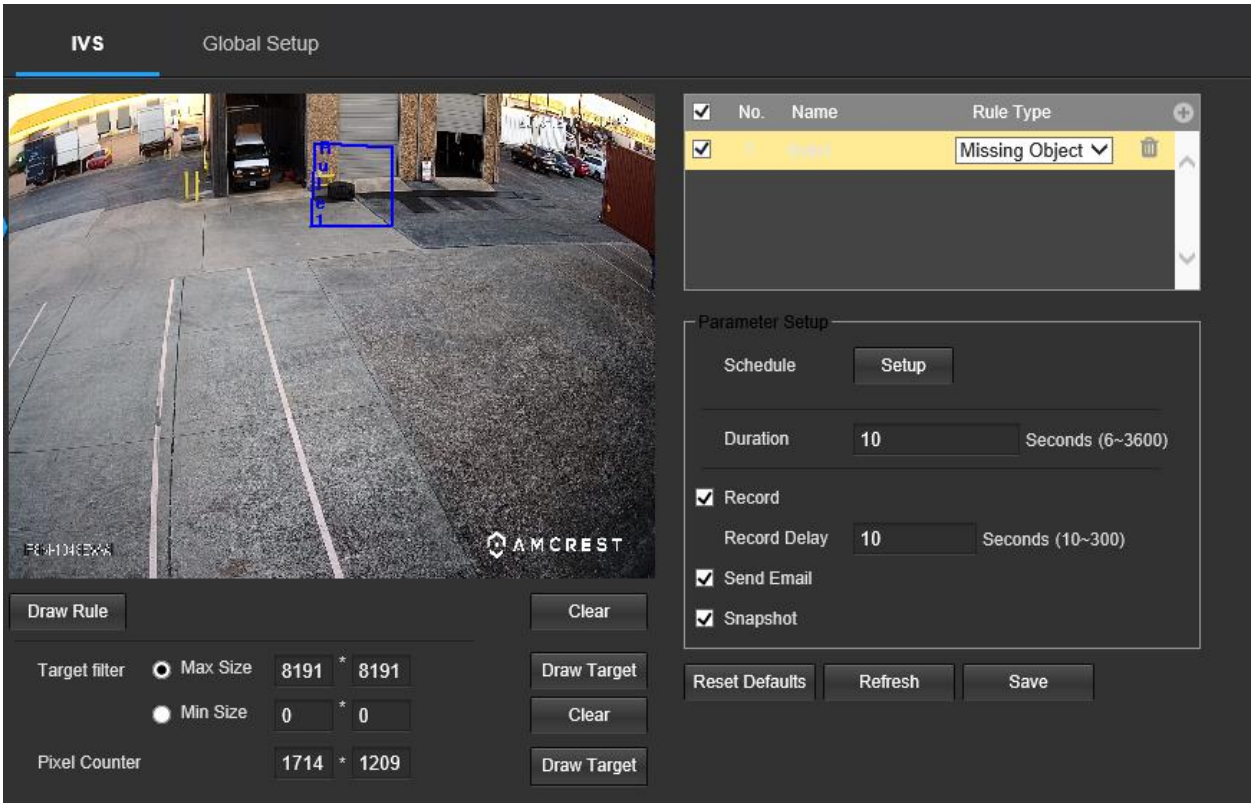

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Loitering Detection

Loitering Detection is used to detect if a person or group are loitering in a specific area set by the user.
Below is a screenshot of the Loitering Detection menu:

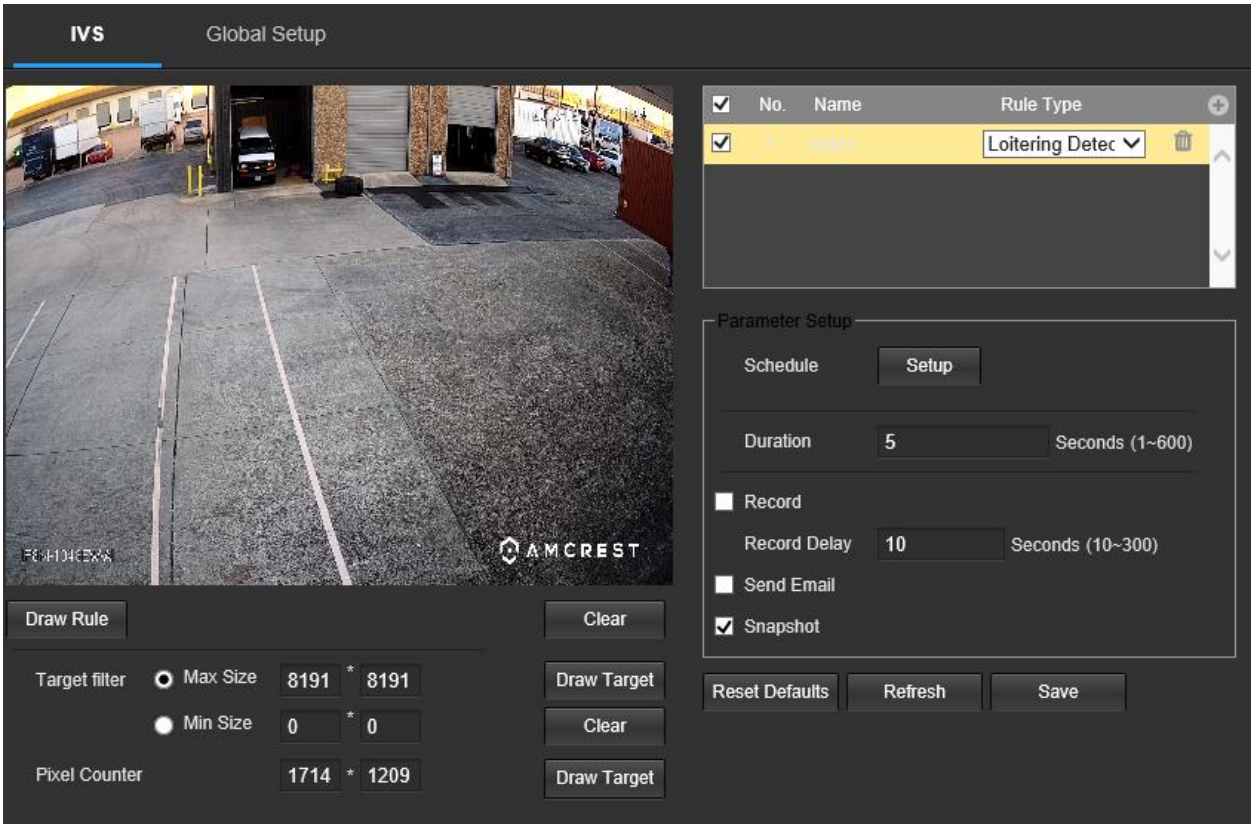

Below is a description of the features in this menu:

No.: Provides the order in which the IVS rules will be displayed in the menu.
Name: Allows the user to customize a name for their rule. Double click the name in the Rule column to modify.
Schedule: Allows the user to set a schedule in which the IVS rule will be triggered. **A Schedule must be set for IVS rules to function**.
Duration: Allows the user to set a specific time before the trigger is activated. The default is 10 seconds however it can be modified up to 300 seconds.
Record: This checkbox allows the user to enable the camera to record video when an IVS event is triggered.
Record Delay: This field specifies, in seconds, how long the delay between IVS events should be. The default is 10 seconds however this can be modified between 10~300 seconds.
Send Email: This checkbox allows the user to enable the camera to send an email when an IVS event is triggered.
Snapshot: This checkbox allows a snapshot of the IVS event to be sent via Email when triggered.
Draw Rule: This option allows the user to use their mouse to customize (draw) a rule/area on the live monitoring screen. This will be the area or line in which an IVS rule will be triggered.
Clear: This option is used to clear the drawn rule set on the live monitor screen.
Draw Target: Allows the user to set a target area on the live monitor screen. **An IVS event will not occur outside the target box.**
Clear: Clears the modified target area to draw the target area on the live monitoring screen.
Pixel Counter: Used to measure and set the number of pixels in the target area on the live monitoring screen.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Setting a Loitering Detection Rule

1. Select Loitering Detection from the Rule Type menu. Set a name for the rule by double clicking the mouse on the Name of the rule.
2. Click on **Setup** to set a schedule, set your periods (if any) and click **Save** to continue.
3. In the **Duration** menu, type in the number of seconds you would like to have before the event is triggered. For best results, it is recommended to keep this option as default.
4. Enable the **Record** checkbox to record the event.
5. Enable the **Send Email** and **Snapshot** checkboxes if you would like a snapshot of the event emailed to you. A valid Email address must be established in the camera prior to enabling this setting.
6. Click the **Draw Rule** option and right click on the live monitoring screen. Use the mouse to draw your initial line. Once the initial line is set, right click the mouse again to continue drawing the region. Repeat the process and left click the mouse to complete the region. Right click on the live monitoring screen when finished to set the rule.

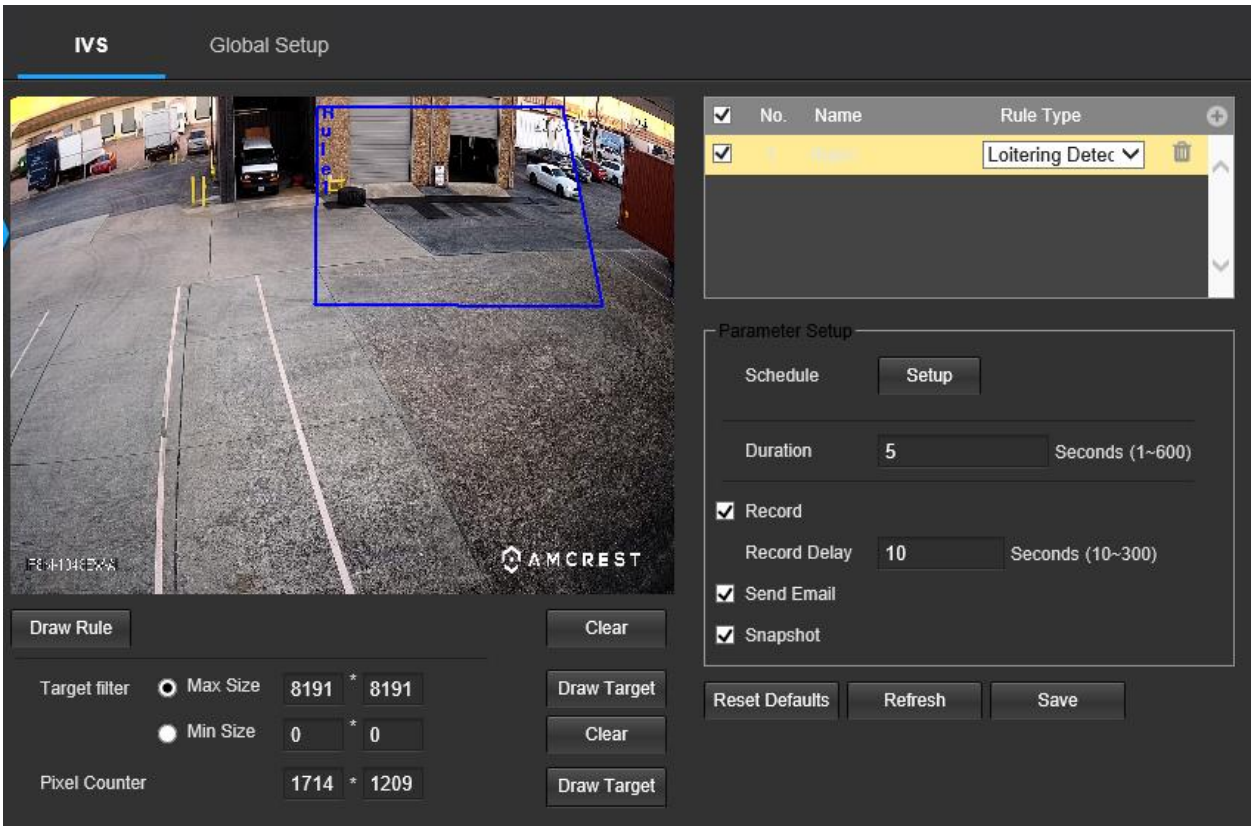

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Global Setup

The Global Setup menu allows the user to calibrate specified IVS areas on the live monitoring menu. Calibration is used to increase the efficiency of the overall reporting and detection of IVS events. Below is a screenshot of the Global Setup menu:

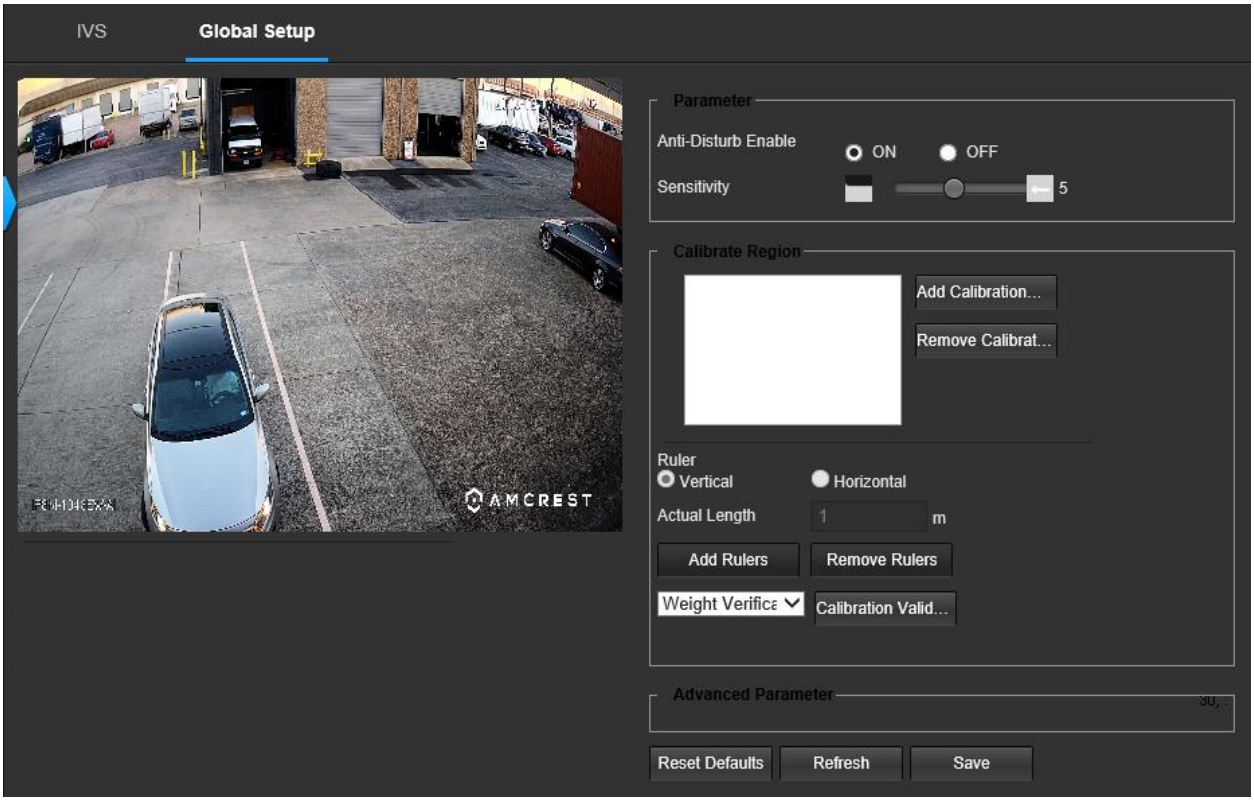

Below is a description of the features listed in this menu.

Anti-Disturb Enable: These radio buttons allow the user to enable or disable anti-disturb. Anti-disturb is used to filter shaking leaves, water ripples, or any other disturbance that could affect IVS reporting.
Sensitivity: This slider is used to adjust the sensitivity of the calibration settings used for IVS reporting.
Add Calibration: Allows the user to create a detection area in which IVS rules will be calibrated.
Remove Calibration: Clears the set detection area from the live monitoring screen.
Ruler: These radio buttons allow the user to set either vertical or horizontal rulers on the live monitoring screen.

> **Note:** You can add a total of 3 vertical rulers and 1 horizontal ruler. A horizontal ruler must be used to properly calibrate.

Actual Length: Represents the actual length of the ruler on the live monitoring screen in meters.
Add Rulers: This option allows the user to add and adjust a ruler on the live monitoring screen. Rulers are used to adjust calibration for IVS rules. Use you mouse to draw rulers on the live monitoring screen.
Remove Rulers: Removes rulers set in the detection area menu. To remove a ruler, select the ruler from the detection area menu and click Remove Rulers.
Weight Verification: Used to test the width calibration accuracy in meters of a set ruler. A horizontal ruler must be set, and the detection area must be saved first to use this feature.
Height Verification: Used to test the height calibration accuracy in meters of a set ruler. A horizontal ruler must be set, and the detection area must be saved first to use this feature.
Calibration Validation: Used to draw the calibration test line on the live monitoring screen.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Using Global Setup

Global setup is a great tool to use to calibrate a detection area. This helps to increase the overall accuracy of the IVS rules being used as well as validate their It is highly recommended to use global access setup before setting up multiple IVS rules.

1. Open the **Global Setup** tab located in the IVS menu.
2. Click on the **Add Calibration** button to set a detection area.
3. Left click on the live monitoring screen and draw your custom detection area. The detection area must be a closed area.
4. Click on **Add Rulers** to add your initial calibration ruler to the detection area. Draw a vertical line in the detection area. Each vertical line must be separately drawn. You can add up to 3 vertical calibration lines Left click on the live monitoring screen to set the vertical rulers.
5. Click on the **Horizontal** ruler radio button and click **Add Rulers**. Draw a horizontal line in the detection area. Only one horizontal line can be used in the detection area. Left click on the live monitoring screen to set the horizontal ruler.
6. Click **Save** to save the detection area and calibration rulers.

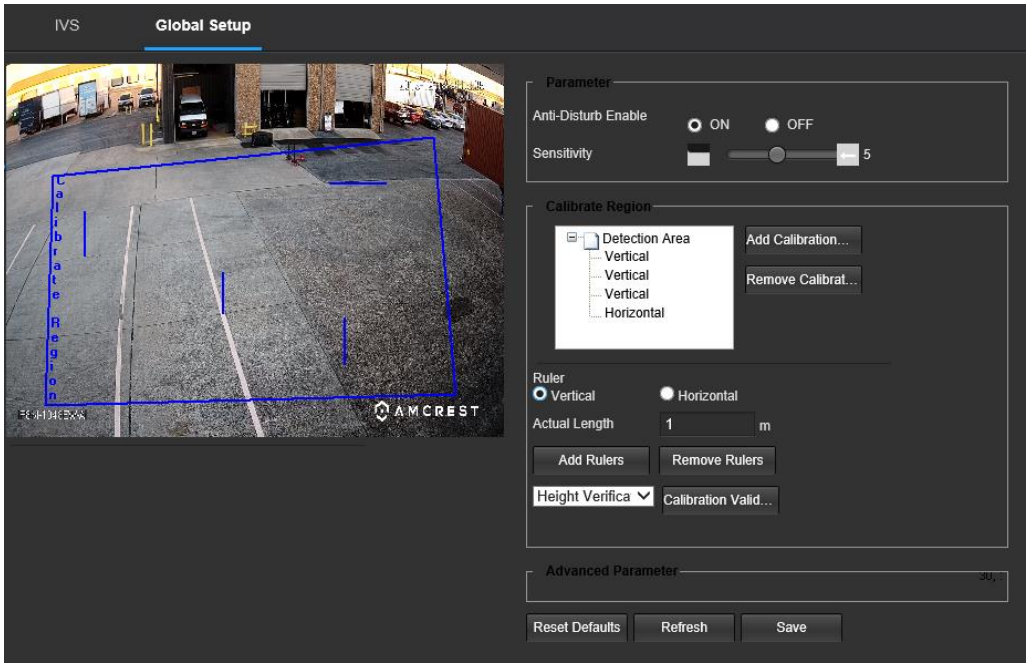

To verify the width and height accuracy of the detection area you can use the weight and height verification options via the dropdown box. To begin, choose your verification method from the dropdown menu and click on the **Calibration Validation** button. Left click on the live monitoring screen and draw a vertical or horizontal line to verify the calibration. The line drawn will be the width or height of the area set in meters.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

People Counting

People Counting is used to provide a statistic based up the number of people who enter and exit a certain area on the live view screen.

Note: The People Counting feature cannot be used simultaneously with IVS and/or Heat Map rules. These plans must be disabled in the Smart Plan menu and the people counting plan must be enabled to proceed.

Below is a screenshot of the People Counting menu:

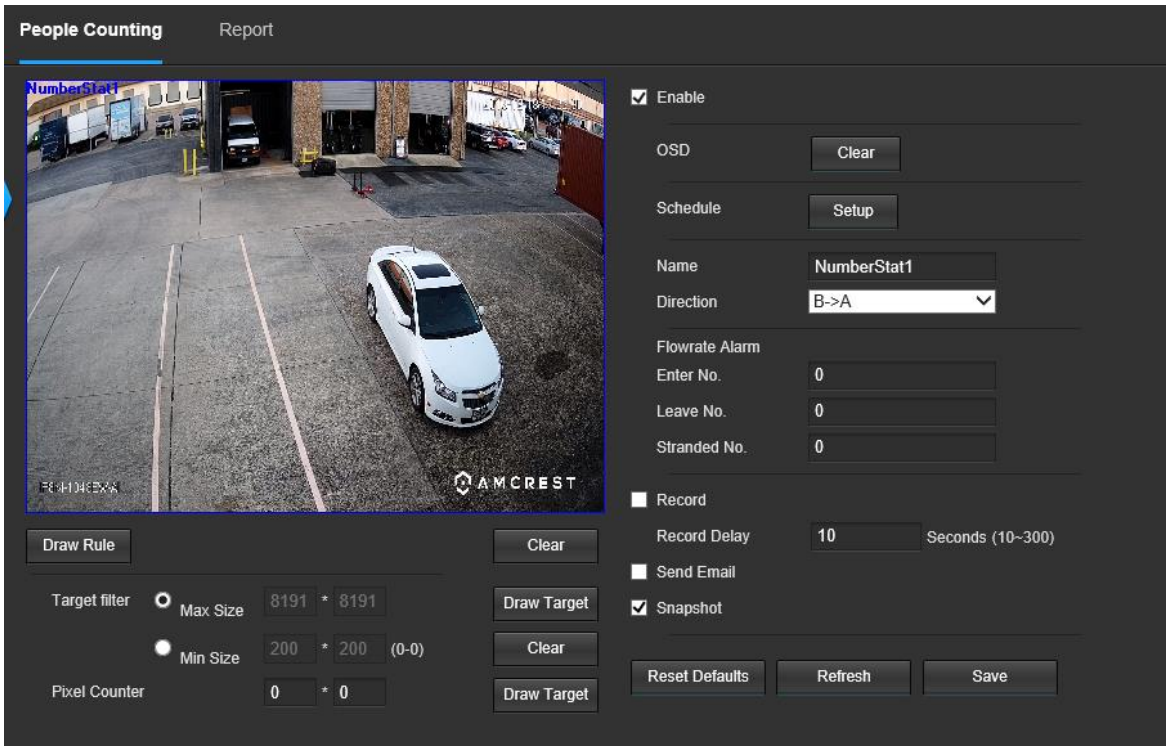

Below is a description of the features listed in the People Counting menu:

Enable: This checkbox is used to enable or disable the people counting feature.
OSD: Clears any OSD (On-Screen Display) information on the live monitoring screen.
Schedule: Allows the user to set a schedule in which the people counting feature will be used. **A Schedule must be set for the people counting feature to function**.
Name: The name used on the detection line. The name will be default to "NumberStat1" however can be modified.
Direction: This dropdown menu allows the user to choose which direction the rule will be triggered if a person enters, exits, or enters & exits the set line. "A->B" represents if a person enters or exits from the right, "B->A" represents of a person enters or exits from the left.
Enter No.: The amount of people it takes to trigger a person entering the set area to be counted. For efficiency, it is highly recommended to leave this as default (0).
Leave No.: The amount of people it takes to trigger a person exiting the set area to be counted. For efficiency, it is highly recommended to leave this as default (0).
Stranded No.: The amount of people it takes to generate an alarm who loiter in the set area. For efficiency, it is highly recommended to leave this as default (0).
Record: This checkbox allows the user to enable the camera to record video when an event is triggered.
Record Delay: This field specifies, in seconds, how long the delay between events will be. The default is 10 seconds however this can be modified between 10~300 seconds.
Send Email: This checkbox allows the user to enable the camera to send an email when an event is triggered.
Snapshot: This checkbox allows a snapshot of the event to be sent via Email when triggered.

Draw Rule: This option allows the user to customize the detection area on the live monitoring screen. This will be the area or line in which the feature will be triggered.
Clear: This option is used to clear the detection area on the live monitor screen. A rectangular detection area is required for the camera to actively detect and count people.
Draw Target: Allows the user to set a target area on the live monitor screen. **An event will not occur outside the target box.**
Clear: Clears the modified target area on the live monitoring screen. A rectangular target area is required for the camera to actively detect and count people.
Pixel Counter: Used to measure and set the number of pixels in the target area on the live monitoring screen.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Using People Counting

People Counting is a great tool to use to keep track and provide insight into the number of people entering or exiting a certain area. For more information on how to use People Counting refer to the information below:

1. Open the **Smart Plan** menu and activate the People Counting plan. Click **Save**.
   Note: People Counting cannot be used in conjunction with IVS or Heat Map plans.
2. Open the **People Counting** menu and verify the **Enable** checkbox is marked. This option enables the feature and should be enabled by default.
3. Click on the **Setup** button to set a schedule. A schedule is needed to activate the feature and must be saved to proceed. A default or modified schedule can be applied. Click **Save**.
4. Use the **Name** option to provide a custom name for your detection line. The detection line can be set to default (NumberStat1) if necessary.
5. Use the **Direction** dropdown menu to choose which direction the feature will be triggered if a person enters, exits, or enters & exits the set line. “A->B” represents if a person enters or exits from the right, “B->A” represents of a person enters or exits from the left.
6. Use the **Flowrate alarm** area of the screen to modify how many people it will take for the alarm to trigger if a person enters or exits an area. It is highly recommended to leave this field as default (0) for best results.
7. Enable the **Record** checkbox to record the event.
8. Enable the **Send Email** and **Snapshot** checkboxes if you would like a snapshot of an event emailed to you. A valid Email address must be established in the camera prior to enabling this setting.
9. As an option the default detection area can be modified. To modify the detection area, click and hold any corner of the detection and use your mouse to customize the area. It is recommended to leave this area as default to cover more ground.
10. Click **Save** to save the detection area.
11. Go to the Live View screen to view the people counting overlay.

Note: The “NumberStat1” line represents the detection line. The detection line is the threshold in which a person enters or exits will be detected by the camera. The detection line name can be modified in the Name field located in the People Counting menu. The “Enters” and “Exits” overlay represents the number of people the camera has detected that have entered or exited the detection area.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

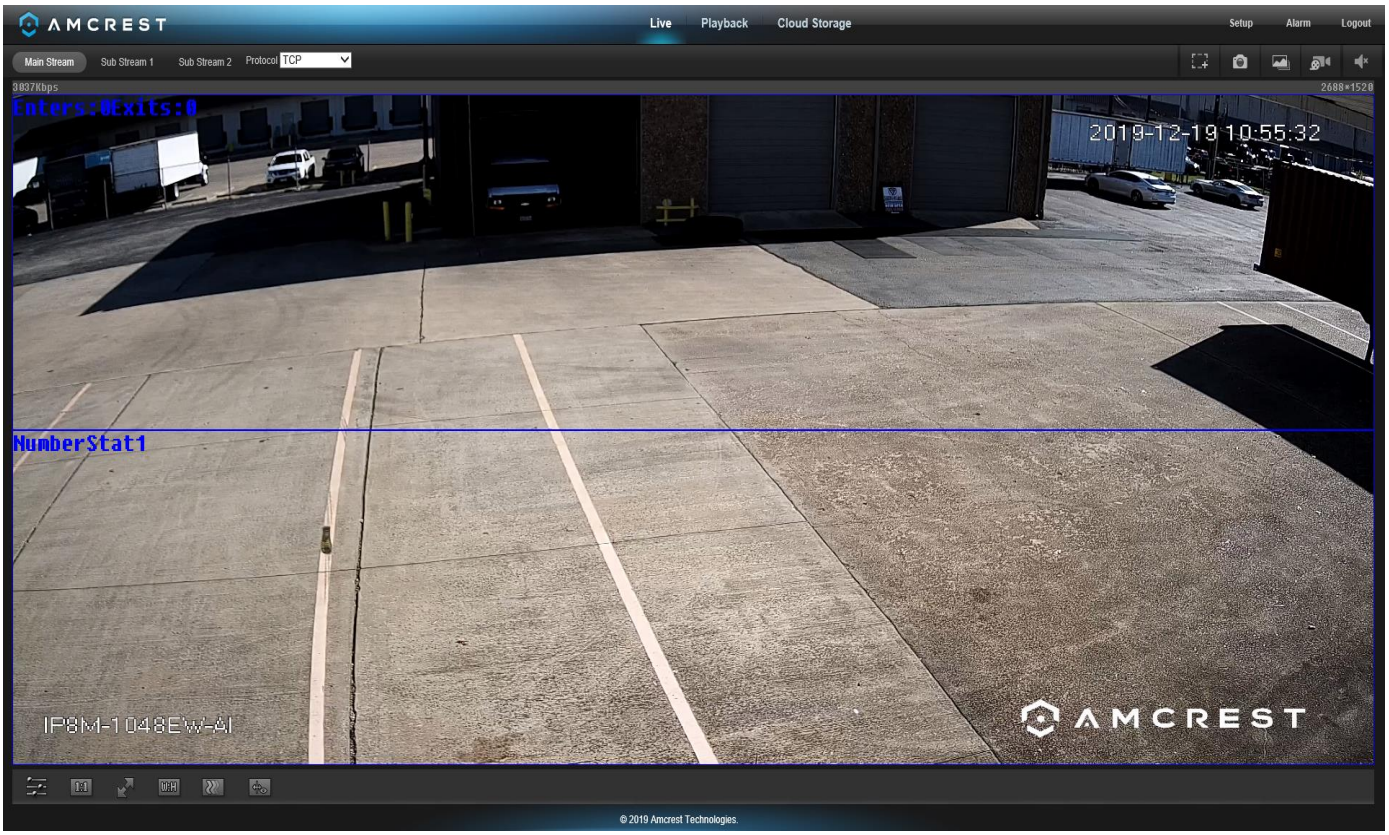

Note: To disable this overlay, click on the IVS enable or disable icon () located in the bottom portion of the live view screen.

Report

A people counting report can be generated that will graphically display the amount of people detected by the camera.

Below is a screenshot of the Report menu:

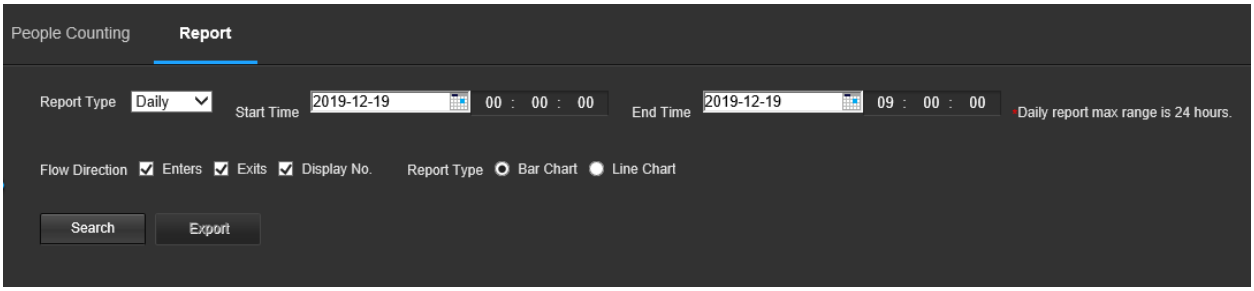

Below is a description of the options in the Report menu:

Report Type: This dropdown menu allows the user to choose which type of report will be generated (Daily, Monthly, Yearly). Daily report types cannot exceed 24 hours.
Start Time: The date and time the report will start. Use the calendar and time boxes to enter a start time range.

End Time: The date and time will end. Use the calendar and time boxes to enter an end time range.
Flow Direction: These checkboxes can be used as filters for the report to show only certain criteria such as how many “Enters”, “Exits”, or “Display No.” Display No.” All 3 options are enabled by default.
Report Type: The type of report that will be generated (Bar chart or Line chart).
Search: Used to search and generate the report.
Export: Allows the user to export an image of the people counting report to their computer.

Reading a Bar Chart

A bar chart can be generated which will display the number of people who enter or exit a certain area based on a daily, monthly, or yearly report.

Below is an example of a generated bar chart:

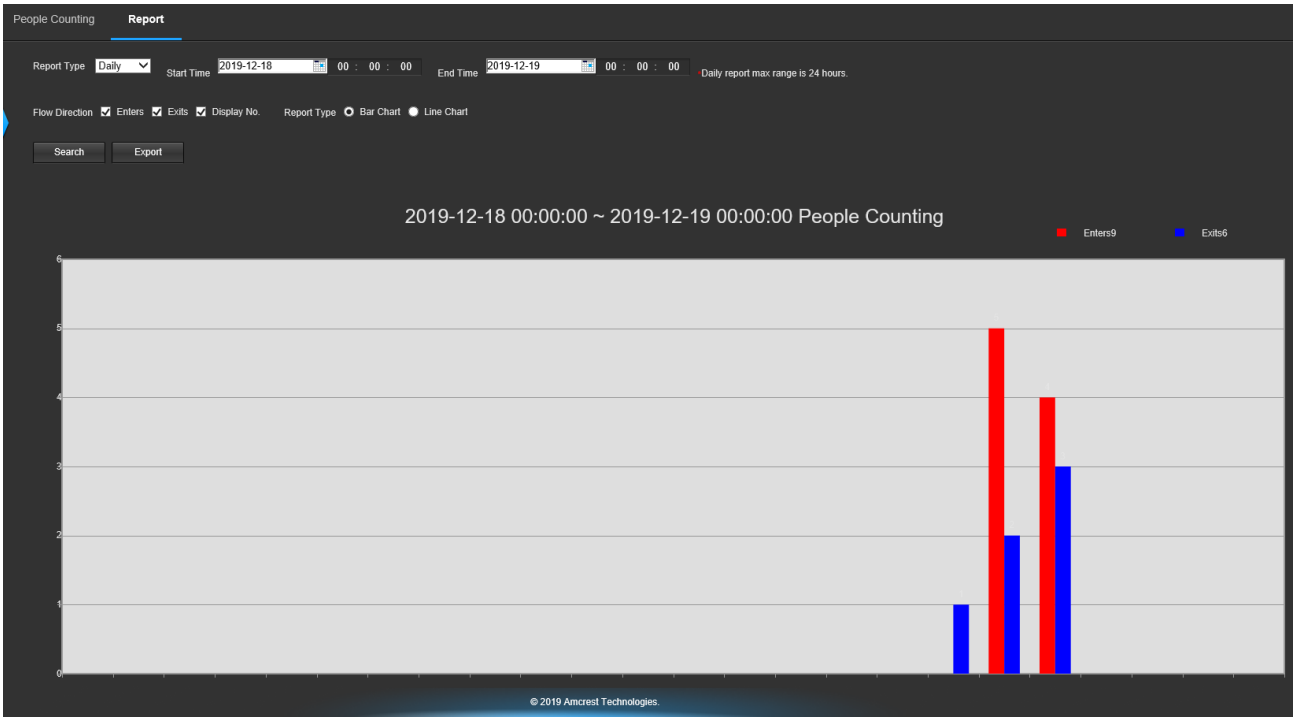

The date and time range will be displayed on the top of the chart as well as a color-coded display and legend of the enters and exit statistics will be displayed as well. The left side of the chart will display the range of people that were reported. The blue bar represents the amount of exits in the chart and the red bar represents the amount of people who entered.

Reading a Line Chart

A line chart can be generated which will display the number of people who enter or exit a certain area based on a daily, monthly, or yearly report.

Below is an example of a generated line chart:

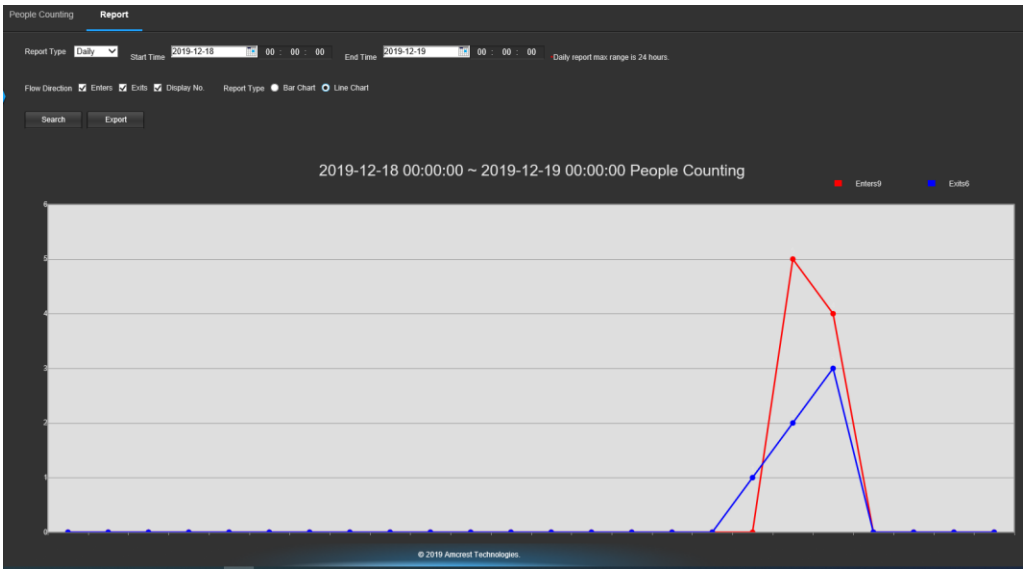

The date and time range will be displayed on the top of the chart as well as a color-coded display and legend of the enters and exit statistics will be displayed as well. The left side of the chart will display the range of people that were reported. The blue line represents the amount of exits in the chart and the red line represents the amount of people who entered.

Heat Map

The Heat Map function provides a general reporting of crowd density statistics based on color levels detected by the camera. Color levels are divided into, red, orange, yellow, green, and blue which represent crowd density ranges; red being the densest area and blue representing areas with the lowest density.

Below is a screenshot of the Heat Map menu:

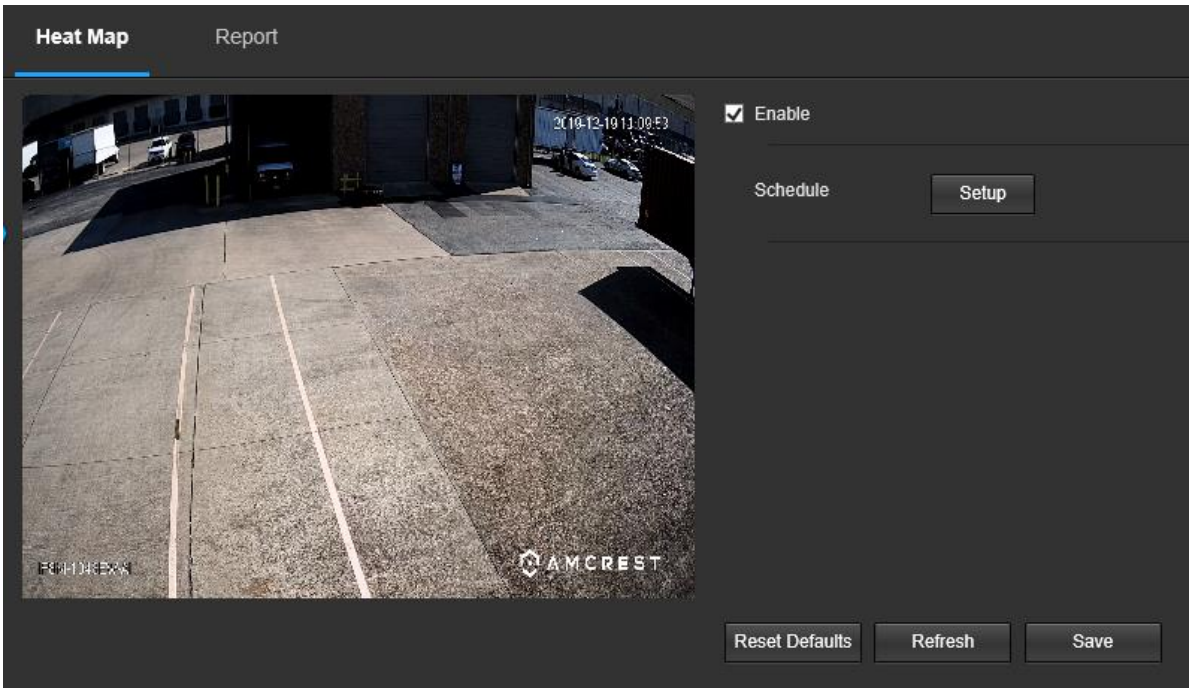

Below is a description of the features listed in this menu:

Enable: Enables the heat map function. This is enabled by default.
Schedule: Allows the user to set a schedule in which the feature will be used. **A Schedule must be set for the feature to function.**

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Report

A Heat Map report can be generated that will graphically display the amount of crowd density detected by the camera. The maximum report range is 1 week.

Below is a screenshot of the heat map report menu:

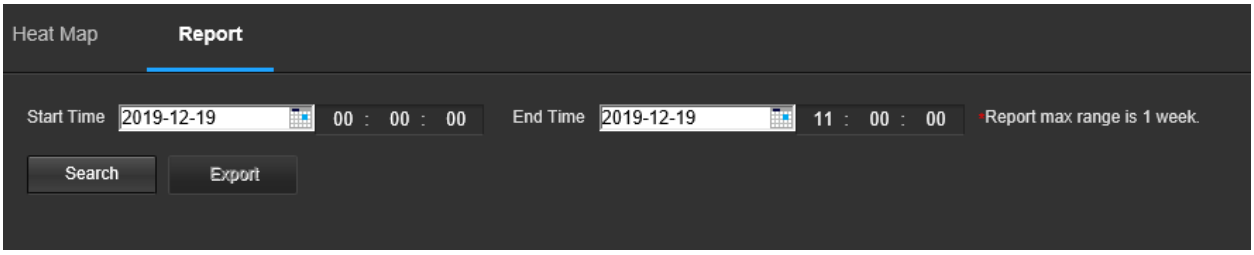

Below is a description of the items listed in this menu:

Start Time: The date and time the report will start. Use the calendar and time boxes to enter a start time range.
End Time: The date and time will end. Use the calendar and time boxes to enter an end time range.
Search: Used to search and generate the report.
Export: Allows the user to export an image of the people counting report to their computer.

Using Heat Map

The Heat Map function can be used in conjunction with IVS rules and features. To use heat map, the people counting smart plan must be disabled in the Smart Plan menu. For more information on how to use heat map, refer to the information provided below.

1. Open the **Smart Plan** menu and activate the Heat Map plan. Click **Save**.
   Note: Heat Map can be used in conjunction with IVS plans.
2. Open the **Heat Map** menu and verify the **Enable** checkbox is marked. This option enables the feature and should be enabled by default.
3. Click on the **Setup** button to set a schedule. A schedule is needed to activate the heat map feature and must be saved to proceed. A default or modified schedule can be applied. Click **Save**.
4. Click on the **Report** tab select a start time date and time as well as an end time date and time (date & time ranges cannot exceed 1 week).
5. Click the Search button to search and view a heat map report. A generated Heat Map report will be displayed.

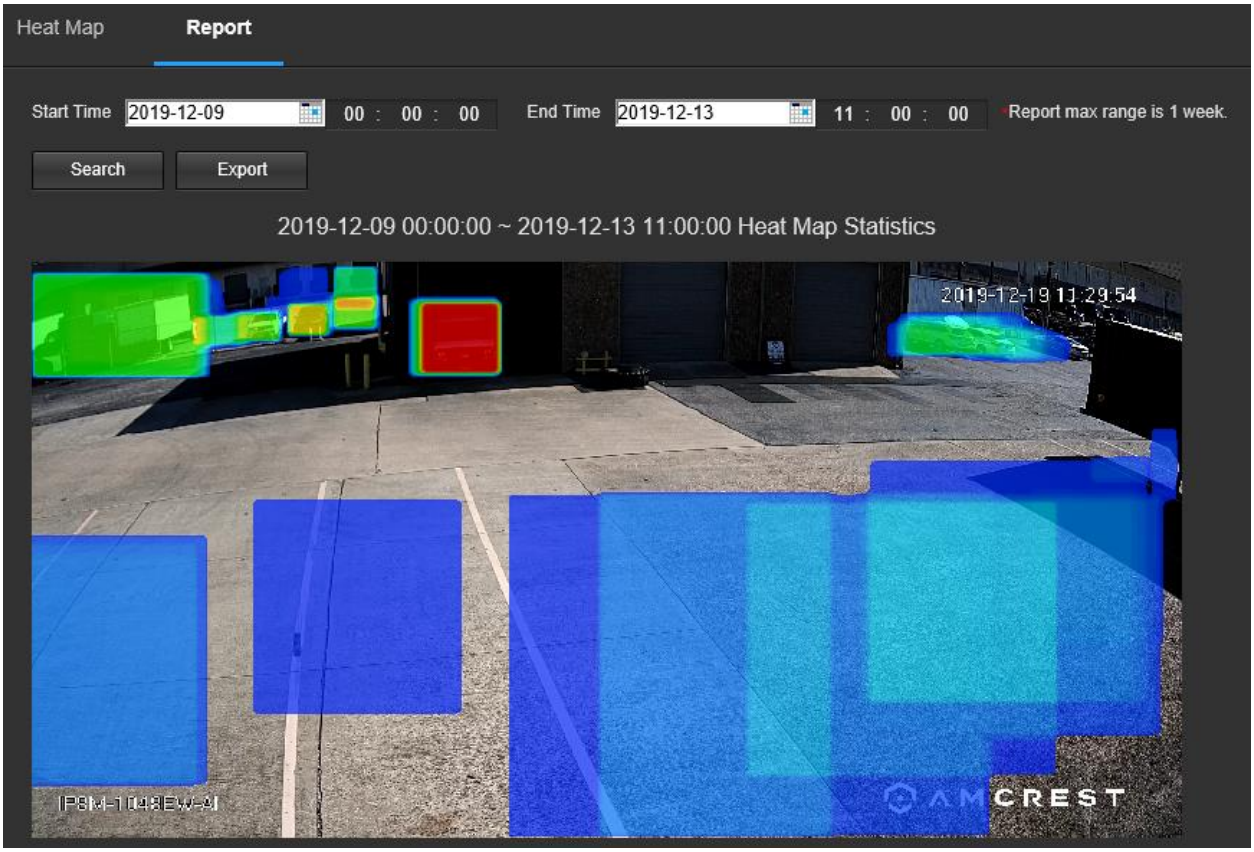

To reset to default settings, click the **Reset Defaults** button in the heat map menu. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Abnormality

This menu allows the user to adjust abnormality event settings. This menu has 5 tabs: SD Card, Network, and Illegal Access, Voltage Detection, Security Exception.

SD Card

This tab allows the user to set the camera's response to an SD card related abnormality. Below is a screenshot of the SD card tab screen:

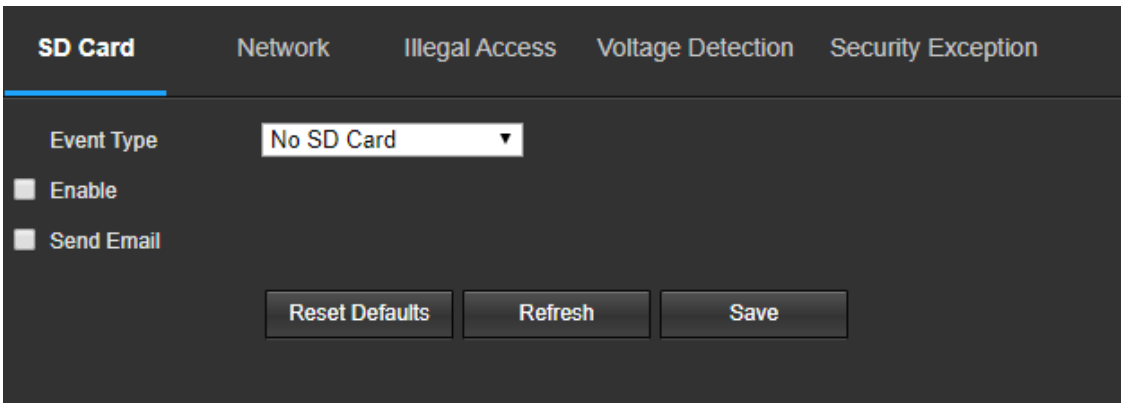

Below is an explanation of the fields on the SD Card settings tab:

- **Event Type**: This dropdown box allows the user to select which SD card abnormality to set event triggers for. The 3 options are No SD Card, SD Card Error, and Capacity Warning.
- **Enable**: This checkbox enables the SD Card abnormality trigger for the camera.
- **Relay Out**: This checkbox allows the user to enable the camera to trigger an alarm when an SD Card abnormality is detected.
- **Alarm Delay**: This field specifies in seconds how long the delay between alarm activation and relay alarm activation should be.
- **Send Email**: This checkbox allows the user to enable the camera to send an email when an SD Card abnormality is detected.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Network

This tab allows the user to set the camera's response to a Network related abnormality. Below is a screenshot of the Network tab screen:

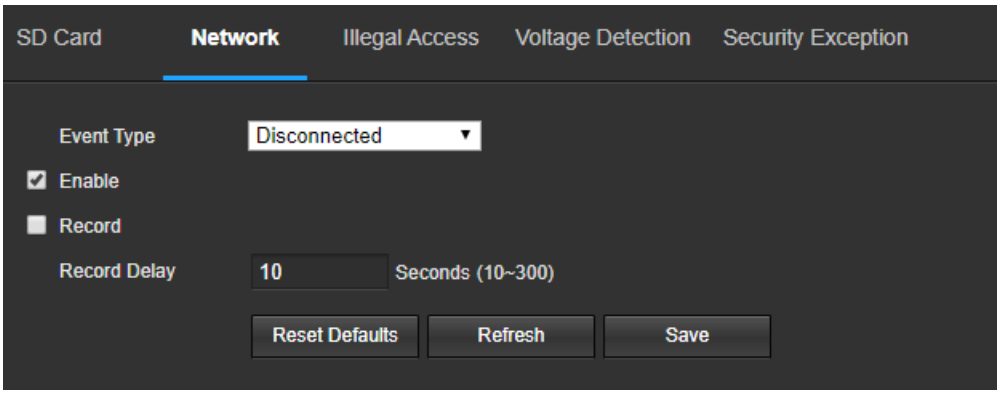

Below is an explanation of the fields on the Network settings tab:

- **Event Type**: This dropdown box allows the user to select which Network abnormality to set event triggers for. The 2 options are Disconnection and IP Conflict.
- **Enable**: This checkbox enables the Network abnormality trigger for the camera.
- **Record**: This checkbox allows the user to enable the camera to record video when a network abnormality is detected.
- **Record Delay**: This field specifies in seconds how long the delay between alarm activation and recording should be.
- **Relay Out**: This checkbox allows the user to enable the camera to trigger an alarm when a network abnormality is detected.
- **Alarm Delay**: This field specifies in seconds how long the delay between alarm activation and relay alarm activation should be.

To reset to default settings, click the Reset Defaults button. To refresh the page, click the Refresh button. To save the settings, click the Save button.

Illegal Access

This tab allows the user to set the camera's response to an Illegal Access related abnormality. Below is a screenshot of the Illegal Access tab screen:

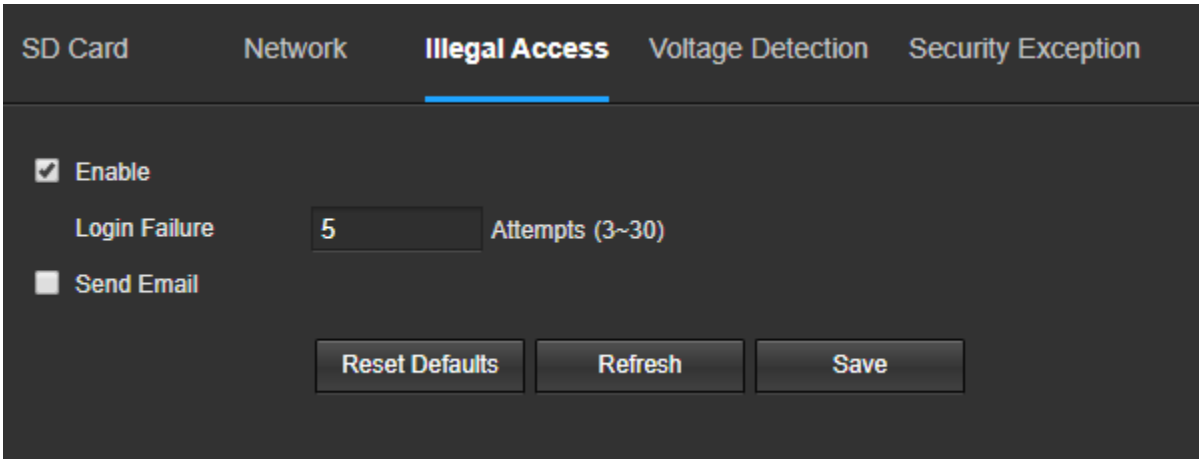

Below is an explanation of the fields on the Illegal Access settings tab:

- **Enable**: This checkbox enables the Illegal Access abnormality trigger for the camera.
- **Login Failure**: This field allows the user to specify how many failed login attempts must be attempted to trigger an Illegal Access abnormality event.
- **Relay Out**: This checkbox allows the user to enable the camera to trigger an alarm when illegal access is detected.
- **Alarm Delay**: This field specifies in seconds how long the delay between alarm activation and relay alarm activation should be.
- **Send Email**: This checkbox allows the user to enable the camera to send an email when illegal access is attempted.

To reset to default settings, click the Reset Defaults button. To refresh the page, click the Refresh button. To save the settings, click the Save button.

Voltage Detection

This tab allows the user to set the camera to detect when abnormal amounts of voltage input are applied to the camera.

Below is a screenshot of the Voltage Detection menu:

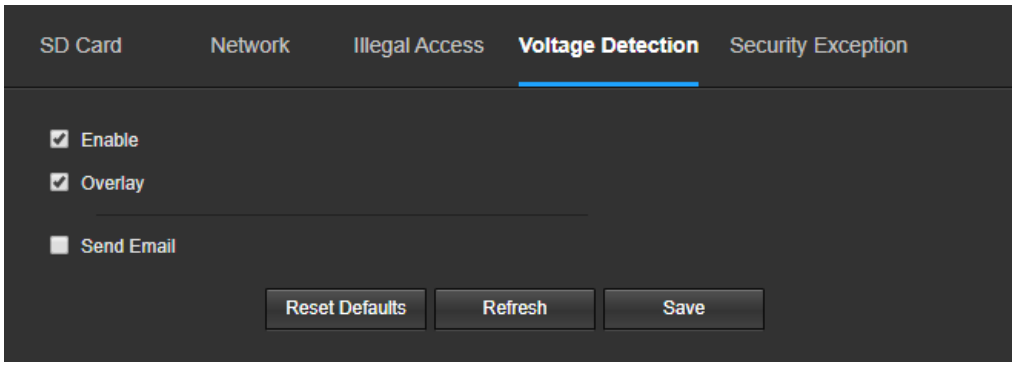

- **Enable:** This checkbox enables the voltage detection abnormality trigger for your camera.
- **Overlay:** This checkbox allows an overlay to be triggered when the camera detects high amounts of input voltage.
- **Send Email:** An email will be sent once the camera detects high levels of voltage input.

To reset to default settings, click the Reset Defaults button. To refresh the page, click the Refresh button. To save the settings, click the Save button.

Security Exception

This tab allows the user to set a trigger to be detected if a malicious attack is detected by the camera.

Below is a screenshot of the Security Exception menu:

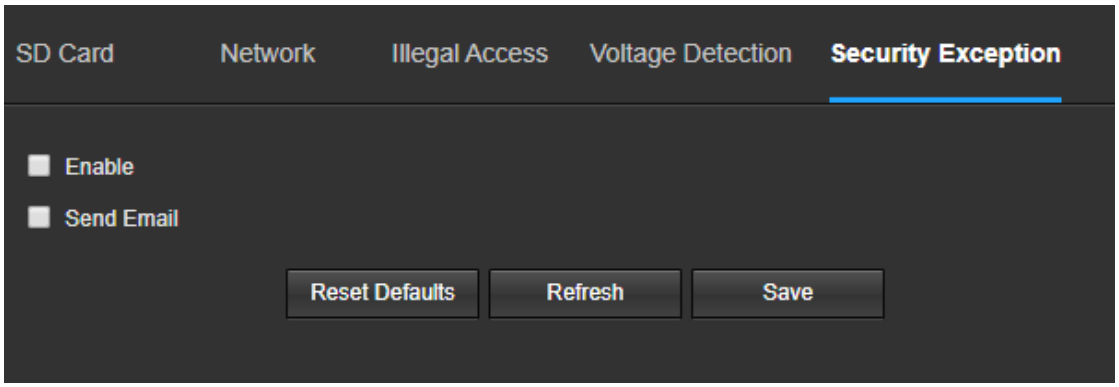

- **Enable:** This checkbox enables the security exception abnormality trigger for your camera.
- **Send Email:** An email will be sent once the camera detects a malicious attack.

To reset to default settings, click the Reset Defaults button. To refresh the page, click the Refresh button. To save the settings, click the Save button.

Storage

This menu section allows the user to change storage settings for the camera.

Schedule

The schedule menu manages the recording schedule for the camera. This menu has 3 tabs: Record Schedule, Snapshot Schedule, and Holiday Schedule.

Record Schedule

This tab is where video recording settings are configured. Below is a screenshot of the Record Schedule settings screen:

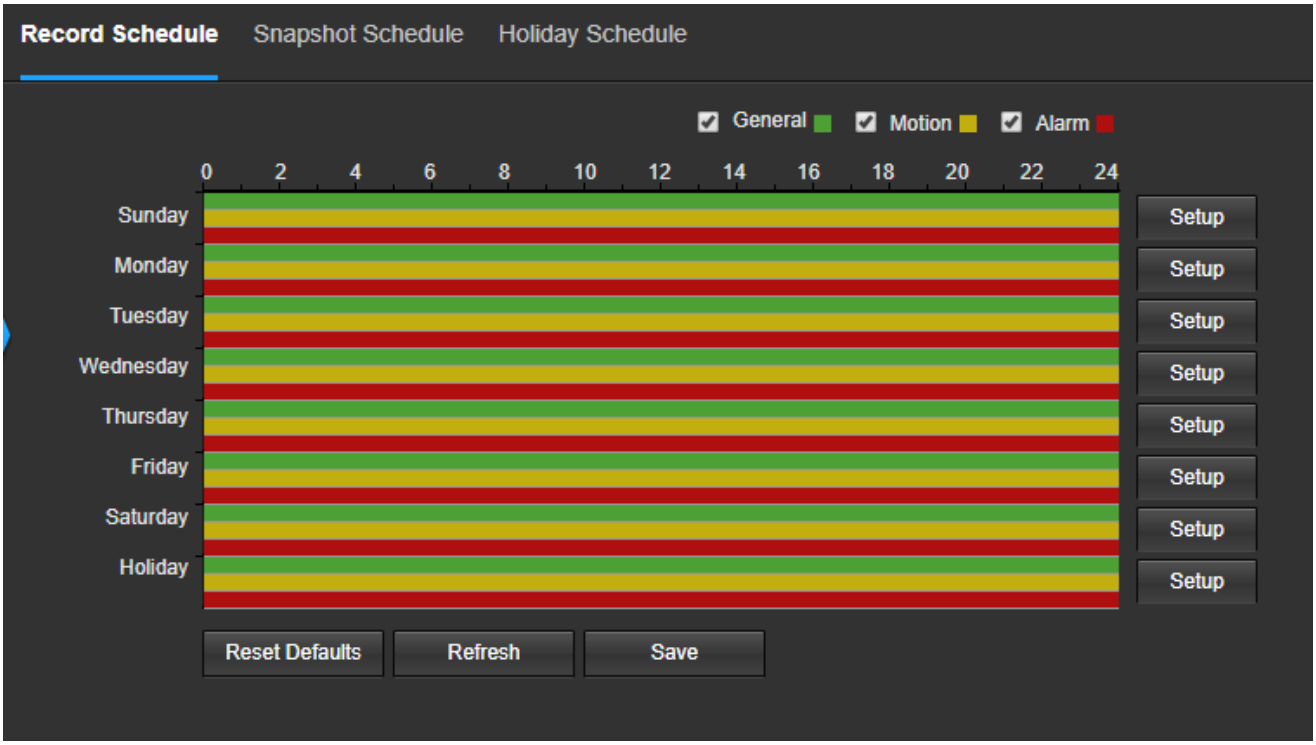

Below is an explanation of the fields on the Record Schedule settings tab:

Record Type: These checkboxes allow the user to select which recording type they want to configure on the schedule. There are 3 types of recordings:

- **General**: General recording means that the camera captures all footage for the specified time period. General recording is represented by the color green.
- **Motion**: Motion Detection recording means that the camera captures only footage when the motion detection alarm is activated. Motion recording is represented by the color yellow.
- **Alarm**: Alarm recording means that the camera captures only footage when an alarm is activated. Alarm recording is represented by the color red.

- **Video Recording Schedule**: To specify a video recording range, first select the type of recording desired, then click and drag on time bar for the desired date. To edit multiple days at once, drag the cursor further up or down to cover the other days.
  - **Setup**: Clicking this button opens a screen that allows for recording periods to be set for each day and for each recording type. There are a total of 6 periods that can be set.

To reset to default settings, click the Reset Defaults button. To refresh the page, click the Refresh button. To save the settings, click the Save button.

Snapshot Schedule

This tab is where snapshot recording settings are configured. Below is a screenshot of the Snapshot Schedule settings screen:

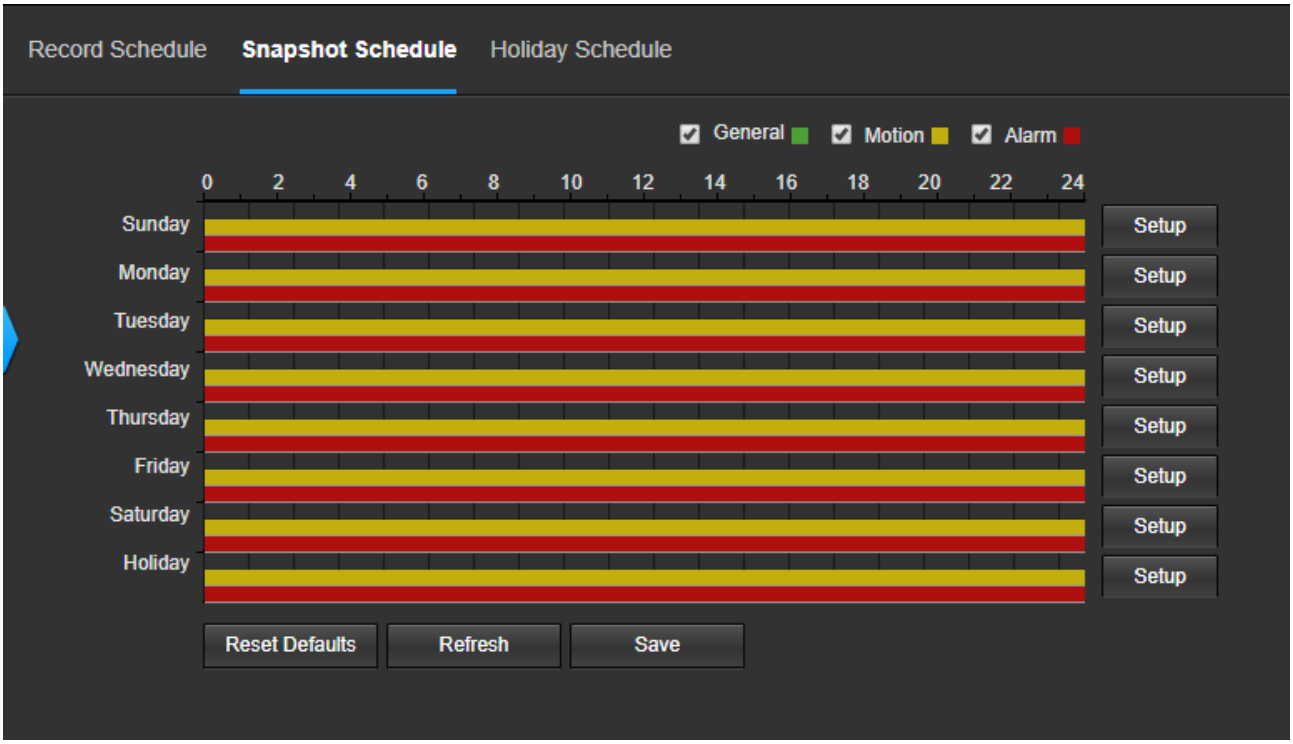

Below is an explanation of the fields on the Snapshot Schedule settings tab:

- **Record Type**: These checkboxes allow the user to select which snapshot type they want to configure on the schedule. There are 3 types of snapshots:
  - **General**: General means that the camera will take snapshots during the specified time period. General recording is represented by the color green.
  - **Motion**: Motion Detection means that the camera only takes snapshots when the motion detection alarm is activated. Motion recording is represented by the color yellow.
  - **Alarm**: Alarm means that the camera only takes snapshots when an alarm is activated. Alarm recording is represented by the color red.
- **Snapshot Recording Schedule**: To specify a snapshot range, first select the type of snapshot desired, then click and drag on time bar for the desired date. To edit multiple days at once, drag the cursor further up or down to cover the other days.
  - **Setup**: Clicking this button opens a screen that allows for snapshot periods to be set for each day and for each snapshot type. There are a total of 6 periods that can be set.

To reset to default settings, click the Reset Defaults button. To refresh the page, click the Refresh button. To save the settings, click the Save button.

Holiday Schedule

This tab is where holiday settings are configured. Below is a screenshot of the Holiday Schedule settings screen:

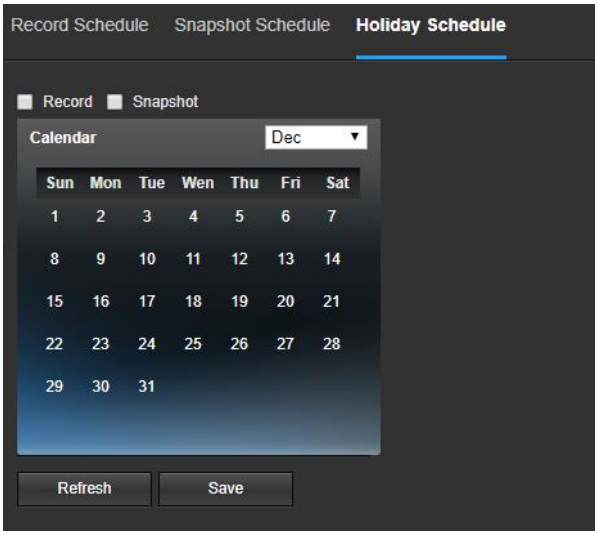

Below is an explanation of the fields on the Holiday Schedule settings tab:

- **Record Type**: These checkboxes allow the user to select which recording type they want to configure on the schedule. There are 2 types of recordings:
  - **Record**: This checkbox is referring to video recording.
  - **Snapshot**: This checkbox is referring to snapshot recording.
- **Calendar**: This calendar allows the user to select days to designate as holidays. Once a day is designated, it can be customized to stop recording or snapshots for that day by using the Record and Snapshot checkboxes.

To refresh the page, click the Refresh button. To save the settings, click the Save button.

Destination

This menu controls where recorded media is stored. There are 4 tabs in this menu: Path, SD Card, FTP, and NAS.

Path

This tab is where the user can designate a path for recorded video and snapshots to reside in. Below is a screenshot of the Path tab:

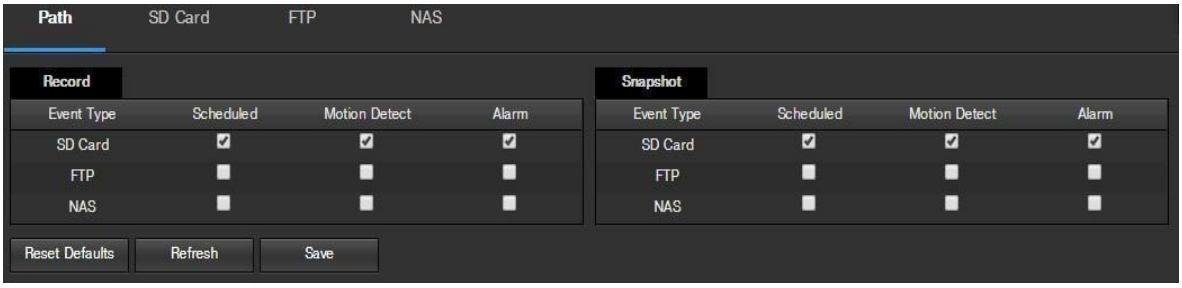

Below is an explanation of the fields on the Path settings tab:

- **Event Type**: This column designates storage options available to the camera. The options are SD Card, FTP, and NAS.

- **Record Type**: These columns designate which recording type should be recorded to which event type. Check the box at the intersection of the record type and event type to designate where that recording should be sent to. To reset to default settings, click the Reset Defaults button. To refresh the page, click the Refresh button. To save the settings, click the Save button.

SD Card

This tab is where the user can change SD card settings. Below is a screenshot of the SD Card tab:

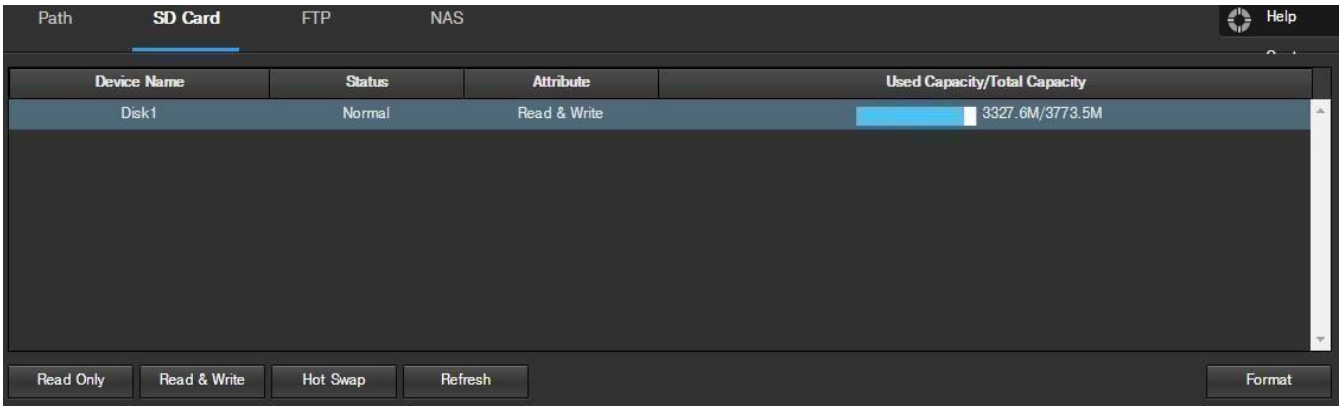

Below is an explanation of the fields on the SD Card settings tab:

- **Device Name**: This column designates the name of the SD card that is currently in the camera.
- **Status**: This column designates the status of the SD card.
- **Attribute**: This column designates the read/write attributes for the SD card. By default, this is Read & Write.
- **Used Capacity/Total Capacity**: This column shows the available memory on the SC card.
  Read Only: This button allows the user to designate an SD card as read only.
  Read & Write: This button allows the user to designate an SD card to read and & write privileges.
- **Refresh:** This button refreshes the SD card table.
- **Format:** This button formats the SD card.

FTP

This tab is where the user can change FTP settings. Below is a screenshot of the FTP tab:

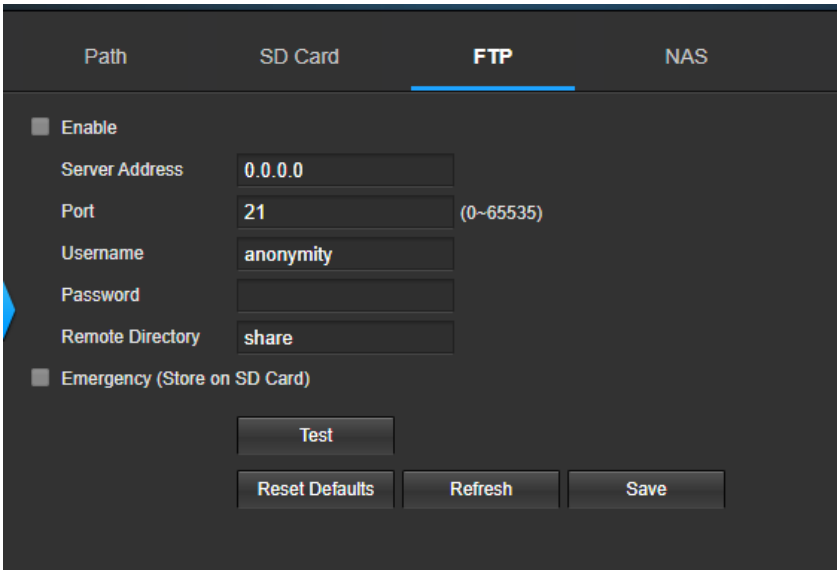

Below is an explanation of the fields on the FTP settings tab:

- **Enable**: This checkbox allows the user to enable FTP uploading for the camera's recorded media.
- **Server Address**: This field allows the user to designate a DDNS address for the FTP server.
- **Port**: This field allows the user to designate the port number for the FTP server.
- **Username**: This field allows the user to input the username used to login to the FTP server.
- **Password**: This field allows the user to input the password used to login to the FTP server.
- **Remote Directory**: This field allows the user to specify a remote directory on the FTP to send the recorded media to.
- **Emergency (Store on SD Card)**: This checkbox allows the camera to store recorded media on the SD card in case the FTP server is unavailable.

To reset to default settings, click the Reset Defaults button. To refresh the page, click the Refresh button. To save the settings, click the Save button.

NAS

This tab is where the user can change NAS settings. Below is a screenshot of the NAS tab:

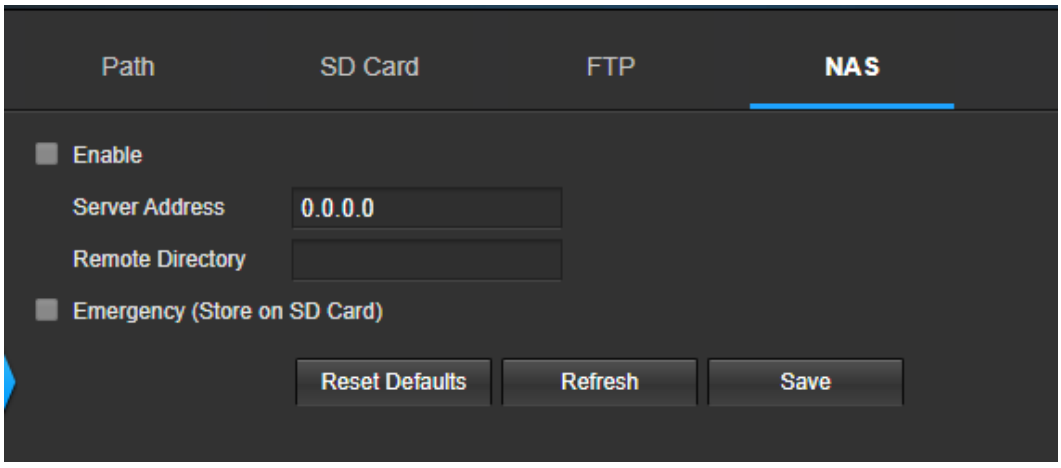

Below is an explanation of the fields on the NAS settings tab:

- **Enable**: This checkbox allows the user to enable NAS uploading for the camera's recorded media.
- **Server Address**: This field allows the user to designate a DDNS address for the NAS server/device.
- **Remote Directory**: This field allows the user to specify a remote directory on the NAS to send the recorded media to.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Record Control

This menu is where general recording settings are configured. Below is a screenshot of the record control menu:

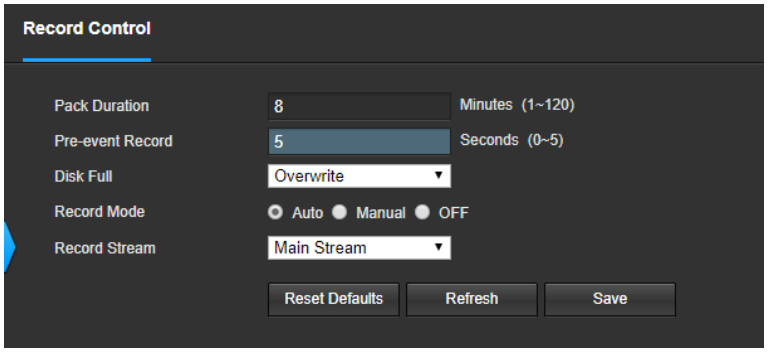

Below is an explanation of the fields on the Record Control settings tab:

- **Pack Duration**: This field allows the user to set how many minutes each file is comprised of.
- **Pre-event Record**: This field allows the user to specify how many seconds before an event should be recorded.
  Disk Full: This dropdown box allows the user to designate what the camera should do when the disk is full. There are 2 options: Overwrite or Stop.
- **Record Mode**: This set of radio buttons allows the user to designate the recording mode. The options are Auto, Manual, and Off.
  Record Stream: This dropdown box allows the user to specify which stream to record. The options are mainstream and sub stream.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Cloud Storage

This menu redirects the user to the Amcrest Cloud web site. At this website (amcrestcloud.com) users can register for new accounts as well as view or modify existing accounts.

For more information on Amcrest Cloud visit: amcrestcloud.com

System

This menu section allows the user to change general settings for the camera.

General

This menu controls where general settings are configured. There are 2 tabs in this menu: General and Date & Time.

General

This tab is where the user can configure some basic camera settings. Below is a screenshot of the General tab:

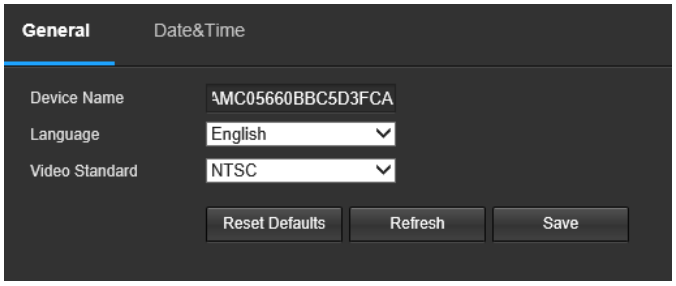

Below is an explanation of the fields on the General settings tab:

- **Device Name**: This field allows the user to change the device's name.
- **Language**: This dropdown box allows the user to change the language used in the camera.
- **Video Standard**: This dropdown box allows the user to select either the NTSC or PAL video standard.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Date & Time

This tab is where the user can configure the date and time settings for the camera. Below is a screenshot of the Date & Time tab:

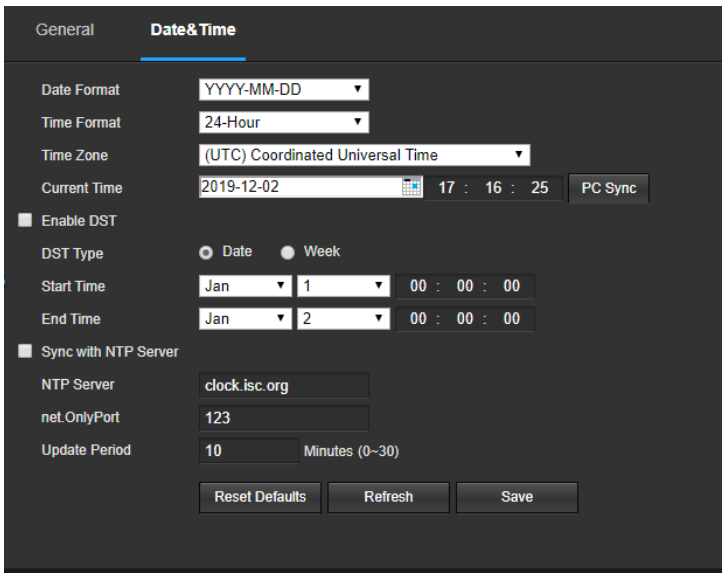

Below is an explanation of the fields on the Date & Time settings tab:

- **Date Format**: This dropdown box allows the user to change the date format used in the camera.
- **Time Format**: This dropdown box allows the user to change the time format used in the camera.
- **Time Zone**: This dropdown box allows the user to change the time zone used in the camera.
- **Current Time**: This field allows the user to enter in the date and time manually. Clicking the PC Sync button allows the camera to sync with a Network Time Protocol (NTP) server.
- **Enable DST**: This checkbox allows the user to enable daylight savings time for the camera.
- **DST Type**: This radio button allows the user to select whether DST is based on the week, or a specific day.
- **Start Time**: This dropdown box and field allow the user to enter in the start time for DST.
- **End Time**: This dropdown box and field allow the user to enter in the end time for DST.
  Synchronize with NTP: This checkbox allows the user to enable the camera's synchronization with an NTP server.
- **NTP Server**: This field allows the user to enter in an NTP server.
- **Port**: This field allows the user to enter in the port number for the NTP server.
  Update Period: This field allows the user to enter in the update period time. This number designates how frequently the camera pings the NTP server to ensure it has the correct time. The range is from 0-30 minutes.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Manage Users

This menu allows the user to change the user accounts on the camera. By default, the camera only has the admin account which has all rights/authorities. Additional accounts can be created on this screen. Below is a screenshot of the account screen:

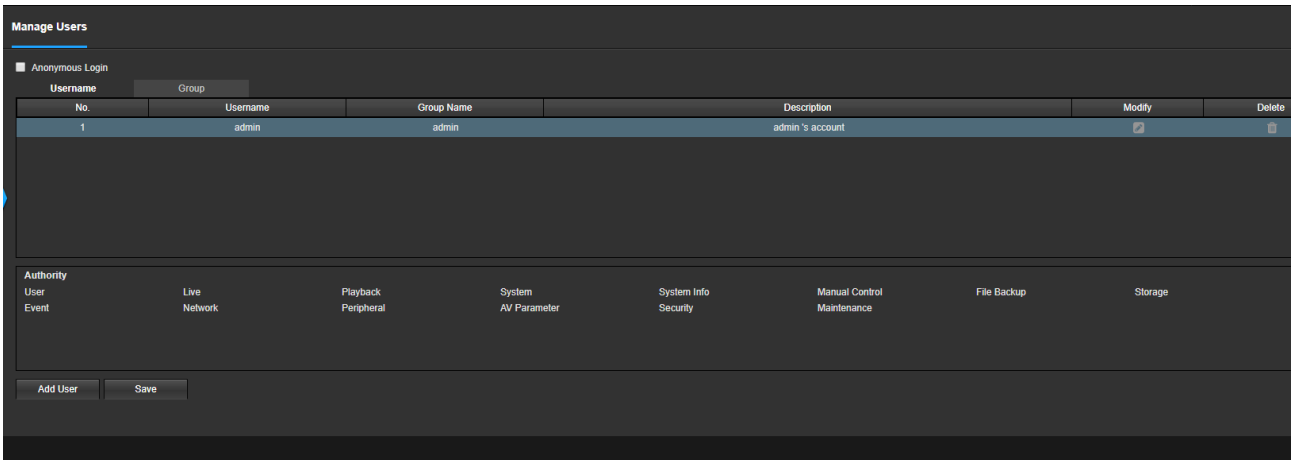

Below is an explanation of the fields on the Account screen:

- **Anonymous Login**: This checkbox allows the user to enable the anonymous login feature. This allows all user account names to remain hidden on this screen.
- **Username**: This tab shows the usernames available on the camera.
- **Group**: This tab shows the user groups available on the camera.
- **No.**: This column shows the user's number on the user list.
- **Username**: This column shows the usernames of the different accounts on the camera.

- **Group Name**: This column shows the group of the different accounts on the camera.
- **Description**: This column shows a description of the account.
- **Modify**: This column allows the user to modify the user account.
- **Delete**: This column allows the user to delete a user account. Note: The admin account cannot be deleted.
- **Authority List**: This box shows which user rights/authorities are assigned to an account.
- **Add User**: This button allows the user to add a new user to the camera.

Default Settings

This screen allows the user to reset the camera and all its settings to the factory settings.

Below is a screenshot of the Default screen:

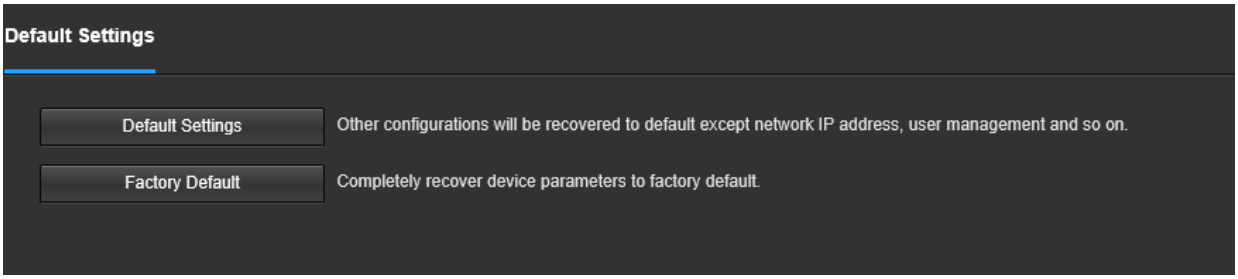

Below is an explanation of the items listed in this field:

Default Settings: Only the IP address, user management, and other settings can be recovered after reset.
Factory Default: Completely resets the camera to factory default settings. No settings can be recovered after the camera has been returned to its factory default settings.

Import/Export

This screen allows the user to import or export settings from the camera. Below is a screenshot of the Import/Export screen:

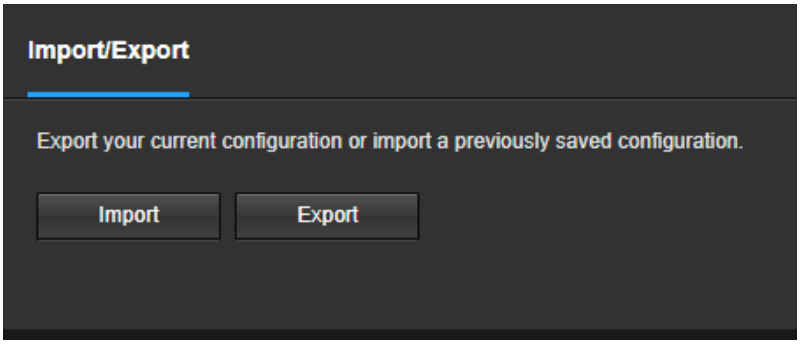

To import settings, click the Import button. To export settings, click the Export button.

Auto Maintain

This screen allows the user to set auto maintenance settings for the camera. Below is a screenshot of the Auto Maintain screen:

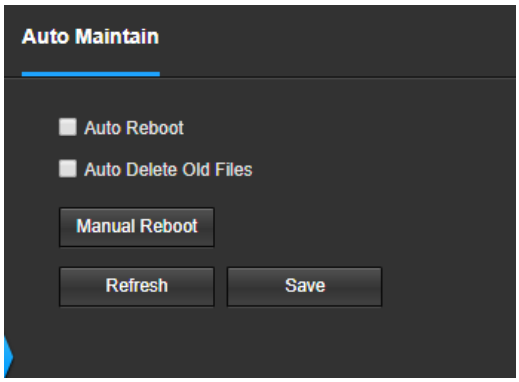

Below is an explanation of the fields on the Auto Maintain screen:

- **Auto Reboot**: This checkbox allows the user to enable the auto reboot function. The dropdown box and field to the right of this checkbox allow the user to specify what date and time of the week the camera will auto reboot.
- **Auto Delete Old Files**: This checkbox allows the user to enable the auto deletion of old files on the camera.
- **Manual Reboot**: This button allows the user to manually reboot the camera.

To refresh the page, click the Refresh button. To save the settings, click the Save button.

Upgrade

This menu allows the user to upgrade the camera's firmware. Below is a screenshot of the Upgrade screen:

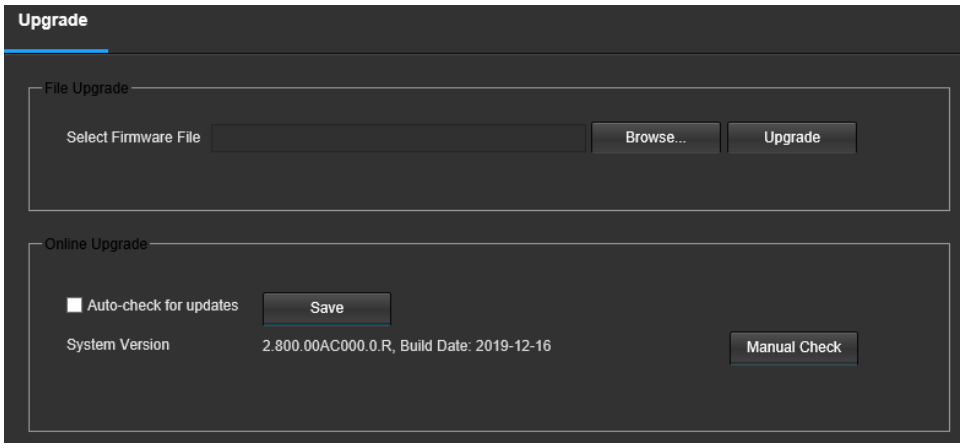

To upgrade the firmware for your camera, follow the steps provided below:

- Go to amcrest.com/firmware-subscribe
- Search for the model number of your camera and download the latest firmware file.
- Return to the web user interface for your camera and press the **Browse** button to locate and import the firmware file you just downloaded.
- Once the firmware file has been imported, click **Upgrade**.
- The device will reset, return to the web user interface. The upgrade is now complete.

Note: When upgrading the camera's firmware, do not disconnect the internet or power from the camera.

Information

This menu section allows the user to view information about the camera for reference purposes.

Version

This screen allows the user to see various information about the camera's software versions, as well as other information. Below is a screenshot of the camera's version screen:

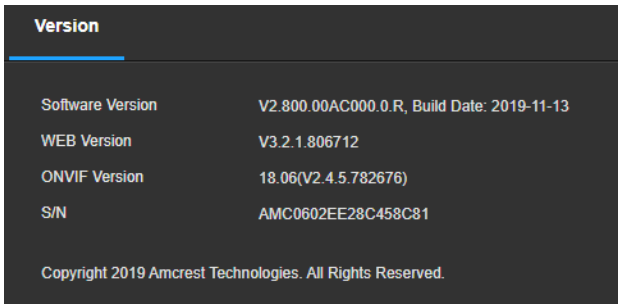

On this screen, software version, web interface version, and ONVIF version are displayed. Also, the S/N (Token ID) is displayed here.

Log

This screen is where the camera's activity log is kept. Below is a screenshot of the Log screen:

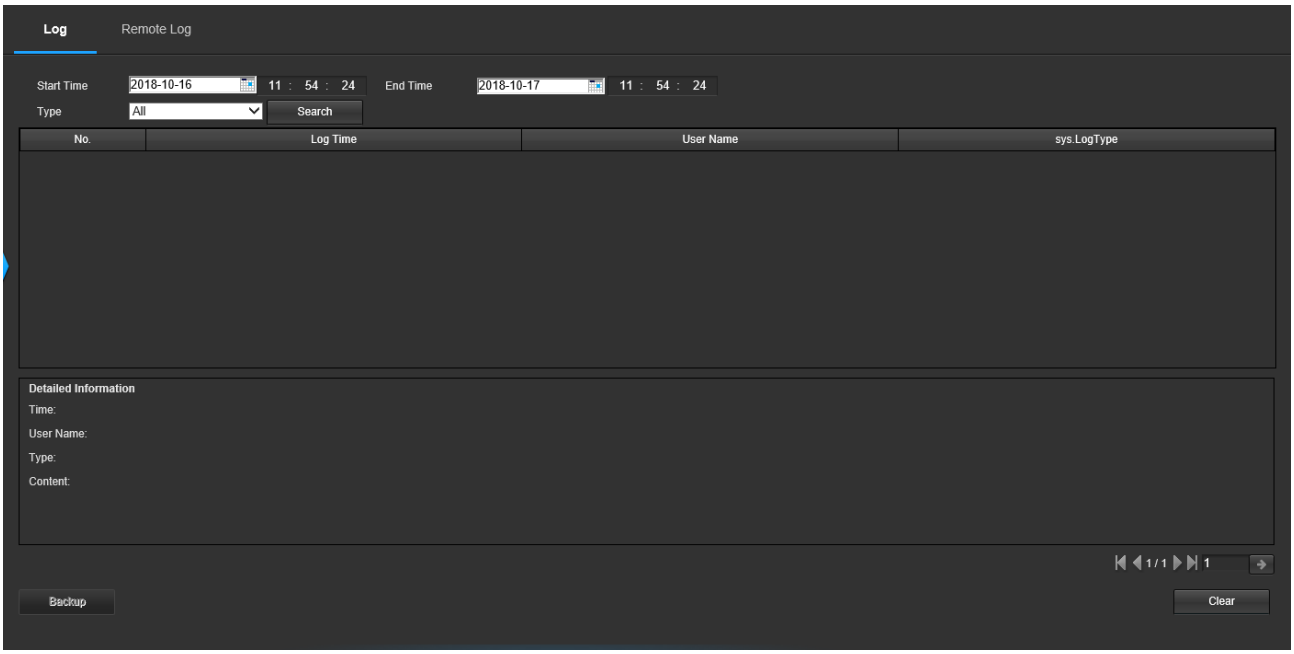

To view logs for a specific time period, modify the start time and end time fields, choose the type of event (system, setting, data, event, record, manage users, clear log), and click search.

To backup the log, click the Backup button. To clear the log, click the **Clear** button.

Remote Log

The Remote Log menu allows users to retain log information from other remotely connected devices. Below is a screenshot of the Remote Log menu:

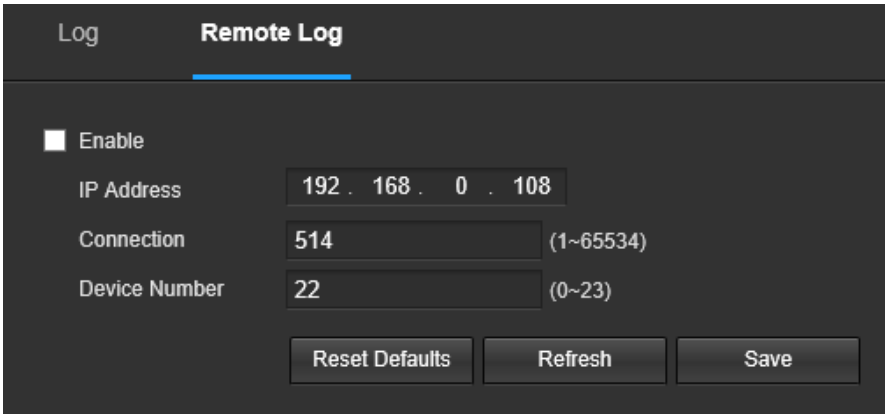

Enable: Enables the remote log feature.
IP Address: The IP address of the remote device
Connection: The port number set for the remote device (1~65534)
Device Number: The number of the device in the network segment.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Online Users

This screen allows the user to see which users are online. Below is a screenshot of the Online Users screen:

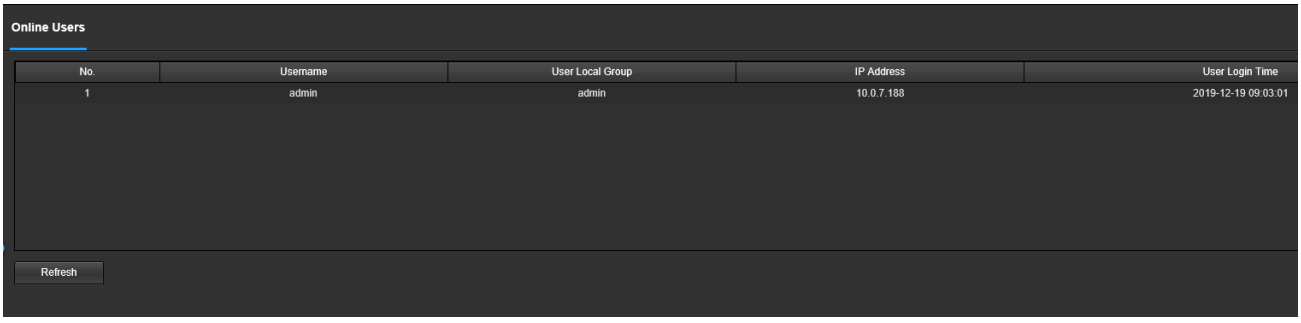

Click **Refresh** to refresh this table.

Alarm

This screen is where the alarm log is kept. Below is a screenshot of the alarm screen:

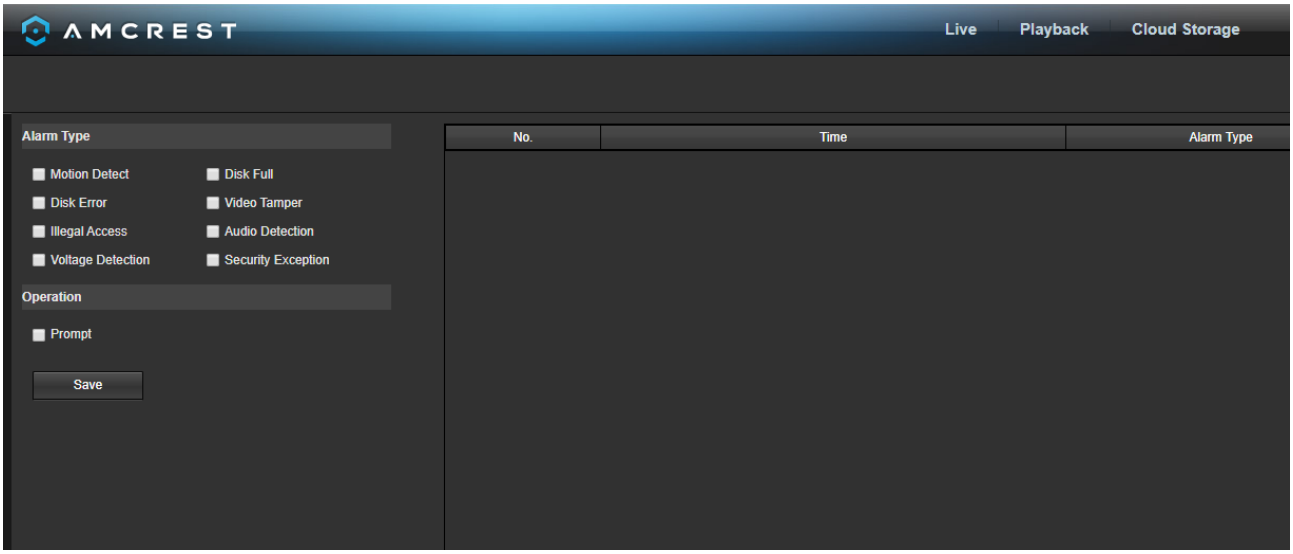

The table on the right shows the alarm log and all the alarm instances that have occurred. The checkboxes allow the user to narrow down which alarms they want to see in the alarm log. Clicking the checkbox next to Prompt will cause the system to pop up a dialog box anytime an alarm is triggered. Clicking the checkbox next to Play Custom Alarm will use a custom alarm sound for the alarm prompt. Click the Browse button to search for a custom alarm sound to use.

Logout

Clicking the logout button will log out the user.

Remote Web Access Setup

There are two main methods for setting up remote access: UPnP/DDNS, and Port Forwarding.

UPnP/DDNS Remote Web Access Setup

Using Universal Plug and Play (UPnP) and Dynamic Domain Name Server (DDNS) functionality is the easiest way to setup stable remote access. For this method, your router should support the uPnP networking protocol and the protocol should be enabled. Please refer to your router manufacturer's documentation to learn how to enable uPnP on your router.
Below is a step-by-step walkthrough that details how to setup Amcrest cameras for Remote Web Access using UPnP and DDNS:

1. Login to your camera's web interface, open the main menu then go to Setup -> Network.
2. Using the left-hand menu, go to the Connection menu, and write down the HTTP port. It is recommended to ensure the port number is at least 5 digits long to prevent any port conflicts. If need be, change the port to a 5-digit number that is less than 65535, note the number down, and click save before proceeding to the next step.
3. The system will prompt you to reset the camera. Click OK and wait for the camera to restart.
4. Restarting the camera may cause the device to use another IP address. Use the included IP Config tool to find the IP address as detailed previously in this document.
5. Login to your camera, open the main menu then go to Setup -> Network.
6. Click the Connections menu item on the left-hand menu and ensure that the HTTP port has changed.

7. Click the DDNS menu item on the left-hand menu, pick Amcrest DDNS from the drop down box, click the checkbox next to Server Type, and then click the Save button on the bottom right.
8. To set a custom DDNS name, fill out the Domain Name field and click Save.
9. Write down the entire Domain Name field, including the white text that says .AmcrestDDNS.com
10. Click the UPnP menu item on the left-hand menu and click the enable checkbox at the top.
11. While in the UPnP menu, double click the HTTP port, and change both the internal and external HTTP ports to match the number that was used in step 2.
12. Uncheck the last 4 checkboxes in the PAT table on the UPnP menu.
13. Click apply, then exit this menu to go back to the main menu, then re-enter the UPnP menu, and ensure the UPnP status says, "Mapping Successful".
14. Open a web browser and enter in the DDNS domain name address from step 9, enter in a colon, then type the port number from step 4 on to the end.
    a. For example, if the DDNS domain name is http://abc123456789.AmcrestDDNS.com and your HTTP Port is 33333, the URL would be http://abc123456789.AmcrestDDNS.com:33333
15. The browser may prompt you to install a plugin. Click install to download the plugin, and then click on the plugin installation file to install the plugin.
16. If the browser prompts you to allow the plugin to work on the computer, hit Allow to ensure the plugin can run successfully.
17. Enter in login details into the username and password fields and click login.

If the process above is not working, please contact Amcrest Support via one of the following options:

Visit http://amcrest.com/contacts and use the email form.
Call Amcrest Support using one of the following numbers
Toll Free: (888) 212-7538
International Callers (Outside of US): +1-713-893-8956
USA: (888) 212-7538
Canada: 437-888-0177
UK: 203-769-2757
Email Amcrest Customer Support support@amcrest.com

Port Forwarding Remote Web Access Setup

Port Forwarding is an alternative method to setting up remote access for Amcrest cameras. This method should only be used if the UPnP/DDNS Remote Access method did not work.
Below is a step-by-step walkthrough that details how to setup the camera for Remote Web Access using Port Forwarding:

1. Login to your camera, open the main menu then go to Setup -> Network.
2. Open the TCP/IP settings screen.
3. By default, the camera has the mode set to DHCP. Ensure that DHCP is selected. The IP Address, Subnet Mask, Default Gateway, Preferred DNS, and Alternate DNS should all be 0s if DHCP is selected.
4. Click Save to save these settings. This should now open the main menu.
5. From the main menu, go to **Setup -> Network**.
6. On the TCP/IP settings screen, the IP Address, Subnet Mask, Default Gateway, Preferred DNS, and Alternate DNS should all be populated.
7. Click the radio button next to Static, to change the mode to Static.
8. Write down the IP Address that is currently in the IP address field.
9. Click the **Save** button.

10. Using the left hand menu, go to the Connection menu, and write down the TCP, UDP, and HTTP port number. It is recommended to ensure that these port numbers are at least 5 digits long to prevent any port conflicts. If need be, change each of these port numbers to a 5-digit number that is less than 65535, note the numbers down, and click save before proceeding to the next step.
11. Go to http://www.canyouseeme.org/ and check to ensure each of the port numbers specified in step 10 is open.
12. Write down the manufacturer name, brand, and model name for the router that the camera is connected to, and then proceed to http://www.portforward.com on your web browser.
13. Open the port forwarding guide section on the left-hand side menu.
14. Find the router brand name in the list and click it.
15. Find the router model number and click it.
16. Click the Default Guide link near the middle of the page.
17. This guide will help you take the step necessary to port forward on the router. Follow these steps, and then return to the camera.
18. Login to your camera, open the main menu then go to Setup -> Network.
19. Click the DDNS menu item on the left-hand menu, pick AMCRESTDDNS from the drop-down box, click the checkbox next to Server Type, and then click the Save button on the bottom right.
20. To set a custom DDNS name, fill out the Domain Name field and click Save.
21. Write down the entire Domain Name field, including the white text that says .AmcrestDDNS.com
22. Open a web browser and enter in the DDNS domain name address from step 21, enter in a colon, then type the HTTP port number from step 10 on to the end.
    For example, if the DDNS domain name is http://abc123456789.AmcrestDDNS.com and your HTTP Port is 33333, the URL would be http://abc123456789.AmcrestDDNS.com:33333
23. Enter in login details into the username and password fields and click login.

If the process above is not working, please contact Amcrest Support via one of the following options:

Visit http://amcrest.com/contacts and use the email form
Call Amcrest Support using one of the following numbers
Toll Free: (888) 212-7538
International Callers (Outside of US): +1-713-893-8956
USA: (888) 212-7538
Canada: 437-888- 0177
UK: 203-769-2757
Email Amcrest Customer Support support@amcrest.com

Amcrest Cloud Desktop Setup

Amcrest cameras can sync with Amcrest Cloud; a service that stores recorded video streams to enable long-term storage. Amcrest Cloud also allows the user to easily find and download recorded video for playback from any internet connected PC or Mac computer.
For more information on how to setup your camera on Amcrest Cloud please follow the steps provided below:

1. Connect the camera to power and wait 30 seconds for the camera to start-up and initialize.
2. Using a web browser on your PC or Mac, visit www.amcrest.com/cloud and register for a cloud account. Once registered, click the "**Add Camera**" button. Select "Amcrest", give the camera a name, and enter the camera's SN (located on the bottom of the camera), then click "Next".
3. On the settings page, you can adjust optional preferences for your camera. Once settings have been adjusted, click "Finish". Your camera is now successfully set up for cloud access and storage.

4. View your camera live or watch recorded clips using the menu button on the top of the page. You can also use the Amcrest Cloud app on iOS and Android to add more cameras, play recordings, and view your camera live, from anywhere. For more information visit amcrest.com/support
5. For additional assistance, please contact us at www.amcrest.com or give us a call at 1-888-212-7538. Step by step video tutorials available at http://www.amcrest.com/videos

Web Access Setup (AmcrestView.com)

1. Connect the camera to power and wait 30 seconds for the camera to start-up and initialize.
2. Using Internet Explorer or Safari, go to **www.AmcrestView.com** and register an account. You will be required to activate your account by e-mail (double-check your spam folder).
3. Once activated, download and install the plugin for your web browser. The installation of the plugin will require all web browsers to close.
4. Log in to your account. To add a camera, click the "Add Device" button. Give the camera a name, enter the UID (found on the bottom of your camera), then enter the login details for the camera. The default username and password for the camera is admin.
5. Once added, the camera should appear in the device list. Click the  icon next to the camera's UID to open the live viewing and playback interface.
6. The device is now successfully setup for live viewing and playback!
   For additional assistance, please contact us at www.amcrest.com or give us a call at 1-888-212-7538. Step by step video tutorials available at www.amcrest.com/videos

FAQs/Troubleshooting

1. **The camera does not boot up properly.**
   Below are a few possible reasons why this may be occurring:

- The power input is not correct voltage.
- The power cable connection is not secured correctly.
- The firmware was upgraded incorrectly.

2. **Camera often automatically shuts down or stops running.**
   Below are a few possible reasons why this may be occurring:

- The input voltage is too low or is not stable.
- The insides of the camera have accumulated too much dust.
- The temperature is either too hot or too cold.
- The hardware is malfunctioning.

3. **Real-time video color is distorted.**
   Below are a few possible reasons why this may be occurring:

- The camera is not compatible with the monitor.
- The camera color or brightness settings are not correctly configured.

4. **The timestamp is not displaying the correct time.**
   The time and date settings may not be configured correctly. You can take the following steps to resolve the issue:

- Log into your camera's web user interface via a laptop or PC.
- Navigate to **Setup>>System>>General**
- Click on the **Date & Time** tab.
- Click on **PC Sync** to sync the date and time.
- Click **Save** to save and apply the new date and time settings.

5. **Motion detection does not work.**
   Below are a few possible reasons why this may be occurring:

- The motion detection time period may be incorrectly configured.
- Motion detection zone setup is not correctly configured.
- Motion detection sensitivity is too low.

6. **Web Access isn't working.**
   Below are a few possible reasons why this may be occurring:

- Windows version is pre -Windows 2000 service pack 4. Use a more recent version of Windows.
- ActiveX controls have been disabled.
- The PC is not using DirectX 8.1 or higher. Upgrade to a more recent version of DirectX.
- The camera is having network connection errors.
- Web access may be setup incorrectly.
- The username or password may be incorrect.

7. **Web Access live view is only displaying a static picture.**
   Below are a few possible reasons why this may be occurring:

- The network speed is not enough to transfer video data via web access.

- The client PC may have limited resources.
- Multicast mode may be causing this issue.
- A privacy mask or screensaver may be enabled.
- The logged in user may not have enough rights to monitor real-time playback.
- The camera's local video output quality is not enough.

8. Network connection is not stable.

Below are a few possible reasons why this may be occurring:

- The network is not stable.
- There may be an IP address conflict.
- There may be a MAC address conflict.
- The PC or camera network card may be defective.
- The Ethernet cable is too long

9. The alarm signal cannot be disarmed.

Below are a few possible reasons why this may be occurring:

- An alarm may be setup incorrectly.
- An alarm output may have been manually opened.
- There may be an error in the camera's firmware.

10. Alarms are not working.

Below are a few possible reasons why this may be occurring:

- The alarm is not setup correctly.
- The alarm cable is not connected correctly.
- The alarm input signal is not correctly configured.
- There are two loops connected to one alarm device.

11. Downloaded files cannot be played back.

Below are a few possible reasons why this may be occurring:

- The media player software on the PC may not be able to read the file format.
- The PC may not have DirectX 8.1 or higher.
- The PC may not have Windows XP or higher.

12. When I login via HTTPS, a dialogue says the certificate has expired or is not valid yet.

- Ensure the PC has the same time as the camera's system time.

Glossary of Terms

- Abnormality – Any malfunction in terms of storage of data to the SD card.
- Alarm Delay – The gap in time between alarm activation and Relay alarm activation.
- Alternate Gateway – The node on the computer network that the network software uses when an IP address does not match any other routes in the routing table, and when the default gateway is not available.
  Anti-Dither – This time value controls how long the alarm signal lasts. The values in this field can range from 5 to 600 seconds. Based on motion detection, a buzzer can go off, a tour can begin, a snapshot can be taken, or the camera can begin recording.

- DDNS – Stands for Dynamic Domain Name System. DDNS is a method of automatically updating a name server in the Domain Name System (DNS), often in real time, with the active DNS configuration of its configured hostnames, addresses or other information.
- Default Gateway – The node on the computer network that the network software uses when an IP address does not match any other routes in the routing table.
- DHCP – Dynamic Host Configuration Protocol is a network protocol that enables a server to automatically assign an IP address to a computer from a defined range of numbers (i.e., a scope) configured for a given network.
- Fluency – Fluency described the lack of stuttering or excessive delay in a video stream. Fluency usually comes at the expense of video quality when a network is constrained.
- IP Address – Internet Protocol Address is a unique numerical label assigned to each device connected to a computer network. The IP address allows communication between different devices on a network.
- Main Stream – Main Stream is the main streaming protocol for the camera. Main stream uses more bandwidth and attempts to keep quality and fluency high.
- NO/NC – Normally Open and Normally Closed are options for sensor type. These settings allow for different exposure types when capturing video and still images.
- NTP – Network Time Protocol is a networking protocol for clock synchronization between computer systems over packet-switched, variable-latency data networks.
- P2P – Peer-to-Peer is a decentralized communications model in which each party has the same capabilities and either party can initiate a communication session.
- PPPoE – Point to Point Protocol over Ethernet is a network protocol for encapsulating Point to Point Protocol data packets inside Ethernet frames.
- QR Code – Quick Response code is a type of digital barcode that enables devices to share complex data strings quickly.
- Record Delay – Record Delay specifies in seconds how long the delay between alarm activation and recording should be.
- Relay Out – Relay Out triggers a connected alarm (connected to the alarm port on the back of the camera) when an alarm on the camera is triggered.
- S/N – S/N stands for serial number. The S/N is unique to each camera and can be used to connect to different Amcrest apps and services to provide different methods of access to the camera.
- Sensitivity – Sensitivity is the amount of change required to increase the motion detected by a percentage. The lower the sensitivity, the more movement is required to trigger an alarm.
- SMTP – Simple Main Transfer Protocol is an Internet standard for electronic mail (e-mail) transmission.
- Static IP – An IP address that does not change.
- Sub Stream – Sub Stream is an alternative streaming protocol for the camera. Sub stream uses less bandwidth and attempts to keep fluency high at the expense of quality.
- Subnet Mask – a 32-bit number that masks an IP address, and divides the IP address into network address and host address.
- TCP/IP – TCP/IP stands for Transmission Control Protocol/Internet Protocol and it is the language/protocol that allows communication between internet connected devices, whether on a local network, or a on the Internet at large.
- Threshold – Threshold is the level that the motion detection needs to reach to trigger an alarm.
- UPnP – UPnP stands for Universal Plug and Play, and it is a protocol used to easily connect devices to the internet.
- Video Tamper – Video Tamper refers to any major changes happening to the video feed such as it being blocked out, interfered with, or disconnected.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
2. The user's manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes, or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In cases where the manual is provided only in a form other than paper, such as on a computer disk or over the Internet, the information required by this section may be included in the manual in that alternative form, provided the user can reasonably be expected to have the capability to access information in that form.
3. (b) For a Class B digital device or peripheral, the instructions furnished the user shall include the following or similar statement, placed in a prominent location in the text of the manual: NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or
television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help.
4. RF exposure warning This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.
End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

IC Warning Statement

TThis device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body. Pour se conformer aux exigences de conformité CNR 102 RF exposition, une distance de séparation d'au moins 20 cm doit être maintenue entre l'antenne de cet appareil ettoutes les personnes.

Appendix A: Toxic or Hazardous Materials or Elements

Component Name	Toxic or Hazardous Materials or Elements					
	Pb	Hg	Cd	Cr VI	PBB	PBDE
Sheet Metal(Case)	o	o	o	o	o	o
Plastic Parts （Panel）	o	o	o	o	o	o
Circuit Board	o	o	o	o	o	o
Fastener	o	o	o	o	o	o
Wire and Cable/Ac Adapter	o	o	o	o	o	o
Packing Material	o	o	o	o	o	o
Accessories	o	o	o	o	o	o

O: Indicates that the concentration of the hazardous substance in all homogeneous materials in the parts is below the relevant threshold of the SJ/T11363-2006 standard.
X: Indicates that the concentration of the hazardous substance of at least one of all homogeneous materials in the parts is above the relevant threshold of the SJ/T11363-2006 standard. During the environmental-friendly use period (EFUP) period, the toxic or hazardous substance or elements contained in products will not leak or mutate so that the use of these (substances or elements) will not result in any severe environmental pollution, any bodily injury or damage to any assets. The consumer is not authorized to process such kind of substances or elements, please return to the corresponding local authorities to process according to your local government statutes.

O: Indicates that the concentration of the hazardous substance in all homogeneous materials in the parts is below the relevant threshold of the SJ/T11363-2006 standard.
X: Indicates that the concentration of the hazardous substance of at least one of all homogeneous materials in the parts is above the relevant threshold of the SJ/T11363-2006 standard. During the environmental-friendly use period (EFUP) period, the toxic or hazardous substance or elements contained in products will not leak or mutate so that the use of these (substances or elements) will not result in any severe environmental pollution, any bodily injury or damage to any assets. The consumer is not authorized to process such kind of substances or elements, please return to the corresponding local authorities to process according to your local government statutes.

Note:

- **To view setup videos for many of the steps outlined in this guide, go to http://amcrest.com/videos**
- **This user manual is for reference only. Slight differences may be found in the user interface.**
- **All the designs and software here are subject to change without prior written notice.**
- **All trademarks and registered trademarks mentioned are the properties of their respective owners.**

To contact Amcrest support, please do one of the following:

Visit http://amcrest.com/contacts and use the email form
Call Amcrest Support using one of the following numbers:
Toll Free US: (888) 212-7538
International Callers (Outside of US): +1-713-893-8956
USA: 713-893-8956
Canada: 437-888-0177
UK: 203-769-2757
Email Amcrest Customer Support support@amcrest.com

Copyright Amcrest© 2019