4K UltraHD Full Color Night Vision Camera
User Manual

Version 1.0.0

Contents

Overview....4
Connection & Installation....5
Installation Guide....6
Desktop Access Setup....12
Live....13
Playback....14
Cloud Storage....14
Setup....14
Camera....15
Network....23
Event....27
Storage....48
System....52
Information....55
Alarm....55
Logout....56

Welcome

Thank you for purchasing an Amcrest camera!
In this document can find information about your camera's features, functions, as well as information to aid in troubleshooting. Many of the setup and installation sections below have corresponding videos on YouTube
To access the setup videos, please go to http://amcrest.com/videos

For access to the quick start guide and other support information, go to http://amcrest.com/support
To contact Amcrest support, please do one of the following:

Visit http://amcrest.com/contact and use the email form.
Call Amcrest Support using one of the following numbers:
Toll Free: (888) 212-7538
International Callers (Outside of US): +1-713-893-8956
USA: +1-713-893-8956
Canada: 437-888-0177
UK: 203-769-2757

Important Security Warning



To keep your Amcrest camera secure and prevent unauthorized access, please make sure to follow the steps below:

- Always make sure that your camera has the latest firmware as listed on www.amcrest.com/firmware
- Never use the default password for your camera. Always ensure that your password is at least 810 characters long and contains a combination of lowercase characters, uppercase characters as well as numbers.

Important Safeguards and Warnings

1. **Electrical Safety**

All installation and operation should conform to your local electrical safety codes.
The product must be grounded to reduce the risk of electric shock.
We assume no liability or responsibility for any fires or electrical shock caused by improper handling or installation.

2. **Transportation Security**

Heavy stress, violent vibrations, and excess moisture should not occur during transportation, storage, and installation of the device.

3. **Installation**

Handle the device with care. Keep the device right side up.
Do not apply power to the camera before completing installation.
Do not place objects on top of the camera.

4. **Repair Professionals**

All the examination and repair work should be done by qualified service engineers.
We are not liable for any problems caused by unauthorized modifications or user-attempted repair.

5. **Environment**

The camera should be kept in a cool, dry place away from direct sunlight, flammable materials, explosive substances, etc.

This product should be transported, stored, and used only in the specified environments as stated above. Do not aim the camera at a strong light source, as it may cause overexposure of the picture, and may affect the longevity of the camera's sensors.

Ensure that the camera is in a well-ventilated area to prevent overheating.

6. **Operation and Maintenance**

   Do not touch the camera sensor or lens directly.

   To clean dust or dirt from the lens, use an air blower or a microfiber cloth.

7. **Accessories**

   Be sure to use only the accessories recommended by manufacturer.

   Before installation, please open the package and check to ensure that all the components are present. Contact the retailer that you purchased from, or Amcrest directly if anything is broken or missing in the package.

Overview

This 4K UltraHD camera features the latest JS technology which allows the camera to operate in any web browser without the use of a plugin. The camera provides various functions such as recording, playback, perimeter protection, as well as face detection, human/vehicle detection, etc. which can be used to reduce false motion alerts using object filtering. The camera also features a built-in siren, microphone, and white light LED to provide full color night vision.

This camera adopts a high-quality design to achieve high levels of reliability and security. It can be configured to work locally, as well as on a network. This camera works using a POE connection and interfaces with most networks through the Ethernet port of your router.

Features

This camera has the following features:

AI Features

This camera offers the following AI features; Face Detection, IVS (Tripwire/Intrusion/Smart Motion Detection (Human/Vehicle), People Counting, and Heat Map. Face detection allow the camera to detect faces up to 28ft away and sends a snapshot of the event using email alerts or push notifications in the Amcrest View Pro app.

IVS features are used for perimeter protection. Smart Motion Detection works with the camera's built-in motion detection capabilities to reduce false alerts from objects such as trees, animals, or other non-human or vehicular shapes, people counting is used to provide a statistic based on the number of people who enter and exit a certain area, and heat map is used to determine the overall crowd flow (density) over a certain amount of time in a specific area. Details of the AI features included with your camera are provided in this document.

Deterrent (Siren)

The camera has a built-in speaker which allows the camera to activate a siren or custom audio alert to sound when motion is detected. The speaker can also be used as two-way audio using the Amcrest View pro app or in the web user interface if applicable.

Color Night Vision

This camera has four white light LEDs on the front of the camera which are activated when the amount of detected light is too low. The lights provide color night vision only and cannot be used as active deterrents, flash, or activate upon motion.

Network Access

The camera can be accessed remotely from a wide variety of internet connected devices, including PCs, Mac, iOS, and Android devices using a P2P connection or IP address. Use the UPnP or other protocols to allow remote and local connection with a large variety of network hardware.

Cloud Storage Functionality

Amcrest offers premium cloud storage options to enable long-term storage. Amcrest Cloud also allows the user to easily locate and view recordings for playback from any internet connected computer or smartphone (iOS/Android).

Device Overview

The images below show the dimensions for the camera. The measurements are in millimeters (mm):

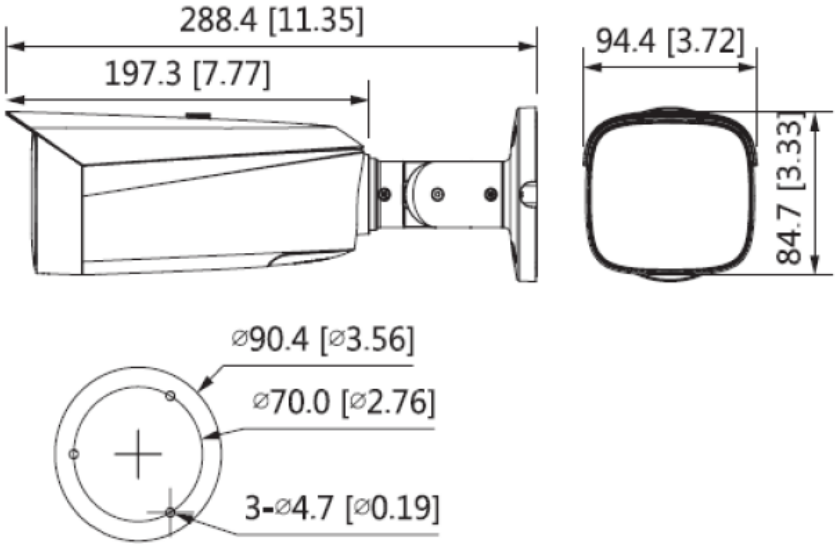

Connection & Installation

This section provides information about the connection and installation of your camera.

MicroSD Card Installation Guide

If using a microSD card, please make sure the microSD card is installed before physical installation of your camera. To Install a microSD card into your camera, please refer to the step-by-step guide below:

Note: A microSD card with a max of 256GB can be used. Please make sure the microSD card is properly formatted to FAT32 and is classified as class 10 or above before installing

1. Locate the hatch on the bottom of the camera. Use the included torx wrench to remove the hatch.
2. Locate the microSD card slot and insert the microSD card into the slot. Press in to secure the card into the slot.
3. Place the hatch back onto the camera and secure it to the camera using the included torx wrench.

Performing a Factory Reset

Performing a factory reset on your camera will revert the camera back to its original factory default settings. To perform a physical factory reset, make sure the device is powered on and follow the instructions provided below. Please note, you will need a Phillips head screwdriver to complete the reset.

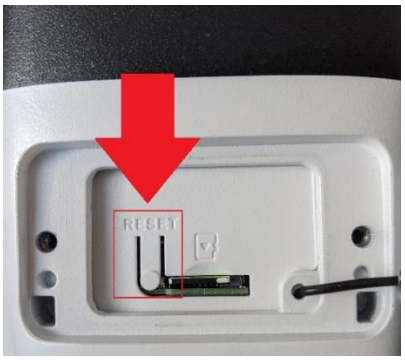

Step 1: Locate the hatch on the bottom of the camera. Use the included torx wrench to remove the hatch.

Step 2: Locate the reset button, press and hold the reset button for 30-45 seconds and allow the camera to reset.

Step 3: Once the reset is complete place the hatch back onto the camera and secure it to the camera using the included torx wrench. The camera has now been factory reset and reverted to its original factory settings. This includes usernames, passwords, and other settings. The default username and password will always be **admin**.

Dongle Wire Connections

The camera offers additional dongle wire connections which allows the user to attach an external RCA microphone, speaker, connect a 12V DC power adapter (do not use if using PoE) or external alarm. For more details pertaining to these connections please refer to the table below.

Connection	Parameter
Power	If the camera is not being powered using PoE a 12V DC, 2.0A power supply can be used to power the device. Please refer to the specs sheet for more details on power consumption.
Ethernet Port	Used to provide PoE power and data from a PoE switch or similar network.
Audio In	Connect a mono RCA microphone to this port to provide additional audio in capabilities.
Audio Out	Connect a mono RCA speaker to this port to provide additional audio out capabilities.
Alarm	Use these connections to set an external alarm to the device. **Brown:** Alarm Out **Green:** Alarm Out Ground **Blue:** Alarm In **Gray:** Alarm In Ground For more information on how to setup an external alarm, please refer to the user manual for your specific alarm system.

Installation Guide

Follow the steps and use the diagram in this section to install the POE cameras. Prior to installation ensure that the installation environment can support at least 3 times the weight of the camera.

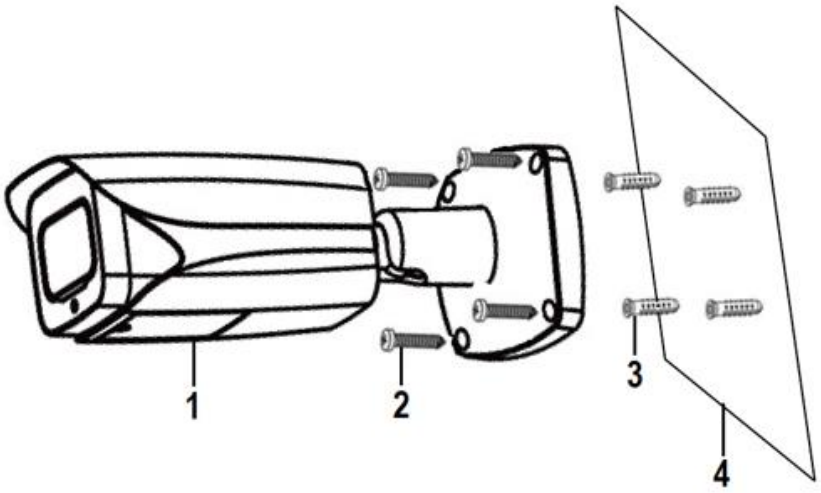

1	**Network Camera**
2	**Mounting Screws**
3	**Wall Anchors**
4	**Install Template**

Installation Guide

1. Stick the installation sticker on the installation surface.
2. Drill 3 holes through the holes on the installation sticker. A 1" paddle bit can also be used if installing wires through an installation surface.
3. Insert the included wall anchors into the newly drilled holes.
4. Align the bottom bracket of the camera to the installation holes. Then using a Phillips head screwdriver, secure the camera to the installation surface.
5. To adjust the camera up, down, or side to side, use the included torx wrench to loosen the lock and unlock bracket bolt on the bottom bracket.
   Note: An included analog cable can be used on an analog monitor if needed. The analog connection is found in the bottom security latch of the camera. The included torx wrench will be needed to open the latch. Secure the latch when finished.
6. When adjusted, turn the lock and unlock bolt to secure the camera in place.
7. Place the top portion of the casing over the camera and installation bracket and use the included torx wrench to tighten the security screw back onto the casing. Do not overtighten the security screw as it may not properly be secured if overtightened.

Camera Access

This section will provide information on how to setup and access your camera through the following methods:

Local PC (Web User Interface (Web UI), Amcrest Surveillance Pro, etc.)
Amcrest View Pro app
Amcrest Surveillance Pro (amcrest.com/downloads)
Amcrest Cloud

Default Username and Password

To login to the system for the first time, use one of the following default username/password combinations. Once you have successfully logged in, it is highly recommended to change the password for security reasons.

Username: admin
Password: admin

How to Setup the Camera

To make your experience with your Amcrest camera easy and simple, we have provided multiple ways to set up, view, and operate your camera. Please follow the instructions on this page to set up your camera in the way that works best for you.

App Setup

Amcrest cameras can be used on your mobile device using the following apps:

Amcrest Cloud
Amcrest View Pro

Both apps are free and available in the App Store and Google Play store. Please note, each app requires an iOS 6.0 or later version. Android will require a 3.0 or later version OS to run these apps.

For purposes of this guide, we will use iOS, though both apps. The App Interface may differ slightly from the screenshots below as updates are released. Below, you will find instructions on how to set up your camera up on the Amcrest cloud app as well as the Amcrest View Pro app.

Amcrest Cloud App Setup

Amcrest Cloud allows you to access your device from anywhere in the world. Please note, you will need an Amcrest Cloud account to proceed with Amcrest Cloud app setup. You can register for a cloud account in the Amcrest Cloud app or from the Amcrest Cloud website at amcrestcloud.com

Please make sure your camera is plugged into a power source and your Ethernet cable is connected from the camera to your router.
Make sure your camera and mobile device are on the same network during setup.
To ensure the camera connects to the cloud, a reboot of your camera is recommended. To add your camera onto the Amcrest Cloud app, follow these steps:

1. Download and open the Amcrest Cloud app from the App Store or Play Store.

2. Register for an Amcrest Cloud account. To register click on **Sign Up** and fill out the form to complete registration.

<table>
<tr><td>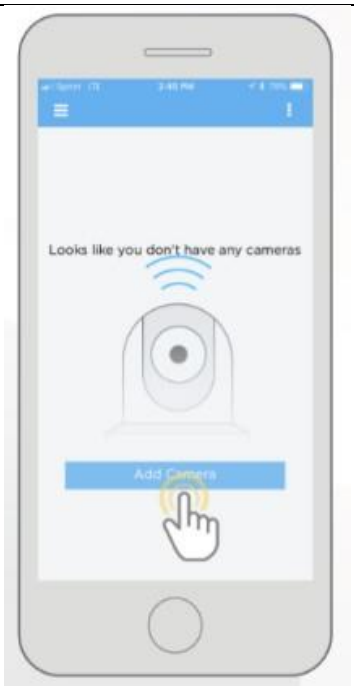
</td><td>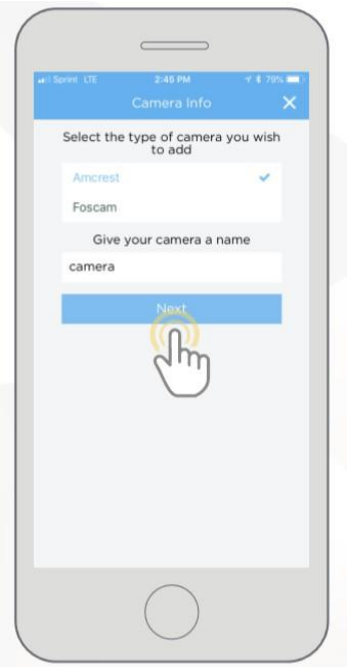
</td></tr>
<tr><td>3. Tap on Add Camera</td><td>4. Give your camera a name (Ex. Garage, Living Room, Kitchen, etc.) and tap Next to continue.</td></tr>
<tr><td>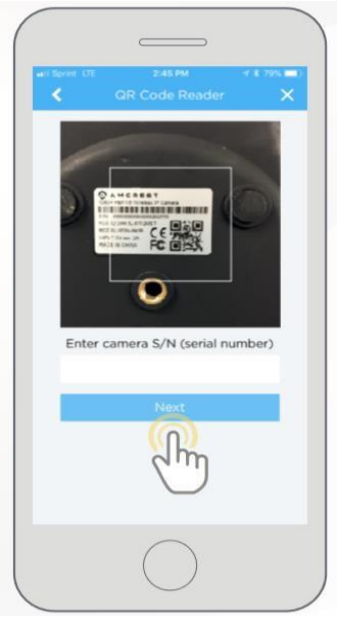
</td><td>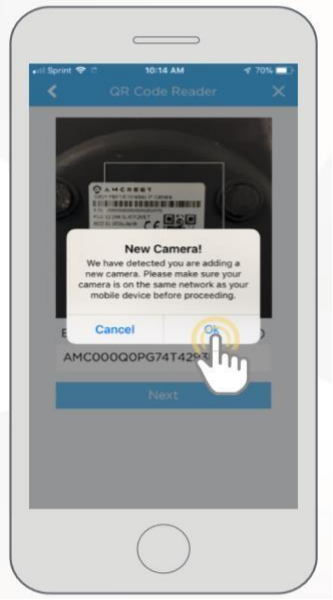
</td></tr>
<tr><td>5. Scan the QR code on the back/side/bottom of the camera or manually enter the camera's serial number into the Enter camera S/N (serial number) field. Press Next to continue.</td><td>6. If you are adding a new camera that does not have a set password the app will automatically detect that a new camera is being added. Tap OK to proceed.</td></tr>
</table>

	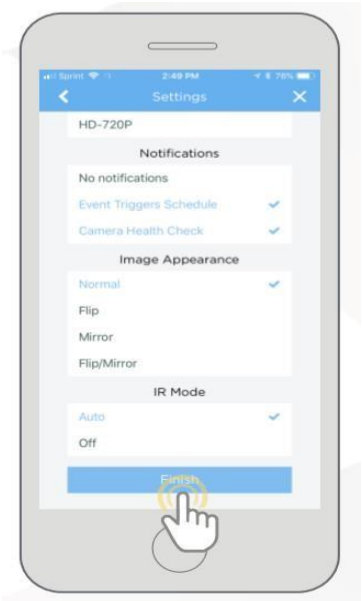
7. Set a new password for your camera. The password must be between 8 to 32 characters long and contain only letters and numbers. When you have finished setting the password for your camera, enter the password again in the **Confirm Camera Password** section. Tap **Next** to continue.	8. Confirm and adjust any needed settings for your camera. When all settings have been confirmed, tap **Finish**. For more information on how to setup your camera on cloud please visit amcrest.com/support

Amcrest View Pro Setup

To add your PoE camera to the Amcrest View Pro app follow these steps:

The following steps will continue the app setup process for an Android phone and, though the iPhone version of the app has slightly different steps, most of this process is identical and easy.

Download and install the Amcrest View Pro app for the App Store or Google Play Store.

Open the app on your mobile device and allow the app to load.

<table>
<tr>
<td>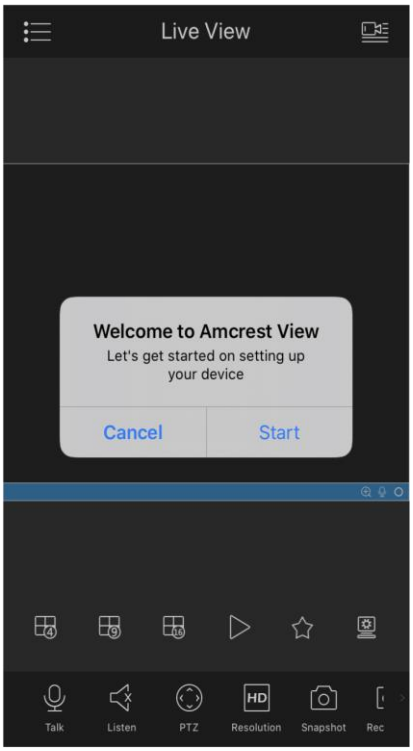
</td>
<td>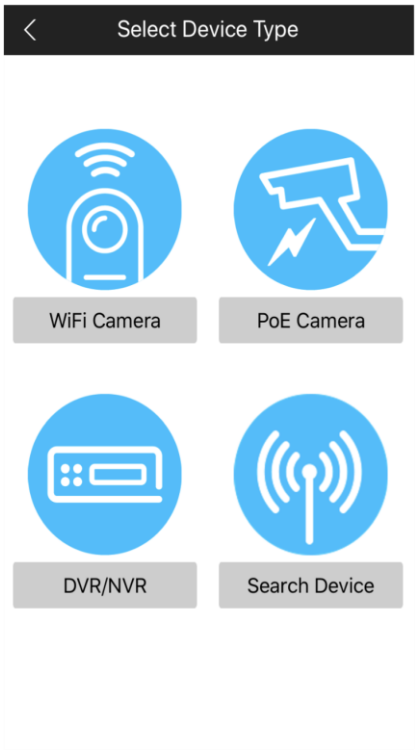
</td>
</tr>
<tr>
<td>3. Tap “Start”.</td>
<td>4. Tap “POE Camera”.</td>
</tr>
<tr>
<td>
</td>
<td>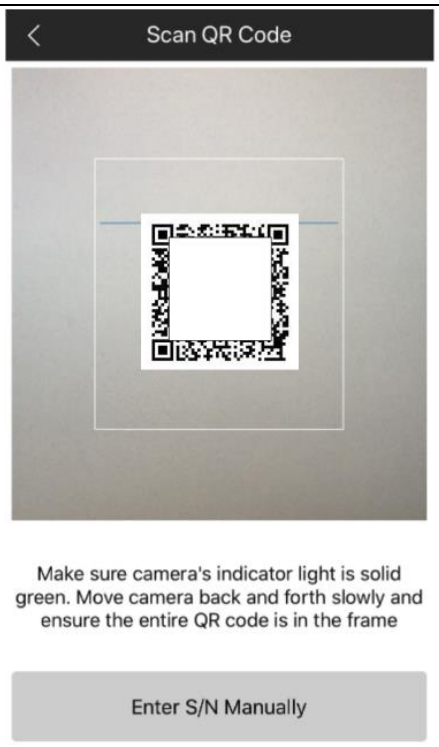
</td>
</tr>
<tr>
<td>5. Tap “P2P Connection”.

Note: IP/Domain/DDNS can be used to establish a DDNS connection. For more information on how to setup a DDNS connection, visit amcrest.com/support</td>
<td>6. Scan the QR code. The QR code can be found on the serial tag along with a scannable barcode.</td>
</tr>
</table>

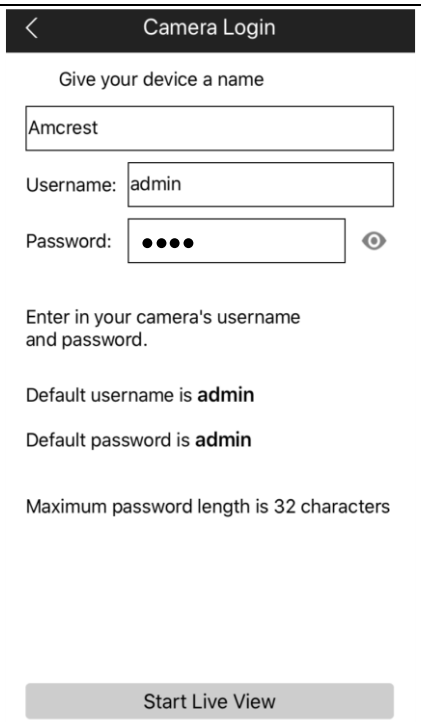	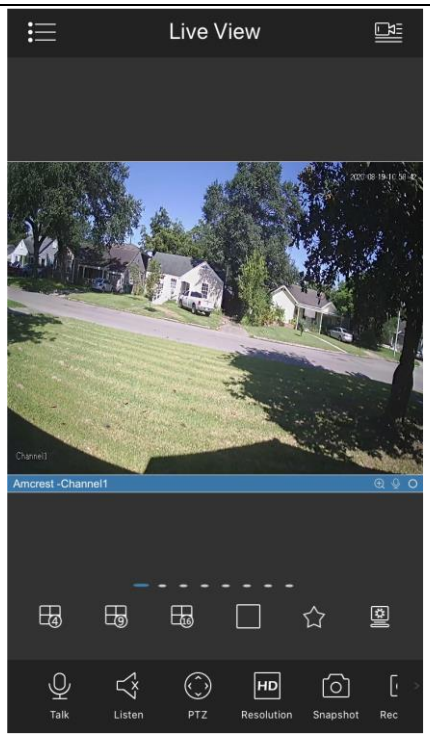
7. Create a name for the device and enter a username and password. The default username and password will be admin. Tap **Start Live View**.	8. Update the default password for the device and tap **"Start Live View"** to view the device.

Desktop Access Setup

This camera features the latest in Java script technology which allows you to access your camera using a wide variety of web browsers including, Google Chrome, Firefox, Safari, or other mainstream browsers using your PC or Mac. Please note, for an optimal experience with a web browser it is highly recommended to use Internet Explorer or IE mode on Edge as some features may still require the use of a plugin. For more information on how to access your camera from your computer please refer to the information below.

To access your camera from your computer you will need to first locate the camera's IP address. To locate the camera's IP address is it highly recommended to download our free Amcrest IP Config Tool software. The Amcrest IP Config Tool can be downloaded at the following web page: amcrest.com/downloads

In the **All Downloads** menu, click on **IP Config Software** to begin the free download. Once the download has completed installing, locate the IP address associated with the device you would like to view in the browser. Open the web browser and enter this IP address into browser. Press enter to access the web user interface.

In the web user interface, enter the login credentials for your device. If this is the first time accessing the device, the username and password will both be **admin.** Click on **Login**.

If this is the first-time logging into your device, you will be prompted to modify the password for your device. To modify the password, enter the new password you would like to use in the **New Password** field and confirm. The password used should be between 8 and 32 characters long with a combination of letters and numbers.

Click **OK** when and allow the stream to load.

Operation and Interface

This section will show you the basic operation and interfaces of the web user interface for your camera.

Live

By default, the interface opens on the Live tab. The live view tab allows the user to see a live video feed from the camera. The live view tab has five main sections:

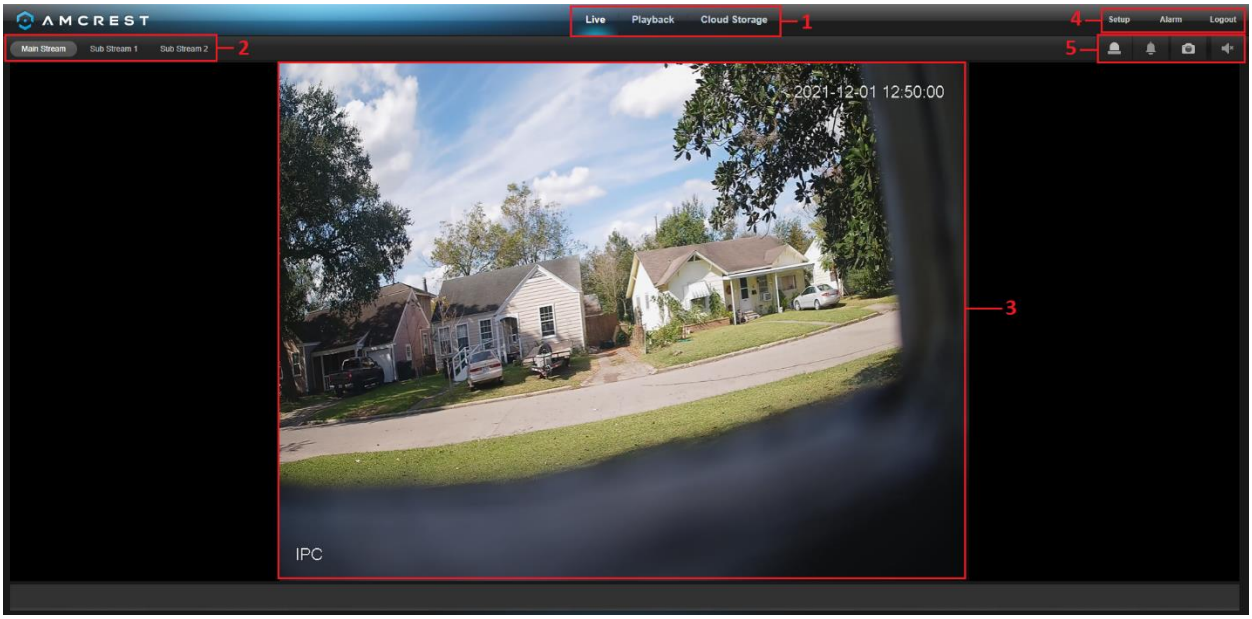

Section 1: These options allow the user quick access to the live view screen, playback, as well as to the Amcrest Cloud.
Section 2: This section allows the user to switch between Main Stream and Sub stream resolutions. Please note, if the computer has reached its limitation the UI will automatically switch to substream 1 to compensate.
Section 3: This is the live view feed from the camera.
Section 4: This section allows the user to access setup options, alarm, and logout the interface.
Section 5: This section allows the user to perform different camera functions while in live mode. Please note, more options in this section will be available on internet explorer however if using other web browsers, the following options will apply.

Button	Function Name	Function Description
	Alarm	Manually enable/disable external alarm (relay-out) alerts.
	Siren	Manually enable/disable the siren deterrent.
	Snapshot	Take a snapshot of an event.
	Audio	Enable/disable audio from the microphone.

Playback

The Playback tab allows the user to playback the camera's recorded video. Below is a screenshot of the Playback tab:

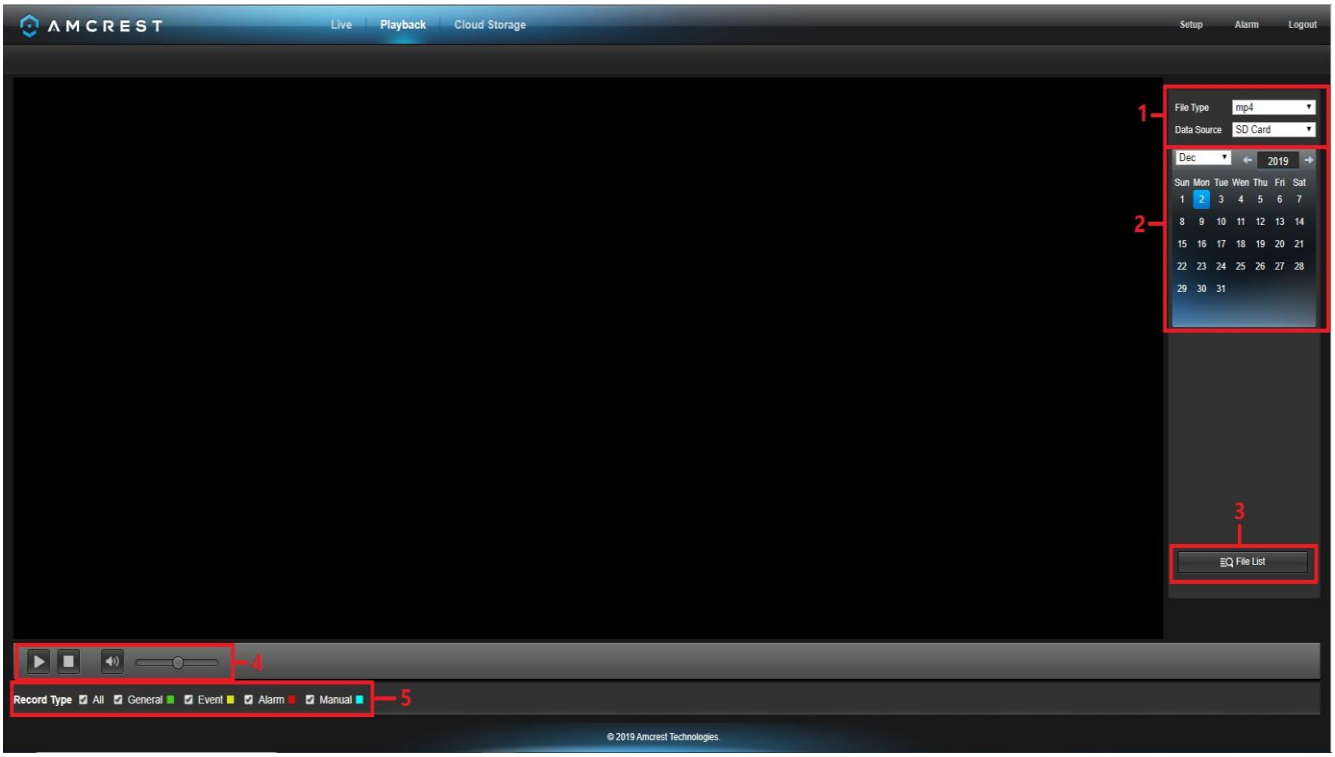

This is the interface for the playback menu. There are 5 main sections:

1. **File Menu**: This panel allows the user to select a file type and data source.
2. **Calendar**: This panel allows the user to pick a date that they would like to playback video from. When a date has recorded footage available, it is green. The current date is blue, unless it has recorded footage, then it's a lighter green.
3. **File List**: This button allows the user to open or download a recording from a list of all recorded video for a specific date range. To download a recording, press the button.
4. **Playback Bar**: These options allow the user to play, stop, and adjust the audio levels of a recording.
5. **Record Type**: Filter and view different record types such as continuous recordings (General), motion detection recordings (Event), alarm events (Alarm), manual recordings (Manual).

Cloud Storage

The Cloud Storage tab allows the user quick access to the Amcrest Cloud website.
At this website (amcrestcloud.com) users can register for new accounts as well as view or modify existing accounts.
For more information on Amcrest Cloud visit: amcrest.com/cloud

Setup

The Setup tab allows the user to change different camera settings. Below is a screenshot of the setup tab:

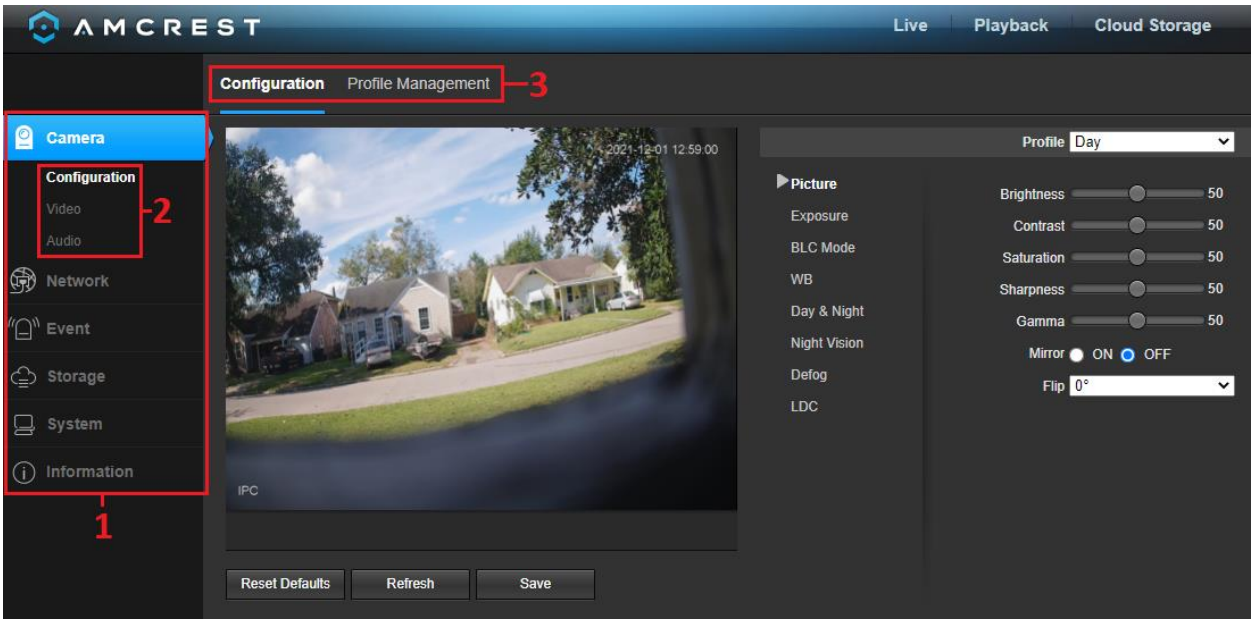

There are 3 main sections to note in the Setup tab:

1. **Menu Bar**: The menu bar is composed of menu sections, which when clicked display any menu items that fall under their category.
2. **Menu Items**: These menu items each open a different menu that allows the user to change specific settings for the camera.
3. **Menu Tab**: These tabs open menu options such as camera configuration and profile management.

Camera

This menu section allows the user to change different camera settings for video and to manage image profiles.

Configuration

This menu allows the user to configure image profiles for normal, day, and night usage. Below is an explanation for each of the fields on the Configuration tab in the Configuration menu item:

Picture

Profile: This dropdown box allows the user to select which profile to modify. The 3 options are Day, Night, and General (automatically adjust between day and night profiles).

Brightness: This slider is used to adjust playback and recorded video window brightness. The value ranges from 0 to 100. The default value is 50. The larger the number, the brighter the video is. When you input the value here, the bright section and the dark section of the video will be adjusted accordingly. You can use this function when the whole video is too dark or too bright. Please note the video may become hazy if the value is too high. The recommended value ranges from 40 to 60.

Contrast: This slider is used to adjust playback and recorded video window contrast. The value ranges from 0 to 100. The default value is 50. The larger the number is, the higher the contrast is. You can use this function when the whole video brightness is OK, but the contrast is not correct. Please note the video may become hazy if the value is too

low. If this value is too high, the dark section may lack brightness while the bright section may overexpose. The recommended value ranges from 40 to 60.
Saturation: This slider is used to adjust playback and recorded video window saturation. The value ranges from 0 to 100. The default value is 50. The larger the number, the stronger the color is. This value has no effect on the general brightness of the whole video. The video color may become too strong if the value is too high. For the grey part of the video, distortion may occur if the white balance is not accurate. Please note the video may not be clear if the value is too low. The recommended value ranges from 40 to 60.
Sharpness: This slider is used to adjust the sharpness of the video. The value ranges from 0 to 100. The larger the value is, the clearer the edges are and vice versa. Note: The higher the value, the higher likelihood of picture noise occurring. The default value is 50 and the recommended value ranges from 40 to 60.
Gamma: This slider is used to adjust the gamma of the video. The larger the number, the brighter the image. The default value is 50 and the recommended value ranges from 40 to 60.
Mirror: This radio button allows the user to turn the mirroring feature on or off. Turning mirroring on will mirror the picture.
Flip: This dropdown box allows the user to flip the video feed picture. Please note, the camera can only flip the image 0° and 180° if the image is over 4MP. If viewing below 4MP or can flip the image 0°, 90°, 180°, and 270°.

Exposure

This menu allows the user to select the exposure type for the video feed.

Profile: This dropdown box allows the user to select which profile to modify. The 3 options are Day, Night, and General (automatically adjust between day and night profiles).
Anti-flicker: These options allow the user to select what type of anti-flicker technology should be used for the video feed. The three options are 50 Hz, 60 Hz, and Outdoor. The desired option should offset any flickering effect caused by the electrical current used in the specific area.
Mode: This dropdown menu allows the user to modify certain exposure settings related to the device such as, gain priority, shutter priority or setting a manual gain setting.

Auto: Default exposure settings. Automatically adjust exposure to increase the
gainFirst - This setting will maximize the gain for the ideal exposure. Low Noise Basically turns up the ISO to the best setting without sacrificing exposure timing.
Shutter Priority - This setting will maximize the fastest shutter speed and will sacrifice the gain in return.
Manual - This setting lets you select your shutter speed and have the gain adjust automatically. Selecting customized range will let you both the shutter speed an adjust the gain manually.

Exposure Comp: Use this slider to adjust the exposure composition. This will make the camera either more or less sensitive to light. The default value is 50, however it can be adjusted from 0 to 100.
3D NR: Enable/disable 3D noise reduction.
3D NR Level: This slider allows the user to specify the 3D Noise Reduction level. The value ranges from 1-100.

To reset to default settings, click the **Reset Defaults** button. To refresh the screen, click on Refresh. To save the settings, click the **Save** button.

BLC Mode

This menu allows the user to select Back Light Compensation. The values are Off, BLC (Auto), WDR, and HLC. This feature should only be used in black lit environments.

Profile: This dropdown box allows the user to select which profile to modify. The 3 options are Day, Night, and

General (automatically adjust between day and night profiles).

Mode: Use this dropdown menu to select between different BLC presets:

OFF: Disable back light compensation modes.

BLC: Optimizes the camera to increase light exposure for darkened areas. This makes objects appear more naturally lit and increases detail. Please note that using BLC will make bright outdoor areas appear more lit, almost completely white,

HLC: Automatically detects strong light sources and reduces light exposure, greatly improving the clarity of bright areas.

WDR: Clearly displays both the foreground subjects and the background in balanced detail. The camera simultaneous captures the scene twice with two different image sensors, each one at a different exposure level, then merging the images to output one balanced image.

SSA: Automatically lower the brightness of high brightness area and increase the brightness of low brightness area according to the environmental brightness and try to make it clear to see what is in the picture.

To reset to default settings, click the **Reset Defaults** button. To refresh the screen, click on Refresh. To save the settings, click the **Save** button.

WB

This dropdown box allows the user to select the white balance for the video feed. The different options are Auto, Sunny, Night, Outdoor, Customized and Regional Custom.

Profile: This dropdown box allows the user to select which profile to modify. The 3 options are Day, Night, and General (automatically adjust between day and night profiles).

Mode: This dropdown menu allows the user to choose white balance presets such as, auto, sunny, night, outdoor, customized, and regional customized options.

Auto: Default white balance setting.

Sunny: Adjust the white balance image to optimal settings in a sunny environment.

Night: Adjust the white balance image to optimal settings in a nighttime environment.

Outdoor: Adjust the white balance image to optimal settings in an outdoor environment.

Customized: Manually adjust the red and blue values of the image.

Regional Custom: Allows the user to select an area (region) on the live view screen in which white balance will be most applicable

To reset to default settings, click the **Reset Defaults** button. To refresh the screen, click on Refresh. To save the settings, click the **Save** button.

Day & Night

Day & Night profiles are used to determine when black and white mode is turned on in a dark environment.

Profile: This dropdown box allows the user to select which profile to modify. The 3 options are Day, Night, and General (automatically adjust between day and night profiles).

Mode: This dropdown box allows the user to select different Day & Night balance modes. The 3 options are Auto, Color, and B&W.

Color - Preset which allows the camera to compensate color in day or night profiles.

B&W - Sets the picture to black and white, however when illumination is too dark it switches on IR mode.

To reset to default settings, click the **Reset Defaults** button. To refresh the screen, click on Refresh. To save the settings, click the **Save** button.

Night Vision

This menu allows the user to select whether the white light LEDs are activated for selected profile.

Profile: This dropdown box allows the user to select which profile to modify. The 3 options are Day, Night, and General (automatically adjust between day and night profiles).
Mode: This dropdown box allows the user to select whether to turn the white light LEDs on or off.

- **Auto:** Automatically turns the LEDs on or off based on the amount of light detected by the camera.
- **Manual:** Manually turn the LEDs on or off.
- **Off:** Turn off the IRs completely.

To reset to default settings, click the **Reset Defaults** button. To refresh the screen, click on Refresh. To save the settings, click the **Save** button.

Defog

This menu allows the user to set defog settings which can be useful in foggy or hazy weather. For more information on this feature refer to the information provided below:

Profile: This dropdown box allows the user to select which profile to modify. The 3 options are Day, Night, and General.
Mode: Allows the user to adjust defog settings.

- **OFF:** Allows the user to turn off defog mode.
- **Manual:** Allows the user to manually control defog settings.
- **Auto**: Allows the user to let the camera automatically detect defog settings.

To reset to default settings, you can also click the **Reset Defaults** button. To refresh the screen, click on Refresh. To save the settings, click the **Save** button.

LDC

On-Device Distortion Correction On-device lens distortion correction (LDC) digitally corrects optical distortion common with ultra-wide-angle lenses. For more information on this feature refer to the information provided below.

Profile: This dropdown box allows the user to select which profile to modify. The 3 options are Day, Night, and General.
LDC: Use these radio buttons to enable or disable the LDC function.

To reset to default settings, you can also click the **Reset Defaults** button. To refresh the screen, click on Refresh. To save the settings, click the **Save** button.

Profile Management

Below is a screenshot that shows the Profile Management tab in the Configuration menu item:

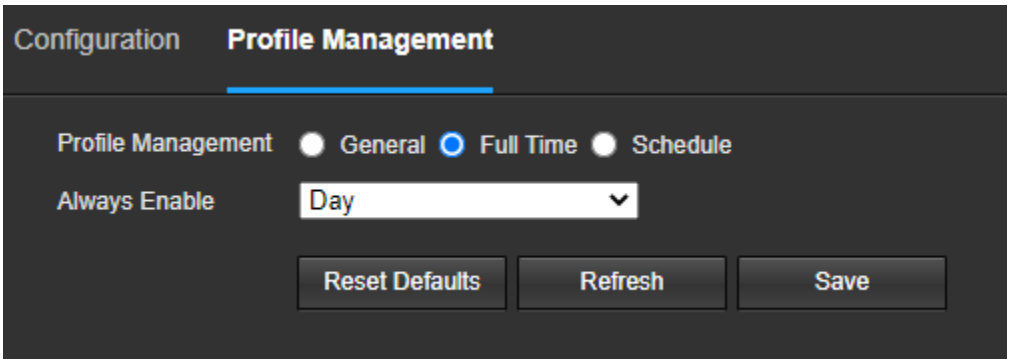

Below is an explanation for each of the fields on the Profile Management tab in the Configuration menu item:

Profile Management: This set of radio buttons allow the user to set what basis the profile management settings run on. There are 3 options: General, Full Time, and Schedule.
General means that the system can automatically alternate between night and day based on the profiles for each. Full Time means that the system sticks to one profile the entire time it is running. Schedule allows the user to dictate which times of the day are designated for the day profile and the night profile.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Video

This section allows the user to change video settings for the camera's video feed. There are 4 tabs in this menu item: Video, Snapshot, Overlay, and Path.

Below is a screenshot that shows the Video tab in the Video menu item:

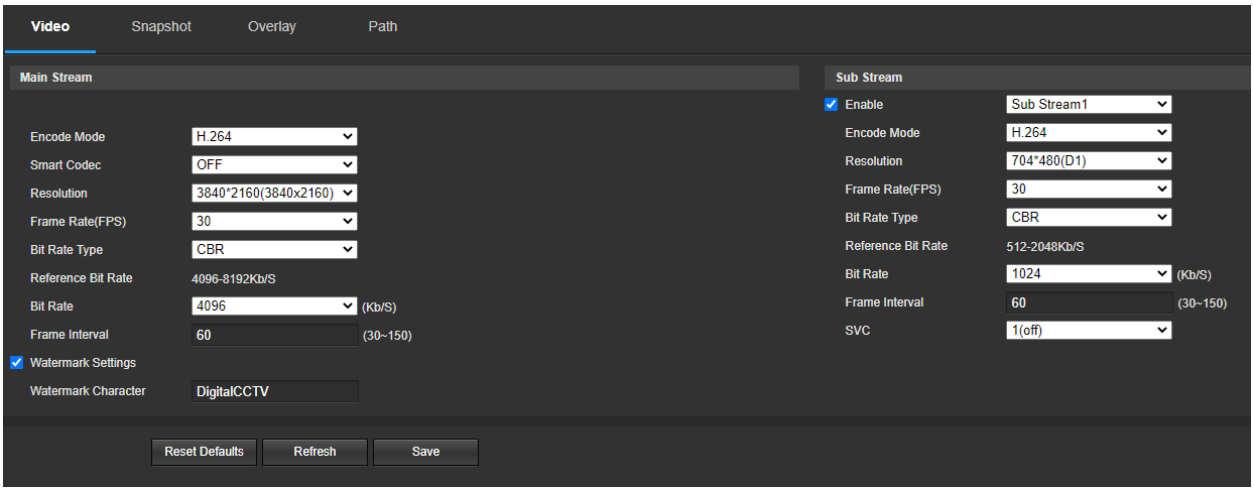

Below is an explanation for each of the fields on the Video tab in the Video menu item:

Encode Mode: This dropdown box allows the user to select a compression protocol. The system supports H.264 and MJPEG video compression protocols.

Resolution: This dropdown box allows the user to set the resolution. The system supports various resolutions, and they can be selected from this dropdown list.
Frame Rate (FPS): This dropdown box allows the user to select a frame rate. Frame rate settings are measured in frames per second (FPS) and can range from 1f/s to 25f/s in PAL mode and 1f/s to 30f/s in NTSC mode. Please note, if the AI features on the camera are enabled, the camera will default to 20fps, if the AI features are disabled the camera can max at 30 fps.
Bit Rate Type: This dropdown box allows the user to select a bit rate type. The system supports two-bit rate types: CBR and VBR. In VBR mode, video quality can be set.
Reference Bit Rate: This is the recommended bit rate value according to the resolution and frame rate selected.
Bit Rate: This dropdown box allows the user to select a bit rate.
Frame Interval: This field allows the user to set the P frame amount between two I frames. The value ranges from 1 to 150 seconds. Default value is 50. Recommended value is frame rate *2.
Watermark Settings: This function allows the user to verify if the video has been tampered with.
Watermark Character: This field allows the user to set the watermark's text. The default string is Digital CCTV. The maximum length is 85 characters. This string can only include numbers, characters, and underscores.

Sub Stream is a lower quality stream that allows the feed to take up less resources and bandwidth when streaming. The Mainstream and the Sub Stream have the same fields. Sub Stream can be enabled by checking the box next to Enable.

To reset to default settings, click the Reset Defaults button. To refresh the page, click the Refresh button. To save the settings, click the Save button.

Snapshot

Below is a screenshot that shows the Snapshot tab in the Video menu item:

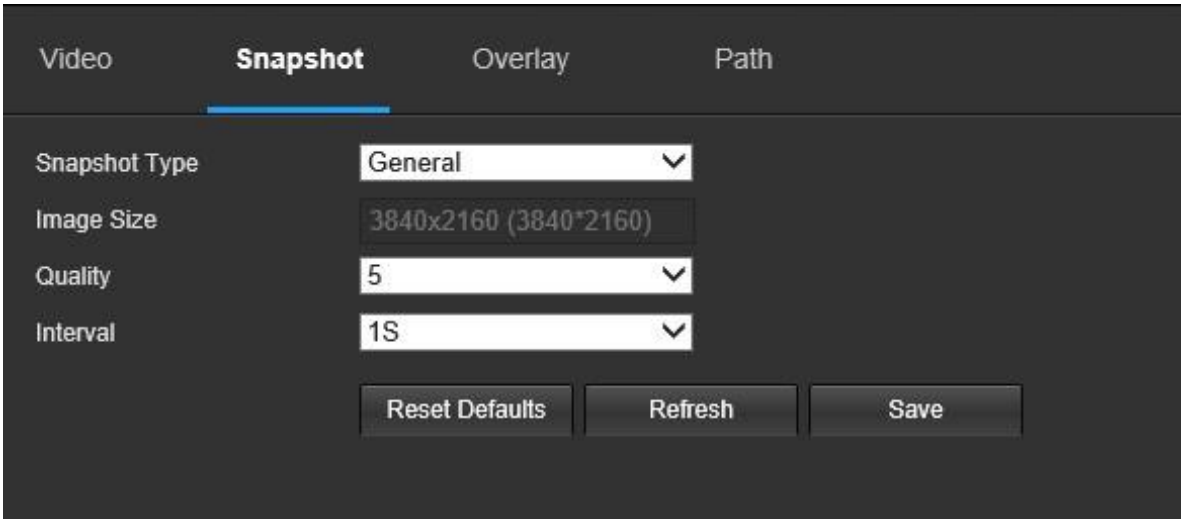

Below is an explanation for each of the fields on the Snapshot tab in the Video menu item:

Snapshot Type: This dropdown box allows the user to select a snapshot mode. There are two snapshot modes:
General: Snapshots are taken as scheduled.
Event: Snapshots occur when a motion detection alarm or tampering alarm is triggered

Image Size: This dropdown box shows the image size. By default, the screenshot size is the same size as the video feed's resolution.
Quality: This dropdown box allows the user to select image quality. Quality is adjusted on a scale of 1-6.
Interval: This is to set snapshot frequency. The value ranges from 1 to 7 seconds. The maximum setting for a customized interval is 3600s/picture.

To reset to default settings, click the Reset Defaults button. To refresh the page, click the Refresh button. To save the settings, click the **Save** button.

Overlay

Below is a screenshot that shows the Overlay tab in the Video menu item:

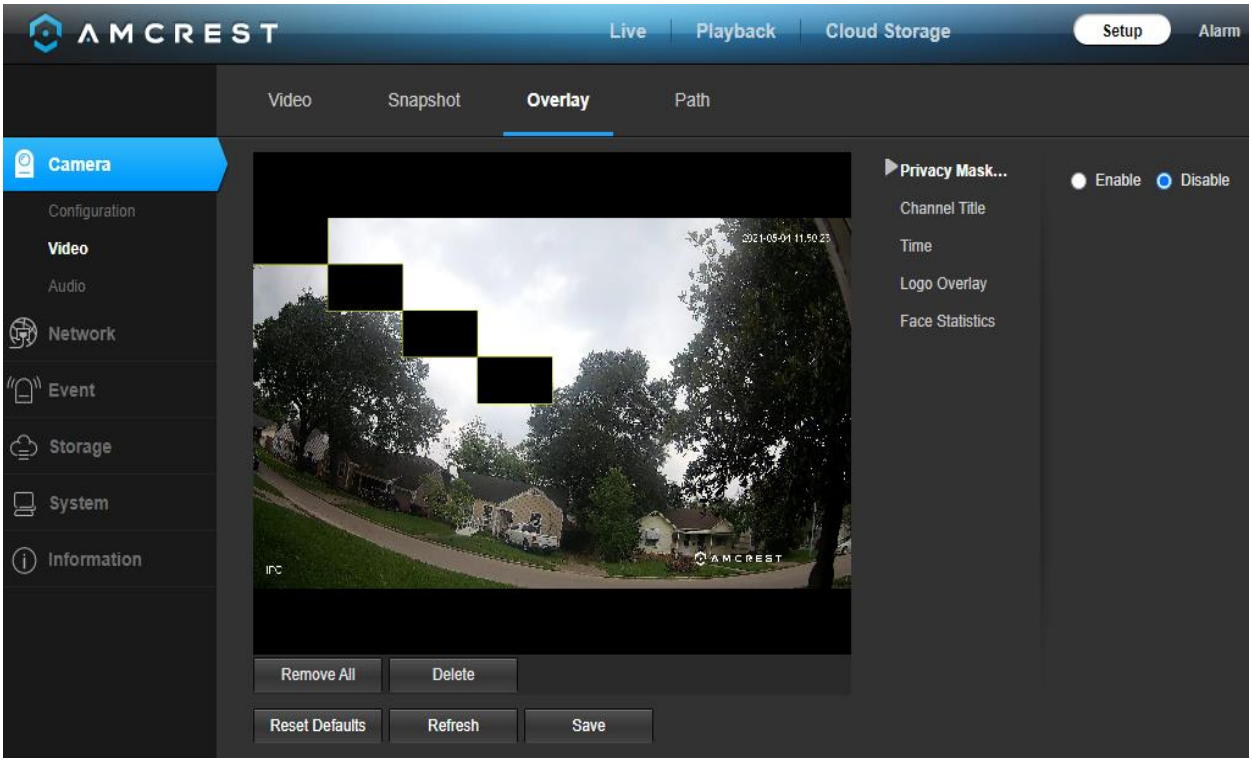

The menu on the left allows the user to select which overlay to modify. Privacy Masking, Channel Title, Time, and Text Overlay can all be modified in this menu.

Privacy Masking: Privacy masks are used to block out certain areas of the feed. To set a privacy mask, click one of the boxes in the live view window, and position or resize it as needed. To remove a box, click on it, then click the delete button. To remove all privacy filter boxes, click the remove all button.
Channel Title: This radio button allows the channel title to be modified.
Time: Clicking the Display Weekdays checkbox will show the weekday at the end of the timestamp.
Logo Overlay: This radio button is used to enable or disable the Amcrest logo on the live view screen.
Face Statistics: This option is used to provide a face detection overlay which counts the number of faces detected by the camera. Please note, this overlay will only work if face detection is activated.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Path

All downloaded files will be saved to your current web browsers download folder.

Audio

This menu allows the user to modify audio settings for the camera. Below is an explanation for each of the fields on the Audio menu:

Enable: This checkbox allows the user to enable audio recording.
Encode Mode: This dropdown box allows the user to select what audio format the audio should be recorded in.
Sampling Frequency: This dropdown box allows the user to select a sampling frequency for the audio. The options are 8k and 16k. 16k audio sampling allows for higher sound quality.
Audio in Device: This field allows the user to select what source to get audio from.
Noise Filter: This dropdown box allows the user to enable or disable the audio noise filter function. This function provides cleaner audio quality when enabled.
Microphone Volume: This slider allows the user to adjust the microphone volume. The value ranges from 0 to 100. The default value is 50.
Speaker Volume: This slider allows the user to adjust the speaker volume on the camera. The values range from 0 to 100. The default value is 100.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Alarm Audio

The audio files in this menu can be used as an audible siren for your camera. Below is a screenshot of this menu.

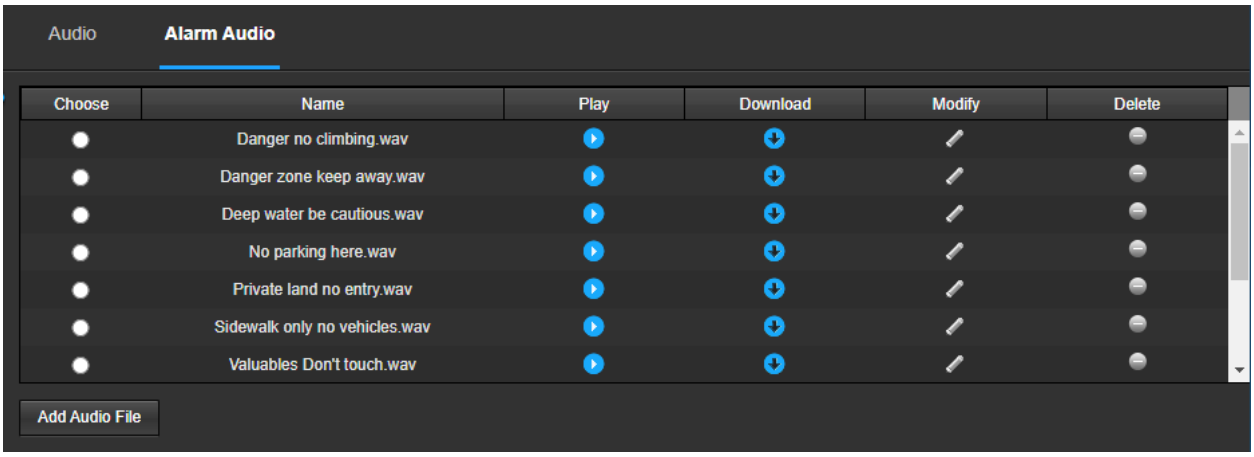

By default, the default siren will be an alarm.wav however to choose another file, select a file from the **Choose** section. To test the siren, return to the Live menu and click the siren icon ( ) located on the interface. A custom audio file can also be used if necessary. The audio file must be in .wav format and no less than 1 to 2 seconds long.

To add a custom siren, click on Add Audio File and import the .wav file into the interface. Choose the file and exit the interface. The siren options chosen will be applicable to all siren options available on the camera.

Network

This menu section allows the user to change network settings for the camera. For more information on network settings, please refer to the information provided below.

TCP/IP

TCP/IP stands for Transmission Control Protocol/Internet Protocol and it is the language/protocol that allows communication between internet connected devices, whether on a local network, or a on the Internet at large. This screen allows for TCP/IP settings to be modified for the camera to establish a connection to the network.

Below is an explanation of the fields on the TCP/IP settings tab:

Host Name: This text field allows the user to change the host device name for the camera. This field supports a maximum of 15 characters.
Ethernet Card: This dropdown box allows the user to select which internet access device to use. If the device is connected to a wired connection and a wireless one at the same time, then this box will have options to pick either of the connections. The Set as Default button allows the user to select one of the connection methods as the default one.
Mode: Static vs DHCP: This radio button allows the user to choose between a static IP address, and a dynamic IP address. DHCP stands for Dynamic Host Configuration Protocol, and this enables the camera to automatically obtain an IP address from another network device such as a server or more commonly, a router. When the DHCP function is enabled, the user cannot modify the IP address, Subnet Mask, or Default Gateway, as these values are obtained from the DHCP function. To view the current IP address, DHCP needs to be disabled. Note: When PPPoE is enabled, modification of the IP Address, Subnet Mask, and Gateway becomes prohibited.
MAC Address: This field shows the camera's MAC address, which is unique to this device. This number is read only and is used to access a local area network (LAN).
IP Version: This dropdown allows the user to select the IP version. The two options are IPV4 and IPV6.
IP Address: This field allows the user to enter a custom IP address.
Subnet Mask: This field allows the user to enter a custom subnet mask.
Default Gateway: This field allows the user to enter a custom default gateway.
Preferred DNS Server: This field allows the user to enter the preferred DNS server IP address.
Alternate DNS Server: This field allows the user to enter the alternate DNS server IP address.
Enable ARP/Ping to set IP Address Service: This checkbox allows the user to enable the ARP/Ping service to change the IP address service. For more information on this feature, click the help button while on the TCP/IP settings tab.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

P2P

The P2P settings screen is where users can use a QR code to connect their smartphone or tablet to the camera. This feature needs to be enabled for use with the Amcrest View app, Amcrest Cloud, or AmcrestView.com. Below is a screenshot of the P2P settings tab:

Below is an explanation of the fields on the P2P settings tab:

Enable: This checkbox allows the user to enable the P2P feature for the camera. This feature must be enabled for the camera to connect to a smartphone or tablet via the Amcrest View app. It is enabled by default.
Status: This field displays the status of the P2P connection. Once the camera is connected to a device, this field should display the word Online.
S/N: This field displays the Token ID for the camera. The Token ID can be used to manually enter the camera's information on a mobile or tablet device in case the QR code scanning feature cannot be used.
QR Code: This image is a Quick Response (QR) code. By scanning this image using the Amcrest View app, this camera can establish a connection with the app.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Connection

The Connection tab is where users can configure port connections.

Below is an explanation of the fields on the Connection settings tab:

Max Connections: This field allows the user to specify the maximum number of users that can be connected to the camera at the same time. The maximum number of users the camera can support at one time is 20.
TCP Port: This field designates the Transmission Control Protocol (TCP) port number. The default value is 37777.
UDP Port: This field designates the User Datagram Protocol (UDP) port number. The default value is 37778.
HTTP Port: This field designates the Hypertext Transfer Protocol (HTTP) port number. The default value is 80.
RTSP Port: This field designates the Real Time Streaming Protocol (RTSP) port number. The default value is 554.
HTTPS: This field enables the use of the HTTPS protocol for accessing the camera.
HTTPS Port: This field designates the Hypertext Transfer Protocol Secure (HTTPS) port number. The default value is 443.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

ONVIF

The ONVIF tab is where users can configure authentication via the ONVIF standard. The ONVIF version available on this camera is 20.12(V3.0.0.1030855). To enable ONVIF, click the radio button next to Enable, and then click the **Save** button.

.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

DDNS

DDNS stands for Dynamic Domain Name Server. This technology is used to automatically update name servers in real time to help the camera maintain a persistent address despite changes in location or configuration. What this means is that even when the camera is restarted, moved, or reconfigured, it can keep the same IP address, thus allowing remote users uninterrupted access to the camera, rather than having to request a new IP address to use for remote access anytime a change is made.

To use this feature, users will need to setup an account with a DDNS service. The camera supports a variety of DDNS services such as AMCRESTDDNS, NO-IP DDNS, and Dyndns DDNS. Based on which service is selected, different options may show on this screen. For purposes of this guide, AmcrestDDNS will be used. AmcrestDDNS is a free DDNS service provided by Amcrest, and it must be renewed every year. A renewal reminder email will be sent to the email entered in the username field below.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

IP Filter

This screen allows for the filtering of IP addresses, either blocking them, or granting them access to the camera. This feature helps make the camera more secure by limiting remote access only to approved users.

Below is an explanation of fields on the IP Filter settings screen:

Trusted Sites: This checkbox allows the user to enable the IP Filter feature for trusted sites.
Add IP/MAC: This button opens a popup that allows the user to add IP or MAC addresses to the trusted site list. When accessing the camera externally, please add the MAC address of the router on the PC end.
Remove All: This button allows the user to remove all sites from the trusted IP/MAC list.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

SMTP (Email)

This screen allows for the configuring of email settings to permit the camera to send emails when an alarm is triggered.

Below is an explanation of fields on the SMTP (Email) settings screen:

SMTP Server: SMTP stands for Simple Mail Transfer Protocol. This field allows the user to enter the SMTP server used by the email service.
Port: This field allows the user to enter the port that corresponds to the selected SMTP server.
Login Anonymously: This checkbox allows the user to anonymously login to the server.
Username: This field allows the user to enter the SMTP username.
Password: This field allows the user to enter the password associated with the SMTP username.
Sender: This field allows the user to enter the sender email address. This email address will be the one that sends out all emails pertaining to the alerts and alarm emails sent by the camera.
Authentication: This dropdown box allows the user to select an encryption type. There are two types of email encryption protocols that are available.
SSL: Secure Socket Layer

TLS: Transport Layer Security
Subject: This field allows the user to define the subject line of the email that is sent to the receivers.
Recipients: This field allows the user to enter the receiver email address. These email addresses are the ones that will receive any emails pertaining to alert and alarm emails sent by the camera. Up to 3 email addresses can be entered in this field.
Interval: This field allows the user to define, in seconds, how long the system should wait between sending emails. This prevents multiple emails from being sent out.
Keep Alive: This checkbox allows the user to enable a function to periodically check in with the SMTP server to ensure it can connect correctly.
Test: This button causes the system to automatically send out an email to test the connection is OK or not. Prior to the email test, please save the email setup information.

To reset to default settings, click the Reset **Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

UPnP

UPnP stands for Universal Plug and Play, and it is a protocol used to easily connect devices to the internet. In the case of this camera, it allows the camera to connect to the router in an easy manner to quickly allow for remote access.

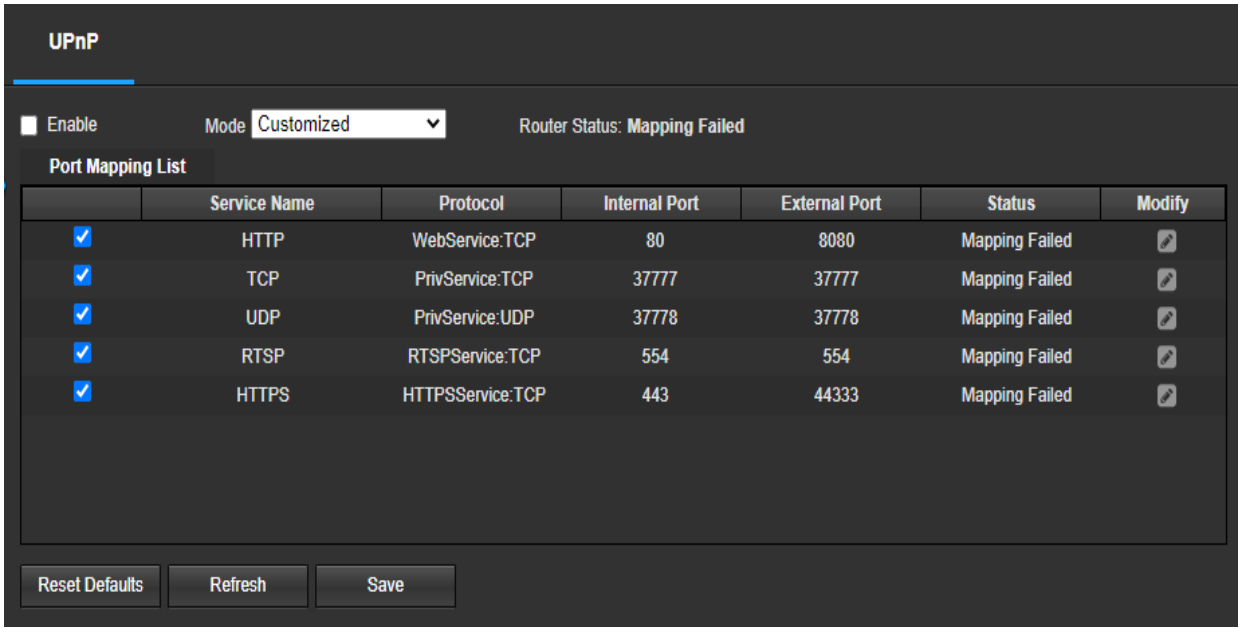

Below is an explanation of fields on the UPnP settings screen:

Enable: This checkbox allows the user to enable the UPnP function.
Router State: This field shows the UPnP status and has two options:
Unknown: This means that UPnP mapping has failed. **Successful**: This means that UPnP mapping has succeeded.
Port Mapping List: This table is used to show how the ports for each protocol listed below have been remapped by the UPnP protocol.
The first column shows the checkboxes to enable the corresponding service on the table.
The second column shows the name of the services. To edit this, double click on the service line item.

The third column shows the name of the protocol used by that service. To edit this, click the pencil button in the modify column for that line item.
The fourth column shows the Internal Port used by that service to establish communication from the router to the camera. To edit this, click the pencil button in the modify column for that line item.
The fifth column shows the External Port used by that service to establish communication from the router to the internet. To edit this, click the pencil button in the modify column for that line item.
The sixth column shows the status of the protocol. If the protocol was mapped successfully, this field will say "Mapping Succeeded".
The seventh column allows the user to open a dialog box and edit the service's information.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

HTTPS

This menu allows the user to enable and create HTTPS certificates.

Before you create or download a certificate, from main window->Setup->Network->Connection, set the HTTPS port values and then check the box to enable HTTPS.

For more information on how to setup HTTPS in the web user interface visit amcrest.com/support

Event

This menu section allows the user to change different settings for triggering events including AI features. The options available in this menu are video detection, audio detection, face detection, IVS, Smart Motion Detection, People Counting, and Heat Map. For more information on the features provided in this menu, please refer to the information provided below.

Video Detection

The video detection menu has two tabs: Motion Detection and Video Tamper.

Motion Detection

This tab allows the user to modify motion detection settings. Below is an explanation of the fields on the Motion Detect tab:

Enable: This checkbox enables motion detection for the camera.
Schedule: Clicking this button opens a weekly schedule that can be used to set times.
Click and drag to set motion detection for certain days of the week. Also, periods of motion detection can be set for each day and enabled using the period settings on the bottom half of the screen. There are a total of 6 periods that can be set.
Anti-Dither: This field allows the user to set the anti-dither time. The values in this field can range from 5 to 600 seconds. This time value controls how long the alarm signal lasts. Based on motion detection, a buzzer can go off, a tour can begin, a snapshot can be taken, or the camera can begin recording.
For example, if the anti-dither time is set to 10 seconds, each alarm may last 10 seconds if the local alarm is activated. During the process, if the system detects another local alarm signal at the fifth second, the buzzer, tour, snapshot, record channel functions will begin another 10 seconds while the screen prompt, alarm upload, email will not be

activated again. After 10 seconds, if system detects another alarm signal, it can generate a new alarm since the anti-dither time has expired.

Detection Area: Clicking this button opens a pop-up screen that can be used to set detection areas.

When the setup button is clicked, a live stream of the video is shown. The user can then set up to 4 regions, each with their own region name, sensitivity (1-100), and threshold (1-100). Each region has a specific color, and the region selector tool is displayed when the mouse is moved to the top of the screen.

Sensitivity is the amount of change required to increase the motion detected by a percentage. The lower the sensitivity, the more movement is required to trigger an alarm.

Threshold is the level that the motion detection needs to reach to trigger an alarm. The lower the threshold, the more likely that motion will trigger an alarm.

To designate a zone, click and drag the mouse over the area desired. When a colored box is displayed over the live feed, that area is now enabled for motion detection.

After the motion detection zone is set, click the enter button to exit the motion detection screen.

Remember to click the save button on the motion detection settings screen, otherwise the motion detection zones will not go into effect. Clicking the cancel button to leave the motion detection zone and will not save the zone setup.

Record: This checkbox allows the user to enable the camera to record video when a motion detection alarm is triggered.

Record Delay: This field specifies in seconds how long the delay between alarm activation and recording should be.

Relay Out: This checkbox allows the user to enable the camera to trigger a connected alarm (connected to the alarm port on the back of the camera) when a motion detection alarm is triggered.

Alarm Delay: This field specifies in seconds how long the delay between alarm activation and Relay alarm activation should be.

Send Email: This checkbox allows the user to enable the camera to send an email when a motion detection alarm is triggered.

Siren: This checkbox allows the user to enable a siren or customized audio file to activate once the motion detection alarm is triggered.

Snapshot: This checkbox allows the user to enable the camera to take a snapshot when a motion detection alarm is triggered.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Video Tamper

This tab allows the user to modify video tamper settings. Below is an explanation of the fields on the Video Tamper tab:

Enable: This checkbox enables a video tamper alarm for the camera.

Schedule: Clicking this button opens a weekly schedule that can be used to set times.

Click and drag to set video tampering for certain days of the week. Also, periods of video tampering can be set for each day and enabled using the period settings on the bottom half of the screen. There are a total of 6 periods that can be set.

Record: This checkbox allows the user to enable the camera to record video when a video tampering alarm is triggered.

Record Delay: This field specifies in seconds how long the delay between alarm activation and recording should be.

Relay Out: This checkbox allows the user to enable the camera to trigger a connected alarm (connected to the alarm port on the back of the camera) when a video tamper alarm is triggered.

Alarm Delay: This field specifies in seconds how long the delay between alarm activation and Relay alarm activation should be.
Send Email: This checkbox allows the user to enable the camera to send an email when a video tampering alarm is triggered.
Snapshot: This checkbox allows the user to enable the camera to take a snapshot when a video tampering alarm is triggered.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Audio Detection

This menu allows the user to modify audio detection settings. Below is a screenshot of the Audio Detection screen.

Enable Intensity Change: This checkbox enables an audio detection alarm. Enable Intensity Change: This checkbox enables intensity change for the camera audio.

> **Sensitivity:** Use this slider is the amount of change required to increase the audio detected by a percentage. The lower the sensitivity, the more audio variance is required to trigger an alarm.
> **Threshold**: Use this slider to adjust the threshold in which audio is detected. The lower the threshold, the more likely that audio will trigger an alarm.

Schedule: Clicking this button opens a weekly schedule that can be used to set times.
Click and drag to set audio tampering for certain days of the week. Also, periods of audio detection can be set for each day and enabled using the period settings on the bottom half of the screen. There are a total of 6 periods that can be set. 93.
Anti-Dither: This field allows the user to set the anti-dither time. The values in this field can range from 5 to 600 seconds. This time value controls how long the alarm signal lasts. Based on audio detection, a buzzer can go off, a tour can begin, PTZ can be activated, a snapshot can be taken, or the camera can begin recording.
For example, if the anti-dither time is set to 10 seconds, each alarm may last 10 seconds if the local alarm is activated. During the process, if the system detects another local alarm signal at the fifth second, the buzzer, tour, PTZ activation, snapshot, record channel functions will begin another 10 seconds while the screen prompt, alarm upload, email will not be activated again. After 10 seconds, if system detects another alarm signal, it can generate a new alarm since the anti-dither time has expired.
Record: This checkbox allows the user to enable the camera to record video when an audio detection alarm is triggered.
Record Delay: his field specifies in seconds how long the delay between alarm activation and recording should be.
Send Email: This checkbox allows the user to enable the camera to send an email when an audio detection alarm is triggered.
Snapshot: This checkbox allows the user to enable the camera to send a snapshot of the event when an audio detection alarm is triggered.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Smart Plan

A smart plan acts as the “master switch” for the AI features associated with your camera. A smart plan must be enabled for an AI feature to function. Please note, face detection and people counting can only be activated separately, however, IVS and heat map can be activated at the same time if needed.

To refresh the menu to its original format, click the **Refresh** button. To save a smart plan to your camera, click the **Save** button.

Face Detection

The Face Detection feature cannot be used simultaneously with IVS. This plan must be disabled in the Smart Plan menu before the Face Detection rule can be used. Below is a description of the options in this menu:

Enable: This checkbox is used to enable face detection.
Clear Counting: This checkbox is used to enable/clear face detection OSD information in the face statistics overlay.
Schedule: Allows the user to set a schedule in which face detection will be triggered.
Enable Face Enhancement: This checkbox is used to enhance the accuracy of a detected face image.
Record: This checkbox allows the user to enable the camera to record video when an event is triggered.
Record Delay: This field specifies, in seconds, how long the delay between events should be. The default is 10 seconds however this can be modified between 10~300 seconds.
Relay Out: This checkbox allows the user to enable the camera to trigger a connected alarm (connected to the alarm port on the back of the camera) when a video tamper alarm is triggered.
Alarm Delay: This field specifies in seconds how long the delay between alarm activation and Relay alarm activation should be.
Send Email: This checkbox allows the user to enable the camera to send an email when an event is triggered.
Snapshot: This checkbox allows a snapshot of the event to be sent via Email when triggered.
Enable Face Exposure: This checkbox allows the user to set face target brightness and face exposure detection interval features. Use the provided sliders to adjust these levels.

> **Face Target Brightness:** Sets the brightness of the detected face image. The default value is 50 however can be adjusted from 0 to 100 seconds.
> **Face Exposure Detection Interval:** Sets the face exposure to prevent image flickering caused by continuous exposure adjustments. The default value is 5 seconds however can be set between 0 and 100 seconds.

Detect Region: This option is used to set a face detection area. The area will be full screen by default.
Clear: This option is used to clear any face detection areas currently set.
Exclude Region: This option is used to set an area in which the face detection rule will not apply.
Clear: This option is used to clear any excluded face detection areas.
Target Filter: This option allows the user to set a maximum and minimum size of the target area. By default, this option will be set to the max resolution, however, it can be manually adjusted.
Draw Target: Allows the user to set a target area on the live monitor screen.
Clear: Clears the modified target area to draw the target area on the live monitoring screen.
Pixel Counter: Used to measure and set the number of pixels in the target area on the live monitoring screen.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Using Face Detection

1. In the Smart Plan menu, click on **Face Detection**. Click **Save**.
2. Click **Enable** to enable face detection.
3. Click on the **Clear Counting** checkbox to allow the number of faces detected to be displayed.
4. Click **Setup** to set a face detection schedule. Set your periods (if any) and click **Save** to continue.

5. Click **Face Enhancement** to allow the camera to better detect face events.
6. Click **Record** to allow the face event to be recorded.
7. Click on **Send Email** and **Snapshot** checkboxes to have a snapshot of the face event emailed. A valid email address must be established prior to enabling this feature. For more information on setting up email alerts, please visit amcrest.com/support
8. To customize the detection area, click **Clear** then click **Draw**. Click and hold on the interface and move your mouse to create a detection area.
9. Click **Save** to save the face detection settings.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

IVS

IVS stands for intelligent video system analytics and is typically used for perimeter protection. The IVS menu allows the user to customize and set IVS rules which allows the camera to produce general behavior analytics and reporting directly from the web user interface.

Setting an IVS Rule

All IVS rules can only be set and/or modified using the web user interface. They cannot be set using the Amcrest View Pro app or any other platforms associated with your device. For more information on setting IVS rule, refer to the information below.

1. Ensure a Smart Plan has been activated in the Smart Plan menu for IVS.
2. Access the IVS menu and click on the Add ( ) icon to begin customizing IVS rules.
3. Use the dropdown menu in the Rule Type column to select which IVS rule you want to use.

Tripwire

Tripwire allows the camera to trigger an event if an object, such as a human or vehicle, crosses the set tripwire line.

Below is a description of the features in this menu:

No.: Provides the order in which the IVS rules will be displayed in the menu.
Name: Allows the user to customize a name for their rule. Double click the name in the Rule column to modify.
Rule Type: This dropdown menu allows the user to select an IVS rule type.
+ icon: Click this icon to add a new IVS rule.
Schedule: Allows the user to set a schedule in which the IVS rule will be triggered.
Direction: This dropdown menu allows the user to set which direction the object will be going for the tripwire to be triggered. It can be set left, right, or in both directions (A<->B).
Object filter: The object filter checkboxes allow the camera to be triggered only when a specific object, such as a human or car, is detected by the camera. Both effective object checkboxes can be activated at the same time.
- **Human:** This checkbox allows the camera to be triggered only when a human figure is detected.
- **Motor Vehicle:** This checkbox allows the camera to be triggered only when a vehicle has been detected.

Record: This checkbox allows the user to enable the camera to record video when an IVS event is triggered.
Record Delay: This field specifies, in seconds, how long the delay between IVS events should be. The default is 10 seconds however this can be modified between 10~300 seconds.

Record Delay: This field specifies in seconds how long the delay between alarm activation and Relay alarm activation should be.
Relay Out: This checkbox allows the user to enable the camera to trigger a connected alarm (connected to the alarm port on the back of the camera) when a video tamper alarm is triggered.
Alarm Delay: This field specifies in seconds how long the delay between alarm activation and Relay alarm activation should be.
Send Email: This checkbox allows the user to enable the camera to send an email when an IVS event is triggered.
Siren: This checkbox allows the user to enable a siren or customized audio file to activate once the IVS rule is triggered.
Snapshot: This checkbox allows a snapshot of the IVS event to be sent via email when triggered.
Draw Rule: This option allows the user to use their mouse to customize (draw) a rule/area on the screen. This will be the area or line in which an IVS rule will be triggered.
Clear: This option is used to clear the drawn rule set on the live monitor screen.
Target filter: Sets a maximum and minimum size in which an event will be triggered.
Clear: Clears the modified target area to draw the target area on the live monitoring screen.
Draw Target: Allows the user to set a target area on the live monitor screen. **An IVS event will not occur outside the target box.**
Pixel Counter: Used to measure and set the number of pixels in the target area on the live monitoring screen.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Setting a Tripwire

1. Select Tripwire from the **Rule Type** drop down menu. Set a name for the rule by double clicking the mouse over the Name of the rule.
2. Click on **Setup** to set a schedule, set your periods (if any) and click **Save** to continue.
3. In the **Direction** menu, choose which direction the object will be going for the tripwire to be triggered.
4. Use object filters such as human and motor vehicle options to allow the camera only to trigger an event if a human or motor vehicle is detected.
5. Enable the **Record** checkbox to record the event to a local microSD card.
6. Check the **Send Email** and **Snapshot** checkboxes if you would like a snapshot of the event emailed to you. A valid Email address must be established in the camera prior to enabling this setting.
7. To have a siren or customized audio file to activate when the rule is triggered click on the **Siren** option.
8. Click the **Draw Rule** option and use your mouse to draw the rule on the live monitoring screen. Once the rule has been drawn click the monitoring screen to finish setting the rule. The drawn line will turn blue/green when set depending on the browser you are using.

Note: The target filtering and pixel counter can be used to refine the set rule however for optimal experience it is highly recommended to leave these settings as default. For more information on how to setup a tripwire rule, please visit amcrest.com/support

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Intrusion

Intrusion allows the camera to trigger an event if an object, such as a human or vehicle, appears or crosses a set intrusion area set by the user. Below is a description of the features in this menu:

No.: Provides the order in which the IVS rules will be displayed in the menu.
Name: Allows the user to customize a name for their rule. Double click the name in the Rule column to modify.
Rule Type: This dropdown menu allows the user to select an IVS rule type.
Schedule: Allows the user to set a schedule in which the IVS rule will be triggered.
Action: These checkboxes allow the user to choose a parameter filter that will activate a trigger if an object were to cross or appear in the set intrusion area.

Cross: The rule will trigger when a target enters or exits the area.
Appears: The rule will trigger when a target appears inside the area.

Direction: This dropdown menu allows the user to choose whether the rule will be triggered if an object enters, exits, or enters & exits a set line or area.
Object filter: The object filter checkboxes allow the camera to be triggered only when a specific object, such as a human or car, is detected by the camera. Both effective object checkboxes can be activated at the same time.

Human: This checkbox allows the camera to be triggered only when a human figure is detected.
Motor Vehicle: This checkbox allows the camera to be triggered only when a vehicle has been detected.

Record: This checkbox allows the user to enable the camera to record video when an IVS event is triggered.
Record Delay: This field specifies, in seconds, how long the delay between IVS events should be. The default is 10 seconds however this can be modified between 10~300 seconds.
Relay Out: This checkbox allows the user to enable the camera to trigger a connected alarm (connected to the alarm port on the back of the camera) when a video tamper alarm is triggered.
Alarm Delay: This field specifies in seconds how long the delay between alarm activation and Relay alarm activation should be.
Send Email: This checkbox allows the user to enable the camera to send an email when an IVS event is triggered.
Siren: This checkbox allows the user to enable a siren or customized audio file to activate once the IVS rule is triggered.
Snapshot: This checkbox allows a snapshot of the IVS event to be sent via email when triggered.
Draw Rule: This option allows the user to use their mouse to customize (draw) a rule/area on the screen. This will be the area or line in which an IVS rule will be triggered.
Clear: This option is used to clear the drawn rule set on the live monitor screen.
Target filter: Sets a maximum and minimum pixel size in which an event will be triggered.
Clear: Clears the modified target area to draw the target area on the live monitoring screen
Draw Target: Allows the user to set a target area on the live monitor screen. **An IVS event will not occur outside the target box.**

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Setting an Intrusion Area

1. Select Intrusion from the Rule Type drop down menu. Set a name for the rule by double clicking the mouse over the Name of the rule.
2. Click on **Setup** to set a schedule, set your periods (if any) and click **Save** to continue.
3. In the **Action** menu, choose whether the rule will be triggered if an object appears or crosses the set region. Both options can be enabled at the same time if needed.

3. In the **Direction** menu, choose if the rule will be triggered if the object enters only, exits only, or enters & exits a set region.
4. Enable the **Record** checkbox to record the event.
5. Check the **Send Email** and **Snapshot** checkboxes if you would like a snapshot of the event emailed to you. A valid Email address must be established in the camera prior to enabling this setting. For more information on how to setup email alerts, please visit amcrest.com/support.
6. To have a siren or customized audio file to be activated when the rule is triggered click on the **Siren** option.
7. Click the **Draw Rule** option and right click on the live monitoring screen. Use the mouse to draw your initial line. Once the initial line is set, right click the mouse again to continue drawing the region. Repeat the process and left click the mouse to complete the region. Right click on the live monitoring screen when finished to set the rule.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button. For more information on how to setup a tripwire rule, please visit amcrest.com/support

Fast-Moving

Fast-Moving allows the camera to trigger an event if an object, such as a human or vehicle, quickly moves in an area set by the user. Below is a description of the features provided in this menu.

No.: Provides the order in which the IVS rules will be displayed in the menu.
Name: Allows the user to customize a name for their rule. Double click the name in the Rule column to modify.
Rule Type: This dropdown menu allows the user to select an IVS rule type.
Schedule: Allows the user to set a schedule in which the IVS rule will be triggered.
Sensitivity: This slider allows the user to adjust the sensitivity of the rule being triggered. The default sensitivity is 5 however it can range from 1 ~ 10.
Object filter: The object filter checkboxes allow the camera to be triggered only when a specific object, such as a human or car, is detected by the camera. Both effective object checkboxes can be activated at the same time.

- **Human:** This checkbox allows the camera to be triggered only when a human figure is detected.
- **Motor Vehicle:** This checkbox allows the camera to be triggered only when a vehicle has been detected.

Record: This checkbox allows the user to enable the camera to record video when an IVS event is triggered.
Record Delay: This field specifies, in seconds, how long the delay between IVS events should be. The default is 10 seconds however this can be modified between 10~300 seconds.
Relay Out: This checkbox allows the user to enable the camera to trigger a connected alarm (connected to the alarm port on the back of the camera) when a video tamper alarm is triggered.
Alarm Delay: This field specifies in seconds how long the delay between alarm activation and Relay alarm activation should be.
Send Email: This checkbox allows the user to enable the camera to send an email when an IVS event is triggered.
Siren: This checkbox allows the user to enable a siren or customized audio file to activate once the IVS rule is triggered.
Snapshot: This checkbox allows a snapshot of the IVS event to be sent via email when triggered.
Draw Rule: This option allows the user to use their mouse to customize (draw) a rule/area on the screen. This will be the area or line in which an IVS rule will be triggered.
Clear: This option is used to clear the drawn rule set on the live monitor screen.
Target filter: Sets a maximum and minimum pixel size in which an event will be triggered.

Clear: Clears the modified target area to draw the target area on the live monitoring screen
Draw Target: Allows the user to set a target area on the live monitor screen. **An IVS event will not occur outside the target box.**

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Setting a Fast-Moving Rule

1. Select Fast-Moving from the Rule Type menu. Set a name for the rule by double clicking the mouse over the Name of the rule.
2. Click on **Setup** to set a schedule, set your periods (if any) and click **Save** to continue.
3. Set the sensitivity of the rule by adjusting the sensitivity slider. For optimal use, it is recommended to leave this slider at its default of 5.
4. An optional object filter can be set that will allow the rule only to be triggered if it detects an effective object such as a human or vehicle. You can choose both filters if needed.
5. Enable the **Record** checkbox to record the event.
6. Check the **Send Email** and **Snapshot** checkboxes if you would like a snapshot of the event emailed to you. A valid email address must be established in the camera prior to enabling this setting.
7. Check the siren option if you would like a siren or customized audio file to sound once the rule is triggered.
8. Click the **Draw Rule** option and right click on the live monitoring screen. Use the mouse to draw your initial line. Once the initial line is set, right click the mouse again to continue drawing the region. Repeat the process and left click the mouse to complete the region. Right click on the live monitoring screen when finished to set the rule.

Parking Detection

Parking Detection allows the camera to trigger an event if an object, such as a motor vehicle is parked in a set area for a specified amount of time. Below is a description of the features provided in this menu.

No.: Provides the order in which the IVS rules will be displayed in the menu.
Name: Allows the user to customize a name for their rule. Double click the name in the Rule column to modify.
Rule Type: This dropdown menu allows the user to select an IVS rule type.
Schedule: Allows the user to set a schedule in which the IVS rule will be triggered.
Duration: Allows the user to set a specific time before the abandoned object triggers an event. The default is 6 seconds however it can be modified up to 300 seconds.
Record: This checkbox allows the user to enable the camera to record video when an IVS event is triggered.
Record Delay: This field specifies, in seconds, how long the delay between IVS events should be. The default is 10 seconds however this can be modified between 10~300 seconds.
Relay Out: This checkbox allows the user to enable the camera to trigger a connected alarm (connected to the alarm port on the back of the camera) when a video tamper alarm is triggered.
Alarm Delay: This field specifies in seconds how long the delay between alarm activation and Relay alarm activation should be.
Send Email: This checkbox allows the user to enable the camera to send an email when an IVS event is triggered.

Siren: This checkbox allows the user to enable a siren or customized audio file to activate once the IVS rule is triggered.
Snapshot: This checkbox allows a snapshot of the IVS event to be sent via email when triggered.
Draw Rule: This option allows the user to use their mouse to customize (draw) a rule/area on the screen. This will be the area or line in which an IVS rule will be triggered.
Clear: This option is used to clear the drawn rule set on the live monitor screen.
Target filter: Sets a maximum and minimum pixel size in which an event will be triggered.
Clear: Clears the modified target area to draw the target area on the live monitoring screen
Draw Target: Allows the user to set a target area on the live monitor screen. **An IVS event will not occur outside the target box.**

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Setting a Parking Detection Rule

1. Select Parking Detection from the Rule Type menu. Set a name for the rule by double clicking the mouse over the Name of the rule.
2. Click on **Setup** to set a schedule, set your periods (if any) and click **Save** to continue.
3. In the **Duration** menu, type in the number of seconds you would like to have before the event is triggered for best results, it is recommended to keep this option as default (6 seconds).
4. Enable the **Record** checkbox to record the event.
5. Enable the **Send Email** and **Snapshot** checkboxes if you would like a snapshot of the event emailed to you. A valid Email address must be established in the camera prior to enabling this setting.
6. Check the siren option if you would like a siren or customized audio file to sound once the rule is triggered.
7. Click the **Draw Rule** option and right click on the live monitoring screen. Use the mouse to draw your initial line. Once the initial line is set, right click the mouse again to continue drawing the region. Repeat the process and left click the mouse to complete the region. Right click on the live monitoring screen when finished to set the rule.

Crowd Gathering Estimation

Crowd Gathering Estimation is used to detect a group of people that enter or exit a specific area set by the user on the live view screen. Below is a description of the features provided in this menu.

No.: Provides the order in which the IVS rules will be displayed in the menu.
Name: Allows the user to customize a name for their rule. Double click the name in the Rule column to modify.
Rule Type: This dropdown menu allows the user to select an IVS rule type.
Schedule: Allows the user to set a schedule in which the IVS rule will be triggered.
Duration: Allows the user to set a specific time before the trigger is activated. The default is 10 seconds however it can be modified up to 300 seconds.
Sensitivity: This slider allows the user to adjust the sensitivity of the rule being triggered. The default sensitivity is 5 however it can range from 1 ~ 10.
Record: This checkbox allows the user to enable the camera to record video when an IVS event is triggered.
Record Delay: This field specifies, in seconds, how long the delay between IVS events should be. The default is 10 seconds however this can be modified between 10~300 seconds.
Relay Out: This checkbox allows the user to enable the camera to trigger a connected alarm (connected to the alarm port on the back of the camera) when a video tamper alarm is triggered.

Alarm Delay: This field specifies in seconds how long the delay between alarm activation and Relay alarm activation should be.
Send Email: This checkbox allows the user to enable the camera to send an email when an IVS event is triggered.
Siren: This checkbox allows the user to enable a siren or customized audio file to activate once the IVS rule is triggered.
Snapshot: This checkbox allows a snapshot of the IVS event to be sent via email when triggered.
Draw Rule: This option allows the user to use their mouse to customize (draw) a rule/area on the screen. This will be the area or line in which an IVS rule will be triggered.
Clear: This option is used to clear the drawn rule set on the live monitor screen.
Target filter: Sets a maximum and minimum pixel size in which an event will be triggered.
Clear: Clears the modified target area to draw the target area on the live monitoring screen
Draw Target: Allows the user to set a target area on the live monitor screen. **An IVS event will not occur outside the target box.**

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Setting a Crowd Gathering Rule

1. Select Crowd Gathering from the Rule Type menu. Set a name for the rule by double clicking the mouse on the Name of the rule.
2. Click on **Setup** to set a schedule, set your periods (if any) and click **Save** to continue.
3. In the **Duration** menu, type in the number of seconds you would like to have before the event is triggered. For best results, it is recommended to keep this option as default.
4. Use the sensitivity slider to adjust the sensitivity of the rule. A general formula for the Crowd Gathering Estimation is as follows:

10 – [Sensitivity Value] x 3 = # of people required to trigger an event.

Sensitivity Value	1	2	3	4	5	6	7	8	9	10
# of People	30	27	24	21	18	15	12	9	6	3

4. Enable the **Record** checkbox to record the event.
5. Enable the **Send Email** and **Snapshot** checkboxes if you would like a snapshot of the event emailed to you. A valid Email address must be established in the camera prior to enabling this setting.
6. Check the siren option if you would like a siren or customized audio file to sound once the rule is triggered.
7. Click the **Draw Rule** option and right click on the live monitoring screen. Use the mouse to draw your initial line. Once the initial line is set, right click the mouse again to continue drawing the region. Repeat the process and left click the mouse to complete the region. Right click on the live monitoring screen when finished to set the rule.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Loitering Detection

Loitering Detection is used to detect if a person or group are loitering in a specific area set by the user. Below is a description of the features provided in this menu.

No.: Provides the order in which the IVS rules will be displayed in the menu.
Name: Allows the user to customize a name for their rule. Double click the name in the Rule column to modify.
Rule Type: This dropdown menu allows the user to select an IVS rule type.
Schedule: Allows the user to set a schedule in which the IVS rule will be triggered.
Duration: Allows the user to set a specific time before the trigger is activated. The default is 10 seconds however it can be modified up to 300 seconds.
Record: This checkbox allows the user to enable the camera to record video when an IVS event is triggered.
Record Delay: This field specifies, in seconds, how long the delay between IVS events should be. The default is 10 seconds however this can be modified between 10~300 seconds.
Relay Out: This checkbox allows the user to enable the camera to trigger a connected alarm (connected to the alarm port on the back of the camera) when a video tamper alarm is triggered.
Alarm Delay: This field specifies in seconds how long the delay between alarm activation and Relay alarm activation should be.
Send Email: This checkbox allows the user to enable the camera to send an email when an IVS event is triggered.
Siren: This checkbox allows the user to enable a siren or customized audio file to activate once the IVS rule is triggered.
Snapshot: This checkbox allows a snapshot of the IVS event to be sent via email when triggered.
Draw Rule: This option allows the user to use their mouse to customize (draw) a rule/area on the screen. This will be the area or line in which an IVS rule will be triggered.
Clear: This option is used to clear the drawn rule set on the live monitor screen.
Target filter: Sets a maximum and minimum pixel size in which an event will be triggered.
Clear: Clears the modified target area to draw the target area on the live monitoring screen
Draw Target: Allows the user to set a target area on the live monitor screen. **An IVS event will not occur outside the target box.**

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Setting a Loitering Detection Rule

1. Select Loitering Detection from the Rule Type menu. Set a name for the rule by double clicking the mouse on the Name of the rule.
2. Click on **Setup** to set a schedule, set your periods (if any) and click **Save** to continue.
3. In the **Duration** menu, type in the number of seconds you would like to have before the event is triggered. For best results, it is recommended to keep this option as default.
4. Enable the **Record** checkbox to record the event.
5. Enable the **Send Email** and **Snapshot** checkboxes if you would like a snapshot of the event emailed to you. A valid Email address must be established in the camera prior to enabling this setting.
6. Check the siren option if you would like a siren or customized audio file to sound once the rule is triggered.
7. Click the **Draw Rule** option and right click on the live monitoring screen. Use the mouse to draw your initial line. Once the initial line is set, right click the mouse again to continue drawing the region. Repeat the process and left click the mouse to complete the region. Right click on the live monitoring screen when finished to set the rule.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Global Setup

The Global Setup menu allows the user to calibrate specified IVS areas on the live monitoring menu. Calibration is used to increase the efficiency of the overall reporting and detection of IVS events.

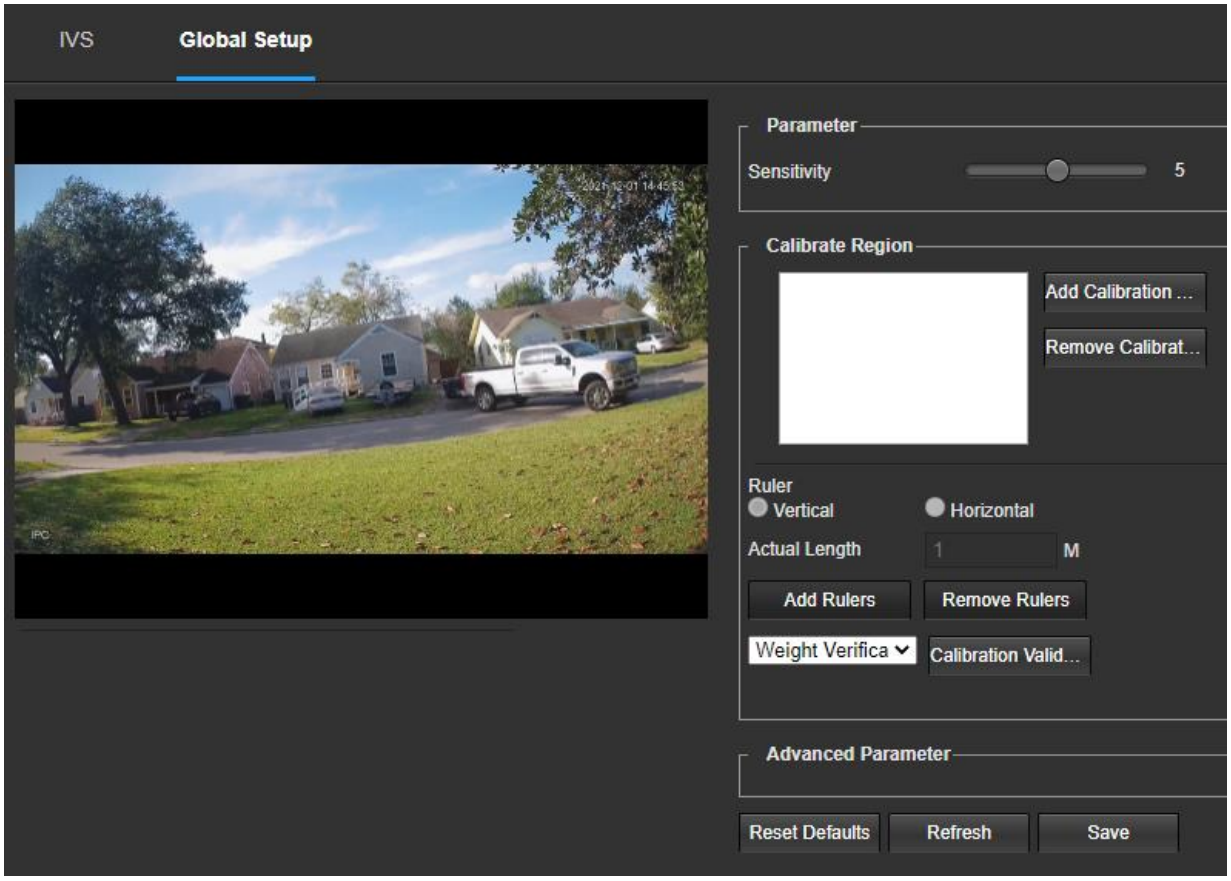

Below is a description of the features provided in this menu

Sensitivity: This slider is used to adjust the sensitivity of the calibration settings used for IVS reporting.
Add Calibration: Allows the user to create a detection area in which IVS rules will be calibrated.
Remove Calibration: Clears the set detection area from the live monitoring screen.
Ruler: These radio buttons allow the user to set either vertical or horizontal rulers on the live monitoring screen.

> **Note:** You can add a total of 3 vertical rulers and 1 horizontal ruler. A horizontal ruler must be used to properly calibrate.

Actual Length: Represents the actual length of the ruler on the live monitoring screen in meters.
Add Rulers: This option allows the user to add and adjust a ruler on the live monitoring screen. Rulers are used to adjust calibration for IVS rules. Use you mouse to draw rulers on the live monitoring screen.
Remove Rulers: Removes rulers set in the detection area menu. To remove a ruler, select the ruler from the detection area menu and click Remove Rulers.
Weight Verification: Used to test the width calibration accuracy in meters of a set ruler. A horizontal ruler must be set, and the detection area must be saved first to use this feature.
Height Verification: Used to test the height calibration accuracy in meters of a set ruler. A horizontal ruler must be set, and the detection area must be saved first to use this feature.
Calibration Validation: Used to draw the calibration test line on the live monitoring screen.

Using Global Setup

Global setup is a great tool to use to calibrate a detection area. This helps to increase the overall accuracy of the IVS rules being used as well as validate their It is highly recommended to use global access setup before setting up multiple IVS rules.

1. Open the **Global Setup** tab located in the IVS menu.
2. Click on the **Add Calibration** button to set a detection area.
3. Left click on the live monitoring screen and draw your custom detection area. The detection area must be a closed area.
4. Click on **Add Rulers** to add your initial calibration ruler to the detection area. Draw a vertical line in the detection area. Each vertical line must be separately drawn. You can add up to 3 vertical calibration lines Left click on the live monitoring screen to set the vertical rulers.
5. Click on the **Horizontal** ruler radio button and click **Add Rulers**. Draw a horizontal line in the detection area. Only one horizontal line can be used in the detection area. Left click on the live monitoring screen to set the horizontal ruler.
6. Click **Save** to save the detection area and calibration rulers.

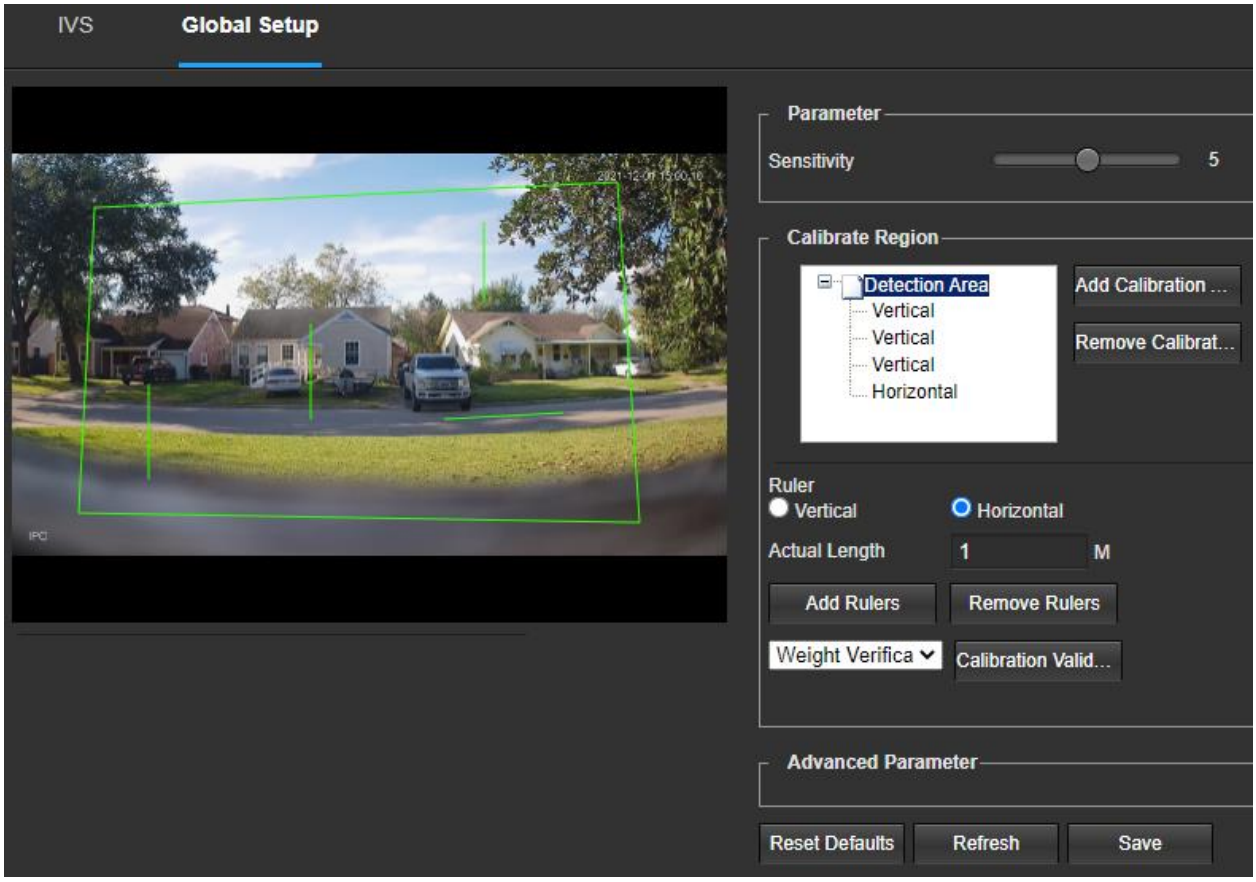

To verify the width and height accuracy of the detection area you can use the weight and height verification options via the dropdown box. To begin, choose your verification method from the dropdown menu and click on the **Calibration Validation** button. Left click on the live monitoring screen and draw a vertical or horizontal line to verify the calibration. The line drawn will be the width or height of the area set in meters.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Smart Motion Detection

Smart Motion Detection (SMD) uses an advanced algorithm to differentiate human and vehicular shapes within a scene and send alarms only when a person or vehicle is detected. This option works alongside motion detection to help prevent false alerts. Below is a description of the features in this menu.

Enable: Use this checkbox to enable Smart Motion Detection.
Effective Object: The object filter checkboxes allow the camera to be triggered only when a specific object, such as a human or car, is detected by the camera. Both effective object checkboxes can be activated at the same time.

Human: This checkbox allows the camera to be triggered only when a human figure is detected.
Motor Vehicle: This checkbox allows the camera to be triggered only when a vehicle has been detected.

Sensitivity: Use this dropdown menu to select a sensitivity setting for smart motion detection. The sensitivity can be set as low, medium, or high.
Record: This checkbox allows the user to enable the camera to record once an event is detected.
Record Delay: This field specifies, in seconds, how long the delay between events should be. The default is 10 seconds however this can be modified between 10~300 seconds.
Relay Out: This checkbox allows the user to enable the camera to trigger a connected alarm (connected to the alarm port on the back of the camera) when a video tamper alarm is triggered.
Alarm Delay: This field specifies in seconds how long the delay between alarm activation and Relay alarm activation should be.
Send Email: This checkbox allows the user to enable the camera to send an email when an event is triggered.
Siren: This checkbox allows the user to enable a siren or custom audio file to be activated once the rule is triggered.
Snapshot: This checkbox allows a snapshot of the IVS event to be sent via email when triggered.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

People Counting

People Counting is used to provide a statistic based up the number of people who enter and exit a certain area on the live view screen. There is also a second people counting option which will trigger only when a certain number of people have entered or exited a detection area. Please note, these two people counting rule types cannot be used simultaneously in the interface.

For optimal results, it is **recommended to use this rule type on Internet Explorer, IE mode on Microsoft Edge, or similar web browser as counting overlays and setting a detection area may require the use of a plugin.**
People counting data can be displayed for each rule type in the Report tab. For more information on people counting please refer to the information provided below.

Using the NumberStat Rule Type

This will be the default rule type for people count. The NumberStat rule type allows the user to count the number of people who enter or exit an area. It is recommended to use this rule type on Internet Explorer, IE mode on Microsoft Edge, or similar web browser as the counting overlay may require a plugin. Below is a description of the features provided in this menu.

Enable: This checkbox is used to enable or disable the people counting feature.

Clear Counting: Clears any OSD (On-Screen Display) information on the live monitoring screen.
Schedule: Allows the user to set a schedule in which the people counting feature will be used.
Flowrate Alarm: The amount of people detected before the rule is triggered.

Enter No.: The amount of people it takes to trigger a person entering the set area to be counted. For efficiency, it is highly recommended to leave this as default (0).

Leave No.: The amount of people it takes to trigger a person exiting the set area to be counted. For efficiency, it is highly recommended to leave this as default (0).

Stranded No.: The amount of people it takes to generate an alarm who loiter in the set area. For efficiency, it is highly recommended to leave this as default (0).

Record: This checkbox allows the user to enable the camera to record video when an event is triggered.
Record Delay: This field specifies, in seconds, how long the delay between events will be. The default is 10 seconds however this can be modified between 10~300 seconds.
Relay Out: This checkbox allows the user to enable the camera to trigger a connected alarm (connected to the alarm port on the back of the camera) when a video tamper alarm is triggered.
Alarm Delay: This field specifies in seconds how long the delay between alarm activation and Relay alarm activation should be.
Send Email: This checkbox allows the user to enable the camera to send an email when an event is triggered.
Siren: This checkbox allows the user to enable a siren or custom audio file to be activated once the rule is triggered.
Snapshot: This checkbox allows a snapshot of the event to be sent via email when triggered.
Draw Rule: This option allows the user to customize the detection area on the live monitoring screen. This will be the area or line in which the feature will be triggered.
Sensitivity: Use this slider to adjust the overall sensitivity of the detection area. It is recommended to leave this as its default value of 5 however can be adjusted between 1 and 10.
Clear: This option is used to clear the detection area on the live monitor screen. A rectangular detection area is required for the camera to actively detect and count people.
Draw Target: Allows the user to set a target area on the live monitor screen. **An event will not occur outside the target box.**
Clear: Clears the modified target area on the live monitoring screen. A rectangular target area is required for the camera to actively detect and count people.
Pixel Counter: Used to measure and set the number of pixels in the target area on the live monitoring screen.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Setting NumberStat People Counting Rule

It is recommended to use this rule in a web browser such as Internet Explorer or similar browser as the counting overlay may require the use of a plugin.
1. Open the **Smart Plan** menu and activate the **People Counting** smart plan. Click **Save**.
2. Open the **People Counting** menu and ensure the NumberStat option is selected in the Rule Type menu.
3. Use the **Flowrate Alarm** area of the screen to modify how many people it will take for the alarm to trigger if a person enters or exits the detection area.
4. Enable the **Record** checkbox to record the event.
5. Enable the **Send Email** and **Snapshot** checkboxes if you would like a snapshot of an event emailed to you. A valid Email address must be established in the camera prior to enabling this setting.
6. Click the **Siren** option if you would like a siren or customized audio file sound once the rule is triggered.
7. Click **Save**.

Note: To view the counting overlay, access the camera in Internet Explorer or similar browser as it requires a plugin to function. A report of this data can be displayed in the Report tab.

Using the ManNumDetection Rule Type

No.: Provides the order in which the people counting rules will be displayed in the menu.
Name: Allows the user to customize a name for their rule. Double click the name in the Rule column to modify.
Rule Type: The default rule type will be determined by the amount of people detected in the area.
Schedule: Allows the user to set a schedule in which the IVS rule will be triggered.
Regional Number Statistic Alarm: Enable or disable to be notified once the inside number has reached the designated threshold.

- **Inside Number:** The number of people in which a notification will be triggered.
- **Type:** Set whether the rule will be triggered if the number is greater than or less than the set inside number.
- **Stranding Time:** The duration in which the object has been idle in the detection area before it is triggered. The default value is 30 seconds however this can range between 1 and 1800 seconds.

Record: This checkbox allows the user to enable the camera to record video when the rule is triggered.
Record Delay: This field specifies, in seconds, how long the delay between people counting events should be. The default is 10 seconds however this can be modified between 10~300 seconds.
Relay Out: This checkbox allows the user to enable the camera to trigger a connected alarm (connected to the alarm port on the back of the camera) when a motion detection alarm is triggered.
Alarm Delay: This field specifies in seconds how long the delay between alarm activation and Relay alarm activation should be.
Send Email: This checkbox allows the user to enable the camera to send an email when a people counting event is triggered.
Siren: This checkbox allows the user to enable a siren or custom audio file to be activated once the rule is triggered.
Snapshot: This checkbox allows a snapshot of the people counting event to be sent via email when triggered.
Draw Rule: This option allows the user to use their mouse to customize (draw) a rule/area on the screen. This will be the area or line in which a people counting rule will be triggered.
Clear: This option is used to clear the drawn rule set on the live monitor screen.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Setting a ManNumDetection Rule

It is recommended to use this rule in a web browser such as Internet Explorer or similar browser as the counting overlay may require the use of a plugin.

1. Open the **Smart Plan** menu and activate the **People Counting** smart plan. Click **Save**.
2. Open the **People Counting** menu and ensure the **ManNumDetection** option is selected in the Rule Type menu.
3. Enable the **Regional Number Statistics Alarm** option if you wish to be notified when the number count has reached the inside number value.
4. To set a threshold number for this alarm, enter a value into the **Inside Number** field. This can range up to 80 people, however the default is 30. Then from the **Type** dropdown menu, select if the number will be greater than or equal to, less than or equal to, equal to or not equal to the value in the Inside Number field.
5. If you wish to set a stranding alarm, enable the **Stranding Alarm** option. This will notify you if an object has been idle in the detection area has been detected for a specified number of seconds. Enter the value into the Standing Time field (1-1800 seconds).

6. Enable the **Record** option.
7. Check the **Send Email** and Snapshot checkboxes if you would like a snapshot of the event emailed to you. A valid email address must be established in the camera prior to enabling this setting.
8. Click the **Siren** option if you would like a siren or customized audio file sound once the rule is triggered.
9. Click the **Draw Rule** option to begin drawing a detection region on the interface. Use the mouse to draw the initial line, once the initial line is drawn, left click on the interface to continue drawing the region. Repeat the process and right click to complete the region.
9. Click **Save**.

Report

The Report tab is used to search and display people counting data retained by the camera. Please note, a microSD card must be inserted and functional in the camera for a report to be generated. To view a report, select a start and end date & time of the report into the interface. Select which flow direction (enters, exits, etc.) then select if you would like this data represented as a bar or line chart. Click Search to generate the data.

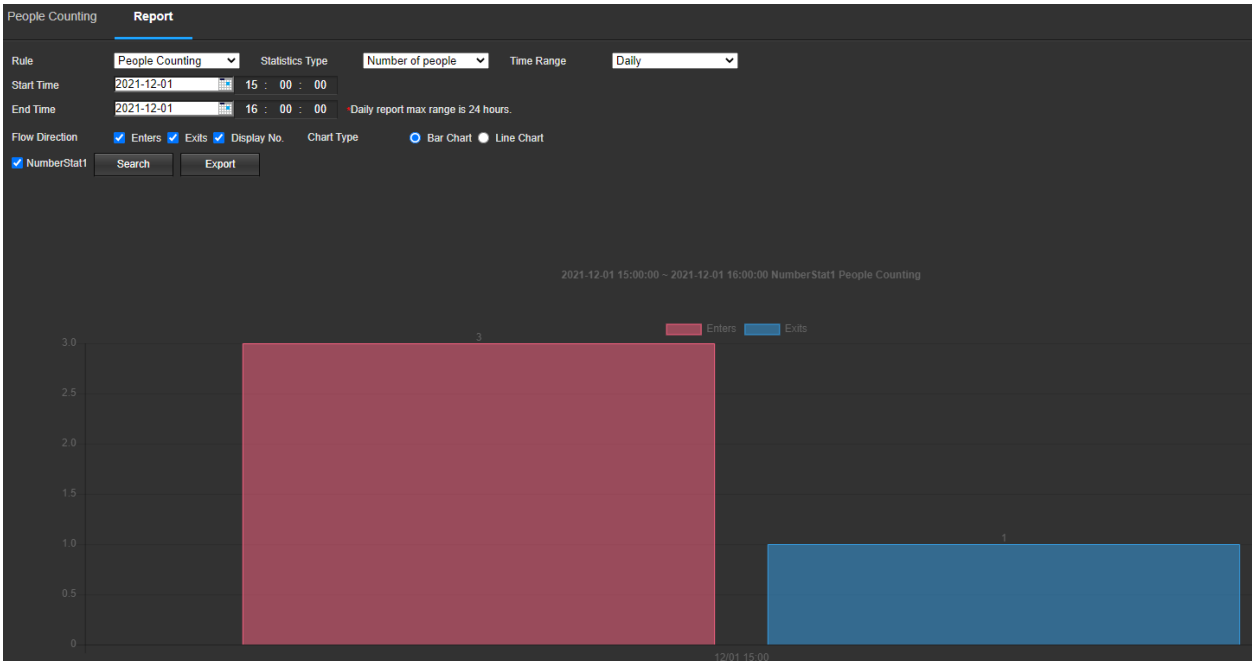

Note: If you would like a copy of the data exported to a Excel file, click the Export option and save the data to your computer.

Heat Map

The Heat Map function provides a general reporting of crowd density statistics based on color levels detected by the camera. Color levels are divided into, red, orange, yellow, green, and blue which represent crowd density ranges; red being the densest area and blue representing areas with the lowest density.
Below is a description of the features listed in this menu:

Enable: Enables the heat map function. Make sure a Heat Map smart plan is enabled before enabling this feature.
Schedule: Allows the user to set a schedule in which the feature will be used.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Report

A Heat Map report can be generated that will graphically display the amount of crowd density detected by the camera. The maximum report range is 1 week. Please note, it is recommended to generate a heat map report using Internet Explorer, IE mode on Microsoft Edge, or similar browser as it may require a plugin to generate a report.

To generate a report, select a start and end date & time range for the report. Click **Search** to general a report, the color levels will be represented in the report. To export an image of the report to your computer, click on Export after the report has been generated and save it to your computer.



Alarm

This menu allows the user to set and schedule relay activated external alarms. Below is a screenshot of this menu:

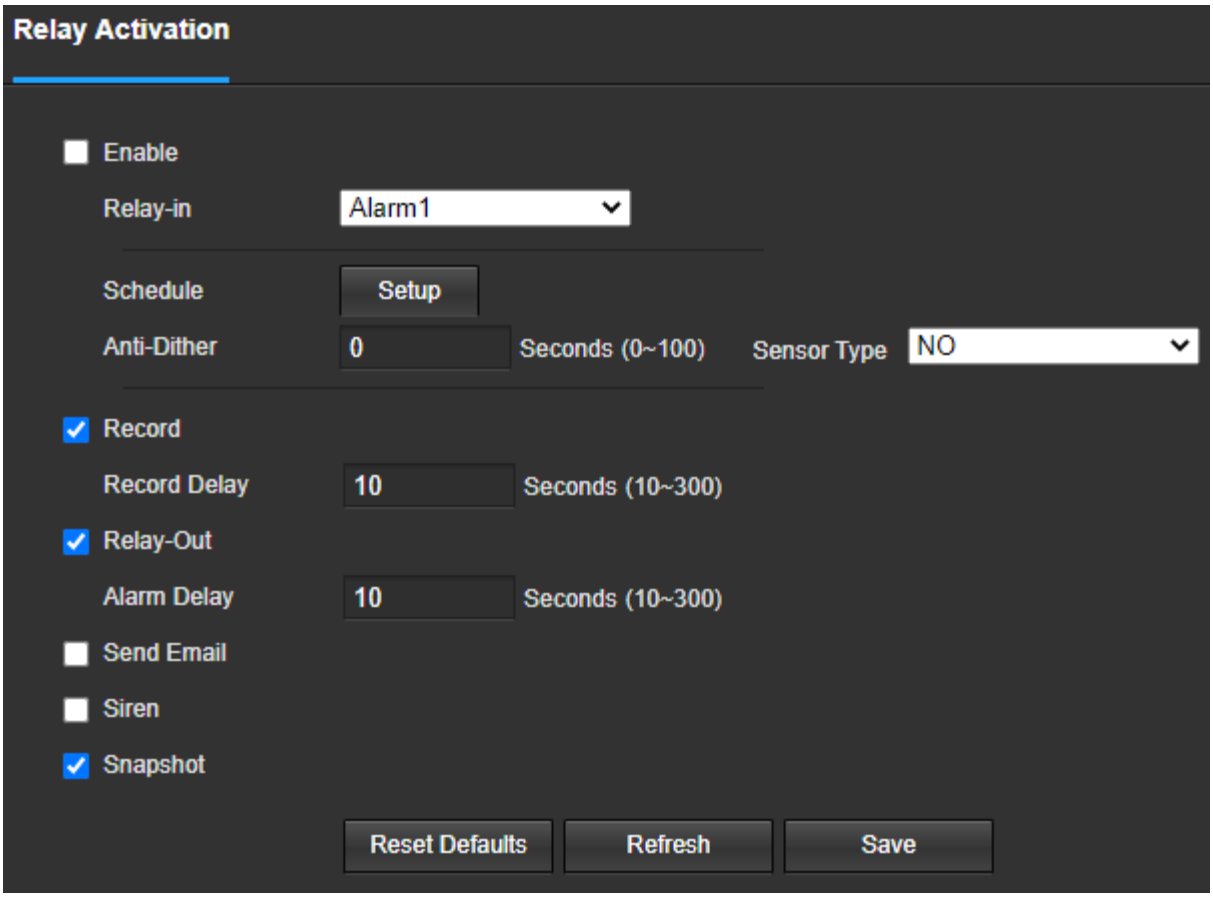

Below is a description of each field in this menu:

Enable: Allows the user to enable the relay activation function
Relay-In: Allows the user to set specific relayed alarms to the camera.
Schedule: Clicking this button opens a weekly schedule that can be used to set times.
Click and drag to set motion detection for certain days of the week. Also, periods of motion detection can be set for each day and enabled using the period settings on the bottom half of the screen. There are a total of 6 periods that can be set.
Anti-Dither: This field allows the user to set the anti-dither time. The values in this field can range from 5 to 600 seconds. This time value controls how long the alarm signal lasts. Based on motion detection, a buzzer can go off, a tour can begin a snapshot can be taken, or the camera can begin recording.
For example, if the anti-dither time is set to 10 seconds, each alarm may last 10 seconds if the local alarm is activated. During the process, if the system detects another local alarm signal at the fifth second, the buzzer, tour, snapshot, record channel functions will begin another 10 seconds while the screen prompt, alarm upload, email will not be activated again. After 10 seconds, if system detects another alarm signal, it can generate a new alarm since the anti-dither time has expired.
Sensor Type: There are two types of sensors, normally open (NO) and normally closed (NC). Switch from normally open to normally closed, open the alarm. Switch from normally closed to normally open, shut the alarm.
Record: This checkbox allows the user to enable the camera to record video when an audio detection alarm is triggered.
Record Delay: his field specifies in seconds how long the delay between alarm activation and recording should be.
Relay Out: This checkbox allows the user to enable the camera to trigger an alarm when an alarm is detected.

Alarm Delay: This field specifies in seconds how long the delay between alarm activation and Relay alarm activation should be.
Send Email: This checkbox allows the user to enable the camera to send an email when an audio detection alarm is triggered.
Siren: This checkbox allows the user to enable a siren or custom audio file to be activated once the feature is triggered.
Snapshot: This checkbox allows the user to enable the camera to take a snapshot when an audio detection alarm is triggered.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Abnormality

This menu allows the user to adjust abnormality event settings. This menu has 3 tabs: SD Card, Network, and Illegal Access.

SD Card

This tab allows the user to set the camera's response to an SD card related abnormality. Below is an explanation of the fields on the SD Card settings tab:

Event Type: This dropdown box allows the user to select which SD card abnormality to set event triggers for. The 3 options are No SD Card, SD Card Error, and Capacity Warning.
Enable: This checkbox enables the SD Card abnormality trigger for the camera.
Relay Out: This checkbox allows the user to enable the camera to trigger an alarm when triggered.
Alarm Delay: This field specifies how long the delay between alarms.
Send Email: This checkbox allows the user to enable the camera to send an email when an SD Card abnormality is detected.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Network

This tab allows the user to set the camera's response to a Network related abnormality. Below is an explanation of the fields on the Network settings tab:

Event Type: This dropdown box allows the user to select which Network abnormality to set event triggers for. The 2 options are Disconnection and IP Conflict.
Enable: This checkbox enables the Network abnormality trigger for the camera.
Record: This checkbox allows the user to enable the camera to record video when a network abnormality is detected.
Record Delay: This field specifies in seconds how long the delay between alarm activation and recording should be.
Relay Out: This checkbox allows the user to enable the camera to trigger an alarm when triggered.
Alarm Delay: This field specifies how long the delay between alarms.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Illegal Access

This tab allows the user to set the camera's response to an Illegal Access related abnormality.

Below is an explanation of the fields on the Illegal Access settings tab:

Enable: This checkbox enables the Illegal Access abnormality trigger for the camera.
Login Failure: This field allows the user to specify how many failed login attempts must be attempted to trigger an Illegal Access abnormality event.
Relay Out: This checkbox allows the user to enable the camera to trigger an alarm when triggered.
Alarm Delay: This field specifies how long the delay between alarms.
Send Email: This checkbox allows the user to enable the camera to send an email when illegal access is attempted.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Security Exception

The **Security Exception** menu provides an abnormality alarm to trigger if a network security exception is detected.

Enable: Click on the Enable checkbox to enable this abnormality type.
Relay Out: This checkbox allows the user to enable the camera to trigger an alarm when triggered.
Alarm Delay: This field specifies how long the delay between alarms.
Send Email: This checkbox allows the user to send an email one a security exception abnormality is detected.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Storage

This menu section allows the user to change storage settings for the camera.

Schedule

The schedule menu manages the recording schedule for the camera. This menu has 3 tabs: Record Schedule, Snapshot Schedule, and Holiday Schedule.

Record Schedule

This tab is where video recording settings are configured. Below is a screenshot of the Record Schedule settings screen:

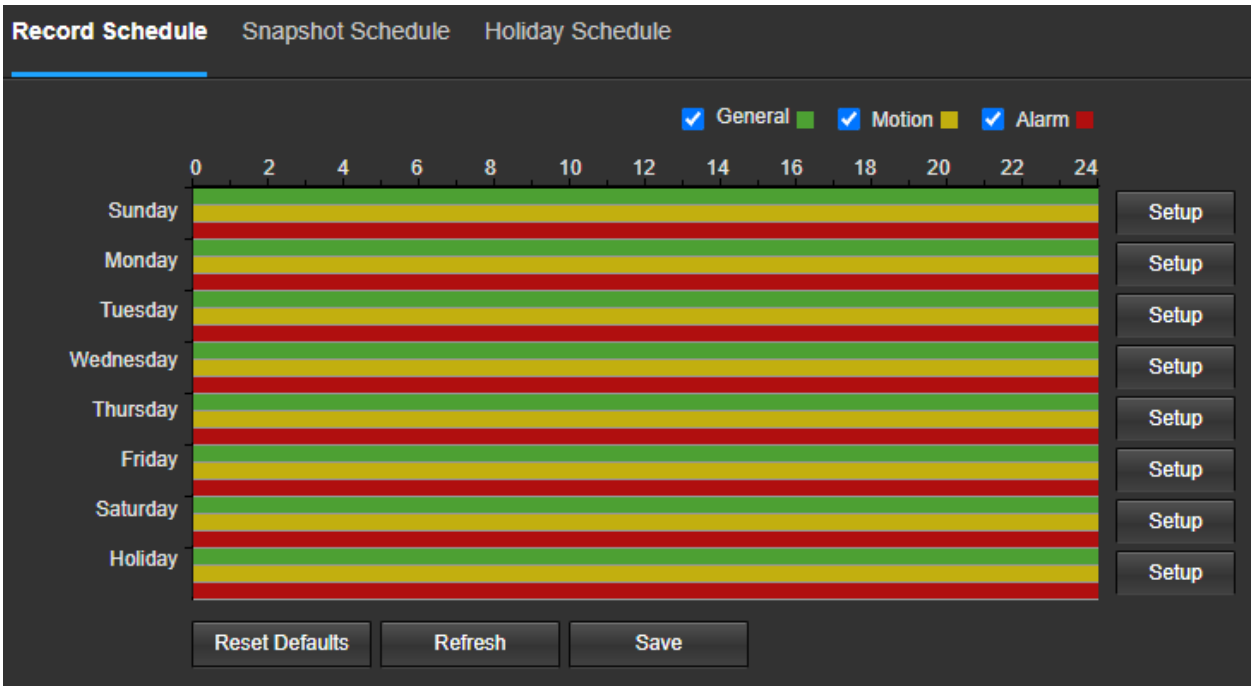

Below is an explanation of the fields on the Record schedule settings tab:

Record Type: These checkboxes allow the user to select which recording type they want to configure on the schedule. There are 3 types of recordings:

General: General recording means that the camera captures all footage for the specified time period. General recording is represented by the color green.

Motion: Motion Detection recording means that the camera captures only footage when the motion detection alarm is activated. Motion recording is represented by the color yellow.

Alarm: Alarm recording means that the camera captures only footage when an alarm is activated. Alarm recording is represented by the color red.

Video Recording Schedule: To specify a video recording range, first select the type of recording desired, then click and drag on time bar for the desired date. To edit multiple days at once, drag the cursor further up or down to cover the other days.

Setup: Clicking this button opens a screen that allows for recording periods to be set for each day and for each recording type. There are a total of 6 periods that can be set.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Snapshot Schedule

This tab is where snapshot recording settings are configured. Below is a screenshot of the Snapshot Schedule settings screen:

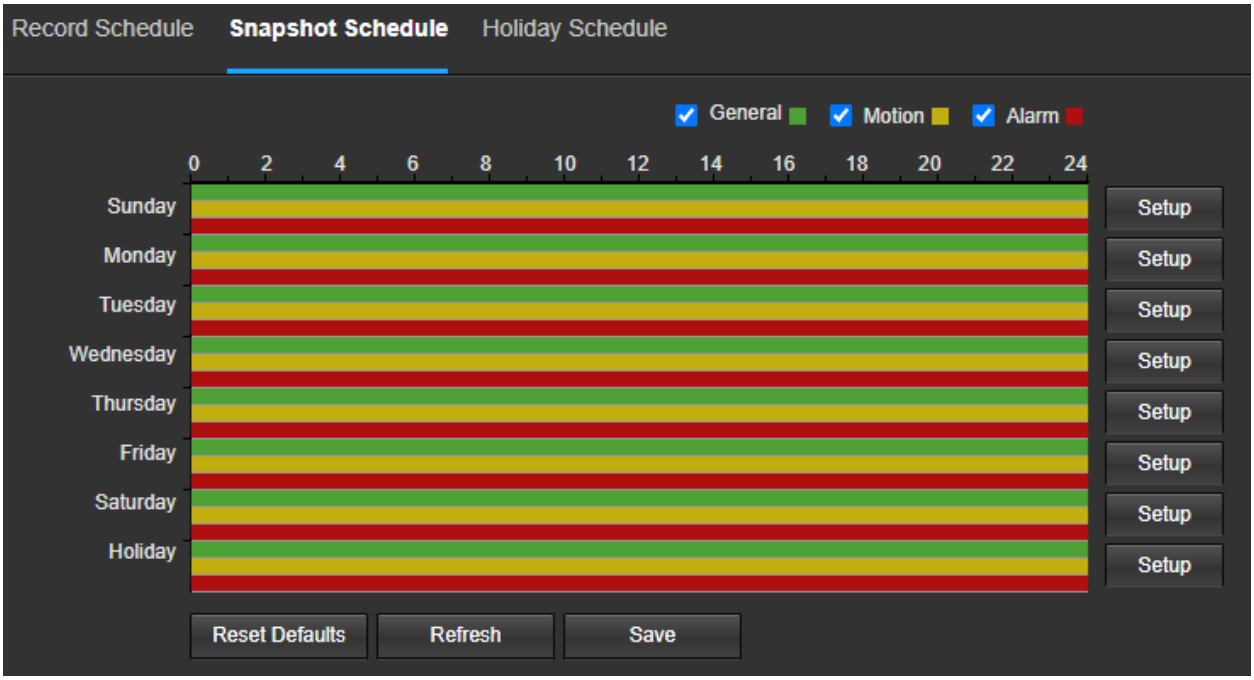

Below is an explanation of the fields on the Snapshot Schedule settings tab:

Record Type: These checkboxes allow the user to select which snapshot type they want to configure on the schedule. There are 3 types of snapshots:
General: General means that the camera will take snapshots during the specified time period. General recording is represented by the color green.
Motion: Motion Detection means that the camera only takes snapshots when the motion detection alarm is activated. Motion recording is represented by the color yellow.
Alarm: Alarm means that the camera only takes snapshots when an alarm is activated. Alarm recording is represented by the color red.
Snapshot Recording Schedule: To specify a snapshot range, first select the type of snapshot desired, then click and drag on time bar for the desired date. To edit multiple days at once, drag the cursor further up or down to cover the other days.
Setup: Clicking this button opens a screen that allows for snapshot periods to be set for each day and for each snapshot type. There are a total of 6 periods that can be set.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Holiday Schedule

This tab is where holiday settings are configured. A holiday schedule has higher priority than an ordinary record/snapshot schedule. Below is an explanation of the fields on the Holiday Schedule settings tab:

Record: This checkbox is referring to video recording.
Snapshot: This checkbox is referring to snapshot recording.
Calendar: This calendar allows the user to select days to designate as holidays. Once a day is designated, it can be customized to stop recording or snapshots for that day by using the Record and Snapshot checkboxes.

To set a holiday schedule, select with record type you would like the holiday schedule to apply and select a date from the calendar then click Save. Return to the record or snapshot menu and click the Setup option next to the Holiday field. Set a period for the schedule and set record types for the holiday schedule, click **Save**. The holiday schedule will be applied to the periods set in the interface.

To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Destination

This menu controls where recorded media is stored. There are 4 tabs in this menu: Path, SD Card, FTP, and NAS.

Path

This tab is where the user can designate a path for recorded video and snapshots to reside in.

Below is an explanation of the fields on the Path settings tab:

Event Type: This column designates storage options available to the camera. The options are SD Card, FTP, and NAS.
Scheduled: Enable scheduled recordings to be recorded to the event type.
Motion Detect: Enable motion detect recordings to be recorded to the event type.
Alarm: Enable alarm record types to be recorded to the event type.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

SD Card

This tab is where the user can change SD card settings.

Below is an explanation of the fields on the SD Card settings tab:

Device Name: This column designates the name of the SD card that is currently in the camera.
Status: This column designates the status of the SD card.
Attribute: This column designates the read/write attributes for the SD card. By default, this is Read & Write.
Used Capacity/Total Capacity: This column shows the available memory on the SC card.
Read Only: This button allows the user to designate an SD card as read only.
Read & Write: This button allows the user to designate an SD card to read & write privileges.
Eject: Safely remove the SD card from the camera.
Refresh: This button refreshes the SD card table.
Format: This button formats the SD card.

FTP

This tab is where the user can change FTP settings.

Below is an explanation of the fields on the FTP settings tab:

Enable: This checkbox allows the user to enable FTP uploading for the camera's recorded media.
Server Address: This field allows the user to designate a DDNS address for the FTP server.

Connection: This field allows the user to designate the port number for the FTP server.
Username: This field allows the user to input the username used to login to the FTP server.
Password: This field allows the user to input the password used to login to the FTP server.
Remote Directory: This field allows the user to specify a remote directory for the recordings.
Emergency (Store on SD Card): This checkbox allows the camera to store recorded media on the SD card in case the FTP server is unavailable.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

NAS

This tab is where the user can change NAS settings. Below is an explanation of the fields on the NAS settings tab:

Enable: This checkbox allows the user to enable NAS uploading for the camera's recorded media.
Server Address: This field allows the user to designate a DDNS address for the NAS server/device.
Remote Directory: This field allows the user to specify a remote directory for the recordings.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Record Control

This menu is where general recording settings are configured. Below is an explanation of the fields on the Record Control settings tab:

Pack Duration: This field allows the user to set how many minutes each file is comprised of.
Pre-event Record: This field allows the user to specify how many seconds before an event should be recorded.
Disk Full: This dropdown box allows the user to designate what the camera should do when the disk is full. There are 2 options: Overwrite or Stop.
Record Mode: This set of radio buttons allows the user to designate the recording mode. The options are Auto, Manual, and Off.
Record Stream: This dropdown box allows the user to specify which stream to record. The options are main stream and sub stream.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Cloud Storage

This menu redirects the user to the Amcrest Cloud web site. At this website (amcrestcloud.com) users can register for new accounts as well as view or modify existing accounts.For more information on Amcrest Cloud visit: amcrestcloud.com

System

This menu section allows the user to change general settings for the camera.

General

This tab is where the user can configure some basic camera settings. Below is an explanation of the fields on the General settings tab:

Device Name: This field allows the user to change the device's name.
Language: This dropdown box allows the user to change the language used in the camera.
Video Standard: This dropdown box allows the user to select either the NTSC or PAL video standard.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the R**efresh** button. To save the settings, click the **Save** button.

Date & Time

This tab is where the user can configure the date and time settings for the camera. Below is an explanation of the fields on the Date & Time settings tab:

Date Format: This dropdown box allows the user to change the date format used in the camera.
Time Format: This dropdown box allows the user to change the time format used in the camera.
Time Zone: This dropdown box allows the user to change the time zone used in the camera.
Current Time: This field allows the user to enter in the date and time manually. Clicking the PC Sync button allows the camera to sync with a Network Time Protocol (NTP) server.
Enable DST: This checkbox allows the user to enable daylight savings time for the camera.
DST Type: This radio button allows the user to select whether DST is based on the week, or a specific day.
Start Time: This dropdown box and field allow the user to enter in the start time for DST.
End Time: This dropdown box and field allow the user to enter in the end time for DST.
Sync with NTP: This checkbox allows the user to enable the camera's synchronization with an NTP server.
NTP Server: This field allows the user to enter in an NTP server.
Port: This field allows the user to enter in the port number for the NTP server.
Update Period: This field allows the user to enter in the update period time. This number designates how frequently the camera pings the NTP server to ensure it has the correct time. The range is from 0-30 minutes.

To reset to default settings, click the **Reset Defaults** button. To refresh the page, click the Refresh button. To save the settings, click the **Save** button.

Manage Users

This menu allows the user to change the user accounts on the camera. By default, the camera only has the admin account which has all rights/authorities. Additional accounts can be created on this screen.

Below is an explanation of the fields on the Account screen:

Anonymous Login: This checkbox allows the user to enable the anonymous login feature. This allows all user account names to remain hidden on this screen.
Username: This tab shows the usernames available on the camera.
Group: This tab shows the user groups available on the camera.
No.: This column shows the user's number on the user list.
Username: This column shows the usernames of the different accounts on the camera.
Group Name: This column shows the group of the different accounts on the camera.

Description: This column shows a description of the account.
Modify: This column allows the user to modify the user account.
Delete: This column allows the user to delete a user account. Note: The admin account cannot be deleted.
Authority List: This box shows which user rights/authorities are assigned to an account.
Add User: This button allows the user to add a new user to the camera.

Default Settings

This screen allows the user to reset the camera and all its settings to the factory settings.

Below is a screenshot of the Default screen:

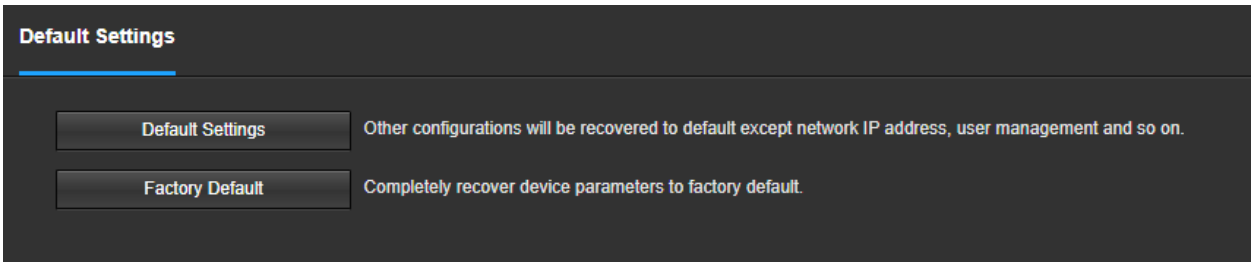

Below is an explanation of the items listed in this field:

Default Settings: Only the IP address, user management, and other settings can be recovered after reset.
Factory Default: Completely resets the camera to factory default settings. No settings can be recovered after the camera has been returned to its factory default settings.

Import/Export

This screen allows the user to import or export settings from the camera. Below is a screenshot of the Import/Export screen:

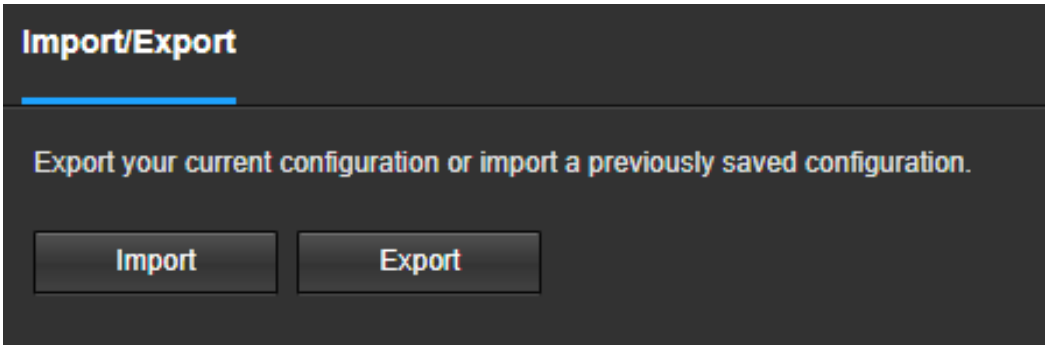

To import settings, click the Import button. To export settings, click the Export button.

Auto Maintain

This screen allows the user to set auto maintenance settings for the camera. Below is an explanation of the fields on the Auto Maintain screen:

Auto Reboot: This checkbox allows the user to enable the auto reboot function. The dropdown box and field to the right of this checkbox allow the user to specify what date and time of the week the camera will auto reboot.
Auto Delete Old Files: This checkbox allows the user to enable the auto deletion of old files on the camera.
Manual Reboot: This button allows the user to manually reboot the camera.

To refresh the page, click the **Refresh** button. To save the settings, click the **Save** button.

Upgrade

This menu allows the user to upgrade the camera's firmware.

To upgrade the firmware for your camera, follow the steps provided below:

Go to amcrest.com/firmware
Search for the model number of your camera and download the latest firmware file.
Return to the web user interface for your camera and press the **Browse** button to locate and import the firmware file you just downloaded.
Once the firmware file has been imported, click **Upgrade**.
The device will reset, return to the web user interface. The upgrade is now complete.

Note: When upgrading the camera's firmware, do not disconnect the internet or power from the camera.

Information

This menu section allows the user to view information about the camera for reference purposes.

Version

This screen allows the user to see various information about the camera's software versions, as well as other information. On this screen, software version, web interface version, and ONVIF version are displayed. Also, the S/N (Token ID) is displayed here.

Log

This screen is where the camera's activity log is kept.

To view logs for a specific time period, modify the start time and end time fields, choose the type of event (system, setting, data, event, record, manage users, clear log), and click search.

To backup the log, click the Backup button. To clear the log, click the Clear button.

Online Users

This screen allows the user to see which users are online or currently operating the camera. Click Refresh to refresh this table.

Alarm

This screen is where the alarm log is kept. Below is a screenshot of the alarm screen:



The table on the right shows the alarm log and all the alarm instances that have occurred.

The checkboxes allow the user to narrow down which alarms they want to see in the alarm log. Clicking the checkbox next to Prompt will cause the system to pop up a dialog box anytime an alarm is triggered.

Clicking the checkbox next to Play Custom Alarm will use a custom alarm sound for the alarm prompt. Click the Browse button to search for a custom alarm sound to use.

Logout

Clicking the logout button will log out the user.

Remote Web Access Setup

Port Forwarding is an alternative method to setting up remote access for Amcrest cameras.
Below is a step-by-step walkthrough that details how to setup the camera for Remote Web Access using Port Forwarding:

1. Login to your camera, open the main menu then go to Setup -> Network.
2. Open the TCP/IP settings screen.
3. By default, the camera has the mode set to DHCP. Ensure that DHCP is selected. The IP Address, Subnet Mask, Default Gateway, Preferred DNS, and Alternate DNS should all be 0s if DHCP is selected.
4. Click Save to save these settings. This should now open the main menu.
5. From the main menu, go to **Setup -> Network**.
6. On the TCP/IP settings screen, the IP Address, Subnet Mask, Default Gateway, Preferred DNS, and Alternate DNS should all be populated.
7. Click the radio button next to Static, to change the mode to Static.
8. Write down the IP Address that is currently in the IP address field.
9. Click the **Save** button.
10. Using the left-hand menu, go to the Connection menu, and write down the TCP, UDP, and HTTP port number. It is recommended to ensure that these port numbers are at least 5 digits long to prevent any port conflicts. If need be, change each of these port numbers to a 5-digit number that is less than 65535, note the numbers down, and click save before proceeding to the next step.
11. Go to http://www.canyouseeme.org/ and check to ensure each of the port numbers specified in step 10 is open.
12. Write down the manufacturer name, brand, and model name for the router that the camera is connected to, and then proceed to http://www.portforward.com on your web browser.
13. Open the port forwarding guide section on the left-hand side menu.

14. Find the router brand name in the list and click it.
15. Find the router model number and click it.
16. Click the Default Guide link near the middle of the page.
17. This guide will help you take the step necessary to port forward on the router. Follow these steps, and then return to the camera.
18. Login to your camera, open the main menu then go to Setup -> Network.
19. Click the DDNS menu item on the left-hand menu, pick AMCRESTDDNS from the drop-down box, click the checkbox next to Server Type, and then click the Save button on the bottom right.
20. To set a custom DDNS name, fill out the Domain Name field and click Save.
21. Write down the entire Domain Name field, including the white text that says .AmcrestDDNS.com
22. Open a web browser and enter in the DDNS domain name address from step 21, enter in a colon, then type the HTTP port number from step 10 on to the end.
    For example, if the DDNS domain name is http://abc123456789.AmcrestDDNS.com and your HTTP Port is 33333, the URL would be http://abc123456789.AmcrestDDNS.com:33333
23. Enter in login details into the username and password fields and click login.

If the process above is not working, please contact Amcrest Support via one of the following options:

Visit http://amcrest.com/contact and use the email form
Call Amcrest Support using one of the following numbers
Toll Free: (888) 212-7538
International Callers (Outside of US): +1-713-893-8956
USA: (888) 212-7538
Canada: 437-888- 0177
UK: 203-769-2757

Amcrest Cloud Desktop Setup

Amcrest cameras can sync with Amcrest Cloud; a service that stores recorded video streams to enable long-term storage. Amcrest Cloud also allows the user to easily find and download recorded video for playback from any internet connected PC or Mac computer.
For more information on how to setup your camera on Amcrest Cloud please follow the steps provided below:

1. Connect the camera to power and wait 30 seconds for the camera to start-up and initialize.
2. Using a web browser on your PC or Mac, visit www.amcrest.com/cloud and register for a cloud account. Once registered, click the "**Add Camera**" button. Select "Amcrest", give the camera a name, and enter the camera's SN (located on the bottom of the camera), then click "Next".
3. On the settings page, you can adjust optional preferences for your camera. Once settings have been adjusted, click "Finish". Your camera is now successfully set up for cloud access and storage.
4. View your camera live or watch recorded clips using the menu button on the top of the page. You can also use the Amcrest Cloud app on iOS and Android to add more cameras, play recordings, and view your camera live, from anywhere. For more information visit amcrest.com/support
5. For additional assistance, please contact us at www.amcrest.com or give us a call at 1-888-212-7538. Step by step video tutorials available at http://www.amcrest.com/videos

Web Access Setup (AmcrestView.com)

1. Connect the camera to power and wait 30 seconds for the camera to start-up and initialize.
2. Using Internet Explorer or Safari, go to **www.AmcrestView.com** and register an account. You will be required to activate your account by e-mail (double-check your spam folder).

3. Once activated, download, and install the plugin for your web browser. The installation of the plugin will require all web browsers to close.
4. Log in to your account. To add a camera, click the “Add Device” button. Give the camera a name, enter the UID (found on the bottom of your camera), then enter the login details for the camera. The default username and password for the camera is admin.
5. Once added, the camera should appear in the device list. Click the  icon next to the camera’s UID to open the live viewing and playback interface.
6. The device is now successfully setup for live viewing and playback!
   For additional assistance, please contact us at www.amcrest.com or give us a call at 1-888-212-7538. Step by step video tutorials available at www.amcrest.com/videos

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

2. The user’s manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes, or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In cases where the manual is provided only in a form other than paper, such as on a computer disk or over the Internet, the information required by this section may be included in the manual in that alternative form, provided the user can reasonably be expected to have the capability to access information in that form.

3. (b) For a Class B digital device or peripheral, the instructions furnished the user shall include the following or similar statement, placed in a prominent location in the text of the manual: NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help.

4. RF exposure warning This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

IC Warning Statement

This device complies with Industry Canada’s license-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'Industrie

Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:
(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body. Pour se conformer aux exigences de conformité CNR 102 RF exposition, une distance de séparation d'au moins 20 cm doit être maintenue entre l'antenne de cet appareil ettoutes les personnes.

Appendix A: Toxic or Hazardous Materials or Elements

	Toxic or Hazardous Materials or Elements					
Component Name	Pb	Hg	Cd	Cr VI	PBB	PBDE
Sheet Metal	O	O	O	O	O	O
Plastic Parts	O	O	O	O	O	O
Circuit Board	O	O	O	O	O	O
Fastener	O	O	O	O	O	O
Cable/AC Adapter	O	O	O	O	O	O
Packing Material	O	O	O	O	O	O
Accessories	O	O	O	O	O	O

O: Indicates that the concentration of the hazardous substance in all homogeneous materials in the parts is below the relevant threshold of the SJ/T11363-2006 standard.
X: Indicates that the concentration of the hazardous substance of at least one of all homogeneous materials in the parts is above the relevant threshold of the SJ/T11363-2006 standard. During the environmental-friendly use period (EFUP) period, the toxic or hazardous substance or elements contained in products will not leak or mutate so that the use of these (substances or elements) will not result in any severe environmental pollution, any bodily injury or damage to any assets. The consumer is not authorized to process such kind of substances or elements, please return to the corresponding local authorities to process according to your local government statutes.

O: Indicates that the concentration of the hazardous substance in all homogeneous materials in the parts is below the relevant threshold of the SJ/T11363-2006 standard.
X: Indicates that the concentration of the hazardous substance of at least one of all homogeneous materials in the parts is above the relevant threshold of the SJ/T11363-2006 standard. During the environmental-friendly use period (EFUP) period, the toxic or hazardous substance or elements contained in products will not leak or mutate so that the use of these (substances or elements) will not result in any severe environmental pollution, any bodily injury or damage to any assets. The consumer is not authorized to process such kind of substances or elements, please return to the corresponding local authorities to process according to your local government statutes.

Note:

- **To view setup videos for many of the steps outlined in this guide, go to http://amcrest.com/videos**
- **This user manual is for reference only. Slight differences may be found in the user interface.**
- **All the designs and software here are subject to change without prior written notice.**
- **All trademarks and registered trademarks mentioned are the properties of their respective owners.**