AROMA®



instruction manual

ASP-137/ASP-137B

3-in-1 Grillet®

Questions or concerns about your Aroma product?

www.AromaCo.com/Support

1-800-276-6286

DISCOVER more of our products!



Digital Rice & Grain Multicookers



Rice & Grain Cookers



Electric Kettles



Indoor Grills



...and More!

AROMA®

To Enhance and Enrich Lives.

Here at Aroma we strive to make a difference—to design and distribute products that enhance and enrich people's lives.

Aroma offers an array of exceptional products to make cooking simple and satisfying. Discover other countertop appliances and cookware from our current product lineup to complement your kitchen.

REGISTER YOUR PRODUCT

Registration is quick and easy.

Be notified of:
- new product releases
- new test kitchen releases
- sales and promotions

...and more!

SCAN TO REGISTER
AromaCo.com/registration

/AromaHousewares

Published By:
Aroma Housewares Co. | 6469 Flanders Drive, San Diego, CA 92121, U.S.A.
1-800-276-6286 | www.AromaCo.com
©2026 Aroma Housewares Company | All rights reserved.

IMPORTANT SAFEGUARDS

Basic safety precautions should always be followed when using electrical appliances, including the following:


1. **Important: Read all instructions carefully before first use.**
2. Do not touch hot surfaces. Use the handles or knobs.
3. To protect against fire, electric shock and injury to persons, do not immerse cord, plug or the appliance in water or any other liquid. See instructions for cleaning.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from the outlet when not in use and before cleaning. Allow unit to cool before putting on or taking off parts and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact Aroma® customer service for examination, repair or adjustment.
7. The use of accessory attachments not recommended by Aroma® Housewares may result in fire, electric shock or injury.
8. Do not use outdoors.
9. Do not let the power cord touch hot surfaces or hang over the edge of a counter or table.
10. Do not place the appliance on or near a hot gas or electric burner or in a heated oven.
11. Extreme caution must be used when moving the appliance containing hot oil or other hot liquids.
12. Do not use appliance for other than intended use.
13. Always attach the plug to the appliance first, and then plug the cord into the wall outlet.
14. To turn off the unit, turn control dial to ***Off*** then safely remove the plug from the wall outlet
15. Use only on a level, dry and heat-resistant surface.
16. The appliance should be operated on a separate electrical circuit from other operating appliances. If the electrical circuit is overloaded with other appliances, this appliance may not operate properly.
17. Use only the provided Aroma® temperature control probe when operating this appliance.
18. **CAUTION:** Do not use for deep frying
19. A fire may occur if the appliance is covered or touching any flammable objects while being used.
20. Use only with a 120V AC power outlet.
21. **CAUTION:** Intended for countertop use only.
22. Always unplug from the plug gripping area. Never pull on the power cord.
23. **WARNING:** Spilled food can cause serious burns. Keep appliance and cord away from children. Never drape cord over edge of counter, never use outlet below counter, and never use with an extension cord.
24. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless the have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS

Short Cord Instructions

A short power-supply cord is used to reduce the risks resulting from it being grabbed by children, and becoming entangled in or tripping over a longer cord.

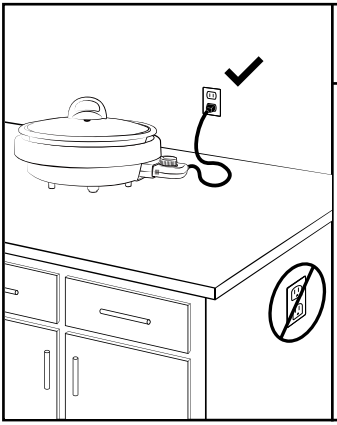

WARNING

Spilled food can cause serious burns.

Keep appliance & cord away from children.

NEVER

- Drape cord over edge of counter.
- Use outlet below counter.
- Use extension cord.

Polarized Plug


This appliance has a polarized plug (one blade is wider than the other); follow the instructions below:

To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

If the supply cord is damaged, stop using the appliance immediately. The cord must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

Parts Identification

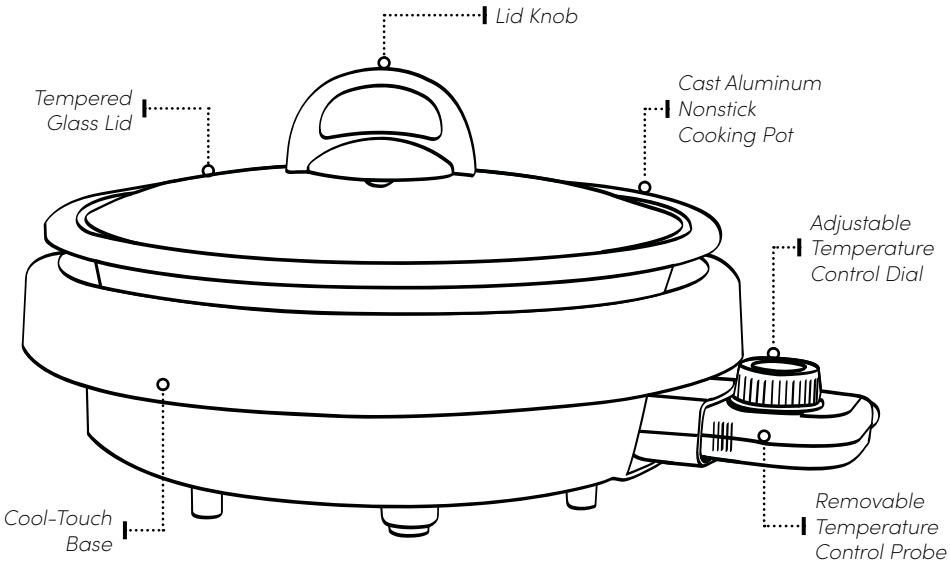

Controls/Functions

Temperature Control Dial

Turn the knob clockwise to the desired temperature to start heating.
Turn the knob counter-clockwise to the ***Off*** position to turn the appliance off.

Before First Use ⚠

1. **Read all instructions and important safeguards.**
2. Remove all packaging materials and check that all items have been received in good condition.
3. Tear up all plastic bags and dispose of them properly as they can pose a risk to children.
4. Remove and discard the plastic sleeve on the temperature control probe.
5. Lift the cooking pot away from the probe side, then pull it away from the cool-touch base. Wash the cooking pot, base and assembled lid with warm, soapy water using a sponge or dishcloth. Rinse and dry thoroughly.
6. Condition the nonstick surface of the cooking pan with oil or vegetable shortening.

To Clean

1. Disconnect the plug from the wall outlet, then remove the temperature control probe from the appliance.
2. Allow the unit to completely cool. Pull the cooking pot away from the cool-touch base.
3. Wash the cooking pot, base and lid with warm, soapy water, using a sponge or dishcloth. Rinse thoroughly to remove soap residue.
4. Dry thoroughly with a soft cloth.

Troubleshooting

The 3-in-1 Grillet® will not turn on and begin heating.

- The temperature probe is not securely connected to the pot. Make sure the temperature probe is pushed firmly into the port on the cool-touch base.



Caution:

Do not use harsh abrasive cleaners, scouring pads or products that are not considered safe to use on nonstick coatings.

We recommend hand washing the cooking pot with warm, soapy water to lengthen its lifespan and avoid damage over time. If washing in a dishwasher, a slight discoloration to the cooking pot may occur. This is cosmetic and will not negatively affect performance.

Note:

- Any other servicing should be performed by Aroma® Housewares.
- Not satisfied with your Aroma® purchase? Our product experts can help! **Before returning, please contact Customer Service at 1-800-276-6286** for product support, helpful tips and more!

Assembling the Lid

1. Using a phillips-head screwdriver, remove the screw from the lid handle.
2. Place the handle on top of the lid. Make sure the hole on the handle and hole on the lid line up.
3. Place the screw under the lid so it fits into the hole from the lid to handle.
4. Tighten the screw into place. Be careful to not over-tighten.

Using Your 3-in-1 Grillet®

1. Place the cooking pot into the cool-touch base. It should snap securely into place.
2. Plug the temperature control probe into the port in the cool-touch base.
3. Turn the temperature control dial to the ***Off*** position. Plug the power cord into an available 120V AC power outlet.
4. Add food to be cooked to the cooking pot. If desired, cover the pot with the tempered glass lid to help decrease cooking time and ensure even cooking.
5. Turn the temperature control dial to the desired temperature. The indicator light will illuminate.
6. The indicator light will turn off once the cooking pot has reached the selected temperature. During operation, the indicator light will turn on and off, indicating the proper temperature is being maintained.
7. When cooking has finished, turn the temperature control dial to the ***Off*** position and unplug the power cord from the power outlet.



Caution:

During and after use, the tempered glass lid and the cooking pot will become very hot. Be sure to use the handle and wear protective oven mitts or gloves.

To prevent foodborne illness, always make sure food is cooked thoroughly before serving.

Note:

- Wooden, heat-proof plastic and nylon utensils are recommended. Metal utensils may scratch the nonstick surface.

STEAM

1. Place the cooking pot into the cool-touch base. It should snap securely into place.
2. Plug the temperature control probe into the port in the cool-touch base.
3. Turn the temperature control dial to the ***Off*** position. Plug the power cord into an available 120V AC power outlet.
4. Place food on a heat-safe dish that will fit inside the 3-in-1 Grillet® with the lid closed. Pour one cup of water (or more if needed) into the pot. Place dish inside the cooking pot. Place the tempered glass lid on top.
5. Turn the temperature control dial to a high setting. The indicator light will illuminate.
6. During operation, the indicator light will turn off and on once the selected temperature is reached to maintain that temperature. If the temperature is set above 212°F when steaming, simmering or slow cooking, the indicator light will not turn off because the maximum temperature reached when cooking with liquid is the boiling point (212°F).
7. When steaming has finished, turn the temperature control dial to the ***Off*** position and unplug the power cord from the power outlet.



Caution:

During and after use, the tempered glass lid and the cooking pot will become very hot. Be sure to use the handle and wear protective oven mitts or gloves.

To prevent food borne illness, always make sure food is cooked thoroughly before serving.

Note:

- Wooden, heat-proof plastic and nylon utensils are recommended. Metal utensils may scratch the nonstick surface.
- All vegetables should be thoroughly cleaned and washed before steaming. Thin, leafy vegetables such as cabbage do not require as much water as root vegetables, such as carrots.
- Do not remove lid during steaming, as steam will escape and the cooking time will be extended.
- Food can be placed directly on the grilled surface of the pot for steaming.

Steaming Guide

Food	Steaming Time
Asparagus	8–12 Minutes
Broccoli	8–12 Minutes
Cabbage	8–12 Minutes
Carrots	8–12 Minutes
Cauliflower	8–12 Minutes
Chicken	17–25 Minutes
Corn (on the Cob)	14–18 Minutes
Crab Legs	14–20 Minutes
Eggs	8–14 Minutes
Fish	12–18 Minutes
Green Beans	8–12 Minutes
Peas	8–12 Minutes
Pork	18–30 Minutes
Potatoes	24–40 Minutes
Spinach	5–7 Minutes

Note:

- These cooking guides are for reference only. Actual cooking times may vary.

Cooking Guide

Food	Cooking Time	Temperature
Salmon/Fish	10–15 Minutes	375°F
Bacon	10–15 Minutes	400°F
Sausage Links	10–15 Minutes	400°F
Hamburger	7–10 Minutes	375°F
Hot Dogs	7–10 Minutes	375°F
Chicken Breast	8–10 Minutes Each Side	350°F
Bone-in Pork Chops	10–12 Minutes Each Side	350°F
Steak (rare)	6 Minutes Each Side	400°F
Steak (well done)	6–8 Minutes Each Side	350°F
Lamb Cutlets	6–7 Minutes Each Side	350°F

Notes

Limited Warranty

Aroma Housewares Company warrants its products against defects in material and workmanship for one year from the date the customer takes possession of the product in the United States. For in-store purchases, this is the purchase date. For online or delivery orders, this is the delivery date.

Within this warranty period, Aroma Housewares Company will repair or replace, at its discretion, defective parts at no charge. Proof of the date of purchase, such as the original dated sales receipt, will be required with any request for warranty repair or replacement. All liability is limited to the amount of the purchase price.

This warranty does not apply if the warranty period expired; the product has been modified by any unauthorized service center or personnel; the defect was subject to abuse, improper use not conforming to product manual instructions, or environmental conditions more severe than those specified in the manual and specification, neglect of the owner or improper installation; the defect was subject to Force Majeure such as flood, fire, lightning, earthquake, other natural calamities, war. The warranty excludes accessories and replacement parts. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V ~ 60Hz).

Aroma's sole obligation under the warranty shall be to replace the defective product with a working one or a similar model of equivalent value, if the same model is not available, in the occurrence of any failure or defect covered under the warranty during the warranty period. Refurbished items or items not purchased through an authorized retailer are not eligible for warranty claims. Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

This warranty gives you specific legal rights, which may vary from state to state, and does not cover areas outside the United States.

Note:

- Proof of purchase is required for all warranty claims.
- Failure to register your product will not diminish your warranty rights.
- Not satisfied with your Aroma® purchase? Our product experts can help! **Before returning, please contact Customer Service at 1-800-276-6286** for product support, helpful tips and more!

Service & Support

In the event of a warranty claim, or if service is required for this product, please contact Aroma® customer service toll-free at:

1-800-276-6286 | CustomerService@AromaCo.com
M-F, 8:00am-4:00pm, Pacific Time

www.AromaCo.com
Aroma Housewares Company
6469 Flanders Drive, San Diego, CA 92121, U.S.A.



To Enhance and Enrich Lives.

www.AromaCo.com