AROMA®



instruction manual

ATS-352S

SnackPro™ Toaster

Questions or concerns about your Aroma product?
www.AromaCo.com/Support
1-800-276-6286

DISCOVER more of our products!



Digital Rice & Grain Multicookers



Rice & Grain Cookers



Electric Kettles



Roaster Ovens



...and More!

AROMA®

To Enhance and Enrich Lives.

Here at Aroma we strive to make a difference—to design and distribute products that enhance and enrich people's lives.

Aroma offers an array of exceptional products to make cooking simple and satisfying. Discover other countertop appliances and cookware from our current product lineup to complement your kitchen.

REGISTER YOUR PRODUCT

Registration is quick and easy.

Be notified of:
- new product releases
- new test kitchen recipes
- sales and promotions

...and more!

SCAN TO REGISTER
AromaCo.com/registration

/AromaHousewares

Published By:
Aroma Housewares Co. | 6469 Flanders Drive, San Diego, CA 92121, U.S.A.
1-800-276-6286 | www.AromaCo.com
©2026 Aroma Housewares Company | All rights reserved.

IMPORTANT SAFEGUARDS

Basic safety precautions should always be followed when using electrical appliances, including the following:

1. **Important: Read all instructions carefully before first use.**
2. Do not touch hot surfaces. Use the handles or knobs.
3. Use only on a level, dry and heat-resistant surface.
4. To protect against fire, electric shock and injury to persons, do not immerse cord, plug or the appliance in water or any other liquid. See instructions for cleaning.
5. Close supervision is necessary when the appliance is used by or near children.
6. Unplug from the wall outlet when not in use and before cleaning. Allow unit to cool before putting on or taking off parts and before cleaning the appliance.
7. Do not operate any appliance with a damaged power cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact Aroma® customer service for examination, repair or electrical/mechanical adjustment.
8. The use of accessory attachments not recommended by Aroma® Housewares may result in fire, electrical shock or injury.
9. Do not use outdoors.
10. Do not allow the power cord to touch hot surfaces or hang over the edge of the counter or table.
11. Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
12. Do not use the appliance for other than its intended use.
13. Use only with a 120V AC power outlet.
14. Always unplug the power cord from the plug gripping area. Never pull on the cord.
15. The toaster should be operated on a separated electrical circuit from other operating appliances. If the electrical circuit is overloaded with other appliances, the appliance may not operate properly.
16. To turn off the unit, press the ***Cancel*** button then safely remove the plug from the wall outlet.
17. Do not wrap or trip the power cord around the appliance.
18. **CAUTION:** For countertop use only.
19. This appliance is not intended for use by persons (including children) with reduces physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
20. Oversize foods, metal foil packages, or utensils must not be inserted in toaster as they may involve a risk of fire or electric shock.
21. A fire may occur if toaster is covered or touching flammable materials including curtains, draperies, walls, and the like, when in operation.
22. **WARNING:** Do not attempt to dislodge food when toaster is plugged in. Doing so could cause an electric shock or a risk of a fire.
23. To avoid the possibility of fire, do not leave toaster unattended during use.
24. **WARNING:** If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS

Short Cord Instructions

1. A short power-supply cord is used to reduce the risk resulting from it being grabbed by children, becoming entangled in, or tripping over a longer cord.
2. Longer extension cords are available and may be used if care is exercised in their use.
3. If a longer extension cord is used:
   a.) The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
   b.) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled by children or tripped over unintentionally.

DO NOT DRAPE CORD!

KEEP AWAY FROM CHILDREN!

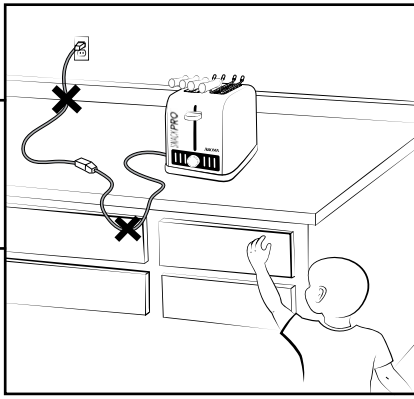

Polarized Plug

This appliance has a polarized plug (one blade is wider than the other); follow the instructions below:

To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

Parts Identification

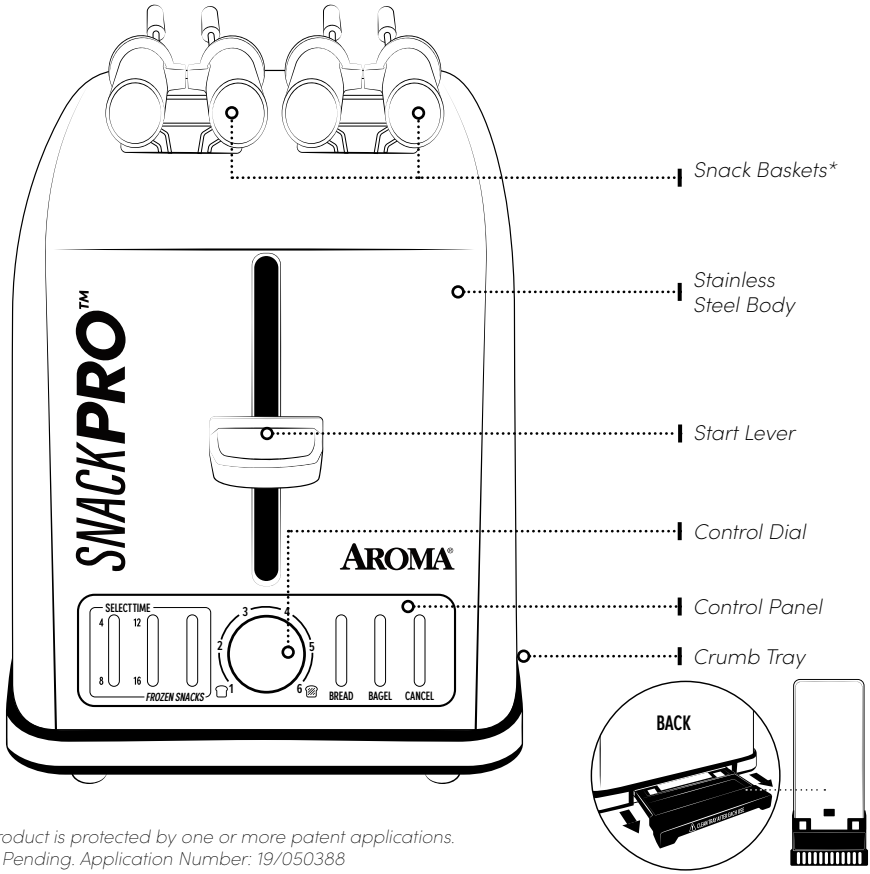

** This product is protected by one or more patent applications. Patent Pending. Application Number: 19/050388*

Controls/Functions

Select Time
Time-based control used only for the Frozen Snacks function. Refer to the Snack Timetable for suggested food and times.

Bread Button
Designed for bread, English Muffins, or toaster pastries.

Bagel Button
Toasts the inside of a cut bagel without burning the outside surface.

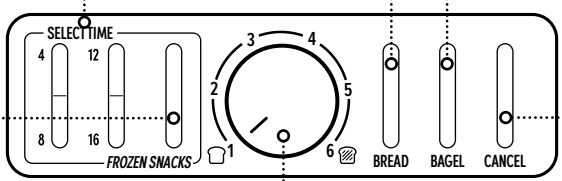

Frozen Snacks Button
Quickly heats frozen snacks.
Snack Basket required.

Shade Dial (1-6)
Select your desired browning level from light (1) to dark (6). Applies to Bread and Bagel functions only.

Cancel Button
Cancels current cycle and raises bread or snack for removal.

Before First Use ⚠

IMPORTANT: To avoid damage to toaster, do not probe inside the toaster slots with any metal objects, including utensils.

1. Remove all packaging materials, including those inside the toasting slots.
2. Inspect the slots to ensure no packing or printed material remain.
3. Wipe the exterior with a damp cloth and dry thoroughly. Do not use abrasive cleaners.
4. Do not immerse the toaster, cord, or plug in water.
5. Wash the Snack Baskets with warm soapy water; rinse and dry thoroughly.
6. Ensure the Crumb Tray is fully inserted and locked into position at the back of the toaster.
7. Unwrap the power cord, route it through the cord storage area, and plug into 120V AC outlet.
8. Following steps 2–5 of "To Toast Bread" on pg. **10**, run 2 cycles of toast on lightest level without bread before the first use.

Note:

- Toaster may emit a thin smoke on the initial use. This is normal and not detrimental to the performance of the toaster.

To Clean

Crumb Tray

1. Clean after every use.
2. Simply pull the Crumb Tray out from its gripping area. Clean after every use.
3. Wipe with a clean, damp cloth; rinse and dry.
4. Push the tray all the way in.

Exterior

1. Wipe with clean, damp cloth.
2. Do not use abrasive cleaners.
3. Do not immerse cord or plug in water or other liquids.

Snack Basket

1. Clean after every use.
2. Wash with warm soapy water, rinse thoroughly and dry.



Caution:

Always unplug the toaster and allow it to cool completely before cleaning.

Always clean the Crumb Tray and Snack Basket after using the ***Frozen Snacks*** function.

Note:

- The Crumb Tray & Snack Basket will be hot immediately following a toasting cycle, allow the toaster to cool before emptying the Crumb Tray.
- Do not use the toaster without the Crumb Tray installed.

Troubleshooting

The toaster is not heating.

- Ensure the wall outlet is functioning properly and that the ***Cancel*** LED is lit green.
- Ensure there is no food lodged inside and the ***Start Lever*** is fully pressed down.

Uneven cooking.

- When using the ***Frozen Snacks*** function to heat frozen food, make sure the items are evenly spread out and not packed or clumped too tightly together, avoiding stacking into two or three layers.

Smoke or odor during use.

- Ensure no food is sticking out of the Snack Basket, and that there are no crumbs or grease on the Crumb Tray or on the toaster.

Removing lodged foods.

- Unplug the toaster and allow it to cool completely.
- Remove the Crumb Tray, turn the toaster upside down and gently shake to remove food.
- **CAUTION:** To avoid injury or damage to the heating element, ***NEVER*** use a fork or sharp-edged utensil to remove toast or toaster food.

Note:

- Any other servicing should be performed by Aroma® Housewares.
- Not satisfied with your Aroma® purchase? Our product experts can help! **Before returning, please contact Customer Service at 1-800-276-6286** for product support, helpful tips and more!

QUICK START GUIDE

1. Insert bread/ basket.

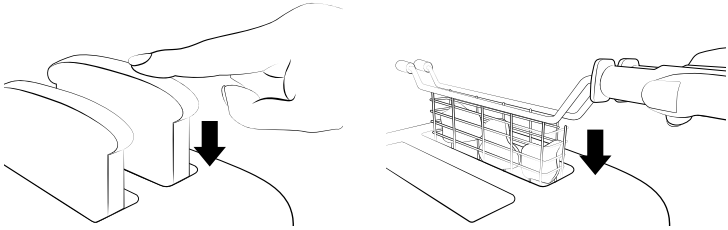

2. Select ***BREAD***, ***BAGEL***, or ***FROZEN SNACKS***.

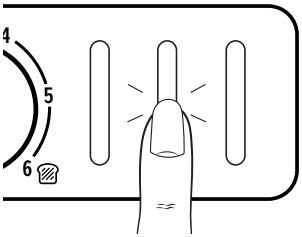

*Note: for **FROZEN SNACKS**, select a cooking time before pressing the lever.*

3. Press lever down.

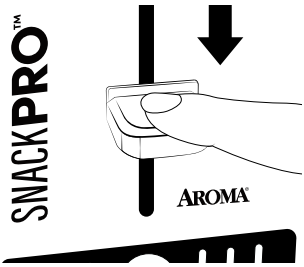

4. Ready to pup-up.



To Heat Frozen Snacks

*Use this function for heating **frozen snacks only**. The Snack Basket is required.*

A. PREPARE SNACK BASKET

1. Open the Snack Basket 180° and place it on a flat surface.
2. Arrange frozen snacks evenly inside the basket. Do not overstack.
3. Close the basket securely.
4. Hold the handle and insert the Snack Basket fully into the toaster.

B. HEATING THE SNACKS

1. Press the ***Frozen Snacks*** button. The indicator light will turn on.
2. Select the desired cooking time (4, 8, 12, or 16 min). The selected time light will illuminate. For recommended food and cooking times, refer to the "Snack Time Table" on below.
3. Press down on the Start Lever to begin heating.
4. The toaster will stop automatically at the end of the cycle and raise the basket.
5. To cancel heating at any time, press the ***Cancel*** button. The basket will pop up and the toaster will turn off.

Snack Timetable

Recommended Times

Frozen Snack		Recommended Cooking Time
· French Toast · Pancakes	· Thick Waffle · Waffles	4 Min.
· Quiche · Sausages	· Snack Roll · Taquitos	8 Min.
· Chicken Nuggets · Chicken Wings	· Hash Brown Patties · Mini Corn Dogs	12 Min.
· French Fries · Sweet Potato Fries	· Tater Tots · Waffle Cut Fries	16 Min.

Caution:

Never toast bread or bagels using the ***Frozen Snacks*** function.

The toaster is equipped with a temperature controller as a safety feature. If the internal temperature exceeds the limit, the toaster will automatically shut off and raise the baskets before the end of the cycle.

HOT SURFACES! This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property. Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning. Do not place anything on top of the Toaster while it is operating or while it is hot.

Note:

- Make sure food is positioned evenly inside the basket for best results.
- Cooking times may vary. Follow the food package instructions and confirm food is thoroughly cooked before consuming.

To Toast Bread

Use this function for bread, English muffins, or toaster pastries.

1. Insert bread or other food into the toaster slots.
2. Press the ***Bread*** button. The indicator light will turn on.
3. Turn the Shade Dial to select browning level 1 (light) to 6 (dark).
4. Press down on the Start Lever to begin toasting.
5. Toast will pop up automatically when the cycle is complete.
6. To cancel toasting at any time, press the ***Cancel*** button.

To Toast Bagel

Use this function to toast the inside of a cut bagel without burning the outside surface.

1. Insert bagels into the slots with the cut sides facing inward, as indicated by the bagel icon.
2. Press the ***Bagel*** button. The indicator light will turn on.
3. Turn the Shade Dial to select browning level 1 (light) to 6 (dark).
4. Press down on the Start Lever to begin toasting.
5. Bagels will pop up automatically at the end of the cycle.
6. To cancel toasting at any time, press the ***Cancel*** button.

To Store

1. Unplug the toaster and allow it to cool completely.
2. Clean before storing.
3. Store in a clean, dry place, preferably in the original box.
4. Do not wrap the cord tightly around the unit; use the cord storage area.
5. Ensure Crumb Tray is fully inserted.



Caution:

Remove all protective wrappings from food before toasting.

Do not block top openings.

Do not butter bread before toasting.

Use slices of similar size, thickness, and freshness for even results.

Sweet or thin breads brown more quickly and require lighter settings.

DO NOT toast pastries with runny fillings or frosting.

DO NOT toast torn slices of bread.

DO NOT place buttered bread into the toaster.

DO NOT toast slices of bacon.

Note:

- Bread type, thickness, and moisture level may require different shade settings.
- Dry bread browns more quickly and may require a lighter setting.
- The use of a toaster cover is not recommended.

Helpful Hints:

For even toasting, toast only one type and thickness of bread at a time.

Limited Warranty

Aroma Housewares Company warrants its products against defects in material and workmanship for one year from the date the customer takes possession of the product in the United States. For in-store purchases, this is the purchase date. For online or delivery orders, this is the delivery date.

Within this warranty period, Aroma Housewares Company will repair or replace, at its discretion, defective parts at no charge. Proof of the date of purchase, such as the original dated sales receipt, will be required with any request for warranty repair or replacement. All liability is limited to the amount of the purchase price.

This warranty does not apply if the warranty period expired; the product has been modified by any unauthorized service center or personnel; the defect was subject to abuse, improper use not conforming to product manual instructions, or environmental conditions more severe than those specified in the manual and specification, neglect of the owner or improper installation; the defect was subject to Force Majeure such as flood, fire, lightning, earthquake, other natural calamities, war. The warranty excludes accessories and replacement parts. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V ~ 60Hz).

Aroma's sole obligation under the warranty shall be to replace the defective product with a working one or a similar model of equivalent value, if the same model is not available, in the occurrence of any failure or defect covered under the warranty during the warranty period. Refurbished items or items not purchased through an authorized retailer are not eligible for warranty claims. Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

This warranty gives you specific legal rights, which may vary from state to state, and does not cover areas outside the United States.

Note:

- Proof of purchase is required for all warranty claims.
- Failure to register your product will not diminish your warranty rights.
- Not satisfied with your Aroma® purchase? Our product experts can help! **Before returning, please contact Customer Service at 1-800-276-6286** for product support, helpful tips and more!

Service & Support

In the event of a warranty claim, or if service is required for this product, please contact Aroma® customer service toll-free at:

1-800-276-6286 | CustomerService@AromaCo.com
M-F, 8:00am-4:00pm, Pacific Time

www.AromaCo.com
Aroma Housewares Company
6469 Flanders Drive, San Diego, CA 92121, U.S.A.



To Enhance and Enrich Lives.

www.AromaCo.com