AROMA®
PROFESSIONAL



instruction manual

AWK-701

Digital Glass Tea Maker

Questions or concerns about your Aroma product?
www.AromaCo.com/Support
1-800-276-6286

DISCOVER more of our products!



Digital Rice & Grain Multicookers



Rice & Grain Cookers



Electric Kettles



Indoor Grills



...and More!

AROMA®

To Enhance and Enrich Lives.

Here at Aroma we strive to make a difference—to design and distribute products that enhance and enrich people's lives.

Aroma offers an array of exceptional products to make cooking simple and satisfying. Discover other countertop appliances and cookware from our current product lineup to complement your kitchen.

REGISTER YOUR PRODUCT

Registration is quick and easy.

Be notified of:

- new product releases
- new test kitchen recipes
- sales and promotions

...and more!

SCAN TO REGISTER
AromaCo.com/registration

/AromaHousewares

Published By:
Aroma Housewares Co. | 6469 Flanders Drive, San Diego, CA 92121, U.S.A.
1-800-276-6286 | www.AromaCo.com
©2025 Aroma Housewares Company | All rights reserved.

IMPORTANT SAFEGUARDS

When using electrical appliances basic safety precautions should always be followed, including the following:

1. **Important: Read all instructions carefully before first use.**
2. Do not touch hot surfaces. Use handles or knobs. Glass surfaces become extremely hot.
3. To protect against fire, electrical shock and injury to persons, do not immerse cord, plug or kettle in water or any other liquid. See instructions for cleaning.
4. Close supervision is necessary when the appliance is used by or near children.
5. Always unplug the appliance from the outlet when not in use and before cleaning. Allow the kettle to cool completely before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate the appliance with a damaged cord or plug, or after appliance malfunctions or has been damaged in any manner. Contact Aroma® customer service for examination, repair or electrical/ mechanical adjustment.
7. The use of accessory attachments not recommended by Aroma® Housewares may result in fire, electrical shock or injury.
8. Do not use outdoors.
9. Do not let the cord hang over the edge of a table or counter or touch hot surfaces.
10. Do not place the kettle on or near a hot gas or electric burner or in a heated oven.
11. To turn off the unit, press ***Cancel*** if there is a function currently running then press the control dial. Once the unit has powered off, safely remove the plug from the wall outlet.
12. Do not use the kettle for other than its intended use.
13. The power base must only be used with the provided kettle.
14. Do not unscrew any screws on the kettle or power base or attempt to disassemble them in any way.
15. Do not move the kettle during the heating process.
16. This appliance is for household use only.
17. **CAUTION:** To prevent overflow while boiling, do not allow liquids to exceed the MAX line.
18. Use only on a level, dry and heat-resistant surface.
19. Always unplug from the plug gripping area. Never pull on the cord.
20. The electric kettle should be operated on a separate electrical circuit from other operating appliances. If the electrical circuit is overloaded with other appliances the electric kettle may not operate properly.
21. Use only with a 120V AC power outlet.
22. Intended for countertop use only.
23. **WARNING:** Do not use the appliance if the kettle or power base is cracked.
24. **WARNING:** Do not remove the lid while liquids are boiling. Scalding may occur if the lid is removed during the boiling cycle.
25. **CAUTION:** Position the lid so that escaped steam is directed away from the handle.
26. Do not immerse the power base in water.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS

Short Cord Instructions

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer extension cords are available and may be used if care is exercised in their use.
3. If a longer extension cord is used:
   a.) The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
   b.) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled by children or tripped over unintentionally.
   c.) The extension cord should be a grounding-type 3-wire cord.

DO NOT DRAPE CORD!

KEEP AWAY FROM CHILDREN!

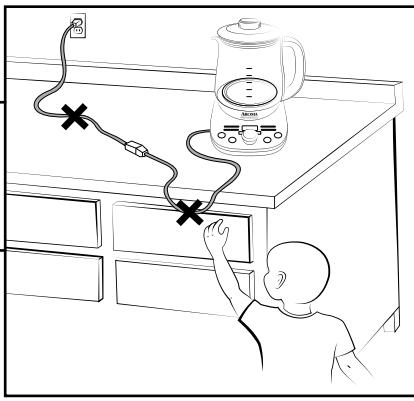

Grounding Instructions

This appliance must be grounded while in use to protect the operator from electrical shock. The appliance is equipped with a 3-conductor cord and a 3-prong grounding-type plug to fit the proper grounding-type receptacle. The appliance has a plug that looks like **Figure (A)**.

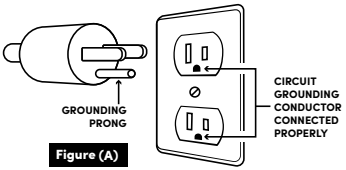

Figure (A)

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

Parts Identification

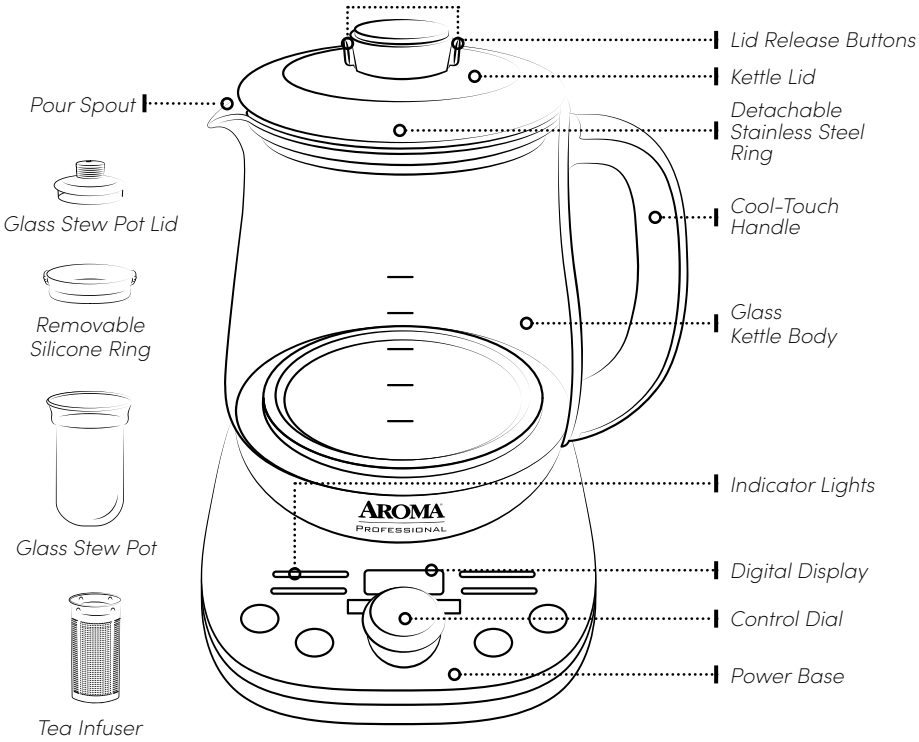

Controls/Functions

Control Dial (Start/Select)
Powers the unit on/off. Turn the control dial until the desired function is selected then press the control dial to begin heating.

Delay Timer
Boils water right when it's needed with preparation up to 9½ hours in advance. The amount of delay time can be adjusted using the control dial.

Keep Warm Setting
Allows you to adjust the temperature for ***Keep Warm*** mode between 93°F and 193°F.

Time Setting
Allows you to adjust the brewing time for all functions except ***01. Boil*** by 1, 5, 30, or 60-minute increments depending on the selected function.

Cancel
Cancels a current function.

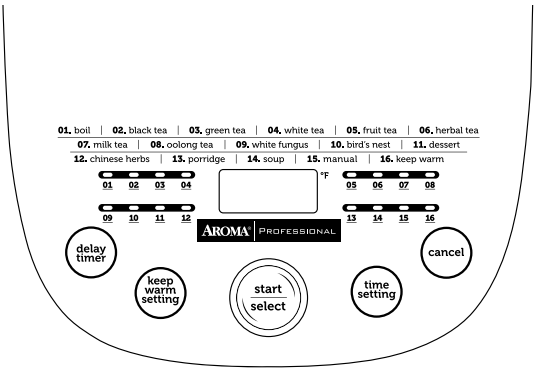

Before First Use

Before using for the first time, it is recommended to clean the interior of the kettle thoroughly. Please follow the procedures below before using the kettle:

1. **Read all instructions and important safeguards.**
2. Remove all packaging materials and check that all items have been received in good condition.
3. Tear up all plastic bags and dispose of them properly as they can pose a risk to children.
4. Clean the interior of the kettle with a soft sponge and warm, soapy water. If your hand will not fit inside the kettle, swish warm, soapy water around in the interior of the kettle with the kettle lid on. Take care to keep the electrical components on the exterior of the kettle dry.
5. With a damp cloth, gently wipe the exterior of the kettle. Hand wash all parts (glass stew pot, glass stew pot lid, removable silicone ring, tea infuser). Do not wipe electrical components as this may cause damage to the unit.
6. Dry all parts thoroughly.
7. Following the instructions in "Boiling Water" on page **10**, boil 6 cups of water. Once the water has boiled, pour it out then rinse the inside of the kettle once more with warm water. The kettle is now ready for use.

To Clean

1. Wipe the exterior of the kettle with a damp cloth, taking care to avoid the electrical components.
2. Clean the interior of the kettle with a soft sponge and warm, soapy water. If your hand will not fit inside the kettle, swish warm, soapy water around in the interior of the kettle with the kettle lid on.
3. Rinse and drain any remaining soapy water from the kettle.
4. If the glass stew pot, glass stew pot lid, removable silicone ring, or tea infuser were used, hand wash using warm, soapy water then dry thoroughly.
5. Dry the interior and exterior of the kettle thoroughly before placing it back on the power base.

Caution:

Always unplug the kettle and allow it to cool completely before cleaning.

Never attempt to disassemble the kettle or the power base.

Never immerse the kettle, power cord, plug or power base in water.

Always take care not to allow electrical components to come into contact with water.

Do not use abrasive cleaners or scouring pads of any kind on the kettle or power base. This will cause damage to the finish and may create a risk of electrical shock.

Never wash the glass stew pot, glass stew pot lid, removable silicone ring, tea infuser, kettle or kettle lid in the dishwasher.

Note:

- Any other servicing should be performed by Aroma® Housewares
- Not satisfied with your Aroma® purchase? Our product experts can help! **Before returning, please contact Customer Service at 1-800-276-6286** for product support, helpful tips and more!

Troubleshooting

The kettle and indicator lights do not work when powered on.

- Make sure the kettle is seated properly on the power base and that the power base is connected to a functioning electrical outlet.
- If there is no water or liquid in the kettle, the internal safety mechanism will automatically turn the kettle off. The kettle will begin working again after the kettle is removed from and returned to the power base and the internal temperature drops to a safe level.

The water is boiling, but the power switch and indicator lights do not turn off.

- The automatic shut-off feature will not operate properly if the kettle lid is not completely closed. Allow the kettle to cool, then check to see that the kettle lid is properly locked into place.

There are mineral deposits or white residue on the interior of the kettle.

- A certain amount of scale build-up is normal after use and is caused by minerals contained in hard water.
- To remove deposits, refer to "Mineral Deposits" on page **15**.

Note:

- If the problem persists, please contact our customer service department at **1-800-276-6286** or by email at **CustomerService@AromaCo.com**.

Error Code Chart

If an error shows on the digital display, the following chart will help explain the next course of action.

Code	Description	Corrective Action
000	Kettle missing from power base or the temperature sensor has an open circuit	Place the kettle back onto the power base and restart the selected function. If the problem persists, contact customer service at 1-800-276-6286.
E00	Boil-dry Protection	Power off the unit, fill the kettle with water and restart the selected function.
E01	Temperature sensor has short-circuited or overheated	Turn off the kettle. Allow to cool for 5 minutes then restart. If the problem persists, contact customer service at 1-800-276-6286.

Functions

01. Boil
Brings contents to boiling temperature (212°F) quickly and efficiently.

02. Black Tea
Boils to 212°F, the ideal temperature for loose leaf black teas. Simply place the tea leaves inside the tea infuser and brew.

03. Green Tea
Heats to 170°F, the ideal temperature for loose leaf green teas. Simply place the tea leaves inside the tea infuser and brew.

04. White Tea
Heats to 160°F, the ideal temperature for loose leaf white teas. Simply place the tea leaves inside the tea infuser and brew.

05. Fruit Tea
Place dried or fresh fruit into the tea infuser to infuse water with your favorite delicious fruity flavors.

06. Herbal Tea
Fill the kettle with any herbs of your choice and allow them to steep in hot water until brewed to perfection.

07. Milk Tea
Allows you to brew milk tea by placing your preferred tea leaves inside the tea infuser and adding milk into the kettle.

08. Oolong Tea
Heats to 185°F, the ideal temperature for loose leaf oolong teas. Simply place the tea leaves inside the tea infuser and brew.

09. White Fungus
Add white fungus into the glass stew pot to soften them or to directly cook them into healthy dessert soups.

10. Bird's Nest
Using the glass stew pot, steam bird's nests to provide you with skin-beautifying collagen teas and soups.

11. Dessert
Prepares traditional Chinese dessert soups such as sweet rice soup, red bean soup and more.

12. Chinese Herbs
Steeps and stews Chinese medicinal herbs at optimal temperatures for up to 1½ hours.

Note:

- Refer to the "Function Times & Temperatures Table" on page **18** for each function's temperature and the adjustable time ranges available for each function.

FUNCTIONS (CONT.)

13. **Porridge**
    Add rice and water to the kettle for perfectly tender rice porridge.
14. **Soup**
    Place ingredients into the glass stew pot or directly into the kettle to create a variety of delicious soups and stews.
15. **Manual**
    Allows you to set the heating temperature between 100°F-200°F or 212°F.
16. **Keep Warm**
    Automatically keeps contents warm at a default temperature of 143°F and default time of 1 hour. To customize, adjust the temperature from 93°F-193°F using ***Keep Warm Setting*** and adjust the time from 1-8 hours using ***Time Setting***.

SELECTING A FUNCTION

1. Place the power base on a sturdy, level and dry surface.
2. Press the lid release buttons and remove the kettle lid. Fill with the desired amount of water and/or other liquids. Liquid must be filled between the MIN and MAX levels.
3. While pressing the lid release buttons, place the kettle lid on securely then carefully place the kettle onto the power base.
4. Plug the power cord into an available 120V AC wall outlet.
5. Press the control dial to turn on the unit. The unit will beep to signify it has been powered on.
6. Turn the control dial until the desired function is selected. With every turn of the control dial, the unit will beep and the selected function's indicator light will illuminate.
7. Once selected, press the control dial to initiate the function. The unit will beep as the selected function begins its heating cycle.
8. When finished serving, press ***Cancel*** then press the control dial to power off the unit. Once the unit is off, safely unplug the power cord from the wall outlet.

Caution:

The glass portions of the kettle will become extremely hot during use and remain hot for a while. **Do not touch the glass body or kettle lid until the kettle has cooled completely.**

Never open the kettle lid while water and/or other liquids are boiling.

Note:

- Pulling up on the lid knob will remove the lid and stainless steel ring together. To remove the lid by itself, press the lid release buttons on either side of the lid knob, then pull up.
- To properly attach the stainless steel ring atop the kettle, align the silicone cut-out with the kettle handle.
- All functions EXCEPT ***01. Boil*** will automatically switch to ***Keep Warm*** mode after their heating cycle has completed. The default ***Keep Warm*** mode will keep contents warm for 1 hour.

Boiling Water

1. Place the power base on a sturdy, level and dry surface.
2. Press the lid release buttons and remove the kettle lid. Fill with the desired amount of water. Water must be filled between the MIN and MAX levels.

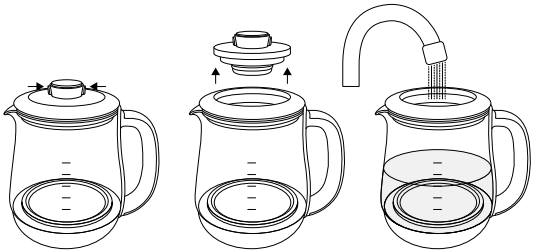

3. While pressing the lid release buttons, place the kettle lid on securely then carefully place the kettle onto the power base.

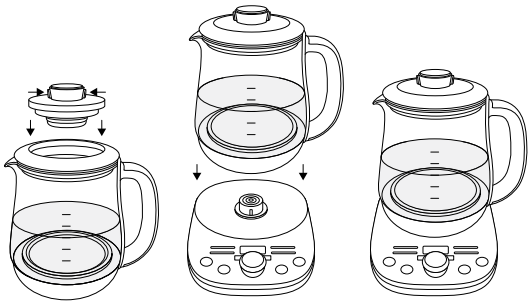

4. Plug the power cord into an available 120V AC wall outlet.
5. Press the control dial to turn on the unit. The unit will beep to signify it has been powered on.
6. Turn the control dial to select function ***01. Boil***. The unit will beep and the ***01. Boil*** indicator light will illuminate.
7. Press the control dial once more to initiate the boil cycle. The unit will beep and begin to heat.
8. If automatic ***Keep Warm*** mode is desired, press ***Keep Warm Setting*** after initiating ***01. Boil***. To set a custom ***Keep Warm*** temperature, press ***Keep Warm Setting*** to increase the temperature by 10-degree increments until the desired temperature is flashing on the digital display. After the contents reach a boil, the kettle will enter ***Keep Warm*** mode automatically.



Caution:

The glass portions of the kettle will become extremely hot during use and remain hot for a while. **Do not touch the glass body or kettle lid until the kettle has cooled completely.**

Never open the kettle lid while water is boiling.

Boiling Water (CONT.)

9. If ***Keep Warm*** mode was not selected, the unit will beep and automatically turn off when boiling temperature is reached.
10. When finished serving, press ***Cancel*** then press the control dial to power off the unit. Once the unit is off, safely unplug the power cord from the wall outlet.

Using The Glass Stew Pot

The provided glass stew pot can be used to stew and steep ingredients for soups, bird's nests and more. To use, follow the instructions below:

1. Place the power base on a sturdy, level and dry surface.
2. Press the lid release buttons to remove the kettle lid. Fill the kettle with water, other liquids and/ or any other desired ingredients. Liquid must be filled to around the 1.0L level.

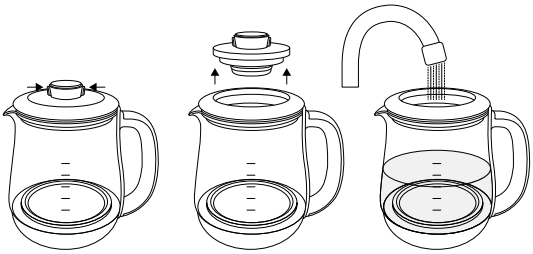

3. Slide the removable silicone ring onto the glass stew pot starting from the bottom to the top. Add desired ingredients into the stew pot then lower the stew pot through the stainless steel ring into the kettle.

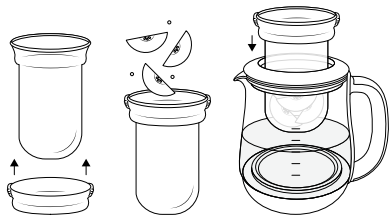

continued on next page>>

Caution:

To prevent boiling over, do not fill the kettle with more than 1 Liter of liquid while using the glass stew pot.

Hand wash the kettle and all accessories. Never place in the dishwasher.

Using The Glass Stew Pot (CONT.)

4. **Always use the glass stew pot lid when using the glass stew pot.** Place the glass stew pot lid on top of the stew pot. The water level will rise slightly above the 1.25L line.

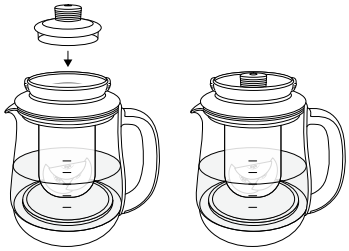

5. Carefully place the kettle onto the power base.

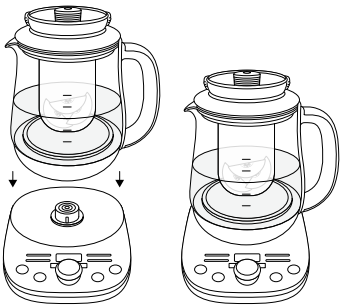

6. Plug the power cord into an available 120V AC wall outlet.
7. Press the control dial to turn on the unit. The unit will beep to signify it has been powered on.
8. Turn the control dial until the desired function is selected. With every turn of the control dial, the unit will beep and the selected function's indicator light will illuminate.
9. Once selected, press the control dial to initiate the function. The unit will beep as the selected function begins its heating cycle.
10. When finished, press ***Cancel***, then press the control dial to power off the unit. Using heat-resistant gloves or oven mitts, lift the glass stew pot and lid from the kettle for serving.
11. Once the unit is off, safely unplug the power cord from the wall outlet.

Caution:

The glass portions of the kettle will become extremely hot during use and remain hot for a while. **Do not touch the glass body or kettle lid until the kettle has cooled completely.**

Never open the kettle lid while water is boiling.

Use heat-resistant gloves or oven mitts when removing the entire glass stew pot.

Using The Tea Infuser

The provided tea infuser can be used to easily steep loose leaf teas and other smaller ingredients to prepare a variety of different delicious teas. To use, follow the instructions below:

1. Place the power base on a sturdy, level and dry surface.
2. Press the lid release buttons and remove the kettle lid. Fill with the desired amount of water. Water must be filled between the MIN and MAX levels.

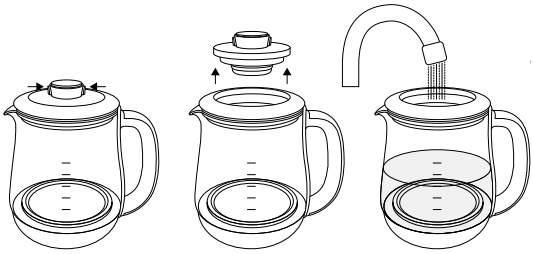

3. Add desired ingredients into the tea infuser. Place the kettle lid on top of the tea infuser and press to secure.

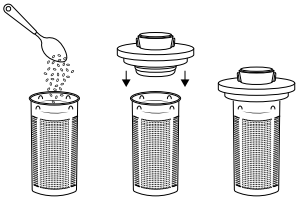

4. While pressing the lid release buttons, place the tea infuser with the kettle lid attached into the middle of the detachable stainless steel ring.

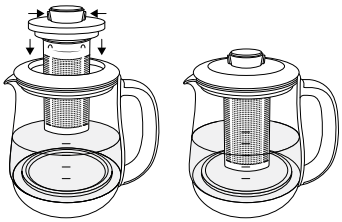

continued on next page>>

Using The Tea Infuser (CONT.)

5. Carefully place the kettle onto the power base.

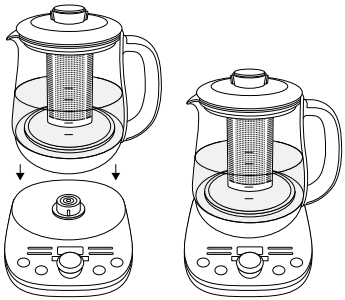

6. Plug the power cord into an available 120V AC wall outlet.
7. Press the control dial to turn on the unit. The unit will beep to signify it has been powered on.
8. Turn the control dial until the desired function is selected. With every turn of the control dial, the unit will beep and the selected function's indicator light will illuminate. Once selected, press the control dial to initiate the function. The unit will beep as the selected function begins its heating cycle.
9. When finished, press ***Cancel***, then press the control dial to power off the unit. Press the lid release buttons to remove the tea infuser and lid from the kettle. Use heat-resistant gloves or oven mitts while removing to avoid injury.
10. Once the unit is off, safely unplug the power cord from the wall outlet.

Caution:

The glass portions of the kettle will become extremely hot during use and remain hot for sometime after. **Do not touch the glass body or kettle lid until the kettle has cooled completely.**

Never open the kettle lid while liquids are boiling.

Use heat-resistant gloves or oven mitts when removing the tea infuser.

Mineral Deposits

Regular use of the kettle can leave behind mineral deposits or cause white residue and scale build-up on the interior of the kettle. This residue is normal and will not negatively affect you or the unit but can impact the quality of prepared meals/drinks over time if not cleaned properly. Follow these steps to remove deposits and residue:

1. Fill the kettle with 4 cups of water and 3 tablespoons of baking soda or 1 cup of white vinegar or ½ cup of lemon juice.
2. Bring contents to a boil by following the instructions in "Boiling Water" on page **10**.
3. Allow the mixture to soak in the kettle overnight.
4. Empty contents and rinse out the kettle thoroughly with warm, soapy water.
5. Fill the kettle with 6 cups of water and bring to a boil. Once boiled, empty the kettle and dry thoroughly.
6. Repeat as needed.

Delay Timer

1. Fill the kettle with water, following instructions 1-5 of "Boiling Water" on page **10**.
2. Turn the control dial until the desired function is selected. With every turn of the control dial, the unit will beep and the selected function's indicator light will illuminate. The functions available for the delay timer are ***01. Boil***, ***06. Herbal Tea***, ***09. White Fungus***, ***10. Bird's Nest***, ***11. Dessert***, ***13. Porridge*** and ***14. Soup***.
3. Press ***Delay Timer***.
4. Adjust the desired delay time by turning the control dial. Turn the control dial clockwise to increase and counterclockwise to decrease. The time will increase or decrease by 30-minute increments and can be delayed up to 9½ hours.
5. Press the control dial to begin the delay timer. Once the selected amount of delay time has elapsed, the unit will begin heating for the selected function.

Helpful Hints:

- Using distilled water will help to prevent the buildup of mineral deposits.
- It is recommended to deep clean the kettle at least once a month.

15. Manual

1. Fill the kettle with water, following instructions 1-5 of "Boiling Water" on page **10**.
2. Turn the control dial until function ***15. Manual*** is selected, then press the control dial to initiate.
3. The kettle will beep and the digital display will show the default temperature of 212°F.
4. If a different temperature is desired, rotate the control dial to select from 100°F-200°F or 212°F.
5. Once the temperature is selected, press the control dial. The unit will beep as the function begins its heating cycle.
6. Once the heating cycle has completed, the kettle will automatically enter ***Keep Warm*** mode.
7. When finished, press ***Cancel***, then press the control dial to power off the unit. Once the unit is off, safely unplug the power cord from the wall outlet.

.....

16. Keep Warm

1. Fill the kettle with water, following instructions 1-5 of "Boiling Water" on page **10**.
2. Turn the control dial until function ***16. Keep Warm*** is selected, then press the control dial to initiate.
3. The kettle will beep and the digital display will show the default temperature of 143°F.
4. If a different temperature is desired, press ***Keep Warm Setting*** to adjust the temperature from 93°F to 193°F.
5. Once the temperature is selected, press ***Time Setting*** to adjust the duration of ***Keep Warm*** mode from 1 to 8 hours.
6. Once the time is selected, press the control dial to initiate. The unit will beep and the kettle will enter ***Keep Warm*** mode.
7. When finished, press ***Cancel***, then press the control dial to power off the unit. Once the unit is off, safely unplug the power cord from the wall outlet.

.....

Note:

- All functions EXCEPT ***01. Boil*** will automatically switch to ***Keep Warm*** mode after their heating cycle has completed. The default ***Keep Warm*** mode will keep contents warm for 1 hour.
- ***Keep Warm*** mode will be canceled if the kettle is lifted off the base and not returned within 10 minutes.
- The default time and temperature for the ***16. Keep Warm*** function is 1 hour and 143°F respectively.

Custom Automatic Keep Warm

To set a custom Keep Warm temperature to be implemented after a selected function's cycle has completed, follow these steps:

1. Turn the control dial until the desired function is selected, then press ***Keep Warm Setting***.
2. The kettle will beep and the digital display will show the function's default ***Keep Warm*** temperature.
3. If a different temperature is desired, press ***Keep Warm Setting*** again to select from 93°F - 193°F.
4. Once the temperature is selected, press the control dial to initiate the selected function. The unit will beep as the function begins its heating cycle.
5. Once the heating cycle is complete, the kettle will automatically enter ***Keep Warm*** mode at the selected temperature for 1 hour.

Time Setting

To customize a function's heating time, follow these steps:

1. Turn the control dial until the desired function is selected, then press ***Time Setting***.
2. The kettle will beep and the digital display will show the selected function's default heating time.
3. If a different time is desired, continue pressing ***Time Setting*** to adjust. Refer to the chart on page **18** for the available time setting ranges for each function.
4. Once the time is selected, press the control dial to initiate the selected function. The unit will beep and begin to heat for the specified time.
5. Once the set time has elapsed, the kettle will automatically enter ***Keep Warm*** mode.

Note:

- ***Time Setting*** can be used to adjust the heating time for every function except ***01. Boil***.

Function Times & Temperatures Table

Function *(use control dial to select)*	**Temperature**	**Time Setting Range** *(use **Time Setting** to adjust)*	**Delay Timer** *(use control dial to adjust)*
01. Boil	212°F	--	30 Minutes - 9½ Hours
02. Black Tea	212°F	1 - 10 Minutes	--
03. Green Tea	170°F	1 - 10 Minutes	--
04. White Tea	160°F	1 - 10 Minutes	--
05. Fruit Tea	212°F	1 - 20 Minutes	--
06. Herbal Tea	212°F	5 Minutes - 2 Hours	30 Minutes - 9½ Hours
07. Milk Tea	200°F	1 - 10 Minutes	--
08. Oolong	185°F	1 - 10 Minutes	--
09. White Fungus	212°F	5 Minutes - 2 Hours	30 Minutes - 9½ Hours
10. Bird's Nest	212°F	5 Minutes - 1½ Hour	30 Minutes - 9½ Hours
11. Dessert	212°F	5 Minutes - 1½ Hour	30 Minutes - 9½ Hours
12. Chinese Herbs	212°F	5 Minutes - 1½ Hour	--
13. Porridge	212°F	5 Minutes - 1½ Hour	30 Minutes - 9½ Hours
14. Soup	212°F	5 Minutes - 1½ Hour	30 Minutes - 9½ Hours
15. Manual	100°F - 200°F, 212°F	5 Minutes - 1 Hour	--
16. Keep Warm	93°F - 193°F	1-8 Hours	--

Limited Warranty

Aroma Housewares Company warrants its products against defects in material and workmanship for one year from the date the customer takes possession of the product in the United States. For in-store purchases, this is the purchase date. For online or delivery orders, this is the delivery date.

Within this warranty period, Aroma Housewares Company will repair or replace, at its discretion, defective parts at no charge. Proof of the date of purchase, such as the original dated sales receipt, will be required with any request for warranty repair or replacement. All liability is limited to the amount of the purchase price.

This warranty does not apply if the warranty period expired; the product has been modified by any unauthorized service center or personnel; the defect was subject to abuse, improper use not conforming to product manual instructions, or environmental conditions more severe than those specified in the manual and specification, neglect of the owner or improper installation; the defect was subject to Force Majeure such as flood, fire, lightning, earthquake, other natural calamities, war. The warranty excludes accessories and replacement parts. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V ~ 60Hz).

Aroma sole obligation under the warranty shall be to replace the defective product with a working one or a similar model of equivalent value, if the same model is not available, in the occurrence of any failure or defect covered under the warranty during the warranty period. Refurbished items or items not purchased through an authorized retailer are not eligible for warranty claims. Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

This warranty gives you specific legal rights, which may vary from state to state, and does not cover areas outside the United States.

Service & Support

In the event of a warranty claim, or if service is required for this product, please contact Aroma® customer service toll-free at:

1-800-276-6286 | **CustomerService@AromaCo.com**
M-F, 8:00am-4:00pm, Pacific Time

www.AromaCo.com

Aroma Housewares Company
6469 Flanders Drive, San Diego, CA 92121, U.S.A.

Note:

- Proof of purchase is required for all warranty claims.
- Failure to register your product will not diminish your warranty rights.
- Not satisfied with your Aroma® purchase? Our product experts can help! **Before returning, please contact Customer Service at 1-800-276-6286** for product support, helpful tips and more!



To Enhance and Enrich Lives.

www.AromaCo.com