490x130mm,105g铜版纸，双面黑白印刷，折页

BougeRV

Work Light
Quickstart Guide

WL02

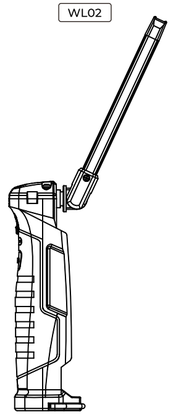

V01

IN THE BOX

WL02

USB Charging Cable

SPECIFICATIONS

	Middle	High	Low	High (Red)	Strobe (Red)	Middle	High
	220 LM	550 LM	22 LM	30 LM	30 LM	40 LM	80 LM
	4 H	2.5 H	35 H	7 H	49 H	16 H	8 H
	20 M	31 M	6 M	7M	7M	9 M	12 M
	COB(Flood light)					LED(Focus light)	
	6500 K			650 nm		6500 K	
	1x18650 3.7V/2000mAh/7.4Wh						
	5V-1A				33×270×45 mm		
	3 H			IPX4		175 g	

PRODUCT OVERVIEW

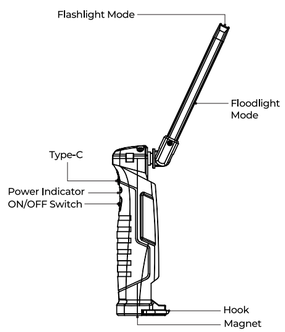

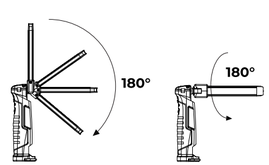

BATTERY LEVEL INDICATOR



● ● ● ●
4 blue lights on 95%-100%

● ● ● ○
3 blue lights on 65%-95%

● ● ○ ○
2 blue lights on 35%-65%

● ○ ○ ○
1 blue light on 15%-35%

✥ ○ ○ ○
1 blue light strobe <15%

CHARGING



✥ ○ ○ ○ <15%, 1 blue light strobe
● ✥ ○ ○ 15%-35%, 1 blue light on, the second one strobe
● ● ✥ ○ 35%-65%, 2 blue lights on, the third one strobe
● ● ● ✥ 65%-95%, 3 blue lights on, the fourth one strobe
● ● ● ● 95%-100%, 4 blue lights on

* Before first use please fully charge the product.
* Connect the USB end of the Type-C to an external USB power source, then attach the other end of the cable to the charging port of the light (best charging efficiency with a 5V 1A USB power source).
* Battery capacity: 2600mAh
* Time to fully charge: About 3.7 Hours

HOW TO OPERATE

On/Off
Press the power button once to turn on. Press the power button again after 3 seconds to turn off.

Brightness Adjustment
When the light is on, short press the power button within 3 seconds to adjust the brightness.

The sequence is as follows:
1. Floodlight Mode: Medium Brightness -> High Brightness -> Low Brightness -> Red Light -> Red Light Flashing -> Off (COB Floodlight Mode)
2. Flashlight Mode: Medium Brightness -> High Brightness -> Off

Mode Switching
When the light is on, long press the power button to switch lighting modes.

同梱物

WL02

USB充電ケーブル

仕様

	中輝度	高輝度	低輝度	高輝度 (赤ライト)	点滅 (赤ライト)	中輝度	高輝度
	220 LM	550 LM	22 LM	30 LM	30 LM	40 LM	80 LM
	4 H	2.5 H	35 H	7 H	49 H	16 H	8 H
	20 M	31 M	6 M	7M	7M	9 M	12 M
	COB(フォーカスライト)					LED (フォーカスライト)	
	6500 K			650 nm		6500 K	
	1x18650 3.7V/2000mAh/7.4Wh						
	5V-1A				33×270×45 mm		
	3 H			IPX4		175 g	

各部の名称

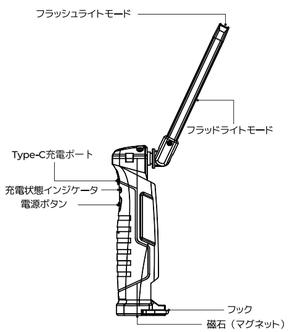

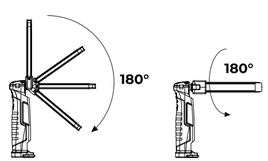

バッテリー残量表示

● ● ● ●
95%-100%: 青色ランプ4つ点灯

● ● ● ○
65%-95%: 青色ランプ3つ点灯

● ● ○ ○
35%-65%: 青色ランプ2つ点灯

● ○ ○ ○
15%-35%: 青色ランプ1つ点灯

✥ ○ ○ ○
<15%: 青色ランプ1つ点滅

充電



✥ ○ ○ ○ 15%未満: 1番目の青色ランプ点滅
● ✥ ○ ○ 15%-35%: 1番目の青色ランプ点灯 + 2番目の青色ランプ点滅
● ● ✥ ○ 35%-65%: 2つの青色ランプ点灯 + 3番目の青色ランプ点滅
● ● ● ✥ 65%-95%: 3つの青色ランプ点灯 + 4番目の青色ランプ点滅
● ● ● ● 95%-100%: 4つの青色ランプ点灯

·初回使用時: 必ず満充電してください。
·充電方法:
Type-Cケーブルの USB端を電源に接続
もう一方を製品の充電ポートに接続
※推奨電源: 5V/1A USB電源（最適な充電効率）
·バッテリー容量: 2600mAh
·満充電時間: 約3.7時間

操作方法

電源のオン/オフ：
電源ボタンを1回押すと点灯します。3秒後に再度電源ボタンを押すと消灯します。

明るさの調整：
点灯状態で、3秒以内に電源ボタンを短く1回押すと明るさを調整できます。順序は以下の通りです：

フラッドライトモード：中輝度 → 高輝度 → 低輝度 → 赤色光 → 赤色光点滅 → 消灯
フラッシュライトモード：中輝度 → 高輝度 → 消灯

モード切替：
点灯状態で、電源ボタンを長押しすると照明モードを切り替えることができます。

IM LIEFERUMFANG

WL02

USB-Ladekabel

TECHNISCHE DATEN

	Mittel	Hoch	Niedrig	Hoch (Rot)	Strobe (Rot)	Mittel	Hoch
	220 LM	550 LM	22 LM	30 LM	30 LM	40 LM	80 LM
	4 H	2.5 H	35 H	7 H	49 H	16 H	8 H
	20 M	31 M	6 M	7M	7M	9 M	12 M
	COB(Flutlicht)					LED(Fokuslicht)	
	6500 K			650 nm		6500 K	
	1x18650 3,7V/2000mAh/7,4Wh						
	5V-1A				33×270×45 mm		
	3 H			IPX4		175 g	

PRODUKTÜBERSICHT

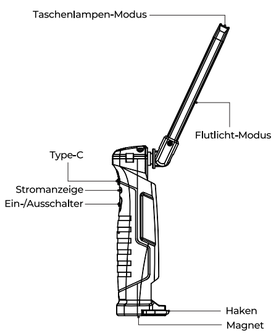

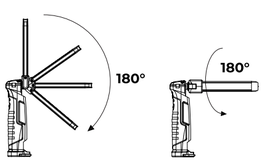

AKKU-STANDANZEIGE

● ● ● ●
4 blaue Lichter (95%-100%)

● ● ● ○
3 blaue Lichter (65%-95%)

● ● ○ ○
2 blaue Lichter (35%-65%)

● ○ ○ ○
1 blaues Licht (15%-35%)

✥ ○ ○ ○
1 blaues Blinklicht (<15%)

LADEHINWEISE



✥ ○ ○ ○ <15%: 1 blaues Blinklicht
● ✥ ○ ○ 15%-35%: 1 konstantes blaues Licht + 1 Blinklicht
● ● ✥ ○ 35%-65%: 2 konstante blaue Lichter + 1 Blinklicht
● ● ● ✥ 65%-95%: 3 konstante blaue Lichter + 1 Blinklicht
● ● ● ● 95%-100%: 4 blaue Lichter an

* Vor der ersten Nutzung vollständig aufladen.
* USB-Ende mit Netzteil verbinden (optimal: 5V/1A), Typ-C-Stecker in die Lampe einstecken.
* Akkukapazität: 2600 mAh
* Volladezeit: ca. 3,7 Stunden

OPERATION

Ein-/Ausschalten:
Drücken Sie die Einschalttaste einmal, damit die Lampe aufleuchtet. Drücken Sie nach 3 Sekunden erneut die Einschalttaste, um das Gerät auszus-chalten.

Helligkeitseinstellung:
Wenn das Licht eingeschaltet ist, drücken Sie innerhalb von 3 Sekunden einmal die Einschalttaste, um die Helligkeit anzupassen. Die Reihenfolge ist wie folgt:
1. Flutlichtmodus: mittlere Helligkeit – hohe Helligkeit – niedrige Helligkeit – rotes Licht → rotes Licht blinkt – aus (COB-Flutlichtmodus)
2. Taschenlampenmodus: Mittlere Helligkeit - Hohe Helligkeit - Aus

Modusschalter:
Wenn das Licht eingeschaltet ist, drücken Sie lange auf die Einschalttaste, um den Beleuchtungsmodus umzuschalten

BougeRV