CYBER Aqualand NX
Mvmt. Cal. D710/D716
Abbreviated Setting Instructions

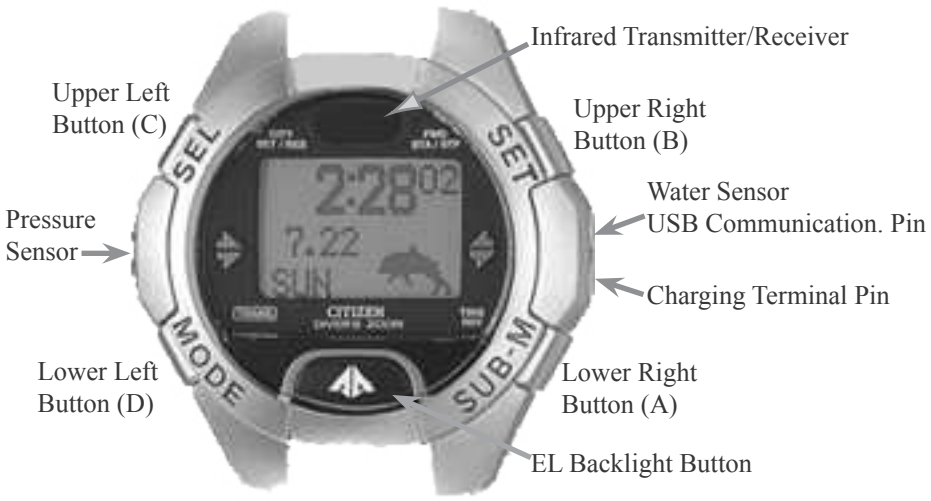

NOTE: This watch features a special "low power mode" to conserve the amount of energy used by the watch. The low power mode can be activated by simultaneously pressing the lower left button (D) and the lower right button (A) for two to three seconds. The watch will then show the time. You may toggle between the time and date by pressing and releasing the lower right button (A) when in the low power mode.

NOTE: **If the charge of the energy cell reaches a low charge state, the watch will switch to low power mode automatically. If the charge is not sufficient for operation in the low power mode, the display will go blank. At that time, the watch must be fully charged before setting and/ or use.**

NOTE: Since all functions except for the time/date display and correction functions do not operate in the low power mode, do not use this mode when using (wearing) the watch under normal circumstances.

Setting the Time and Date

The time and date can be set in either the full operating or low power mode. If the display is blank, it may need to be reactivated by simultaneously pressing and holding the lower left button (D) and lower right button (A) for two seconds. If the display continues to remain blank after this procedure, you will need to fully charge the watch before proceeding.

☐Press and hold the upper left button (C) for two seconds and release. The 'location' will flash. Press and release either the upper right button (B) or lower right button (A) to set your location

☐Press and release the upper left button (C). The 'daylight savings time' indicator (ST) will flash. Press and release either the upper right button (B) or lower right button (A) to turn daylight savings time 'ON' or 'OFF'.

☐Press and release the upper left button (C). The 'seconds' will flash. Press and release either the upper right button (B) or lower right button (A) to reset the seconds to zero.

☐Press and release the upper left button (C). The 'minutes' will flash. Press and release the upper right button (B) to advance the minutes or lower right button (A) to decrement the minutes.

☐Press and release the upper left button (C). The 'hours' will flash. Press and release the upper right button (B) to advance the hours or lower right button (A) to decrement the hours. Be sure to note the correct AM or PM time. An "A" will flash with the hour indicting AM hours, while a "P" will flash with the hours indicating PM hours.

☐Press and release the upper left button (C). The 'year' will flash. Press and release the upper right button (B) to advance the year or lower right button (A) to decrement the year.

☐Press and release the upper left button (C). The 'month' will flash. Press and release the upper right button (B) to advance the month or lower right button (A) to decrement the month.

☐Press and release the upper left button (C). The 'date' will flash. Press and release the upper right button (B) to advance the date or lower right button (A) to decrement the date.

☐Press and release the upper left button (C). The '12H' will flash. Press and release the either the upper right button (B) lower right button (A) to change from 12 hour or 24 hour time display.

☐Press and release the upper left button (C). The 'CONT' will flash. Press and release the upper right button (B) to increase the contrast or lower right button (A) to decrease the contrast.

☐Press and release the upper left button (C) to finalize the setting of the time and date

For details on how to set and use the many other features of the Cyber Aqualand NX, be sure to refer to your detailed setting guide. Detailed setting guides can also be found on our web site at: www.citizenwatch.com.