
SIGNATURE FLYBACK CHRONOGRAPH TECHNICAL OVERVIEW

CALIBER E260

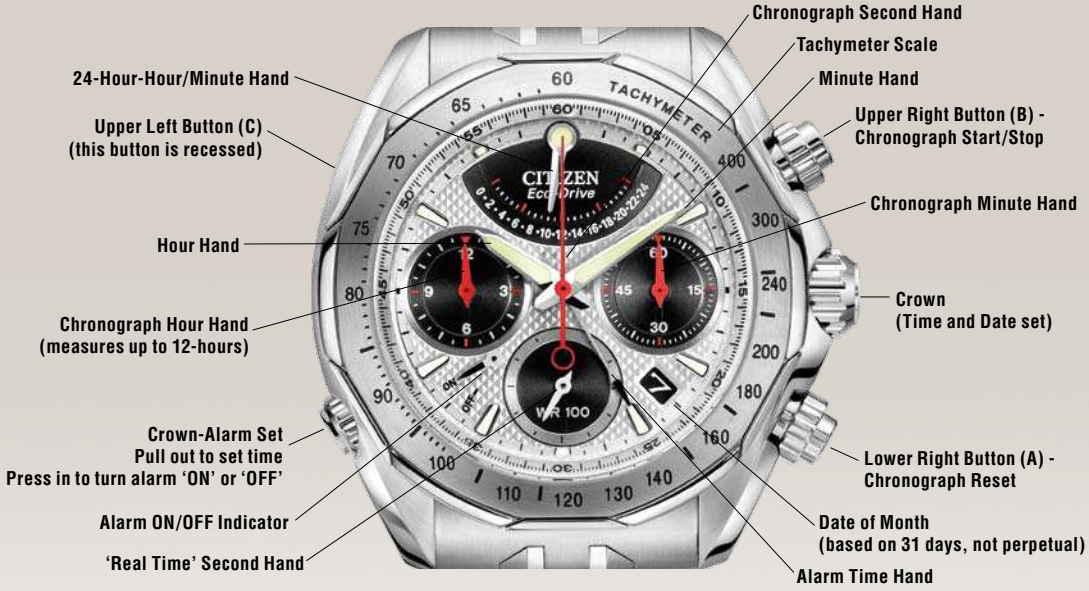

IMPORTANT NOTE: After a complete loss of power, a sharp knock, static electricity or magnetism, you may find your watch is not operating correctly. If this occurs, you will need to fully recharge your watch and perform the ALL RESET procedure as outlined below.

NOTE: Your watch may feature a screw down crown at the 3:00 position. If so, unscrew the crown by rotating it counterclockwise to release it from the case before performing the All Reset procedure, setting the time or calendar. Be sure to screw the crown into the case by gently pushing and turning clockwise after completing any of these procedures.

ALL RESET PROCEDURE
AND 0-POSITIONING PROCEDURE

- Pull the crown out two 'clicks' to the time setting position.
- Simultaneously press and hold the upper left and lower right buttons (C & A) for two seconds and release. **NOTE:** the upper left button (C) is recessed into the case and will require a narrow object such as a wooden toothpick or the tip of a pair of pointed tweezers.
- The alarm tone will sound and the 24-hour hour/minute hand will move to its zero position indicating the All Reset procedure is successful.

If the 24-hour hand does not go to its correct 0-position as shown in the graphic below:



24-Hour Indicator 0-Position

Press and release the upper left recessed button (C) to move it to the correct 0-position. (NOTE: the upper left button (C) is recessed into the case and will require a narrow object such as a wooden toothpick or the tip of a pair of pointed tweezers.)

- Push the 3:00 positioned crown in two 'clicks' to the closed position next to the case.

TO SET THE TIME AND DATE

- When the 'real time' second hand (6:00 sub dial) reaches the 12:00 position, pull the 3:00 positioned crown out two 'clicks'.
- Rotate the 3:00 positioned crown clockwise until you see the date start to change. Use this time shown as a night time reference and continue to rotate the crown until your current time is shown. This will ensure the date changes at "night" rather than during the "day".
- Push the 3:00 positioned crown in two 'clicks' to the closed position. You must now continue with setting the calendar.

TO SET THE CALENDAR


NOTE: The calendar is based on a 31-day month and therefore must be corrected for each month having less than 31 days. Be sure the time shown is not between 11:00 p.m. and 2:00 a.m. before proceeding.

- Pull the 3:00 positioned crown out one 'click'.
- Rotate the 3:00 positioned crown counterclockwise until the correct date is shown.
- Push the 3:00 positioned crown in one 'click' to the closed position.

TO SET THE 24-HOUR INDICATOR

The 24-hour indicator represents not only hours but approximate minutes as well. This hand advances every 15 minutes. The setting is independent from the 'regular' hour and minute hands. Please keep this in mind when setting this feature.

- To set the hours: Press and release the upper left button (C) to change the hours. This indication moves in full hour increments only.
- To set the minutes: For the most accurate setting; when the minute hand is at one of the hour indices (12,1,2,3,4,5, etc.) and the true second hand (6:00 sub dial) reaches 12:00, pull the 3:00 positioned crown out two 'clicks'. If this is not done, the setting will be approximate and may not coordinate with the time set on the hour and minute hands.
- Press and release the upper left button (C) to change the approximate minute indication. Each hour indicator of the 12:00 sub dial represents 5 minutes:

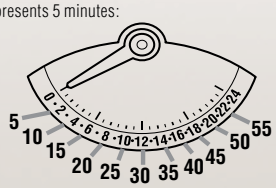

- Push the 3:00 positioned crown in two 'clicks'.

TO SET THE ALARM

When activated (turned 'ON') the alarm will sound at the set time once every 12 hours for approximately 20 seconds. The alarm accuracy may have a variance of 3 to 5 minutes before or after the set time.

- Pull the 8:00 positioned crown out one 'click'.
- Rotate the 8:00 positioned crown clockwise to move the alarm indicator hand 1/2 hour past the desired set time.
- Rotate the 8:00 positioned crown counterclockwise to the desired set time.
- Push the 8:00 positioned crown in one 'click' to the closed position.

TO ACTIVATE (TURN ON) OR DEACTIVATE
(TURN OFF) THE ALARM

- With the 8:00 positioned crown in the closed position, press and release the crown to move the alarm indicator hand to 'ON' or 'OFF'.
- When the alarm sounds, press and release the 8:00 positioned crown to move the indicator hand to the 'OFF' position. If the alarm is allowed to ring without manually turning the alarm to 'OFF', it will sound for 20 seconds and repeat the cycle in another 12 hours.

NOTE: While the 8:00 positioned crown requires a firm push to turn the alarm on or off, it does not require the effort the chronograph stop/start button requires (upper right button B).

TO USE THE 12-HOUR CHRONOGRAPH

NOTE: When chronograph timing has reached 12-hours, the chronograph will stop. If this happens you will need to press and release the lower right button (A) to reset the chronograph before commencing new timing.

- Firmly press and release the upper right button (B) to start the chronograph. The chronograph second hand will start to move in 1/5 second increments.
- Firmly press and release the upper right button (B) to stop the chronograph.
- Firmly press and release the lower right button (A) to reset the chronograph.

For more in-depth instructions, please visit the Setting Instructions section of our website at citizen-signature.com.