Disney

DASH

FEEL GOOD DOUBLE YOUR WARRANTY REWARDS





DSB10002

STORYBOOK WAFFLE MAKER

Instruction Manual | Recipe Guide

Disney

DASH

1-800-898-6970 | @bydash | bydash.com

©Disney

www.Disney.com



PARTS & FEATURES



BEFORE FIRST USE

Before first use, remove all packaging material and thoroughly clean the Cooking Surfaces with a damp, soapy cloth.



Never touch the Cooking Surface or Cover while appliance is in use.




The Maker can only be opened by releasing the Safe-Close Latch. To open, press the button to release the Latch, then carefully lift the Cover by the Cover Handle upward.



Use extreme caution when opening the Maker when it is in use. To avoid injury, use an oven mitt to open & close the Safe-Close Latch when preheating, cooking, & removing food.


USING THE MAKER

1.

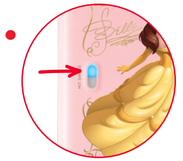

Place the appliance on a stable and dry surface. Plug the cord into a power outlet. The Blue Indicator light signals that the Maker is preheating.

2.

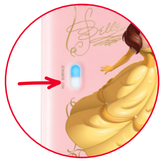

Once the Cooking Surface reaches cooking temperature, the White Indicator Light will light up; it's time to begin cooking.

3.



While wearing an oven mitt, press the button to release the Safe-Close Latch, then carefully lift the Cover by the Cover Handle.

Grease both Cooking Surfaces with a small amount of non-aerosol cooking oil.

4.



Place food or batter on the Cooking Surface. Do NOT slam the cover of the Maker shut. To close, gently lower the Cover using the Cover Handle. Press the button to open the Safe-Close Latch. Once the Cover is fully in place, release the Latch—it will click to lock.

NOTE: The Latch must be securely closed in order to ensure proper cooking.



NOTE: Aerosol cooking sprays often contain soy lecithin, an additive that can cause ceramic nonstick surfaces to become sticky and hard to clean over time. To ensure the longevity of your product, avoid aerosols and instead grease cooking surfaces using a silicone basting brush or a non-aerosol spray bottle.

5.



Once food is cooked, while wearing an oven mitt, carefully release the Safe-Close Latch and lift the Cover by the Cover Handle. Carefully remove food from the Cooking Surface with a heat-resistant nylon, wood, or silicone cooking utensil.

NOTE: Do not use metal utensils to remove or place food on the Cooking Surface as this will damage the nonstick surface.

6.



When finished cooking, unplug the Maker and allow it to cool before moving or cleaning.



CLEANING & MAINTENANCE

Always allow the appliance to cool completely before moving, cleaning, or storing. Do not submerge appliance in water or any other liquids. Never use abrasive cleaning agents to clean your appliance as this may damage the Maker.

In order to keep the Maker in pristine working order, thoroughly clean the appliance after each use. This will prevent the build-up of food or oil.

- Unplug the Maker and allow it to cool completely prior to cleaning.
- Using a damp, soapy cloth, wipe down the Cooking Surface and Cover. Thoroughly rinse the cloth and wipe again.
- Thoroughly dry the Maker before storing.
- If there is food burned onto the Cooking Surface, apply a small amount of cooking oil and let sit for 5 to 10 minutes. Scrub the Cooking Surface with a sponge or soft bristled brush to dislodge food. Use a damp, soapy cloth to wipe down the Cooking Surface. Thoroughly rinse the cloth and wipe again. If any food remains, apply cooking oil again and let sit for a few hours, then scrub and wipe clean.
- Never use abrasive cleaning agents to clean the appliance, as this may damage its nonstick Cooking Surface.

TROUBLESHOOTING

While Dash products are durable, you may encounter one or more of the problems listed below. If the issue is either not solved by the solutions recommended below or not included on this page, please contact our Customer Support team at 1-800-898-6970 or support@bydash.com.

ISSUE	SOLUTION
How do I know when the Maker is heated and ready to use?	Once plugged in, the Blue Indicator Light will illuminate indicating the Maker is preheating. When the Maker reaches the optimal temperature, the White Indicator Light will illuminate indicating that it's ready to begin cooking.
There is no On/Off Button. How do I turn the Maker off and on?	To turn on, simply plug in the power cord. When finished cooking, unplug the Maker to power it off.
When using the Maker, the Cover gets very hot. Is this normal?	Yes, this is completely normal. To prevent personal injury, always wear an oven mitt when lifting and lowering the Cover, and always use the Cover Handle. NEVER position your bare arm over the Cooking Surface as it is hot and may cause injury.

IMPORTANT SAFEGUARDS: READ AND SAVE THESE INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions.
- For household use only.
- Remove all bags and packaging from appliance before use.
- Never leave appliance unattended when in use.
- Make sure the appliance is cleaned thoroughly before using.
- Do not use appliance for other than intended use. Do not use outdoors.
- Warning: Hot surfaces! Never touch the Cooking Surface or Cover while appliance is in use. Always lift and lower the Cover by the Cover Handle. To prevent injury, use an oven mitt while lifting and lowering the Cover & Cover Handle.
- To prevent the risk of fire, electric shock, or personal injury, do not put cord, plug, or appliance in or near water or other liquids. The Maker is NOT dishwasher safe.
- This appliance is not a toy. Do not let children use this appliance. Close supervision is necessary when any kitchen appliance is used by or near children.
- Never use abrasive cleaning agents to clean the appliance as this may damage the Maker and its nonstick Cooking Surface.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- DO NOT use the Maker near water or other liquids, with wet hands, or while standing on a wet surface.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 Monday – Friday or by email at support@bydash.com.
- Do not use metal utensils on the Cooking Surface as this will damage the nonstick surface.
- This appliance can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience of knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Use extreme caution when moving an appliance containing hot oils or other hot liquids.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Allow Maker to cool completely before moving, cleaning, or storing.
- Close supervision is necessary when any appliance is used by or near children.
- Do not let the cord touch hot surfaces or hang over the edge of tables or counters.
- Always be sure to unplug the appliance from outlet prior to moving, cleaning, storage, and when not in use.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the Maker can result in property damage or even in personal injury.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- A short power supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

IMPORTANT SAFEGUARDS: READ AND SAVE THESE INSTRUCTIONS



CLASSIC WAFFLE

Prep Time: *5-10 minutes* • ***Cook Time:*** *20-25 minutes* • ***Serves:*** *4-6*

Ingredients:

1 cup flour
1 tablespoon sugar
2 teaspoons baking powder
¼ teaspoon salt
1 egg
1 cup milk
2 tablespoons melted butter or vegetable oil

Directions:

1. In a medium bowl, sift flour, sugar, baking powder, and salt. Set aside.
2. In a separate small mixing bowl, whisk egg, milk, and melted butter or oil until combined.
3. Add wet ingredients to the dry and mix until just combined.
4. Preheat the Maker and grease Cooking Surfaces with a light coating of cooking oil. Pour 3-4 tablespoons of batter into each waffle mold and cook until golden brown, about 3-4 minutes. Repeat with remaining batter.
5. Serve with a drizzle of maple syrup and garnish with fresh berries, if desired, and enjoy your waffly delicious creation!



ROYAL ICING

Prep Time: *5 minutes* • ***Serves:*** *3-4*

Ingredients:

3 egg whites
1 teaspoon vanilla extract
4 cups powdered sugar
Food coloring of choice, as desired

Directions:

1. In a large mixing bowl, add egg whites and vanilla extract. Use a hand mixer on low to mix until frothy.
2. Slowly add in powdered sugar on low speed until it's incorporated and mixture is shiny. If using, add food coloring.
3. Raise to high speed and beat until a mixture with stiff, glossy peaks forms.



THE ENCHANTED RED ROSE VELVET WAFFLE

Prep Time: *5-10 minutes* • ***Cook Time:*** *15-20 minutes* • ***Serves:*** *4-6*

Ingredients:

Waffles:


2 tablespoons unsalted butter
1 cup all-purpose flour
2 tablespoons white granulated sugar
2 tablespoons cocoa powder
½ teaspoon baking powder
½ teaspoon baking soda
¼ teaspoon cinnamon
½ teaspoon salt
1 cup buttermilk
1 large egg
1 teaspoon vanilla extract
½ tablespoon red food coloring

Cream Cheese Icing:

1 tablespoon butter, melted
1 tablespoon cream cheese, softened
¼ cup powdered sugar
¼ teaspoon vanilla extract

Directions:

1. On the stovetop in a small pan over low heat, melt butter. After fully melted, remove heat so butter is not hot when added to the mix.
2. In a mixing bowl, add all dry ingredients and mix to combine. Set aside.
3. In a separate bowl, whisk egg and slowly stir in buttermilk, melted butter, vanilla, and food coloring.
4. Add wet ingredients to the dry and mix until just combined.
5. Preheat the Maker and grease Cooking Surfaces with a light coating of cooking oil. Pour 3-4 tablespoons of batter into each waffle mold and cook until golden brown, about 3-4 minutes. Repeat with remaining batter.
6. To make cream cheese icing, add melted butter and cream cheese to a medium bowl and mix until well-combined. Stir in powdered sugar and vanilla extract.
7. Serve waffles warm, top with icing, and indulge in this velvety delight!

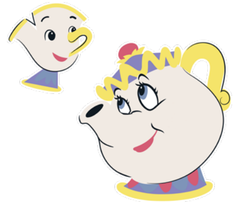



GASTON'S VANILLA PROTEIN WAFFLE

Prep Time: *5-7 minutes* • ***Cook Time:*** *12-15 minutes* • ***Serves:*** *2-3*

Ingredients:

½ cup old fashioned or quick cook oats
1 egg
1 egg white
½ cup Greek yogurt
1 scoop (about ¼ cup) protein powder
½ teaspoon baking powder
1 teaspoon vanilla

Directions:

1. Add all ingredients to a blender or food processor and blend until smooth.
2. Preheat the Maker and grease Cooking Surfaces with a light coating of cooking oil. Pour 3-4 tablespoons of batter into each waffle mold and cook until golden brown, about 3-4 minutes. Repeat with remaining batter.
3. Serve with nut butter for even more protein or top with fresh berries for an invigorating start to your day!

WARRANTY

STOREBOUND, LLC – 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at support@bydash.com for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. StoreBound will not ship to a PO Box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

All replacement inquiries are to be submitted to support@bydash.com or contact Customer Support at 1-800-898-6970. There are no express warranties except as listed above.

Warranty is voided if used outside of the 50 states of the United States, the District of Columbia or the 10 provinces of Canada. Warranty is voided if used with an electric adapter/converter or used with any voltage plug other than 120V.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Refurbished items or items not purchased through an authorized retailer are not eligible for warranty claims.

REPAIRS

DANGER! Risk of electric shock! The Dash Storybook Waffle Maker is an electrical appliance.

Do not attempt to repair the appliance yourself under any circumstances.

Contact Customer Support regarding repairs to the appliance.

TECHNICAL SPECIFICATIONS

Wattage: 700W
Voltage: 120V
Frequency: 60hZ

Stock#: DSB10002_20260113_v2


FEEL GOOD DOUBLE YOUR WARRANTY REWARDS

We want you to Feel Good about your Dash products! Sign up for our Feel Good Rewards program at bydash.com/feelgood to DOUBLE your warranty, part of our commitment to quality and customer satisfaction.

We're here to help! Our customer support teams in the US and Canada are at your service Monday - Friday. Contact us at **1 (800) 898-6970** or **support@bydash.com**.

SCAN HERE!

BYDASH.COM/HELP

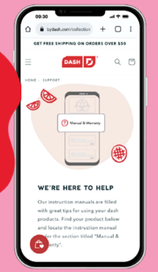

DOUBLE YOUR WARRANTY

bydash.com/feelgood

support@bydash.com

1(800) 898-6970

Monday-Friday

Follow us!

bydash.com
@bydash
@unprocessyourfood