Disney

DASH

FEEL GOOD
DOUBLE
YOUR WARRANTY
REWARDS



DMW10012

MINI WAFFLE MAKER

Instruction Manual | Recipe Guide










WELCOME TO THE FOODIE FAMILY

We hope you *love* our products as much as our team does.



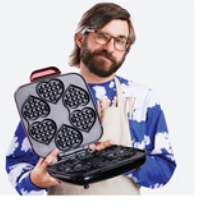


MINI WAFFLE MAKER

Important Safeguards 4-6

Parts & Features 7

Using the Mini Waffle Maker 8-11

Troubleshooting 12-13

Cleaning & Maintenance 14

Recipes 15-21

Customer Support 22

Warranty 23

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions.
- Remove all bags and packaging from appliance before use.
- Never leave appliance unattended when in use.
- Make sure the appliance is cleaned thoroughly before using.
- Do not use appliance for other than intended use. For household use only. Do not use outdoors.
- Warning: Hot surfaces! Never touch the Cooking Surface or Cover while appliance is in use. Always lift and lower the Cover by the Cover Handle.
- DO NOT lift the Cover with your arm positioned over the Removable Plates. They are hot and may cause injury.
- To prevent the risk of fire, electric shock, or personal injury, do not put cord, plug, or appliance in or near water or other liquids. The Mini Waffle Maker is NOT dishwasher safe.
- Never use abrasive cleaning agents to clean the appliance as this may damage the Mini Waffle Maker and its nonstick Cooking Surface.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- DO NOT use the Mini Waffle Maker near water or other liquids, with wet hands, or while standing on a wet surface.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 Monday – Friday or by email at support@bydash.com.

- Do not use metal utensils on the Cooking Surface as this will damage the nonstick surface.
- This appliance can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience of knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Allow Mini Waffle Maker to cool completely before moving, cleaning, or storing.
- Close supervision is necessary when any appliance is used by or near children.
- Do not let the cord touch hot surfaces or hang over the edge of tables or counters.
- Always be sure to unplug the appliance from outlet prior to moving, cleaning, storage, and when not in use.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the Mini Waffle Maker can result in property damage or even in personal injury.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

- A short power supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.


Indicator Light
Cover Handle
Cover
Non-Slip Feet
Cooking Surfaces

USING THE MINI WAFFLE MAKER

Before first use, remove all packaging material and thoroughly clean the Waffle Maker.




Never touch the Cooking Surface or Cover while appliance is in use.



DO NOT lift the Cover with your arm positioned over the Cooking Surface. They are hot and may cause injury.



Always lift and lower the Cover by the Cover Handle. Lift from the side.

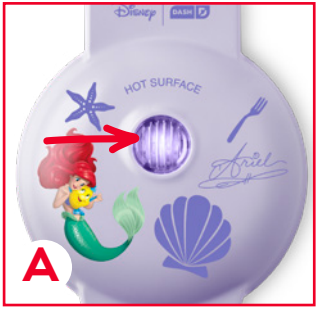



1 Place the appliance on a stable and dry surface. Plug the cord into a power outlet. The Indicator Light **(photo A)** will illuminate signaling that the Mini Waffle Maker is heating up.

2 Once the Cooking Surface reaches the optimal cooking temperature, the Indicator Light will automatically shut off indicating that the Maker is ready to begin cooking **(photo B)**.

USING THE MINI WAFFLE MAKER





3 Carefully lift the Cover by the Cover Handle and grease both Cooking Surfaces with a small amount of cooking oil **(photo C)**.

4 Pour batter onto the Cooking Surface **(photo D)** and close the Cover.



NOTE: Aerosol cooking sprays often contain soy lecithin, an additive that can cause ceramic nonstick surfaces to become sticky and hard to clean over time. To ensure the longevity of your product, avoid aerosols and instead grease cooking surfaces using a silicone basting brush or a non-aerosol spray bottle.





5 Once waffle is cooked to desired doneness, carefully remove it from the Cooking Surface with a heat-resistant nylon, wood, or silicone cooking utensil **(photo E)**.

NOTE: Do not use metal utensils to remove or place food on the Cooking Surface as this will damage the ceramic nonstick surface.

6 When finished cooking, unplug the Mini Waffle Maker and allow it to cool before moving or cleaning **(photo F)**.

TROUBLESHOOTING

While Dash products are durable, you may encounter one or more of the problems listed below. If the issue is either not solved by the solutions recommended below or not included on this page, please contact our Customer Support Team at **1-800-898-6970** or **support@bydash.com**.

ISSUE	SOLUTION
The light on the Mini Waffle Maker keeps shutting off.	This is normal. During the cooking process, the heating element will automatically turn on and off to regulate the temperature and ensure that the Cooking Surfaces do not get too hot or cold. When this occurs, the Indicator Light turns on and off.
How do I know when the Mini Waffle Maker is heated and ready to use?	When the Mini Waffle Maker reaches the optimal temperature, the Indicator Light shuts off to indicate that it's time to start cooking.
There is no On/Off Button. How does the Mini Waffle Maker off and on?	To turn on, simply plug in the power cord. When finished cooking, turn off the Mini Waffle Maker by unplugging it.

ISSUE	SOLUTION
When using the Mini Waffle Maker, the Cover gets very hot. Is this normal?	Yes, this is completely normal. When using the Mini Waffle Maker, always lift and lower the Cover by the Cover Handle. To prevent personal injury, DO NOT lift the Cover with your arm positioned over the Cooking Surface. They are hot and may cause injury. Lift from the right side.
After using the Mini Waffle Maker a few times, food is starting to stick to the surface. What is happening?	There is probably a build-up of burnt food residue on the Cooking Surfaces. This is normal, especially when cooking with sugar. Allow the appliance to cool fully. Then, use a damp, soapy cloth to wipe down the Cooking Surface. Thoroughly rinse the cloth and wipe again. If any food remains, apply a small amount of cooking oil and let sit for a few hour. Then scrub with a soft bristled brush or soft sponge to wipe clean.
The Indicator Light will not turn on and the cooking surfaces are failing to heat.	1. Ensure that the power cord is plugged into the power outlet. 2. Check to make sure the power outlet is operating correctly. 3. Determine if a power failure has occurred in your home, apartment or building.

CLEANING & MAINTENANCE

Always allow the appliance to cool completely before moving, cleaning, or storing. Do not submerge appliance in water or any other liquids.

In order to keep the Mini Waffle Maker in pristine working order, thoroughly clean the appliance after each use once it cools off. This will prevent the build-up of food or oil.

- Unplug the Mini Waffle Maker and allow it to cool completely prior to cleaning.
- Using a damp, soapy cloth, wipe down the Cooking Surface and Cover. Thoroughly rinse the cloth and wipe again.
- Thoroughly dry the Mini Waffle Maker before storing.
- If any food remains, apply a small amount of cooking oil and let sit for 5-10 minutes. Then scrub the Cooking Surface with a sponge or soft-bristled brush to dislodge food. Use a damp, soapy cloth to wipe from Cooking Surface. Rinse the cloth thoroughly and wipe again. If food still remains, apply cooking oil once more and let sit for a few hours before scrubbing again.
- Never use abrasive cleaning agents to clean the appliance as this may damage its ceramic nonstick Cooking Surface.

RECIPE GUIDE





CLASSIC WAFFLE

Prep Time: *5-10 minutes* • ***Cook Time:*** *20-25 minutes* • ***Serves:*** *8*

Ingredients:

1 cup flour
1 tablespoon sugar
2 teaspoons baking powder
¼ teaspoon salt
1 egg
1 cup milk
2 tablespoons vegetable oil

Directions:

1. In a medium bowl, sift flour, sugar, baking powder, and salt. Set aside.
2. In a separate small mixing bowl, whisk egg, milk, and oil until combined.
3. Add wet ingredients to the dry and mix until just combined.
4. Preheat the Mini Waffle Maker and grease with a light coating of cooking oil. Pour 3-4 tablespoons of batter into the Mini Waffle Maker and cook until golden brown, about 3-4 minutes. Repeat with remaining batter.
5. Serve with a drizzle of maple syrup and garnish with fresh berries, if desired, and enjoy this waffly delicious breakfast!



ROYAL ICING

Prep Time: *5 minutes* • ***Serves:*** *3-4*



Ingredients:

3 egg whites

1 teaspoon vanilla extract

4 cups powdered sugar

Food coloring of choice, as desired

Directions:

1. In a large mixing bowl, add egg whites and vanilla extract. Use a hand mixer on low to mix until frothy.
2. Slowly add in powdered sugar on low speed until it's incorporated and mixture is shiny. If using, add food coloring.
3. Raise to high speed and beat until a mixture with stiff, glossy peaks forms.



SNICKERDOODLE WAFFLES

Prep Time: *10-15 minutes* • ***Cook Time:*** *20-25 minutes* • ***Serves:*** *7-8*

Ingredients:

1 cup flour
1 teaspoon kosher salt
2 teaspoons baking powder
¼ cup sugar
2 teaspoons cinnamon
½ teaspoon cream of tartar
1 egg
¾ cup milk
2½ tablespoons unsalted butter
1 teaspoon vanilla extract

Cinnamon Sugar Garnish:

¼ cup sugar
½ teaspoon cinnamon

Directions:

1. On the stovetop in a small pan over low heat, combine milk and butter. Stir until milk is warm and butter is melted. Set aside.
2. In a medium bowl, mix flour, salt, baking powder, sugar, cinnamon, and cream of tartar. Set aside.
3. In another small bowl, whisk together eggs and vanilla. Slowly pour into milk and butter mixture. Remove mixture from heat and add in the flour mixture, ⅓ of the mixture at a time, incorporating all the dry ingredients before adding in more. Stir until well combined.
4. For cinnamon sugar garnish, combine cinnamon and sugar in small bowl and set aside.
5. Preheat the Mini Waffle Maker and grease with a light coating of cooking oil. Pour 3-4 tablespoons of batter into the Mini Waffle Maker and cook until golden brown, about 3-4 minutes. Repeat with remaining batter.
6. Remove waffle and set on wire rack. When cool enough to handle, place the waffle into the cinnamon sugar mixture and coat to preference. This works best when the waffle is still warm.
7. Top with fresh berries, whipped cream, or syrup and enjoy a little sugar and spice and everything nice!



FRESH STRAWBERRY WAFFLES

Prep Time: *7-10 minutes* • ***Cook Time:*** *20-24 minutes* • ***Serves:*** *8-10*

Ingredients:

1 cup all-purpose flour
1 tablespoon sugar
2 teaspoons baking powder
¼ teaspoon salt
1 egg
1 cup milk
2 tablespoons vegetable oil
½ cup diced strawberries
Fresh strawberries (to garnish)
Fresh whip cream or yogurt (to garnish)

Directions:

1. In a medium mixing bowl, add flour, sugar, baking powder, and salt and mix to combine.
2. In a separate bowl, add egg, milk, and vegetable oil. Combine wet ingredients with the dry ingredients and whisk just until incorporated. Gently fold in strawberries.
3. Preheat the Mini Waffle Maker and grease with a light coating of cooking oil. Pour 3-4 tablespoons of batter into the Mini Waffle Maker and cook until golden brown, about 3-4 minutes. Repeat with remaining batter.
4. To serve, top with additional fresh berries or whipped cream and enjoy a berry delicious treat!



GREEN VELVET WAFFLES

Prep Time: *5-10 minutes* • ***Cook Time:*** *20-24 minutes* • ***Serves:*** *8-10*

Ingredients:

1 cup all-purpose flour
½ teaspoon baking powder
½ teaspoon baking soda
¼ teaspoon salt
1 tablespoon cocoa powder
1 egg
¾ cup buttermilk
1½ tablespoons sugar
2-3 drops green food gel
½ tablespoon vanilla

Directions:


1. In a large bowl, mix the flour, baking powder, baking soda, salt, and cocoa together. Whisk to thoroughly combine.
2. In a separate bowl, whisk together the eggs, buttermilk, sugar, food gel, and vanilla. Make sure the food coloring is evenly distributed.
3. Add the wet ingredients to the dry and whisk until just combined. The batter will be a little lumpy. Allow to rest for 5-10 minutes.
4. Preheat the Mini Waffle Maker and grease with a light coating of cooking oil. Pour 3-4 tablespoons of batter into the Mini Waffle Maker and cook until golden brown, about 3-4 minutes. Repeat with remaining batter.
5. To serve, top with melted whipped cream, syrup, or powdered sugar. Don't miss out on these or you'll be green with envy!

CUSTOMER SUPPORT

FEEL GOOD
DOUBLE YOUR WARRANTY
REWARDS

We want you to Feel Good about your Dash products! Sign up for our Feel Good Rewards program at **bydash.com/feelgood** to **DOUBLE** your warranty, part of our commitment to quality and customer satisfaction.

We're here to help! Our customer support teams in the US and Canada are at your service Monday - Friday. Contact us at **1 (800) 898-6970** or **support@bydash.com**.

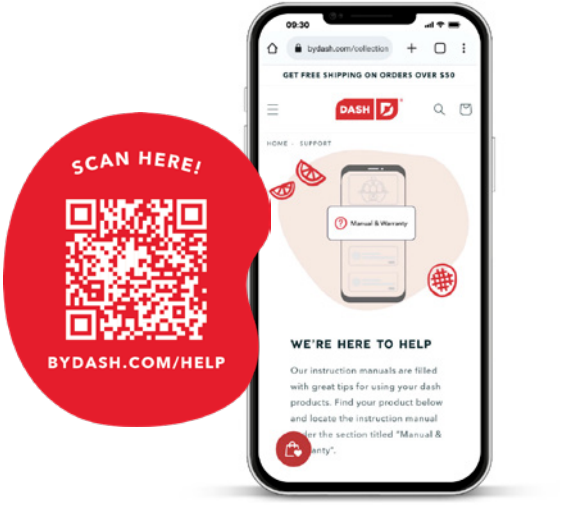

STOREBOUND, LLC – 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at support@bydash.com for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. StoreBound will not ship to a PO Box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

All replacement inquiries are to be submitted to support@bydash.com or contact Customer Support at 1-800-898-6970. There are no express warranties except as listed above.

Warranty is voided if used outside of the 50 states of the United States, the District of Columbia or the 10 provinces of Canada. Warranty is voided if used with an electric adapter/converter or used with any voltage plug other than 120V.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Refurbished items or items not purchased through an authorized retailer are not eligible for warranty claims.

REPAIRS

DANGER! Risk of electric shock! The Dash Mini Waffle Maker is an electrical appliance.

Do not attempt to repair the appliance yourself under any circumstances.
Contact Customer Support regarding repairs to the appliance.

TECHNICAL SPECIFICATIONS

Voltage 120V ~ 60Hz
Power Rating 350W
Stock#: DMW10012_20251117_V3

FOOD SAFE

This product has passed food safety testing in accordance with FDA guidelines.

Disney

DASH®

1-800-898-6970 | @bydash | bydash.com



©Disney
www.Disney.com