Disney

DASH

FEEL GOOD
DOUBLE
YOUR WARRANTY
REWARDS



DPC50001

POPCANO POPCORN MAKER

Instruction Manual | Recipe Guide









WELCOME TO THE FOODIE FAMILY

We hope you *love* our products as much as our team does.




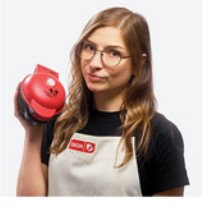




POPCANO POPCORN MAKER



Important Safeguards 4-6

Parts & Features 7

Using the Popcorn Maker 8-11

Tips & Tricks 12

Cleaning & Maintenance 13

Recipes 14-17

Customer Support 18

Warranty 19

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before use.
- Remove all bags and packaging from appliance before use.
- Never leave an appliance unattended when in use.
- Make sure the appliance is cleaned thoroughly before using.
- Do not use appliance for other than intended use. For household use only. Do not use outdoors.
- Only use the appliance on a stable, dry surface.
- ATTENTION: This appliance cannot be used with an external timer or a separate remote control.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Do not put the product in high temperature environments, close to strong magnets, flammable materials including gas, etc. in order to avoid fire accidents.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- This appliance can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience of knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance is not a toy. Do not let children use this appliance. Close supervision is necessary when any kitchen appliance is used by or near children.
- The Popcano Popcorn Maker will not shut off automatically. To avoid overheating, please add popcorn kernels before operating. Do not operate the appliance without popcorn kernels.

IMPORTANT SAFEGUARDS

- Do not touch hot surfaces. Use oven gloves when handling hot surfaces.
- Do not flip the Popcano without oven gloves.
- DO NOT use the Popcano near water or other liquids, with wet hands, or while standing on a wet surface.
- To prevent the risk of fire, electric shock, or personal injury, do not put cord, plug, or appliance in or near water or other liquids.
- The Popcano is NOT dishwasher safe.
- Do not let the cord touch hot surfaces or hang over the edge of tables or counters.
- Do not pull, bend, or compress the power cord with heavy objects to avoid accidents such as electric shock or fire.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- After turning the power on, do not attempt to disassemble the Popcorn Maker. Do not put spoons or other utensils into the popcorn maker.
- Do not exceed a 4-minute maximum continuous usage time.
- Unplug the appliance and allow to cool prior to assembly/disassembly, moving, cleaning, storage, and when not in use. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- Do not submerge the base or any electric parts in liquid.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 Monday – Friday or by email at support@bydash.com.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the appliance can result in property damage or even in personal injury.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet

only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

- A short power supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
- Always use oven mitts or potholders to remove the measuring cup by the handle.
- Always use oven mitts or potholders to remove the cover and pour the popcorn into the bowl from the popcorn maker.
- Allow the appliance to rest for at least 15 minutes between popping cycles. If the unit overheats, it will stop automatically and restart after it has cooled down. Therefore, do not leave the machine plugged in if it has stopped automatically.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

PARTS & FEATURES



USING THE POPCANO POPCORN MAKER

NOTE: Prior to using, use a damp cloth to wipe down the body of the Popcorn Maker & wash the Top Lid with warm, soapy water. Dry before using.

WARNING: DO NOT put butter or oil into the Aluminum Heat Chamber.

CAUTION: Aluminum Heat Chamber will get very hot. NEVER insert fingers into the chamber while the Maker is cooking. Avoid touching the Maker after cooking until it has completely cooled.





1. To begin cooking, place the Popcano Popcorn Maker Base on a flat, stable, dry surface. Place the Bowl over the Body **(photo A)**.

2. Find the Measuring Cup that fits into the top of the Top Lid. Remove it from the Top Lid and use it to add one Measuring Cup full of kernels into the Aluminum Heat Chamber through the Kernel Popper **(photo B).**



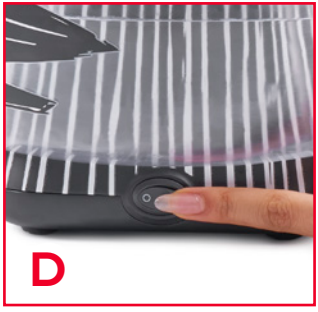

NOTE: One Measuring Cup is the *maximum* amount of kernels that can be added for one cooking cycle. Any more than that will prevent the appliance from functioning.

3 Once kernels are in the Kernel Popper, insert the Top Lid onto the Kernel Popper **(photo C)**. Place the Measuring Cup back into the top of the Top Lid. Never pop kernels without placing the Measuring Cup back onto the Top Lid.

4 To begin cooking, press the Power Switch **(photo D)**. The Maker will begin heating.

USING THE POPCANO POPCORN MAKER





5 After a few minutes, popcorn will begin to eject from the Maker, and cooking will continue until all kernels are popped **(photo E)**. The popping cycle will last about 2-4 minutes.

CAUTION: The Popcano gets very hot. Do not touch the Top Lid or Measuring Cup while it's cooking. Don't touch until completely cool.

6 Once popping is complete, immediately turn the Maker off by pressing the Power Switch to "Off" to avoid overheating the Maker and prevent the heating element from burning dry. Then unplug the Maker.

Note: For a full Bowl of popcorn **(photo F)**, wait 10-12 minutes for the Maker to cool, then repeat these steps to perform another popping cycle. Two popping cycles will fill the Bowl.



7 Once the Maker has cooled, use oven mitts to carefully remove the Top Lid from the Base. To serve popcorn, lift the Bowl of freshly popped popcorn off of the Base **(photo G)**. Drizzle with melted butter or add other ingredients according to preferred recipe.

NOTE: If any popcorn or kernels remain in the Kernel Popper, remove the Bowl from the Base of the Maker then use oven mitts to grasp the Base and carefully turn it upside down to clear the Base.

TIPS & TRICKS

- Always ensure that the Top Lid is securely in place before turning the Popcorn Maker on and before popping popcorn.
- Always place the Bowl over the Body to catch popped corn before turning on the Popcorn Maker and before popping popcorn.
- The Top Lid & Measuring Cup will be hot during use, do not touch while popcorn is popping. Allow to cool completely before handling and always use oven mitts or potholders when handling.
- Never put butter or oil into the Aluminum Heat Chamber.
- Never add any ingredients except kernels to the Aluminum Heat Chamber.
- **DO NOT** exceed one Measuring Cup of kernels in one cycle as this will overfill the machine.
- The minimum amount of kernels for one popping cycle is ½ of the Measuring Cup. **DO NOT** use less than this as this will result in burnt popcorn.
- After two popping sessions, you must let the Maker cool for at least 15 minutes. If the Maker overheats, it will stop automatically and restart after it has cooled down. To avoid it restarting automatically in this case, you must unplug the Maker when this happens.
- Popping corn will be hot; children should not be near the Popping Chute during popping.
- For best results, use fresh kernels. Old kernels may be dry and fail to pop. If kernels are dry, try placing them in a 12-ounce sealable jar with 1 teaspoon of water. Seal, shake, and let sit overnight to rehydrate.

KERNELS	POPPED CORN
1 Measuring Cup	10-12 Cups
½ Measuring Cup	5-6 Cups

CLEANING & MAINTENANCE

- Before disassembling or cleaning, unplug the Popcorn Maker and allow it to cool completely.
- The Popcano Popcorn Maker is not dishwasher safe. Hand wash ONLY.
- Never immerse the Base of the Maker in water. Never use metal or abrasive cleaning agents as they will damage the Maker.
- Once cool and disassembled, the Base including the inner Aluminum Heating Chamber can be wiped down with a damp cloth.
- To clean the Top Lid, Measuring Cup, & Serving Bowl, wash in warm, soapy water.
- Before storing, ensure all parts of the Popcano Popcorn Maker are dried thoroughly. Store in a safe, dry place out of the reach of children.

RECIPE GUIDE





MOVIE THEATER POPCORN

Prep Time: *3-5 minutes* • ***Cook Time:*** *5-10 minutes* • ***Serves:*** *4-6*

Ingredients:

1 Measuring Cup kernels

4 tablespoons butter, melted

Dash of salt

Directions:

1. Add 1 Measuring Cup of kernels into the Aluminum Heating Chamber through the Kernel Popper. Then place the Measuring Cup back onto the top of the Top Lid.
2. To begin cooking, press the power button on the Base. After a few moments, popped corn will begin ejecting from the Spout with the full popping cycle taking 2-4 minutes.
3. Once popping is complete, carefully remove the Bowl, add melted butter & salt, and use tongs to mix until combined.
4. Serve fresh and hit play—it's showtime!



HARVEST POPCORN TRAIL MIX

Prep Time: *5 minutes* • ***Cook Time:*** *5 minutes* • ***Serves:*** *4-5*

Ingredients:

1 Measuring Cup kernels

1½ cups oat ring cereal

¼ cup dried cranberries

¼ cup golden raisins

¼ cup dry-roasted almonds, halved

¼ cup chopped dried pineapple

¼ cup roasted pumpkin seeds

2 tablespoons dry-roasted sunflower seeds

Directions:

1. Add 1 Measuring Cup of kernels into the Aluminum Heating Chamber through the Kernel Popper and place the Measuring Cup back on the top of the Top Lid.
2. To begin cooking, press the power button on the Base. After a few moments, popped corn will begin ejecting from the Spout with the full popping cycle taking about 3 minutes.
3. Once popping is complete, carefully remove the Bowl, add all ingredients, and use tongs to mix until combined.
4. Serve fresh and get ready to hit the harvest trail!



PUMPKIN KING CARAMEL CORN

Prep Time: *3-5 minutes* • ***Cook Time:*** *10-12 minutes* • ***Serves:*** *4-6*

Ingredients:

1 Measuring Cup kernels
½ cup butter
¼ cup milk
1 teaspoon vanilla extract
½ cup mini marshmallows
½ cup chocolate chips

Directions:

1. Add 1 Measuring Cup of kernels into the Aluminum Heating Chamber through the Kernel Popper and place the Measuring Cup back on the top of the Top Lid.
2. To begin cooking, press the power button on the Base. After a few moments, popped corn will begin ejecting from the Spout with the full popping cycle taking about 3 minutes.
3. To prepare the caramel sauce, add brown sugar, butter, and milk to a small saucepan on the stovetop. Bring to a gentle boil and cook until thickened, about 1 to 2 minutes. Remove from heat and stir in the vanilla extract.
4. Once popping is complete, carefully remove the Bowl, pour caramel over popcorn, and use tongs to mix until popcorn is coated evenly. Allow the popcorn to cool by spreading it out onto a cookie sheet covered with aluminum foil.
5. Serve when cooled and enjoy this spook-tacular classic!

CUSTOMER SUPPORT

FEEL GOOD
DOUBLE YOUR WARRANTY
REWARDS

We want you to Feel Good about your Dash products! Sign up for our Feel Good Rewards program at bydash.com/feelgood to DOUBLE your warranty, part of our commitment to quality and customer satisfaction.

We're here to help! Our customer support teams in the US and Canada are at your service Monday - Friday. Contact us at **1 (800) 898-6970** or **support@bydash.com**.



STOREBOUND, LLC – 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at support@bydash.com for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. StoreBound will not ship to a PO Box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

All replacement inquiries are to be submitted to support@bydash.com or contact Customer Support at 1-800-898-6970. There are no express warranties except as listed above.

Warranty is voided if used outside of the 50 states of the United States, the District of Columbia or the 10 provinces of Canada. Warranty is voided if used with an electric adapter/converter or used with any voltage plug other than 120V.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Refurbished items or items not purchased through an authorized retailer are not eligible for warranty claims.

REPAIRS

DANGER! Risk of electric shock! The Dash Popcano Popcorn Maker is an electrical appliance.
Do not attempt to repair the appliance yourself under any circumstances.
Contact Customer Support regarding repairs to the appliance.

COPYRIGHT NOTICES

All trademarks not owned by StoreBound that appear in the manual are property of their respective owners, who are not affiliated with StoreBound.

Golden Grahams™ is a trademark of General Mills IP Holdings II, LLC.

TECHNICAL SPECIFICATIONS

Capacity: 5.5QT/22 Cups
Voltage 120V ~ 60Hz
Power Rating 1400W
Stock#: DPC50001_20260113_v4

FOOD SAFE

This product has passed food safety testing in accordance with FDA guidelines.

Disney

DASH®

1-800-898-6970 | @bydash | bydash.com



Disney

TIM BURTON'S

THE NIGHTMARE BEFORE CHRISTMAS

©Disney

www.Disney.com/thenightmarebeforechristmas

™