1. About Your Omni C30 Edge / C30

1.1 What's in the Box

1.2 Overview

1.3 Button Controls

1.4 LED Indication

2. Preparing Your Omni C30 Edge / C30

2.1 Set Up the Omni Station

2.2 Charge Your RoboVac

2.3 Download the eufy App

2.4 Reset the Wi-Fi Connection

3. Using Your Omni C30 Edge / C30

3.1 Important Tips Before Use

3.2 Mapping

3.3 Set Up No-Go Zone

3.4 Scheduled Cleaning

3.5 Select a Cleaning Mode

4. Using the Mopping System

5. Using RoboVac with Matter, Alexa, Siri, or Google Assistant Compatible Devices

6. Enabling / Disabling Child Safety Lock

7. Cleaning and Maintenance

7.1 Clean the Dust Bin and Dust Transfer Duct

7.2 Replace the Mop Pads

7.3 Clean the Rolling Brush

7.4 Clean the Side Brush

7.5 Clean Sensors and Charging Contact Pins

7.6 Clean the Dirty Water Tank

7.7 Replace the Dust Bag

7.8 Clean the Mop Cleaning Tray

8. Troubleshooting

9. Specifications

10. Customer Service


11. Other Information

Network Configuration Instructions


Important Safety Instructions

1. About Your Omni C30 Edge / C30


1.1 What's in the Box

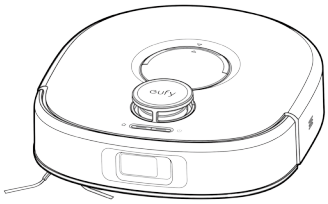


❶

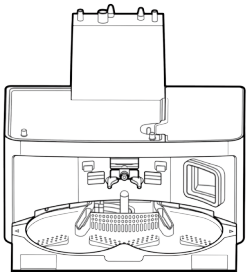


❷




❸

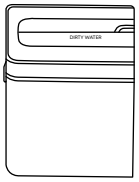

❹

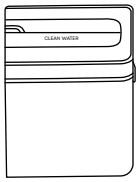

❺

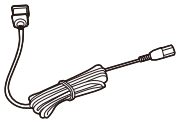

❻



❼




❽


❶ Robot Vacuum Cleaner (RoboVac)
❷ Omni Station
❸ Detachable Base
❹ Dirty Water Tank
❺ Clean Water Tank
❻ Power Cord
❼ Quick Start Guide
❽ Safety Sheet

1.2 Overview


RoboVac

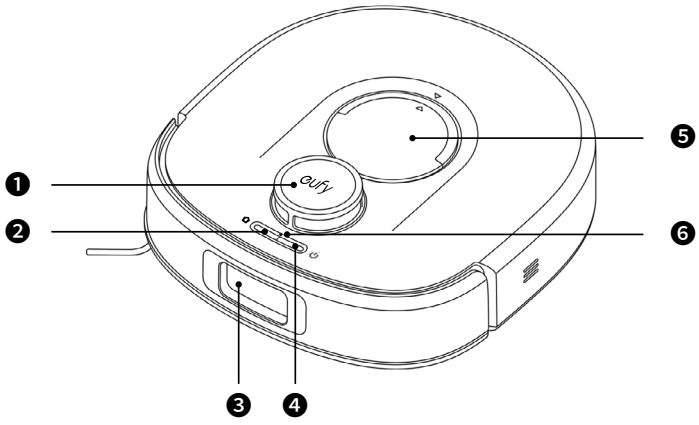


❶ Navigation LiDAR
❷ Recharge Button
❸ Line Laser Module
❹ Power Button
❺ Dust Bin Cover
❻ Reset Button

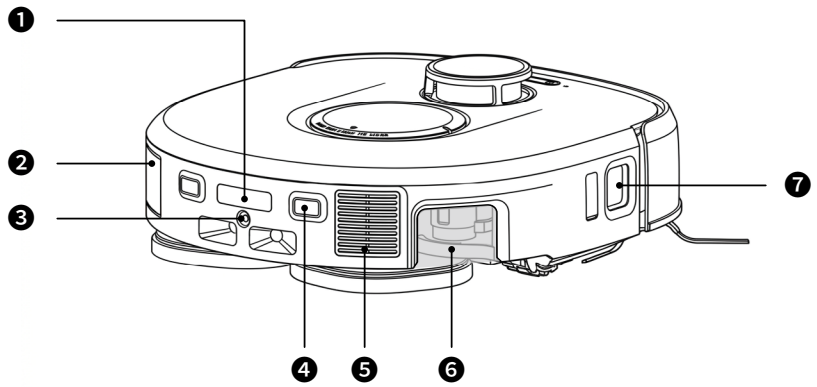

❶ Infrared Recharging Sensor
❷ Dust Transfer Duct
❸ Water Injection Port **(for Robot Vacuum Omni C30 Edge only)**
❹ Charging Contact Pins (×2)
❺ Air Outlet
❻ Mop Extension Opening **(for Robot Vacuum Omni C30 Edge only)**
❼ Edge Sensor

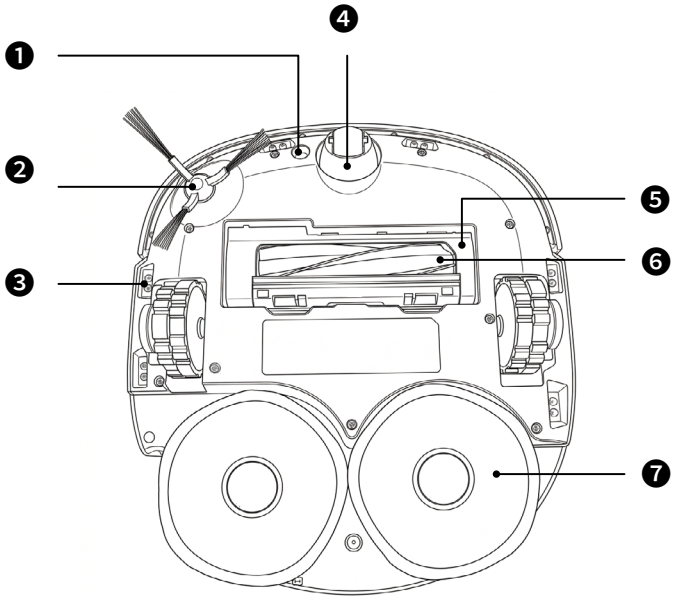


❶ Ultrasonic Sensor
❷ Side Brush
❸ Drop Sensor (×6)
❹ Swivel Wheel
❺ Brush Guard
❻ Rolling Brush
❼ Mop Pads (×2)

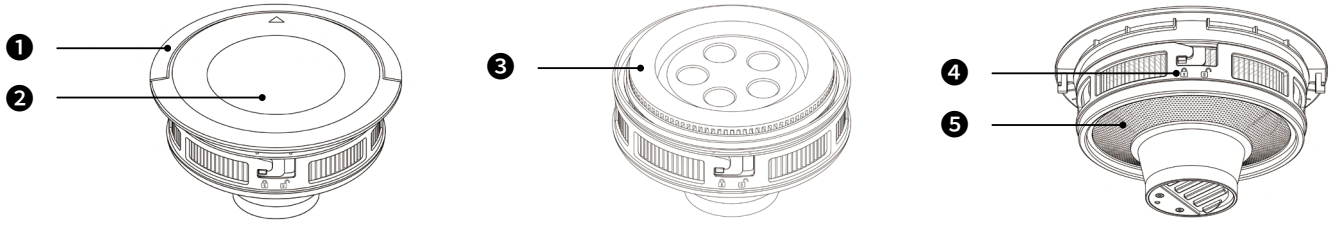


❶ Dust Bin Handle
❷ Dust Bin Cover
❸ Replacement Filter
❹ Dust Bin Alignment Marks
- The Dust Bin Cover and the Cyclone Cone have three alignment marks (red, white, and blue) — match the clips to the same color to lock them into place.

❺ Metal Filter

Omni Station


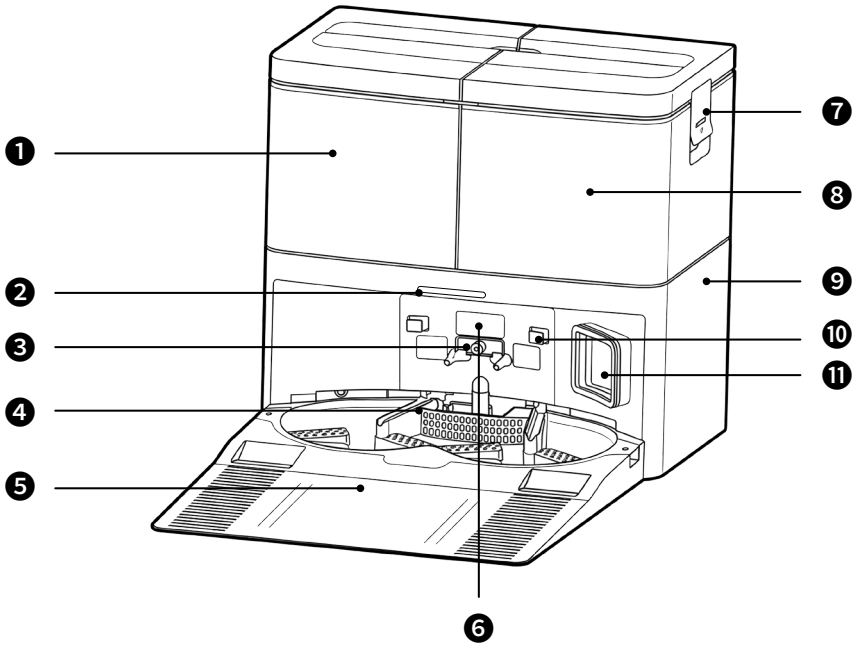


❶ Dirty Water Tank
❷ LED Indicator
❸ Water Injection Port **(for Robot Vacuum Omni C30 Edge only)**
❹ Mop Cleaning Tray
❺ Detachable Base
❻ Infrared Recharging Sensors (×3)
❼ Clean Water Tank Latch
❽ Clean Water Tank
❾ Dust Bag Compartment
❿ Charging Contact Pins (×2)
⓫ Dust Transfer Duct

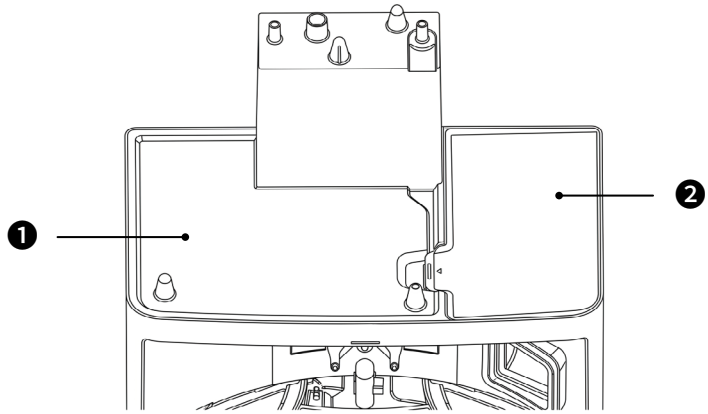

❶ Water Tank Base
❷ Dust Bag Compartment Lid

1.3 Button Controls




	· Long press (3 s): Power on or off · Short press: Pause / resume the current task when working
	· Press once: Pause cleaning · Press again: Return RoboVac to the Omni Station
	· Long press simultaneously (3 s): Reset the Wi-Fi connection · Long press simultaneously (10 s): Reset to factory settings

1.4 LED Indication

RoboVac LED:

LED Indication	Description	Status
	Blinking white	Powered on
	Steady white	Working normally
	Blinking red	Low battery
	Steady red	• Low battery • Error (Please refer to in-app instructions for solution)

Omni Station LED:


LED Indication	Description	Status
	Lights up in white	Powered on
	Steady white	Working normally
	Blinking white	Dust collection / Mop cleaning
	Steady red	Error (Please refer to in-app instructions for solution)
	Off	Power disconnected

2. Preparing Your Omni C30 Edge / C30


2.1 Set Up the Omni Station

1. Install the detachable base by pressing down firmly on both sides.

The RoboVac may be unable to return to the Omni Station if the detachable base is not installed correctly.

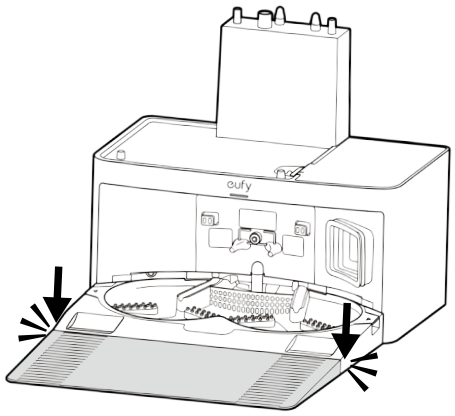


2. Install the clean water tank and the dirty water tank onto the Omni Station.

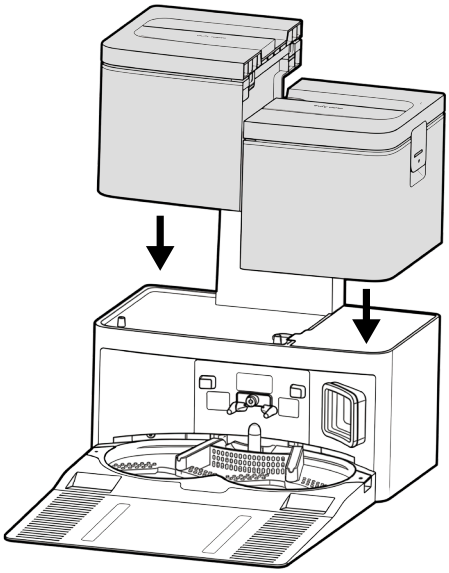

3. Place the Omni Station in a location with a strong Wi-Fi signal where the RoboVac can easily access it. Ensure at least **1.5 m (4.9 ft)** of clearance in front and **0.5 m (1.6 ft)** on both sides, on a hard, open floor. Place it against a wall on a hard, level surface.


   Do not place the Omni Station in stairways, corridors, or other areas without sufficient surrounding space. The RoboVac may fall, causing damage or malfunction.

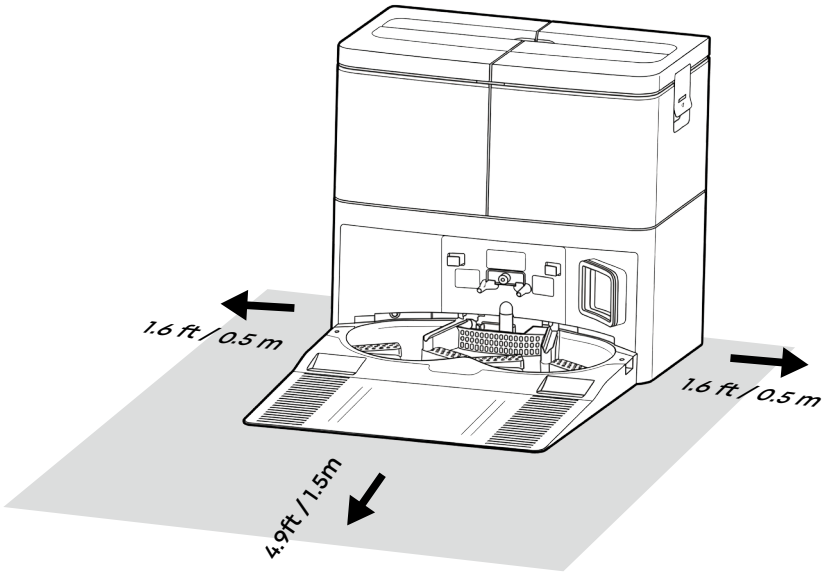

4. Connect the power cord to the Omni Station and a wall outlet.


   When the Omni Station connects to AC power, the LED indicator is steady white. The indicator light turns red if the clean water tank is empty or either tank is not properly seated.

   Always keep the Omni Station plugged in to ensure the RoboVac can successfully return to it for charging, mop cleaning, and dust emptying.

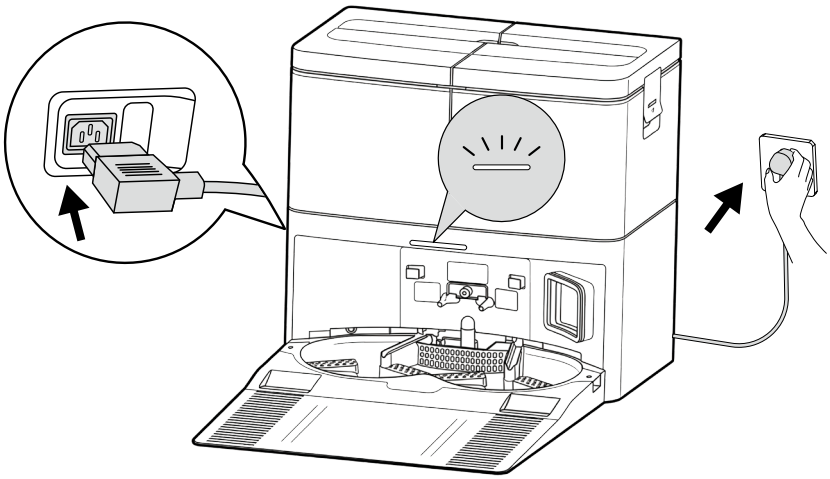


5. Take out the clean water tank. Open the cap and add clean water until it reaches the MAX water line.

⚠ • Do not add hot water into the tank to avoid shortening its service life.
• Do not add third-party floor cleaner or chemicals that may lead to clogging or corrosion.

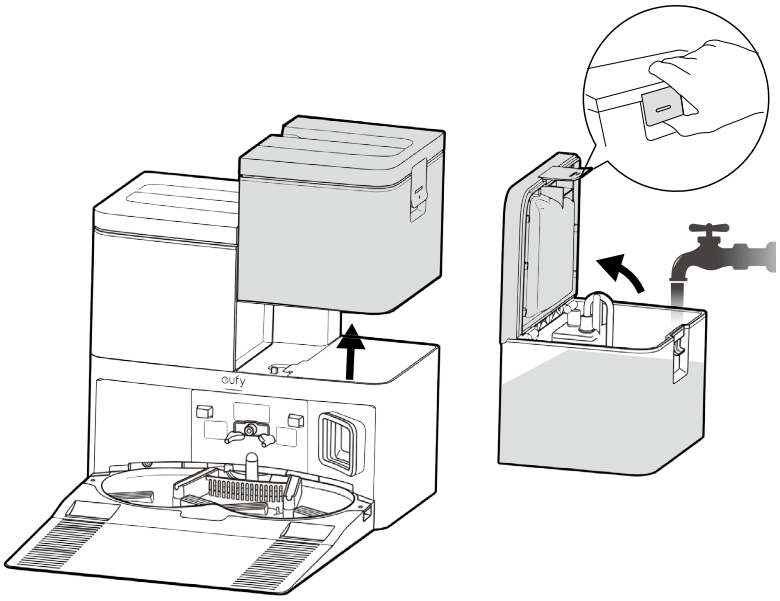


6. Close the clean water tank cap until the latch clicks into place, then reinstall the clean water tank onto the Omni Station.

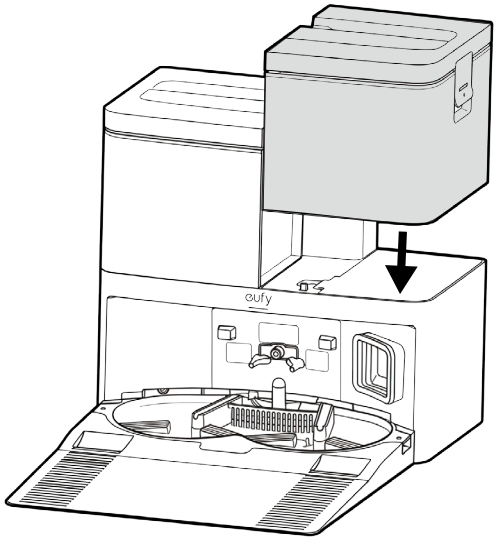


2.2 Charge Your RoboVac

1. Remove the foam block from the RoboVac.

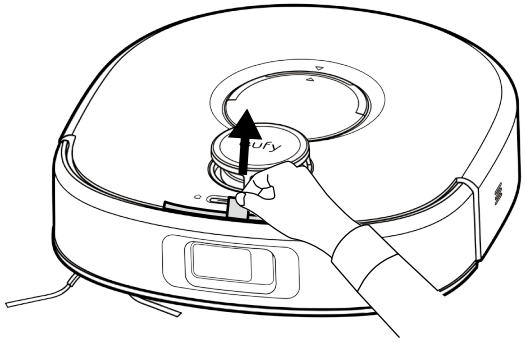


2. Attach the RoboVac to the Omni Station. The RoboVac will power on and start charging automatically.

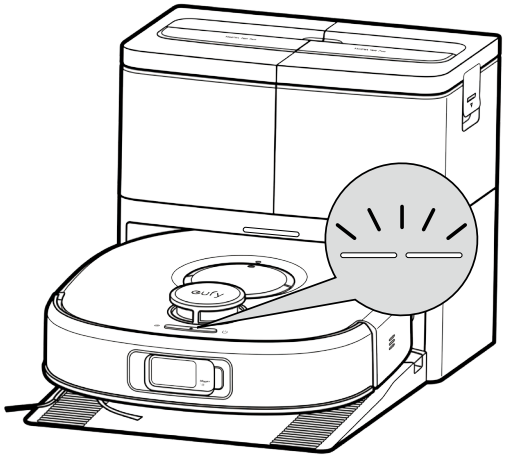


2.3 Download the eufy App

Before you start, ensure:
• Your smartphone runs iOS 13.0 or later, or Android 8.0 or later.
• Your Wi-Fi router broadcasts a 2.4 GHz signal.
1. Download the app from the App Store (iOS) or Google Play (Android).
2. Open the app, create a new account or log into your own eufy account.

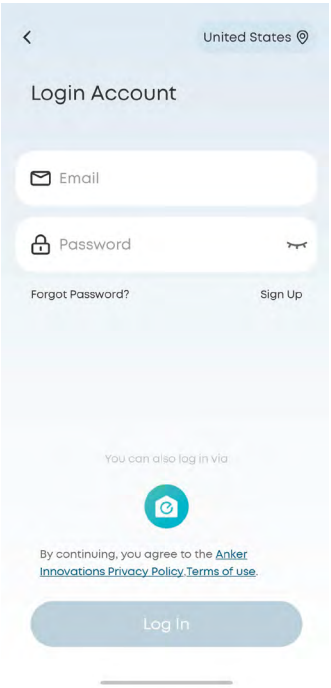


3. Tap **+** > **Add Device** > **Clean** > **Robot Vacuum-C Series** > **Omni C30 Edge / C30**.

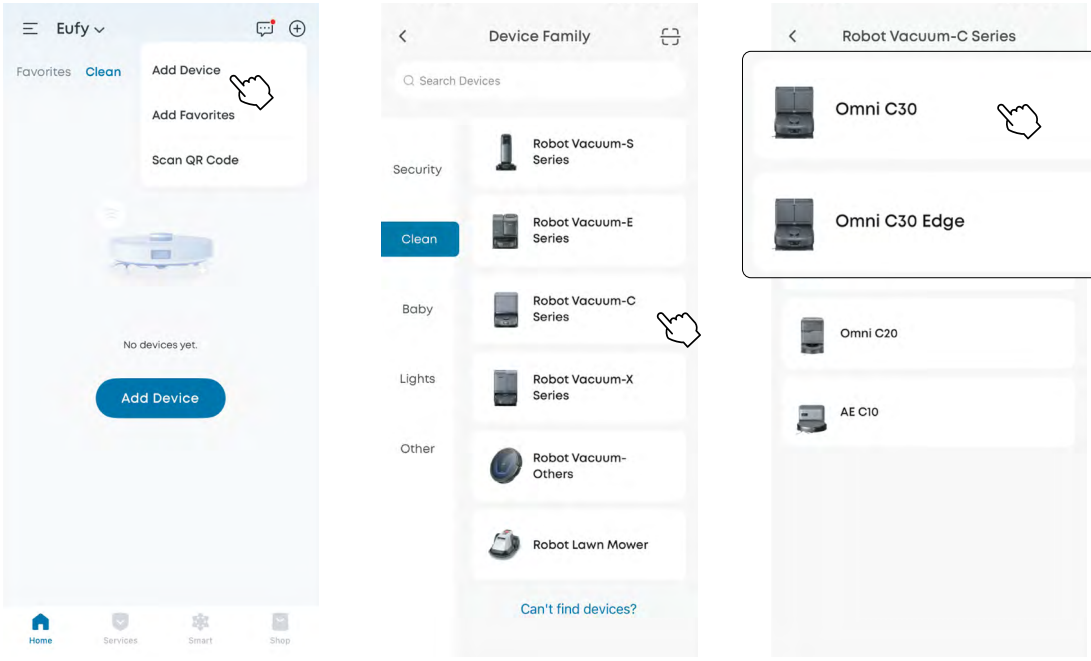

4. Follow the in-app instructions to set up the Wi-Fi connection.

2.4 Reset the Wi-Fi Connection

If you encounter issues when connecting your RoboVac to the eufy app, try to reset the Wi-Fi connection. Press and hold both the Power and Recharge buttons simultaneously for 3 seconds until you hear a voice prompt.

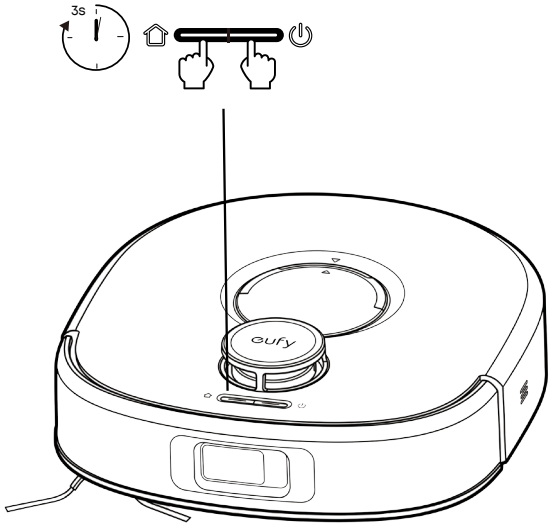

The LED indicators on RoboVac will flash white quickly. Then you can follow the in-app instructions to set up the Wi-Fi connection again.

3. Using Your Omni C30 Edge / C30

All UI images shown in this section are for illustration only, and they may be subject to change due to software updates. Please refer to the actual app interface for the most accurate information.

3.1 Important Tips Before Use

- Remove power cords and small objects (socks/toys/slippers/towels/weighing scales, etc.) from the floor that may entangle RoboVac.
- Fold tasseled edges of rugs underneath to prevent tangling RoboVac. Avoid cleaning high-pile rugs or rugs thicker than 0.98 in / 25 mm as they may cause RoboVac to malfunction.
- Before mapping, it is strongly recommended to place physical barriers in front of fireplaces and certain areas (i.e. air vents) that may cause damage to the robot if entered. For future use, set up

virtual boundaries in the eufy app to prevent the robot from falling down staircases.

- Avoid vacuuming large amounts of water as it will potentially damage the device.
- Do not use the RoboVac on floors with standing water, in wet areas such as bathrooms or laundry rooms, or on floors that have been heeavily flooded. The RoboVac is designed for routine damp mopping on hard floors only; prolonged exposure to excessive moisture may damage the device.
- Do not immerse the Robovac or the Omni Station in water or any other liquid. Do not rinse the main body of the Robovac or the Omni Station under running water. Only the detachable parts listed in Chapter 7 are washable. Water entering the internal components may cause electrical damage and void the warranty.
- RoboVac may climb on top of objects less than 0.79 in / 20 mm in height. Remove these objects if possible.
- Anti-drop sensors will prevent RoboVac from tumbling down stairs and steep drops in most cases. Sensors are less effective if dirty or used on carpeted / reflective floors. Place physical barriers or set a “No-Go” zone to block off areas where RoboVac may fall.
- If you notice an abnormal burning smell, arcing noise, unusual loud noise, or reduced suction, stop using the device immediately and check the maintenance schedule to perform the necessary maintenance.
- Do not run the RoboVac on wet or waterlogged surfaces, as this may cause danger.
- Do not add floor cleaners, chemicals, corrosive acids, disinfectants, or any other additives to the water tank, as they may clog the water paths and damage the product.


3.2 Mapping

This feature is designed to help your RoboVac efficiently learn the layout of your home, ensuring thorough and systematic cleaning. By creating a detailed floor plan, your RoboVac can navigate and clean with precision.

To maximize the efficiency and accuracy of the mapping process, please follow these steps:

- **Open All Doors:** Ensure all doors within the cleaning area are open. This allows the robot to access and map each room seamlessly.
- **Block Off Restricted Areas:** If there are specific zones you don't want the robot to enter, use physical barriers to block these areas. This can enhance mapping accuracy and prevent the robot from entering unwanted spaces. After the mapping is completed, you can remove physical barriers, and set up restricted areas to prevent the robot from entering those areas.
- **Remove Obstacles:** Clear any objects, such as toys, cables, small furniture, or fringed carpets, that might obstruct path or become entangled in its brushes. This helps RoboVac move freely and map the area without interruptions.
- **Do Not Move the Base Station:** Once the floor plan is created, avoid relocating the base station. RoboVac relies on the base station as a reference point for navigation and mapping. Moving it may disrupt the accuracy of the floor plan.


To start the mapping process, tap **Mapping** in the app.

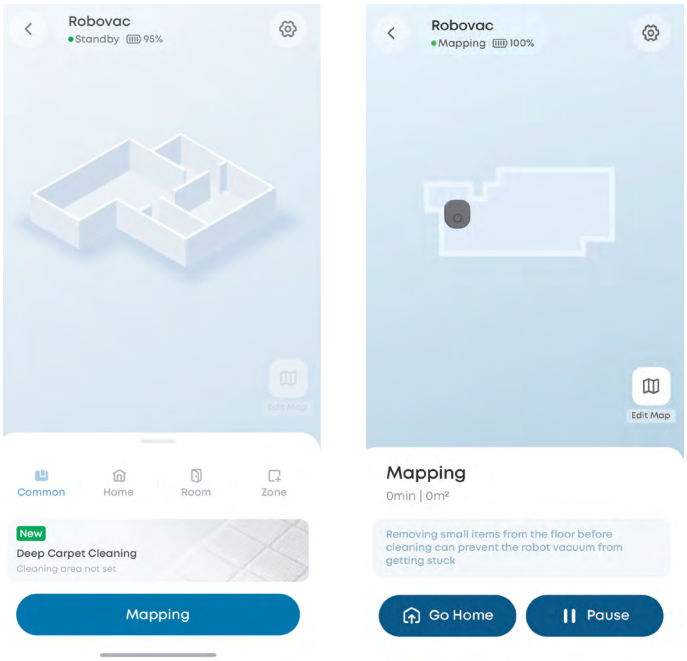

3.3 Set Up No-Go Zone


In the eufy app, tap **Edit Map** > **No-Go Zone** > **Add** to set up a "No-Go Zone" as a restricted area, eliminating the need for physical barriers (including boundary strips).

This feature is only designed for dividing the cleaning zones, not for isolating hazardous areas.

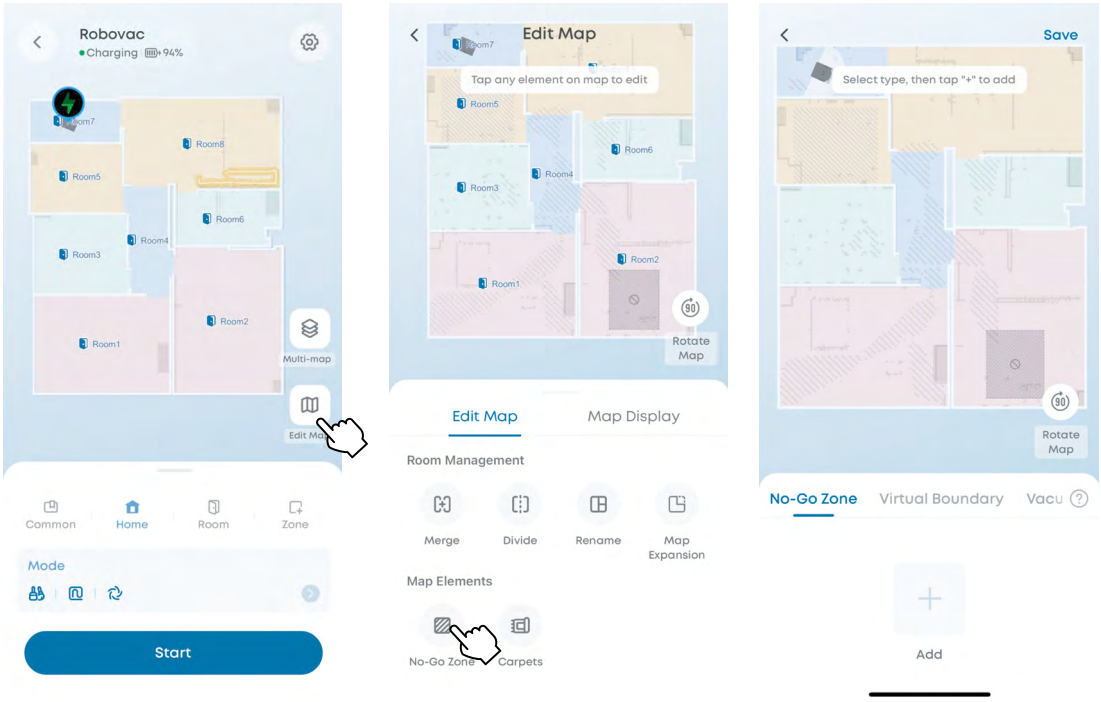

3.4 Scheduled Cleaning

Tap the icon in the upper-right corner and select **Schedules**.
On this page, you can schedule RoboVac to start cleaning at a particular time.

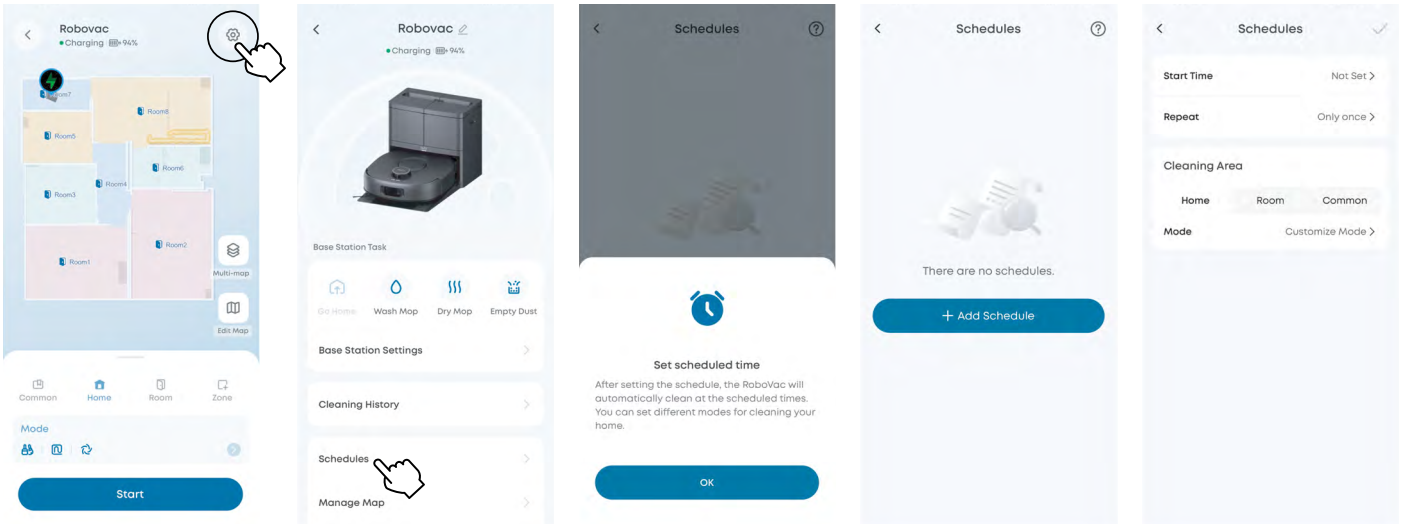


- You can set the time and customize cleaning schedules from Sunday to Saturday on the eufy app. This function is only available on the app.
- During the Do Not Disturb period, RoboVac will remain silent, with automatic dust collection, voice notifications, and scheduled cleaning disabled.

3.5 Select a Cleaning Mode


You can start / pause cleaning or select the desired cleaning mode via the eufy app.

In each mode, you can further customize the cleaning intensity, suction level, and other settings.

The RoboVac C30 Edge includes a built-in clean water reservoir that refills the mop during operation, allowing continuous water level adjustment from 1% to 100% in the eufy app. This feature is available on the **RoboVac C30 Edge** only.

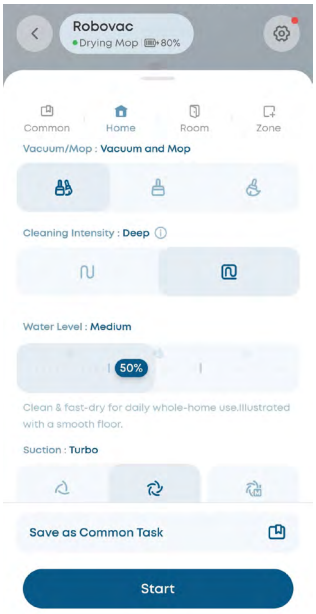

C30 Edge

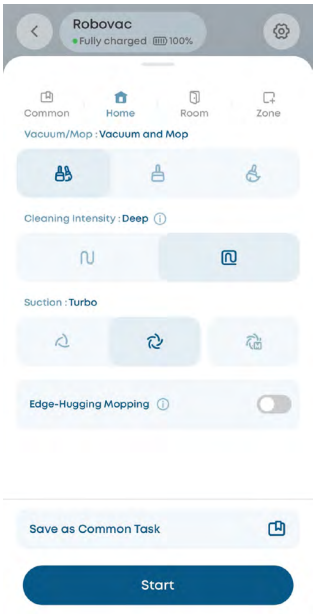

C30


3.5.1 Home Cleaning Mode

Tap **Start** in the eufy app to enable Home Cleaning mode.

After startup, RoboVac moves from the Omni Station and automatically determines its cleaning route. When cleaning is finished, RoboVac automatically returns to the Omni Station.



To pause cleaning, tap **Pause** in the eufy app or press the Power Button on RoboVac.

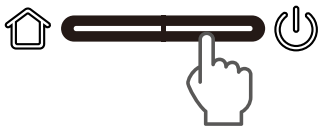

3.5.2 Room Cleaning Mode

In this mode, your home is automatically divided into several rooms in the eufy app. You can customize room settings and select which rooms to clean. RoboVac will clean only the selected rooms, then return to the Omni Station after cleaning.






- Enable Room Cleaning mode only after RoboVac has created the map.
- It is recommended that RoboVac moves from the Omni Station to start room cleaning.

3.5.3 Zone Cleaning Mode

In this mode, you can set up a cleaning zone and customize its size in the eufy app. RoboVac will clean the selected zone only.

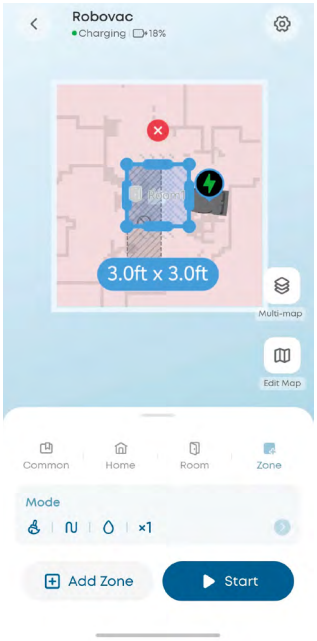

4. Using the Mopping System

1. Start cleaning. RoboVac will automatically vacuum and mop.

2. To prevent odors in the mop pads, activate the drying function after each mopping task. It is strongly recommended to use **Standard Drying** every time to ensure optimal drying performance and reduce unpleasant smells.

3. Regularly empty and clean the dirty water tank to prevent mildew or unpleasant smells. For instructions on how to clean the dirty water tank, refer to the "**Cleaning and Maintenance**" section.

5. Using RoboVac with Matter, Alexa, Siri, or Google Assistant Compatible Devices

With Matter, Alexa, Siri, and Google Assistant compatibility, your RoboVac is just a voice command away from cleaning every corner of your house.

Before you start, make sure:

- RoboVac is attached to the Omni Station to ensure there is enough power.
- RoboVac is connected with the eufy app.
- To control your RoboVac with Siri, make sure you have an iPhone or iPad running a recent version of iOS.

To control RoboVac with Matter, Alexa, Siri, or Google Assistant:


1. Tap on the top left corner of eufy app's main interface, then find **Third Party Services** in the dropdown menu.
2. Follow the on-screen instructions to complete the setup.

6. Enabling / Disabling Child Safety Lock

To activate the child safety lock in the eufy app, tap the ⚙ icon in the upper-right corner, then select **More Settings** > **Child Lock**.

Once the child safety lock is enabled, all buttons will be locked to prevent children from damaging the device or accidentally getting hurt.

Network configuration and factory reset are not affected by the child safety lock.

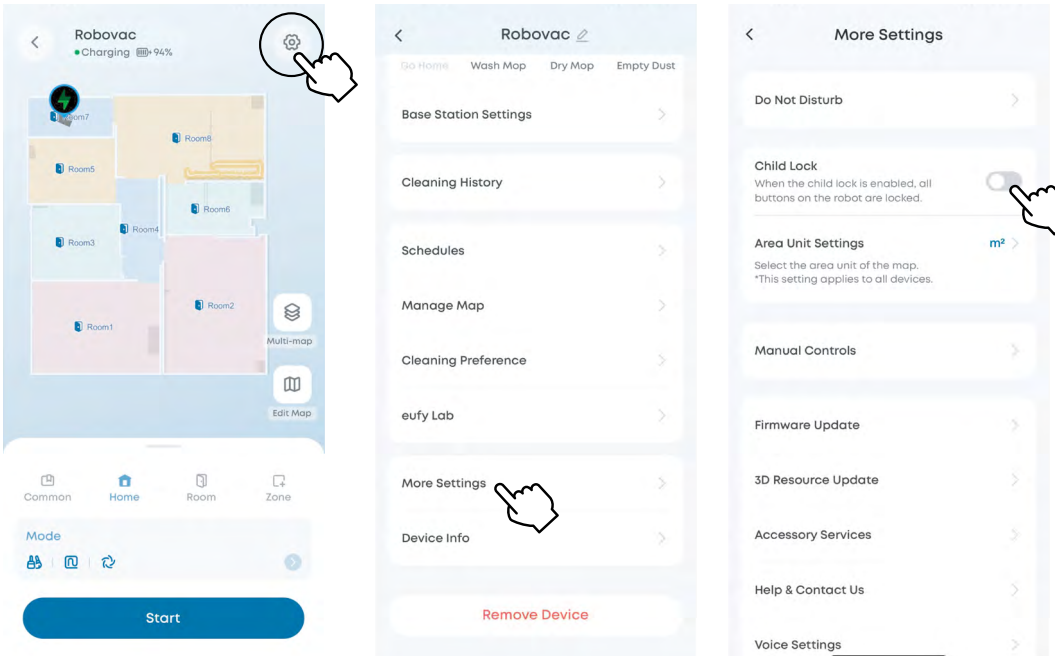

7. Cleaning and Maintenance

Before cleaning and maintaining, power off the device and unplug the power adapter. Any other servicing should be performed by an authorized service representative.

For optimal performance, follow the instructions below to clean and maintain Omni C30 Edge / C30 regularly. The cleaning and replacement frequency will depend on your usage habits.

Do not spray or pour water, cleaning agents, or any liquid onto the Robovac, the Omni Station, the power cord, or the charging contacts. Use a slightly damp (almost dry) soft cloth for exterior wiping only, and ensure no moisture enters any openings.

Recommended Cleaning and Replacement Frequency

Module	Component	Cleaning Frequency	Replacement Frequency
RoboVac	Dust Bin	Every 3 month	—
	Rolling Brush	Every 3 month	Every 1 year
	Brush Guard	Every 3 month	Every 1 year
	Mop Pads	—	Every 1 year
	Side Brush	Every 3 month	Every 3 month
	Metal Filter	Every 3 month	—
	High-Performance Filter	Every 1 year	Every 1 year
	Sensors	Clean it based on actual conditions	—
	Charging Contact Pins	Clean it based on actual conditions	—
	Swivel Wheel	Clean it based on actual conditions	—
Omni Station	Clean Water Tank	—	—
	Dirty Water Tank	Clean it based on actual conditions	—
	Dust Bag	Every 2/3 months	Replace as needed
	Mop Cleaning Tray	Every 2/3 months	—
	Bottom	—	—
	Detachable Base	/	—

7.1 Clean the Dust Bin and Dust Transfer Duct

7.1.1 Clean the dust bin

❶ Lift the dust bin handle and pull out the multi-cone unit.


❷ Rotate the cover counterclockwise to open it, and take out the high-performance filter.

❸ Rinse the components thoroughly with water. Use a small brush to gently scrub if needed. Air-dry completely before next use.

❹ Reinstall the components. Make sure the three alignment marks are correctly positioned, then rotate to tighten.

❺ Wipe the interior of the dust bin with a damp cloth, paying close attention to residual dust on the metal filter.

❻ Place the multi-cone unit back into the RoboVac. Ensure the alignment mark on top cover matches the indicator on the RoboVac.

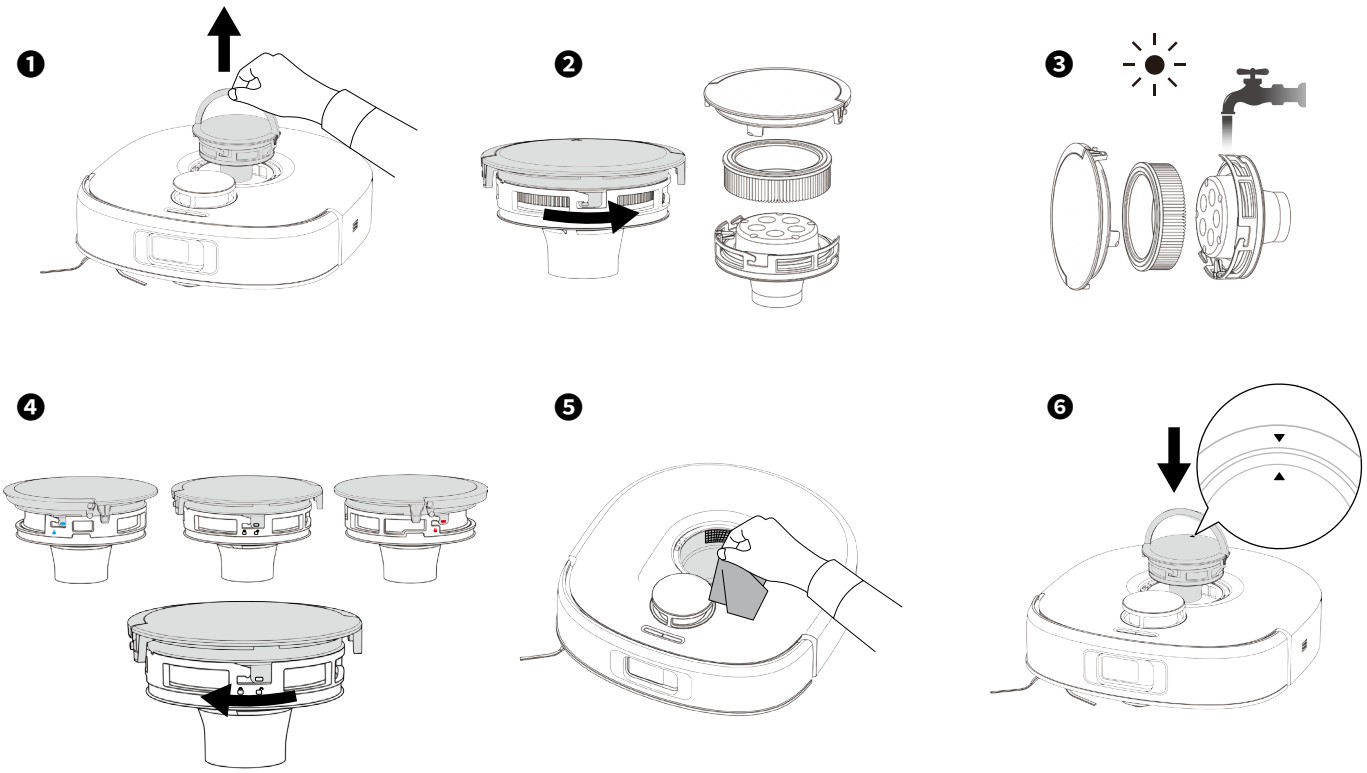


- Do not use the filter if it is not completely dry, otherwise it may affect the cleaning performance.
- Do not use hot water or any detergent to clean the filter.

7.1.2 Clean the dust transfer duct

❶ Push the top of the cover to open it.


❷ Wipe the residual hair and dust to prevent blockages in the dust channel.

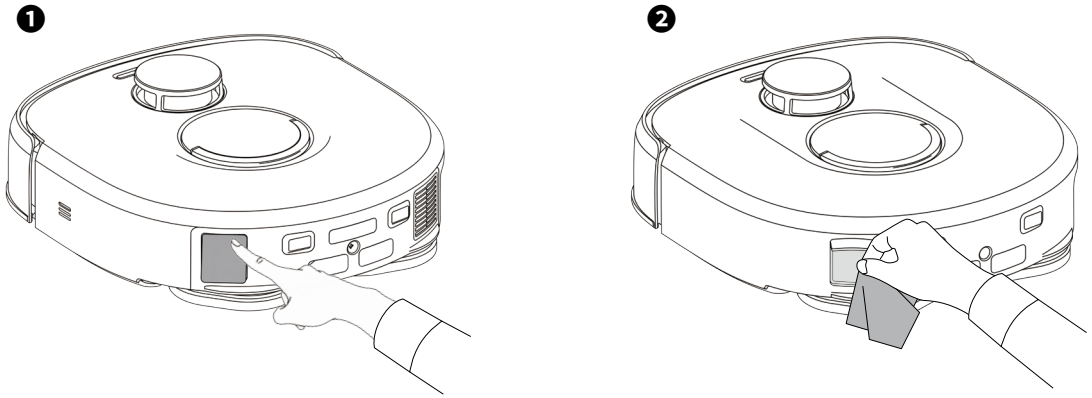


7.2 Replace the Mop Pads

❶ Peel off the mop pads.
❷ Place the new mop pads and press down firmly.

❶

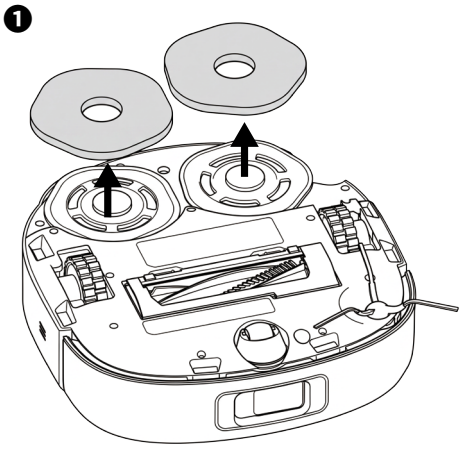


❷

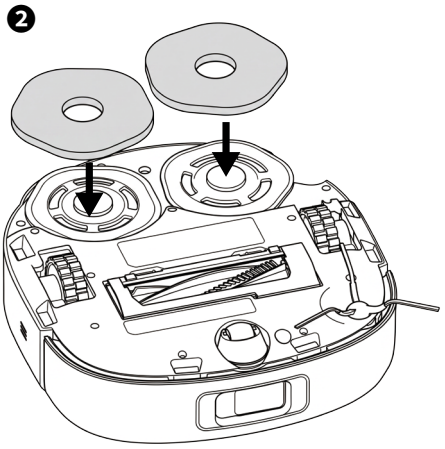


7.3 Clean the Rolling Brush

❶ Press the release tabs to unlock the brush guard.
❷ Push the rolling brush away from the side brush, then gently lift it up.
❸ Gently pull out the rolling brush.
❹ Rinse the rolling brush and brush guard under running water. Air-dry completely before next use.
❺ Reinsert the rolling brush until it is properly seated.
❻ Press down on the brush guard until it snaps into place.


❶

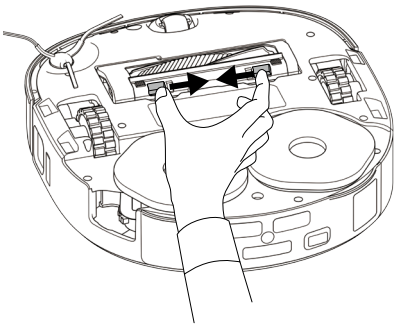


❷

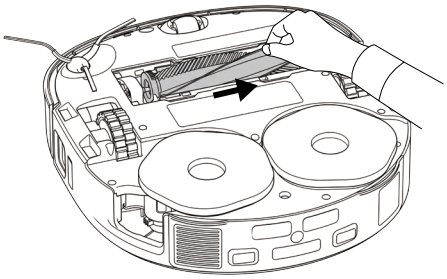


❸

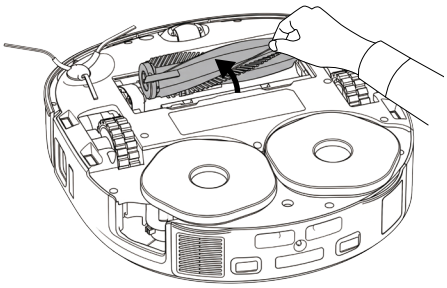


❹

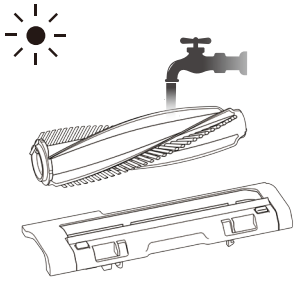

❺

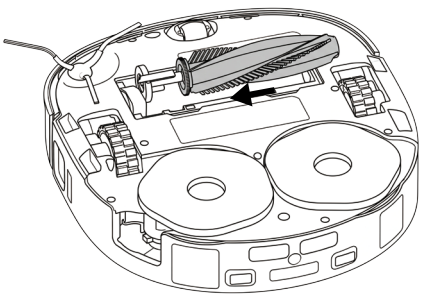

❻

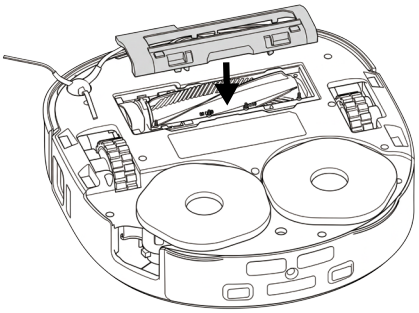

7.4 Clean the Side Brush


Foreign substances, such as hair, can easily get tangled in the side brush, so it is best to clean them regularly.

❶ Remove the side brush, and carefully unwind and pull off any hair or substances attached to the side brush.

❷ Clean the side brush with water, and air-dry before next use.

❸ Reinstall the side brush on RoboVac.


❶ ❷ ❸

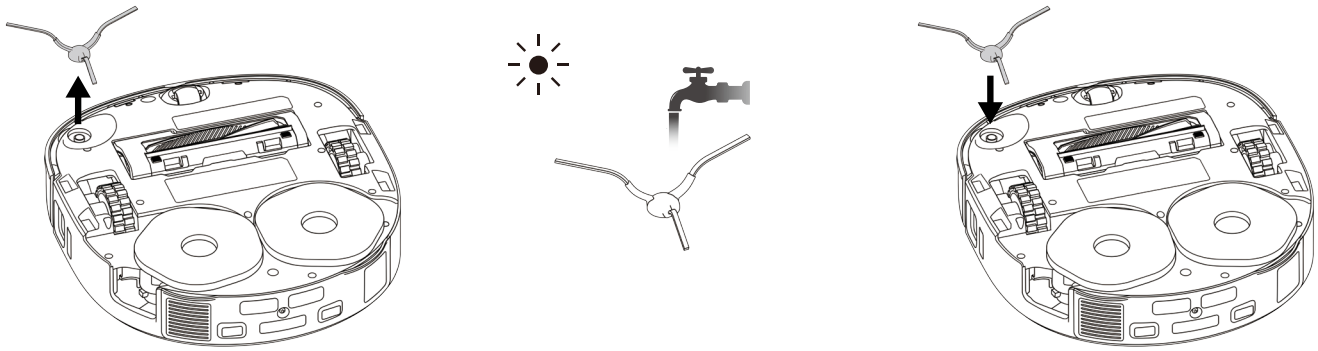

7.5 Clean Sensors and Charging Contact Pins


To maintain the best performance, clean the sensors and charging contact pins regularly.

Dust off the sensors and charging contact pins using a soft, dry cloth.

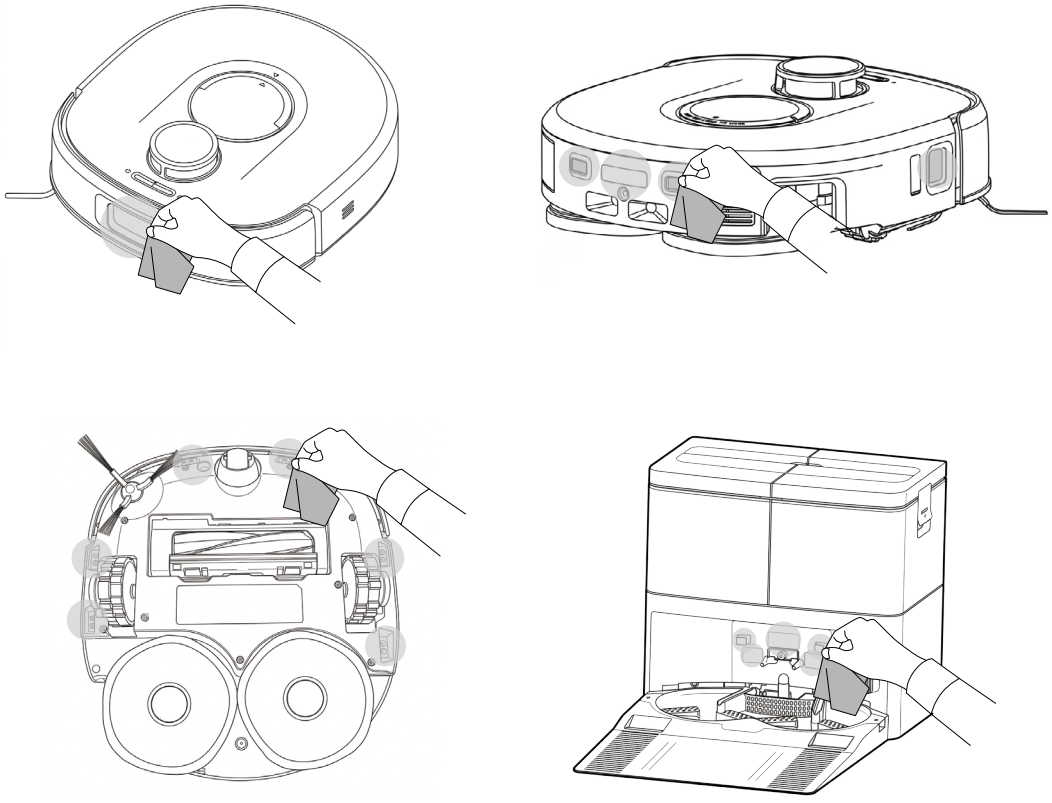


7.6 Clean the Dirty Water Tank

❶ Remove the dirty water tank from the Omni Station.
❷ Open and empty the dirty water tank.
❸ Rinse the dirty water tank thoroughly with running water.
❹ Close the dirty water tank cover.
* You will hear a "click" when it is securely in place.
❺ Reinstall the dirty water tank on the Omni Station.

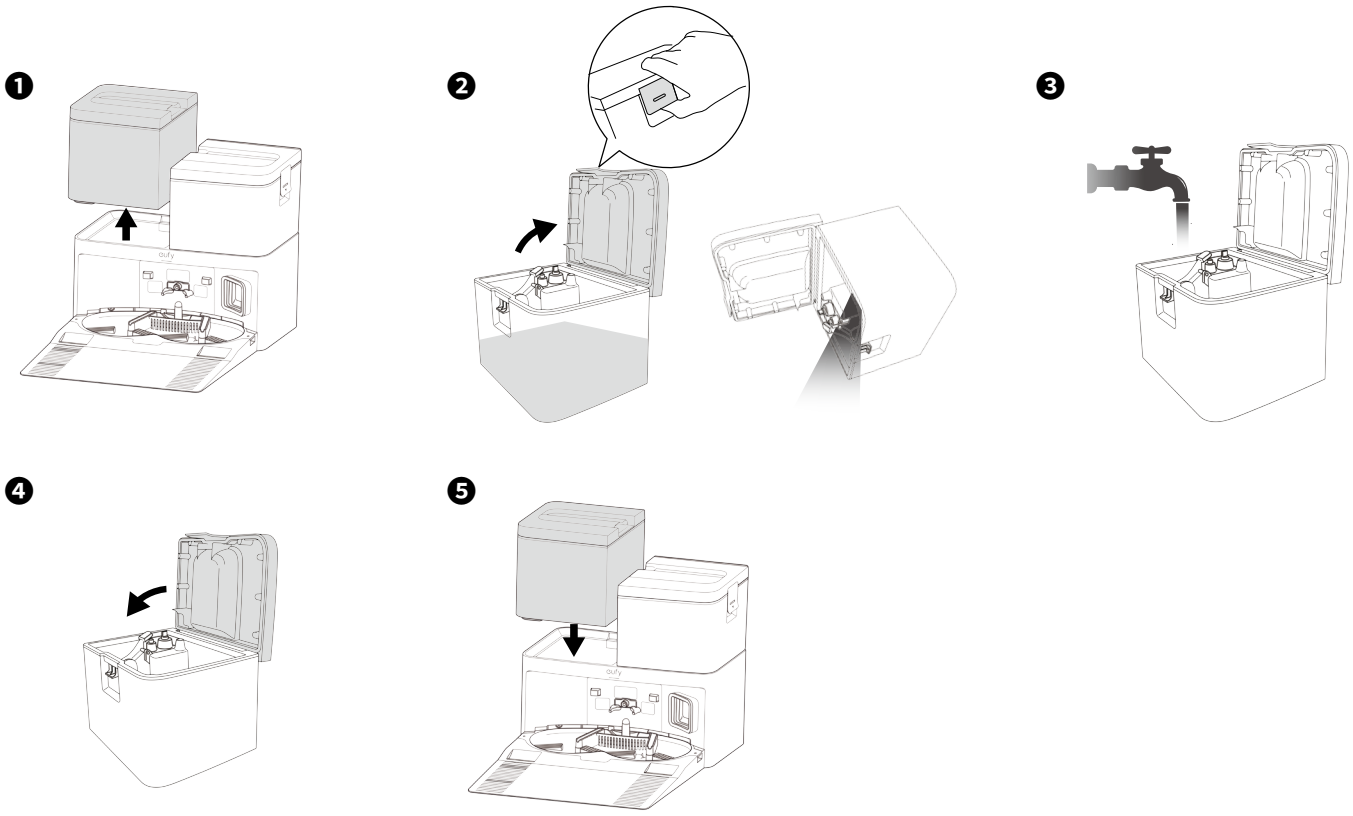


7.7 Replace the Dust Bag

❶ Remove the clean water tank and open the cover of the dust bag container.
❷ Take out the dust bag.
❸ Install a new dust bag. Ensure the dust bag is fully inserted, then close the cover.
❹ Place the clean water tank back.

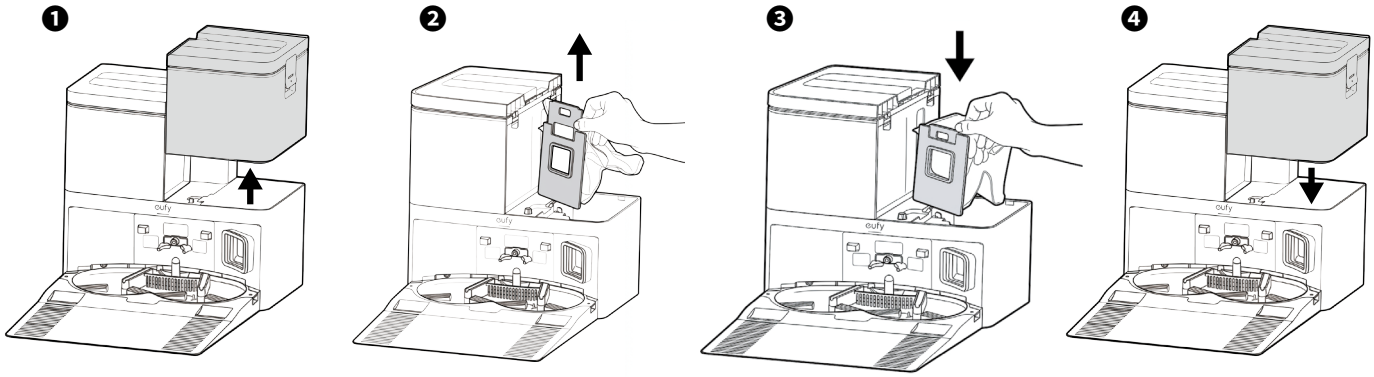


Make sure the dust bag compartment lid is in place — or the Auto Dust Emptying function won't work.

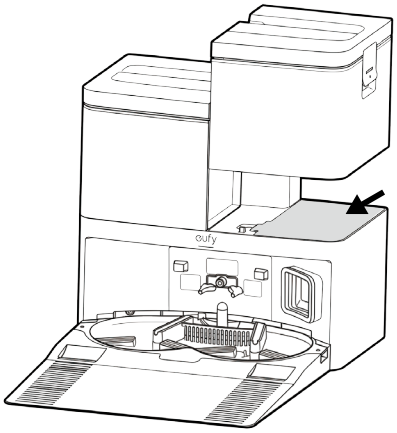

7.8 Clean the Mop Cleaning Tray

❶ Remove the mop cleaning tray from the Omni Station.
❷ Rinse the mop cleaning tray thoroughly with water, and clean it with a brush. Air-dry the mop cleaning tray before next use.
❸ Gently tilt the cleaning tray inward and align it with the two clips inside.
❹ Press down firmly on both sides until it clicks into place.
*The LED indicator on the Omni Station will turn from red to white when it is successfully installed.



❶ ❷ ❸ ❹

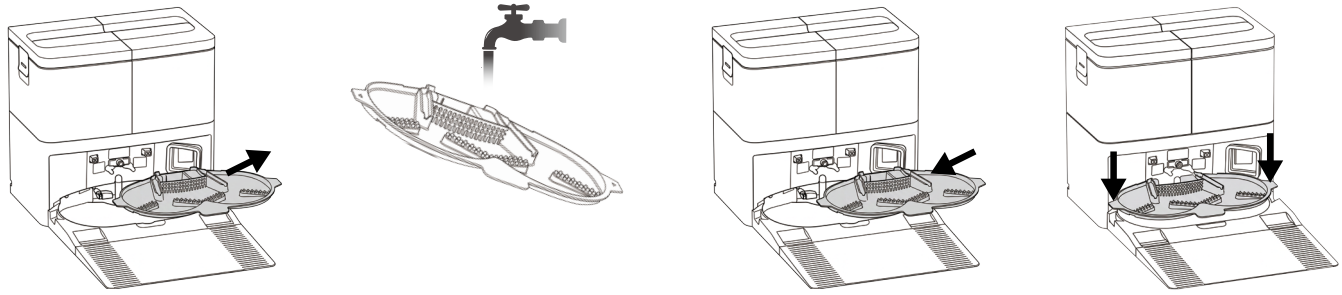

8. Troubleshooting

When an error occurs, refer to the in-app instructions for solutions.
If the problem persists, contact support@eufy.com for help.

9. Specifications

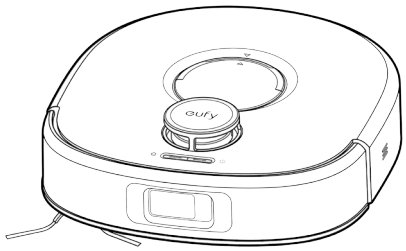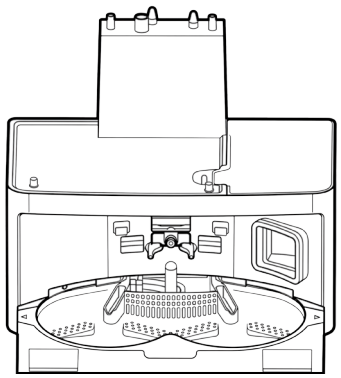	Model Name	T210Q / T210S
	Dimensions	357.5*329*114 mm
	Weight	4.9 kg (10.80 lbs)
	Battery	Li-ion 5200 mAh
	Input	20V ⎓ 1.8A
	Charging Time	< 5.5 H
	Water Reservoir (for C30 Edge only)	150 mL
	Operation Frequency	2.4G Band (2.4000GHz - 2.4835GHz)
	Water Resistance	Not rated. Do not expose to liquids beyond normal mopping operation.
	Model Name	T210Q / T210S
	Dimensions	500*330*315 mm
	Weight	4.8 kg (10.58 lbs)
	Input	100-240V ~ 50/60 Hz
	Power	Dust collection: 500 W
	Clean Water Tank	3L
	Dirty Water Tank	2.5L
	Disposable Dust Bag Capacity	2.5L
	Water Resistance	Not rated. Do not expose to liquids beyond normal mopping operation.

As voltages vary across different countries and regions, we recommend purchasing the machine version specific to your location to avoid potential safety hazards and equipment damage.

10. Customer Service

For support, FAQs, and troubleshooting guides:
Website: www.eufy.com/support
Email: support@eufy.com

11. Other Information

A. the equipment does not have a standby mode or other equivalent state in terms of energy efficiency requirements, power management function or the ability to deactivate wireless network connections mode;

B. the power consumption of the equipment is likely to be higher than other equipment models meeting these functional requirements.

1. Power consumption in standby mode: ≤ 0.5 W
2. Power consumption in standby mode with Display: ≤ 0.8 W
3. Power consumption in networked standby mode: ≤ 2 W
4. Power management: ≤ 20 min

Network Configuration Instructions

Network Configuration Process:

By default, the device is configured via BLE (Bluetooth Low Energy) through the mobile app. If BLE configuration fails, a button to try another configuration method (AP mode) will appear.

1. BLE (Bluetooth Low Energy) Configuration:

Trigger Condition:

Activate Bluetooth network configuration by pressing the device's reset button.

Status Description:

When the device is not yet connected to a network, it will automatically enable BLE broadcasting and activate BLE services to provide Bluetooth-based network configuration.

2. AP (Access Point) Configuration:

Trigger Condition:

Activate AP network configuration by pressing the device's reset buttons.

Status Description:


When the device is not yet connected to a network, it will broadcast an open (no password) and visible AP hotspot to provide network configuration via AP mode.

The device will:

- Listen for network configuration requests over HTTP on TCP ports 8899 and 8900, and over TLS on TCP port 9668.

Note:

During the BLE and AP configuration processes, please ensure your network environment is stable and follow the instructions to complete the setup. If you encounter any issues, you can press the reset button again to restart the configuration process.

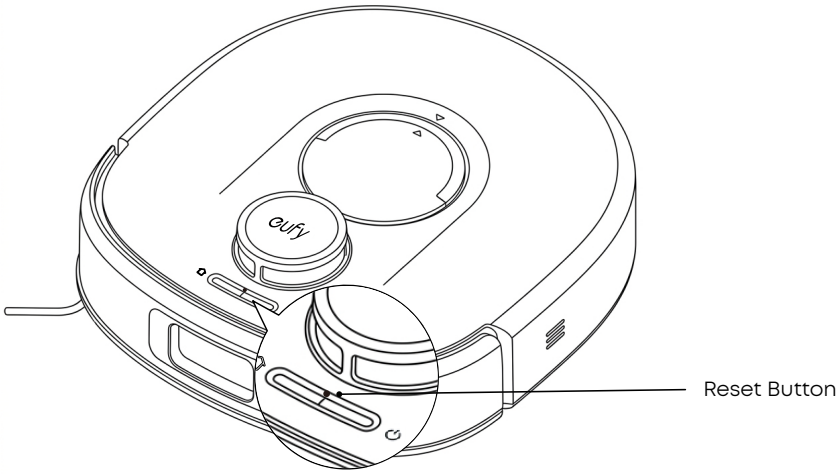

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

WARNING

To reduce the risk of fire, electric shock, or injury:

1. Do not leave this appliance when plugged in. Unplug from outlet when not in use and before servicing.
2. Do not use as a toy. Close attention is necessary when used by or near children.
3. Use only as described in this manual. Use only manufacturer's recommended attachments.
4. Do not use with a damaged cord or plug. If this appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
5. Do not pull or carry by the cord, use the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners. Do not run the appliance over the cord. Keep the cord away from heated surfaces.
6. Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord.
7. Do not handle the plug or appliance with wet hands.
8. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
9. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
10. Turn off all controls before unplugging.
11. Exercise extra care when cleaning on stairs. If there is a drop-off in the cleaning area due to a step or stairs, you should operate the appliance to ensure that it can detect the step without falling over the edge. It may be necessary to place a physical barrier at the edge to keep the appliance from falling. Make sure the physical barrier is not a trip hazard.
12. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where these liquids may be present.
13. Do not pick up anything that is burning or emitting smoke, such as cigarettes, matches, or hot ashes.
14. Do not use without dust bag, water tank, or filters in place.
15. ⌂: The appliance is intended for household and indoor use. Do not use outdoors or on wet surfaces.
16. Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.
17. Prevent unintentional starting of the appliance. Ensure the switch is in the off-position before picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing the appliance that has the switch on can lead to accidents.
18. Use appliances only with specifically designated battery packs. Use of any other battery packs may lead to risk of injury and fire.
19. When the battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws, or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
20. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, seek medical help at once. Liquid ejected from the battery may cause irritation or burns.
21. Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.
22. Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C/266°F may cause explosion.
23. Follow all charging instructions and do not charge the appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
24. During charging, the battery must be placed in a well-ventilated area.
25. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
26. Do not modify or attempt to repair the appliance or the battery pack except as indicated in the instructions for use and care.
27. Charging, using and storing of the appliance should be within a room temperature range of 10-40°C/50-104°F.


28. Place the cords from other appliances out of the area to be cleaned. Do not operate the vacuum in a room where an infant or child is sleeping.
29. Do not operate the appliance in an area where there are lit candles or fragile objects on the floor to be cleaned. Do not operate the vacuum in a room that has lit candles on furniture that the vacuum may accidentally hit or bump into. Do not allow children to sit on the vacuum. Do not use the vacuum on a wet surface.
30. In a double-insulated appliance, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated appliance, nor should a means for grounding be added to the appliance. Servicing a double-insulated appliance requires extreme care and knowledge of the system, and should be done only by qualified service personnel. Replacement parts for a double-insulated appliance must be identical to the parts they replace.
31. The appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with this appliance. Cleaning and user maintenance should not be implemented by children without supervision.
32. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid hazard.
33. The appliance contains batteries that are only replaceable by skilled persons.
34. The plug must be removed from the socket-outlet before cleaning or maintaining the station.
35. A hazard may occur if the appliance runs over the supply cord.
36. WARNING: For the purposes of recharging the battery, only use the T210Q / T210S station provided with this appliance.
37. The station is only to be used with Robot Vacuum Omni C30 Edge / C30 cleaners. Do not use the Station with other units or recharge non-rechargeable batteries. A station that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
38. The appliance is not to be used if it has been dropped, if there are visible signs of damage, or if it is leaking.
39. Do not use non-rechargeable batteries. Replace only with the battery model: C0914D8. Before removing the battery, turn off this appliance. To remove the battery, first unscrew the screws on the bottom, then remove the back cover. Disconnect the battery connector to remove the battery. The connector of the battery only fits one way. If the connector does not fit during the connection, reverse the connector. The used battery should be placed in a sealed plastic bag and disposed of safely according to local environmental regulations.
40. To enter CEC and ERP modes (low power mode), when the robot is in the station, press and hold the recharge button for 14 seconds. The light will flash at a frequency of once per second, indicating it has entered CEC and ERP modes. Press and hold the power button for 2 seconds to exit CEC and ERP modes.
41. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
42. CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
43. The device is equipped with one lithium battery with a rated capacity of 4800 mAh that can be charged.

(For US/CA) Connect to a properly grounded outlet only. See Grounding Instructions.

GROUNDING INSTRUCTIONS

1. This appliance must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.
2. WARNING – Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

3. This appliance is for use on a nominal 120-V circuit and has a grounding attachment plug that looks like the plug illustrated in sketch A in the figure below. Make sure that the appliance is connected to an outlet having the same configuration as the plug. No adapter should be used with this appliance.

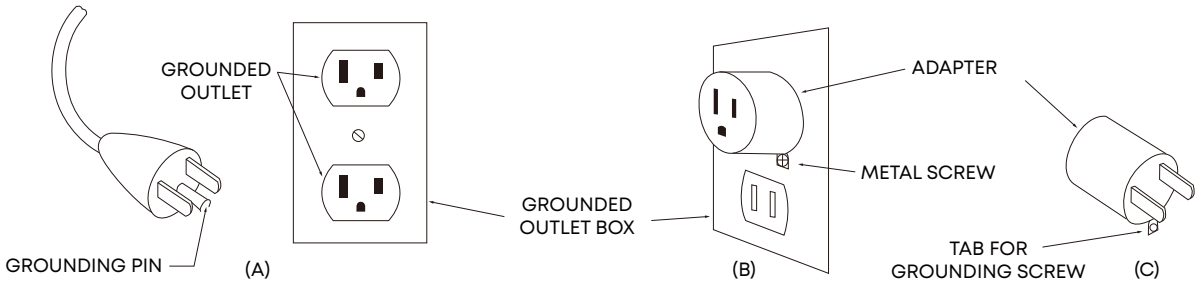

Environmental Notice

1. The built-in lithium-ion batteries of this robot vacuum contain chemicals that may pollute the environment.
2. Before disposing of this product, ask a professional to remove the batteries and then discard them at an appropriate recycling facility.
3. The battery must be removed from the appliance before it is scrapped.
4. The appliance must be disconnected from the supply mains when removing the battery.
5. The battery is to be disposed of safely.

SAVE THESE INSTRUCTIONS

Notice



This symbol on the device or its packaging indicates:

Do not dispose of electrical appliances as unsorted municipal waste; use separate collection facilities. Contact your local authorities for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obliged to take back your old appliance for disposal free of charge.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and radiates radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio / TV technician for help.

The following importer is the responsible party (for FCC matters only).

Company Name: POWER MOBILE LIFE, LLC

Address: 10800 NE 8TH ST #900, BELLEVUE, WA, 98004, UNITED STATES

Telephone: 1-800-988-7973

FCC RF Exposure Compliance Statement

This equipment complies with the FCC/IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

ISED Compliance Statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.

2. This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter.

Laser Safety Information

The laser sensor in this product meets the IEC 60825-1: 2014 and EN 60825-1:2014/A11:2021 Standard for Class 1 laser products. Please avoid direct eye contact with it during use.

CLASS 1 LASER PRODUCT

CONSUMER LASER PRODUCT EN 50689:2021

EU Declaration of Conformity

This product complies with the radio interference requirements of the European Community. Hereby, Anker Innovations Limited declares that the radio equipment type T210Q / T210S is in compliance with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following website: https://support.eufy.com/s/articleRecommend?type=DownLoad&secondType=doc.

Maximum output power is less than 20 dBm (For EU)

Frequency band: 2.4G band (2.4000GHz - 2.4835GHz)

GB Declaration of Conformity

Hereby, Anker Innovations Limited declares that the product type T210Q / T210S is in compliance with Radio Equipment Regulations 2017 and The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012. The full text of the GB Declaration of Conformity is available at the following website: https://support.eufy.com/s/articleRecommend?type=DownLoad&secondType=doc.

The following importer is the responsible party for EU and UK matters.

ANKER TECHNOLOGY (UK) LTD

39 Clarendon Road, Watford, Hertfordshire, England, WD17 1JA, United Kingdom

Anker Innovations (Malta) CO.LTD

Villa Malitah, Mediterranean Street, The Village St. Julian's STJ 1870 Malta.

Manufacturer:

Anker Innovations Limited

Unit 56, 8th Floor, Tower 2, Admiralty Centre, 18 Harcourt Road, Hong Kong

UK PSTI Statement

Hereby, Anker Innovations Limited declares that this device is in compliance with the Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023. For the statement of compliance, visit the website: https://passport.eufy.com/uk/psti-related

Australian Smart Device Security Statement

Hereby, Anker Innovations Limited declares that this device is in compliance with the Cyber Security (Security Standards for Smart Devices) Rules 2025. For the Statement of Compliance, visit the website: https://passport.eufy.com/au/ssfsd-related.

Trademark Notice

- Amazon, Echo, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates.
- Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc., registered in the U.S. and other countries.
- Google Play and the Google Play logo are trademarks of Google Inc.
- Google Home is a trademark of Google Inc.