Fanttik

C10 PRO Electric Scissors

User Manual



Please read this instruction manual carefully before use and keep it for future reference.

Contents

1. Safety Warning ---------- 02
2. Package Contents ---------- 05
3. Product Overview ---------- 06
4. Operation and Functions ---------- 07
5. Specifications ---------- 12

1. Safety Warning

Important! It is essential that you read the instructions in this manual before assembling, maintaining and operating the product.

The cutting tool is intended to be used only by adults who have read and understood the instructions and warnings in this manual, and can be considered responsible for their actions. The product is intended for cutting paper, cardboard, carpet, rubber, leathers, thin plastics, vinyl,and similar materials. It can be used for straight and curved cuts.Do not use the product to cut wood or metal.Do not use the product for any other purpose.Otherwise, it may cause danger.

WARNING! Read all safety warnings, instructions, illustrations and specifications provided with this power tool.

Save all warnings and instructions for future reference.

WARNING! Do not place your hand or fingers near the blades.

Ambient temperature range for tool during operation is between 0°C and 40°C. Ambient temperature range for tool storage is between 0°C and 40°C.The recommended ambient temperature range for the charging system during charging is between 10°C and 38°C.

ADDITIONAL BATTERY SAFETY

WARNINGS


To reduce the risk of fire, personal to a short circuit, never immerse your tool, battery pack or charger in fluid or allow fluid to flow inside them. Corrosive or conductive fluids , such as seawater, certain industrial chemicals, and bleach or bleachcontaining products, etc., can cause a short circuit. Ambient temperature range for battery during use is between 0°C and 40°C. Ambient temperature range for battery storage is between 0°C and 20°C.

MAINTENANCE


The product should never be connected to a power supply when assembling

parts, making maintenance, or when the product is not in use. Disconnecting the product from the power supply will prevent accidental starting that could cause When servicing, use only original
manufacturer’s replacement parts, accessories and attachments. Use of any other parts may create a hazard or cause product damage.Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to various types of commercial solvents and may be damaged by their use. Use clean cloths to remove dirt, carbon dust,
etc.Do not at any time let brake fluids, gasoline, petroleum-based products, penetrating oils, etc., come in contact with plastic parts. Chemicals can damage, weaken or destroy plastic which may result in serious personal.


2. Package Contents

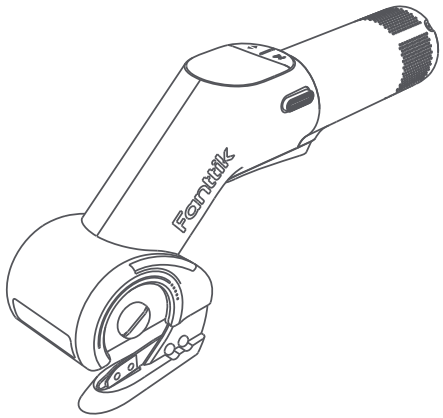


Electric Scissors * 1

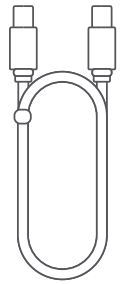


Charging Cable * 1

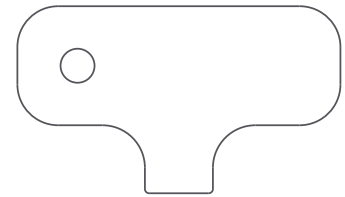


Blade Replacement Key * 1

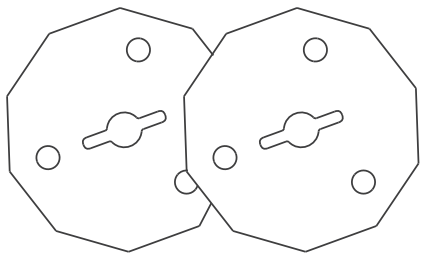

Blade * 2

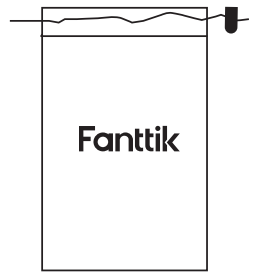


Storage Bag * 1

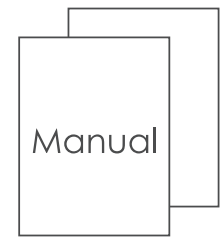

User Manual * 1

3. Product Overview

1. Lock Off Buttom
2. Blade
3. Support Frame
4. Display Screen
5. Mode Selection Knob
6. Type-C Charging Port
7. On/Off Switch
8. Forward and reverse switch button

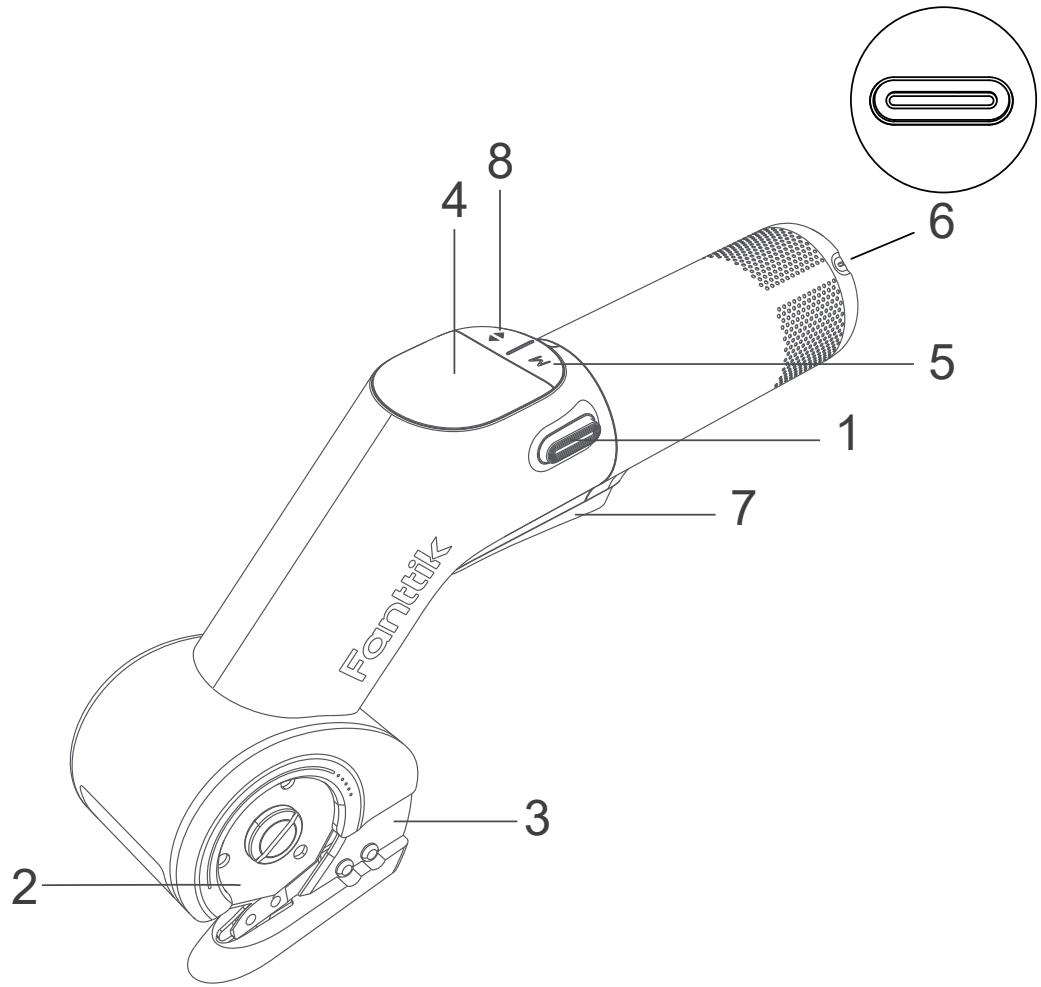


4. Operation and Functions

Operation intended Use

The tool is intended for cutting flexible, soft materials of up to 10 mm in thickness, such as carpet, PVC, cardboard, leather,fabrics and similar materials


1. On/Off Switch

- Your switch is locked off to prevent accidental starting. Depress lock off button then on/off switch and release lock off button.
- Your tool is now on. To switch off just release the on/off switch.

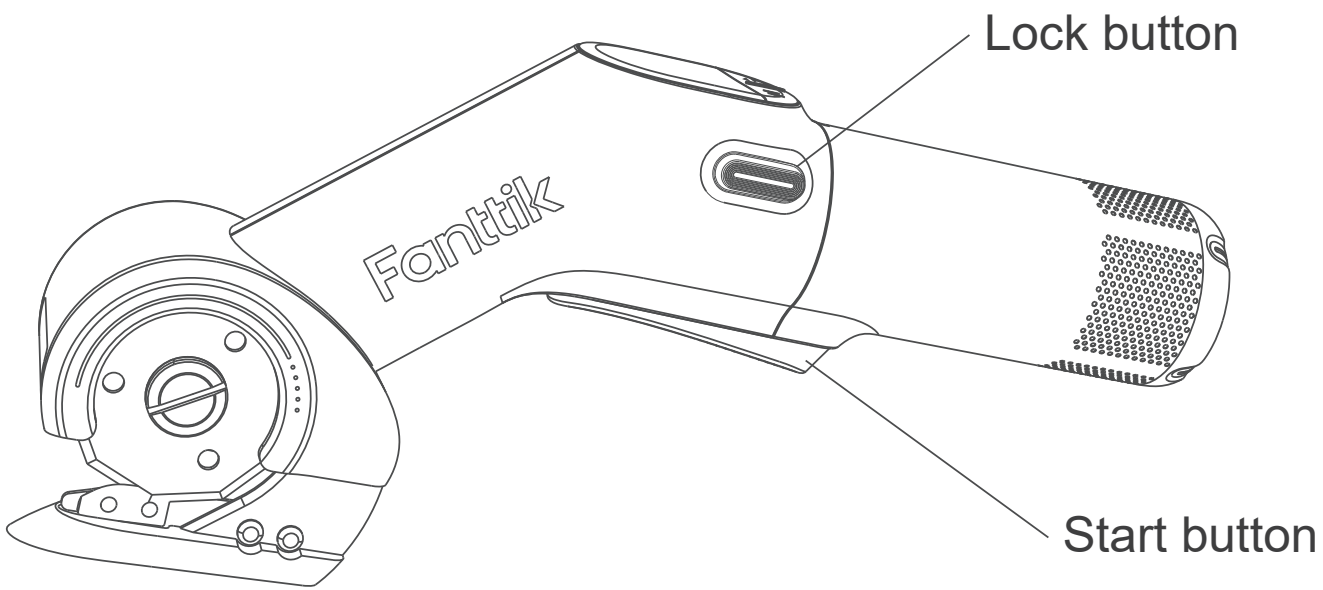


2.Charging The Tool

- The device is equipped with a universal Type-C charging port and comes with a USB charging cable. Charger is not included,Please use a 5V charger for charging.
- When the battery is empty, the machine is switched off by means of a protective circuit: the blade will no longer move.
- In a warm environment or after heavy use, the battery pack may become too hot to permit charging. Allow time for the battery to cool down before recharging.

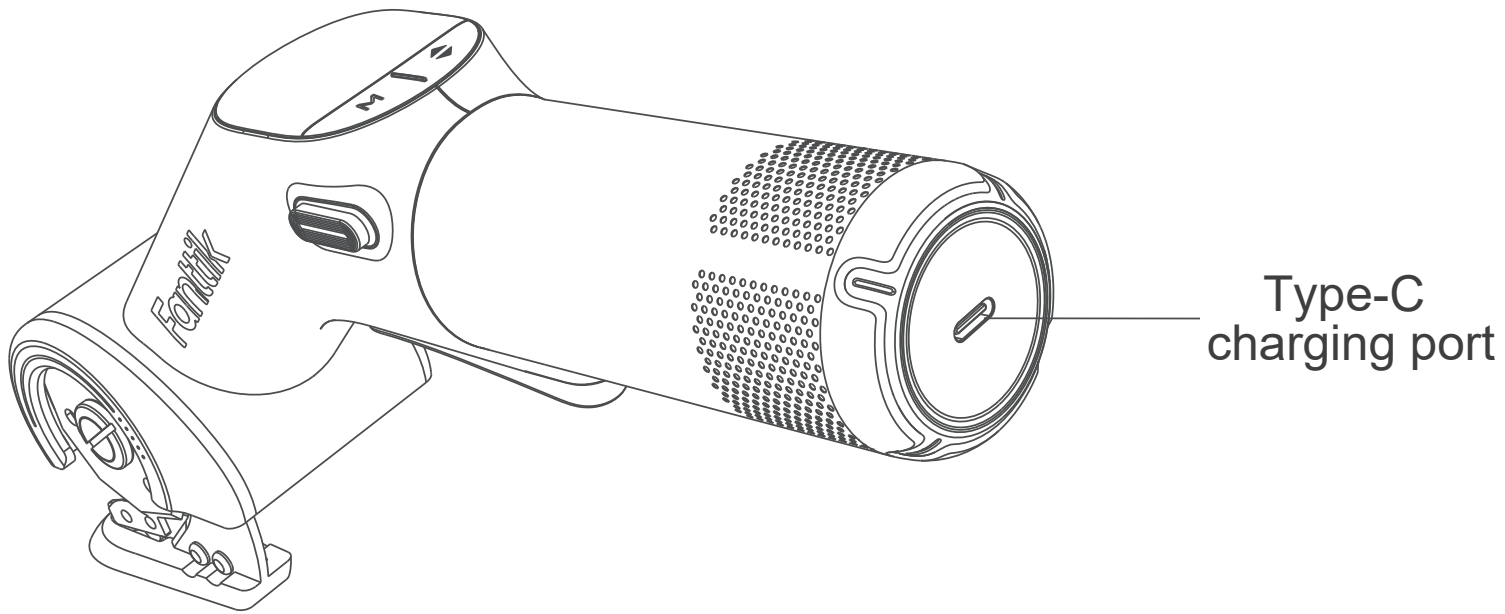


3. Gear Shift

- The machine is equipped with two different gears (ECO and MAX), and the speed of each gear is different. You can switch gears by rotating the button below the screen.

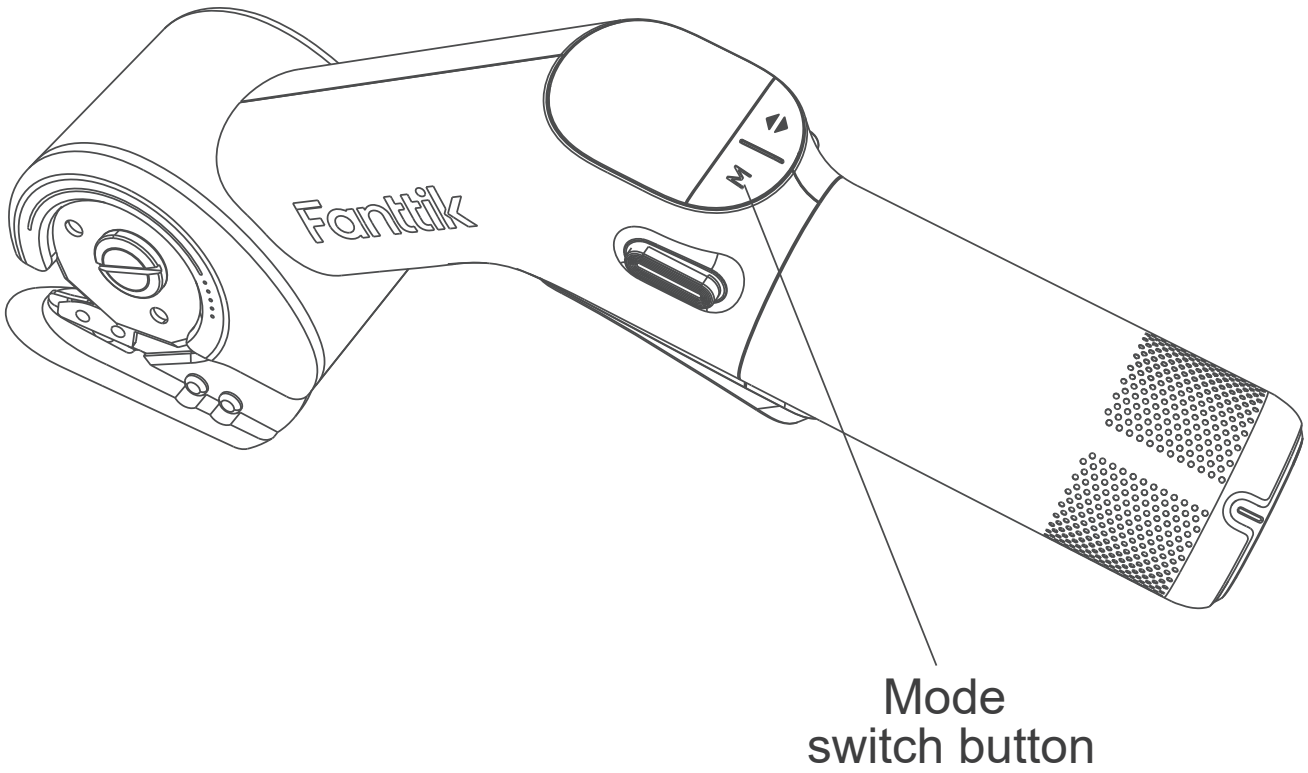


4.Cutting/Reverse Retract Mode

- Thin materials, such as fabrics, can be pulled into the tool during cutting and become wedged. Therefore, do not apply too much pressure with these materials in order to achieve good cutting results. During cutting, apply sufficient
  tension while holding fabrics and cut slowly.
- In extreme cases where the blade jams while cutting thick cardboard or thin fabric, press the reverse button and pull the trigger for reverse rotation to quickly dislodge. It enters sleep mode after 5 seconds of inactivity and defaults to forward rotation when restarted.
- WARNING! Do not allow the support frame to become wedged during cutting.

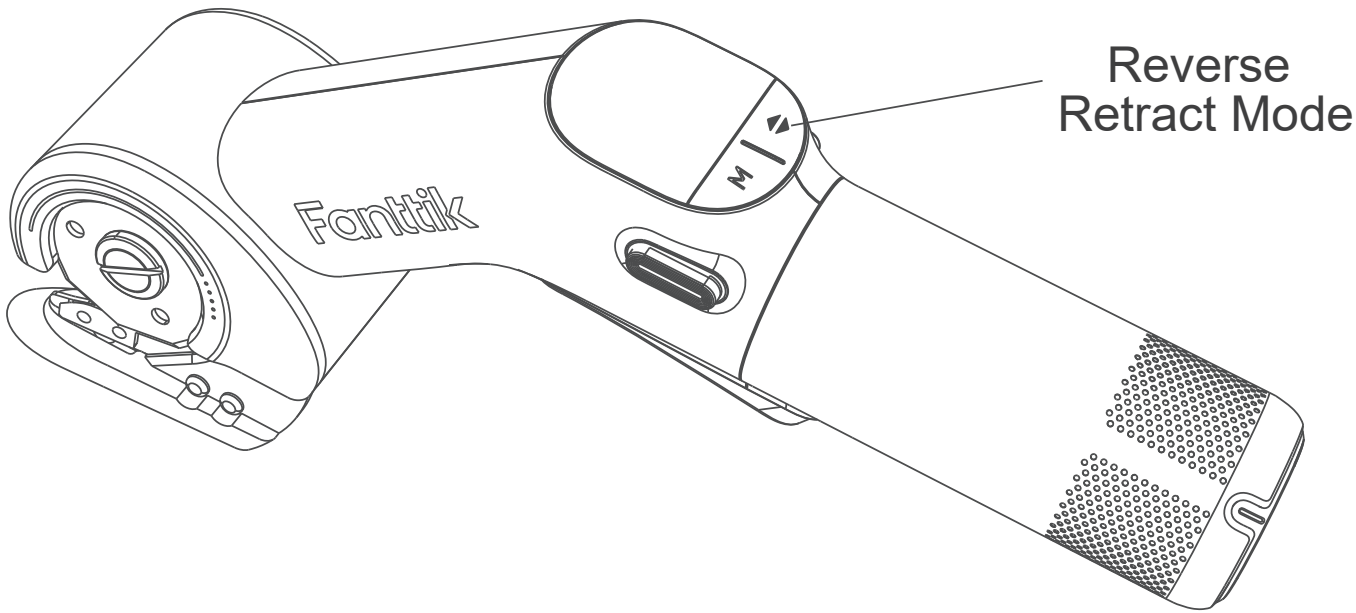

5.Blade Replacing

When the machine is in the off state, you can directly use a screwdriver to align with the slot on the blade flange to remove the blade. Our product adopts patented technology, which allows for easy blade replacement without the need for a shaft lock button.

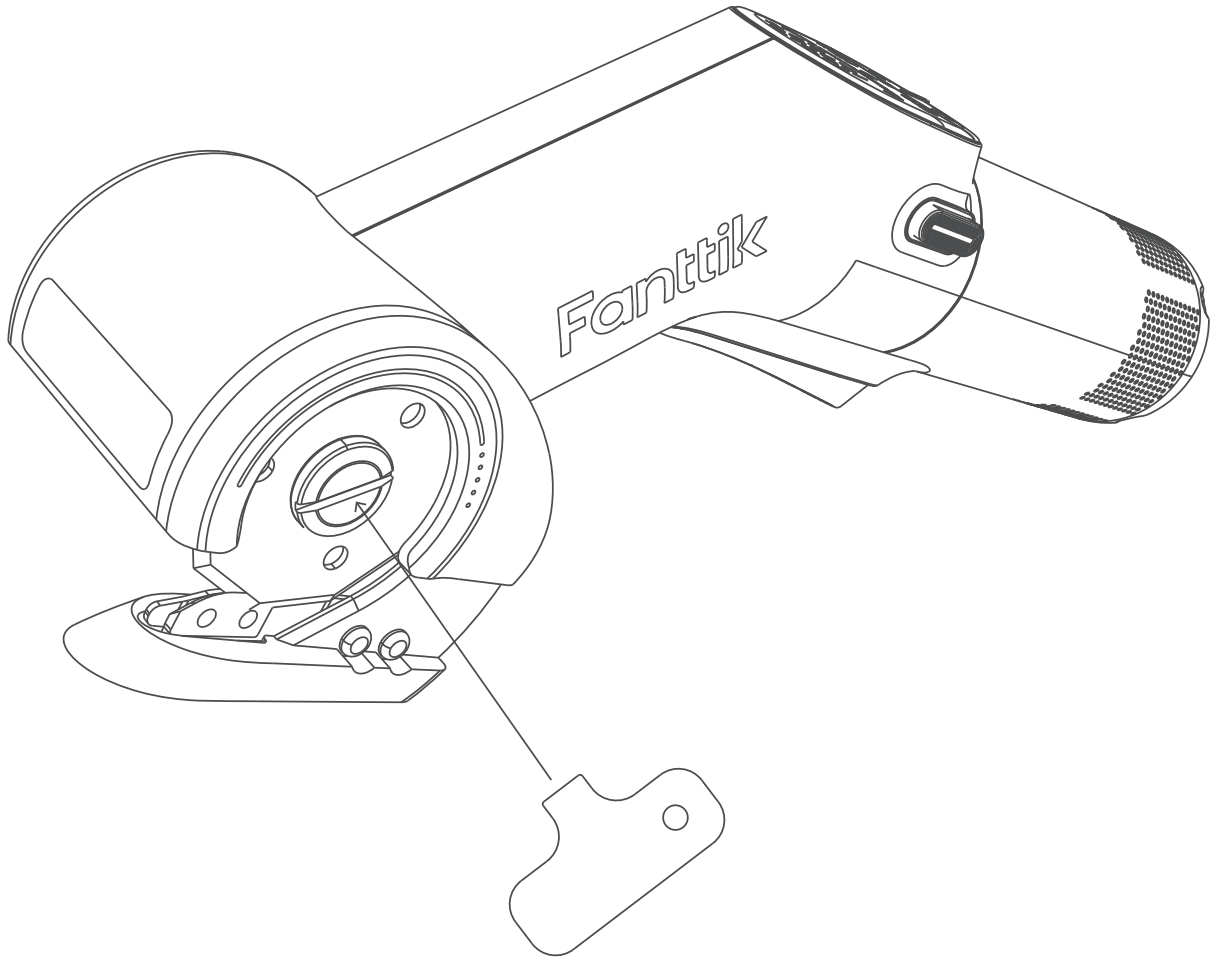

5. Specifications

Product Name	Electric Scissors
Product Model	C10 Pro
Product Dimension	24.5cm*11.1cm*5.9cm
Net Weight	550g±10%
Cutting Depth	10 mm
No load speed	350/600±10% RPM
Rated Voltage	7.4V
Charging Input	5V ⎓ 2A

EC REP
Lienco SAS
8 Rue Marcel Cerdan, 77600,
Bussy Saint Georges, France
Email: ruoyu@lienco.eu
Phone/Fax: +33766929910


UK REP
CET Product Service Ltd.
Beacon House Stokenchurch Business
Park, Ibstone Rd, Stokenchurch High
Wycombe HP14 3FE UK
Email: info@cetproduct.com
Phone/Fax: +44 7419325266





points de collecte sur www.quefairedemesdechets.fr
privilégiez la réparation ou le don de votre appareil !



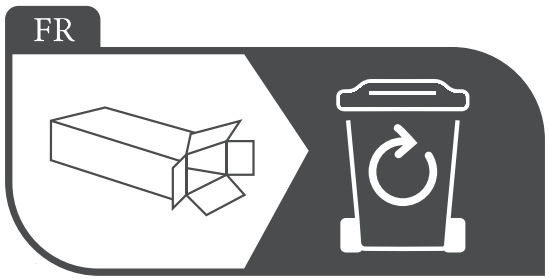

[Service hotline available in the U.S. and Canada only]
929-693-6066 MON-FRI 9AM-5PM[ET]
www.fanttik.com
support@fanttik.com
Manufacturer/Hersteller: METASEE LLC
Address/Adresse: 12 GREENWAY PLZ STE 1161A
HOUSTON, TX 77046-1203

Made in China

RoHS IC CE FC BC UK CA



