
Fanttik

NB8 Flip Multifunctional Portable lithium battery Washer

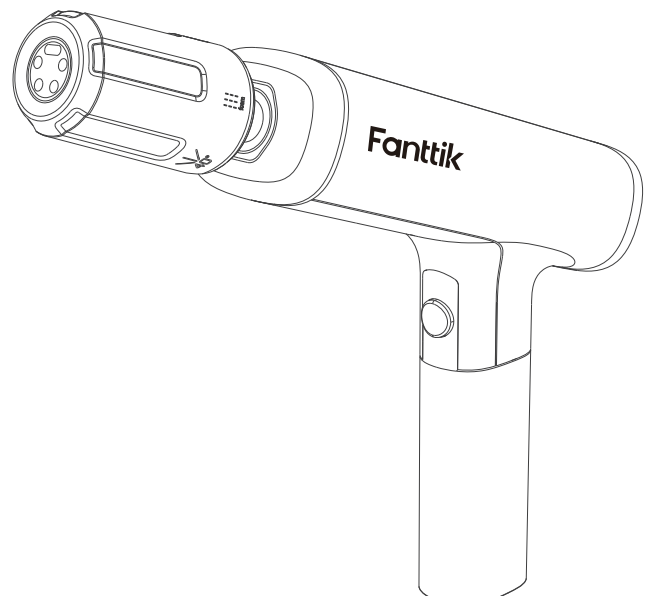

User Manual

Please read this instruction manual carefully before use and keep it for future reference.

Contents

Safety Warnings ---------- 02

Package Contents ---------- 04

How to Use ---------- 05

Specifications ---------- 09

Troubleshooting ---------- 10

1.Safety Warnings


Notice:

1. **Keep away from fire and high-temperature environments:** Avoid placing the car washer near sources of fire or other high-temperature areas. Also, ensure that the machine (including the built-in lithium battery) is not exposed to heat sources or fire, and avoid storing it for long periods in direct sunlight.
2. **Handle the lithium battery pack with care:** Do not subject the lithium battery pack to mechanical impacts, do not disassemble or open it, and do not charge it for extended periods. It is recommended to charge the lithium battery pack once every three months to maintain its performance.
3. **Use the high-pressure nozzle correctly:** Incorrect use of the high-pressure nozzle can be dangerous. Therefore, do not point the nozzle directly at people, animals, live electrical devices, or the car washer itself. Also, avoid spraying water onto devices containing electrical components.
4. **Prevent children and incapacitated individuals from using:** Do not allow children or individuals who are incapacitated or mentally impaired to use the product to ensure safety.
5. **Handle damage or malfunction properly:** If the product is accidentally damaged or malfunctions, stop using it immediately and have it inspected or replaced by a professional.
6. **Suitable operating environment:** Use the product at room temperature (20°C ± 5°C) to ensure optimal performance of the lithium battery pack.
7. **Correct cleaning method:** When cleaning the product, use a dry cloth and do not use water, gasoline, alcohol, or other chemical solvents.

8. **Regular maintenance:** Regularly clean the inlet filter and water pipe filter to ensure the normal operation of the equipment.
9. **Recycle discarded batteries:** Discarded batteries should be recycled properly and not disposed of randomly.
10. **Use the charger correctly:** Only use the provided charger on designated devices and avoid charging in high-temperature environments. Charge indoors only to prevent exposure to rain.
11. **Replace lithium battery pack: I**f the lithium battery is damaged, it must be replaced by the manufacturer, their service department, or a similar professional to avoid potential dangers.

Following these safety precautions can ensure the safe use of the car washer and prolong its service life.

2.Package Contents

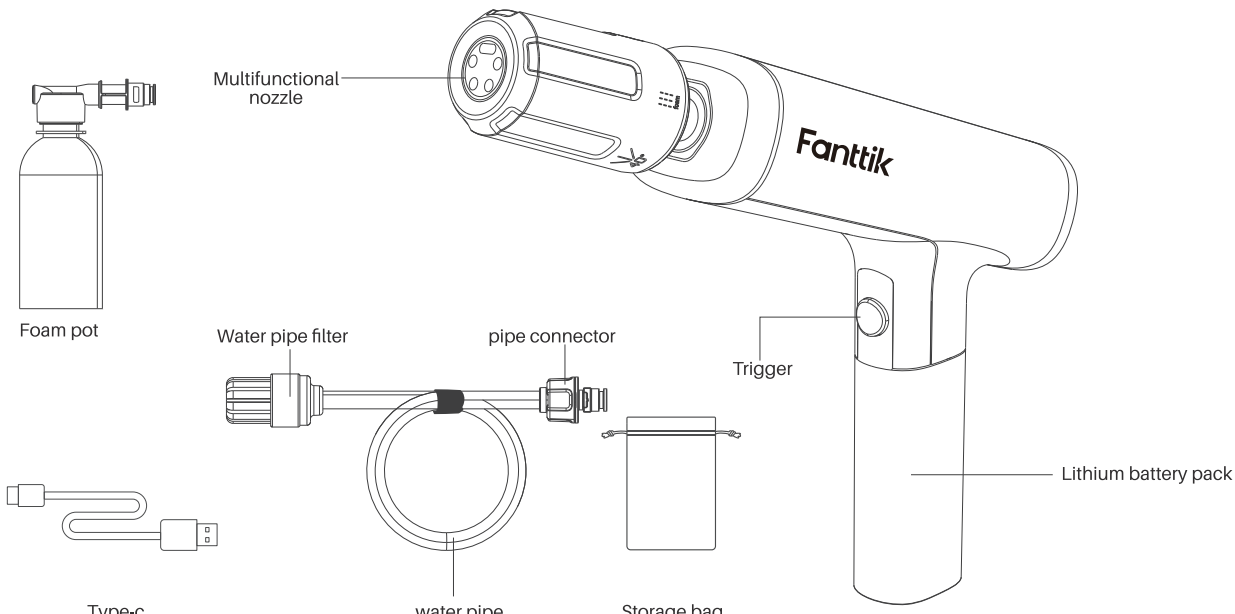

3.How to Use


I-How to fold & unfold

1- After use, please remove the nozzle and water inlet hose, and empty any remaining water inside the machine and the water inlet hose.


2- Note: Store the machine in a safe and dry place, away from children.

3- To prevent accidental folding of the handle during use, we have designed a handle folding unlocking mechanism.

4- Specific operation: first, pull down the handle with slight force like ①, then rotate clockwise to fold the handle, as shown in the diagram; when needing to open for use, simply rotate the handle counterclockwise like ②.

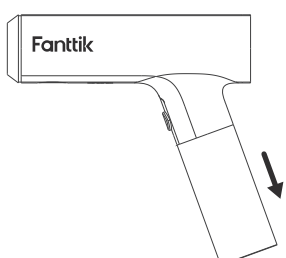

①

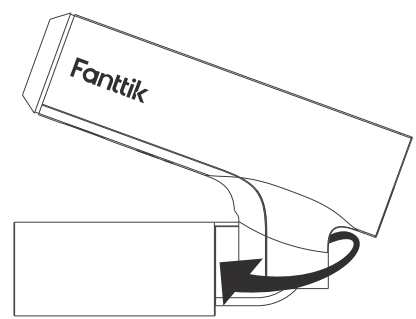


②

II-How to install sprinkler head & water pipe & foam pot

1-Installation and use of the multi-function nozzle

① Aim the multi-function nozzle at the muzzle, press and rotate clockwise to lock.


② Rotate the multi-function nozzle to select the nozzle mode.

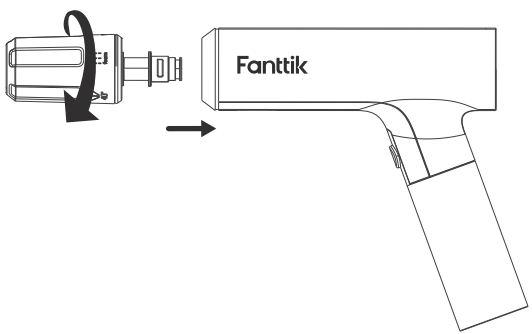

2- Water inlet pipe installation

① Insert the water pipe connector into the water inlet of the main unit, and then turn it clockwise to tighten it.

② Pinch the water pipe connector and turn it counter-clockwise to pull out and remove the water pipe.

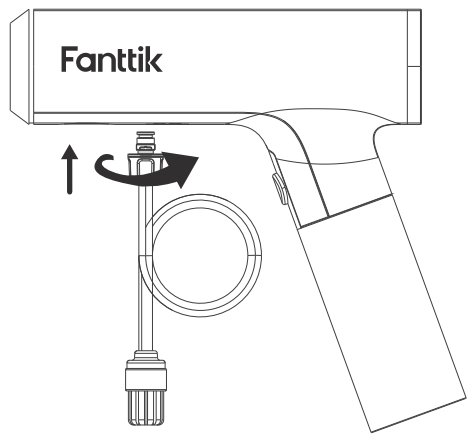


3-Installation and use of foam pot and nozzle

Note: During use, do not point the nozzle at others or yourself


1). Pour the car wash agent into the foam pot, then add water to dilute it to the maximum scale line on the pot body.

2). Replace the pot cover, insert it and turn it clockwise to lock it.

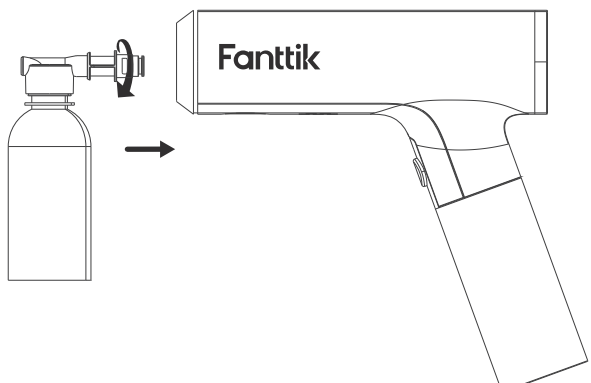

4-3 gears one-touch switching


Press the mode switch button to switch the mode. After connecting the water pipe, pull the trigger to start water discharge.

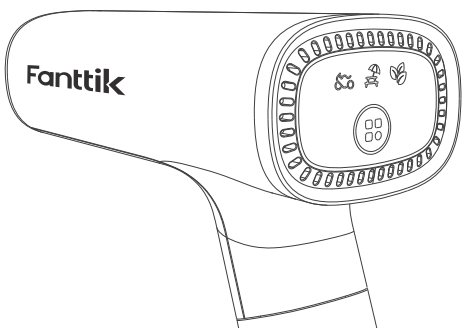

5-Charging the lithium battery pack

Before use, please turn on the device to confirm the power status. If it cannot be turned on normally or the water pressure is low, it means that the lithium battery pack is low in power and needs to be charged before use. It is recommended to charge it once after each use.

1). As shown in the figure below, open the waterproof rubber plug, insert the charger (this product supports conventional 5V charger) into the Type-C charging port, and start charging. During the process, pay attention to the status of the battery pack power light. The circular indicator light at the bottom stops pulsing and turns solid green to indicate that charging is complete.

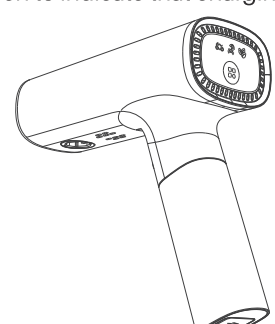

4.Specifications

Model	NB8 Flip
Rated power	100W
Rated voltage	7.4V
Pressure of high gear	174psi
Pressure of middle gear	130psi
Pressure of low gear	100psi
Flow of high gear	0.66gpm
Flow of middle gear	0.57gpm
Flow of low gear	0.48gpm
Battery capacity	2.5Ah
Battery runtime	12-30min
Charging time	3-5H
Product weight	1256g

5.Troubleshooting

Fault	Cause	Solution
No power after powering on	Low battery	Charging batteries
Battery unable to charge	The battery and charger are not connected properly	Reinsert the charger into the battery, making sure it is firmly connected.
	Charger not connected to power source	Check whether the power supply is powered normally and make sure the charger is connected to it correctly.
Little or no water output	The filter is clogged, causing poor water flow	Clean the filter and water inlet screen
	Inlet pipe is tangled	Straighten or replace the water inlet pipe
	Lots of impurities in the water	Replace with clean water
	Nozzle clogged	Clean the nozzles

Fault	Cause	Solution
Does not absorb water	Poor connection between water pipe joint and water inlet	Connect the water inlet pipe joint to the water inlet of the machine
	The water filter is not fully inserted into the water	Insert the water filter completely into the water.
	The sealing ring of the water inlet pipe falls off or is damaged	Install or replace the seal
Long waiting time for water discharge	Water absorption height is too high	Move the host closer to the water surface
	Battery is too low	Use after fully charged
	Low gear selected	Choose strong gear
Water outlet leaks	The nozzle is not installed properly	Install the nozzle and the main unit in place

929-693-6066 MON-FRI 9AM-5PM (ET)
www.fanttik.com
support@fanttik.com
METASEE LLC
12 GREENWAY PLZ STE 1161A HOUSTON, TX 77046-1203

Made in China

