
Fanttik

Slim V9 Mix Cordless Handheld Vacuum Cleaner
Kabelloser Handstaubsauger

User Manual

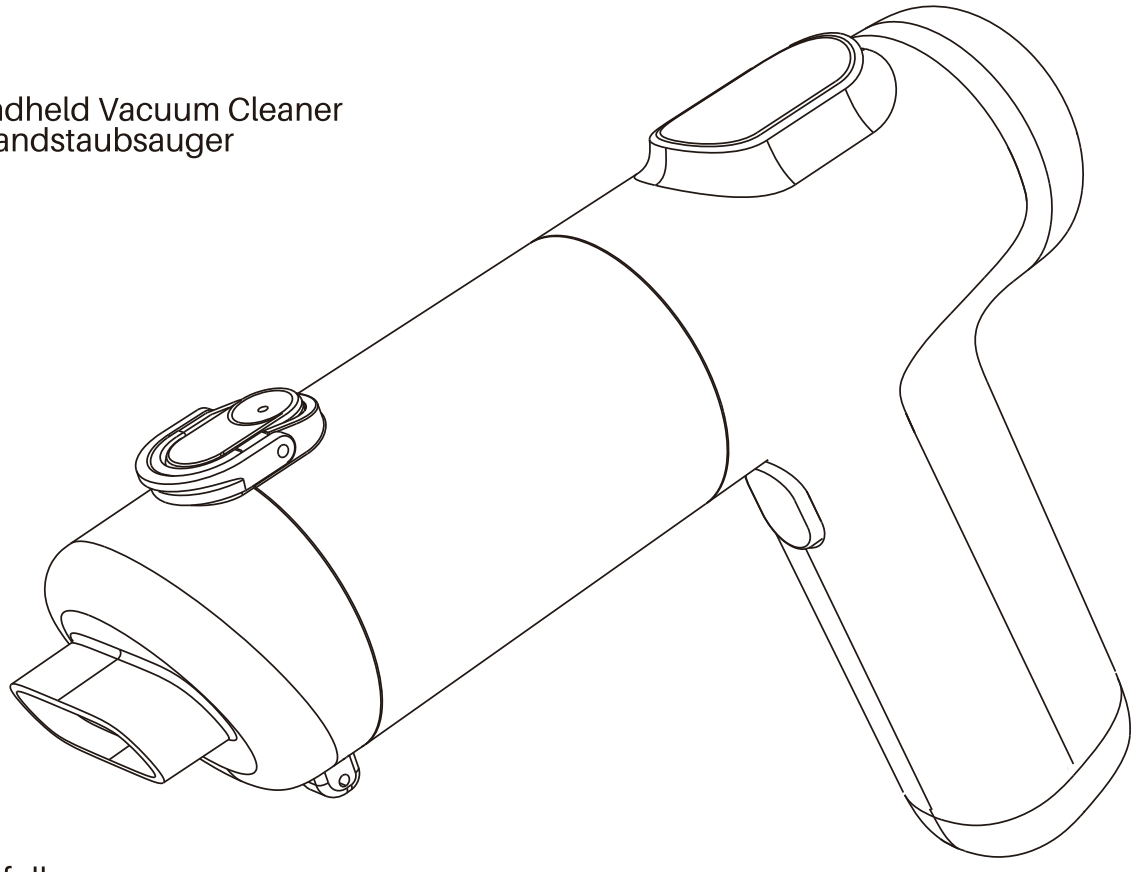


Please read this instruction manual carefully
before use and keep it for future reference.


Quick Start Guide

How to assemble


Dust collection mode

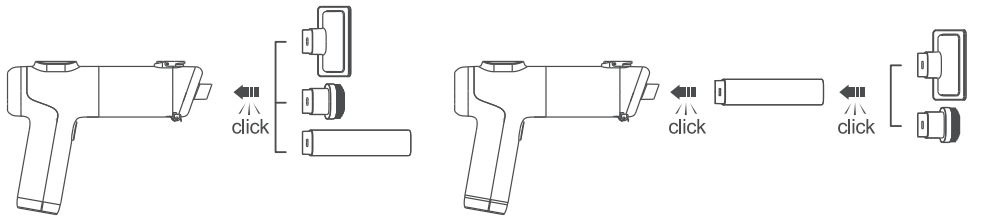


Blowing mode

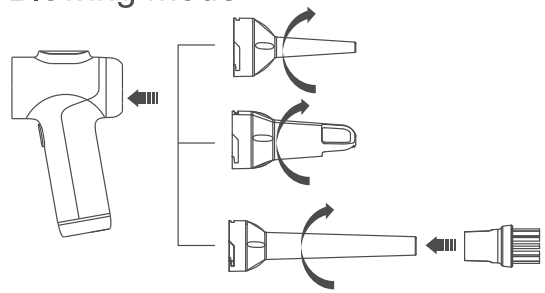

Cleaning

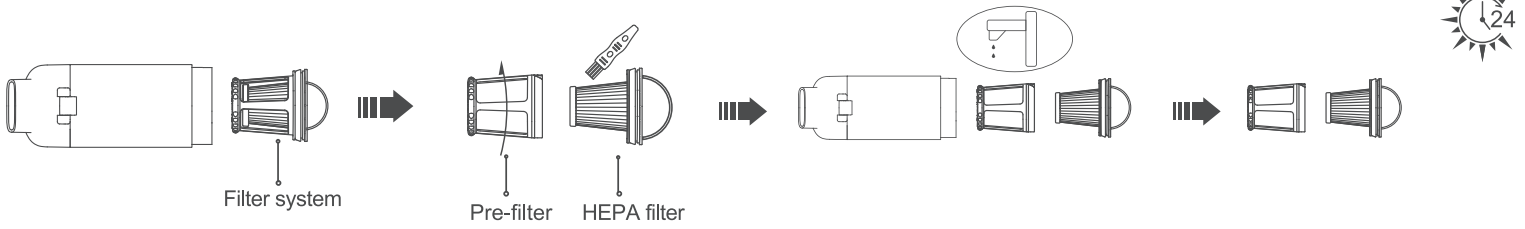

Charge

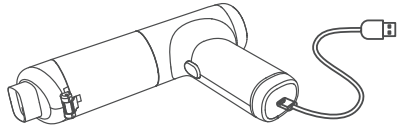

Thank you for choosing Fanttik

Thank you for purchasing Fanttik vacuum cleaner. It is a cordless handheld vacuum cleaner with strong suction、multi-functional brush and blow nozzle.

CONTENTS

1. IMPORTANT SAFETY INSTRUCTIONS - - -

1.IMPORTANT SAFETY INSTRUCTIONS

WARNING – To reduce the risk of fire or injury:

All the safety and operating instructions should be read before use and should be followed to avoid injury, fire, electric shock, property loss, and other risks.

1. This product is only for household and car use.
2. This product has an internal battery. Do not put the device into fire or heat it. Do not charge, use, place it under high temperature conditions, and do not store it in the car in case of overheating, ignition or explosion.
3. It is recommended to charge, use or store the device between 32°F and 104 °F.
4. People with physical, mental or sensory disabilities should not use the device for your safety.
5. Children should not use, clean or play with the device.

6. Do not use the device with wet hands to avoid injury.
7. Do not use this device to vacuum up any liquid such as water and cola.
8. Do not vacuum smoking or burning things such as cigarette butts, matches, or hot ashes.
9. Do not vacuum hard or sharp objects to avoid injury when cleaning the dust cup.
10. Do not use scented products on this equipment to avoid fire caused by the flammable chemicals in them.
11. Do not modify or repair the internal battery.
12. Do not use it in heated or moist places such as heating room and bathroom.
13. When the vacuum cleaner's service life is over, please give it to the recycling location designated by the government because the internal battery cannot be taken out.
14. If the charging wire is damaged or broken, please stop using it immediately.
15. If you don't use it for a long time, please unplug the charging cable after full charge and place it in a cool dry place. Charge it at least once every 3 months to maintain the battery performance.
16. If the device needs to be transported, it is recommended to use the original packaging box and keep it in the "OFF" state.
17. Unplug from outlet when not in use and before servicing.
18. Do not allow to be used as a toy. Close attention is necessary when used near children.
19. Use only as described in this manual. Use only manufacturer's recommended attachments.
20. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water,

return it to a service center.


21. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
22. Do not put any object into openings. Do not use with any opening blocked.
23. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
24. Use extra care when cleaning on stairs.
25. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
26. Do not use without dust bag and/or filters in place.
27. Prevent unintentional starting. Ensure the switch is in the off-position before picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
28. Recharge only with the charger specified by the manufacturer.
29. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
30. Do not use an appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

31. Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion.
32. Follow all charging instructions and do not charge the appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
33. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
34. Do not modify or attempt to repair the appliance except as indicated in the instructions for use and care.
35. Use only with Listed/Certified Information Technology (Computer) Equipment, or Listed/Certified ITE Power Supply, or Listed Class 2 Power Unit
36. This appliance contains batteries that are non-replaceable

SAVE THESE INSTRUCTIONS

Please save the safety and operating instructions.We assume no responsibility for your property loss caused by improper use.

2. PRODUCT OVERVIEW

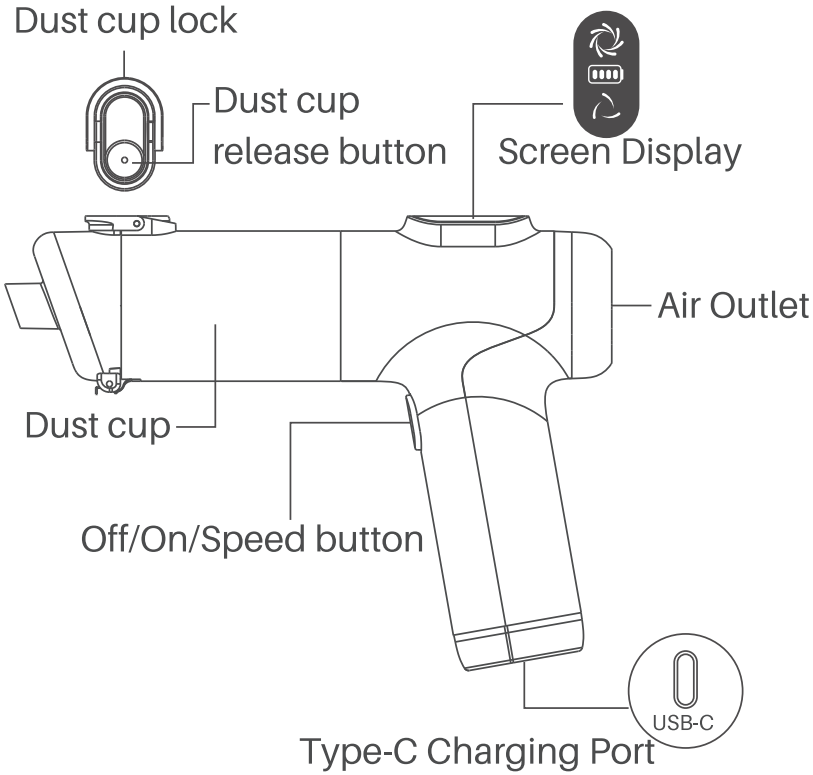




Multi-function Air Blower



Crevice Nozzle

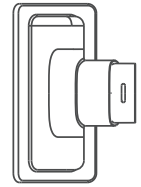


Multi-surface brush




Blow Nozzle Brush




Long Blow Nozzle

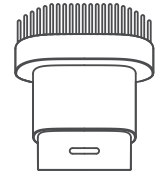

Push-in brush




Short Blow Nozzle




Type-C Charging cable

3. PACKAGE CONTENTS

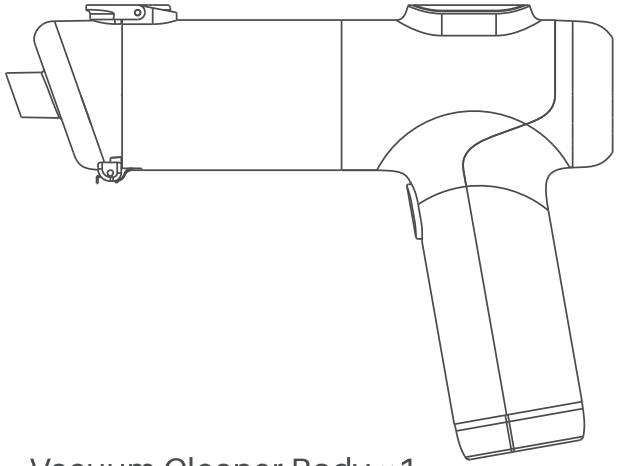


Vacuum Cleaner Body ×1




Crevice Nozzle ×1




Cleaning brush ×1

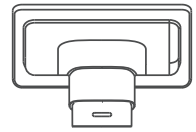


Multi-surface brush ×1

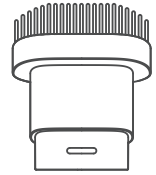


Push-in brush ×1



Short Blow Nozzle ×1



Type-C Charging cable ×1




Long Blow Nozzle ×1



Multi-function Air Blower x1



Blow Nozzle Brush x1

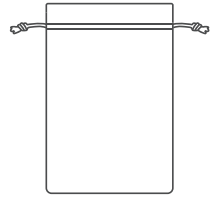

Storage bag × 1





User Manual × 1

Carefully check the package contents, if anything is missing or damaged, please contact our online customer service for support.

4. HOW TO USE

● How to assemble

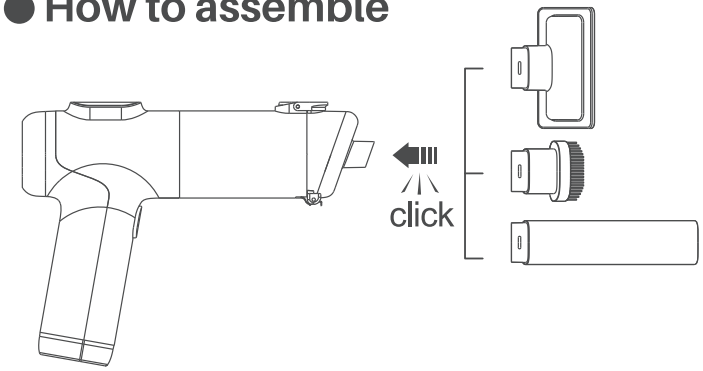


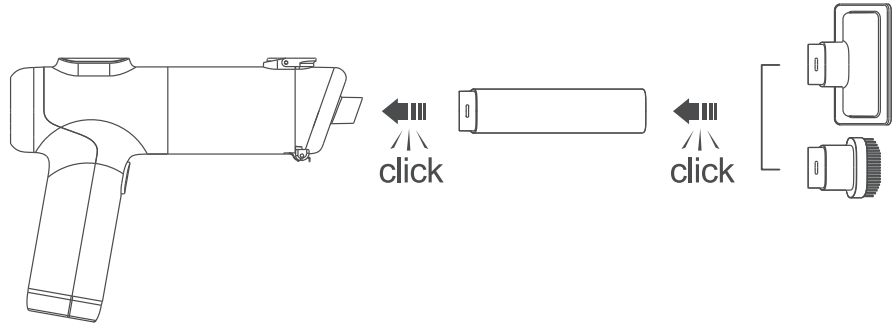


1.Dust collection mode:

Select the suction head according to your needs and install it to the corresponding port to use.

The two cleaner heads can be used separately or in combination.

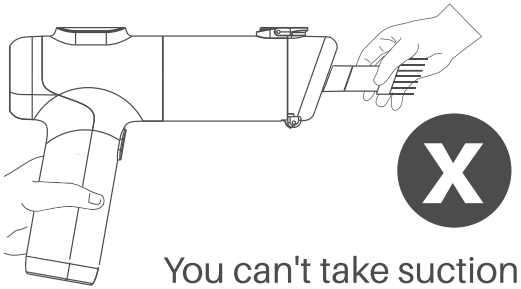

You can't take suction head out like this

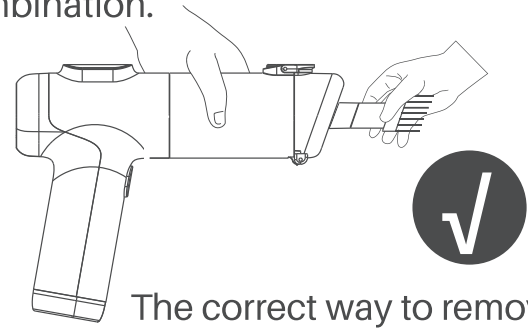


The correct way to remove the suction head

2.Blowing mode:


Select the blow nozzle according to your needs and install it to use.

The blow nozzle brush can only be fitted to the long blow nozzle.

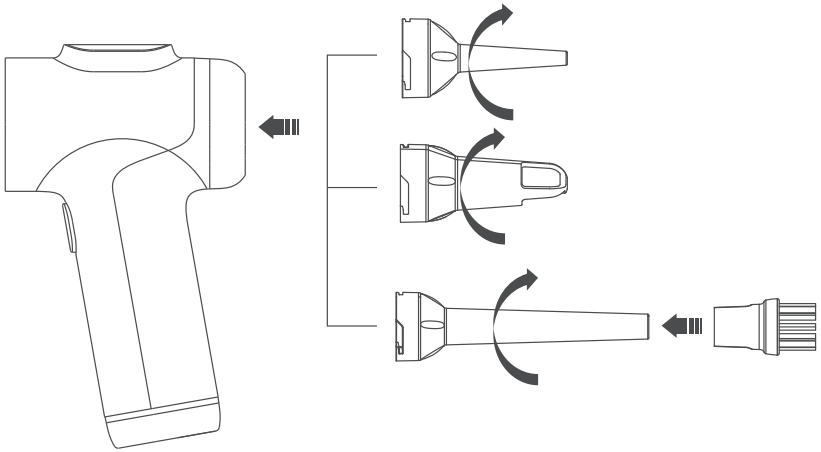

● How to charge

1.Please use a 5V/2A max power adapter (not included) and the type-C charging cable(included) to charge. The type-C charging cable can only be used for charging.
2. It takes about 2.5-3 hours to fully charge. You can use the device in high speed mode for about 13 minutes or in low speed mode for about 30 minutes after full charge.
3. The lithium-ion battery must be FULLY charged before first use and after long-term storage.
4. It is recommended to charge the device every three months.

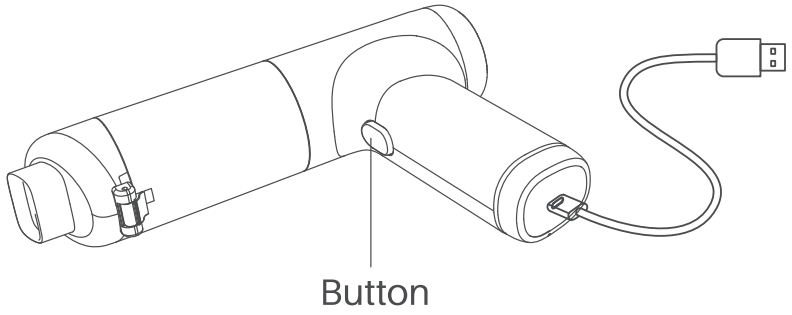

● How to use(Only one Button)


On/Off

Long press the Button to turn on the device, and long press again to turn off .


Speed adjustment

Low speed by default. Short press the Button to switch to high speed, and press again to switch back .


5. CLEAN AND MAINTENANCE

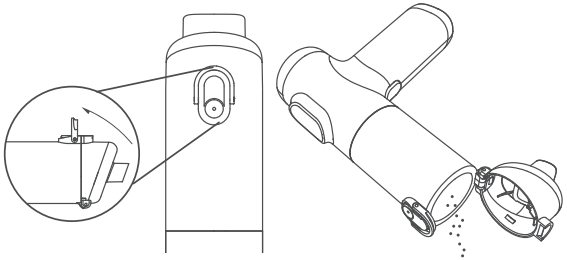


1.Push the dust cup lock upward,and press the dust cup release button to empty the dirt inside.

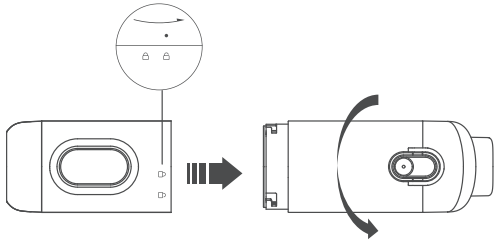


2.Rotate the dust cup along the direction shown on the unit and pull it out.

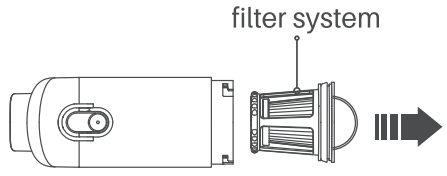


3.Pull out the filter system from the button of the dust cup.

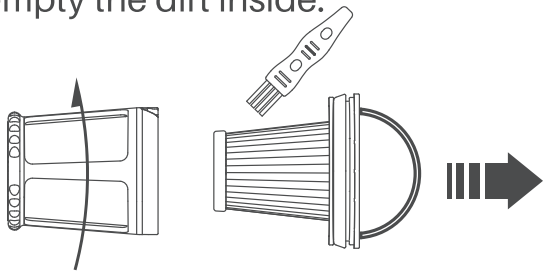

4.Rotate the Pre-filter anticlockwise and pull out the HEPA filter .
Clean HEPA filter and Pre-filter with cleaning brush.

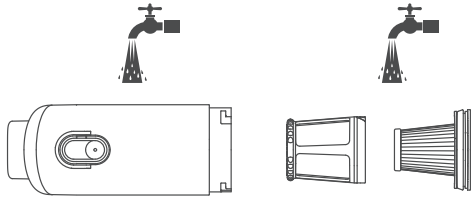

5.Wash the dust cup,Pre-filter and HEPA filter with clean water.

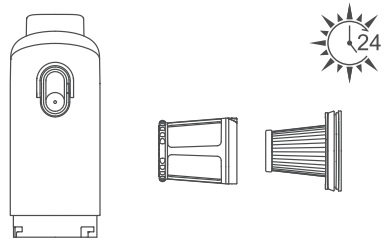

6.Wait for the filter system and dust cup to dry completely before putting them back .

Do not wash the unit or get the charging port wet. The filter element is recommended to be replaced every 3 months.

6. SCREEN DISPLAY

Vacuum Cleaner	Status	Indicator
In working	Low speed	Display low speed icon and the current battery level
	High speed	Display high speed icon and the current battery level
	Power off	The battery enclosure flashes five times and then goes off
	Full sealed	The high speed icon flashes five times and then goes off
	Battery hot or cold	Whole battery icon flashes five times and then goes off
	Motor fault or overload current	low speed and high speed icon flashes five times and then goes off
	Under voltage	Lowest battery level icon flashes
In charging	In charging	The battery level icon cycle flash
	Full battery	Whole battery icon steady on for 1minute and then goes off
	Battery hot or cold	Whole battery icon flashes five times and then goes off

7. TOXIC AND HAZARDOUS SUBSTANCES

PRODUCT	HAZARDOUS CHEMICALS					
Handheld Vacuum Cleaner	Pb	Hg	Cd	Cr (VI)	PBB	PBDE
	O	O	O	O	O	O

O Indicates all homogeneous materials' hazardous substances content are below the limit specified in the Standard 2011/65/EU.

X Indicates that the hazardous substances content in at least one homogeneous material of the component exceed the limit specified in
the Standard 2011/65/EU.

X Indicates that the replacement of non-environmental protection substances cannot be achieved currently due to the global technology
limitations, which will be gradually improved with the technical improvement.

8. TROUBLESHOOTING

If the following operations can not solve your problems, please stop using the device and contact the manufacture with E-mail: support@fanttik.com

Problem	Possible Reason	Solution
The battery enclosure flashes then the device goes off while working	Under Voltage	Please charge the device
The device stops working and the high speed icon flashes	Full sealed	Clean the air vent and filter before turning on the device
The battery enclosure flashes and fails to power on after pressing Power Button	Under Voltage	Please charge the device
No display when charging	The chagring cable is loose	Plug in charging cable
	Fully charged	Unplug the charging cable
Whole battery icon flashes three times and then goes off when charging	The adapter is incompatible with the device	Please use a 5V/2A max power adapter to charge

9. SPECIFICATIONS

Items	Parameter
Model	Slim V9 Mix
Size	223*167*55mm
Weight	430g
Battery capacity	2500mAh
Rated power	80W

Items	Parameter
Rated voltage	7.4V
Noise	75dB
Runtime	High speed≈13min Low speed≈30min
Charging voltage	5V DC
Dust cup capacity	120mL

WARRANTY CARD

Your Warranty Includes

- **12-Month Coverage**

Within 12 months of purchase, we will provide timely and effective online after-sales service. We will repair or replace any defective product (due to manufacturing fault) within the warranty period.

How to Return Your Fanttik Product

- Contact support@fanttik.com with your order number.
- We will issue you a return label for your return.
- Tear off the 'Return Details' page and fill in the details. Include this inside your return package.
- We will issue your replacement/refund on receiving the return package.

support@fanttik.com

Return Details

In order to process your return as quickly as possible, we require the following information. Please fill out this form and include it in your return package.

Purchase Name:	
Order Number:	
Date of Purchase:	
Your Email Address:	
Place of Purchase:	

If your purchase was fulfilled by Amazon, please use Amazon's 30-day return service.

EC DECLARATION OF CONFORMITY

Manufacturer / Importer certifies that the following designated product

Product Identification	
Brand Name:	Fanttik
Product Name:	Cordless Handheld Vacuum Cleaner
Model No.:	Slim V9 Mix
Age Grade:	Over 8 years Old
Manufacturer:	METASEE LLC
Manufacturer Address:	12 GREENWAY PLZ STE 1161A HOUSTON, TX 77046-1203

Product Images



Directive Name / Number	
• LVD directive 2014/35/EU • EMC directive 2014/30/EU • RoHS directive (EU) 2015/863	
Test Standard Information	
EN 60335-1:2012/A15:2021, EN 60335-2-2:2010/A1:2013 EN 62233:2008	ITTP2312027H-S-000
EN IEC 55014-1:2021, EN IEC 55014-2:2021, EN IEC 61000-3-2:201+A1:2021, EN 61000-3-3:2013+A1:2019+A2:2021	DNT231035E1321-0071
IEC 62321-3-1:2013,IEC 62321-5:2013, IEC 62321-4:2013+AMD1:2017 , IEC 62321-7-2:2017, IEC 62321-7-1:2015,IEC 62321-6:2015, IEC 62321 8:2017	DNT231035C1320-0091

PRODUCT IDENTIFICATION	
Company:	METASEE LLC
Address:	12 GREENWAY PLZ STE 1161A HOUSTON, TX 77046-1203
Representative:	Phil Yu
Email:	support@fanttik.com
Identification of the Authorized European Representative	
Company:	Lienco SAS
Address:	8 Rue Marcel Cerdan,77600,Bussy Saint Georges, France
Representative:	Ruoyu ZHANG
Email:	ruoyu@lienco.eu
Telephone:	+33766929910

Signed by the person authorised by the manufacturer

Name: Phil Yu

Title: R&D Manager

CE

Signature: Phil Yu



929-693-6066 MON-FRI 9AM-5PM (ET)

www.fanttik.com
support@fanttik.com
Manufacturer/Hersteller: METASEE LLC
Address/Adresse:12 GREENWAY PLZ STE 1161A
HOUSTON, TX 77046-1203

RoHS
Made in China

Li-ion

UK REP

CET Product Service Ltd.
Beacon House Stokenchurch Business Park,Ibstone Rd,
Stokenchurch High Wycombe HP14 3FE UK
Email:info@cetproduct.com
Phone/Fax:+44 7419325266

EC REP

Lienco SAS
8 Rue Marcel Cerdan, 77600,
Bussy Saint Georges, France
Email: ruoyu@lienco.eu
Phone/Fax: +33766929910