FOG RUNNER

FORCE1





Instruction Manual


Need Technical Support? Contact us at support@force1rc.com










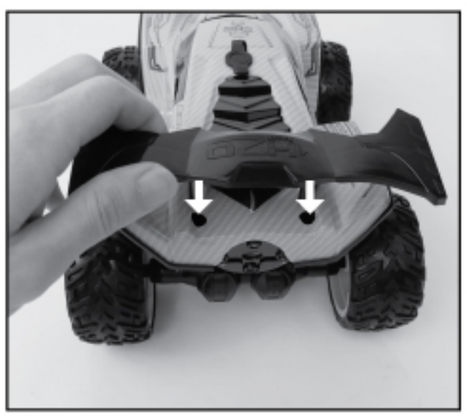




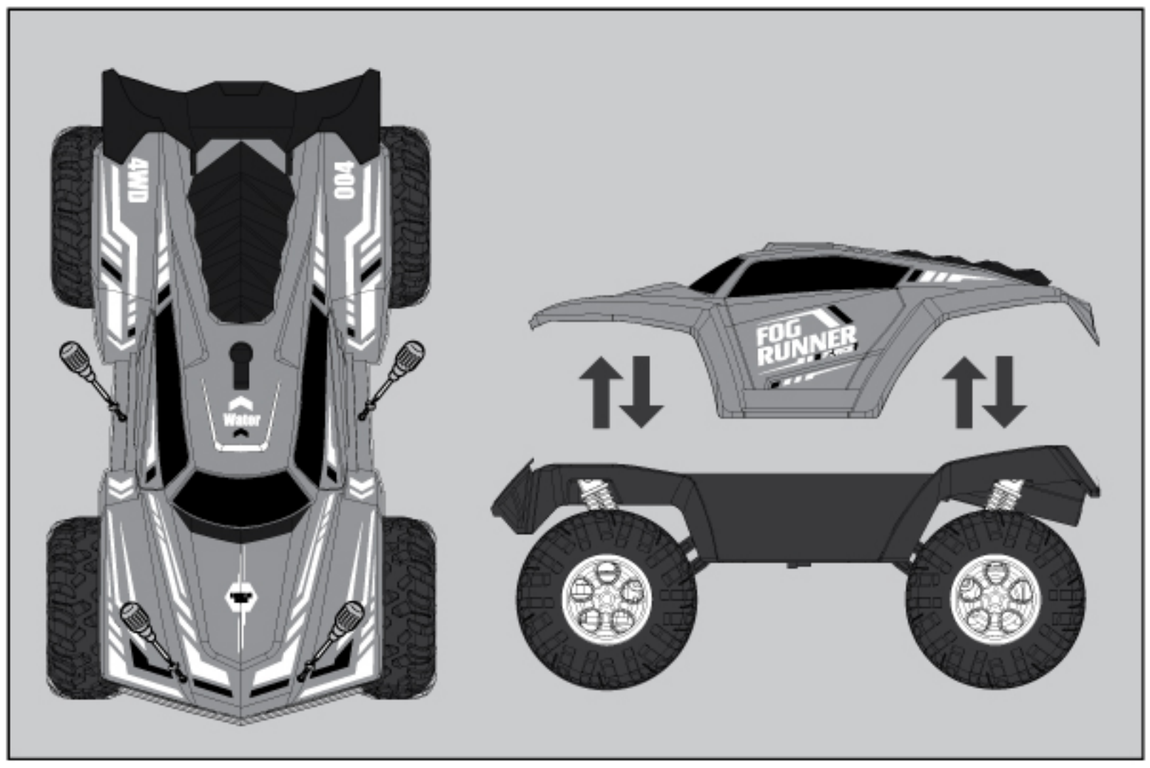





Rechargeable Battery Installation


1. Unscrew the battery cover as shown in Picture 1.
2. Install batteries with correct polarity as marked +/-.
3. Always store batteries in a cool, dry place.
   Keep batteries out of reach of children below the recommended age.
4. Adult supervision is advised when replacing the batteries.

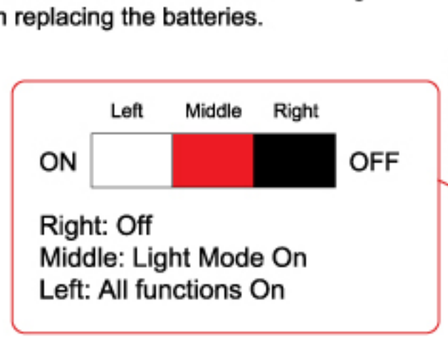

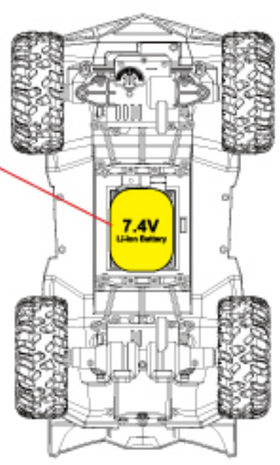


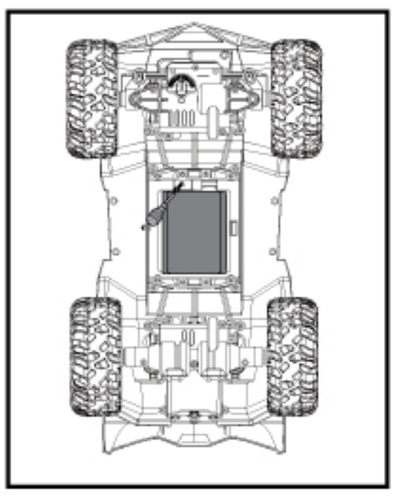

(Picture 1)

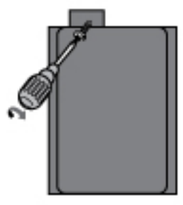


Safety Operations:
1. Switch on the remote transmitter and your Fog Runner.
2. Pair your Fog Runner with the included remote transmitter away from other RC toys to avoid radio interference.
3. Remove battery when not in use.

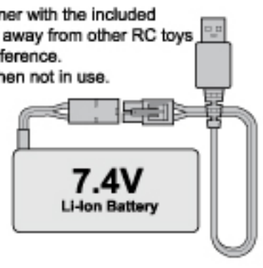



7.4V Li-ion Battery and Charger for Car included.

1. Always store batteries in a safe place. Keep out of reach of children who are under the recommended age.
2. Ask parents/guardians for help when replacing the batteries.
3. Turn off controller and open cover.
4. Install batteries accurately in the battery compartment and ensure to place batteries as marked with +/-.

REMOTE TRANSMITTER OVERVIEW

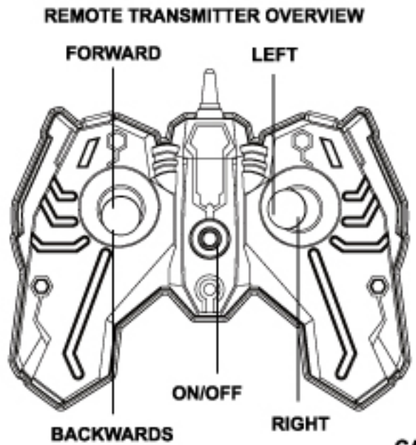

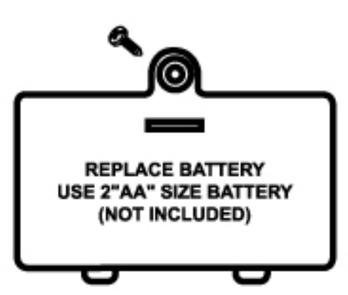

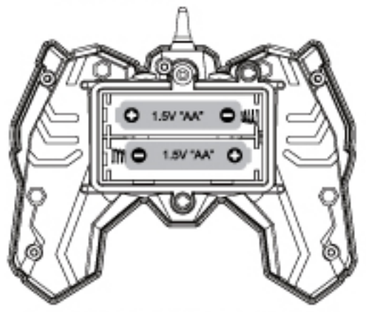

REPLACE BATTERIES WHEN THE FOG RUNNER STARTS TO SLOW DOWN.

CAUTION:
Any improper use of the batteries may cause damage.
1. Do not mix old and new batteries.
2. Do not mix different brands of batteries.
3. Insert batteries with correct polarity.
4. When installing motor parts, gently push 30 degrees upwards with the tip of a finger.

USAGE AND SAFETY:
1. Leave time between charging and using the battery.
2. Do not drain the batteries, leave about 20% power remaining to extend the lifetime of the battery.
3. Do not leave batteries exposed to direct sunlight.
4. Do not overcharge batteries.
5. Please use genuine factory spare parts replacements from Force1RC.com
6. Adult supervision recommended. Warning, small parts.

NOTICE:

Make sure there's no water left over in the car when not in use.
Please empty the water reservoir after every session.